LumoHome

User Manual

Smart home for Tasmota and Zigbee devices

Version 1.0 · 2026

Chapter 1

What is LumoHome?

LumoHome is a smart home application that lets you control all your Zigbee devices from one place — directly from your phone. The app works with a Tasmota Zigbee bridge and MQTT broker, with no need for cloud services or subscriptions.

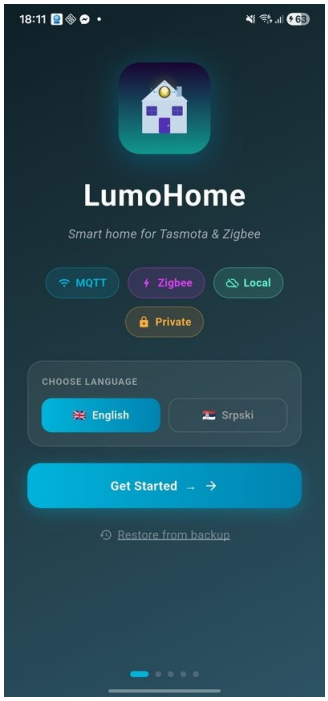

LumoHome app home screen

With the LumoHome app you can:

- Turn lights, switches and outlets on and off
- Monitor temperature, humidity and sensor states in real time
- Set up automations — e.g. turn off the light if there is no motion for 10 minutes
- Create scenes — trigger multiple devices with a single tap
- Configure thermostats and regulate heating
- View sensor value history on a chart
- Receive push notifications on your phone

The app works entirely locally — data never leaves your home network (unless you use a cloud MQTT broker). No tracking, no ads, no subscription.

LumoHome Lite and Pro

LumoHome is available in two versions:

LumoHome Lite is the free version of the app. It includes full support for the Zigbee ecosystem and all core automation features — everything you need for a fully functional smart home.

LumoHome Pro is the paid version that adds support for the Zigbee alarm system, RF Zigbee gateway, WiFi Tasmota switches and sensors (ESP32 with Tasmota or custom Tasmota firmware), local thermostat with Tasmota devices, IR Gateway with Tasmota firmware.

Feature	Lite (free)	Pro
Zigbee switches, lights, sensors	✔	✔
Zigbee contact and motion sensors	✔	✔
Zigbee dimmer control, RGB light	✔	✔
Zigbee thermostat / TRV	✔	✔
Scenes and group automations	✔	✔
Auto-Off (automatic turn-off)	✔	✔
Timers (classic + astronomical)	✔	✔
Push notifications (ntfy)	✔	✔
Backup and data recovery	✔	✔
Zigbee alarm system	✗	✔
Zigbee RF Gateway (433 MHz)	✗	✔
Tasmota WiFi switches and sensors (Tasmota ESP32 controller)	✗	✔
IR Gateway (Tasmota ESP32 controller)	✗	✔
Local thermostat (Tasmota ESP32 controller)	✗	✔

Chapter 2

First Launch

When you launch LumoHome for the first time, the app guides you through a short 5-step setup wizard. You only need to complete this process once.

Step 1 of 5 — What you will need

Before you begin, the app shows a list of equipment you need:

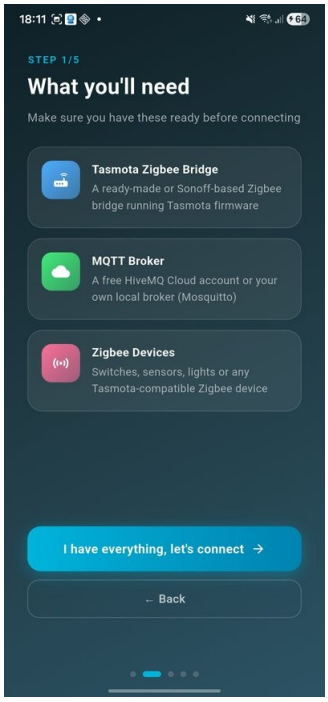

Step 1/5 — equipment overview

#	Item	Details
1	**Tasmota Zigbee Bridge**	A hardware gateway that connects Zigbee devices to your WiFi network. It must be flashed with Tasmota firmware. Recommended: Athom ZG01 (~$25) — pre-flashed, Sonoff ZBBridge-P (~$15–20) — requires flashing.
2	**MQTT broker**	An intermediary server that relays messages between the app and your devices. For beginners: HiveMQ Cloud (free, no installation required). Advanced users can use their own Mosquitto broker.
3	**Zigbee devices**	Any Tasmota-compatible Zigbee device: switches, lights, motion sensors, contact sensors, thermostats and many others.

> 📄 **Note**
> A detailed guide for setting up the Tasmota Zigbee bridge and HiveMQ Cloud broker is available in a separate document — LumoHome Setup Guide. This user manual assumes the bridge and broker are already configured.

Recommended Zigbee bridges

LumoHome works with any Tasmota-based Zigbee bridge. The models below have been tested and are recommended:

Model	Price	Notes
Athom ZG01	~25$	⭐ Recommended. ESP32 + CC2652P2, Ethernet port, Tasmota pre-installed — ready to use out of the box.
Sonoff ZBBridge-P	~$15–20	⭐ Recommended. ESP32 + CC2652P2. WiFi only, no Ethernet. Requires Tasmota flashing — for advanced users.
ZB-GW03 / EACHEN	~$25–30	WiFi + Ethernet. Good range. Pre-installed but uses an older Zigbee controller.
Tube's Gateways	~40$+	DIY/enthusiast option. See: github.com/tube0013/tube_gateways

Step 2 of 5 — Choosing a broker

The MQTT broker is the intermediary that relays commands and data between the app and your devices. The app describes it as a 'postman who delivers messages'. In this step you choose which broker to use.

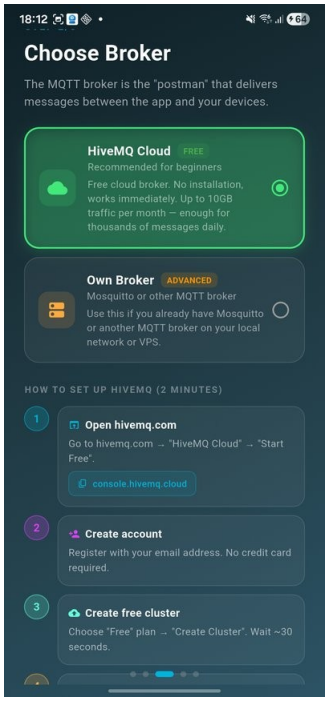

Step 2/5 — Choosing an MQTT broker

HiveMQ Cloud (recommended for beginners)

Free cloud broker. No installation required — just create an account on hivemq.com and get your server address. Supports up to 10 GB of traffic per month, more than enough for everyday use. Ideal if you are just starting out with a smart home.

Own Broker (advanced option)

If you already have Mosquitto or another MQTT broker on your local network or VPS, you can use it instead of a cloud service. This option is marked as advanced and is recommended for more experienced users.

How to set up HiveMQ Cloud in 2 minutes

If you choose HiveMQ Cloud, the app guides you through the following steps:

1. Open hivemq.com → click 'HiveMQ Cloud' → 'Start Free'
2. Register with your email address (no credit card required)
3. Select the free plan and click 'Create Cluster' — wait about 30 seconds
4. Once the cluster is active, find the 'Connection URL' — that is your host address
5. In the 'Access Management' section, create a username and password
6. Enter these credentials in the app (next step)

Step 3 of 5 — MQTT settings

On this screen you enter the address and credentials for the broker you chose.

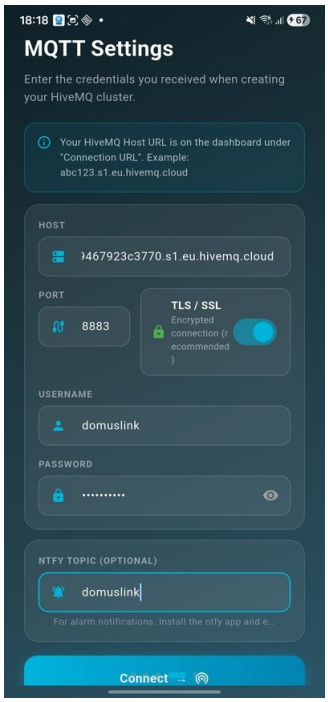

Step 3/5 — entering MQTT data

Field	Description
Host	MQTT server address. For HiveMQ Cloud it looks like: abc123.s1.eu.hivemq.cloud
Port	Port number. For HiveMQ Cloud: 8883 (TLS/SSL). For local Mosquitto: usually 1883.
TLS / SSL	Connection encryption. Recommended to be enabled (green lock). Mandatory for HiveMQ Cloud.
Username	Username you created on the MQTT broker.
Password	Password for the MQTT broker. Tap the eye icon to show/hide the password.
Ntfy Topic (optional)	Topic for push notifications. Install the ntfy app on your phone and enter the same topic name here. This is optional and can be configured later.

💡 **Type**

When you finish entering the data, tap the 'Connect' button. If the credentials are correct, the app connects to the broker immediately. If there is an error, verify that the host address, username and password are all correct.

Step 4 of 5 — Successful connection

If all data is correct, the app shows a screen with a green checkmark and the message 'Connected!' — this means the connection to the MQTT broker has been established successfully.

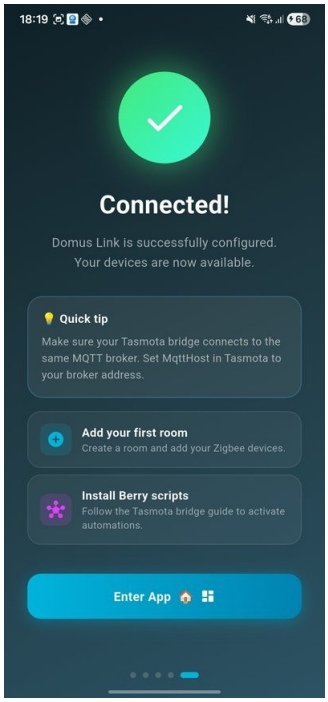

Successful connection screen

On this screen you see two suggested next steps:

- Add your first room — create a dashboard and start adding Zigbee devices
- Install Berry scripts — an advanced option for enabling automations on the Tasmota bridge (described in a separate guide)

Tap 'Enter App' to enter the app and start setting up your dashboard.

> ⚠️ **Important note**
> For Zigbee devices to be visible in the app, your Tasmota bridge must be configured to connect to the same MQTT broker. In the Tasmota interface, set 'MqttHost' to your broker address. The detailed procedure is described in the LumoHome Setup Guide.

Step 5 of 5 — Creating your first dashboard

When you enter the app for the first time, an empty dashboard called 'My Home' opens. The dashboard is your control panel — here you add cards for each device.

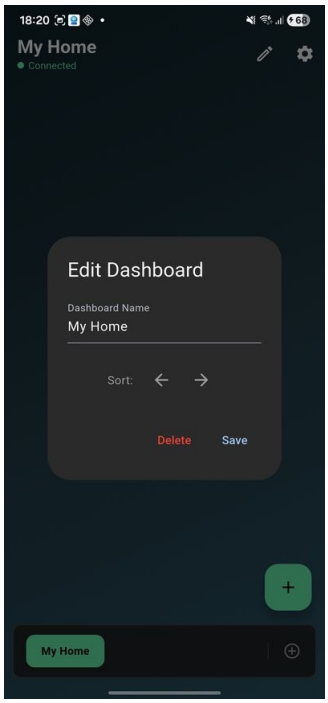

Empty dashboard with the edit dialog

At the bottom of the screen you can see dashboard tabs. The app automatically creates one dashboard named 'My Home'. You can rename it by tapping the pencil icon (✏️) in the top right corner.

What you can do on the dashboard

- Pencil (✏️) — rename or delete the current dashboard
- Gear (⚙️) — opens the app's general settings
- Button + (green, bottom right) — adds a new device card to the dashboard
- Button + (right of tabs) — creates a new dashboard (e.g. for another room)

📌 **Recommended**

Create a separate dashboard for each room — e.g. 'Living room', 'Bedroom', 'Kitchen'. The app supports an unlimited number of dashboards and cards.

Congratulations — LumoHome is set up successfully! In the next chapter you will learn how to manage the app settings.

Chapter 3

Settings

The Settings screen is accessible by tapping the gear icon (⚙️) in the top right corner of the dashboard. Here you can change the app's appearance, update MQTT credentials and manage backups.

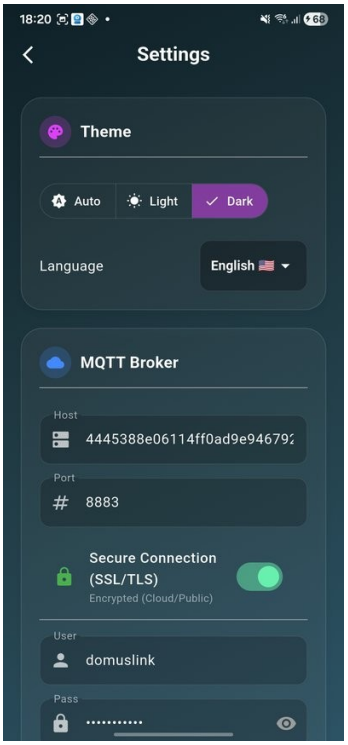

Settings — theme and MQTT broker

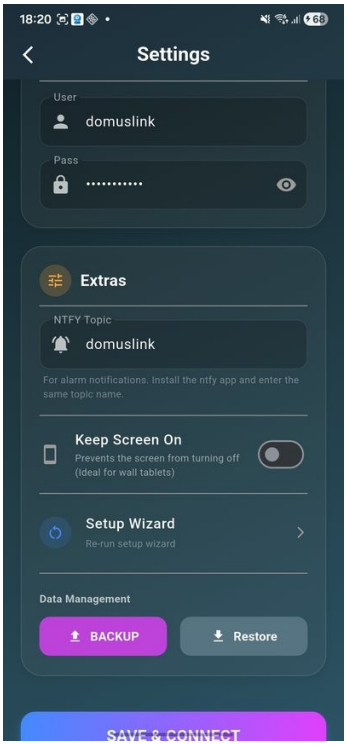

Settings — Extras and data management

Theme and Language

In the Theme section you configure the app's appearance. Three options are available:

- Auto — the app follows the system theme of the phone (light or dark, depending on the device settings)
- Light — always light theme
- Dark — always dark theme (default)

Below the theme there is a dropdown menu for selecting the language. English and Serbian are currently supported. The language change takes effect immediately.

MQTT Broker settings

The MQTT Broker section shows and allows you to change the broker connection credentials. You entered these during the first launch, but you can update them at any time — for example if you change your broker or password.

Field	Description
Host	MQTT server address. For HiveMQ Cloud: xxx.hivemq.cloud. For a local broker: the IP address of the computer (e.g. 192.168.1.10).
Port	Connection port. For HiveMQ Cloud with TLS/SSL: 8883. For local Mosquitto without encryption: 1883.
Secure Connection (SSL/TLS)	When enabled (green toggle), the connection is encrypted. Mandatory for HiveMQ Cloud and public brokers. Can be disabled for local brokers.
User / Pass	Username and password for the MQTT broker. Tap the eye icon to show/hide the password.

💡 **Type**
After changing the MQTT credentials, tap the 'Save & Connect' button at the bottom of the screen. The app immediately connects to the new broker.

Extras — Additional settings

The Extras section contains additional options that are optional but can be useful:

Option	Description
NTFY Topic	Topic for alarm system push notifications. Install the free ntfy app on your phone, create a topic and enter the same name here. When the alarm is triggered, you receive a notification on your phone.
Keep Screen On	Prevents the screen from turning off. Useful if the phone or tablet is mounted on a wall as a control panel — the screen stays always on.
Setup Wizard	Restarts the setup wizard. Useful if you want to change the broker or reset the initial settings without deleting devices.

Backup and data recovery

The Data Management section lets you save or restore all app settings — devices, dashboards and automations.

BACKUP — Creates a backup of all data and offers to save it as a file on your phone. Recommended before every app update or phone change.

RESTORE— Loads a previously saved backup and restores all settings. All existing data is replaced by the data from the file.

⚠️ **Important**
Make backups regularly! If you reinstall the app or change phones, without a backup file you will have to manually re-add all devices and settings.

In the next chapter you will learn how to add Zigbee devices and place them on the dashboard.

Chapter 4

Adding Zigbee devices

To control a device from the app, you must first pair it with the Zigbee bridge and add it to the dashboard. This process is done once per device and takes only a few minutes.

Add new device menu

On the dashboard, tap the green + button in the bottom right corner. The 'Add New Device' menu opens, offering four options:

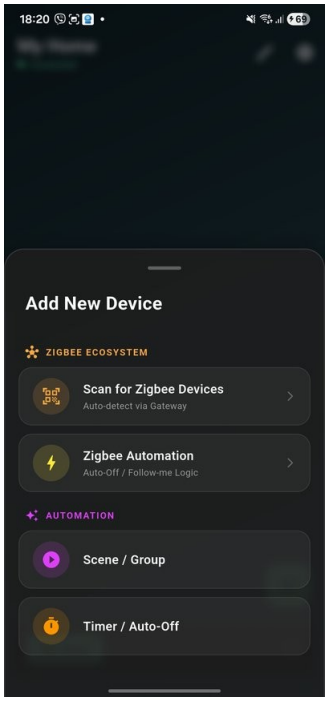

Add new device menu

Option	Description
Scan for Zigbee Devices	Automatic scanning and pairing of Zigbee devices. This is the main option for adding switches, sensors, lights and similar devices.
Zigbee Automation	Adds a Zigbee automation card — Auto-Off (automatic turn-off) or Follow-me logic (follows motion). Not a physical device, but a rule.
Scene / Group	Creates a scene — one tap activates multiple devices at once. For example: 'Movie' can turn off the lights and lower the blinds.
Timer / Auto-Off	Adds a timer card with scheduled on/off or automatic turn-off after a set time.

Scanning and pairing Zigbee devices

Tap 'Scan for Zigbee Devices' to open the Zigbee Scan screen. This screen shows all Zigbee devices paired with your bridge and lets you add new ones.

Zigbee Scan screen layout

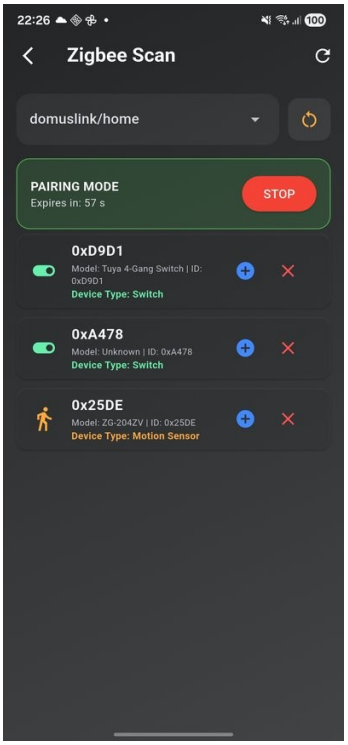

Active Pairing Mode — devices are being detected

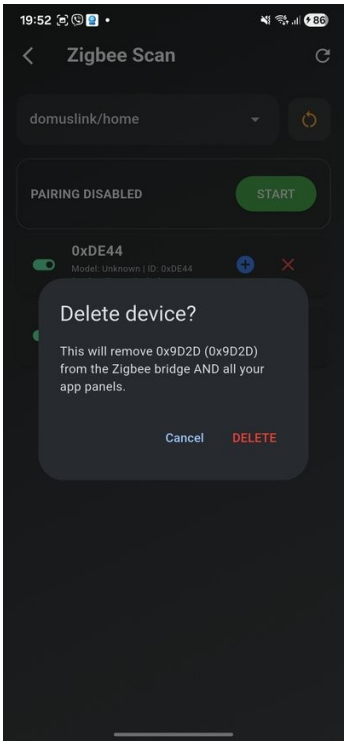

Dialog for removing a device from the Zigbee bridge

The Zigbee Scan screen contains the following elements:

- Dropdown menu with the bridge name (e.g. 'domuslink/home') — if you have multiple bridges, you can choose which one to scan here
- Refresh button (circular arrow) next to the bridge — sends a request to the bridge to re-fetch the list of all paired devices
- Status bar with the START/STOP button — controls Pairing Mode
- List of found devices — each device shows its Zigbee address (e.g. 0xD9D1), model, ID and detected type
- Blue + button next to each device — adds the device to the dashboard
- Red × button next to each device — removes the device from the Zigbee bridge and from the app

How devices are displayed

Each found device shows:

- Zigbee address (e.g. 0xD9D1) — unique identifier of the device on the network
- Model — the model name reported by the device itself (e.g. 'Tuya 4-Gang Switch', 'ZG-204ZV')

- Detected type — the app automatically recognises the device type and displays it in colour: Switch (teal), Motion Sensor (orange), Contact Sensor (green), etc.
- An icon corresponding to the device type

> 💡 **Type**
> If the app cannot automatically recognise the device type, '⚠️ Unknown device' is shown in orange. In that case you can manually select the type when adding the device to the dashboard.

Step by step: Pairing a new device

Here is the complete procedure for adding a new Zigbee device:

1. Open the Zigbee Scan screen (dashboard → + button → Scan for Zigbee Devices)
2. Tap the START button — the bridge enters Pairing Mode for 60 seconds (a countdown is visible on the screen)
3. Put the device you are adding into pairing mode — this is usually done by long-pressing its button or by removing and reinserting the battery. See the device's own manual.
4. Wait for the device to appear in the list — this usually takes 5–15 seconds. The app automatically detects the type.
5. Tap the blue + button next to the device you want to add
6. The configuration screen opens — give the device a name, choose a room (dashboard) and confirm
7. The device appears as a card on the dashboard and is ready to use

> ⚠️ **Attention**
> If you fail to pair a device within 60 seconds, tap START again. Some devices need to be put into pairing mode only after the bridge is already waiting.

Removing devices

To remove a device, tap the red × button next to it in the list. The app shows a confirmation dialog that clearly warns: removing the device removes it from both the Zigbee bridge and all cards in the app. Once confirmed, this action cannot be undone.

> 📌 **Note**
> If you only want to remove a device from one dashboard while keeping it on another, do it directly on the dashboard — a long tap on the card opens edit or delete options. Deleting a card does NOT remove the device from the Zigbee bridge.

In the next chapter, all card types and their functions will be presented — from switches and lights to sensors and thermostats.

Chapter 5

Device configuration and dashboard cards

When you add a device from the Zigbee Scan screen by tapping the blue + button, the 'Edit Zigbee Device' screen opens. Here you configure all the device details before it appears on the dashboard.

Device configuration screen

The screen is divided into three sections: Device Config, Appearance and Monitored Data.

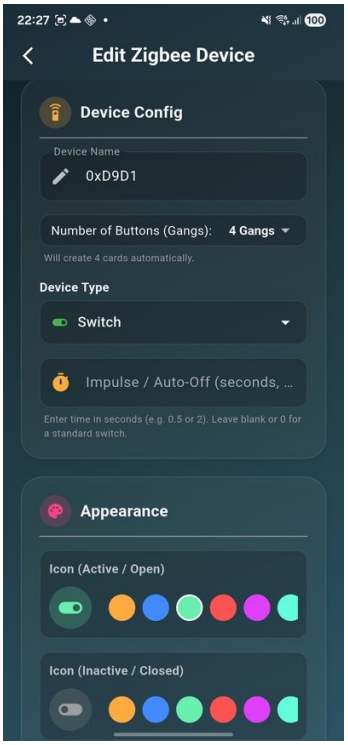

Device Config and Appearance — Switch type

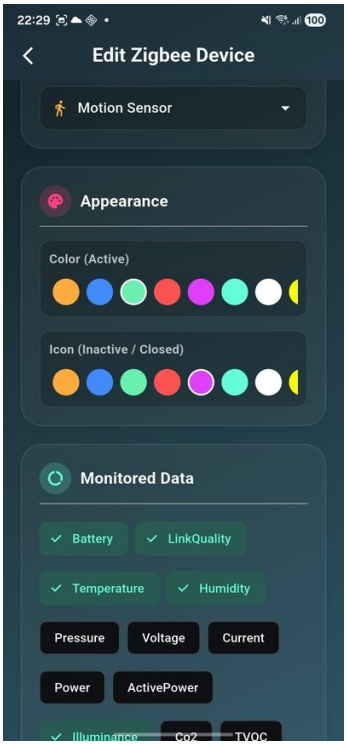

Appearance and Monitored Data — Motion Sensor type

Device Config — basic settings

This section contains the functional settings of the device:

Field	Description
Device Name	The name that will be displayed on the card on the dashboard. The app automatically suggests the Zigbee address (e.g. 0xD9D1), but it is recommended that you enter a meaningful name, e.g. 'Living room light' or 'Hallway switch'.
Number of Buttons (Gangs)	For multi-channel switches (2, 3, 4 or more buttons). If you select '4 Gangs', the app automatically creates 4 separate cards — one for each channel. Each card can be renamed

Field	Description
	later.
Device Type	The device type that determines how the card looks and behaves. The app fills this field automatically based on the device model, but you can change it manually from the dropdown menu.
Impulse / Auto-Off	Optional field for Switch type only. If you enter a value in seconds (e.g. 0.5 or 2), the switch automatically returns to the off state after that time — behaviour similar to a pulse switch. Leave empty for a standard switch that stays on/off.

💡 **Type for multi-channel switches**

If you have a 4-channel switch, select '4 Gangs' — the app creates 4 cards automatically named '0xD9D1 1', '0xD9D1 2', etc. You can rename each card later with a long tap → Edit Device.

Appearance — card look

The Appearance section controls the visual appearance of the card on the dashboard. Settings differ depending on the device type:

Option	Description
Icon (Active / Open)	Icon displayed when the device is on or active. Tap the desired icon from the available options.
Icon (Inactive / Closed)	Icon displayed when the device is off or inactive.
Color (Active)	Icon and card accent colour in the active state. 8 colours are available (orange, blue, green, red, lilac, teal, white, yellow).
Color (Inactive)	Icon colour in the inactive state — usually a darker or neutral colour.

📌 **Note**

For the Switch type, you choose an icon (bulb, switch, outlet, etc.). For Motion Sensor and other sensor types, you only choose a colour since the icon is generated automatically by type. The crescent at the end of the colour row opens an advanced picker for a custom colour.

Monitored Data — tracked values

The Monitored Data section is available for sensor devices (Motion Sensor, Contact Sensor, Temperature Sensor, etc.). Here you choose which values will be displayed on the card.

Available values to track include: Battery, LinkQuality, Temperature, Humidity, Pressure, Voltage, Current, Power, ActivePower, Co2, TVOC, Illuminance and others. Tap each

value to enable it (green checkmark) or disable it (dark background). Only enabled values are shown on the card.

> 💡 **Type**
> Enable Battery and LinkQuality for all battery-powered devices — you will instantly see when the battery is low or when the device has a weak connection to the bridge.

The next chapter describes the Switch card type in detail — controls, menu options and timer settings.

Chapter 6

Card type: Switch

The Switch card type is the most common type in the LumoHome app. It is used to control all devices that turn on and off — lights, fans, electrical appliances and outlets.

Card appearance on the dashboard

On the dashboard, each Switch card shows:

- Device name (e.g. 'Kitchen', 'Bedroom', 'Bathroom')
- State — ON or OFF
- An icon that changes based on the state — active is coloured, inactive is grey
- WiFi/Zigbee signal indicator in the top left corner of the card
- Three dots (⋯) in the top right corner for quick access to the menu
- Next timer notification below the name (e.g. 'Next → Tomorrow 05:54 (OFF)') if a timer is active

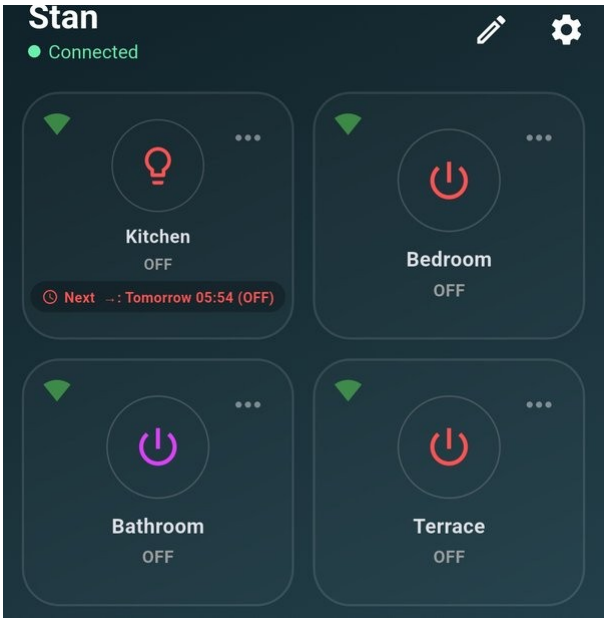

Four Switch cards — Kitchen has an active timer (OFF tomorrow at 05:54)

Tapping the card turns the device on or off. The state updates immediately — the card changes the icon colour and shows the new state.

Card menu

A long tap on the card (or tap on the three dots ⋯) opens the menu with all options for that device.

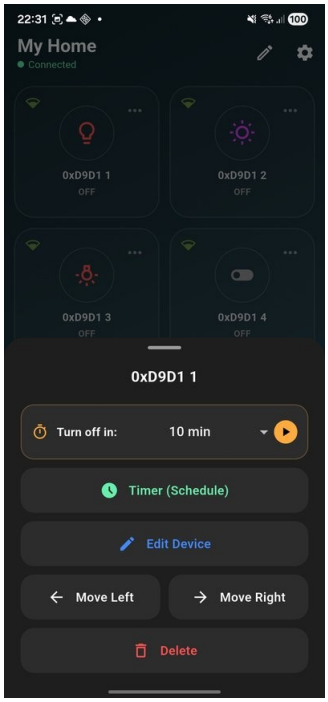

Switch card menu

Option	Description
Turn off in: X min	Quick timer for automatic turn-off. Select a time from the dropdown menu (e.g. 10 min) and tap ▶️. The device turns off when the time expires — useful for a boiler, fan or anything you might forget to turn off.
Timer (Schedule)	Opens the Timer Settings screen for scheduled on/off according to a daily schedule — classic (fixed time) or astronomical (Sunset/Sunrise).
Edit Device	Opens the device configuration screen — change the name, type, icon, colour or Impulse/Auto-Off setting.
Move Left / Move Right	Moves the card left or right on the dashboard to rearrange the layout.
Delete	Removes the card from the dashboard. The device remains paired with the Zigbee bridge and can be re-added from the Zigbee Scan screen.

Timer settings

Tapping 'Timer (Schedule)' from the card menu opens the Timer Settings screen. The timer enables automatic on/off of the device according to a schedule — every day or just once. There are two operating modes:

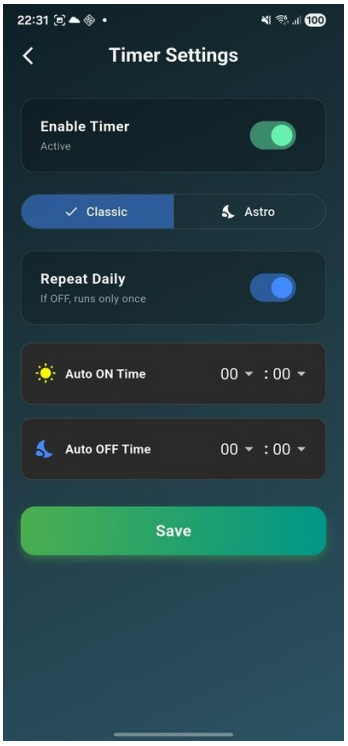

Classic timer — fixed time

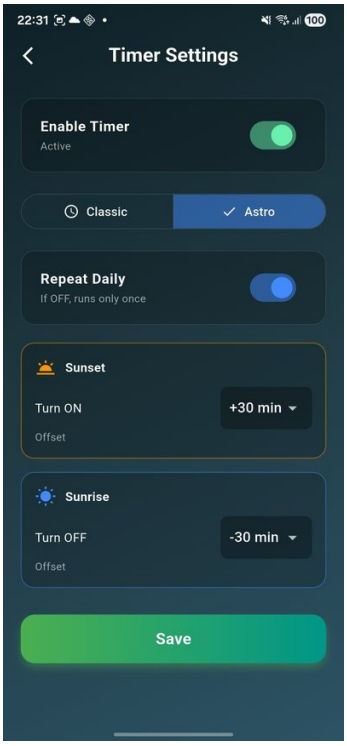

Astronomical timer — Sunset/Sunrise

Classic timer (Classic)

Turns the device on and off at an exact time, every day or just once.

Option	Description
Enable Timer	Enables or disables the entire timer. Green toggle = the timer is active and will run according to the schedule.
Repeat Daily	ON = repeats every day. OFF = runs only once, then deactivates automatically.
Auto ON Time	Time at which the device automatically turns on (hours : minutes).
Auto OFF Time	Time at which the device automatically turns off (hours : minutes).

📌 **Example — classic timer**

A street light should turn on at 20:00 and off at 06:00 every day → set Auto ON Time: 20:00, Auto OFF Time: 06:00, Repeat Daily: ON and save. On the dashboard the card will show the next scheduled event, e.g. 'Next → Tomorrow 06:00 (OFF)'.

Astronomical Timer (Astro)

Ties the schedule to natural light — sunset and sunrise. Automatically adapts to the changing day length throughout the year, ideal for outdoor lights and garden lamps.

Option	Description
Sunset → Turn ON	The device turns on at sunset. Offset +30 min = 'turn on 30 minutes after sunset'.
Sunrise → Turn OFF	The device turns off at sunrise. Offset −30 min = 'turn off 30 minutes before sunrise'.
Offset	Offset in minutes from the astronomical event. Can be positive (+) or negative (−).
Repeat Daily	Identical to the classic timer — every day or just once.

💡 **Example — astronomical timer**

Sunset → Turn ON offset +30 min and Sunrise → Turn OFF offset −30 min. The garden light turns on 30 minutes after sunset and off 30 minutes before sunrise — always at the right time regardless of the season.

⚠️ **Requirement for Astro timer**

For the Astro timer to work, the geographic location (Latitude/Longitude) must be set on the Tasmota bridge. This is configured in the Tasmota web interface under Configuration → Configure Other.

The next chapter describes the Motion Sensor card type.

Chapter 7

Card type: Motion Sensor

The Motion Sensor card type shows the state of a PIR or mmWave sensor that detects presence or movement in a room. This is a passive sensor — it cannot be turned on or off with a tap; only its state is monitored.

Card appearance on the dashboard

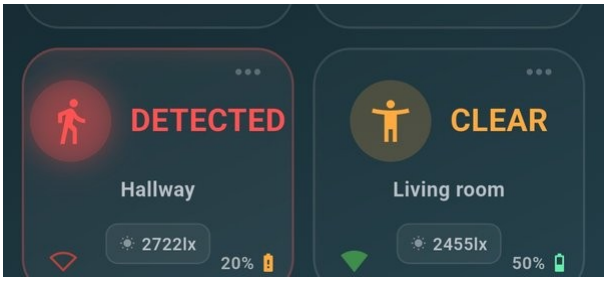

Hallway: DETECTED (left) — Living room: CLEAR (right)

The card has two visual states:

State	Card appearance
DETECTED	Motion has been detected. The card turns red, the person icon becomes red and glows, and an orange-red border appears around the card. The state name 'DETECTED' is displayed in large letters.
CLEAR	No motion. The card is dimmed, the icon is orange-brown without glow, no border. The state name 'CLEAR' is displayed in orange letters.

Below the icon and state name, the card also shows secondary data included in the Monitored Data settings — in this example illuminance (2722lx), battery level (20%) and signal.

Card menu

A long tap on the card (or tap on ⋯) opens the menu. Unlike the Switch, the Motion Sensor menu does not contain a timer option — the sensor is passive and does not send commands.

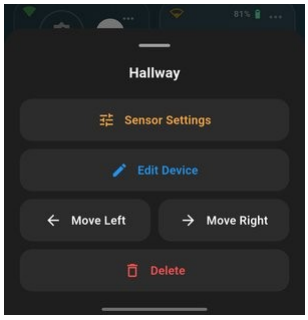

Card menu Motion Sensor

Option	Description
Sensor Settings	Sensor settings — Hold Time and Sensitivity.
Edit Device	Opens the device configuration — change name, colour, icon or Monitored Data.
Move Left / Right	Moves the card within the dashboard grid.
Delete	Removes the card. The device remains on the Zigbee bridge.

Sensor Settings — sensor settings

Tapping 'Sensor Settings' opens a panel with two sliders that control the sensor's behaviour:

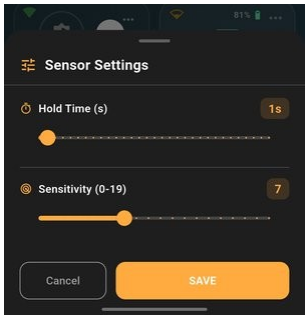

Sensor Settings panel

Option	Description
Hold Time (s)	Time in seconds that the card remains in the DETECTED state after the last detection. For example, a value of 1s means the card returns to CLEAR 1 second after the sensor stops detecting motion. Higher values reduce card 'flickering'.
Sensitivity (0–19)	Sensor sensitivity. A value of 0 is the lowest sensitivity, 19 is the highest. Higher sensitivity = the sensor reacts to small movements or at greater distances. Adjust according to the room conditions.

💡 **Type — adjusting Hold Time**

If you use the sensor for automatic light activation, set Hold Time to 10–30 seconds so the light does not turn off immediately as soon as you stop moving slightly. If you use the sensor only for notifications (alarm, log), a short Hold Time of 1–2s is better.

💡 **Type — adjusting Sensitivity**

For a hallway or small space, a medium value (6–8) is usually sufficient. For a yard or larger rooms, increase to 12–15. If you get false alarms (sensor detects without reason), reduce the sensitivity.

The next chapter describes the Contact Sensor card type.

Chapter 8

Card type: Contact Sensor

The Contact Sensor card type monitors the state of a magnetic sensor that detects whether a door, window or gate is open or closed. Like the Motion Sensor, this is a passive sensor — it does not send commands, only reports the state.

Card appearance on the dashboard

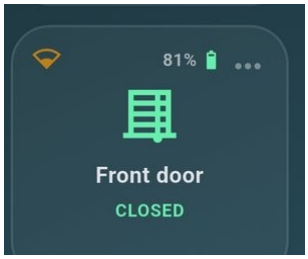

Front door — CLOSED

The card shows:

- Device name (e.g. 'Front door')
- State — OPEN or CLOSED
- Sensor icon (window/door), battery level and signal

The card has two states:

State	Card appearance
CLOSED	The door or window is closed. The card is dimmed with a teal/green icon. The text 'CLOSED' is shown in green.
OPEN	The door or window is open. The card takes on a more prominent colour, the text 'OPEN' is shown in orange with a subtle visual accent.

Card menu

A long tap on the card (or tap on ⋯) opens the menu. The Contact Sensor does not have special settings like the Motion Sensor — the menu contains only standard options:

Option	Description
Edit Device	Opens the device configuration — change name, icon, colour and Monitored Data (battery, signal, etc.).
Move Left / Move Right	Moves the card within the dashboard grid.
Delete	Removes the card from the dashboard. The device remains paired with the Zigbee bridge.

💡 **Typical use**

The Contact Sensor is ideal for entrance doors, windows, safes or cabinets. In combination with the alarm system, you can set the alarm to trigger as soon as the door opens while the alarm is armed.

The next chapter describes the Temperature and Humidity Sensor card type.

Chapter 9

Card type: Temperature and Humidity Sensor

The Temperature Sensor card type shows temperature and humidity readings from a room in real time. It is a passive sensor — it only displays data with no control capability.

Card appearance on the dashboard

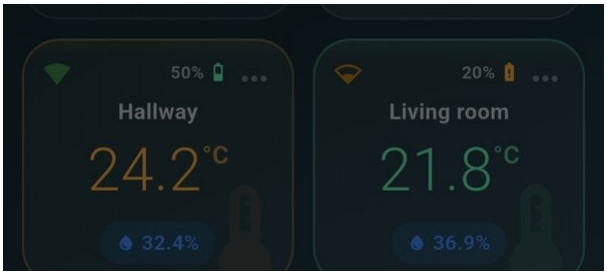

Hallway 24.2°C / 32.4% (left) — Living room 21.8°C / 36.9% (right)

The card shows:

- Sensor name (e.g. 'Hallway', 'Living room')
- Temperature in large coloured digits — colour changes based on the value: cooler (teal/green), warmer (orange)
- Humidity (💧) below the temperature, in a blue button
- Battery level and signal in the upper part of the card
- Thermometer icon in the card background

> 💡 **Temperature colour**
> The colour of the large digits changes with the temperature — teal/green for lower values, orange for higher. This allows a quick visual overview without reading the numbers.

Card menu

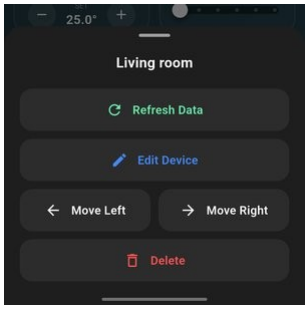

Card menu Temperature Sensor

Option	Description
Refresh Data	Manually refreshes the data from the sensor — useful if the value is not up to date.
Edit Device	Opens the configuration — change name, colour, icon and Monitored Data (temperature, humidity, battery, etc.).
Move Left / Right	Moves the card within the dashboard grid.
Delete	Removes the card. The device remains on the Zigbee bridge.

Temperature History

Tapping the card directly (not the menu, but the card itself) opens the Temperature History screen. Here you can see a graphical view of temperature changes over time.

Temperature History screen — 24h view with Min/Avg/Max

The screen shows:

- Min / Avg / Max — minimum, average and maximum temperature for the selected period, in coloured buttons
- Time range — selectable between 1h (last hour), 24h (last 24 hours) and 7d (last 7 days)
- Chart — a line chart with temperature on the Y axis and time on the X axis. The orange line shows the trend, and the coloured area below it highlights the value range

> 📌 **Note**
> History is recorded locally on the phone from the moment the sensor is added to the app. Data before that date cannot be viewed. The longer you have had the sensor added, the richer the history.

The next chapter describes the Colored Light and Dimmer card types.

Chapter 10

Card type: Colored Light and Dimmer

LumoHome supports two card types for light control: Colored Light (coloured light — RGB) and Dimmer Light (light with brightness control). Both types show a brightness slider directly on the card and allow quick adjustment without opening the menu.

Card appearance on the dashboard

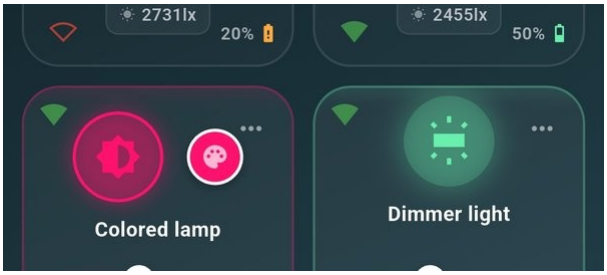

Colored lamp (left, pink 40% brightness) — Dimmer light (right, white 30%)

Type	Card characteristics
Colored Light	Bulb icon and colour palette icon (🎨) in the corner of the card. The icon colour matches the currently selected light colour. The slider below shows the brightness and is coloured with the current colour.
Dimmer Light	Light icon (panel) without a colour palette. The slider is white/teal. No colour selection, only brightness control.

Direct control from the card

Both card types have the following directly accessible controls:

- Brightness slider — slide left (darker) or right (brighter). The light updates in real time as you move the slider.
- Tap the bulb icon — turns the light on or off (ON/OFF).
- Tap the palette icon 🎨 (Colored Light only) — opens the Color and Brightness dialog.

Choosing colour and brightness — Color and Brightness

Tapping the colour palette icon on the Colored Light card opens the Color and Brightness dialog.

Color and Brightness dialog

Element	Description
Color Wheel	Tap or drag on the colour wheel to choose a hue. The centre of the wheel is white (neutral), and the outer edge contains saturated colours. The currently selected colour is marked with a small circle.
Brightness slider	The slider below the wheel controls brightness from 0% (off) to 100% (maximum). It displays the current value in percent.

Element	Description
Reset to White	One tap resets the light to neutral white and default brightness — handy for a quick reset.
Close	Closes the dialog and applies the selected colour and brightness.

> 💡 **Type — Colored Light**
> For daytime lighting use white (centre of the wheel) at 80–100% brightness. For ambient evening lighting choose a warm yellow or orange at 20–40% brightness. Reset to White is a quick way to return to standard lighting.

Card menu — lights

A long tap on the card (or tap on ⋯) opens the menu. The light menu is similar to the Switch menu but without the timer option:

Option	Description
Edit Device	Opens the configuration — change name, icon, colour and Monitored Data.
Move Left / Move Right	Moves the card within the dashboard grid.
Delete	Removes the card from the dashboard. The device remains on the Zigbee bridge.

The next chapter describes the Thermostat card type.

Chapter 11

Card type: Thermostat

The Thermostat card type shows the current temperature from a Zigbee thermostat and allows you to set the target temperature directly from the dashboard. The thermostat regulates heating or cooling by itself to reach the set temperature.

Card appearance on the dashboard

Thermostat — IDLE, SET 25.0°C

The card shows:

- Device name or Zigbee address (e.g. '0x58D8')
- Current room temperature — in large teal digits (e.g. 21.5°C)
- Operating status — IDLE (waiting), HEATING (heating) or COOLING (cooling)
- Target temperature (SET) displayed below the status
- − and + buttons for directly adjusting the target temperature
- Lock icon in the corner — thermostat settings locked/unlocked

Thermostat Operating States

Status	Meaning
IDLE	The thermostat is active but not heating/cooling — the current temperature is near the target, the system is waiting.
HEATING	The thermostat is actively heating — the current temperature is below the target value.
COOLING	The thermostat is actively cooling — the current temperature is above the target value (for devices with a cooling function).
OFF	The thermostat is off — it is not regulating temperature.

Setting the target temperature

You can set the target temperature directly on the card without opening the menu:

- Tap the + button to increase the target temperature by 0.5°C
- Tap the − button to decrease the target temperature by 0.5°C
- The change is sent to the thermostat immediately via an MQTT message

> 💡 **Type**
> The thermostat responds to a target temperature change within a few seconds. The status will change from IDLE to HEATING as soon as the room temperature drops below the set value.

Card menu — thermostat

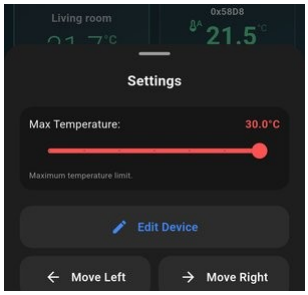

Card menu Thermostat

Option	Description
Max Temperature	Slider for setting the maximum allowed temperature. The red slider limits the upper boundary to which the thermostat can be set — a safety protection against overheating.
Edit Device	Opens the device configuration — change name, icon, colour and Monitored Data.
Move Left / Right	Moves the card within the dashboard grid.
Delete	Removes the card from the dashboard. The device remains on the Zigbee bridge.

> ⚠️ **Important — Max Temperature**
> Setting Max Temperature does not change the current target temperature — it is only the upper limit. For example, if you set Max Temperature to 30°C, the user will not be able to set the target temperature above 30°C using the + button on the card.

The next chapter describes Scenes and Zigbee automations.

Chapter 12

Card type: Scene Remote

A Scene Remote is a card type that represents a physical Zigbee remote or button with multiple keys. Each physical button can be configured to activate a different scene — for example, a short press turns on the light and a long press turns it off.

In LumoHome there are two subtypes of this card: Scene (a manual scene activated by a tap directly on the dashboard) and Scene button (a physical Zigbee remote that sends commands).

Scene button card — physical remote

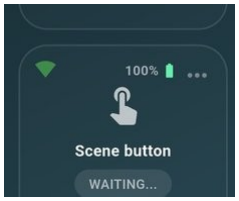

Scene button card

The Scene button card represents a physical Zigbee remote (button, key). It shows:

- Hand with finger icon — indicates a physical button
- Device name (e.g. 'Scene button')
- Status WAITING... — waiting for the physical button to be pressed
- Battery level and signal in the top corner

> 💡 **Difference: Scene vs Scene button**
> Scene is a virtual card activated by tapping on the phone. Scene button is a physical remote configured to activate scenes when someone physically presses it — without opening the phone.

Card menu Scene button

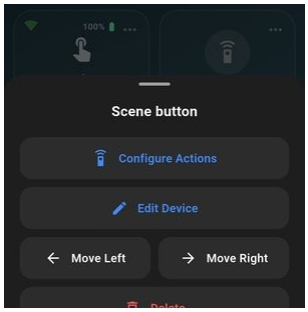

Card menu Scene button

Option	Description
Configure Actions	Opens the Scene Configuration dialog — here you configure what happens for each type of press (1 Click, 2 Clicks, Long).
Edit Device	Opens the device configuration — change name, icon, colour and Monitored Data.
Move Left / Right	Moves the card within the dashboard grid.
Delete	Removes the card from the dashboard. The device remains on the Zigbee bridge.

Scene Configuration — configuring actions

Tapping 'Configure Actions' opens the Scene Configuration dialog. Here you independently define the actions that will be executed for each type of press.

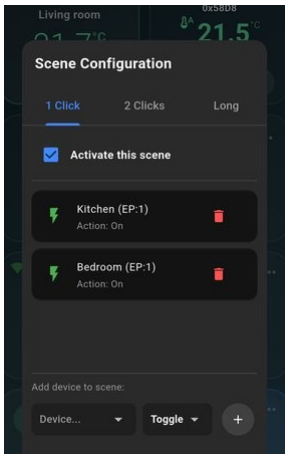

1 Click — Action: On

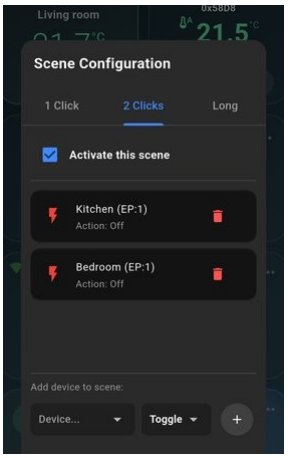

2 Clicks — Action: Off

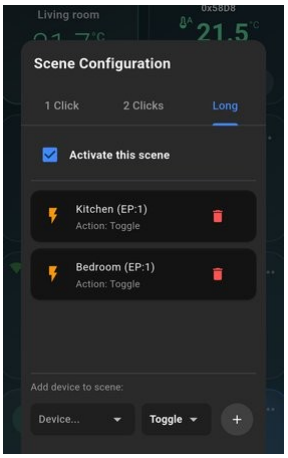

Long — Action: Toggle

Tabs: 1 Click, 2 Clicks, Long

The dialog has three tabs — each tab corresponds to one type of physical button press:

Tab	When Triggered
1 Click	Short press (one click) on the physical button.
2 Clicks	Two quick clicks on the physical button.
Long	Long press and hold of the physical button.

Configuring actions for each tab

For each tab independently:

- Activate this scene (checkbox) — enable or disable this type of press. If disabled, that press is ignored.
- Device list — shows all devices added to this scene with a defined action
- Add device to scene — from the dropdown menu select a device (e.g. 'Kitchen [EP:1]') and an action

Action	Effect
On	The device turns on regardless of its current state.
Off	The device turns off regardless of its current state.
Toggle	The device toggles state — if on, it turns off; if off, it turns on.

- Tap the blue + button to add a device to the list
- Tap the red bin next to a device to remove it from the scene
- Finally, tap Save to save the settings

📌 **Example — scene remote with 3 functions**

1 Click: Turn on Kitchen and Bedroom (Action: On). 2 Clicks: Turn off Kitchen and Bedroom (Action: Off). Long: Toggle the state of both devices (Action: Toggle). Now one physical button controls two lights in three different ways.

The next chapter describes Zigbee automations — Auto-Off and Follow-me logic.

Chapter 13

Scene and Auto-Off Timer

This chapter covers two special card types: Scene (a virtual shortcut that executes multiple actions with one tap) and Auto-Off timer (a card that automatically turns off devices after a set time).

A. Scene Card

The Scene card is a virtual shortcut that activates a set of pre-defined actions on one or more devices with a single tap. It is not linked to a physical device — it exists only in the app as a quick trigger.

Scene cards 'Turn on' and 'Turn off' — tapping activates the scene

- Green colour → scene that turns devices on
- Pink/red colour → scene that turns devices off
- Label EXECUTE below the name — the card is activated by tapping, it does not display a device state

How to Add a Scene Card

You add a Scene card as a new widget on the dashboard. When adding, choose the type 'Scene', then set the name and colour. After adding, the card is empty — you need to configure the actions in Edit Device Scene.

Edit Device Scene — configuring actions

Edit Device Scene screen

On the Edit Device Scene screen you configure:

- Device Name — the name of the scene displayed on the card (e.g. 'Turn on')
- Icon & Color — icon and colour of the card
- Scene Actions — list of devices and actions executed when the card is tapped

In the Scene Actions section:

- Tap the green + button to add a new action
- For each device select an action: Turn ON or Turn OFF
- Tap the red bin to remove an action
- Tap SAVE CHANGES to save

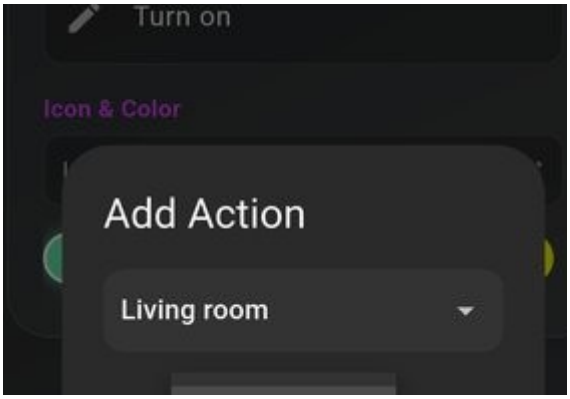

Add Action dialog

Tapping + opens the Add Action dialog:

- Dropdown menu — select a device from the dashboard (e.g. 'Living room')
- Action — Turn ON (green) or Turn OFF (red)
- Tap Add to add the action to the list

> 📌 **Scene example**
> Scene 'Evening': Living room ON, Kitchen ON, Hallway ON, Bathroom OFF. One tap on the card turns on 3 rooms and turns off the bathroom.

B. Auto-Off Timer Card

The Auto-Off timer card automatically turns off one or more Zigbee bulbs/switches after a defined time interval. Useful for hallways, bathrooms or rooms where the light is often left on.

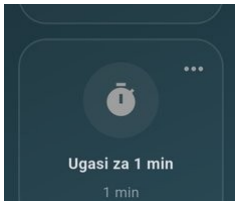

'Turn off in 1 min' — Auto-Off card

The card shows:

- Stopwatch icon — visual indicator of the timer
- Card name (e.g. 'Turn off in 1 min')
- Timer duration (e.g. '1 min')

Tapping the card activates the timer — the countdown begins and turns off all configured devices when it expires.

Edit Device Timer — auto-off timer settings

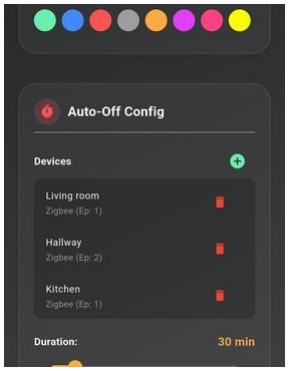

Auto-Off Config section

Option	Description
Devices (list)	Devices that will be turned off when the timer expires. Tap + to add a device, the bin to remove it.
Duration (slider)	Time until automatic turn-off, from 1 minute to several hours. Displayed in minutes (e.g. 30 min).

Controlled Devices — adding devices to the timer

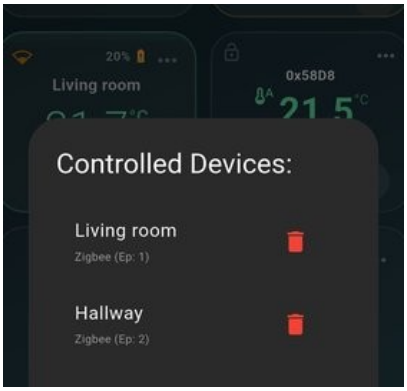

Controlled Devices dialog

Tapping + in the Devices section opens the Controlled Devices dialog. It shows a list of already-added devices with their Zigbee endpoint (Ep).

- Tap + Add New Device to add a new device to the list
- Tap the red bin to remove a device from the timer
- Tap Close to close the dialog

Ep (endpoint) indicates the device channel — relevant for switches with multiple gangs (Ep:1 = first bulb, Ep:2 = second, etc.).

> 💡 **Type — Auto-Off for the hallway**
> Set the Auto-Off timer to 5 minutes for the hallway light. Tap the card when you enter — the light will turn off by itself, and there is no need to go back to turn it off.

The next chapter describes Zigbee automations.

Chapter 14

Zigbee Automations (Follow-me logic)

Zigbee Automations are one of the most useful features of the LumoHome app. They allow sensors (motion or contact) to automatically control lights and switches — with no manual tapping whatsoever. The light follows you through the house.

The automation runs directly on the Zigbee bridge (Tasmota hardware), which means it works even when the phone is not on the network or the app is closed.

> 💡 **What is Follow-me logic?**
>
> Follow-me means the light 'follows' movement through the house. For example: you enter the hallway → the sensor detects motion → the light turns on automatically → after 10 minutes with no motion the light turns off by itself. Everything happens without touching the phone.

Automation Manager — automation overview

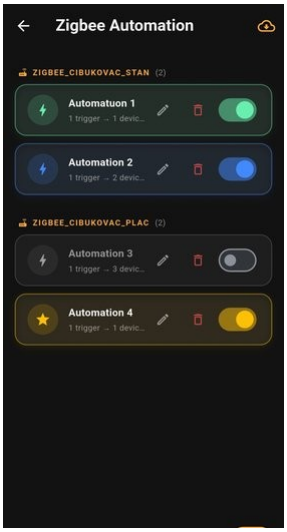

Zigbee Automation screen

Tapping 'Zigbee Automation' in the Add New Device menu opens the Automation Manager — a list of all configured automations.

The screen shows:

- Grouped by Zigbee bridges — each bridge (e.g. ZIGBEE_CIBUKOVAC_STAN) shows how many automations it has
- Automation name and brief description (e.g. '1 trigger → 2 devic...')
- Icon and colour — visual distinction between automations
- Toggle (green/grey) — enable or disable an automation without deleting it
- Pencil (✏) — edit the automation
- Bin (🗑) — delete the automation
- Orange + button — add a new automation
- Cloud icon (↓) — sync automations with the bridge

> 📌 **Automation Toggle**
>
> You can temporarily disable an automation by tapping the toggle without deleting it. Useful, for example, at night when you do not want the sensor to trigger the light, or when cleaning the house.

Accessing Zigbee Automations

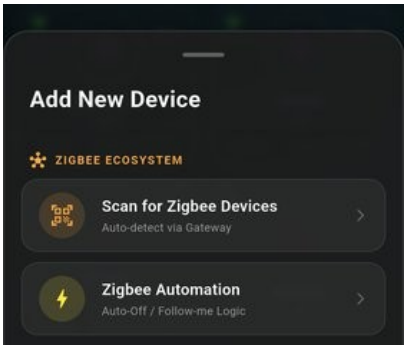

Zigbee Automation in the Add New Device menu

You access Zigbee Automations through:

1. Tap the green + button on the dashboard
2. The Add New Device menu opens
3. In the ZIGBEE ECOSYSTEM section tap 'Zigbee Automation'
4. The Automation Manager opens with the list of automations

To create a new automation, tap the orange + button in the bottom right corner of the Automation Manager screen.

Creating a new automation — step by step

The Edit Automation screen guides you through 4 steps. Each step is mandatory before saving.

Step 1 — Zigbee bridge and name

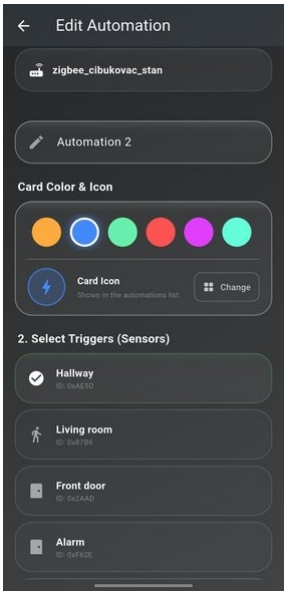

Edit Automation — steps 1 and 2

At the top of the screen:

- Zigbee bridge — shows the name of the bridge to which the automation is linked (selected automatically based on the sensors you choose)
- Automation name — enter a name (e.g. 'Hallway light', 'Night automation'). Displayed in the list.
- Card Color & Icon — choose the card colour and icon for easier identification in the Automation Manager

Step 2 — Selecting triggers (sensors)

The '2. Select Triggers (Sensors)' section shows all available sensors from the selected bridge:

- Motion sensor (walking figure icon) — activates when motion is detected
- Contact sensor (door icon) — activates when a door or window opens
- Tap a sensor to select it (green border + checkmark = selected)
- You can select multiple triggers — the automation activates when ANY of them triggers

Step 3 — Selecting devices (targets)

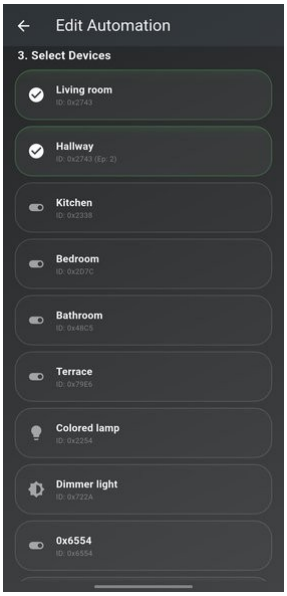

Edit Automation — step 3

The '3. Select Devices' section shows all Zigbee bulbs, switches, dimmers and blinds from the selected bridge:

- Green border + checkmark = device is included in the automation
- Grey toggle = device is not selected
- Devices with multiple channels are shown separately — e.g. 'Hallway ID: 0x2743 (Ep: 2)' is the second channel of the same device
- You can select multiple devices — they all turn on simultaneously when the trigger activates

> 📌 **Ep (Endpoint)**
>
> Ep indicates the device channel. If you have a two-channel bulb (e.g. 0x2743), it will appear as two entries: Ep:1 and Ep:2. Each channel can be independently included or excluded from the automation.

Step 4 — Settings

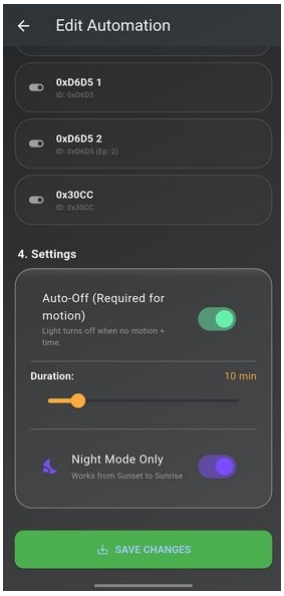

Edit Automation — step 4

The '4. Settings' section contains two key settings:

Option	Description
Auto-Off (Required for motion)	Required for motion sensors. When there is no motion for longer than the set duration, the light turns off automatically. Without this option the light would stay on forever.
Duration	Slider for the time (in minutes) the light stays on after the last motion detection. For example, 10 min = the light turns off 10 minutes after the last motion.
Night Mode Only	The automation only runs at night — from sunset to sunrise. During the day the sensor is ignored. Useful for hallways and bathrooms so the light does not turn on during the day.

Finally, tap the green SAVE CHANGES button to save the automation to the bridge.

How the automation works in practice

#	What happens	Detail
1	**Sensor detects motion**	The PIR sensor or contact sensor sends a Zigbee signal to the bridge.
2	**Bridge receives signal**	The Tasmota bridge processes the signal — no phone or internet required.
3	**Devices turn on**	All selected devices receive the Power ON command simultaneously.
4	**Timer starts**	If Auto-Off is enabled, the bridge starts counting the inactivity time.
5	**No motion for X minutes**	After the set duration with no new motion, the bridge sends Power OFF to all devices.
6	**New motion resets the timer**	If the sensor is triggered again before the timer expires, the timer resets from the beginning.

⚠️ **Important — Sync with bridge**

Automations are stored directly on the Zigbee bridge (Tasmota hardware), not only in the app. If you change the bridge or reinstall the app, tap the cloud icon (↓) in the top right corner of the Automation Manager screen to sync and download the automations from the bridge.

💡 **Typical use cases**

• Hallway at night: motion sensor → hallway light, Night Mode ON, Duration 5 min. • Bathroom: motion sensor → bathroom light, Night Mode OFF, Duration 15 min. • Entrance door: contact sensor → entrance light, Duration 3 min. • Terrace at night: motion sensor → terrace + hallway, Night Mode ON, Duration 10 min.

This chapter concludes the Lite version of the manual. The following chapters cover Pro features: Alarm system, RF Gateway and remote controls.

Chapter 15

Card type: RF Gateway (Zigbee RF bridge)

⭐ **PRO VERSION — this chapter describes a feature available only in the Pro version of the LumoHome app.**

RF Gateway is a special Zigbee device that receives RF (radio frequency) signals from physical wireless switches, buttons and remote controls, and forwards them to the app. One RF Gateway can learn codes from multiple RF remotes or buttons and execute a separate action for each code.

This enables integration of inexpensive RF wall switches (no wiring needed, battery lasts for years) with the Zigbee ecosystem and LumoHome app control.

> 💡 **What is RF?**
> RF (Radio Frequency) is the wireless technology used by inexpensive wall switches, door bells and remote controls. Unlike Zigbee, RF devices are simpler and cannot communicate with the app on their own — but through the RF Gateway they become part of the smart home.

Card appearance on the dashboard

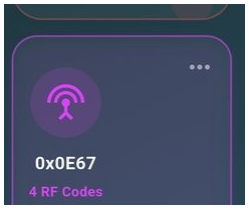

RF Gateway card — 4 RF Codes

The card shows:

- RF antenna icon (purple) — visual indicator of the RF Gateway
- Device name or Zigbee address (e.g. '0x0E67')
- Number of learned RF codes (e.g. '4 RF Codes') — how many physical buttons have been mapped

Unlike other cards, the RF Gateway has no state (ON/OFF) — it only records and forwards RF signals. Tapping the card does nothing — control is done through RF Mapping.

Card menu

RF Gateway card menu

Option	Description
RF Mapping	Opens the RF Mapper screen where new RF codes can be learned and actions defined for each button.
Edit Device	Changes the card name, icon and colour.
Move Left / Right	Moves the card within the dashboard grid.
Delete	Removes the card from the dashboard. The device remains on the Zigbee bridge.

RF Mapper — managing RF codes

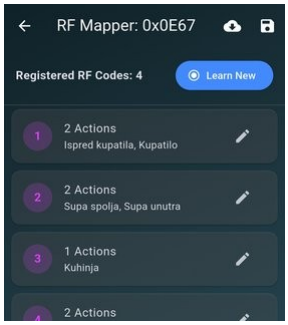

RF Mapper screen with 4 learned codes

Tapping 'RF Mapping' opens the RF Mapper screen. It shows all learned RF codes with the number of actions each code executes.

Screen elements:

- Registered RF Codes: N — total number of learned codes
- Learn New — starts learning a new RF code
- Code list (1, 2, 3...) — each entry shows how many actions it has and which devices it affects (e.g. '2 Actions — Bathroom hallway, Bathroom')
- Pencil icon (✏) next to a code — opens the action editor for that code
- Cloud icon (↓) — syncs codes with the bridge
- Floppy disk icon (💾) — saves the mapping locally

Learning a new RF code (Learn New)

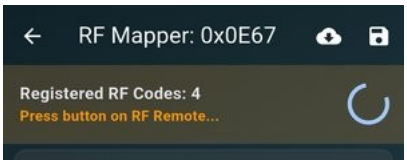

Learn New — waiting for RF button press

Tapping the 'Learn New' button puts the RF Gateway into learning mode:

1. The screen shows the message: 'Press button on RF Remote...' with a waiting animation
2. Press the physical button on the RF remote or wall switch
3. The gateway receives the RF signal and saves the code
4. The new code appears in the list — you can now assign actions to it

> 📌📌 **Note**
> Each physical RF remote can have multiple buttons — each button has a different RF code. Repeat 'Learn New' for each button separately.

Defining Actions for an RF Code

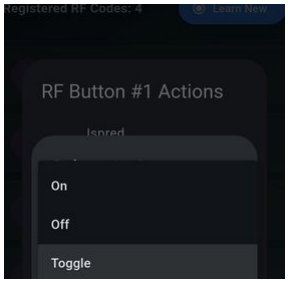

RF Button #1 Actions — action selection

Tapping the pencil next to a code opens the 'RF Button #N Actions' dialog. Here you define what happens when that physical button is pressed:

Action	Effect
On	The device turns on
Off	The device turns off
Toggle	Toggles state (if on, turns off; if off, turns on)

- One RF code can have multiple actions — for example, pressing one button can turn on several bulbs simultaneously
- Tap Add to add an action, Done to close
- Delete This ID — removes the entire RF code from the list

> 💡 **Typical RF Gateway use case**
> Place an inexpensive RF wall switch where there is no power (next to a door, on a post, in the garden). Map each button to a different group of lights. For example: button 1 = turn on everything in the room, button 2 = turn everything off, button 3 = Toggle terrace. No wiring, no Wi-Fi, no charging batteries for years.

The next chapter describes the alarm system.

Chapter 16

Card type: Alarm system

⭐ **PRO VERSION — this chapter describes a feature available only in the Pro version of the LumoHome app.**

The alarm system in the LumoHome app integrates Zigbee sensors (motion and contact) into a complete security system with arming, delay zone, sirens and push notifications to the phone. All logic runs on the Zigbee bridge — the alarm works even when the phone is not on the network.

Alarm system card on the dashboard

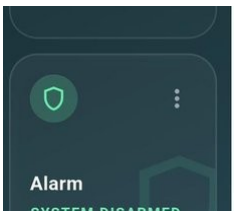

Alarm card — SYSTEM DISARMED

The alarm system card shows:

- Shield icon — green shield = system disarmed, red = armed
- System name (e.g. 'Alarm')
- Status below the name: SYSTEM DISARMED (green) or SYSTEM ARMED (red)

Tapping the card opens the alarm control screen with the ARM/DISARM button.

Alarm system configuration — Edit Device

The alarm Edit Device screen is divided into three sections: Activation Devices (how the alarm is triggered), Sensors/Zones (which sensors guard the premises) and Executors (sirens) + Settings.

Section 1 — Activation Devices (how the alarm is armed/disarmed)

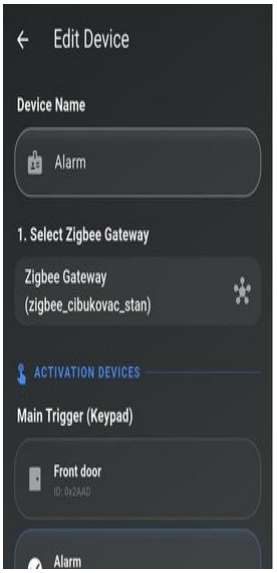

Edit Device — Activation Devices

This section defines how the user arms and disarms the system:

Field	Description
Device Name	Name of the alarm system displayed on the card (e.g. 'Alarm').
Zigbee Gateway	Zigbee bridge to which the system is connected.
Main Trigger (Keypad)	Contact sensor that acts as a 'keypad' — opening this sensor starts the ARMING or DISARMING procedure. Usually placed on the entrance door.
2FA Button (Scene Switch)	Optional second factor — a physical Scene button with which the user confirms the ARM/DISARM action. Select the gesture type: 1 Click, 2

Field	Description
	Clicks or Hold.

Section 2 — Sensors / Zones (sensors guarding the premises)

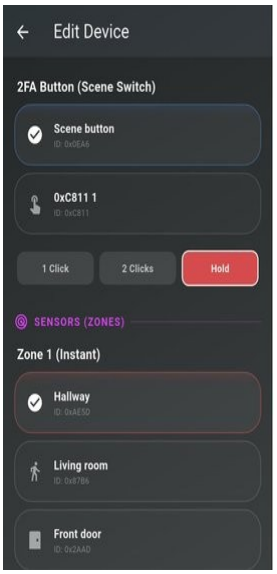

Zones — Instant and Delayed

Sensors are assigned to two zones with different behaviour:

Zone	Behaviour
Zone 1 (Instant)	Instant zone — if the sensor activates while the alarm is armed, the alarm triggers immediately without any delay. Used for windows, the terrace, side doors — places where there is no legitimate reason to pass.
Delayed Zone	Delayed zone — if the sensor activates, the system waits for the set time (Exit Delay) before triggering the alarm. Used for the main entrance door — to give the user time to disarm the system.

- Tap a sensor to add it to the zone (red border + checkmark = selected)
- The same sensor cannot be in both zones at the same time

Section 3 — Executors (sirens) and Alarm Settings

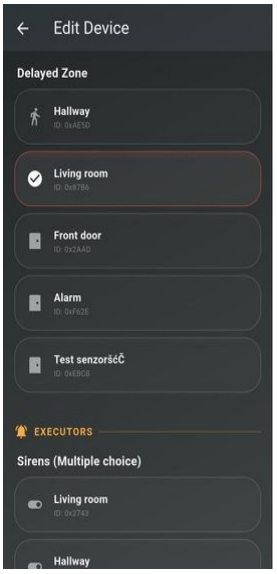

Sirens + Notifications + Settings

Sirens (Multiple choice) — select one or more Zigbee bulbs or switches that will flash/ring when the alarm triggers. Regular lights that flash as a warning can also be used.

Notifications + Exit Delay + Siren Duration

Option	Description
Notify me of state change	Push notification to the phone when the alarm is activated, triggered or deactivated.
Exit Delay	Time (seconds) the user has to leave the premises after arming before the system becomes active. Slider 5–25 seconds.
Siren Duration	How long the sirens run when the alarm is triggered. Slider in seconds.

Finally, tap the red Save button to save the entire configuration to the bridge.

Alarm control — ARM / DISARM / TRIGGERED

Tapping the alarm card opens the control screen that shows the current system state and a button to change it.

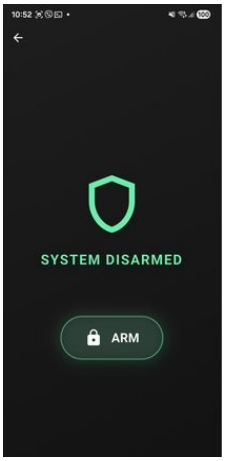

SYSTEM DISARMED — ARM button

ARMING... countdown 13 sec

SYSTEM ARMED — DISARM button

State	Description
SYSTEM DISARMED	The system is off — sensors are ignored. Green shield. Tap ARM to arm the system.
ARMING...	The system is arming — shows the Exit Delay countdown (e.g. 13 sec). During this time the user leaves the premises. Tap CANCEL to abort.
SYSTEM ARMED	The system is active — sensors are monitored. Red shield. Tap DISARM to disarm.
ALARM TRIGGERED!	The alarm has been triggered — red screen shows which zone activated the alarm and how long the sirens will run. Tap STOP ALARM to stop.

Alarm Triggered — alarm activation

ALARM TRIGGERED! — warning screen

When a sensor in a zone detects an intrusion while the system is armed, the app:

1. Shows the red ALARM TRIGGERED! screen with a warning icon
2. Shows the name of the zone or sensor that triggered the alarm (e.g. 'Instant Zone 0xAE5D')
3. Shows the active siren countdown
4. Sends a push notification to the phone: 'Intrusion dete... triggered'
5. Activates all selected sirens for the set time

Tap STOP ALARM to immediately stop the sirens and deactivate the alarm. The system returns to the DISARMED state.

> ⚠️ **Important — 2FA protection**
> If a 2FA Button is configured, the user must press the physical button with a specific gesture (1 Click, 2 Clicks or Hold) for the ARM/DISARM to be accepted. Without that the action is ignored — protection against accidental or unauthorised deactivation.

> 💡 **Recommended configuration for a flat**
> Main Trigger: contact sensor on the entrance door (Delayed zone). Instant zone: motion sensor in the living room + contact sensor on the terrace. 2FA Button: Scene button in the hallway — Hold for ARM, 2 Clicks for DISARM. Exit Delay: 15 seconds. Siren Duration: 60 seconds. Notifications: enabled.

This chapter completes all LumoHome user manual chapters related to the Zigbee bridge and Zigbee devices. The following chapters cover Controllers with Tasmota software.

Chapter 17

Tasmota Switch / Relay

> ⭐ **PRO VERSION**
> This chapter describes features available only in the Pro version of the LumoHome app.

Tasmota Switch (or Relay) is a card type for controlling WiFi switches, outlets and relays running Tasmota firmware. Unlike Zigbee switches that communicate through the Zigbee bridge, Tasmota devices connect directly to the MQTT broker over WiFi, using their own Tasmota Topic.

Typical Tasmota devices used with this card type:

- ESP32 or ESP8266 modules with Tasmota firmware — DIY solutions
- Smart outlets and switches with Tasmota firmware (Sonoff, Athom, etc.)
- Relay modules with power consumption measurement (voltage, current, wattage)
- Any device that publishes Tasmota MQTT messages on the configured topic

Card appearance on the dashboard

On the dashboard, the Tasmota Switch card shows:

- Device name (e.g. "Living room", "Push button")
- State — ON or OFF
- An icon that changes based on the state — active is coloured, inactive is grey
- Power consumption indicators below the name if supported by the device — voltage (0V), current (0.0A) and power (0W)
- Three dots (⋯) in the top right corner for quick menu access

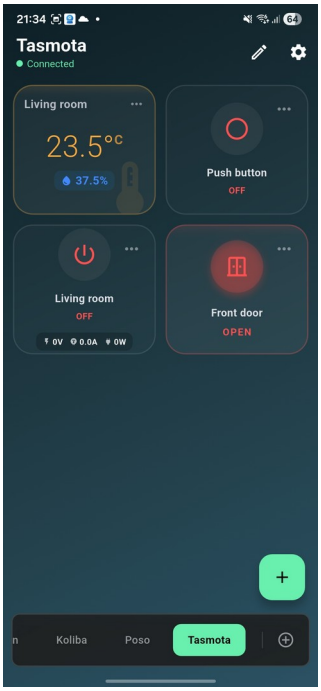

Tasmota dashboard — Living room switch (OFF, 0V 0.0A 0W) and Front door (OPEN)

Tapping the card turns the device on or off. The state updates immediately — the card changes the icon colour and shows the new state.

📌📌 **Note**

Unlike Zigbee devices, the Tasmota Switch communicates directly with the MQTT broker without an intermediary Zigbee bridge. Each device has its own Tasmota Topic configured in the Tasmota web interface (e.g. cibukovac/07).

Adding a Tasmota Switch card

To add a Tasmota Switch to the dashboard, tap the green + button in the bottom right corner, then select the appropriate device type from the TASMOTA section of the "Add New Device" menu.

Device configuration — Edit Device Switch

Tapping "Edit Device" from the card menu, or when first adding the device, opens the configuration screen. In addition to the standard settings (name, icon, colour), the Tasmota Switch has an extra Connection section and RF Learning.

Connection section — Tasmota Topic

Option	Description
Device Name	Name displayed on the card on the dashboard (e.g. "Living room", "Boiler").
Tasmota Topic	MQTT topic used by the Tasmota device. Must match the value configured in the Tasmota web interface under Configuration → MQTT → Topic. Example: cibukovac/07
Relay Index	Relay or button index on the device. Used for controllers and switches with multiple relays or buttons (e.g. ESP32 with 2, 4 or 8 channels). Relay Index 1 = first relay, Relay Index 2 = second relay, etc. For single-relay devices leave the value as 1.
Icon & Color	Card icon and colour — same system as for the Zigbee Switch card (bulb, switch, outlet, etc.).

💡💡 **Tip**

You can find the Tasmota Topic in the Tasmota web interface under Info → MQTT Topic, or in Configuration → Configure MQTT → Topic. Enter the same topic in the LumoHome app field.

📌📌 **Note**

If you have an ESP32 controller with 4 buttons, add 4 separate cards to the dashboard — all with the same Tasmota Topic but with different Relay Index values (1, 2, 3, 4). Each card controls one button or relay independently.

RF Learning — learning 433MHz remote controls

The Tasmota Switch card has an optional RF Learning feature that allows a physical 433MHz wireless switch (wall or pocket) to control this device — no WiFi connection on the remote, no rechargeable batteries, no phone app required.

This is especially useful for installing wall switches in places where there is no electrical wiring.

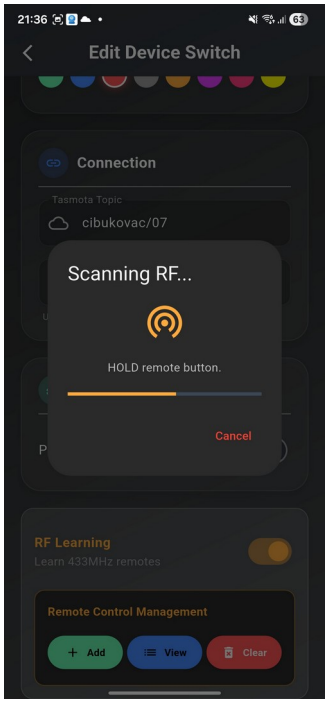

Edit Device Switch — RF Learning with the "Scanning RF... HOLD remote button" dialog

Option	Description
RF Learning (toggle)	Enable the toggle to activate RF code learning mode. While enabled, the device listens for 433MHz signals nearby.
Remote Control Management	Section for managing learned RF codes — contains three buttons: Add (add new code), View (view all codes), Clear (delete all codes).
Add — Scanning RF	Tap "Add" to start scanning. The app shows the dialog "Scanning RF..." with the message "HOLD remote button." Hold the physical button on the RF remote until the progress bar reaches the end. The device memorises the code.
View	Shows the list of all learned RF codes. Each code can be tested or deleted individually.
Clear	Deletes ALL learned RF codes from the device. Use with caution — this action cannot be undone.

💡💡 **Tip**

Each physical RF switch or remote can have multiple buttons — each button emits a different RF code. Repeat "Add" for each button separately. For example: button 1 → turn on, button 2 → turn off.

> ⚠️ **Important**
> RF Learning only works if the Tasmota firmware on the device supports RF receiving (RF Receiver). Not every ESP32/ESP8266 module is hardware-equipped with an RF receiver — check your device's specifications.

Card menu

A long tap on the card (or tap on the three dots ⋯) opens the menu with all options for that device.

Option	Description
Turn off in: X min	Quick timer for automatic turn-off. Select a time from the dropdown menu (e.g. 10 min) and tap ▶. The device turns off when the time expires.
Timer (Schedule)	Opens the Timer Settings screen for scheduled on/off according to a daily schedule — classic (fixed time) or astronomical (Sunset/Sunrise).
Edit Device	Opens the device configuration screen — change name, Tasmota Topic, icon, colour or RF settings.
Move Left / Right	Moves the card left or right on the dashboard to rearrange the layout.
Delete	Removes the card from the dashboard. The device remains active on the MQTT broker and can be re-added.

Timer settings

The Tasmota Switch timer works identically to the Zigbee Switch card timer — tapping "Timer (Schedule)" from the card menu opens the Timer Settings screen with two operating modes.

Classic timer (Classic)

Turns the device on and off at an exact time, every day or just once.

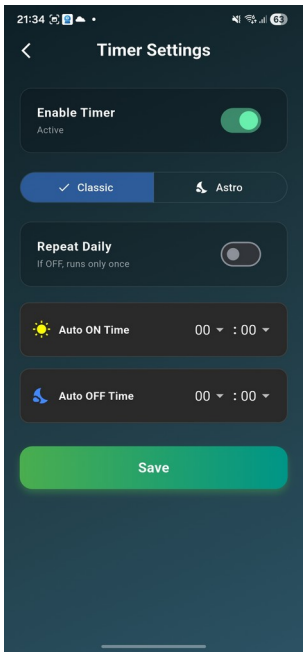

Classic timer — fixed time

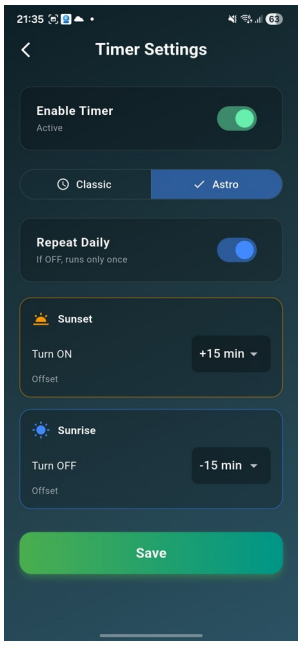

Astronomical timer — Sunset/Sunrise

Option	Description
Enable Timer	Enables or disables the entire timer. Green toggle = the timer is active.
Repeat Daily	ON = repeats every day. OFF = runs only once, then deactivates automatically.
Auto ON Time	Time at which the device automatically turns on (hours : minutes).
Auto OFF Time	Time at which the device automatically turns off (hours : minutes).

Astronomical Timer (Astro)

Ties the schedule to natural light — sunset and sunrise. Automatically adapts to the changing day length throughout the year.

Option	Description
Sunset → Turn ON	The device turns on at sunset. Offset +15 min = "turn on 15 minutes after sunset".
Sunrise → Turn OFF	The device turns off at sunrise. Offset −15 min = "turn off 15 minutes before sunrise".
Offset	Offset in minutes from the astronomical event. Can be positive (+) or negative (−).
Repeat Daily	ON = every day, OFF = only once.

💡💡 **Tip**

For outdoor lights set Sunset → Turn ON +15 min and Sunrise → Turn OFF −15 min. The light turns on 15 minutes after sunset and off 15 minutes before sunrise — always at the right time regardless of the season.

⚠️ **Important**

For the Astro timer to work, the geographic location must be set on the Tasmota device. This is configured in the Tasmota web interface under Configuration → Configure Other → Latitude and Longitude.

The next chapter describes the Tasmota Push Button — a special card type for pulse switches and buttons.

Chapter 18

Tasmota Push Button

The Tasmota Push Button is a card type for pulse buttons and switches that briefly send an ON signal when pressed, then automatically return to OFF. Typical applications are gates, locks, intercoms and boilers — devices that only need a brief "tap" rather than being held on.

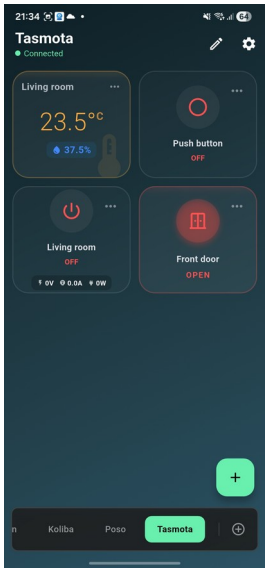

Dashboard — Push button (OFF)

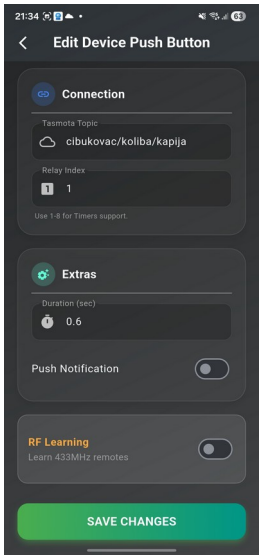

Edit Device Push Button

Configuration — Edit Device Push Button

Option	Description
Tasmota Topic	MQTT topic of the device — must match the values configured in the Tasmota web interface (e.g. cibukovac/koliba/kapija).
Relay Index	Relay index (1–8). Used for controllers with multiple relays or buttons. Use values 1–8 for Timer support.
Duration (sec)	Pulse duration in seconds — how long it stays ON before automatically returning to OFF. Example: 0.6 seconds for a gate bell, 2 seconds for an electric motor lock.
Push Notification	When enabled, the app sends a push notification (ntfy) every time the button is activated.
RF Learning	Optional — allows 433MHz wireless buttons to activate this device. Identical to Tasmota Switch (see chapter 17).

💡 **Type**

Tapping the Push Button card on the dashboard sends a brief impulse immediately and returns to OFF — no manual turn-off is needed. Adjust the impulse duration in the Duration field.

📌 **Note**

Push Button does not support scheduling (Schedule) due to its pulse-based nature.
Relay Index 1–8 is required to use the Tasmota Timers feature directly on the device.

Chapter 19

Tasmota Contact Sensor

The Tasmota Contact Sensor is a card type for magnetic sensors that detect whether a door, window or gate is open or closed. The sensor communicates directly with the MQTT broker via Tasmota firmware. It is a passive device — it does not send commands, only reports the state.

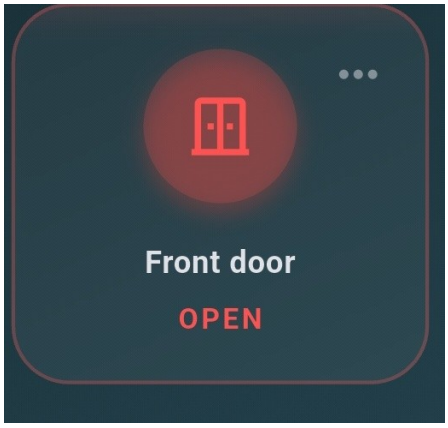

Tasmota Contact Sensor — Front door CLOSED

Card visual states

State	Description
CLOSED	The door or window is closed. The card is dimmed with a teal/green icon. The text "CLOSED" is shown in green.
OPEN	The door or window is open. The card takes on a more prominent colour with a red accent. The text "OPEN" is shown in red.

Configuration — Edit Device Contact Sensor

Option	Description
Tasmota Topic	MQTT topic of the device — must match the values configured in the Tasmota web interface (e.g. cibukovac/koliba/kapija).
Push Notification	When enabled, the app sends a push notification (ntfy) every time the sensor state changes (OPEN/CLOSED).

💡 **Type**

The Tasmota Contact Sensor is ideal for entrance doors, gates, windows and cabinets. In combination with the alarm system, you can set the alarm to trigger as soon as the door opens while the system is armed.

Chapter 20

Tasmota Universal Sensor

The Tasmota Universal Sensor is a card type that displays readings from ESP32/ESP8266 sensor modules running Tasmota firmware — temperature, humidity, pressure, CO_2, air quality and more. The sensor sends measurements directly to the MQTT broker without an intermediary Zigbee bridge.

Tasmota Universal Sensor — Living room (23.5°C / 37.5% humidity)

Card appearance on the dashboard

The card displays measured values in real time:

- Temperature in large coloured digits (orange for warmer values)
- Humidity in a blue button with a drop icon (💧)
- Thermometer icon in the card background
- Device name in the top left corner (e.g. "Living room")
- Three dots (⋯) for menu access

Configuration — Edit Device Universal Sensor

Option	Description
Tasmota Topic	MQTT topic of the device — must match the values configured in the Tasmota web interface (e.g. cibukovac/living).
Monitored Data	Select which values are displayed on the card: Temperature, Humidity, Pressure, CO_2, TVOC, Illuminance and others. Tap each value to enable or disable it.
Push Notification	When enabled, the app sends a push notification (ntfy) when the state changes.

💡 **Tip**

Tapping directly on the card opens the Temperature History screen with a line chart and Min/Avg/Max values for the last 1h, 24h or 7 days.

📌 **Note**

The Universal Sensor is passive — it only displays data with no control capability. History is recorded locally from the moment the card is added to the app.

Chapter 21

Tasmota Thermostat

The Tasmota Thermostat is a card type that combines a temperature sensor and a relay on the same ESP32 controller into a local thermostat. The app does not control heating directly — the logic runs on the Tasmota firmware, and the card only shows the state and allows the set temperature to be changed.

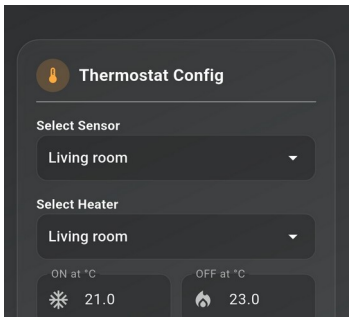

New Device Thermostat — Thermostat Config section

Configuration — Thermostat Config

Option	Description
Select Sensor	Dropdown to select the temperature sensor from which the thermostat reads the current temperature. The sensor must be a Tasmota Universal Sensor already added to the same dashboard and must use the same Tasmota Topic as the heater.
Select Heater	Dropdown to select the heater — the Tasmota Switch card that physically turns the heater on and off. The heater must use the same Tasmota Topic as the sensor (same ESP32 controller).
ON at °C	Temperature at which the heater turns on automatically (❄️ icon). Example: 21.0°C — when the temperature drops below this value, the relay turns on.
OFF at °C	Temperature at which the heater turns off automatically (🔥 icon). Example: 23.0°C — when the temperature rises above this value, the relay turns off.

⚠️ **Important**

Select Sensor and Select Heater must use the same Tasmota Topic — i.e. they must be on the same ESP32 controller.
If they are on different devices (different topics), the thermostat will not work correctly.

💡 **Type**

Thermostat logic: when the temperature drops below "ON at °C", the relay turns on and heats. When the temperature rises above "OFF at °C", the relay turns off. The range between these two values is the thermostat's operating zone.

📌 **Note**

The thermostat works even when the app is closed — the logic runs directly on the Tasmota firmware. The app only displays the state and allows values to be changed.

Chapter 22

Tasmota IR Blaster

The Tasmota IR Blaster is a card type that uses an ESP32 with an IR transmitter to control air conditioners, TVs and other devices that use an infrared remote control. There are two operating modes: Smart Mode (automatic support for known protocols) and Manual Mode (manual signal learning).

Configuration — Edit Device Tasmota IR

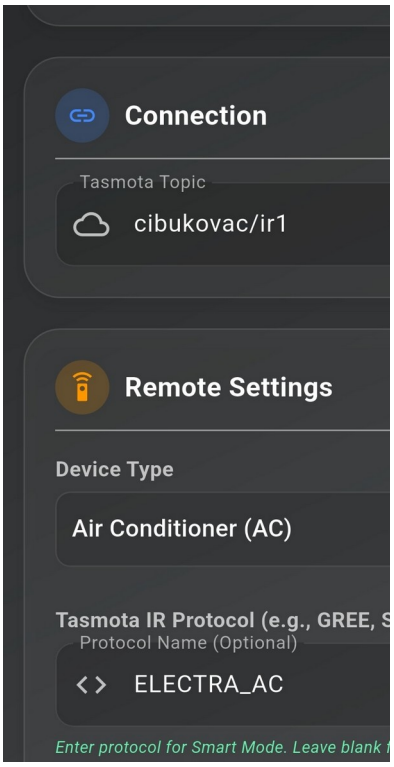

Edit Device — Connection and Remote Settings

Smart Mode — HEAT 24°C ON

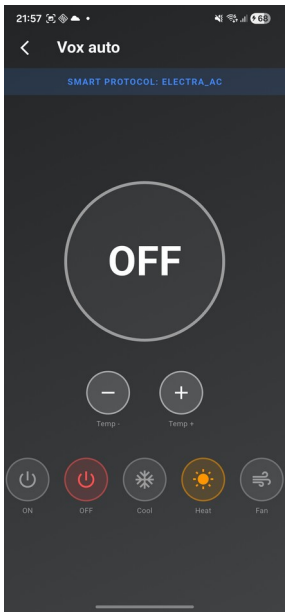

Smart Mode — OFF

Option	Description
Tasmota Topic	MQTT topic of the IR device (e.g. cibukovac/ir1). Must match the settings in the Tasmota web interface.
Device Type	Type of device you are controlling. Currently supported: Air Conditioner (AC). Selected from a dropdown menu.
Tasmota IR Protocol	IR protocol name used by your device (e.g. ELECTRA_AC, GREE, SAMSUNG, DAIKIN). Enter the protocol for Smart Mode. Leave blank for Manual Mode (manual learning).
Hardware Repeat	Number of IR signal repetitions. For the Coolix protocol set to 10, for all others leave at 0. Adjusted with a slider.

Smart Mode — automatic AC control

When a Tasmota IR Protocol is entered, the card opens in Smart Mode. A circular display shows the current temperature and mode, with five buttons at the bottom:

- ON — turns on the AC in the last configured mode
- OFF — turns off the AC
- Cool ❄️ — switches to cooling mode
- Heat ☀️ — switches to heating mode
- Fan 💨 — fan only, without heating/cooling
- Temp − / Temp + — decreases or increases the set temperature by 1°C

> 💡 **Type**
> Smart Mode sends a complete IR packet according to the protocol standard — temperature, mode and fan speed in one command, just like a real remote control.

Manual Mode — manual signal learning

When the Tasmota IR Protocol field is empty, the card opens in Manual Mode. Cooling and Heating buttons are displayed in temperature steps. Each button can be learned with a long press:

- Long tap on a button — the app waits for an IR signal
- Point the original remote at the IR Blaster and press the desired command
- The device memorises the signal — from that point, tapping the button sends the learned signal

> 📌 **Note**
> Manual Mode is suitable for all devices regardless of manufacturer — TV, AC, projector, sound system. Each button can learn a different signal from different remotes.

> ⚠️ **Important**
> The IR Blaster must have a direct line of sight to the receiver on the air conditioner or TV — the IR signal does not pass through walls or obstacles.

Conclusion

End of manual — What we covered

The LumoHome user manual covers the complete smart home ecosystem — from the first app launch and MQTT broker setup, through Zigbee device management, all the way to advanced Tasmota controllers with WiFi connectivity. Below is an overview of everything described in this manual.

Chapter overview

Device type	Chapter / Coverage
Chapters 1–5	Introduction, first launch, MQTT broker, app settings, adding Zigbee devices and card configuration
Chapters 6–11	Zigbee cards: Switch, Motion Sensor, Contact Sensor, Temperature Sensor, Colored Light / Dimmer, Thermostat (TRV)
Chapters 12–14	Scene Remote, Scene and Auto-Off timer, Zigbee automations (Follow-me logic)
Chapter 15	RF Gateway — Zigbee RF bridge for 433MHz wireless switches ⭐ Pro
Chapter 16	Alarm system — ARM/DISARM, zones, sirens, 2FA protection ⭐ Pro
Chapter 17	Tasmota Switch / Relay — WiFi switches and relay modules with RF Learning ⭐ Pro
Chapter 18	Tasmota Push Button — pulse switches for gates and locks ⭐ Pro
Chapter 19	Tasmota Contact Sensor — magnetic door and window sensors ⭐ Pro
Chapter 20	Tasmota Universal Sensor — temperature, humidity and other sensors ⭐ Pro
Chapter 21	Tasmota Thermostat — local thermostat on ESP32 controller ⭐ Pro
Chapter 22	Tasmota IR Blaster — Smart Mode and Manual Mode for air conditioners ⭐ Pro

What comes next

This user manual describes how to use the app. For users who want to go further and build their own hardware, separate technical guides will be published.

🔧 **Technical guide — coming soon**

Technical guide for Tasmota controllers (ESP32) — coming soon

A detailed guide for building, flashing and configuring ESP32 controllers with Tasmota firmware. It will cover: relay module wiring diagrams, IR transmitters, temperature sensors and RF receivers; MQTT topic configuration; sensor calibration and power consumption optimisation.

🔧 **Technical guide — coming soon**

Technical guide for custom Zigbee devices (ESP32-C6 and ESP32-H2) — coming soon

A guide for building your own Zigbee devices on ESP32-C6 and ESP32-H2 chips, which have native Zigbee support. It will cover: firmware development, Zigbee pairing with the Tasmota bridge, integration with the LumoHome app and examples of finished projects.

Thank you for using LumoHome

LumoHome was designed with one goal — to make smart home control simple, reliable and completely local. No subscription, no ads, no sending data to the cloud.

If you have questions, suggestions or have found a bug in the app, contact us through the support channel. Every piece of feedback helps make LumoHome better.

LumoHome · Version 1.0 · 2026