

当前文件在印刷时是有效的。更新的版本可以在线获得。

WM 137855 Replacing drive belt

工具

名称	类型	编号	描述	
socket-wrench insert	专用工具	9836/1		 9836-1. gif

Preliminary work

准备工作


1. 将保护罩放入座舱。
2. 拆下后壁盖。

→ 555919 拆卸和安装后壁盖。

Replacing drive belt

Replacing drive belt

Drive belt routing (view on removed engine):

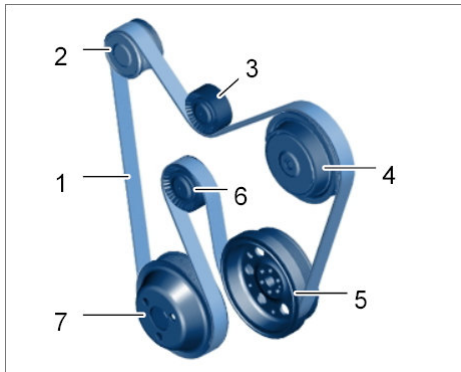


Installation overview for drive belt

- 1 - Drive belt
- 2 - Generator pulley
- 3 - Deflection roller
- 4 - Air-conditioning compressor pulley
- 5 - Crankshaft vibration damper
- 6 - Tensioning roller for belt tensioner
- 7 - Coolant pump pulley

1. Relieve the drive belt.


- 1.1. Fit a ring wrench (a/f 30) on the hexagon **-1-** on the tensioner, turn it clockwise as far as it will go **-箭头-** and hold it at that position.
- 1.2. Remove drive belt from the pulley on the generator.
- 1.3. Carefully allow the tensioning roller to slide back to its original position.

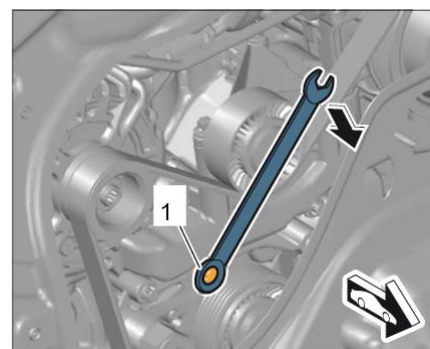

Relieving drive belt


2. Cut and remove drive belt.

- 3. Unscrew screw **-1-** for spacer sleeve while countering at the special screw **-箭头-** and remove spacer sleeve **-2-**.

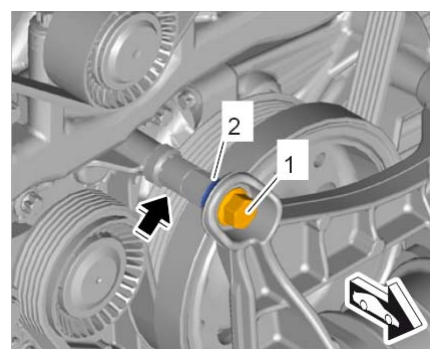

Screw on spacer sleeve

Use special tool socket-wrench insert 9836/1 -1- for easier access!

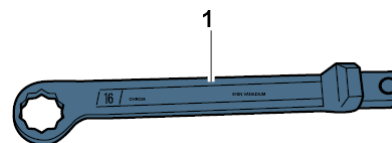


Special tool 9836/1



信息

- 检查皮带轮的凹槽中是否有异物。
4. Check pulleys for damage.
 5. Guide in new drive belt **-1-** on the engine carrier -箭头- .

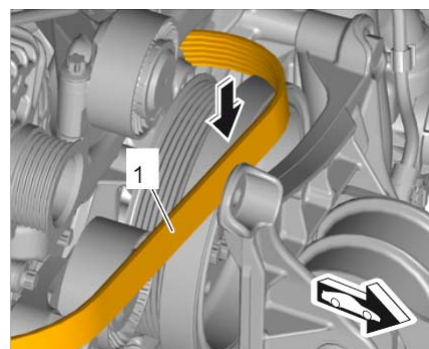

Installing drive belt

6. Position drive belt on the pulleys and tighten it.
7. Fit spacer sleeve and screw in and tighten screw while countering at the special screw.

Tools required: Socket-wrench insert 9836/1

Subsequent work

后续工作

1. 安装后壁盖。

→ **555919** 拆卸和安装后壁盖。
2. 拆下座舱中的保护罩。

981320, 981321, 981330, 981331, 981120, 981121, 981130, 981131

年款 起始时间 2012
C00