

当前文件在印刷时是有效的。更新的版本可以在线获得。

WM 681119 拆卸和安装手套箱锁

拆卸和安装手套箱锁


拆卸和安装手套箱锁



信息

锁止机构仍留在把手中。

- 1. 提前把手并释放手套箱锁的锁止机构 -箭头 B- 。

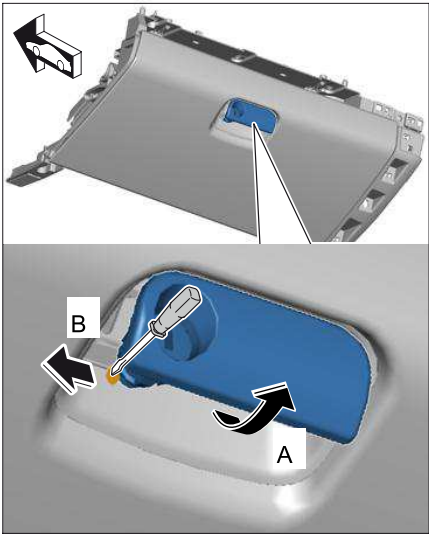

松开锁

- 2. 插入点火车匙并将手套箱锁从把手中拉出。



拆卸锁



信息

将锁止机构完全滑入把手，然后按入锁。

3. 按照与拆卸相反的顺序进行安装。

982120, 982121, 982130, 982131, 982140, 982141, 982150, 982151, 982320, 982321, 982330, 982331, 982340, 982341, 982350, 982351

年款 起始时间 2017

C00, C02, C05, C06, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C17, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C41, C45, C45, C46, C96, C97, C98, C99