Bricks

A LEGO® BRICK MODEL OF

Game Boy

A micro Game Boy with a clear screen, a D-pad and two buttons, in 25 pieces.

Designed by Phoenix_bricks

25 pieces · 10 steps · 2 sections

Unofficial fan-made building instructions

Not physically build-tested. Every part is a real LEGO element and the model was checked on a computer (connections, collisions, every step, balance), but nobody has built it with real bricks yet.



Not produced, sponsored or endorsed by the LEGO Group. LEGO® is a trademark of the LEGO Group. Game Boy and related names belong to their owners. Made with brickkit · 2026-10-11

Before you start

An unofficial fan-made manual

This booklet is not a LEGO product. It was generated from the model file by a computer program and checked part by part.

The model was designed by Phoenix_bricks (https://rebrickable.com/mocs/MOC-238888/). These steps were worked out from it here; they are not the designer's own instructions.

Not physically build-tested

The model and these steps were checked on a computer only: every part/colour is a real LEGO element, all 32 connections between parts were matched in 3D, no two parts overlap, every part can be pushed into place in its step, and the model's balance was estimated. Not tested: how firmly parts hold, part tolerances and how it copes with handling. Take your time and support the model while you work.

The finished model

About 2.4 × 1.9 cm and 4.5 cm tall, about 9 g (estimated).

The grey body goes together upside down: every piece presses on with its studs into the piece below. Two steps in, make the D-pad, an axle through two bricks, and press it on. Four brackets on their sides then turn the studs forward for the screen and up again for the top.

You will need

- The 25 pieces in 5 colours listed at the back, with their LEGO element IDs and BrickLink numbers.
- A brick separator for pieces that sit too deep for a finger.

Tips

- Sort the pieces by colour before you start.
- Build the sections in order: each sub-assembly is finished before it is used.
- New pieces in a step have a yellow outline; earlier pieces are drawn paler.
- Upside down just means studs down. Hold the model any way up you like while you press a piece on: the pictures show it standing as it will when it is done.
- It stands on an edge one stud deep, so stand it somewhere it will not be knocked, or lie it on its back.

The 5 colours

- Light Bluish Gray: 13
- Dark Bluish Gray: 6
- Trans-Clear: 3
- Magenta: 2
- Black: 1

How to read the steps

Parts and step number

7



2x

The parts for the step and how many of each, then the step number. The parts of a step are drawn at one scale, so a longer one looks longer; a tile or a long plate also has its size in studs under it.

New parts

The parts added in a step have a yellow outline and are drawn in full colour; the parts from earlier steps are drawn paler.

Sub-assemblies



1x

A yellow-framed picture means: put in the sub-assembly you built in its own section. "Build 4x" means you need four of them.

Sections

Each section starts with its name at the top of the page. Sections are built in the order they appear.

Seen from below


When a step adds parts underneath, the picture shows the model from below. A small label says so (and "seen from behind" likewise). A piece the picture cannot show gets a small picture beside it, ringed in yellow, from the side it can be seen from: where it clicks in.

Insert direction


Some parts slide in sideways (axles through bearings, gears onto axles). The picture shows where they end up; push them in along their axle.

Build overview

The model is built in 2 sections. Each is finished before it is used.

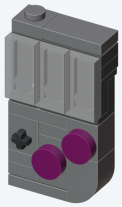


1. Game Boy
steps 1–2, 5–10

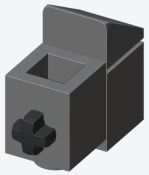


2. D-pad
steps 3–4


GAME BOY

1

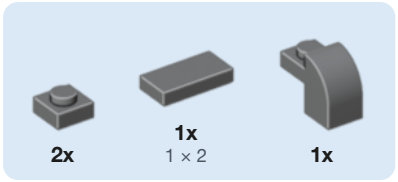


Everything in the grey body goes on upside down. Start with the curved brick, round end down, and press the 1 x 2 tile onto its stud from below. Two 1 x 1 plates go on the tile's free end

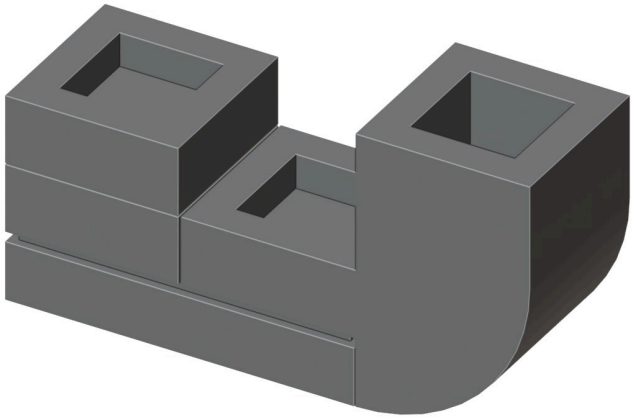

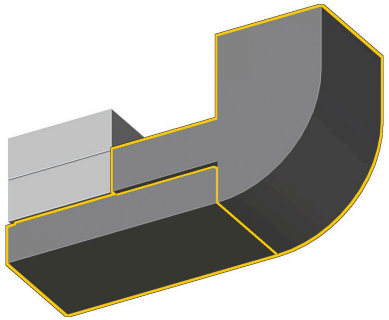

From below: the outlined pieces click in here.

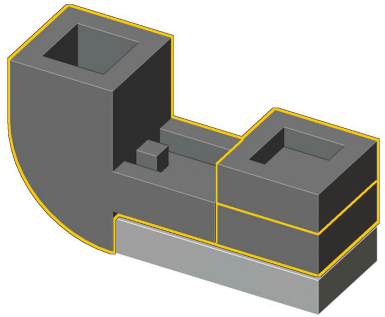



From behind: the outlined pieces.

2



Two bricks with a stud on the side, studs to the front: one on the ledge, one on the curved brick. A 1 x 1 plate tops the lower one

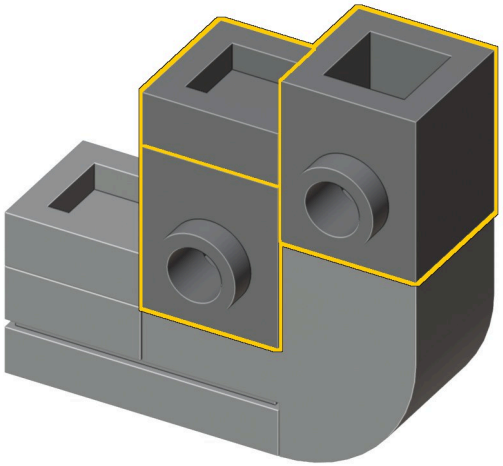


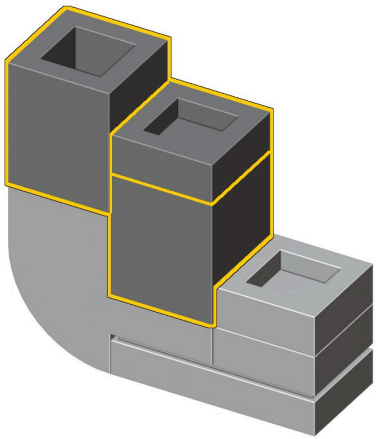


From behind: the outlined pieces.


D-PAD

3

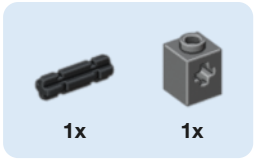


The D-pad: push the black axle through a brick with a cross hole, held upside down, until a little of it shows at the front

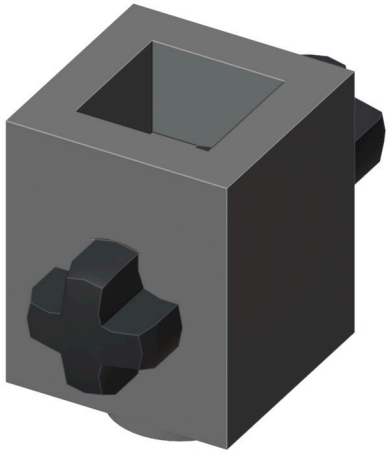

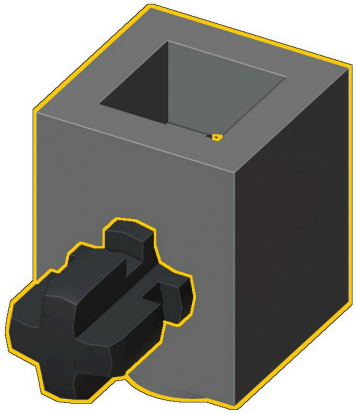



From behind: the outlined pieces.

4

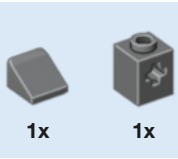


Push a second cross-hole brick, right way up, onto the axle's long end, and put the little slope on it, high edge to the front

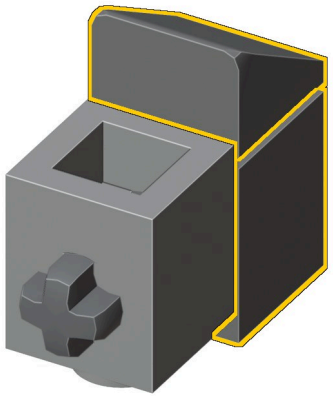

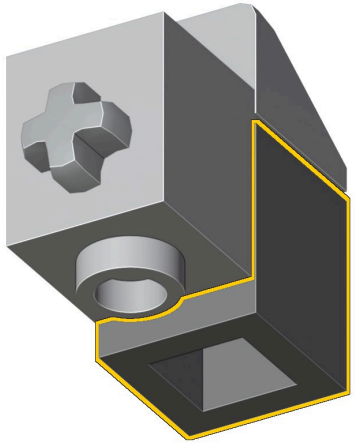



From below: the outlined piece clicks in here.

5

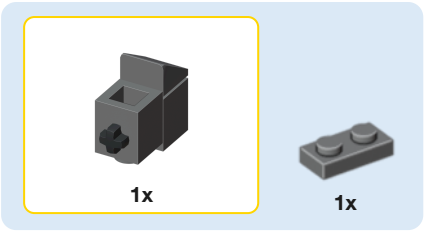


Press the D-pad onto the two plates, its second brick hanging behind, and lock it in with the 1 x 2 plate across the top

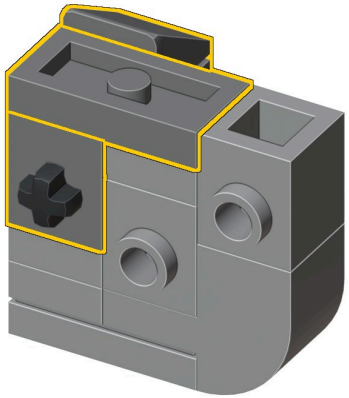

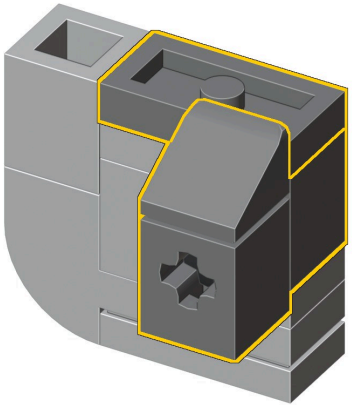


From behind: the outlined pieces.

6

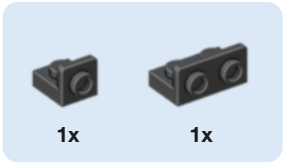

The screen's frame. Lay the two brackets with the upright end on their side studs, so their plates stand along the back with studs to the front: the 1 x 1 over the D-pad, the 1 x 2 beside it

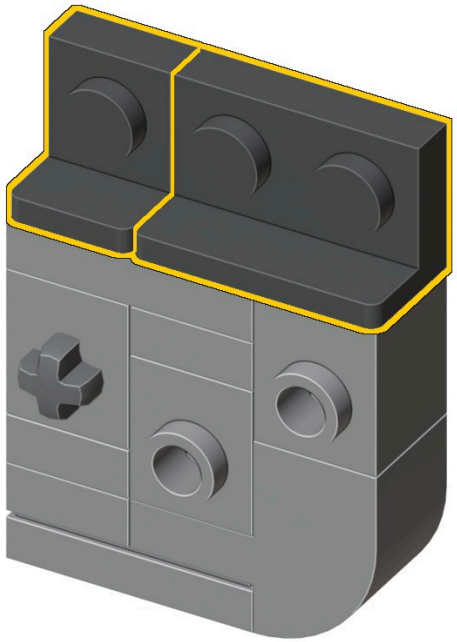


7




1x 1x

Press the other two brackets onto those studs, plates to the front and side studs up: the 1 x 2 on the left this time, so the joins do not line up

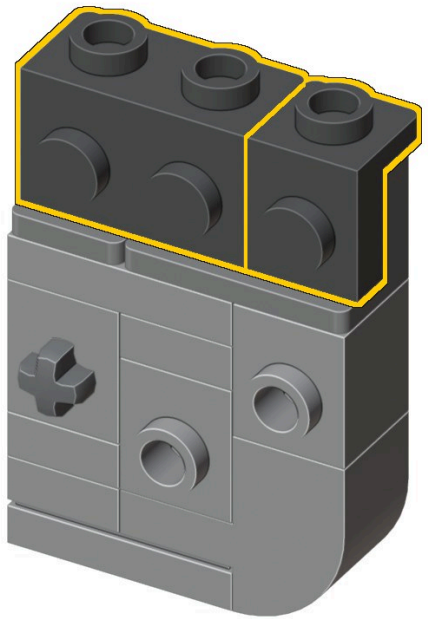


8



1x 1x 1 × 2 2x 1 × 3


Two 1 x 3 plates on the studs on top, then the top edge: a 1 x 1 plate on the left and a 1 x 2 tile



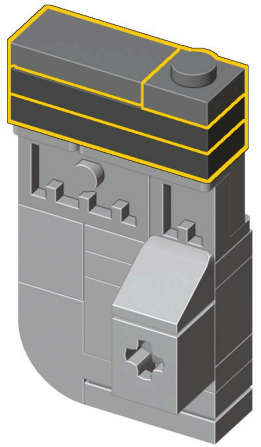


From behind: the outlined pieces.

9



3x
1 × 2

The screen: three clear 1 x 2 tiles standing side by side, each on one of the studs facing forward

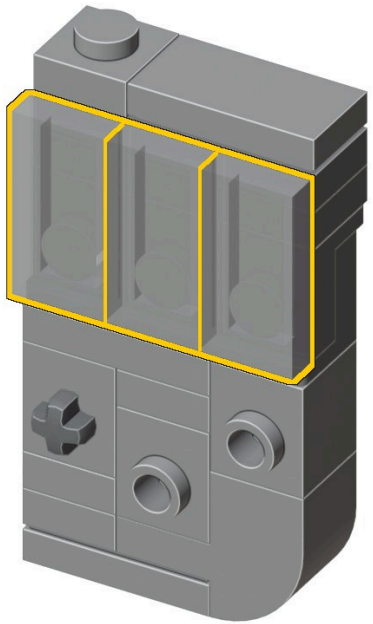


10



2x

The A and B buttons: a round tile on each stud on the front

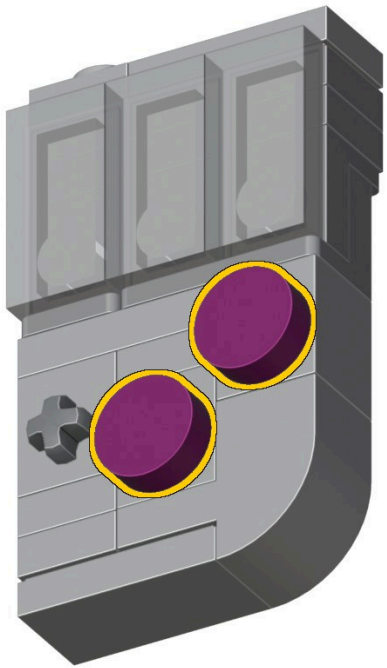

Parts inventory

25 pieces in 15 part/colour lines. Bold: the LEGO element ID (what LEGO Pick a Brick sells); below: the colour and the BrickLink part number.



1x
4109810
Black
BrickLink 32062



1x
6413106
Dark Bluish Gray
BrickLink 36841




1x
6225494
Dark Bluish Gray
BrickLink 36840



1x
6214341
Dark Bluish Gray
BrickLink 99781



1x
6000606
Dark Bluish Gray
BrickLink 99780



2x
4211133
Dark Bluish Gray
BrickLink 3623



1x
6285778
Light Bluish Gray
BrickLink 6091




1x
4521921
Light Bluish Gray
BrickLink 54200



2x
4558953
Light Bluish Gray
BrickLink 87087




4x
4211399
Light Bluish Gray
BrickLink 3024



1x
4211398
Light Bluish Gray
BrickLink 3023




2x
6336539
Light Bluish Gray
BrickLink 73230



2x
4211414
Light Bluish Gray
BrickLink 3069



2x
6322816
Magenta
BrickLink 98138



3x
6514223
Trans-Clear
BrickLink 3069

About this model

The grey body goes together upside down: every piece presses on with its studs into the piece below. Two steps in, make the D-pad, an axle through two bricks, and press it on. Four brackets on their sides then turn the studs forward for the screen and up again for the top.

Checked on a computer

PASS	**real elements**	15 part/colour combinations: 0 not real, 0 rare
PASS	**connections**	32 connections (30 stud, 2 axle); 1 separate piece(s)
PASS	**collisions**	0 overlapping pair(s) among 25 parts
PASS	**buildability**	26 insertions tried across 2 submodel(s); 0 problem(s)
PASS	**stability**	about 9 g; centre of mass inside the base (93% margin); tips at 9.3 deg
PASS	**mechanism**	no moving parts defined
PASS	**electrics**	no electrics in this model
PASS	**technique**	0 note(s)

Not yet built with real bricks

These checks catch most mistakes a designer can make, but not all: clutch power, part tolerances, how stiff a long axle is and how the model survives handling can only be judged with real bricks. If you build it, we would love to hear how it went.

Files

3D model (LDraw, opens in BrickLink Studio, LeoCAD and LDCad), parts lists for BrickLink and LEGO Pick a Brick, and an interactive 3D viewer: **bricks.superfun.games/m/game_boy**

Trademarks

LEGO® is a trademark of the LEGO Group, which does not sponsor, authorize or endorse this booklet. Other names belong to their owners. Part geometry from the LDraw library (CC BY 4.0); connection data from the LDCad shadow library; element data from Rebrickable.