CREDO SC270/270G

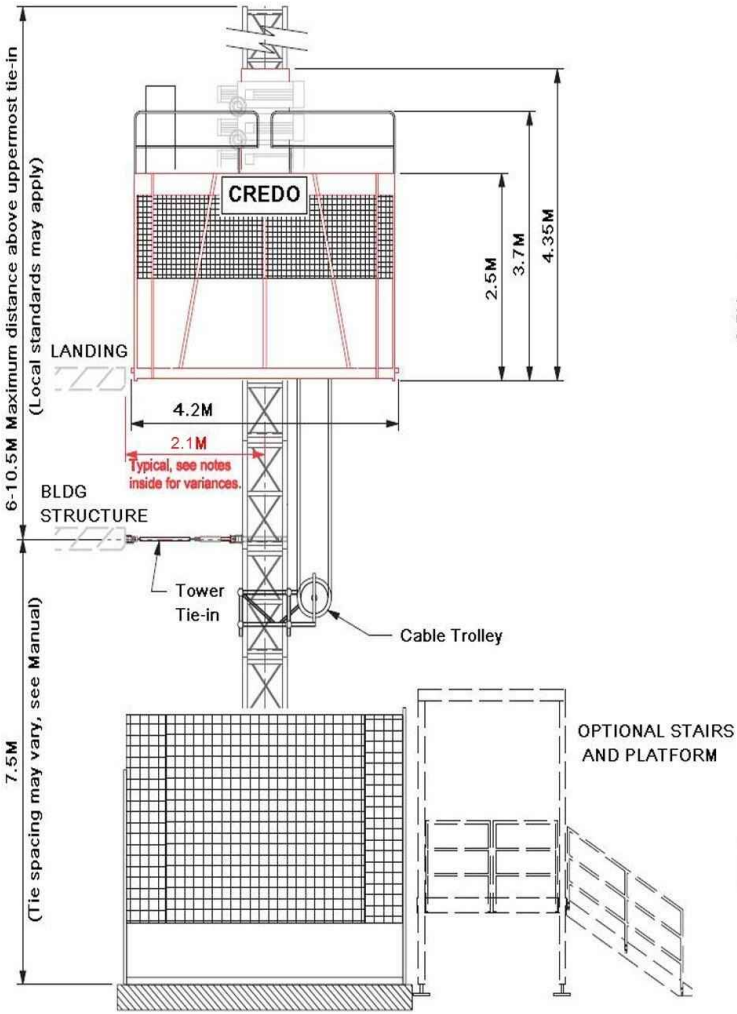

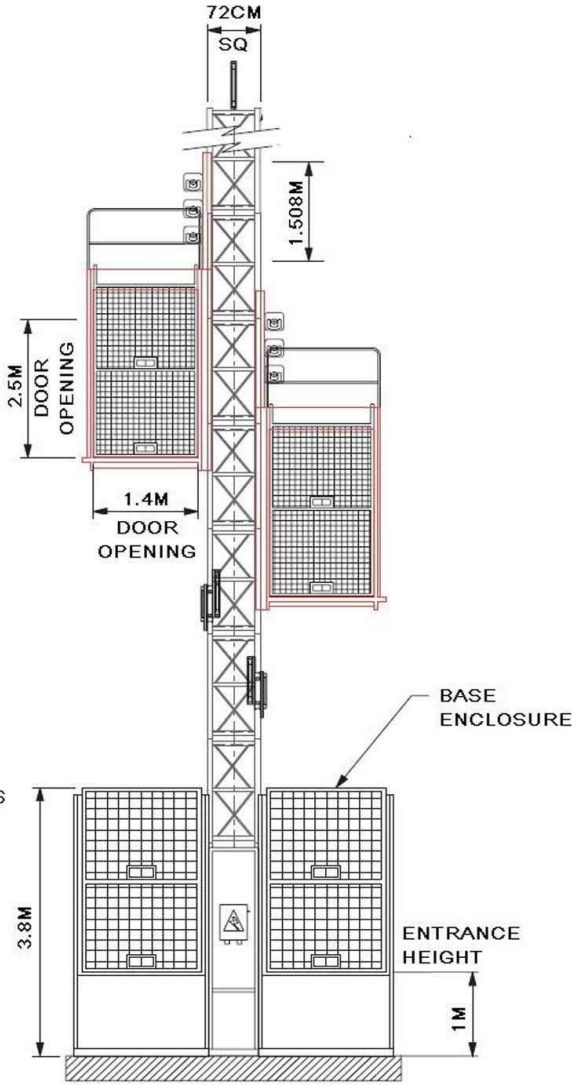

SUN JUPITER

Sun Jupiter Co.,Ltd.
2/2 Moo.3 Or-Ngurn Saimai Bangkok 10220
Tel: 0062-9983855 , 0062-9983655
Fax: 0062-9983466

Foundation Details



FOUNDATION ELEVATION VIEW

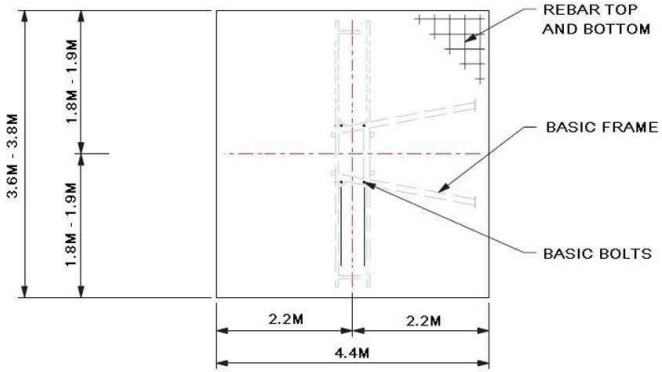

FOUNDATION PLAN VIEW

NOTE :

1. Wedge Anchor M20x160 8pcs. are installed on steel plate washwrs.
2. The Load on the foundation should be more than P :
   P = (Cage + Enclosure + Mast + Counterweight + Load) x 0.02 (kN)
3. The ground pressure under the foundation should be more than 0.15 MPa.
4. Double Mesh reinforcement : Rods 12 mm dia.
5. Foundation frame must be embeded into the concrete slab.
6. Careful draining way must be made.
7. Refer to manufacturers manual before installing, operating, servicing, repairing, jumping or dismantling.

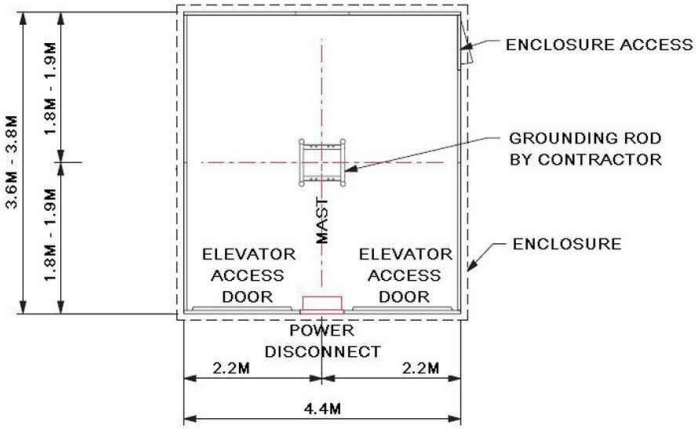

GROUND ENCLOSURE PLAN VIEW

SUN JUPITER
Sun Jupiter Co.,Ltd.
2/2 Moo.3 Or-Ngurn Saimai Bangkok 10220
Tel: 0062-9983855 , 0062-9983655
Fax: 0062-9983466

Tie-In Details

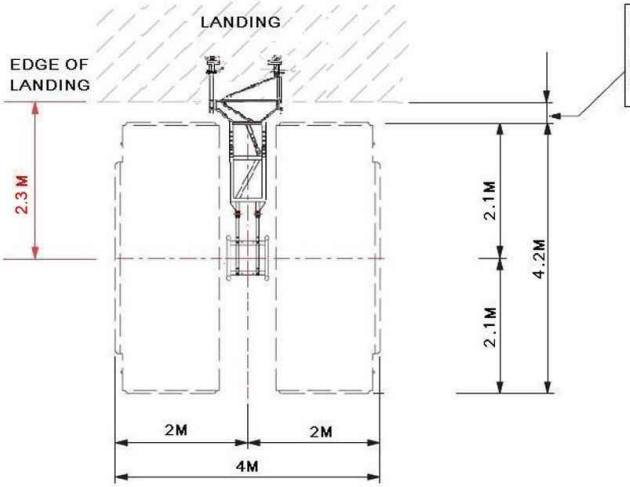

IMPORTANT :
Clearance between car platform and landing step will be verify before installing to assure compliance with appropriate standards and regulations.

TIE-IN PLAN VIEW

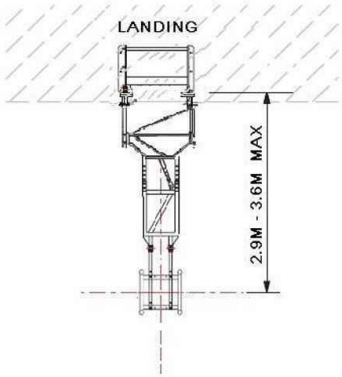

FLOOR MOUNT TIE-IN PLAN VIEW

MODEL VARIATIONS

SC270/270G	96 M/min

GENERAL

LOAD CAPACITY	2,700 kg. (Percar)
INSIDE ELEVATOR CAR DIMINSIONS (W x L x H)	1.5m x 4.2m x 2.5m
DOOR OPENING (END)	2.5 M
OPTIONAL SIDE DOOR OPENING	1.3M x 1.2M
TOWER SECTION LENGTH	1.508M
MAXIMUM TOWER HEIGHT	550M
MAXIMUM TOWER TIE-IN SPACING (TYPE II)	6M - 10.5M

WEIGHTS

GROUND ENCLOSURE	1,480 kg.
ELEVATOR CAR AND MOTOR	2,000 kg.
MAST SECTION (4.5mm)	180 kg.

ELECTRICAL

POWER REQUIREMENT (PER CAR)	380V - 100 AMPS 3 PHASE - 50Hz
MOTORS (PER CAR)	3 x 22 kw.

SUN JUPITER
Sun Jupiter Co.,Ltd.
2/2 Moo.3 Or-Ngurn Saimai Bangkok 10220
Tel: 0062-9983855 , 0062-9983655
Fax: 0062-9983466

Features

SAFETY FEATURES

- Electronic and mechanical door interlocks on elevator cars and ground enclosure unit.
- Overload device to prevent elevator operation when rated payload has been exceeded.
- Spring buffer assembly.
- Galvanized tower sections and tir-ins also have if need.

DESIGN FEATURES

- Smooth starting and stopping without surging or jarring the elevator car.
- The lifting speed can be easily controlled and is infinitely variable.
- The elevator starting current is lower than the rated current.
- Also have the frequency conversion drive feature for greatly reduces mechanical wear and tear on the elevator and its components.
- The frequency conversion drive is more efficient and uses less power.

INSTALLATION

- For instructions regarding the erection, climbing, dismantling, operation and maintenance of the elevator car refer to the operations manual.
- This product must be operated by competent personnel that have been orientated with the operator's manual, understand the operating and maintenance procedures in that manual, and will operate the hoist in a safe manner to conform with the manufacturers specifications and in compliance with all federal, state, standards and regulations.
- Drawings are for illustrative purposes only and do not necessarily show the exact configurations of products offered on the market at a particular time.

Sun Jupiter Co.,Ltd.
2/2 Moo.3 Or-Ngurn Saimai Bangkok 10220
Tel: 0062-9983855 , 0062-9983655
Fax: 0062-9983466