



## 1 CLEAR beamline layout drawings

This file is used to generate the “split” drawings, 1 A4 page wide. When tikzexternalize is on, output is saved to folder `outputLayout_unbroken`. See README.md for more information.

## 1.1 All text ON, show legend

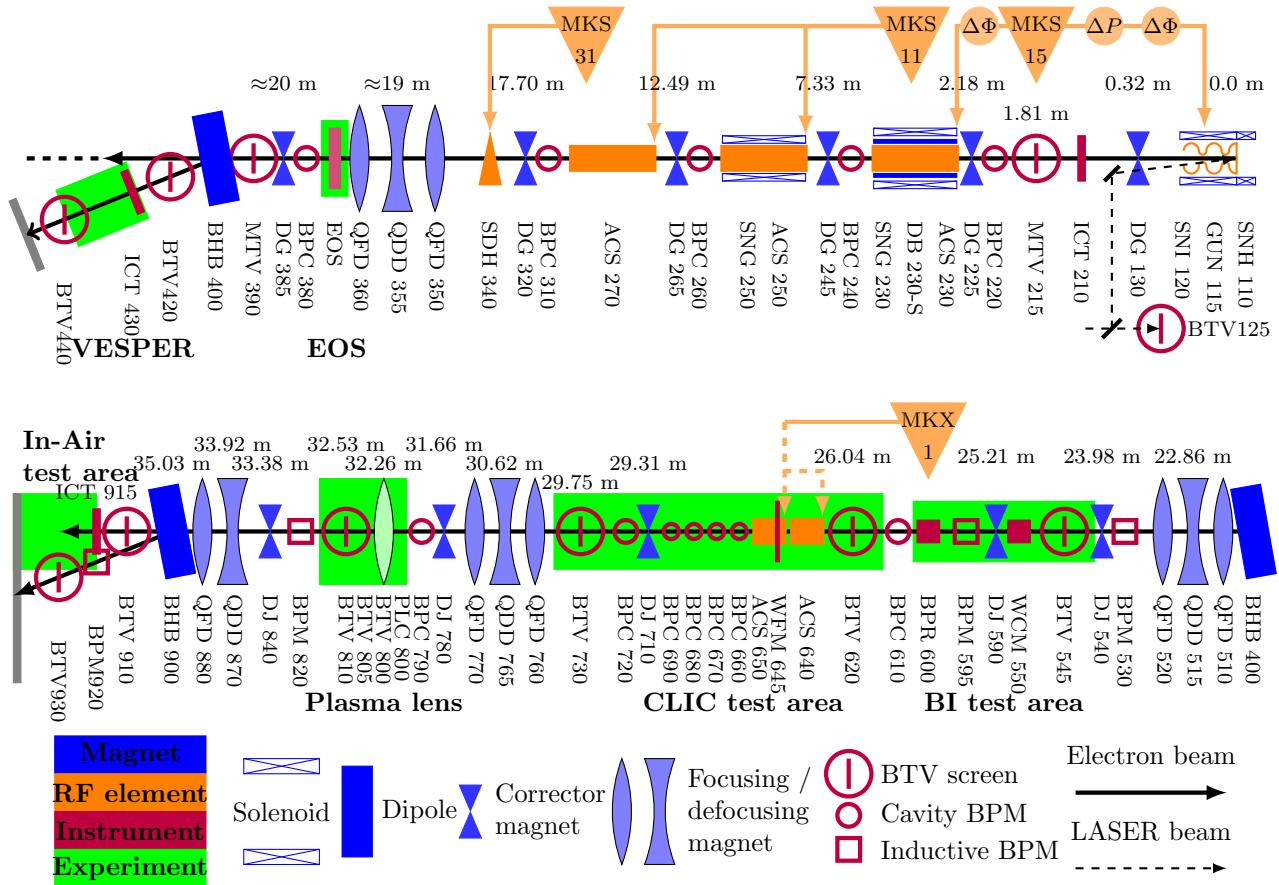

## 1.2 Simplified (no distances or element names)

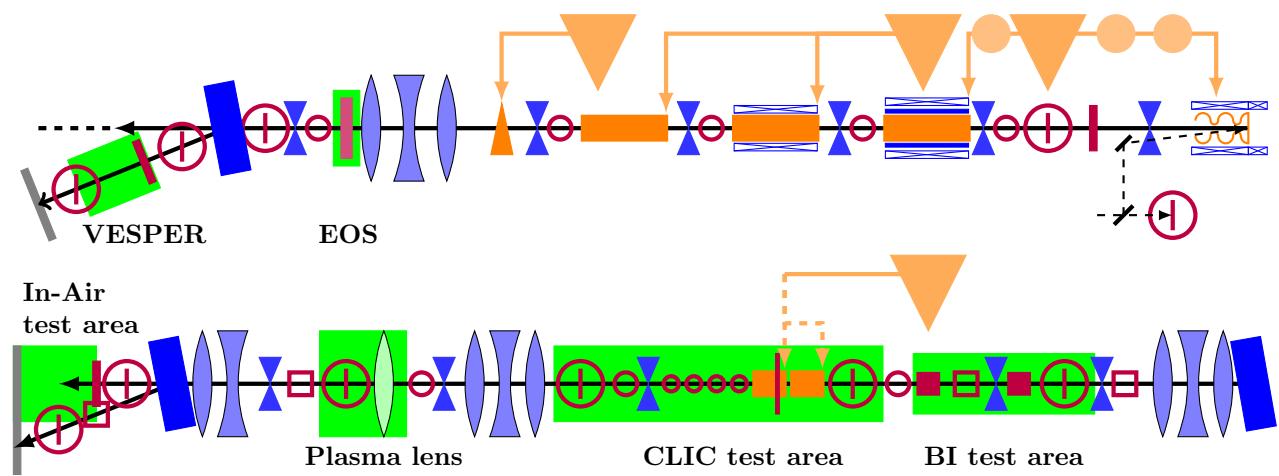

### 1.3 Beamlime only (no distances, element names, RF, or laser)

