

## ATA 21

### CAB PRESS SYS 1(2)FAULT

#### CABIN PRESSURE CONTROLLER (CPC) 1(2)

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| CPC1   | 49VU  | D9     |
| CPC2   | 122VU | Y22    |
| Manual | 122VU | Y23    |

**Steps to clear warning:**

Open associated breakers for 2 seconds, then reset.

**Reset duration:**

5 seconds.

**Results of power up test or reset:**

**Pass:** Ecam fault disappears.

**Fail:** Ecam fault remains.

### AIR-PACK 1(2) FAULT

**Aircraft configuration prior to reset:**

Associated fault light illuminated on overhead pushbutton. Valve is amber on bleed page.

**Circuit breakers to reset:**

None

**Steps to clear warning:**

Select associated PACK "OFF", then "ON" using overhead pushbuttons.

**Reset duration:**

5 seconds.

**Results of power up test or reset:**

**Pass:** Valve will show in-line green on bleed page.

**Fail:** Valve indication will be cross line amber.

**Notes:**

To easily determine if the valve is faulty, disconnect the flow control valve cannon plug with bleed air present. Valve should open as per design.

## VENT-AVNCS SYS FAULT

### AVIONICS EQUIPMENT VENTILATION COMPUTER

#### Aircraft configuration prior to reset:

Blower/Extract fans in AUTO, Ditching pushbutton OFF.

#### Circuit breakers to reset:

| LABEL      | PANEL | NUMBER |
|------------|-------|--------|
| Monitoring | 122VU | Y17    |
| Control    | 49VU  | D5,D6  |

#### Steps to clear warning:

First perform a AVEC test through CFDS. If no help, open Y17 C/B for 2 seconds, then close. If still no help, open all three breakers for 2 seconds, then close.

#### Reset duration:

90 seconds.

## VENT-AVNCS BLOWER FAULT

#### Aircraft configuration prior to reset:

Blower/Extract fans in "AUTO", Ditching pushbutton "OFF".

#### Circuit breakers to reset:

| LABEL      | PANEL | NUMBER |
|------------|-------|--------|
| Monitoring | 122VU | Y17    |
| Control    | 49VU  | D5,D6  |
| Blower Fan | 123VU | AD10   |

#### Steps to clear warning:

Open Y17 C/B for 2 seconds, then close. If no help, open all three breakers for 2 seconds, then close.

#### Reset duration:

90 seconds.

#### Results of power up test or reset:

**Pass:** Ecam fault disappears.

**Fail:** Ecam fault remains. Perform CFDS AVEC test.

#### Notes:

There is a thermal reset button on the fan motor.

## VENT-AVNCS EXTRACT FAULT

### Aircraft configuration prior to reset:

Blower/Extract fans in AUTO, Ditching pushbutton OFF.

### Circuit breakers to reset:

| LABEL       | PANEL | NUMBER |
|-------------|-------|--------|
| Monitoring  | 122VU | Y17    |
| Control     | 49VU  | D5,D6  |
| Extract Fan | 123VU | AE2    |

### Steps to clear warning:

Open Y17 C/B for 2 seconds, then close. If no help, open all three breakers for 2 seconds, then close.

### Reset duration:

90 seconds.

### Results of power up test or reset:

**Pass:** Ecam fault disappears.

**Fail:** Ecam fault remains. Perform CFDS AVEC test.

### Notes:

There is a thermal reset button on the fan motor.

## VENT-AVNCS SKIN VALVE FAULT

### Aircraft configuration prior to reset:

Blower/Extract fans in AUTO, Ditching pushbutton OFF.

### Circuit breakers to reset:

| LABEL      | PANEL | NUMBER |
|------------|-------|--------|
| Monitoring | 122VU | Y17    |
| Control    | 49VU  | D5,D6  |

### Steps to clear warning:

Open Y17 C/B for 2 seconds, then close. If no help, open all three breakers for 2 seconds, then close.

### Reset duration:

90 seconds.

### Results of power up test or reset:

**Pass:** Ecam fault disappears.

**Fail:** Ecam fault remains. Perform CFDS AVEC test.

### Notes:

Make sure the deactivation switch on skin air valve is in the "ON" position.

## COND-TRIM AIR SYS FAULT

## COND-ZONE REGUL FAULT

### ZONE TEMPERATURE CONTROLLER

#### Aircraft configuration prior to reset:

Select affected Pack OFF, confirm on bleed page the flow control valve is closed. The Pack controllers are powered and are operational

#### Circuit breakers to reset:

| LABEL      | PANEL | NUMBER  |
|------------|-------|---------|
| Z.C. SYS 1 | 122VU | V17,V19 |
| Z.C. SYS 2 | 122VU | V18,V20 |
| VENT MONG  | 122VU | Y17     |

#### Steps to clear warning:

Open associated breakers for 2 seconds. If no help perform a CAB TEMP CTL test (300sec) through CFDS.

#### Reset duration:

36 seconds.

credit: IOPLLIP

## AIR FWD (AFT) CGO VENT FAULT

### CARGO VENTILLATION CONTROLLER

## COND-AFT CARGO HEAT FAULT

### AFT CARGO HEAT CONTROLLER

#### Circuit breakers to reset:

| LABEL      | PANEL | NUMBER |
|------------|-------|--------|
| Monitoring | 49VU  | C7     |
| Control    | 122VU | S22    |

#### Steps to clear warning:

Open associated breakers for 2 seconds then close. If no help perform a ground report in CFDS.

#### Reset duration:

28 seconds.

## AIR-PACK 1(2) REGUL FAULT

### PACK CONTROLLER (PC) 1(2)

### \*\*AIR COND SYSTEM CONTROLLER (ACSC) 1(2)

#### Aircraft configuration prior to reset:

Select affected pack OFF, confirm on the bleed page the flow control valves are closed.

#### Circuit breakers to reset:

| LABEL  | PANEL | NUMBER          |
|--------|-------|-----------------|
| Pack 1 | 122VU | Y18,Y19,X21,X22 |
| Pack2  | 122VU | Y20,Y21,W21,W22 |

#### For the ACSC 1:

- On panel 122VU, open the circuit breaker **X22**, circuit breaker **Y18** and circuit breaker **X21**.
- On panel 49VU, open the circuit breaker **D08**. Then close the C/B

#### For the ACSC2:

- On panel 122VU, open the circuit breaker **W22**, circuit breaker **Y20**, circuit breaker **W21** and circuit breaker **Y21**.
- Then close the circuit breakers.

#### Steps to clear warning:

Open all four associated breakers for affected pack, wait 5 seconds, then close.

#### Reset duration:

30 seconds.

## COND-RECIRC FAN FAULT

#### Circuit breakers to reset:

| LABEL       | PANEL | NUMBER  |
|-------------|-------|---------|
| Left (FWD)  | 122VU | X18,X20 |
| Right (AFT) | 122VU | W18,W20 |

#### Steps to clear warning:

Open associated breakers for 2 seconds then close.

#### Reset duration:

28 seconds.

## LAV/GALLEY EXTRACT FAN FAULT

Circuit breakers to reset:

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| Supply  | 122VU | U19    |
| Control | 122VU | U21    |

**Steps to clear warning:**

Open associated breakers for 2 seconds then close.

**Reset duration:**

28 seconds.

credit: IRLIN

**ATA 22****OFFSIDE RANGE MODE ON NAV DISPLAY****Aircraft configuration prior to reset:**

Turn off both flight directors. Both engines off.

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| FMGC 1 | 49VU  | B2     |
| FMGC 2 | 122VU | M17    |

**Steps to clear warning:**

Open associated breaker for 10 seconds, then reset.

Do not reset again for at least two minutes.

**Reset duration:**

120 seconds.

**Results of power up test or reset:**

**Pass:** Message disappears.

**Fail:** Message remains, perform CFDS AFS test.

**Notes:**

(Please Wait), will be displayed on MCDU,  
do not touch MCDU for 120 seconds.

**MCDU 1 (2) SCREEN BLANK****MCDU / FMGC****Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| MCDU 1 | 49VU  | B1     |
| MCDU 2 | 122VU | N20    |

**\*\* - For the MCDU3: on the panel 121VU, C/B N21.**

**Steps to clear warning:**

Open associated breaker for 30 seconds, then reset.

**Reset duration:**

45 seconds.

## AUTO FLT-RUDDER TRIM 1(2) FAULT

## AUTO FLT-RUDDER TRIM SYSTEM FAULT

**Aircraft configuration prior to reset:**

Both engines stopped and hydraulics off.

**Circuit breakers to reset:**

| LABEL         | PANEL | NUMBER  |
|---------------|-------|---------|
| FAC 1         | 49VU  | B3,B4   |
| FAC 2         | 122VU | M18,M19 |
| RUD TRIM IND. | 121VU | M20     |

**Steps to clear warning:**

First, reset associated FAC pushbutton.

If no help, open associated FAC breakers for 10 seconds, then close.

**Reset duration:**

90 seconds.

**Notes:**

After reset, energize hydraulics, verify no Yaw damper message display.

## AUTO FLT-RUDDER TRAVEL LIMIT 1(2) FAULT

## AUTO FLT-YAW DAMPER 1(2) FAULT

### FAC 1(2)

**Aircraft configuration prior to reset:**

Both engines stopped and hydraulics off.

**\*\*Open these C/Bs with the Yellow and Green hydraulic sys pressurized**

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER  |
|-------|-------|---------|
| FAC 1 | 49VU  | B3,B4   |
| FAC 2 | 122VU | M18,M19 |

**Steps to clear warning:**

First, reset associated FAC pushbutton.

If no help, open associated FAC breakers for 10 seconds, then close.

**Reset duration:**

90 seconds.

**Notes:**

After reset, energize hydraulics, verify no Yaw damper message display.



**AUTO FLT-A/P OFF DISPLAYED ON GROUND**

- Aircraft configuration prior to reset:**  
ECAM warning displayed and will not clear. Engines shut down.
- Steps to clear warning:**  
Select AP1 pushbutton on FCU, the pushbutton will, illuminate.  
Push the red autopilot disconnect button on one of the side sticks.
- Reset duration:**  
10 seconds.
- Notes:**  
A/P pushbuttons must not be selected before starting engines. If selected, and engines are started, the message is latched and will not clear. If this occurs after engine start, shut engines down then complete steps above.

**AUTO FLT-A/P 1(2) DISPLAYED IN INOP STATUS**

**OPPOSITE FM IN PROCESS DISPLAYED ON MCDU**

- Aircraft configuration prior to reset:**  
Turn off both flight directors. Both engines off.
- Circuit breakers to reset:**
- | LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| FMGC 1 | 49VU  | B2     |
| FMGC 2 | 122VU | M17    |
- Steps to clear warning:**  
Open associated breaker for 10 seconds, then reset. Do not reset again for at least two minutes. If reset fails, power down aircraft.
- Reset duration:**  
120 seconds, triple click.
- Results of power up test or reset:**  
**Pass:** Message disappears.  
**Fail:** Message remains, perform CFDS AFS test.
- Notes:**  
(Please Wait), will be displayed on MCDU, do not touch MCDU for 120 seconds.

| AUTO FLT-A/THR OFF DISPLAYED ON GROUND                                                                                                                                                                                                                                                                              |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Aircraft configuration prior to reset:</b><br>ECAM warning displayed and will not clear. Engines shut down.                                                                                                                                                                                                      |
| <b>Steps to clear warning:</b><br>Select A/THR pushbutton on FCU, the pushbutton will illuminate, then push the red instinctive disconnect button on one of the thrust levers. If message is still displayed, cycle the FADEC switches on the 50VU, if no help reset FCU's then FMGC's then try realigning ADIRU's. |
| <b>Reset duration:</b><br>10 seconds.                                                                                                                                                                                                                                                                               |
| <b>Notes:</b><br>A/THR pushbutton must not be selected before starting engines. The message is latched and will not clear using the CLR key on the ECAM control panel. If this occurs after engines start, the message will be reset(cleared) upon takeoff power selection. (Thanks <i>Chute</i> for the update)    |

credit: IERLIN

**AUTO FLT-FCU 1(2) FAULT**

**FCU**

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| FCU 1 | 49VU  | B5     |
| FCU 2 | 122VU | M21    |

If the fault does not continue, do a check of the target and barometer references shown, and correct them if necessary (reset successful).

**\*\*If the fault continues, open again the two C/Bs **B05** on 49VU and **M21** on 121VU. Close the C/Bs after 7 min, with an interval less than 5 sec between side 1 and side 2. At least 30 sec are necessary until the end of the FCU1 and FCU2 safety test.**

If the fault does not continue, do a check of the target and barometer references shown, and correct them if necessary (reset successful)

If the fault continues, end of procedure (reset unsuccessful).

**Steps to clear warning:**

Open associated breaker for 7 minutes, then reset.

**Reset duration:**

10 seconds.

**Notes:**

(Please Wait), will be displayed on MCDU, do not touch MCDU for 120 seconds.

## WINDSHEAR FAULT

### WINDSHEAR DET FAULT OR REAC W/S DET FAULT

FAC 1+2

**Aircraft configuration prior to reset:**

Aircraft stopped, flaps up.

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| FAC 1 | 49VU  | B3     |
| FAC1  | 49VU  | B4     |

**\*\* or Open then close the C/Bs in**

**this the order:**

- on the panel 49VU, C/B **B04** and C/B **B03**

- on the panel 121VU, C/B **M19** and C/B **M18**

**Steps to clear warning:**

Select FAC #1 pushbutton off, pull FAC #1 breaker for 30 seconds, then reset breaker and FAC #1 pushbutton.

**Reset duration:**

90 seconds.

## BARO REF FAULT DISPLAYED

**Aircraft configuration prior to reset:**

Both flight directors off.

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| FCU 1 | 49VU  | B5     |

**Steps to clear warning:**

Open FAC #1 breaker for 10 seconds, then reset

**Reset duration:**

10 seconds.

## RUDDER ARTIFICIAL FEEL INOP

**Circuit breakers to reset:**

| LABEL        | PANEL | NUMBER |
|--------------|-------|--------|
| RUD ATF FEEL | 121VU | N17    |

**Steps to clear warning:**

Open rudder artificial feel breaker for 10 seconds, then reset

**Reset duration:**

10 seconds.

## SIDE STICK LOCK

**Circuit breakers to reset:**

| LABEL      | PANEL | NUMBER |
|------------|-------|--------|
| STICK LOCK | 121VU | N16    |

**Steps to clear warning:**

Open side stick lock breaker for 10 seconds, then reset.

**Reset duration:**

10 seconds.

## ATA 23

### COM-VHF 1(2)(3) EMITTING

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| VHF 1 | 49VU  | G9     |
| VHF 2 | 121VU | L4     |
| VHF 3 | 121VU | L5     |

**Steps to clear warning:**

First, check the transmission key on audio panel, then the side stick radio select button, and then the hand held microphone for a stuck button. If no help, open associated breaker for 2 seconds, then close.

**Reset duration:**

10 seconds.

### COM-VHF TRANSMISSION PROBLEMS

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| VHF 1 | 49VU  | G9     |
| VHF 2 | 121VU | L4     |
| VHF 3 | 121VU | L5     |

**Steps to clear warning:**

Open associated circuit breaker for 2 seconds, then close.

**Reset duration:**

10 seconds.

## RMP LOCKED UP OR WINDOW BLANK

### Circuit breakers to reset:

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| RMP 1 | 49VU  | G10    |
| RMP 2 | 121VU | L2     |
| RMP 3 | 121VU | L3     |

### Steps to clear warning:

Turn off all RMP's then on to reset. If no help, open all above circuit breakers for 2 seconds, then close.

### Reset duration:

2 seconds.

### Notes:

RMP lock up could be caused by another RMP that otherwise functions normally. That's why all three must be reset.

## ACP INOP

### Circuit breakers to reset:

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| ACP1  | 49VU  | G6     |
| ACP2  | 49VU  | G7     |
| ACP3  | 121VU | M2     |

### Steps to clear warning:

Turn "OFF" all RMP's then turn "ON" to reset. If no help, reset associated ACP breakers

### Reset duration:

120 seconds.

## AMU (AUDIO MANAGEMENT UNIT) FAULT

**Circuit breakers to reset:**

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| CAPT'S  | 49VU  | G6     |
| F/O'S   | 49VU  | G7     |
| FLT-INT | 49VU  | G8     |

**Steps to clear warning:**

Open associated breaker for 2 seconds, then close. If no help reset C/B's M-02, M-03, M-04.

**Reset duration:**

10 seconds.

## ACARS TRANSMISSION PROBLEMS

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER     |
|-------|-------|------------|
| VHF#3 | 122VU | L5         |
| ACARS | 121VU | L6,L15,L16 |

**Steps to clear warning:**

Open associated breaker for 5 seconds, then close.

**Reset duration:**

180 seconds.

**Notes:**

If NO COMM is reported during flight, yet ACARS operates ok on ground, suspect failure of VHF3 transmissions on some frequencies.



## COM-HF 1 (2) INOP

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER      |
|-------|-------|-------------|
| HF#1  | 49VU  | HA14 or L10 |
| HF#2  | 121VU | L13         |

**Steps to clear warning:**

Open associated breaker for 5 seconds, then close.

**Reset duration:**

10 seconds.

## CIDS SYSTEM FAULTS

**Un commanded EVAC horn Actuation**

**CIDS**

**Aircraft configuration prior to reset:**

Aircraft on ground, both engines stopped, all cabin doors closed.

**Circuit breakers to reset:**

| LABEL         | PANEL | NUMBER |
|---------------|-------|--------|
| CIDS DIR ESS. | 49VU  | G2,G1  |
| CIDS DIR NORM | 121VU | M5,M6  |
| DIR 1&2 BATT  | 121VU | N11    |

\*\*\* Press the EVAC/HORN SHUT OFF switch.

If unsuccessful:

- Open the C/Bs in this order:

on the panel 49VU, C/B **G02** on the panel 121VU, C/B **M05**

\*\*\*- After 10 seconds, close the C/Bs in this order: **M05, G02**.

**Steps to clear warning:**

First, try reset at PTP. If no help open all breakers for 10 seconds, then close.

**Reset duration:**

120 seconds.

**Notes:**

Cabin lights will flash during test. Test pass will be displayed on the PTP upon successful power up.

**FORWARD ATTENDANT PANEL (FAP) LOCKED UP**

**FAP / TAPE REPRODUCER**

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER     |
|-------|-------|------------|
| FAP   | 121VU | Q14 or M14 |

**\*\*If unsuccessful:**  
on the panel 2000VU  
- open the tape reproducer /PRAM C/B E01.  
After 10 seconds, close the C/B.

**Steps to clear warning:**  
Open circuit breaker for 5 seconds, then close.

**Reset duration:**  
5 seconds.

**Notes:**  
Cabin lights will flash during test. Test pass will be displayed on the PTP upon successful power up.

credit: 101111

**FLIGHT INTERPHONE INOP**

**Circuit breakers to reset:**

| LABEL       | PANEL | NUMBER |
|-------------|-------|--------|
| Flight Int. | 49VU  | G8     |

**Steps to clear warning:**  
Open circuit breaker for 2 seconds, then close. If no help reset breaker for DEU"B"-M7.

**Reset duration:**  
10 seconds.

**Notes:**  
DEU-A controls lights, call signs and speakers.  
DEU-B controls interphone, P/A, call, and EVAC.

## FWD FLIGHT ATTENDANT PTP PANEL INOP

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| PTP   | 121VU | M6     |

**Steps to clear warning:**

Open circuit breaker for 5 seconds, then close.

**Reset duration:**

5 seconds.

**Notes:**

PTP = Programmed and Test Panel.

## PASSENGER ADDRESS SYSTEM INOP

**Circuit breakers to reset:**

| LABEL         | PANEL | NUMBER |
|---------------|-------|--------|
| CIDS DIR ESS  | 49VU  | G1,G2  |
| CIDS DIR NORM | 121VU | M5,M6  |
| DEU-B         | 121VU | M7     |

**Steps to clear warning:**

First try resetting CIDS director at PTP. If no help, open circuit breakers for 10 seconds, then reset.

**Reset duration:**

180 seconds.

**Notes:**

DEU-A controls lights, call signs and speakers.

DEU-B controls interphone, P/A, call, and EVAC.

## DEU-A FAULT ON CIDS

### Circuit breakers to reset:

| LABEL      | PANEL | NUMBER      |
|------------|-------|-------------|
| DEU-A ESS  | 49VU  | G3,G4,G5    |
| DEU-A NORM | 121VU | M8 THRU M13 |
| CIDS DIR   |       | G1,G2,M5,M6 |

### Steps to clear warning:

First try resetting CIDS director at PTP. If no help, open circuit breakers for 10 seconds, then reset.

### Reset duration:

180 seconds.

### Notes:

DEU-A controls lights, call signs and speakers.

DEU-B controls interphone, P/A, call, and EVAC.

## DEU-B FAULT ON CIDS

### Circuit breakers to reset:

| LABEL      | PANEL | NUMBER      |
|------------|-------|-------------|
| DEU-A NORM | 121VU | M7          |
| CIDS DIR   |       | G1,G2,M5,M6 |

### Steps to clear warning:

First try resetting CIDS director at PTP. If no help, open circuit breakers for 10 seconds, then reset.

### Reset duration:

180 seconds.

### Notes:

DEU-A controls lights, call signs and speakers.

DEU-B controls interphone, P/A, call, and EVAC.

## ATA 24

### ENGINE GENERATORS PARAMETERS NOT SHOWN

**Aircraft configuration prior to reset:**

Aircraft on ground, Engines shut down.

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER       |
|--------|-------|--------------|
| ENG #1 | 122VU | T26,Z30,AF12 |
| ENG #2 | 122VU | T27,Y31,AF1  |

**Steps to clear warning:**

Open associated circuit breakers for 1 second, then close.

**Reset duration:**

1 seconds.

**Notes:**

Associated GCU or EGIU is at fault, There is a reset button on each GCU (Nose E&E).

credit: JIMMY

### ELEC-CIRCUIT BREAKER TRIPPED

**Circuit breakers to reset:**

Tripped breaker.

**Steps to clear warning:**

Reset tripped circuit breaker only once, If unsuccessful, do not make second attempt, troubleshoot and fix problem.

**Notes:**

If no tripped breakers can be located, a green circuit breaker in the identified panel has failed. Remember, green breakers do exist in relay panels 105VU and 106VU located in the E&E bay

**TRANSFORMER RECTIFIER PROBLEMS**

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| TR #1 | 123VU | AB10   |
| TR #2 | 123VU | AB4    |
| TR #3 | 106VU | TR3    |

**Steps to clear warning:**

First, reset T/R's through MCDU or all three using guarded button on 103VU panel in E&E bay. If unsuccessful, reset associated breaker.

**Reset duration:**

1 seconds.

**Results of power up test or reset:**

**Pass:** T/R operated correctly.

**Fail:** Fault remains.

**Notes:**

If ESS TR3 is in operation with TR1 & TR2 serviceable, release the AC ESS FEED pushbutton on the 35VU, than push the AC ESS FEED pushbutton. ESS TR3 will return to standby.

**ELEC-BCL 1(2) FAULT**

**Circuit breakers to reset:**

| LABEL                             | PANEL | NUMBER |
|-----------------------------------|-------|--------|
| BAT/REF/BCL #1 & BAT/BUS/REF/BCL1 |       |        |
| BAT/REFBCL #2 & BAT/BUS/REF/BCL2  |       |        |

**Steps to clear warning:**

Reset using associated battery pushbutton in overhead. If no help, open associated breakers for 1 second, then close.

**Reset duration:**

10 seconds.

**Notes:**

All circuit breakers are located on the 105VU in the E&E panel.

**GND PWR WON'T CONNECT, NO AVAIL LIGHT IN PB**

**GAPCU**

**Aircraft configuration prior to reset:**  
Aircraft on ground, engines stopped, APU stopped, ground power connected.

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| GPCU  | 122VU | Y24    |

If at least one power source (IDG 1 or IDG 2, APU GEN or batteries) is connected to the electrical network of the aircraft:

- On the ELEC control panel 35VU:
- Push and release the EXT PWR pushbutton switch.

**\*\*If no power source is connected to the electrical network of the aircraft:**

- On the ELEC control panel 35VU:
- Push the BAT 1 and BAT 2 pushbutton switches (the OFF legend goes off).

**Steps to clear warning:**  
Open breaker , then close.

**Reset duration:**  
1 seconds.

## ATA 25

### CREW SEAT PROBLEMS

**Circuit breakers to reset:**

| <u>LABEL</u> | <u>PANEL</u> | <u>NUMBER</u> |
|--------------|--------------|---------------|
| Capt's Seat  | 122VU        | U1            |
| F/O's Seat   | 122VU        | U14           |

**Steps to clear warning:**

Open associated circuit breakers for 1 second, then close.

**Reset duration:**

1 second.

**Notes:**

Additional circuit breaker is located under each seat on the control box.

### OVEN OR TIMER

**Circuit breakers to reset:**

| <u>LABEL</u>                        | <u>PANEL</u> | <u>NUMBER</u> |
|-------------------------------------|--------------|---------------|
| C/B is behind each oven front plate |              |               |

**Steps to clear warning:**

Open associated circuit breakers for 1 second, then close.

**Reset duration:**

1 seconds.



## ATA 26

### SMOKE - LAVATORY DET FAULT

### SMOKE - FWD/AFT CARGO SMOKE DET

### SMOKE - SDCU MAINT. MESSAGE (CLASS 2)

#### SDCU

##### Circuit breakers to reset:

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| SDCU #1 | 49VU  | C6     |
| SDCU #2 | 122VU | T18    |

##### Steps to clear warning:

Open both circuit breakers for 60 second, then close both at same time.

##### Reset duration:

80 seconds.

##### Notes:

Wait two minutes after reset before testing system.

### COND/AIR-AFT CARGO HEAT/VENT FAULT

##### Circuit breakers to reset:

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| Monitor | 49VU  | C7     |
| Control | 122VU | S22    |

##### Steps to clear warning:

Open both circuit breakers for 1 second, then close.

##### Reset duration:

28 seconds.

##### Notes:

During reset, cargo heat trim air valves cycles.

| ENG1(2) LOOP k FAULT                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ENGINE FDU                                                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                        |
| <p>On the panel 49VU:</p> <ul style="list-style-type: none"> <li>- For ENG1 FDU, open the C/B <b>A06</b>.</li> </ul> <p>On the panel 121VU:</p> <ul style="list-style-type: none"> <li>- For ENG1 FDU, open the C/B <b>Q38</b>.</li> <li>- After 5 seconds, close the C/Bs.</li> </ul> | <p>On the panel 49VU:</p> <ul style="list-style-type: none"> <li>- For ENG2 FDU, open the C/B <b>A07</b>.</li> </ul> <p>On the panel 121VU:</p> <ul style="list-style-type: none"> <li>- For ENG2 FDU, open the C/B <b>Q39</b>.</li> <li>- After 5 seconds, close the C/Bs.</li> </ul> |
| APU FIRE LOOP k FAULT                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                                                        |
| APU FDU                                                                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                                                        |
| <p>On the panel 121VU:</p> <ul style="list-style-type: none"> <li>- Open the C/Bs <b>L44</b> and <b>L43</b>.</li> <li>- After 5 seconds, close the C/Bs.</li> </ul>                                                                                                                    |                                                                                                                                                                                                                                                                                        |

credit: IORLIN

## ATA 27

### F/CTL-FCDC 1(2) FAULT

### F/CTL-MAINTENANCE STATUS (CLASS 2)

#### FCDC

#### Aircraft configuration prior to reset:

On ground, hydraulics depressurized.

#### Circuit breakers to reset:

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| FCDC #1 | 49VU  | B10    |
| FCDC #2 | 121VU | Q20    |

#### Steps to clear warning:

Open circuit breakers for 5 second, then close.

#### Reset duration:

20 seconds.

#### Notes:

**CLASS 2 MSG:** ADIRU must be align.

If time, run a ground scan in CFDS/FCTL/EFCS #1 to identify cause of message.

### THS DIDN'T RETURN TO ZERO AFTER LANDING

#### Steps to clear warning:

Reset ELAC's using overhead pushbutton switches. Select both ELAC switches off, then on. THS will return to zero.

#### Reset duration:

8 seconds.

**F/CTL-SEC 1(2)(3)FAULT OR SPLR FAULT**

**Aircraft configuration prior to reset:**

Aircraft on ground. Hydraulics depressurized.

**Circuit breakers to reset:**

| LABEL       | PANEL | NUMBER      |
|-------------|-------|-------------|
| SEC #1      | 49VU  | B8          |
| SEC #2      | 121VU | Q18         |
| SEC #3      | 121VU | Q19         |
| SEC #1 stby | 105VU | stby supply |

**Steps to clear warning:**

First, reset applicable SEC pushbutton.  
If no help, open associated breaker for 5 seconds, then reset.  
The pushbutton to remain in "ON" position during breaker reset.

**Reset duration:**

20 seconds.

**Notes:**

If Hydraulics are pressurized, pushbutton reset will not be successful.  
SEC #1 controls spoilers 3 & 4.  
SEC #2 controls spoilers 5.  
SEC #3 controls spoilers 1 & 2.

## F/CTL-ELAC 1(2) FAULT

### ELAC

**Circuit breakers to reset:**

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| ELAC #1 | 49VU  | B11    |
| ELAC #1 | 105VU | STBY   |
| ELAC #2 | 121VU | R20    |
| ELAC #2 | 105VU | STBY   |

**Steps to clear warning:**

First, reset applicable ELAC pushbutton. If no help, open associated breaker for 5 seconds. Pushbutton to remain in “ON” position during breaker reset.

**Reset duration:**

20 seconds.

**Notes:**

ELAC #1 CTL left outboard (Blue) & right inboard (Green) aileron servos.

ELAC #2 CTL left inboard (Green) & right outboard (Blue) ailerons servos.

ELAC #1 is primary in roll,

ELAC #2 is primary in pitch.

ELAC #1 controls outboard (Blue) elevator servos.

ELAC #2 CTL inboard left (Green) & inboard right (Yellow) elevator servos.

## F/CTL-AILERON SERVO FAULT

**Circuit breakers to reset:**

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| ELAC #1 | 49VU  | B11    |
| ELAC #1 | 105VU | STBY   |
| ELAC #2 | 121VU | R20    |
| ELAC #2 | 105VU | STBY   |

**Steps to clear warning:**

First, reset applicable ELAC pushbutton. If no help, open associated breaker for 5 seconds. Pushbutton to remain in “ON” position during breaker reset.

**Reset duration:**

20 seconds.

**Notes:**

If fault is isolated to a servo, change the servo valve first prior to changing the complete servo control.

## F/CTL-ALTN LAW DISPLAY AT ENGINE START

### ELAC

#### Steps to clear warning:

With engines running, set parking brake, use overhead pushbuttons to switch “OFF” engine hydraulics, when hydraulics are depressurized, select “OFF” ELAC #1 and #2 using overhead switch. After 3 seconds, switch ELAC #1 and ELAC #2 “ON”. After approx 15 seconds, select hydraulics back “ON”.

#### Reset the defective ELAC:

- Make sure that the hydraulic systems are depressurized before the reset.
- Set the ELAC pushbutton switch to OFF, then to ON.

#### Reset duration:

30 seconds.

#### Notes:

Follow reset steps closely.

## F/CTL-FLAP/SLAT 1 (2) FAULTS OR SLOW OPERATION

#### Aircraft configuration prior to reset:

On ground, hydraulics depressurized, engines stopped.

#### Circuit breakers to reset:

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| Slat #1 | 49VU  | B6     |
| Flap #1 | 49VU  | B7     |
| Slat #2 | 121VU | R21    |
| Flap #2 | 121VU | Q21    |

#### Steps to clear warning:

Open associated breakers for 5 seconds, then close. Only reset one breaker at time, resetting both system breakers could lock out WTB.

#### Reset duration:

60 seconds.

#### Notes:

Slats slow or flaps slow message will display only during operation. Remember running slats/flaps without all hydraulics on can cause these faults to display. Slats use Blue & Green hydraulics. Flaps use Yellow & Green hydraulics.

## ATA 28

### FUEL-FQIC 1(2) FAULT

Loss of fuel quantity indication or, Simultaneous triggering of FUEL L XFR VALVE CLOSED and FUEL R XFR VALVE CLOSED, although FUEL SD indicates no anomaly.

#### FQIC

Circuit breakers to reset:

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| FQ1     | 49VU  | A13    |
| FQ2     | 121VU | M27    |
| FQ1&FQ2 | 121VU | L26    |

#### Steps to clear warning:

Open associated breakers for 3 seconds, then close. During reset the intercell transfer valves cycle.

#### Reset duration:

80 seconds.

#### Notes:

Each reset causes fuel to move from the outer cells to the inner cells. Too many resets can cause fuel configuration problems.

### FUEL-AUTOFEED FAULT

#### Aircraft configuration prior to reset:

Center tank greater than 550lbs with wing tanks below 11,000.

#### Steps to clear warning:

The fault is indicated if either wing tank quantity becomes less than 11,023lbs when center tank is above 550lbs. When fuel is reconfigured, fault will clear.

#### Notes:

Fuel burn sequence:

1st) Center tanks (greater pump output pressure).

2nd) Inner wing tanks

3rd) At approx 1700lbs in either inner tank, all 4 transfer valves open and outer wing tank fuel flows to the inner tanks for consumption.

## CENTER TANK LOW PRESSURE WARNING

### Aircraft configuration prior to reset:

Less than 400 pounds of fuel in the center tank.

### Steps to clear warning:

With less than 400lbs in center tank, select the MODE SEL switch to AUTO.  
The center pumps should not run with low center tank fuel.

### Results of power up test or reset:

**Pass:** Center tank pumps shows “cross line green”

**Fail:** Pumps run in AUTO and no fuel in center tank.

### Notes:

This could be a spurious fault with less than 400LBS in center tank, check previous PFR for history.

## INTERCELL TRANSFER VALVES OPEN

### Aircraft configuration prior to reset:

On ground, refueling, with inner tanks greater than 1700lbs.

### Circuit breakers to reset:

| LABEL         | PANEL | NUMBER |
|---------------|-------|--------|
| Valve#1 Left  | 49VU  | A10    |
| Valve#1 Right | 49VU  | A11    |
| Valve#2 Left  | 121VU | M22    |
| Valve#2 Right | 121VU | M23    |

### Steps to clear warning:

The Intercell transfer valves normally close when the refuel door opens. If valves fail to close properly, cycle associated circuit breakers.

### Reset duration:

10 seconds.

### Results of power up test or reset:

**Pass:** Valves close properly when refuel door opens.

**Fail:** Valves remain open.

### Notes:

Nuisance, caused by fuel movement in tanks due to aircraft attitude changes.



**APU FUEL LP VALVE FAULT MESSAGE**

**Aircraft configuration prior to reset:**  
Fuel APU LP valve fault message triggered when the APU master switch is selected off during auto shut down.

**Circuit breakers to reset:**

| LABEL         | PANEL | NUMBER |
|---------------|-------|--------|
| Supply        | 121VU | M39    |
| Control       | 121VU | M40    |
| Standby       | 121VU | M41    |
| Normal (Fire) | 121VU | M42    |

**Steps to clear warning:**  
First, cycle the APU master switch "ON" then "OFF". If no help cycle the associated circuit breakers.

**Reset duration:**  
10 seconds.

credit: IORLIN

## ATA 29

### HYD RESERVOIR LOW AIR PRESSURE MSG

**Circuit breakers to reset:**

| LABEL      | PANEL | NUMBER     |
|------------|-------|------------|
| Green Sys  | 121VU | R34        |
| Yellow Sys | 121VU | Q37        |
| Blue Sys   | 49VU  | C12 or D14 |

#### **Steps to clear warning:**

To clear, run engines or pressurize hydraulics reservoirs with APU air. If no help, check the reservoir gauge. If still low, service it manually with N2 to 45 PSI. If no help, cycle circuit breakers.

#### **Reset duration:**

10 seconds.

#### **Notes:**

This fault normally occurs after working on hydraulic system. All 3 systems pressure switches are set at 40psi. The blue system has an additional press switch set at 45PSI displayed on ground only. Remember some A/C have a APU boost setting.

## PTU FAULT

### Aircraft configuration prior to reset:

On ground with engines running.

### Circuit breakers to reset:

✓ N34

### Normal PTU reset

1st) Yellow electric pump "ON", wait 2 seconds. Turn yellow electric pump "OFF"

2nd) Set brakes, both engine pumps "OFF" yellow electric pumps "ON" , PTU pushbutton "OFF" then to "AUTO" ,yellow electric pumps "OFF", engine pumps "ON".

### PTU reset cause by cargo door operation:


#### *Reset with engines running.*

- 1) Reset message using master caution P/B switch.
- 2) Select hydraulic page on ECAM.
- 3) Select yellow hydraulic electric pump "ON" then "OFF".
- 4) Wait minimum of 30 seconds.
- 5) Cycle the PTU switch "ON"-"OFF"-"ON".
- 6) Select ENG #1 green HYD pump "OFF", PTU should operate **Y** to **G**.
- 7) Select ENG #1 green hydraulic pump "ON".
- 8) Select ENG #2 yellow HYD pump "OFF", PTU should operate **G** to **Y**.
- 9) Select engine #2 yellow hydraulic pump "ON".
- 10) ECAM should be normal.

### Notes:

PTU fault can be caused by cargo door operation 30 seconds after 2nd engine start.

# HYDRAULIC SYSTEM SCHEMATIC

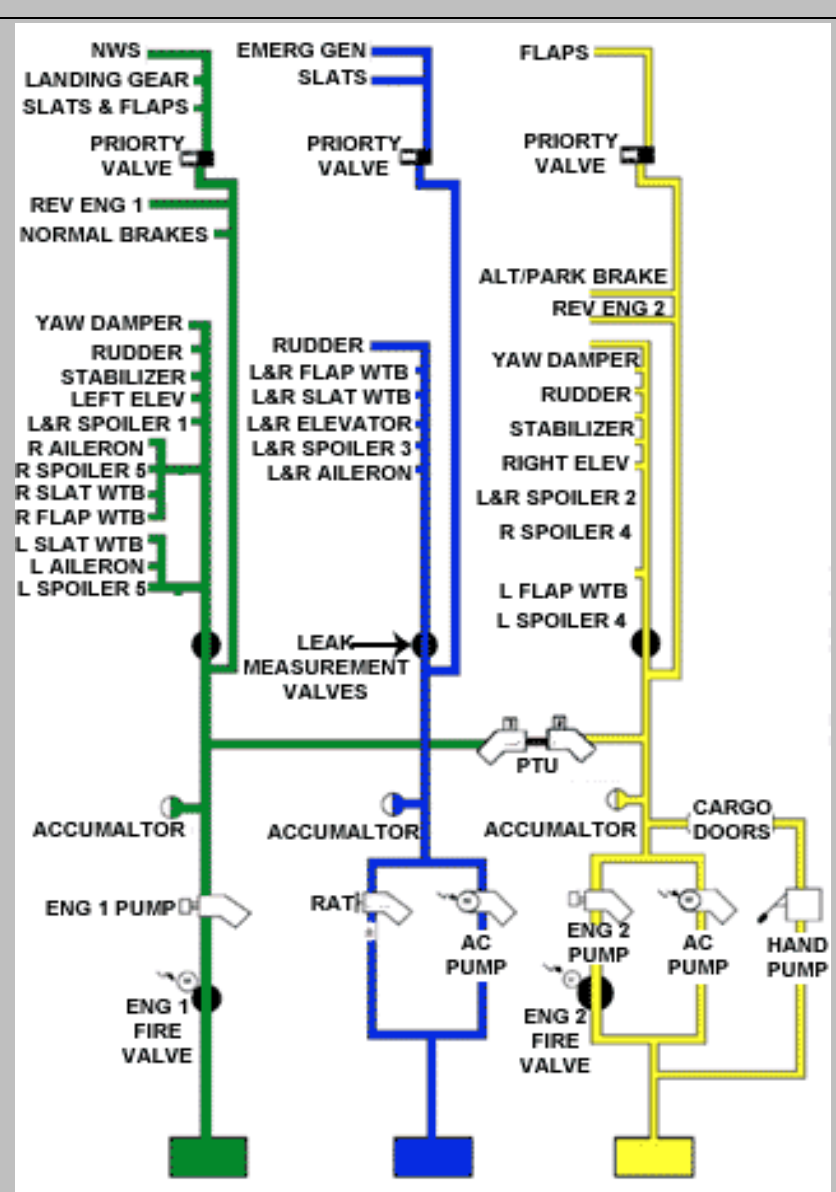

**ANTI ICE - LEFT OR RIGHT WINDOW****WHC****Circuit breakers to reset:**

| LABEL        | PANEL | NUMBER |
|--------------|-------|--------|
| WHC #1       | 122VU | X13    |
| WHC #2       | 122VU | W13    |
| WINDOW LEFT  | 122VU | X14    |
| WINDOW RIGHT | 122VU | W14    |

**Steps to clear warning:**

If the warning occurs on the ground with OAT greater then 40°C and AC packs off, turn both packs on cool or place damp towel on inner pane over sensors for 5 minutes. Open circuit breakers for 5 seconds, then close.

**Reset duration:**

5 seconds.

**Notes:**

If possible, cover sensors from the exterior of the aircraft.

credit: ICAEW

**ANTI ICE - LEFT OR RIGHT WINDSHIELD****Circuit breakers to reset:**

| LABEL        | PANEL | NUMBER |
|--------------|-------|--------|
| WHC #1       | 122VU | X13    |
| WHC #2       | 122VU | W13    |
| WINDOW LEFT  | 122VU | X14    |
| WINDOW RIGHT | 122VU | W14    |

**Steps to clear warning:**

If the warning occurs on the ground with OAT greater then 40°C and AC packs off, turn both packs on cool or place damp towel on inner pane over sensors for 5 minutes. Open circuit breakers for 5 seconds, then close.

**Reset duration:**

5 seconds.

**Notes:**

If possible, cover sensors from the exterior of the aircraft.

## DRAIN MAST HEATER FAULT (FWD/AFT)

### Circuit breakers to reset:

| LABEL    | PANEL  | NUMBER |
|----------|--------|--------|
| FWD MAST | 2000VU | D1     |
| AFT MAST | 2001VU | D5     |

### Steps to clear warning:

Open circuit breakers for 5 second, then close.

### Reset duration:

18 seconds.

### Results of power up test or reset:

**Pass:** Fault clears.

**Fail:** Fault remains, CIDS caution light on FAP.

### Notes:

If time, perform a bite on associated controller in cargo pit.

## ANTI ICE MESSAGE

### Aircraft configuration prior to reset:

On ground, probe heat not selected "ON".

### Circuit breakers to reset:

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| PHC #1 | 49VU  | U1     |
| PHC #2 | 122VU | Y12    |
| PHC #3 | 122VU | Y16    |

### Steps to clear warning:

Open associated circuit breakers for 1 second, then close.

### Reset duration:

3 seconds.

## ANTI ICE - PROBE MESSAGE SYSTEM #1

### Aircraft configuration prior to reset:

On ground, probe heat not selected "ON".

### Circuit breakers to reset:

| LABEL     | PANEL | NUMBER |
|-----------|-------|--------|
| PITOT #1  | 49VU  | D2     |
| STATIC #1 | 122VU | Z13    |
| AOA #1    | 49VU  | D4     |
| TAT #1    | 122VU | Z12    |

### Steps to clear warning:

Open associated probe breaker for 1 second, then reset.

If no help, open PHC #1 (49VU-D3) for 1 second, then reset.

### Reset duration:

3 seconds.

### Notes:

If probe reset did not clear, reset:

ADIRU C/B's. #1=F6,C2

ADIRU C/B's. #2=N6,N4

ADIRU C/B's. #3=N5,N3

## ANTI ICE - PROBE MESSAGE SYSTEM #2

### Aircraft configuration prior to reset:

On ground, probe heat not selected "ON".

### Circuit breakers to reset:

| LABEL     | PANEL | NUMBER |
|-----------|-------|--------|
| PITOT #2  | 122VU | Y14    |
| STATIC #2 | 122VU | Y11    |
| AOA #2    | 122VU | Y13    |
| TAT #2    | 122VU | Y15    |

### Steps to clear warning:

Open associated probe breaker for 1 second, then reset. If no help, open

PHC #2 (122VU-Y12) for 1 second, then reset.

### Reset duration:

3 seconds.

### Notes:

If probe reset did not clear, reset:

ADIRU C/B's. #1=F6,C2

ADIRU C/B's. #2=N6,N4

ADIRU C/B's. #3=N5,N3

## ANTI ICE - PROBE MESSAGE SYSTEM #3

### Aircraft configuration prior to reset:

On ground, probe heat not selected "ON".

### Circuit breakers to reset:

| LABEL     | PANEL | NUMBER |
|-----------|-------|--------|
| PITOT #3  | 122VU | Z16    |
| STATIC #3 | 122VU | Z14    |
| AOA #3    | 122VU | Z15    |
| TAT #3    | 122VU | Z12    |

### Steps to clear warning:

Open associated probe breaker for 1 second, then reset. If no help, open PHC #3 (122VU-Y16) for 1 second, then reset.

### Reset duration:

3 seconds.

### Results of power up test or reset:

#### Notes:

If probe reset did not clear, reset:

ADIRU C/B's. #1=F6,C2

ADIRU C/B's. #2=N6,N4

ADIRU C/B's. #3=N5,N3

## ENGINE ANTI ICE FAULT

### Aircraft configuration prior to reset:

On ground, engines stopped.

### Circuit breakers to reset:

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| ENG #1 | 122VU | X10    |
| ENG #2 | 122VU | W10    |

### Steps to clear warning:

Open circuit breakers for 1 second, then close. If no help work valve several times, make sure valve is closed.

### Reset duration:

3 seconds.

#### Notes:

Engine anti-ice valve should be spring loaded closed on the ground with engines off.



## ATA 31

### Class 2 ACMS message displayed

Circuit breakers to reset:

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| DMU   | 121VU | K15    |

#### Steps to clear warning:

Open associated breakers for 10 seconds, then reset.

#### Reset duration:

40 seconds.

#### Notes:

ACMS = Aircraft Condition Monitor Systems.

### DISPLAY UNITS SHOWS TELELOADING

Circuit breakers to reset:

| LABEL       | PANEL | NUMBER |
|-------------|-------|--------|
| CAPT PFD/ND | 49VU  | G3,E1  |
| F/O PFD/ND  | 121VU | R3,R4  |
| UPPER ECAM  | 49VU  | E5     |
| LOWER ECAM  | 121VU | R11    |

#### Steps to clear warning:

First, attempt to switch affected display unit to DMC #3 using switching panel.  
Next, open associated display unit circuit breaker for 10 seconds, then reset.

#### Reset duration:

5 seconds.

#### Notes:

Also try reset of associated DMC.

(DMC #1 = E11)

(DMC #2 = Q8)

(DMC #3 = Q9).

All DMC's must be the same manufacturer part number.

## DISPLAY UNIT IS BLANK OR HAS DIAGONAL LINE

### DMC 1(2)(3) FAULT

#### DMC

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER    |
|--------|-------|-----------|
| DMC #1 | 49VU  | E11,E9    |
| DMC #2 | 121VU | Q8, R8    |
| DMC #3 | 121VU | Q9,E7,G10 |

**Steps to clear warning:**

Open associated breakers for 5 seconds, then reset.

**Reset duration:**

5 seconds.

**Notes:**

Use switching panel 8VU to display DMC #3 images.

First select DMC #3 to isolate fault to DU or DMC.

If DMC is at fault reset above associated circuit breaker for 5 seconds.

If fault is with DU reset these

(CAPT PFD/ND = G3/E1)

(FO's PFD/ND = R3/R4)

(Upper ECAM = E5)

(Lower ECAM = R11).

## UNABLE TO SWITCH DISPLAY UNIT (DU)

**Circuit breakers to reset:**

| LABEL       | PANEL | NUMBER |
|-------------|-------|--------|
| CAPT PFD/ND | 49VU  | E4,E2  |
| F/O PFD/ND  | 121VU | R5,R6  |
| UPPER ECAM  | 49VU  | E6     |
| LOWER ECAM  | 121VU | R10    |

**Steps to clear warning:**

Open associated breakers for 5 seconds, then reset.

**Reset duration:**

5 seconds.

**NO AIDS PROMPT ON MCDU**

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| DMU   | 121VU | K15    |

**Steps to clear warning:**

Open associated breakers for 1 seconds, then reset.

**Reset duration:**

40 seconds.

**Notes:**

There is a CFDS power up test bite. "CFDS-INSTRUMENT-DMU".

**ECAM PAGE LOCKED**

**FLIGHT CONTROL PAGE WON'T AUTO-DISPLAY**

**FWC**

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| FWC #1 | 49VU  | F1     |

**Steps to clear warning:**

Make sure "ALL" pushbutton light on ECAM control panel is extinguished. Move sidestick, If flight control page doesn't auto display, open FWC #1 breaker and try again. If successful, FWC is culprit.

**Reset duration:**

50 seconds.

**Notes:**

If any page on the ECAM control panel is manually selected, the auto-function is not operative.

## CLOCK DOESN'T AGREE WITH LOWER ECAM

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER  |
|-------|-------|---------|
| CFDIU | 121VU | J17,J18 |

**Steps to clear warning:**

Open associated breaker for 5 seconds, then reset.

**Reset duration:**

60 seconds.

**Notes:**

Verify clock is correctly set prior to reset of CFDIU.

Clock C/B's are F11/N02/N03.

## SDAC 1(2) FAULT

**Circuit breakers to reset:**

| LABEL   | PANEL | NUMBER      |
|---------|-------|-------------|
| SDAC #1 | 49VU  | F2,F4,F5    |
| SDAC #1 | 121VU | Q3,Q4,P3    |
| SDAC #2 | 49VU  | F3,F5       |
| SDAC #2 | 121VU | Q2,Q5,Q6,P3 |

**Steps to clear warning:**

Open associated breakers together for 3 seconds, then reset.

**Reset duration:**

5 seconds.

## ATA 32

### LGCIU 1(2) FAULT

#### LGCIU 1(2)

**Circuit breakers to reset:**

| LABEL    | PANEL | NUMBER |
|----------|-------|--------|
| LGCIU #1 | 49VU  | C9,Q34 |
| LGCIU #2 | 121VU | Q35    |

**Steps to clear warning:**

Open associated breaker for 1 seconds, then reset.

**Reset duration:**

2 seconds.

**Notes:**

LGCIU #1 drives landing gear panel lights. also remember probes and window heat is driven to full hot when LGCIU breakers are open.

### L/G (LANDING GEAR) SYSTEM DISAGREE

**Steps to clear warning:**

Check post flight report for faulted gear or door sensor. Or perform a CFDS / LG / LGCIU bite check for current faults. Check rig and/or replace faulty sensor or target. If main gear uplock disagree is shown on ground, make sure the main gear uplocks (Hooks) have not been physically tripped

### BRAKES GRABBING DURNING TAXI

#### NOSE WHEEL STEERING FAULTY

**Steps to clear warning:**

Reset A/SKID-NWS switch on landing gear control panel. No help, bleed associated brakes.

**Notes:**

Flight crews can perform this with engines running. Just make sure the aircraft is stopped.

**BSCU CHANNEL 1(2) FAULT**

**BRAKE SYSTEM 1(2) FAULT**

**BSCU**

**Circuit breakers to reset:**

| LABEL   | PANEL | NUMBER  |
|---------|-------|---------|
| BSCU #1 | 121VU | M33,M34 |
| BSCU #2 | 121VU | M35,M36 |

**Steps to clear warning:**

First, select the anti-skid/NWS off, then on. Second open associated circuit breaker for 5 seconds, then close.

**Reset duration:**

3 seconds.

**NO BRAKE TEMPS DISPLAYED ON ECAM**

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| BTMU  | 121VU | M37    |

**Steps to clear warning:**

Open associated breaker for 5 seconds, then reset.

**Reset duration:**

5 seconds.

**Notes:**

Take off warning configuration horn will sound when BTMU is on MEL. T/O not allowed with hot brakes. MEL requires removing cannon plug for affected wheel BTMU. Erroneous indications are extreme HI temps or amber XX.


## NWS FAULT DURNING FLIGHT CONTROL CK.

### Steps to clear warning:

Determine which NWS disconnect button was pushed during rudder check.  
Replace that steering tiller.

### Notes:

**Pedal Disconnection  
Push-Pushbutton**

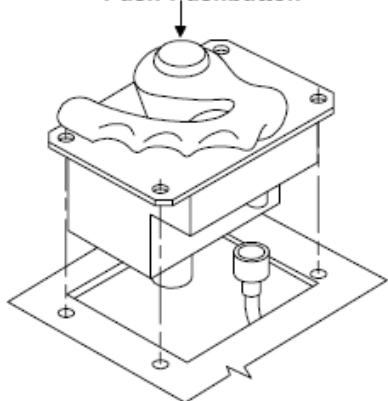

credit: IPRLLR

**INTEGRAL PANEL LIGHTING INOP****Circuit breakers to reset:**

Check light controllers below for circuit breaker or fuse locations.

**Steps to clear warning:**

If multiple panel lights are inop, a fuse is blown in the associated light controller. Replace associated fuse, or controller.

**Controllers:**

**16LF Controller = Main panel and pedestal integral lighting. (LOCATED BEHIND F/O'S RUDDER PEDALS) (C/B-Y04)**

Fuse #6=22LF,24LF,23LF,26LF,25LF,17CC(RUD-TRIM),7CE(SPD-BRK)

Fuse #5=18LF,35LF,36LF,3CA1(MCDU#1), 1RG(RMP#1),51LF

Fuse #4=2RN2(ACP-F/O),1RG2(RMP#2),3CA2(MCDU#2),2GC(F/O-HANDWHEEL),6GA(L/G-LEVER)

Fuse #3=3SH(ATC1/2),6WT(ECAM-CTL),29LF,21LF,19LF,20LF,3SQ(WEATHER-RADAR)

Fuse #2=2RN(ACP-CAPT),60GG(YELLOW-TRIP-PRESS),2FS(CLOCK),3CA3(MCDU#3),28LF

Fuse #1=27LF,3FN(STBY-ALTM),1GC(CAPT-HANDWHEEL),11FN(VOR/DME),41LF,7FN(STBY-HORIZON),9FN(STBY-AIRSPEED)

**6LF Controller = Overhead integral lighting. (LOCATED IN OVERHEAD PANEL)(C/B-Y03)**

Fuse #K=3PV2(BAT-2),3PV1(BAT-1), 35VU

Fuse #J=30VU, 22VU

Fuse #H=23VU, Both Overhead Reading Light panel , Overhead Audio Swithing panel, 3RD-ACP Panel

Fuse #L=21VU,24VU, ADIRS Panel

Fuse #N=25VU,1RG3(#3RMP)

Fuse #M=40VU, ENG/APU-FIRE Panel



**30LF Controller= Glareshield integral lighting (LOCATED BEHIND F/O'S RUDDER PEDALS)(C/B-Y05)**

Fuse #H=2CA(FCU-INTEGRAL),33LF

Fuse #J=2CA(FCU-INTEGRAL),32LF

Fuse #K=2CA(FCU VIZOR LIGHT)

### CABIN LIGHTS STUCK IN BRIGHT

**Circuit breakers to reset:**

| LABEL | NUMBER              |
|-------|---------------------|
| DEU A | G4, G5, M9-M14, Q14 |

**Steps to clear warning:**

Open associated breaker for 3 seconds, then reset. If no help, reset CIDS or associated DEU thru PTP.

**Reset duration:**

2 seconds.

**Notes:**

If a couple successive rows of cabin lights won't dim, associated DEU is failed.

### COCKPIT FLOOR/CONSOLE/BRIEFCASE LIGHTS INOP

**Circuit breakers to reset:**

✓ Capt's side = Z05. F/O's side = Z06.

**Steps to clear warning:**

Check the condition of underseat lights for damage sockets.

## CABIN LIGHTS WON'T TURN ON

### Circuit breakers to reset:

| LABEL    | PANEL | NUMBER |
|----------|-------|--------|
| CIDS FAP | 121VU | M14    |

### Steps to clear warning:

Open associated breaker for 3 seconds, then reset. If no help, reset CIDS thru PTP or MCDU.

### Reset duration:

2 seconds.

### Notes:

If a couple successive rows of cabin lights won't turn on, associated DEU is failed.

## READING LIGHTS INOP

### Aircraft configuration prior to reset:

Aircraft on ground, reading lights switch on FAP selected "ON".

### Circuit breakers to reset:

| LABEL       | PANEL  | NUMBER |
|-------------|--------|--------|
| PAX READING | 2000VU | G1-G6  |

### Steps to clear warning:

Open associated breaker for 1 seconds, then reset. If no help, reset CIDS thru PTP or MCDU.

### Reset duration:

1 seconds.

### Notes:

IF no help, relamp inop reading light.  
IF no help, replaced PCB fuse,  
IF no help replaced the PCB

## NO LIGHTS IN MLG WHEEL WELL AREAS

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| LIGHTS | 122VU | X08    |

**Steps to clear warning:**

Open associated breaker for 1 seconds, then reset. No help, relamp or tap lens.

**Reset duration:**

1 seconds.

**Notes:**

MLG wheel well light bulb P/N#311.

## EMERGENCY LIGHTS INOP

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| EMERG. | 49VU  | H5-H7  |


**Steps to clear warning:**

Open associated breaker for 1 seconds, then reset. If multiple lights are inop, perform EPSU test from PTP or individual EPSU.

**Reset duration:**

1 seconds.

**Notes:**

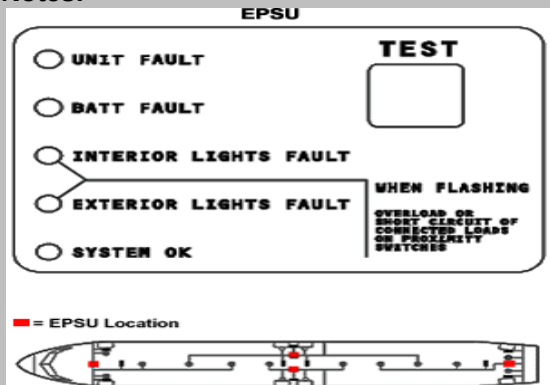

## NAV MMR 1(2) FAULT

## NAV ILS/MMR 1(2)

### MMR1(2)

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| MMR#1 | 49VU  | G12    |
| MMR#2 | 121VU | K9,L7  |

### Steps to clear warning:

Open associated breaker for 5 seconds, then reset. If no help, check MMR in fwd E&E for fault light.

### Reset duration:

10 seconds.

### Notes:

Check troubleshoot data for “A7” fault code. GPS antenna normally at fault in this situation.

FOR ILS/MMR FAULT

MMR is normally the cause of this fault.

## NAV GPS 1(2) FAULT

### GPSSU

On the panel 121VU:

- For GPSSU1, open the C/B J04.
- After 5 seconds, close the C/Bs.

On the panel 121VU:

- For GPSSU2, open the C/B J05.
- After 5 seconds, close the C/Bs.

## ADR OR IR 1(2)(3) FAULT

**Circuit breakers to reset:**

| LABEL    | PANEL | NUMBER   |
|----------|-------|----------|
| ADIRU #1 | 105VU | C02      |
| ADIRU #2 | 121VU | N10,N4   |
| ADIRU #3 | 121VU | F9,N9,N3 |

**Steps to clear warning:**

Above breakers are main/backup power for ADIRU's. Try resetting and re-aligning ADIRU. No help check CFDS for faults. To T/S, check the CFDS/NAV/ADR or IR/ T/S DATA. The first 4 digits in the upper left corner is the fault analysis number. The two middle digits in the fault analysis number is the failure code.

**Reset duration:**

600 seconds.

**Notes:**

A known problem of the ADIRU shelf vibrating and hitting the top of the ADIRU will cause this fault.

## GPWS FAULT / NAV GPWS TERR DET FAULT

**GPWC**

**Circuit breakers to reset:**

| LABEL       | PANEL | NUMBER |
|-------------|-------|--------|
| GPWS        | 121VU | P6,P7  |
| RADIO ALT#1 | 121VU | K11    |
| ILS #1      | 49VU  | G12    |

**Steps to clear warning:**

Open associated breaker for 1 seconds, then reset. No help, move aircraft approx 4 feet.

**Reset duration:**

25 seconds.

**Notes:**

This problem may be by ILS freq's that are close and interfering with the GPWS system. Move A/C. This fault may appear and disappear during taxi for this reason.

## WINDSHEAR DET FAULT

Circuit breakers to reset:

| LABEL | PANEL | NUMBER  |
|-------|-------|---------|
| FAC#1 | 49VU  | B3,B4   |
| FAC#2 | 121VU | M18,M19 |
| RADAR | 121VU | K13     |

**Steps to clear warning:**

First reset FAC'S from overhead pushbuttons. Then open associated breaker for 10 seconds, then reset.

**Reset duration:**

90 seconds.

**Notes:**

If hydraulics are powered, reset duration is less than 10 seconds, 90 seconds otherwise. Also message may occur spuriously on ground.

credit: IORLIN

## NAV - PRED WINDSHEAR DET FAULT

Circuit breakers to reset:

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| RADAR | 121VU | K13    |

**Steps to clear warning:**

Switch radar off, then on from the control panel, if no help open associated breaker for 5 seconds, then reset.

**Reset duration:**

30 seconds.

## NAV - TCAS FAULT

Circuit breakers to reset:

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| TCAS  | 121VU | K10    |

**Steps to clear warning:**

Open breaker for 5 seconds, then reset. No help, bite test TCAS computer located on the 82VU rack.

**Reset duration:**

10 seconds.

**Notes:**



## FLIGHT RECORDER PROBLEM

Circuit breakers to reset:

| LABEL | PANEL | NUMBER      |
|-------|-------|-------------|
| FCDR  | 121VU | K11,K17,K18 |

**Steps to clear warning:**

Open breaker for 1 seconds, then reset.

**Reset duration:**

25 seconds.

## AUTO-TUNE INOP

**Steps to clear warning:**

Try a different station position in the MCDU "INIT" page. The nav data could be at fault. Also verify both RMP's that the "NAV ON" switch is off-(Plastic Guarded Switch).

**RMP:**



**NAV-RA 1(2) INOP**

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER |
|-------|-------|--------|
| RA#1  | 121VU | K11    |
| RA#2  | 121VU | K12    |

**Steps to clear warning:**

Open associated breaker for 20 seconds, then reset. If no help, perform a CFDS/NAV/RA/ARINC test.

**Reset duration:**

30 seconds.

credit: IRLIN



## ATA 36

### AIR BLEED – RIGHT/LEFT WING LEAK/LOOP

**Aircraft configuration prior to reset:**

Aircraft on ground, packs running, engines off.

**Circuit breakers to reset:**

| LABEL | PANEL | NUMBER  |
|-------|-------|---------|
| BMC 1 | 49VU  | D11,D12 |
| BMC 2 | 121VU | Z22,Z23 |

**Steps to clear warning:**

Reset affected bleed pushbutton first, no help open associated breakers for 1 second, then reset.

**Reset duration:**

25 seconds.

**Notes:**

Fault means high temp(or bleed leak) sensed by one of two loops. Can be generated in hot station, then clear in cool station due to poor loop installation,(factory problem).

### CROSS BLEED VALVE FAULTS

**Aircraft configuration prior to reset:**

Aircraft on ground. Packs off.

**Circuit breakers to reset:**

| LABEL      | PANEL | NUMBER  |
|------------|-------|---------|
| XFEED      | 49VU  | D13,Z20 |
| AIRBLEED 1 | 49VU  | D11,D12 |
| AIRBLEED 2 | 121VU | Z22,Z23 |
| SDAC 1/2   | 49VU  | F4,Q6   |

**Steps to clear warning:**

Open associated circuit breaker for 1 second, then reset.

**Reset duration:**

5 seconds.

## ATA 38

### TOILET'S WON'T FLUSH

#### Aircraft configuration prior to reset:

Aircraft on ground, lav service panel door is closed and the waste tank is not full, depressurization valve light off-(if installed).

#### Circuit breakers to reset:

| LABEL   | PANEL  | NUMBER         |
|---------|--------|----------------|
| VAC SYS | 2001VU | A1,A3,A4,A6,A8 |

#### Steps to clear warning:

Open breaker for 1 seconds, then reset.

#### Reset duration:

5 seconds.

#### Notes:

CIDS fault light also displayed, troubleshoot thru CIDS. There is also a Toilets page in the CFDS(page #2) via the MCDU. If Vacuum Generator is inop, toilets will still flush in flight above FL180.

### NO WATER PRESSURE

#### Aircraft configuration prior to reset:

Aircraft on ground. water service panel door closed, apu bleed on.

#### Steps to clear warning:



Check fwd flight attendant panel. Verify WTR SYSTEM DEPRESS pushbutton is not illuminated.

#### Reset duration:


30 seconds.

#### Notes:

Verify the water servicing access door is closed and servicing valve is also closed. Not all aircraft have the "WTR SYST DEPRES" button installed on FWD FAP.

## TROUBLE LOADING ATSU SOFTWARE

## Steps to clear warning:

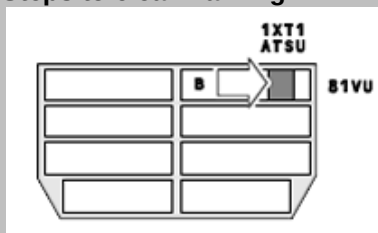

After loading 20TX, must disconnect loader for 3 minutes prior to loading 22TX, and again prior to loading 24TX.

**Notes:**

Must load ATSU in order, 20TX, 22TX, 24TX. Adhere to manual loading procedure.

## ATSU malfunction

## ATSU

On the rear circuit breaker panel 121VU:

- Open the C/Bs in this order: **L16** and **L15**.
- After 5 seconds, close the C/Bs in this order: **L15** and **L16**.

**COCKPIT DOOR FAULT****Circuit breakers to reset:**

| LABEL    | PANEL | NUMBER |
|----------|-------|--------|
| FLT DECK | 121VU | T13    |

**Steps to clear warning:**

Open associated circuit breakers for 5 seconds, then reset. If no help, check for faults on the overhead door controller.

**Reset duration:**

5 seconds.

**CABIN DOOR PRESSURE LIGHT FLASHING****Aircraft configuration prior to reset:**

Aircraft on ground, engines shut down, door disarmed, no residual cabin pressure on board.

**Circuit breakers to reset:**

| LABEL   | PANEL | NUMBER |
|---------|-------|--------|
| ARM FLT | 121VU | P11    |
| ARM GND | 121VU | P10    |

**Steps to clear warning:**

Try resetting above circuit breaker, if no help T/S by removing the connector from the 14WN pressure switch in FWD E&E. If light extinguishes change switch.

**Reset duration:**

5 seconds.

**Notes:**

Light normally flashes when both engines are shut down, the associated slide is disarmed and cabin pressure is greater than .036 PSI.

**HYD PUMP DOESN'T STOP WITH CARGO DOOR OPS.**

**Circuit breakers to reset:**

| LABEL      | PANEL | NUMBER |
|------------|-------|--------|
| CARGO DOOR | 122VU | T12    |

**Steps to clear warning:**

Open above circuit breaker for 5 seconds, then reset If no help check the LGCIU for faults. (Could be the time delay relay 6MJ).

**Reset duration:**

5 seconds.

credit: IRLIN

|                                                                                                |                                                                                                |
|------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------|
| <b>ATA 70+</b>                                                                                 |                                                                                                |
| <b>ENG IGN A+B FAULT / ENG 1(2) FADEC A(B) FAULT</b>                                           |                                                                                                |
| <b>FADEC and EIU</b>                                                                           |                                                                                                |
| On the panels 49VU and 121VU open then lose the C/B of<br>- For the FADEC 1, C/Bs A04 and R41. | On the panels 49VU and 121VU open then lose the C/B of<br>- For the FADEC 2, C/Bs A05 and Q40. |
| <b>Loss of N1 VIB and N2 VIB indications for ENG1(2) in ECAM SD</b>                            |                                                                                                |
| <b>EIVMU</b>                                                                                   |                                                                                                |
| On the panel 121VU:<br>- Open the C/B R44.<br>- After 5 seconds, close the C/B.                |                                                                                                |

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>ENGINE 1(2) OVERSPEED COCKPIT DOOR FAULT</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Steps to clear warning:</b><br>Read the specific data report from the<br>MCDU=(CFDS/INST/EIS1/XLOAD(optional)/ENGINE).                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Notes:</b><br>If the value of one of these parameters is higher than the max limit, the report also shows how long (in seconds) the associated parameter was at that limit. If no over limit condition occurred, there is no time indication<br><br>CFM=N1 speed >104 and N2 speed >105 will require inspections. T/S per TSM<br><br>V2500=N1/N2=100% 5465RPM/14,915RPM will require inspections.<br><br>You can reset these values if necessary. Push the line key adjacent to the "RESET MAX VALUES" then "CONFIRM RESET" indications. |

## ENGINE 1(2) OVERSPEED PROTECTION FAULT V2500

### Aircraft configuration prior to reset:

Over speed Protection Fault identified by FMU/HC/EEC1/2 on PFR with fault code "OSFFMU".

### Steps to clear warning:

Read the FADEC fault codes shown in the FLIGHT DATA and GROUND DATA sections. If you have fault code "**OSFFMU**" attempt to clear the over speed protection fault as follow's. All other fault codes trouble shoot iaw TSM.

1. On the 50VU, push the ENG FADEC GRD PWR pushbutton switch and release it again. (Resets FADEC)
2. Push INT mode key on the MCDU and enter a new flight number.
3. Start the engine and run at idle for 4 minutes with engine generator on, than turnoff associated engine generator for 1 minute.
4. Shutdown the engine, and if there are no ECAM/PFR faults, return to service.
5. If fault code **OSFFMU** continues, repeat above steps, If fault still won't clear, check "B" and "C" connectors (Pins J/H) on FMU. Also check "J5" and "J11" connectors (Pins J/d) at EEC. Check TSM for torque motor resistance valves.

### Results of power up test or reset:

**Pass:** Return to service.

**Fail:** Repeat above steps until cleared.

### Notes:

There is no limit to the number of times you may perform this procedure, and can be performed by the crew after pushback without delaying the flight as long as the ECAM message clears.

## ENGINE 1(2) EGT OVERLIMIT

### Steps to clear warning:

Read the specific data report from the  
MCDU=(CFDS/INST/EIS1/XLOAD(optional)/ENGINE).

### Notes:

✓ If the valve of one of these parameters is higher than the max limit, the report also shows how long (in seconds) the associated parameter was at that limit. If no overlimit condition occurred, there is no time indication.

✓ Check history, if more than 5 hits within the first 25 cycles of the first hit, the exceedance condition must be identified.

✓ You can reset these values if necessary. Push the line key adjacent to the "RESET MAX VALUES" then "CONFIRM RESET" indications.

## ENGINE 1(2) FADEC A(B) CHANNEL FAULT

### Circuit breakers to reset:

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| ENG #1 | 49VU  | A4,R41 |
| ENG #2 | 121VU | A5,R42 |

### Steps to clear warning:

Select ECU's off, then on using pushbuttons. If no help, open associated breaker for 1 second, then reset.

### Reset duration:

2 seconds



## ENGINE 1(2) EIU MAINTENANCE STATUS

### Circuit breakers to reset:

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| ENG #1 | 49VU  | A4,R41 |
| ENG #2 | 121VU | A5,R42 |

### Steps to clear warning:

Open associated breaker for 1 second, then reset. If no help, perform FADEC (A/B) bite test.

### Reset duration:

2 seconds.

### Notes:

If associated with fault message check 17(16)HB circuitry or EIU 1(2), can be caused by failed flow control valve or relay 16HB(17HB), pack closure relay.

## ENGINE 1(2) EIU FAULT

### Circuit breakers to reset:

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| ENG #1 | 49VU  | A4,R41 |
| ENG #2 | 121VU | A5,R42 |

### Steps to clear warning:

Open associated breaker for 1 second, then reset. If you have dual EIU faults, perform a FADEC (A/B) bite, then select start cycle rotary switch from norm to crank, wait 14 seconds and return to norm, wait 5 min, then pull ENG 1/2 oil pressure CB, reset after 5 seconds

### Reset duration:

2 seconds.

**ENGINE 1(2) FADEC FAULT**

**Aircraft configuration prior to reset:**

Aircraft on ground, engines stopped, ECU's powered.

**Circuit breakers to reset:**

| LABEL  | PANEL | NUMBER |
|--------|-------|--------|
| ENG #1 | 49VU  | A4,R41 |
| ENG #2 | 121VU | A5,R42 |

**Steps to clear warning:**

Select ECU's off, then on using pushbuttons. If no help, open associated breaker for 1 second, then reset.

**Reset duration:**

2 seconds.

**Notes:**


HPTCC VLV(POS), HMU or TCC faults not confirmed on FADEC test are spurious.

credit: IORLIN

## ENGINE 1(2) EPR MODE FAULT MESSAGE

### Steps to clear warning:

✓ Recovery of EPR on both engines may be attempted by switching off each engine's N1 mode switch.

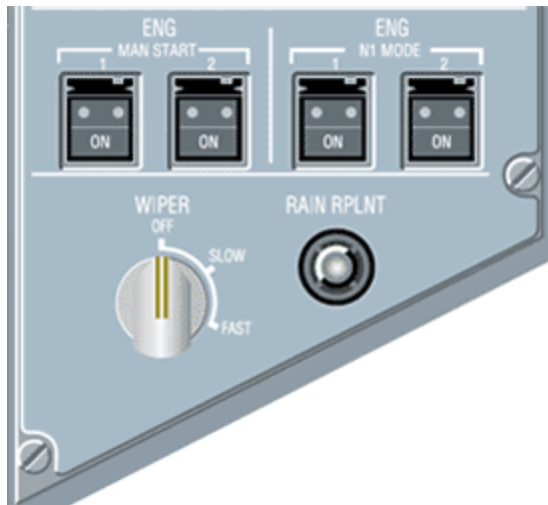

### Notes:

If EPR was fluctuating, check PFR for associated failures. P2/T2 or P5 failures = check associated lines for leaks.

## THRUST REV FAULT AT ENGINE START

### Steps to clear warning:

Shut down engine. Put engine mode select switch to IGN, wait 15 seconds, then back to norm. If no faults, start engines

### Notes:

To prevent fault, select FADEC's on from the 50VU maintenance panel prior to mode select switch to IGN.

## ENGINE 1(2) OIL FILTER CLOG MESSAGE

### Steps to clear warning:

First select FADEC's on then off to reset memory. Check the master chip detector and scavenge filters for contamination. Then run engine at idle making sure the oil filter clog message doesn't appear. Recheck chip detector and filter again.

### Notes:

This message could appear momentarily if OAT is below freezing.

| ATA 21                               | AIRCONDITION |       |
|--------------------------------------|--------------|-------|
| DESIGNATION                          | LOC          | PANEL |
| FLOW/CTL/IND1                        | D07          | 49VU  |
| FLOW/CTL AND IND/2                   | V21          | 122VU |
| FLOW/MIXER/FLAP                      | V22          | 122VU |
| RECIRC FAN/L/SPLY                    | X18          | 122VU |
| RECIRC FAN/L/CTL                     | X20          | 122VU |
| RECIRC FAN/R/SPLY                    | W18          | 122VU |
| RECIRC FAN/R/CTL                     | W20          | 122VU |
| PACK TEMP/CTL SYS1/1/115VAC          | X22          | 122VU |
| PACK TEMP/CTL SYS1/1/28VDC           | X21          | 122VU |
| PACK TEMP/CTL SYS1/2/115VAC          | W22          | 122VU |
| PACK TEMP/CTL SYS1/2/28VDC           | W21          | 122VU |
| PACK TEMP CTL SYS2/1/115VAC          | Y18          | 122VU |
| PACK TEMP CTL SYS2/1/28VDC           | Y19          | 122VU |
| PACK TEMP CTL SYS2/2/115VAC          | Y20          | 122VU |
| PACK TEMP CTL SYS2/2/28VDC           | Y21          | 122VU |
| ZONE TEMP CTL/115VAC/SYS1            | V17          | 122VU |
| ZONE TEMP CTL/28VDC/SYS1             | V19          | 122VU |
| ZONE TEMP CTL/115VAC/SYS2            | V18          | 122VU |
| ZONE TEMP CTL/28VDC/SYS2             | V20          | 122VU |
| CAB/PRESS/CTL1                       | D09          | 49VU  |
| CAB PRESS/CTL/2                      | Y22          | 122VU |
| CAB PRESS/CTL/MAN                    | Y23          | 122VU |
| AVNCS/VENT/MONG                      | Y17          | 122VU |
| AVNCS VENT/CTL                       | D05          | 49VU  |
| AVNCS VENT/CTL                       | D06          | 49VU  |
| LAV/GALLEY VENT CTL/EXTRACT FAN/CTL  | U21          | 122VU |
| LAV/GALLEY VENT CTL/EXTRACT FAN/SPLY | U19          | 122VU |
| RAM/AIR/INLET                        | D10          | 49VU  |

| ATA 22           | AUTO FLIGHT |       |
|------------------|-------------|-------|
| DESIGNATION      | LOC         | PANEL |
| FCU/1            | B05         | 49VU  |
| FCU/2            | M21         | 121VU |
| FMGC/1           | B02         | 49VU  |
| FMGC/2           | M17         | 121VU |
| MCDU/1           | B01         | 49VU  |
| MCDU/2           | N20         | 121VU |
| STICK/LOCK       | N16         | 121VU |
| RUDDER/ARTE/FEEL | N17         | 121VU |
| FAC1/28VDC       | B04         | 49VU  |
| FAC2/28VDC       | M19         | 121VU |
| FAC1/26VAC       | B03         | 49VU  |
| FAC2/26VAC       | M18         | 121VU |
| RUDDER/TRIM/IND  | M20         | 121VU |

| ATA 23                | COMMUNICATIONS |       |
|-----------------------|----------------|-------|
| DESIGNATION           | LOC            | PANEL |
| VHF/1                 | G09            | 49VU  |
| VHF/2                 | L04            | 121VU |
| VHF/3                 | L05            | 121VU |
| RMP/1                 | G10            | 49VU  |
| RMP/2                 | L02            | 121VU |
| CIDS/DIR 1 AND 2/ESS  | G02            | 49VU  |
| CIDS/DIR 1 AND 2/NORM | M05            | 121VU |
| CIDS/DEU B/ESS        | G03            | 49VU  |
| CIDS/DEU A ESS/LINE 1 | G04            | 49VU  |
| CIDS/DEU A ESS/LINE 2 | G05            | 49VU  |
| CIDS/PROG AND TST PNL | M06            | 121VU |
| CIDS/DEU B/NORM       | M07            | 121VU |
| CIDS/DEU A NORM/L FWD | M08            | 121VU |
| CIDS/DEU A NORM/R FWD | M09            | 121VU |
| CIDS/DEU A NORM/L MID | M10            | 121VU |
| CIDS/DEU A NORM/R MID | M11            | 121VU |

|                                 |     |        |
|---------------------------------|-----|--------|
| CIDS/DEU A NORM/L AFT           | M12 | 121VU  |
| CIDS/DEU A NORM/R AFT           | M13 | 121VU  |
| CIDS/FWD ATTND/PNL              | M14 | 121VU  |
| CIDS/FWD ATTND/PNL              | Q14 | 121VU  |
| CVR/SPLY                        | E14 | 49VU   |
| CVR/CTL                         | E13 | 49VU   |
| AUDIO/ACP/CAPT                  | G06 | 49VU   |
| AUDIO/ACP/F/O                   | G07 | 49VU   |
| ACP/THIRD/OCCPNT                | M02 | 121VU  |
| ACP/AVNCS/COMPT                 | M03 | 121VU  |
| SELCAL                          | M04 | 121VU  |
| AUDIO/FLT/INTPH                 | G08 | 49VU   |
| CABIN COMMUNICATION SYSTEM-PRAM | F07 | 2000VU |
| HORN/SPLY                       | P09 | 121VU  |
| AUDIO MIXING                    | K03 | 121VU  |

| ATA 24                      | ELECTRICAL |       |
|-----------------------------|------------|-------|
| DESIGNATION                 | LOC        | PANEL |
| GALLEY/CNTOR                | S28        | 122VU |
| HOT BUS/701PP SPLY          | D01        | 105VU |
| HOT BUS/702PP SPLY          | D02        | 105VU |
| BAT BUS/REF/BCL1            | G01        | 105VU |
| BAT BUS/REF/BCL2            | J02        | 105VU |
| BAT REF/BCL1                | F01        | 105VU |
| BAT REF/BCL2                | F02        | 105VU |
| HOT BUS/701PP SPLY          | E01        | 105VU |
| HOT BUS/702PP SPLY          | E02        | 105VU |
| CNTOR/ESS/DC BUS/TIE        | W26        | 122VU |
| TR1/FAULT/DC BUS TIE/CONFIG | W29        | 122VU |
| TR2/FAULT/DC BUS TIE/CONFIG | W30        | 122VU |
| CNTOR/DC/BUS/TIE1           | W25        | 122VU |
| CNTOR/DC BUS/TIE 1/FAULT    | U24        | 122VU |
| AC ESS/BUS/EMER/CNTOR/SPLY  | C08        | 106VU |
| DC BUS/TIE2//APU/START      | W31        | 122VU |

|                                 |     |       |
|---------------------------------|-----|-------|
| ESS TR/SPLY                     | C01 | 106VU |
| ESS TR/CNTOR/CTL                | C02 | 106VU |
| EMER/SHED/CNTOR/SPLY            | C07 | 106VU |
| DC/SVCE/BUS                     | X24 | 122VU |
| DC SHED BUS/CNTR                | U26 | 122VU |
| REFLNG/ON/BAT                   | U28 | 122VU |
| REFLNG/NORM                     | S27 | 122VU |
| RFL/SPLY/LOGIC                  | U29 | 122VU |
| TR1/MONG                        | X25 | 122VU |
| TR2/MONG                        | X26 | 122VU |
| DC SVCE/BUS/ON TR2              | U30 | 122VU |
| GALY & CAB/CTL                  | S26 | 122VU |
| GALY & CAB/GND/FLT/LOGIC        | S24 | 122VU |
| GALY & CAB/FAULT/LT CTL         | S25 | 122VU |
| STAT INV/BUS 901XP/SPLY         | H02 | 105VU |
| STAT INV/CNTOR/CTL              | G02 | 105VU |
| AC ESS/BUS NORM/CNTOR/CTL       | B03 | 106VU |
| AC ESS BUS/STBY/CNTOR/CTL       | B08 | 106VU |
| AC ESS BUS/EMER/CNTOR/CTL       | B07 | 106VU |
| CSM/G /EV/MAN/SPLY              | B04 | 106VU |
| CSM/G /EV AUTO/SPLY             | C01 | 105VU |
| EMER GEN AUTO/2                 | Z26 | 122VU |
| AC ESS BUS/EMER/STBY/CNTOR/SPLY | C06 | 106VU |
| EMER GEN AUTO/1                 | Z25 | 122VU |
| EXT PWR/LT CLT/AVAIL            | X31 | 122VU |
| EXT PWR/LT CLT/NOT IN/USE       | X30 | 122VU |
| GPCU                            | Y24 | 122VU |
| EXT PWR/CTL                     | X29 | 122VU |
| EXT PWR/COCKPIT/AVAIL/LT        | X28 | 122VU |
| ELEC/LT/CTL                     | H10 | 49VU  |
| AC/SHED/ESS BUS/CNTOR/CTL       | C04 | 106VU |
| AC ESS BUS/MONG/SPLY            | C05 | 106VU |
| 26VAC/ESS BUS/SPLY              | B06 | 106VU |
| AC BUS/8XP/MONG                 | H11 | 49VU  |
| AC/BUS1/CTL                     | V25 | 122VU |

|              |      |       |
|--------------|------|-------|
| ELEC/GAPCU   | W24  | 122VU |
| GND/PWR/PROT | AB07 |       |

| ATA 25                            | EQUIPMENT / FURNISHING |        |
|-----------------------------------|------------------------|--------|
| DESIGNATION                       | LOC                    | PANEL  |
| VACUUM CLEANER SOCKET CARGO Z0261 | F01                    | 2001VU |
| COCKPIT SEATS/SEAT CTL/CAPT       | U11                    | 122VU  |
| COCKPIT SEATS/SEAT CTL/F/O        | U14                    | 122VU  |
| PILOTS OUTLETS/STAT INV           | K25                    | 121VU  |
| PILOTS OUTLETS/115V 60HZ          | K23                    | 121VU  |

| ATA 26                             | FIRE PROTECTION |       |
|------------------------------------|-----------------|-------|
| DESIGNATION                        | LOC             | PANEL |
| ENGINE/1/FIRE DET/LOOP A           | A06             | 49VU  |
| ENGINE/ENG2/FIRE DET/LOOP A        | Q39             | 121VU |
| ENGINE/ENG1/FIRE DET/LOOP B        | Q38             | 121VU |
| ENGINE/2/FIRE DET/LOOP B           | A07             | 49VU  |
| ENG1 AND 2 FIRE EXTIG/BTL1/SQUIB/A | Q43             | 121VU |
| ENG1 AND 2 FIRE EXTIG/BTL2/SQUIB/A | Q41             | 121VU |
| ENG1 AND 2 FIRE EXTIG/BTL1/SQUIB/B | Q44             | 121VU |
| ENG1 AND 2 FIRE EXTIG/BTL2/SQUIB/B | Q42             | 121VU |
| APU/FIRE/EXTIG/SQUIB/A             | L38             | 121VU |
| APU/FIRE/EXTIG/SQUIB/B             | L39             | 121VU |
| APU/FIRE/LP VALVE/STBY             | M41             | 121VU |
| APU/FIRE/LP VALVE/NORM             | M42             | 121VU |
| APU/AUTO/EXTIG/GND/TEST            | L40             | 121VU |
| APU/FIRE AND OVHT/DET/LOOP A       | L43             | 121VU |
| APU/FIRE AND OVHT/DET/LOOP B       | L44             | 121VU |
| SDCU/CHAN1                         | C06             | 49VU  |
| SDCU/CHAN2                         | T18             | 122VU |
| CARGO/FIRE/EXTIG/BTL1              | C04             | 49VU  |
| AVIONIC SMOKE / AEVC               | Y17             | 122VU |
| AVIONIC SMOKE / AEVC               | D6              | 49VU  |



|                      |    |      |
|----------------------|----|------|
| AVIONIC SMOKE / AEVC | D7 | 49VU |
|----------------------|----|------|

| ATA 27                | FLIGHT CONTROLS |       |
|-----------------------|-----------------|-------|
| DESIGNATION           | LOC             | PANEL |
| ELAC1/NORM/SPLY       | B11             | 49VU  |
| ELAC2/NORM/SPLY       | R20             | 121VU |
| ELAC1/STBY SPLY       | A01             | 105VU |
| ELAC2/STBY SPLY       | A02             | 105VU |
| THS ACTR/MOT1         | Q16             | 121VU |
| THS/ACTR/MOT2         | B09             | 49VU  |
| THS ACTR/MOT3         | Q17             | 121VU |
| FCDC1/SPLY            | B10             | 49VU  |
| FCDC2/SPLY            | Q20             | 121VU |
| SEC1/NORM/SPLY        | B08             | 49VU  |
| SEC2/SPLY             | Q18             | 121VU |
| SEC3/SPLY             | Q19             | 121VU |
| SEC1/STBY SPLY        | B01             | 105VU |
| SLT FLP/POS/IND 1     | B12             | 49VU  |
| SLT FLP/POS/IND2      | P16             | 121VU |
| SLT/CTL AND MONG/SYS1 | B06             | 49VU  |
| FLP/CTL AND MONG/SYS1 | B07             | 49VU  |
| SLT/CTL/SYS2          | R21             | 121VU |
| FLP/CTL AND/MONG/SYS2 | Q21             | 121VU |
| WTB/SLT/SYS1          | S06             | 122VU |
| WTB/FLP/SYS1          | S07             | 122VU |
| WTB/SLT/SYS2          | P19             | 121VU |
| WTB/FLP/SYS2          | P20             | 121VU |

| ATA 28                  | FUEL |       |
|-------------------------|------|-------|
| DESIGNATION             | LOC  | PANEL |
| L WING TK/PUMP1 SPLY    | N23  | 121VU |
| R WING TK/PUMP1 SPLY    | Q23  | 121VU |
| PUMPS/1/L CTL AND R IND | R23  | 121VU |

|                                 |     |       |
|---------------------------------|-----|-------|
| PUMPS/1/R CTL AND L IND         | R28 | 121VU |
| L WING TK/PUMP2 SPLY            | N26 | 121VU |
| R WING TK/PUMP2 SPLY            | Q26 | 121VU |
| PUMPS/2/L CTL AND R IND         | R24 | 121VU |
| PUMPS/2/R CTL AND L IND         | R29 | 121VU |
| CTR TK/PUMP1 SPLY               | P23 | 121VU |
| CTR TK/PUMP2 SPLY               | P26 | 121VU |
| CTR TK/PUMPS1 AND 2/CTL AND IND | R25 | 121VU |
| CTR TK/PUMPS1 AND 2/CTL AND IND | R26 | 121VU |
| CTR TK/AUTO/CTL                 | R27 | 121VU |
| SMOKE/CONFIG/PUMP CTL           | A14 | 49VU  |
| APU/FUEL/BLOW OFF/CTL           | K39 | 121VU |
| APU/FUEL/BLOW OFF/PUMP          | B14 | 49VU  |
| APU/FUEL/PUMP/CTL               | M38 | 121VU |
| FUEL/X FEED/VALVE/MOT2          | M24 | 121VU |
| FUEL/X FEED/VALVE/MOT1          | A12 | 49VU  |
| APU/FUEL/LP VALVE/CTL           | M40 | 121VU |
| APU/FUEL/LP VALVE/SPLY          | M39 | 121VU |
| FUEL/LP VALVE/MOT1/ENG1         | A08 | 49VU  |
| FUEL/LP VALVE/MOT1/ENG2         | A09 | 49VU  |
| FUEL/LP VALVE/MOT2/ENG1         | M25 | 121VU |
| FUEL/LP VALVE/MOT2/ENG2         | M26 | 121VU |
| FUEL/HI/LVL/SPLY                | L25 | 121VU |
| FUEL/XFR VALVE1/WING/L          | A10 | 49VU  |
| FUEL/XFR VALVE1/WING/R          | A11 | 49VU  |
| FUEL/XFR VALVE2/WING/L          | M22 | 121VU |
| FUEL/XFR VALVE2/WING/R          | M23 | 121VU |
| FUEL/FQI/CHAN/1                 | A13 | 49VU  |
| FUEL/FQI/CHAN/2                 | M27 | 121VU |
| FUEL/FQI/CHANNEL/1 AND 2        | L26 | 121VU |
| FUEL/RFL/DFL/XFR/DEFUEL/VALVE   | L23 | 121VU |
| FUEL/RFL/DFL/SPLY               | L24 | 121VU |

| ATA 29                    | HYDRAULICS |       |
|---------------------------|------------|-------|
| DESIGNATION               | LOC        | PANEL |
| Y HYD/PUMP ENG2/MONG      | Q37        | 121VU |
| Y HYD/PUMP ENG2/CTL       | Q36        | 121VU |
| FIRE VALVE/Y/ENG2         | C14        | 49VU  |
| RAT/CTL                   | D14        | 49VU  |
| RAT/SPLY/EXTN/SOL1        | P33        | 121VU |
| HYD PWR/B WARN/& CTL      | C12        | 49VU  |
| G HYD/PUMP ENG1/CTL       | R35        | 121VU |
| G HYD/PUMP ENG1/MONG      | R34        | 121VU |
| FIRE VALVE/G/ENG1         | C13        | 49VU  |
| SOL VALVES/G/Y/PTU        | N34        | 121VU |
| /HYD/PRESS/XMTR           | C11        | 49VU  |
| SOL VALVES/G/Y/B/LEAK/TST | N35        | 121VU |
| HYD/QTY/IND               | P35        | 121VU |
| LOW/LVL/IND               | N32        | 121VU |
| HYD POWER/Y               | N30        | 121VU |

| ATA 30          | ICE AND RAIN PROTECTION |       |
|-----------------|-------------------------|-------|
| DESIGNATION     | LOC                     | PANEL |
| PROBES/1/TAT    | Z12                     | 122VU |
| PROBES/2/TAT    | Y15                     | 122VU |
| PROBES/PHC/1    | D03                     | 49VU  |
| PROBES/2/PHC    | Y12                     | 122VU |
| PROBES/PHC/3    | Y16                     | 122VU |
| PROBES/PITOT/1  | D02                     | 49VU  |
| PROBES/2/PITOT  | Y14                     | 122VU |
| PROBES/3/PITOT  | Z16                     | 122VU |
| PROBES/AOA/1    | D04                     | 49VU  |
| PROBES/2/AOA    | Y13                     | 122VU |
| PROBES/3/AOA    | Z15                     | 122VU |
| PROBES/1/STATIC | Z13                     | 122VU |

|                           |     |        |
|---------------------------|-----|--------|
| PROBES/2/STATIC           | Y11 | 122VU  |
| PROBES/3/STATIC           | Z14 | 122VU  |
| PROBES/P2/T2/ENG1         | Z10 | 122VU  |
| PROBES/P2/T2/ENG2         | Y10 | 122VU  |
| RAIN/RPLNT/CAPT           | D01 | 49VU   |
| RAIN/RPLNT/F/O            | W11 | 122VU  |
| WIPER/CAPT                | X12 | 122VU  |
| F/O/WIPER                 | W12 | 122VU  |
| WINDOWS/L                 | X14 | 122VU  |
| WINDOWS/R                 | W14 | 122VU  |
| WHC/1                     | X13 | 122VU  |
| WHC/2                     | W13 | 122VU  |
| WING/MONG                 | C01 | 49VU   |
| WING/CTL                  | C02 | 49VU   |
| ENG/1                     | X10 | 122VU  |
| ENG/2                     | W10 | 122VU  |
| WATER SYSTEM ICE PROT HTR | D07 | 2000VU |
| WATER SYSTEM ICE PROT CTL | D08 | 2000VU |

| ATA 31             | INDICATING / RECORDING |       |
|--------------------|------------------------|-------|
| DESIGNATION        | LOC                    | PANEL |
| CLOCK/NORM/SPLY    | F11                    | 49VU  |
| NAV/DME/1          | G14                    | 49VU  |
| COM NAV/DME/2      | K06                    | 121VU |
| DATA/LOADER/SPLY   | J16                    | 121VU |
| RCDR/DFDR          | K16                    | 121VU |
| CFDS/CFDIU/SPLY    | J18                    | 121VU |
| PTR/SPLY           | J21                    | 121VU |
| AIDS/DMU           | K15                    | 121VU |
| CFDS/CFDIU/BACK/UP | J17                    | 121VU |
| CFDS/TEST PLUG/1   | J19                    | 121VU |
| CFDS/TEST PLUG/2   | J20                    | 121VU |

|                              |     |       |
|------------------------------|-----|-------|
| DMC1/SPLY                    | E11 | 49VU  |
| DMC2/SPLY                    | Q08 | 121VU |
| DMC3/SPLY                    | Q09 | 121VU |
| PFD CAPT/SPLY                | E03 | 49VU  |
| PFD/F/O                      | R03 | 121VU |
| ND CAPT/SPLY                 | E01 | 49VU  |
| ND/F/O                       | R04 | 121VU |
| ECAM DU/UPPER/SPLY           | E05 | 49VU  |
| ECAM DU/LOWER/SPLY           | R11 | 121VU |
| DMC3/STBY/SPLY               | E10 | 49VU  |
| ECAM/CTL/PNL                 | E12 | 49VU  |
| RLY/BOX/CAPT                 | E08 | 49VU  |
| RLY/BOX/F/O                  | R07 | 121VU |
| DMC1/SWTG                    | E09 | 49VU  |
| DMC2/SWTG                    | R08 | 121VU |
| DMC3/SWTG                    | E07 | 49VU  |
| PFD CAPT/SWTG                | E04 | 49VU  |
| PFD/F/O/SWTG                 | R05 | 121VU |
| ND CAPT/SWTG                 | E02 | 49VU  |
| ND/F/O/SWTG                  | R06 | 121VU |
| ECAM DU/UPPER/SWTG           | E06 | 49VU  |
| ECAM DU/LOWER/SWTG           | R10 | 121VU |
| SDAC/2/SPLY                  | Q06 | 121VU |
| SDAC/1/SPLY                  | F04 | 49VU  |
| SDAC/1/26VAC SYNC/AC ESS BUS | F02 | 49VU  |
| SDAC/2/26VAC SYNC/AC ESS BUS | F03 | 49VU  |
| SDAC/1/BUS2/26VAC SYNC AC    | Q03 | 121VU |
| SDAC/2/BUS2/26VAC SYNC AC    | Q02 | 121VU |
| SDAC/1/BUS1/26VAC SYNC AC    | Q04 | 121VU |
| SDAC/2/BUS1/26VAC SYNC AC    | Q05 | 121VU |
| SDAC/1 AND 2/28VDC/ESS BUS   | F05 | 49VU  |
| SDAC1 AND 2/BUS1/28VDC       | P04 | 121VU |

|                            |     |       |
|----------------------------|-----|-------|
| EMER/GEN/REF               | B05 | 106VU |
| SDAC1 AND 2/BUS2/28VDC     | P03 | 121VU |
| SDAC1 AND 2/DOOR/DET/AVNCS | P02 | 121VU |
| SDAC1 AND 2/DOOR/DET/PAX   | P05 | 121VU |
| DC BUS/1 AND 2/MONG        | C03 | 106VU |
| FWC2/SPLY                  | Q07 | 121VU |
| FWC1/SPLY                  | F01 | 49VU  |
| F/O/LOUD/SPKR              | P08 | 121VU |
| CAPT/LOUD/SPKR             | F10 | 49VU  |

| ATA 32                             | LANDING GEAR |       |
|------------------------------------|--------------|-------|
| DESIGNATION                        | LOC          | PANEL |
| LGCIU/SYS1/NORM                    | C09          | 49VU  |
| LGCIU/SYS2                         | Q35          | 121VU |
| LGCIU/SYS1/GRND SPLY               | Q34          | 121VU |
| BRAKING AND STEERING/SYS1/CTL      | M34          | 121VU |
| BRAKE AND STEERING/SYS1/IND &/SPLY | M33          | 121VU |
| BRAKING AND STEERING/SYS2/CTL      | M35          | 121VU |
| BRAKING AND STEERING/SYS2/SPLY     | M36          | 121VU |
| Y BRK/PRESS/IND                    | C10          | 49VU  |
| PARK BRK/CTL/NORM                  | N36          | 121VU |
| PARK BRK/CTL/STBY                  | N37          | 121VU |
| BRK FAN/WHEELS/1 AND 2             | L32          | 121VU |
| BRK FAN/WHEELS/3 AND 4             | L35          | 121VU |
| BRK/FAN/CTL                        | M32          | 121VU |
| BRK/TEMP/DET/UNIT                  | M37          | 121VU |

| ATA 33                  | LIGHTS |       |
|-------------------------|--------|-------|
| DESIGNATION             | LOC    | PANEL |
| EXT LT/NAV1/AND LOGO/LT | T03    | 122VU |
| EXT LT/NAV2/AND LOGO/LT | T02    | 122VU |
| LANDING LT/L/SPLY       | T04    | 122VU |
| LANDING LT/R/SPLY       | T06    | 122VU |

|                                    |     |        |
|------------------------------------|-----|--------|
| LANDING LT/L/CTL                   | T05 | 122VU  |
| LANDING LT/R/CTL                   | T07 | 122VU  |
| EXT LT/RWY TURN OFF/L              | W06 | 122VU  |
| EXT LT/RWY TURN OFF/R              | W05 | 122VU  |
| EMER LT/CKPT/DOME                  | H08 | 49VU   |
| FLOOD/CTR INST/PNL                 | Z04 | 122VU  |
| CKPT/DOME                          | Y06 | 122VU  |
| FLOOD/F/O/SIDE                     | Z06 | 122VU  |
| FLOOD/CAPT/SIDE                    | Z05 | 122VU  |
| ICE AND STBY/COMP/LIGHT            | H04 | 49VU   |
| INSTL LT/OVHD/PNL                  | Y03 | 122VU  |
| INSTL LT/MAIN INST/PNL AND/PED     | Y04 | 122VU  |
| INSTL LT/GLARE/SHLD                | Y05 | 122VU  |
| CABIN LIGHT POWER-WINDOW FWD       | H01 | 2000VU |
| CABIN LIGHT POWER-WINDOW AFT       | H03 | 2000VU |
| CABIN LIGHT POWER-WINDOW AFT       | H04 | 2000VU |
| CABIN LIGHT POWER-WINDOW FWD       | H02 | 2000VU |
| CABIN LIGHT POWER-CEILING AFT      | H07 | 2000VU |
| CABIN LIGHT POWER-CEILING FWD      | H05 | 2000VU |
| CABIN LIGHT POWER-CEILING FWD      | H06 | 2000VU |
| CABIN LIGHT POWER-CEILING AFT      | H08 | 2000VU |
| LIGHT-CABIN ENTRY                  | J04 | 2000VU |
| AIR CONDTN COMPT OUTLET            | B08 | 2000VU |
| LIGHTING/WHL WELL/LTG/OUT          | X07 | 122VU  |
| LIGHTING/WHL WELL/LTG/DOME         | X08 | 122VU  |
| LIGHTING/ANN LT SPLY/XFMR/BUS 1    | X04 | 122VU  |
| LIGHTING/ANN LT SPLY/XFMR/BUS 2    | X05 | 122VU  |
| LIGHTING/ANN LT SPLY/XFMR/STAT INV | X03 | 122VU  |
| LIGHTING/XFMR/115V.5V/ESS BUS      | H03 | 49VU   |
| LIGHTING/TST/BOARD/SPLY            | X06 | 122VU  |
| EXT LT/TAXI AND TAKE OFF/TAXI      | W08 | 122VU  |
| EXT LT/TAXI AND TAKE OFF/CTL       | W09 | 122VU  |
| EXT LT/TAXI AND TAKE OFF/TO        | W07 | 122VU  |
| AVNCS COMPT/DOME                   | Z07 | 122VU  |
| AVNCS COMPT/OUT/28VDC              | Z08 | 122VU  |

|                             |        |        |
|-----------------------------|--------|--------|
| AVNCS COMPT/OUT/115VAC      | Z09    | 122VU  |
| CARGO COMPT LIGHT-FWD / AFT | B04/05 | 2000VU |
| CARGO COMPT LIGHT-LDG AERA  | B06    | 2000VU |
| EXT LT/BEACON/UPPER         | U06    | 122VU  |
| EXT LT/BEACON/LOWER         | U03    | 122VU  |
| WING/STROBE                 | V05    | 122VU  |

| ATA 34                             | NAVIGATION |       |
|------------------------------------|------------|-------|
| DESIGNATION                        | LOC        | PANEL |
| STBY/HORIZON                       | F12        | 49VU  |
| VOR/DME/RMI                        | F13        | 49VU  |
| STBY/ALTM                          | F14        | 49VU  |
| STBY/INST/BAT                      | J01        | 105VU |
| PROBES/ADIRU1/115VAC               | F06        | 49VU  |
| ADIRU/2/115VAC                     | N06        | 121VU |
| ADIRU/2/115VAC                     | N07        | 121VU |
| ADIRU/3/115VAC                     | N05        | 121VU |
| ADIRU/3/115VAC                     | N06        | 121VU |
| NAV PROBES/ADIRU 1/AND AOA 1/26VAC | F07        | 49VU  |
| ADIRU/2/26VAC AND AOA              | N08        | 121VU |
| ADIRU/2/26VAC AND AOA              | N09        | 121VU |
| ADIRU/3/26VAC AND AOA              | N07        | 121VU |
| ADIRS/ADIRU1/28VDC                 | C02        | 105VU |
| ADIRU/2/28VDC                      | N05        | 121VU |
| ADIRS/ADIRU/2/3/28VDC              | N04        | 121VU |
| ADIRU/3/28VDC                      | N03        | 121VU |
| NAV PROBES/ADIRU3/PWR/SWTG         | F09        | 49VU  |
| ADIRU/3PWR/SWTG                    | N09        | 121VU |
| ADIRU/3PWR/2/SWTG                  | N10        | 121VU |
| ADIRU/2PWR/SHED                    | N11        | 121VU |
| NAV/VOR/1                          | G13        | 49VU  |
| COM NAV/VOR/2                      | K08        | 121VU |
| NAV/MMR/1                          | G12        | 49VU  |
| COM NAV/MMR/2                      | L07        | 121VU |



|                    |     |       |
|--------------------|-----|-------|
| COM NAV/MMR/2      | K09 | 121VU |
| COM NAV/RAD ALTM/1 | K11 | 121VU |
| COM NAV/RAD ALTM/2 | K12 | 121VU |
| COM NAV/TCAS       | K10 | 121VU |
| COM NAV/ATC/1      | G11 | 49VU  |
| COM NAV/ATC/2      | K07 | 121VU |
| COM NAV/RADAR/1    | K13 | 121VU |
| EIS/GPWS/28VDC     | P06 | 121VU |
| EIS/GPWS/115VAC    | P07 | 121VU |

| ATA 36                      | PNEUMATICS |       |
|-----------------------------|------------|-------|
| DESIGNATION                 | LOC        | PANEL |
| AIR BLEED/ENG 1/MONG        | D11        | 49VU  |
| AIR BLEED/ENG 1/CTL         | D12        | 49VU  |
| AIR BLEED/ENG 2/MONG        | Z22        | 122VU |
| AIR BLEED/ENG 2/CTL         | Z23        | 122VU |
| AIR BLEED/X FEED VALVE/NORM | Z20        | 122VU |
| AIR BLEED/X FEED/VALVE/BAT  | D13        | 49VU  |

| ATA 47      | FUEL INERT |       |
|-------------|------------|-------|
| DESIGNATION | LOC        | PANEL |
| IGGS/CTLR   | N28        | 121VU |
| CSAS/CTLR   | U17        | 121VU |

| ATA 52                      | DOORS |       |
|-----------------------------|-------|-------|
| DESIGNATION                 | LOC   | PANEL |
| DOORS/CARGO                 | T12   | 122VU |
| DOORS/PAX/MONG              | T13   | 122VU |
| EIS/SLIDES/ARM AND WARN/GND | P10   | 121VU |
| EIS/SLIDES/ARM AND WARN/FLT | P11   | 121VU |

| ATA 70+                            | ENGINE |       |  |
|------------------------------------|--------|-------|--|
| DESIGNATION                        | LOC    | PANEL |  |
| ENG1/REV/LOCK                      | N44    | 121VU |  |
| ENG2/REV/LOCK                      | N45    | 121VU |  |
| ENGINE/ENG1/OIL/QTY                | N39    | 121VU |  |
| ENGINE/ENG2/OIL/QTY                | N41    | 121VU |  |
| ENG1/OIL/PRESS/AND REV SNSR/CHAN A | N40    | 121VU |  |
| ENG2/OIL/PRESS/AND REV SNSR/CHAN A | N42    | 121VU |  |
| ENG1 AND 2/EVMU                    | R44    | 121VU |  |
| ENGINE/1 AND 2/IGN/SYS A           | A03    | 49VU  |  |
| ENGINE/IGN/ENG1/SYS A BAT          | P39    | 121VU |  |
| ENGINE/IGN/ENG2/SYS A BAT          | P40    | 121VU |  |
| ENGINE/IGN/ENG1/SYS B              | P41    | 121VU |  |
| ENGINE/IGN/ENG2/SYS B              | P42    | 121VU |  |
| ENGINE/1/HP FUEL SOV               | A01    | 49VU  |  |
| ENGINE/2/HP FUEL SOV               | A02    | 49VU  |  |
| ENGINE/1/FADEC A/AND EIU 1         | A04    | 49VU  |  |
| ENGINE/2/FADEC A/AND EIU 2         | A05    | 49VU  |  |
| ENGINE/ENG1/FADEC B/AND EIU 1      | R41    | 121VU |  |
| ENGINE/ENG2/FADEC B                | Q40    | 121VU |  |