EXPERIMENTAL

CLATTER 12 compiles, links and runs in Plinky's emulator. It has not run on a Plinky 12. This manual describes the panel as designed and simulated.

MANUAL

CLATTER 12, PAGE BY PAGE AND PAD BY PAD.

Every page of the panel, every pad on it and what it does, the gestures that hold it together, and a crib sheet for each page to keep beside the Plinky. Version 0.0.4-exp. The screenshots are the panel itself, running on the project page.

00 CONTENTS

01 QUICK START
Your first beat in a minute.

02 THE GRID
Rows, row 15, side buttons, kinds of control, colour.

03 TEMPO
Row 15 · Pad 8 · Every Page

04 SEQ
Page 1 · Row 15 Pad 0

05 SOUND
Page 2 · Row 15 Pad 1

06 GEN
Page 3 · Row 15 Pad 2

07 MIX
Page 4 · Row 15 Pad 3

08 FX
Page 5 · Row 15 Pad 4

09 PERFORM
Page 6 · Row 15 Pad 5

10 REPEAT
Page 7 · Row 15 Pad 6

11 SAVE
Page 8 · Row 15 Pad 7

01 QUICK START

1. **Press PLY** (row 15, the last pad). A pattern plays. **STP** next to it stops.
2. **Tap a dark pad** on SEQ's rows 0-6 to put a step in: the harder you press, the louder it is. Tap it again to take it out.
3. **Hold a lit step** and tap the rows under the steps: a ratchet on row 8, a condition on row 9, a flam or roll on row 10.
4. **Tap TMP** (row 15, pad 8) in time to set the tempo, or **hold** it for the tempo overlay.
5. **Change page** with row 15's first eight pads: SEQ, SND, GEN, MIX, FX, PRF, RPT, SAV. On GEN, **NEW KIT** (row 12) designs a whole new kit.
6. Go to **PRF** and hold pads: kills, throws, fills, stutters. Let go and the beat is back. **UND** undoes almost anything.

UNVERIFIED

Nothing here has run on a Plinky 12. The manual describes the firmware as it behaves in its simulator and on the project page.

02 THE GRID

The grid is the instrument: a 16 × 16 field of pressure-sensitive pads, eight pages, and nothing more than one touch deep. No menus and no shift layers; the one overlay is the tempo's, and it lasts only while its pad is held. Throughout this manual **rows** are numbered 0 to 15 from the top and **pads** 0 to 15 from the left, as the firmware counts them.

ROW 15: THE SAME ON EVERY PAGE



ROW	PADS	CONTROL	WHAT IT DOES
15	0-7	PAGES NAVIGATION	SEQ, SOUND, GEN, MIX, FX, PERFORM, REPEAT, SAVE. The page shown is lit white. Audio never stops; a pad held on the page you leave is let go, and what LATCH holds keeps going.
15	8	TMP TAP · HOLD	Tap tempo; hold for the tempo overlay. Flashes on the beat. See TEMPO.
15	9-11	(THE PAGE'S OWN)	SEQ: GEN, MUT, CLR. PERFORM: LAT, CMT, REL. REPEAT: LAT, REL.
15	12	UND TAP	Undo: steps, generated or mutated patterns, kits and sounds, parameter edits, clears, length, copies and COMMITs. Edits of one kind close together undo as one. Sixteen levels.
15	13	RED TAP	Redo what UNDO took back.
15	14	STP TRANSPORT	Stop Plinky's transport, and the sequencer with it.
15	15	PLY TRANSPORT	Start or stop.

PLINKY'S SIDE BUTTONS

BUTTON	WHAT IT DOES
Left, top / bottom	Tempo up / down; hold to repeat. The same clock as TMP.
Right, top / bottom	Previous / next page. Up from SEQ is the panel settings page, which shows the audio core's load (DSP).

KINDS OF CONTROL

Every pad is one of six kinds, and it looks like its kind. The project page's readout names the kind of any pad you hover.

KIND	LOOKS LIKE	EXAMPLES
MOMENTARY · HOLD	Dim at rest, its colour while held, white-tinted while LATCH holds it.	PERFORM, beat repeat, note repeat, freezes, nudge
TOGGLE	Lit when on.	Mute, solo, lock, LATCH, FX ENGINE, ROUTE, QUANTISE
CHOICE	The chosen one bright, the others faint.	Variation, ratchet, roll, curve, rate, bank
CONTINUOUS	A bar with – and + at its end (hold to repeat).	SOUND rows, FX rows, GEN density
HOLD 0.5 S · DESTRUCTIVE	Dark red, filling with red as it is held. Undoable.	CLR, COMMIT
DISPLAY	Does nothing when touched.	Meters, playhead, the bar's step, the seed


COLOUR

Seven track hues, always in the same order: DRUM 1 DRUM 2 DRUM 3 SNARE CYMBAL CL HAT OP HAT. Brightness is velocity or level; white is the page shown, the selected step and the playhead. On the performance pages: kill red, delay amber, reverb violet, freeze ice blue, fill green, mutation teal, stutter and beat repeat magenta, scenes gold, LATCH blue, density blue (thinner) to orange (busier).

03 TEMPO

ROW 15 · PAD 8 · EVERY PAGE

The **TMP** pad sits on row 15 of every page. **Tap** it in time to set the tempo; **hold** it to open the tempo overlay over rows 0 to 14, for as long as you hold it. It flashes on each beat. There is one clock: every change is Plinky's own tempo, the same one the left side buttons move, and the sequencer follows it.

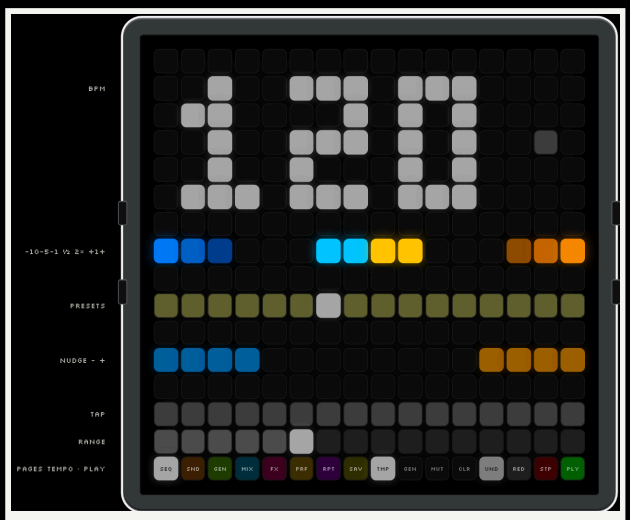

TEMPO


THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
15	8	**TMP: TAP** TAP	Tap tempo from the second tap (the average of the last up to three intervals). A 2 second pause starts a new count.
15	8	**TMP: HOLD** MOMENTARY	Hold for 0.3 s: the tempo overlay replaces rows 0-14 while held. Let go and the page comes back.
1-5	0-12	**BPM** DISPLAY	The tempo in pad digits. Amber after a tap tempo.
3	14	**BEAT** DISPLAY	Flashes on each beat.
7	0-2	**-10 -5 -1** TAP	Coarse and fine steps down. The sequencer keeps whole BPM, so 1 is the finest step.
7	6-7	**HALF TIME** TAP	Halve the tempo.
7	8-9	**DOUBLE TIME** TAP	Double the tempo (at most 300).
7	13-15	**+1 +5 +10** TAP	Fine and coarse steps up.
9	0-15	**PRESETS** TAP	Go straight to 70 80 90 100 110 115 120 124 128 132 136 140 150 160 170 174 BPM.
11	0-3	**NUDGE SLOWER** MOMENTARY	While held, about 4 % slower, to pull the beat into line with something else. Let go: back to the tempo.

ROW	PADS	CONTROL	WHAT IT DOES
11	12-15	NUDGE FASTER MOMENTARY	While held, about 4 % faster.
13	0-15	TAP TAP	Tap the beat on any pad of the row.
14	0-15	TEMPO RANGE DISPLAY	Where the tempo sits between 30 and 300 BPM.

A tempo change applies from the next LXR block and never moves the play position. Ratchets, repeats and the delay's time all follow it. Hold TMP with one hand and tap the overlay with the other: it is a two-handed gesture, like holding a step to edit it.

CRIB SHEET TEMPO

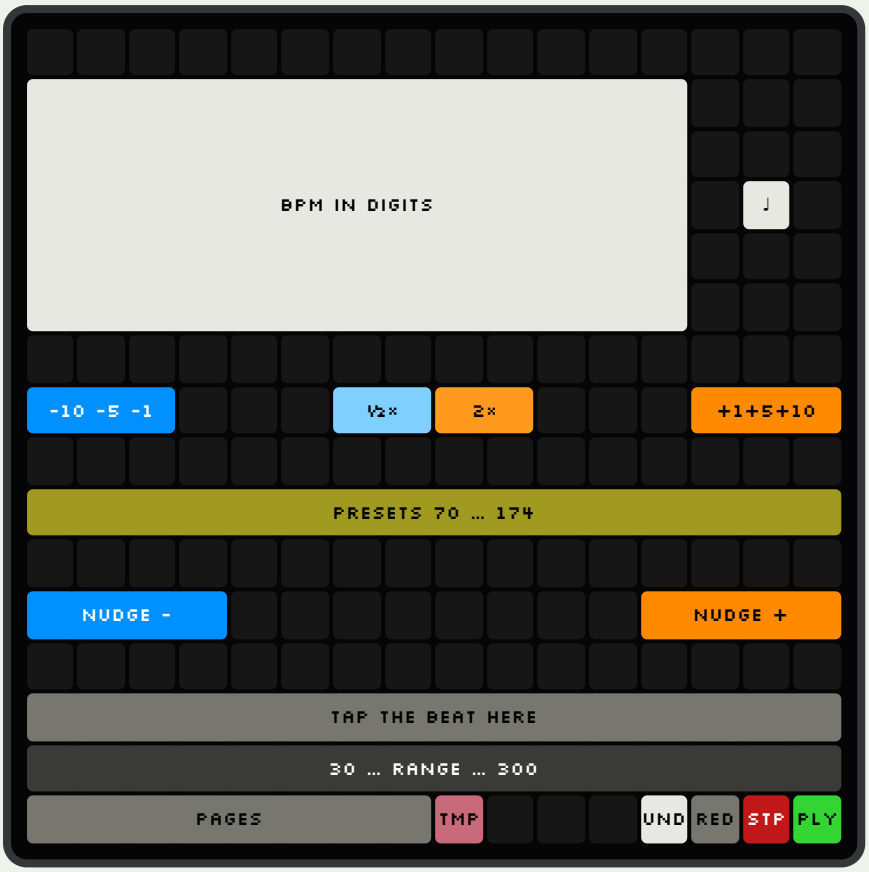

TEMPO: the pads, row 0 at the top

KEY MOVES

Tap TMP in time	tap tempo (from the 2nd tap)
Hold TMP	overlay, while held
Hold TMP + row 7	±1 / ±5 / ±10, ½×, 2×
Hold TMP + row 9	jump to a preset BPM
Hold TMP + hold row 11	nudge ±4 % while held
Left side buttons	tempo up / down (hold repeats)


ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15

04 SEQ

PAGE 1 · ROW 15 PAD 0

The sequencer: seven LXR triggers by 16 steps, up to 64 steps in four views. Tap to put a step in, tap to take it out, **hold** a step to edit it with the rows below. Brightness is velocity; a step tinted towards white carries a variation, condition or ratchet.

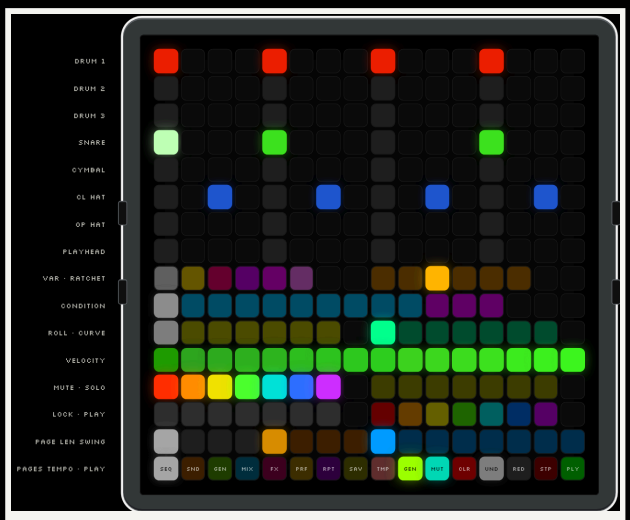

SEQ

THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
0-6	0-15	STEPS STEP PAD	One row per track: DRUM 1, DRUM 2, DRUM 3, SNARE, CYMBAL, CL HAT, OP HAT. The 16 steps of the view shown on row 14.
7	0-15	PLAYHEAD DISPLAY	The step playing now.
8	0-5	VARIATION CHOICE	NONE, A, B, SECOND SOUND, SECOND SOUND A, SECOND SOUND B: the same LXR voice with its parameters moved for that hit. Every track has A and B; DRUM 3 and SNARE also have a second sound (percussion, clap).
8	8-13	RATCHET CHOICE	1x 2x 3x 4x 6x 8x: strokes within the step (32nds, 32nd triplets, 64ths, 64th triplets, 128ths). Never closer than 12 ms, so at fast tempos 8x plays 6 or 4.
9	0-12	CONDITION CHOICE	ALWAYS · 1:2 2:2 · 1:3 2:3 3:3 · 1:4 2:4 3:4 4:4 · 25 % 50 % 75 %. Passes are counted from PLAY: 1:2 plays on the first of every two, 2:2 on the second.
10	0-6	ROLL CHOICE	NONE, FLAM, DRAG, DOUBLE, TRIPLE, ACCELERATING, DECELERATING. Flams and drags play ahead of the step, so the hit stays on the beat.
10	8-14	CURVE CHOICE	How a ratchet's or roll's strokes run: FLAT, FADE IN, FADE OUT, ACCENT FIRST, ACCENT LAST, ALTERNATING, HUMAN.
11	0-15	VELOCITY CHOICE	Sixteen levels, 8 to 127: set the selected step's velocity exactly.
12	0-6	MUTE TOGGLE	Mute a track: its steps do not reach the voice and its sound is cut. Dark when muted.

ROW	PADS	CONTROL	WHAT IT DOES
12	8-14	SOLO TOGGLE	Only soloed tracks are heard.
13	0-6	LOCK TOGGLE	Lock a track's rhythm: GENERATE and MUTATE leave it alone.
13	8-14	PLAY AUDITION	Play the voice now, as loud as you press.
14	0-3	VIEW 1-16 … 49-64 CHOICE	Show that page of steps. Hold one and tap another to copy it there.
14	4-7	LENGTH CHOICE	16, 32, 48 or 64 steps play.
14	8-15	SWING CHOICE	50 54 57 61 64 68 71 75 %: 50 is straight, 75 dotted.
15	9	GEN TAP	A new pattern in the GEN page's style, density and complexity. Locked tracks stay.
15	10	MUT TAP	Musical edits to the unlocked tracks, at the GEN page's mutation strength.
15	11	CLR HOLD · DESTRUCTIVE	Hold half a second to clear every step. UNDO brings them back.

STEPS: TAP, HOLD, EDIT

GESTURE	RESULT
Tap an empty step	On, as loud as you press, and selected. Stopped, it plays.
Tap a lit step	Off (released within 0.3 s), with everything it carried.
Hold a lit step	It stays on and is selected; rows 8-11 show and change it. Pressure re-takes its velocity until you touch an editor pad.
Hold a step, tap an editor pad	The edit applies; the step keeps its velocity, so a light hold does not quieten an accent.
Hold several steps, tap an editor pad	All of them change together.
After letting go	The step stays selected: the editor rows keep acting on it.
Hold a VIEW pad, tap another	Copy that page of steps onto the other.

ROLLS

ROLL	WHAT PLAYS
FLAM	One soft grace note about a 64th before the hit (15-35 ms), played ahead of the step.
DRAG	Two grace notes a 128th apart before the hit: a ruff.
DOUBLE	Two strokes in the step, the second a little softer.
TRIPLE	Three strokes, 100 / 72 / 86 %.

ROLL	WHAT PLAYS
ACCELERATING	Strokes closing in over two steps, rising. The ratchet count sets how many (6 if under 3).
DECELERATING	Strokes spreading out over two steps, falling away.

Stopped, every ratchet, roll and curve pad plays the selected step as it now sounds, so you can hear a choice as you make it.

CRIB SHEET SEQ



SEQ: the pads, row 0 at the top

KEY MOVES

Tap empty step	on, velocity = pressure
Tap lit step	off
Hold lit step + rows 8-11	edit it (several at once)
Row 14 VIEW hold + tap	copy a page of steps
GEN / MUT (row 15)	new pattern / mutate
Hold CLR 0.5 s	clear all (UNDO restores)
PLY	start / stop


ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15

05 SOUND

PAGE 2 · ROW 15 PAD 1

Every LXR parameter of one voice, a row each, its value across the row. Three banks, SOURCE, SHAPE and MOD. Changes are heard at once; stopped, the voice plays as you edit (at most every 150 ms), so you can shape a sound without a pattern running.

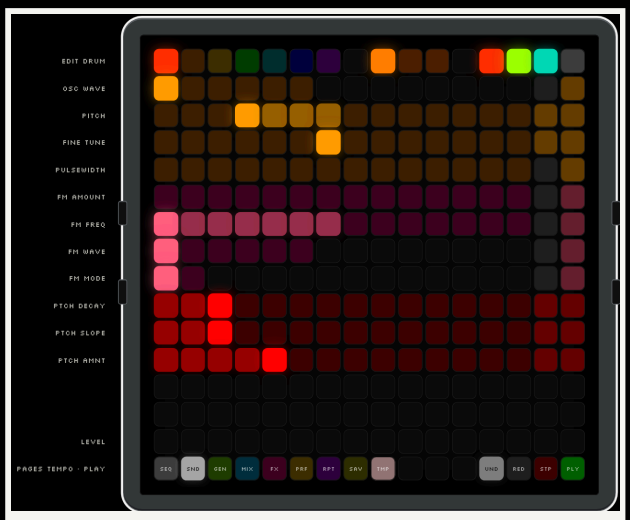

SOUND

THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
0	0-6	EDIT CHOICE	Choose the voice to edit: DRUM 1, DRUM 2, DRUM 3, SNARE, CYMBAL, CL HAT, OP HAT. The two hats are one LXR voice.
0	8-10	BANK CHOICE	SOURCE: oscillator, noise, modulators, FM, pitch envelope. SHAPE: amplitude envelope, transient, filter, drive. MOD: LFO, velocity, volume, pan, sample rate.
0	12	AUDITION AUDITION	Play the voice, as loud as you press, without leaving the page.
0	13	NEW SOUND TAP	Design a new sound for this voice, of the same family as the kit (CLATTER's kit designer).
0	14	MUTATE SOUND TAP	Move this voice towards another sound the designer draws for it, by the GEN page's MUTATION AMOUNT.
0	15	LOCK SOUND TOGGLE	Locked, the voice keeps every parameter through NEW KIT and MUTATE KIT.
1-13	0-13	PARAMETER CONTINUOUS	Tap to set the value, left (0) to right (max). Bipolar values (pitch, pan) run from the centre. Menus (waves, filter types, transients) show one pad per option.
1-13	14	– CONTINUOUS	One step down; hold to repeat.
1-13	15	+ CONTINUOUS	One step up; hold to repeat.

ROW	PADS	CONTROL	WHAT IT DOES
14	0-6	LEVELS DISPLAY	Each voice's level as it plays.

WHAT EACH BANK HOLDS

VOICE	SOURCE	SHAPE
DRUM 1-3	OSC WAVE, PITCH, FINE TUNE, PULSEWIDTH, FM AMOUNT, FM FREQ, FM WAVE, FM MODE, PITCH DECAY, PITCH SLOPE, PITCH AMOUNT	ATTACK, DECAY (hats: CLOSED and OPEN DECAY), AMP SLOPE, REPEAT (snare, cymbal), DRIVE, TRANSIENT WAVE, LEVEL and PITCH, CUTOFF, RESONANCE, FILTER TYPE, FILTER DRIVE
SNARE	OSC WAVE, PITCH, FINE TUNE, PULSEWIDTH, NOISE FREQ, NOISE MIX, PITCH DECAY, PITCH SLOPE, PITCH AMOUNT	
CYMBAL	OSC WAVE, PITCH, FINE TUNE, PULSEWIDTH, MOD1 WAVE, FREQ and AMOUNT, MOD2 WAVE, FREQ and AMOUNT	
HI-HAT		

MOD is the same for every voice: LFO RATE, SYNC, DEPTH, WAVE, RETRIGGER and PHASE, VELOCITY AMOUNT, VELOCITY TO VOLUME, VOLUME, PAN, SAMPLE RATE. The two TARGET parameters (LFO target, velocity destination) are not on the grid: their values name other parameters. Hover a row on the project page to read the parameter's name and value.

CRIB SHEET SOUND



SOUND: the pads, row 0 at the top

KEY MOVES

Row 0 x0-6	pick the voice
Row 0 x8-10	SOURCE / SHAPE / MOD
Tap a row	set that parameter
– / + (x14, x15)	fine step, hold repeats
AUD (x12)	hear it, pressure = velocity
NEW / MUT (x13, x14)	new or mutated sound
LCK (x15)	keep it through new kits


ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15

06 GEN

PAGE 3 · ROW 15 PAD 2

CLATTER's pattern generator on the top half, its kit designer on the bottom. Every result is a new design, not a preset: NEW KIT draws a new seed each time. Locks keep what you like. Everything here is undoable.

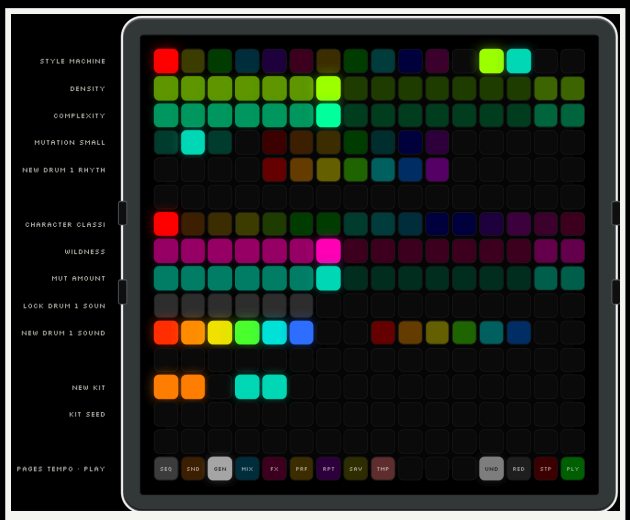

GEN


THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
0	0-10	STYLE CHOICE	MACHINE, ELECTRO, BREAKS, JUNGLE, HALFTIME, BROKEN, GARAGE, INDUSTRIAL, GLITCH, POLYMETER, DUB: the rhythm style GENERATE writes in.
0	12	GENERATE TAP	A new pattern: style, density and complexity as set, locked tracks kept.
0	13	MUTATE TAP	Edit the pattern musically, at the mutation strength.
1	0-15	DENSITY CONTINUOUS	How busy a new pattern is (50 is the style as written). Raising it adds hits to the same rhythm. – and + at x14-15.
2	0-15	COMPLEXITY CONTINUOUS	How unpredictable a new pattern is.
3	0-2	MUTATION CHOICE	SMALL, MEDIUM, LARGE: how much MUTATE changes.
3	4-10	LOCK TOGGLE	A locked track keeps its rhythm through GENERATE and MUTATE (the same locks as SEQ row 13).
4	4-10	NEW RHYTHM TAP	Generate this one track alone; again for another take.
6	0-15	KIT CHARACTER CHOICE	CLASSIC, ANALOG, DIGITAL, INDUSTRIAL, MINIMAL, GLITCH, TECHNO, ELECTRO, DUB, NOISE, METALLIC, SOFT, BROKEN, ACID, LO-FI, CHAOS.
7	0-15	WILDNESS CONTINUOUS	How far new and mutated sounds stray from the character: 50 as written; higher lets voices become other archetypes.

ROW	PADS	CONTROL	WHAT IT DOES
8	0-15	MUTATION AMOUNT CONTINUOUS	How far MUTATE KIT and MUTATE SOUND move a sound.
9	0-5	LOCK SOUND TOGGLE	DRUM 1, DRUM 2, DRUM 3, SNARE, CYMBAL, HI-HAT: a locked sound keeps every parameter through NEW KIT and MUTATE KIT.
10	0-5	NEW SOUND TAP	Design a new sound for this voice alone.
10	8-13	MUTATE SOUND TAP	Move this voice by the mutation amount.
12	0-1	NEW KIT TAP	A whole new kit of the chosen character: every unlocked voice. UNDO returns to the last one.
12	3-4	MUTATE KIT TAP	Move every unlocked voice by the mutation amount.
13	0-15	KIT SEED DISPLAY	The current kit's seed, in binary.

Mutation moves a voice towards another sound the designer draws for it. Menus (waveforms, filter types) switch with a chance that grows with the amount, and bring their companions with them, so a mutation stays inside what the designer makes. The SEQ page's GEN and MUT pads (row 15) use the style, density, complexity and strength set here.

CRIB SHEET GEN

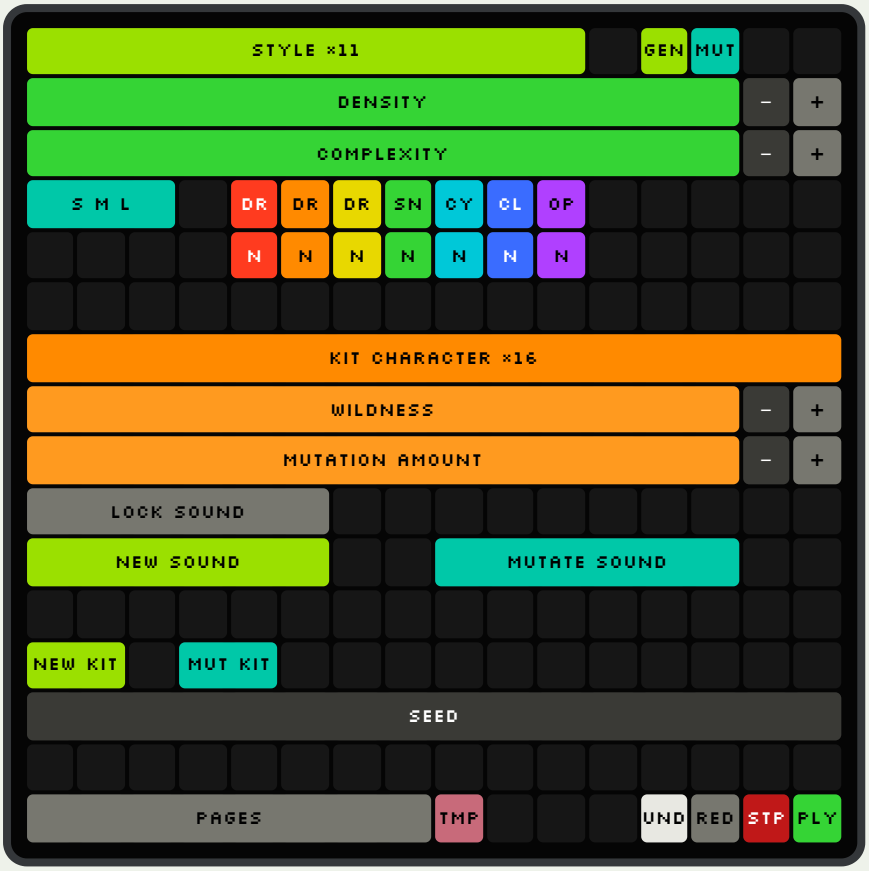

GEN: the pads, row 0 at the top

KEY MOVES

Row 0	style, then GEN or MUT
Rows 1-2	density, complexity
Row 3 / 4	lock a track / new rhythm for one
Row 6	kit character
Row 12 NEW KIT	a brand-new kit
Row 9	lock sounds you like
UND (row 15)	back to the last kit or pattern


ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15

07 MIX

PAGE 4 · ROW 15 PAD 3

Eight channel strips, two pads wide: the seven tracks (pads 0-1 DRUM 1, 2-3 DRUM 2 … 12-13 OP HAT) and the master at pads 14-15. All of it is real audio: CLATTER 12 mixes the LXR's voices itself.

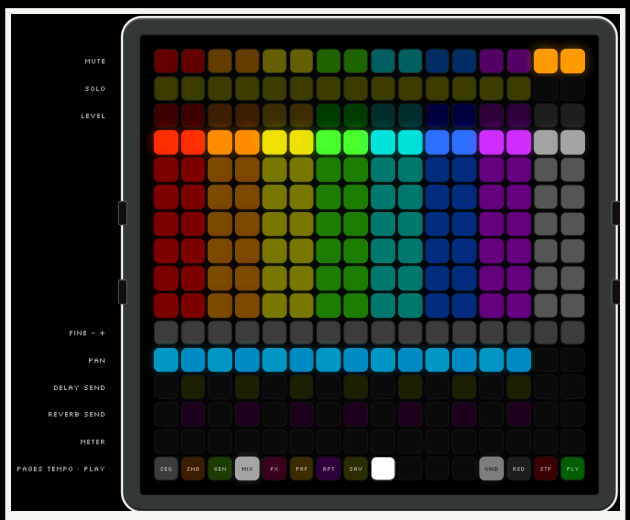


MIX

THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
0	BOTH	MUTE TOGGLE	Mute the track. Master strip: the LIMITER, on or off (on, nothing reaches full scale: no clipping).
1	BOTH	SOLO TOGGLE	Solo the track (not on the master).
2-9	BOTH	LEVEL CHOICE	Tap a row: 115 (+2.4 dB), 100 (unity), 90, 78, 65, 50 (−12 dB), 30, off.
10	LEFT / RIGHT	LEVEL − / + CONTINUOUS	Fine level adjustment.
11	LEFT / RIGHT	PAN CONTINUOUS	Move the voice left or right (the LXR's own pan, applied as each hit starts). Both pads at once: centre.
12	LEFT / RIGHT	DELAY SEND − / + CONTINUOUS	How much of the track goes to the delay: CLATTER 12's (FX page, SPACE), or Plinky's own with FX ENGINE set to PLINKY. Post-fader, 8 steps of 16.
13	LEFT / RIGHT	REVERB SEND − / + CONTINUOUS	How much of the track goes to the reverb.
14	BOTH	METER DISPLAY	The track's level as it plays.

A level is a gain with a short ramp; a mute holds the track's triggers back and cuts its voice. The two hats are one LXR voice: its level and pan follow whichever hat track last played it.

CRIB SHEET MIX

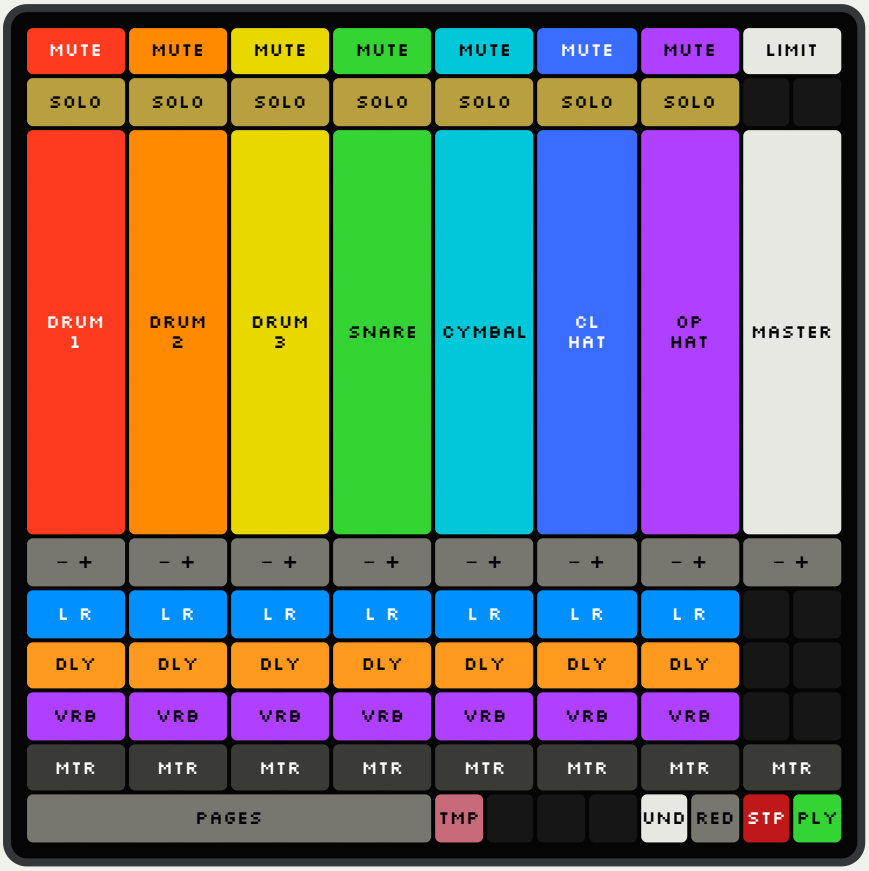

MIX: the pads, row 0 at the top

KEY MOVES

Row 0 / 1	mute / solo (master: limiter)
Rows 2-9	fader: 115 100 90 78 65 50 30 off
Row 10	fine level – +
Row 11	pan L / R, both = centre
Rows 12 / 13	delay / reverb send – +
Pads 14-15	the master strip


ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15


08 FX

PAGE 5 · ROW 15 PAD 4

Two banks, chosen on row 0. **SPACE** is CLATTER 12's own delay and reverb, fed by the MIX page's sends. **COLOUR** is the LXR-02 firmware's own drive, ring modulator and compressor on the tracks you route, plus bit and sample-rate reduction. At wet 0 an effect is off and costs nothing.

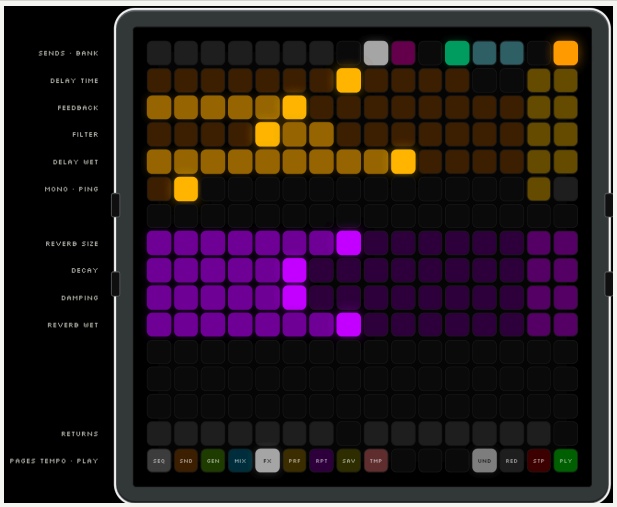

FX · SPACE BANK

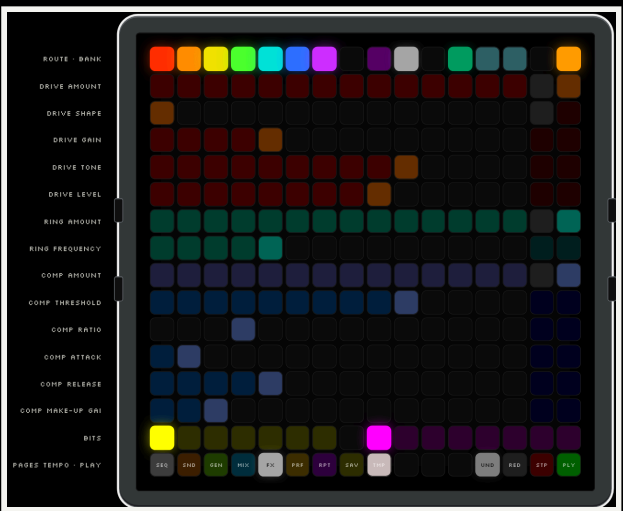

FX · COLOUR BANK

THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
0	0-6	SENDS / ROUTE DISPLAY / TOGGLE	SPACE: each track's delay (amber) and reverb (violet) sends, as set on MIX. COLOUR: ROUTE, whether the track goes through the COLOUR chain.
0	8	SPACE CHOICE	Show the delay and reverb bank.
0	9	COLOUR CHOICE	Show the drive, ring modulator and compressor bank.
0	11	FX ENGINE TOGGLE	Where the sends go. CLATTER 12 (green): its own delay and reverb, set here. PLINKY (yellow): Plinky's own, set in Plinky's mix settings; the SPACE rows then do nothing.

ROW	PADS	CONTROL	WHAT IT DOES
0	12	DELAY FREEZE MOMENTARY	While held, the delay loops what it holds and takes nothing new. Let go: it decays.
0	13	REVERB FREEZE MOMENTARY	While held, the reverb tail stops decaying. Let go: it fades.
0	15	LIMITER TOGGLE	The output limiter on or off.

SPACE BANK

ROW	PADS	CONTROL	WHAT IT DOES
1	0-11	DELAY TIME CHOICE	1/32, 1/16T, 1/16, 1/8T, 1/16D, 1/8, 1/4T, 1/8D, 1/4, 1/2T, 1/4D, 1/2, at the tempo (it follows tempo changes, gliding). Longer than 1.48 s, it halves. – + at x14-15.
2	0-15	DELAY FEEDBACK CONTINUOUS	How much of each echo comes round again: 0 one echo, 100 a long trail (never runaway).
3	0-15	DELAY FILTER CONTINUOUS	In the loop, so each repeat is filtered again: left of centre low-pass (darker), right high-pass (thinner), centre open.
4	0-15	DELAY WET CONTINUOUS	The delay's return level.
5	0-1	MONO / PING-PONG CHOICE	Every echo in the middle, or alternating left and right.
7	0-15	REVERB SIZE CONTINUOUS	The room's size.
8	0-15	REVERB DECAY CONTINUOUS	How long the tail rings: 0.3 s at 0 to 8 s at 100.
9	0-15	REVERB DAMPING CONTINUOUS	How fast the tail loses its top: bright at 0, dark at 100.
10	0-15	REVERB WET CONTINUOUS	The reverb's return level.
14	0-6 / 8-14	RETURNS DISPLAY	The delay's and the reverb's levels as they sound.


COLOUR BANK

ROW	PADS	CONTROL	WHAT IT DOES
1-5	0-15	DRIVE CONTINUOUS	AMOUNT (wet), SHAPE (TUBE, FOLD, RAT), GAIN, TONE, LEVEL.
6-7	0-15	RING MOD CONTINUOUS	AMOUNT (wet), FREQUENCY.
8-13	0-15	COMPRESSOR CONTINUOUS	AMOUNT (wet), THRESHOLD, RATIO (1:1 2:1 3:1 4:1 6:1 8:1), ATTACK, RELEASE, MAKE-UP GAIN.

ROW	PADS	CONTROL	WHAT IT DOES
14	0-6	BITS CHOICE	16 (off), 12, 10, 8, 6, 5, 4: bit reduction of the whole mix.
14	8-15	SAMPLE RATE CHOICE	127 (full), 100, 80, 60, 45, 32, 20, 10: the LXR's own sample-rate reduction of every voice.

Every continuous row is a bar: tap a pad to set it, – and + at pads 14 and 15 for single steps (hold to repeat). The freezes are also on the PERFORM page, where LATCH can hold them. Projects saved by version 0.0.2 load with FX ENGINE on PLINKY, as they sounded then.

CRIB SHEET FX

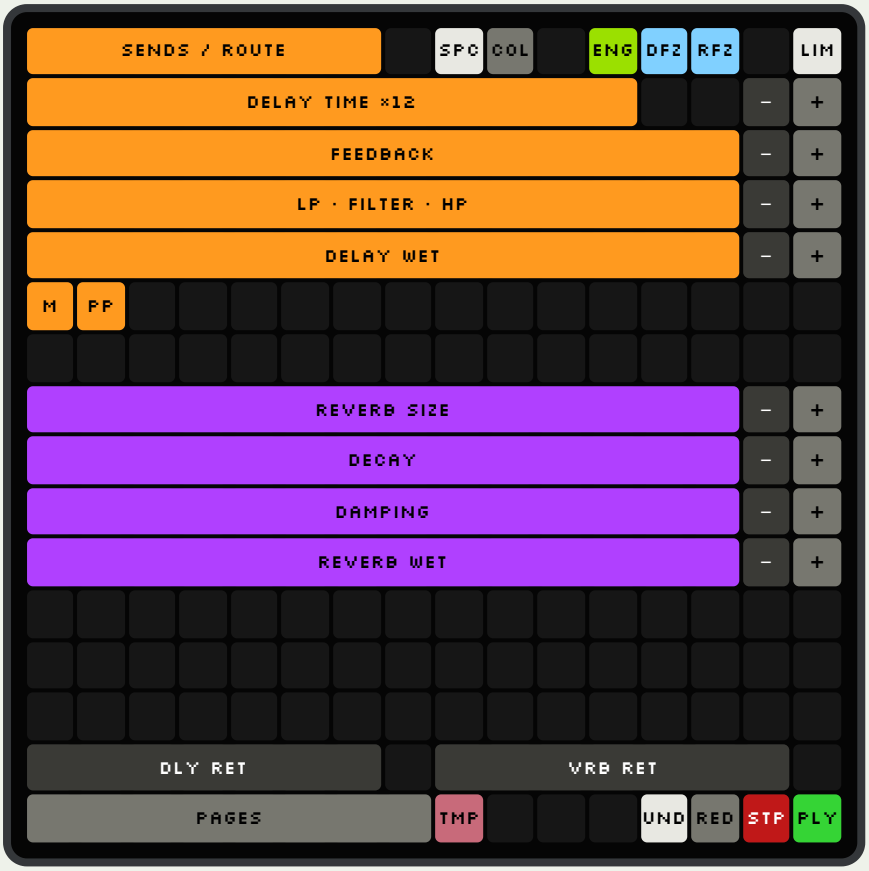

SPACE bank. COLOUR: rows 1-5 drive, 6-7 ring mod, 8-13 compressor, 14 bits | sample rate.

KEY MOVES

Row 0 x8 / x9	SPACE / COLOUR bank
Row 0 x11	FX ENGINE: CLATTER 12 or PLINKY
Hold x12 / x13	freeze delay / reverb
SPACE rows 1-5	delay: time, fdbk, filter, wet, ping
SPACE rows 7-10	reverb: size, decay, damp, wet
COLOUR row 0	route tracks to drive/ring/comp
MIX rows 12-13	how much each track sends


ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15

09 PERFORM

PAGE 6 · ROW 15 PAD 5

Everything here is **temporary**: it lasts while the pad is held and leaves the pattern, kit and mixer alone. **LATCH** makes a tap hold instead; **COMMIT** writes what you are hearing into the pattern; **UNDO** takes it back.

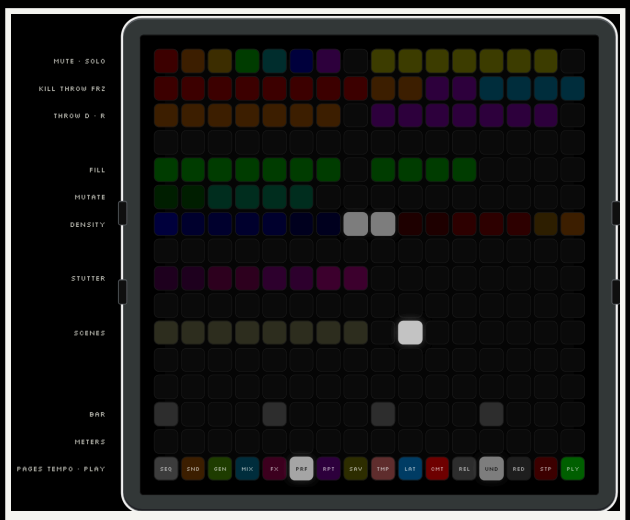

PERFORM

THE PADS


ROW	PADS	CONTROL	WHAT IT DOES
0	0-6	MUTE MOMENTARY	Silent while held. The mixer's own mute is untouched (COMMIT makes it one).
0	8-14	SOLO MOMENTARY	Only this track (and other held solos) while held.
1	0-7	KILL LOW · MID · HIGH · ALL MOMENTARY	Two pads each: DRUM 1-2, DRUM 3 and SNARE, CYMBAL and hats, everything. Cut at once while held; delay and reverb tails ring on.
1	8-9	DELAY THROW (ALL) MOMENTARY	Every track's delay send at full while held: let go and the echoes trail off.
1	10-11	REVERB THROW (ALL) MOMENTARY	Every track's reverb send at full while held.
1	12-13	DELAY FREEZE MOMENTARY	The delay loops what it holds.
1	14-15	REVERB FREEZE MOMENTARY	The reverb tail holds still.
2	0-6	DELAY THROW MOMENTARY	One track's delay send at full while held.
2	8-14	REVERB THROW MOMENTARY	One track's reverb send at full while held.
4	0-6	FILL MOMENTARY	The track fills its gaps, more and louder towards the end of the bar, the last steps ratcheting.

ROW	PADS	CONTROL	WHAT IT DOES
4	8-9	FILL DRUMS MOMENTARY	DRUM 2, DRUM 3 and SNARE fill.
4	10-11	FILL ALL MOMENTARY	Every track fills.
5	0-5	MUTATE S · M · L MOMENTARY	Two pads each: a mutation of the pattern plays while held (locked tracks kept), a new one each press.
6	0-15	DENSITY MOMENTARY	Pads 0-6 thinner (soft hits drop first), 7-8 as written, 9-15 busier (ghost notes in the gaps).
8	0-7	STUTTER MOMENTARY	Two pads each: 1/8, 1/16, 1/32, 1/32T. The step just played repeats at this rate; let go and the sequence is where it would have been. Shape and tracks: REPEAT row 10.
10	0-7	SCENES 1-8 TAP · HOLD 1 S	Tap: recall the scene at the next bar (at once when stopped). Hold one second: store the present into it.
10	9	QUANTISE TOGGLE	Whether a scene waits for the next bar or changes at once.
13	0-15	STEP IN THE BAR DISPLAY	Where the sequence is in its bar: for timing a throw, a fill or a scene.
14	0-6, 8, 10-11	METERS DISPLAY	Tracks, output, delay and reverb returns.
15	9	LAT TOGGLE	LATCH. Off: a pad lasts while held. On: a tap holds it until tapped again. Turning it off lets everything go. Shared with REPEAT.
15	10	CMT HOLD · DESTRUCTIVE	COMMIT. Hold half a second: the mutation, fill or density is written into the pattern, mutes and solos into the mixer; then everything is released. Throws, freezes and stutters are moments and are not written.
15	11	REL TAP	RELEASE ALL: let go of everything LATCH holds.

A **scene** is a snapshot of the mixer (levels, mutes, solos, sends, routing, master) and every FX setting. Recalled on the bar, the bar's first hit is already in the new scene. CLATTER 12 has one pattern and one kit, so a scene does not change them. Scenes are saved with the project.

CRIB SHEET

PERFORM

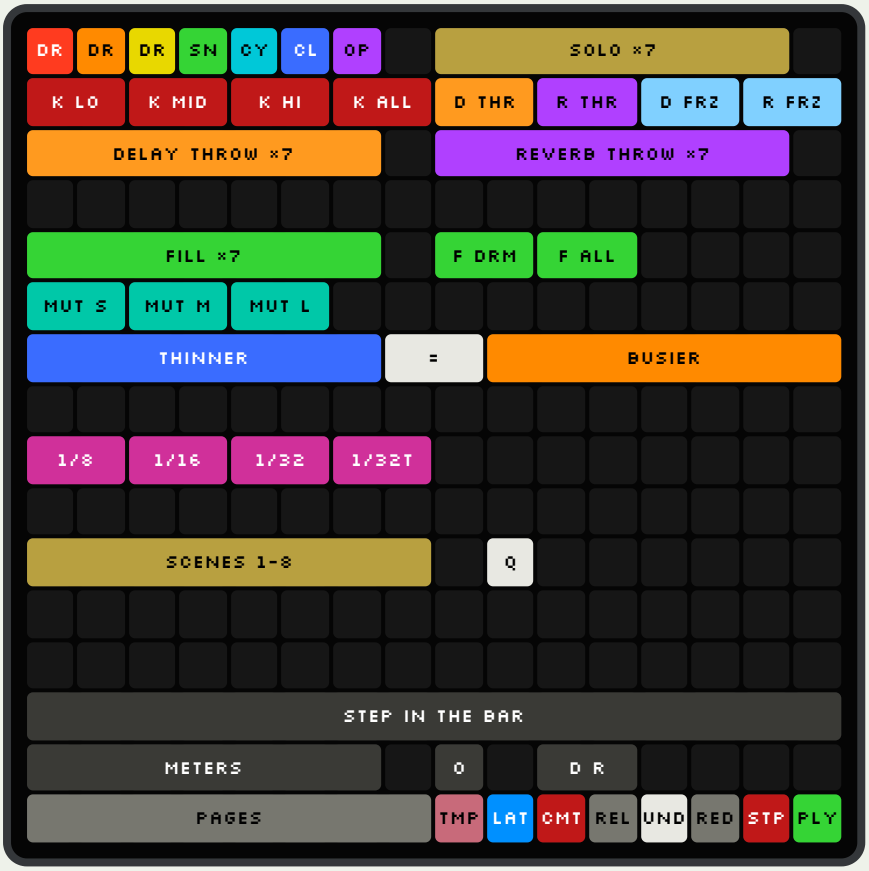

PERFORM: the pads, row 0 at the top

KEY MOVES

Hold any pad	it lasts while held
LAT, then tap	it stays on; tap again to end
REL	let go of everything latched
Hold CMT 0.5 s	write it into the pattern
Tap a scene	recall at the next bar
Hold a scene 1 s	store the mixer and FX
UND	undo a COMMIT


ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15

10 REPEAT

PAGE 7 · ROW 15 PAD 6

Note repeat, rolls by hand and beat repeat. Hold a track's pad and it strikes in time; press harder for louder, faster or more often. Like PERFORM, its pads are momentary and LATCH holds them.

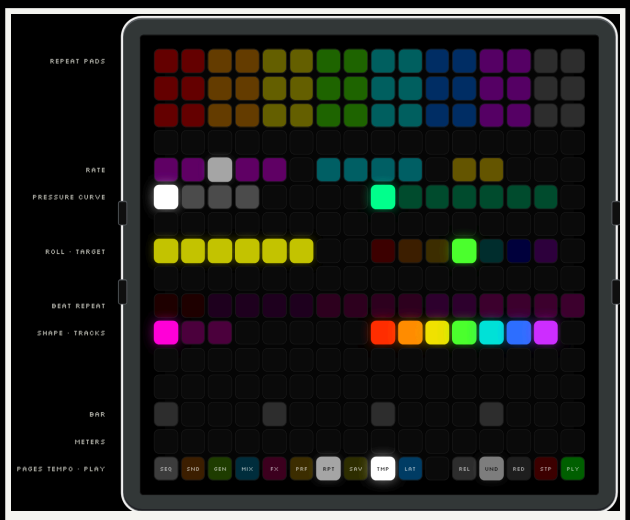

REPEAT


THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
0-2	0-13	**REPEAT** MOMENTARY	A track each, two pads wide (DRUM 1 at 0-1 … OP HAT at 12-13). Hold to strike the voice on the RATE's grid: the first at once, then in time with the sequence. Several at once. It also makes this track the roll target.
0-2	14-15	**PRESS VELOCITY** DISPLAY	The velocity your press gives the repeats.
4	0-4	**RATE STRAIGHT** CHOICE	1/4, 1/8, 1/16, 1/32, 1/64 (violet).
4	6-9	**RATE TRIPLET** CHOICE	1/4T, 1/8T, 1/16T, 1/32T (cyan).
4	11-12	**RATE DOTTED** CHOICE	1/8D, 1/16D (amber). Never faster than one strike in 10 ms.
5	0-3	**PRESSURE** CHOICE	VELOCITY: harder is louder (45-127, the default). RATE: harder is faster (2× past a firm press, 4× past a hard one). CHANCE: harder plays more of the strikes. FIXED: every strike at 100.
5	8-14	**CURVE** CHOICE	FLAT, FADE IN, FADE OUT, ACCENT FIRST, ACCENT LAST (accents each beat), ALTERNATING, HUMAN. Fades run over the first eight strikes.
7	0-5	**ROLL** TAP	FLAM, DRAG, DOUBLE, TRIPLE, ACCELERATING, DECELERATING, played now on the held REPEAT tracks, or else the target. On the next step when playing. As loud as you press.

ROW	PADS	CONTROL	WHAT IT DOES
7	8-14	ROLL TARGET CHOICE	The track a roll pad plays.
9	0-15	BEAT REPEAT MOMENTARY	Two pads each: 1 BAR, 1/2, 1/4, 1/8, 1/16, 1/32, 1/16T, 1/32T. While held, the last stretch of the sequence of that length repeats, for the tracks lit on row 10. Let go: the sequence is where it would have been.
10	0-2	SHAPE CHOICE	FLAT (each repeat as loud), FADE (each softer), BUILD (building up). Also shapes PERFORM's STUTTER.
10	8-14	TRACKS TOGGLE	Whether each track takes part in BEAT REPEAT and STUTTER. Unlit: it plays on as written.
13	0-15	STEP IN THE BAR DISPLAY	Where the sequence is in its bar.
14	0-6, 8, 10-11	METERS DISPLAY	Tracks, output, delay and reverb returns.
15	9	LAT TOGGLE	LATCH, shared with PERFORM: a tap keeps a repeat going.
15	11	REL TAP	RELEASE ALL: let go of everything LATCH holds.

Beat repeat is the sequencer repeating, not a recording: kits and edits stay live while it loops. Lengths shorter than a step (1/32, the triplets) retrigger the step's hits at that rate. The ROLL pads are the way to audition a roll on any track before writing it into a step on SEQ (row 10).

CRIB SHEET REPEAT

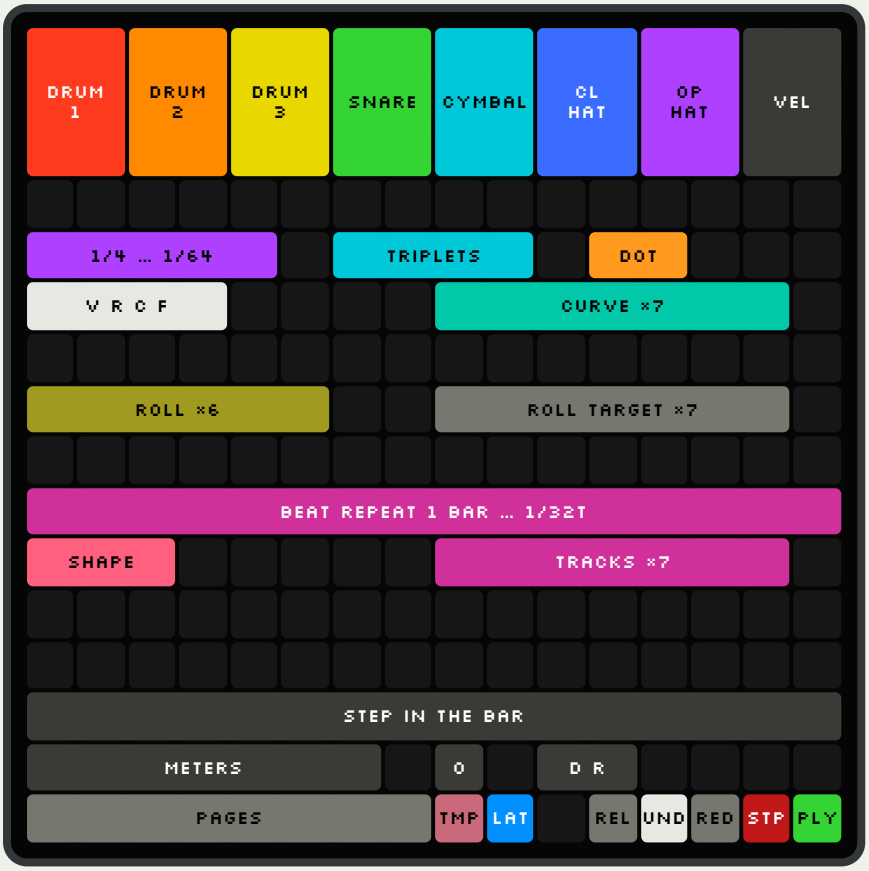

REPEAT: the pads, row 0 at the top

KEY MOVES

Hold a track (rows 0-2)	note repeat, harder = louder
Row 4	rate: straight, triplet, dotted
Row 5 x0-3	what pressure does
Row 7	tap a roll on the target
Hold row 9	beat repeat 1 bar … 1/32T
Row 10	shape and which tracks repeat
LAT	a tap keeps it going

ALWAYS

Row 15: pages 0-7 · TMP 8 · UND 12 · RED 13 · STP 14 · PLY 15

11 SAVE

PAGE 8 · ROW 15 PAD 7

Plinky's own save and load page. CLATTER 12 saves the **whole project** into a song slot: steps, kit, mixer, FX, tempo, swing, generator settings, REPEAT settings and scenes. Leave it with the right side buttons or row 15.



SAVE

THE PADS

ROW	PADS	CONTROL	WHAT IT DOES
ALL		SAVE / LOAD PLINKY	Plinky draws this page itself; use it as on any Plinky panel to choose a slot and save or load.

Projects from older versions load converted: version-1 projects (0.0.2) bring their ratchet spacing and velocity runs across as rolls and curves, and their sends to Plinky's effects. On the project page there is no Plinky save page: **SAVE PROJECT** downloads the very JSON the panel gives Plinky's save page, and **LOAD PROJECT** reads one back.

CLATTER 12 manual, version 0.0.4-exp. CLATTER 12 is free software under the GNU GPL version 3 only, with the LXR-02 firmware's additional terms. It contains a modified version of the Erica Synths LXR-02 firmware's sound engine. "Erica Synths", "LXR" and "LXR-02" are trademarks of Erica Synths; "Plinky" and "Plinky 12" name the hardware it targets. CLATTER 12 is an independent project, not made, approved or endorsed by either. Project page · Interface design · Source · Fonts: Silkscreen and IBM Plex Sans, SIL OFL (1, 2).