


## 11. Deletion

This function deletes the specified file in the memory (MD1:) or a floppy disk (FD0:).


The operating procedure is as indicated below.

- Press function key [F3] (DELETE).

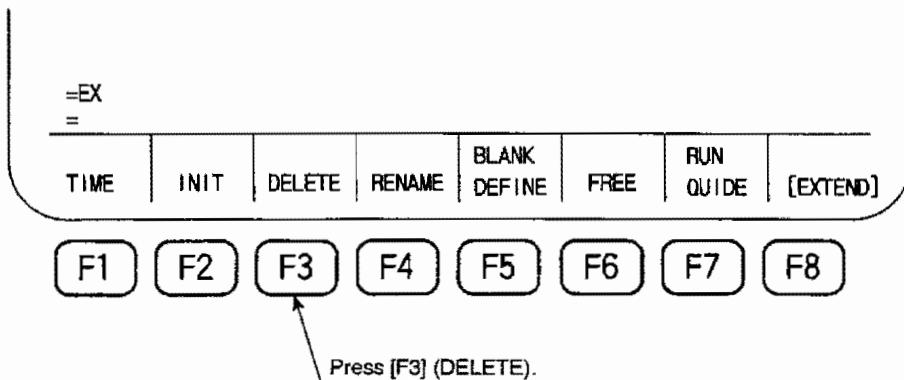

The screen changes to the directory-selection-based file operation screen and the following is displayed on the screen.

DELETE  
DEL

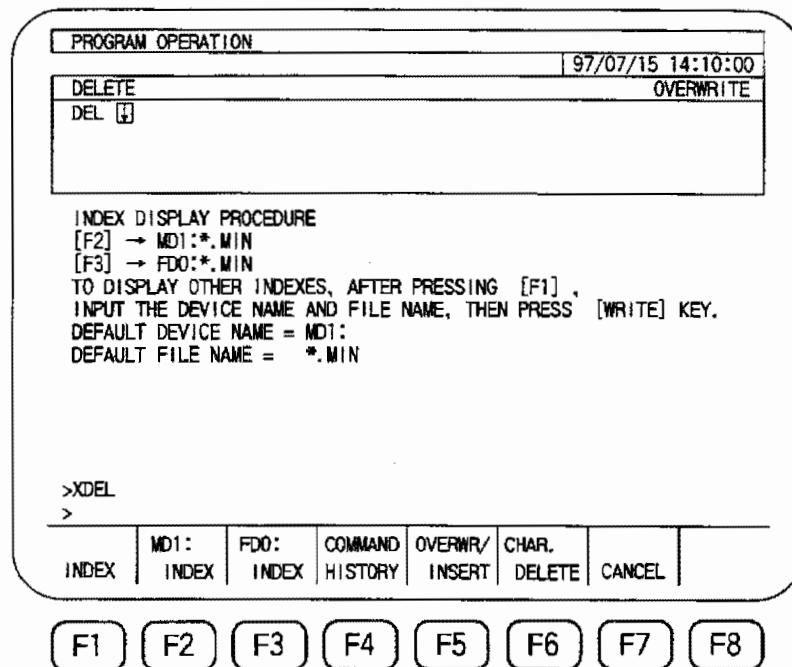

- Following "DEL", enter the device name, MD1: or FD0:.


The default is MD1:.

- Press the WRITE key, and the following message is displayed on the console line.  
A.MIN delete OK (Y/N) !

Type Y and press the WRITE key. The file of "A.MIN" is deleted and the following message appears on the screen on completion of deletion.

A.MIN deleted

To abort operation, type N and press the WRITE key.

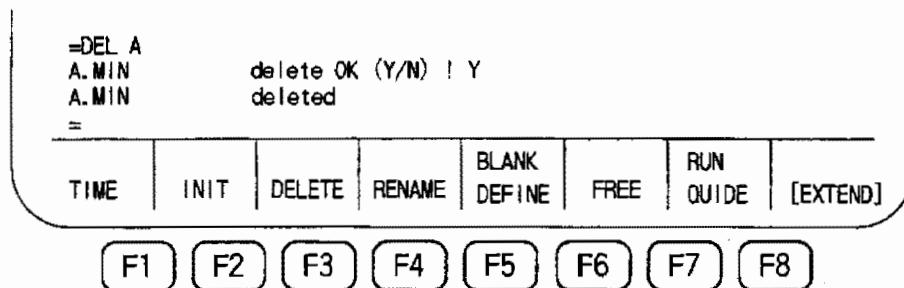

- [Supplement] 1. To delete a file other than A. MIN, specify a file name.

The file name extension .MIN can be omitted.

Example:

Can be omitted

ABC.MIN DEL ABC   
ABC.SUB DEL ABC.SUB

2. When the specified file name does not exist in the storage device, the message "no file" is displayed on the command line.  
3. Symbols "?" and "\*" can be used to specify a file name.

Functions of these symbols are the same as explained in 3. "DIRECTORY".

Example: DEL \* ..... Files whose file name extension is .MIN are all deleted.

DEL \*.SUB ..... Files whose file name extension is .SUB are all deleted.

DEL BOX\*.\* ... Files whose main file name begins with BOX are all deleted.

DEL \*.\* ..... All files are deleted.

DEL ???SUB ... Files whose main file name consists of up to three characters followed by the extension .SUB are all deleted.

4. Option code for file deleting operation

When the code ";C" is specified following the file name, it is possible to display the file name of the file to be deleted and delete the file without confirmation.