WEIGHBRIDGE TECHNICAL DOCUMENT


Weighbridge Architecture and Weighment Steps

CONTENTS

Sheet 1	Uni-Directional Road WB	Page 2
Sheet 2	Uni-Directional WB	Page 3
Sheet 3	Bulker WB	Page 4

All information contained in this document is the sole property of Amazin Automation Pvt Ltd and must not be copied without legal consent.

Uni- Directional Road WB

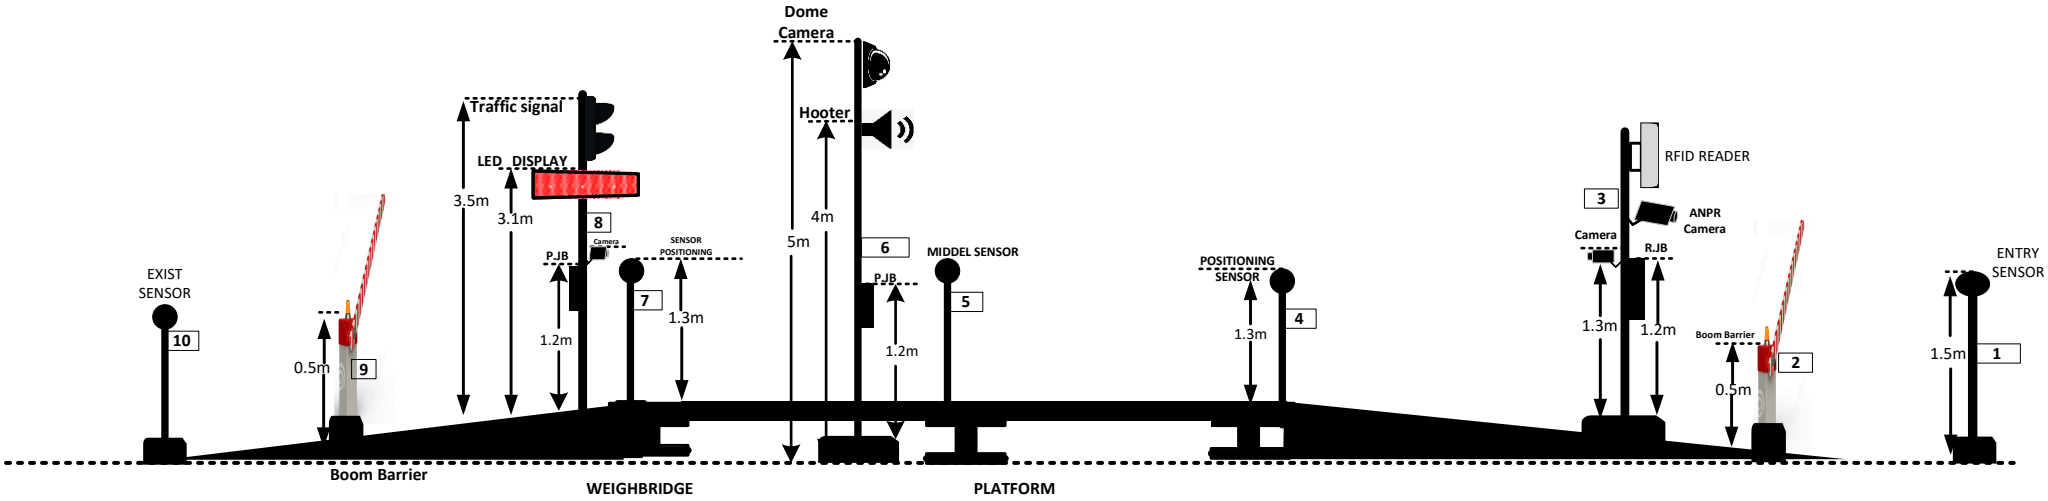

Uni- Directional Road Sales WB

WEIGHMENT STEPS

1. The vehicle arrives at the weighbridge entry. The ANPR camera reads the vehicle number, and the system opens the entry boom barrier.
2. If the ANPR camera cannot read the vehicle number for any reason, the RFID reader reads the vehicle's RFID tag and the system opens the entry boom barrier.
3. Once entry is allowed, the vehicle number is shown on the LED display and announced through the hooter.
4. When the vehicle is correctly positioned between the positioning sensors, the application starts capturing the weight (sampling).
5. When weight sampling is complete, the hooter announces that weighment is complete and the LED display shows the final weight.
6. The LED display shows the EXIT message and the exit boom barrier opens.
7. After the vehicle leaves the platform and clears the exit sensor, the application resets automatically and is ready for the next weighment.

NOTE: The length of the cable will depend on the distance between Control Room/Controller and Weighbridge (the maximum allowed length of a Cat 6 cable is 60 meters)

REV.	DATE	DOCUMENT HISTORY
01	10/07/2024	Initial Release

All information contained in this drawing is a sole property of Amazin Automation Pvt Ltd and must not be copied without any legal consent.

All Dimensions are in mm unless specified

A3


SIZE

TITLE:

WEIGHBRIDGE 01 ARCHITECTURE

Dwg No	Scale	Sheet No
NA	NA	1/1

Uni- Directional WB

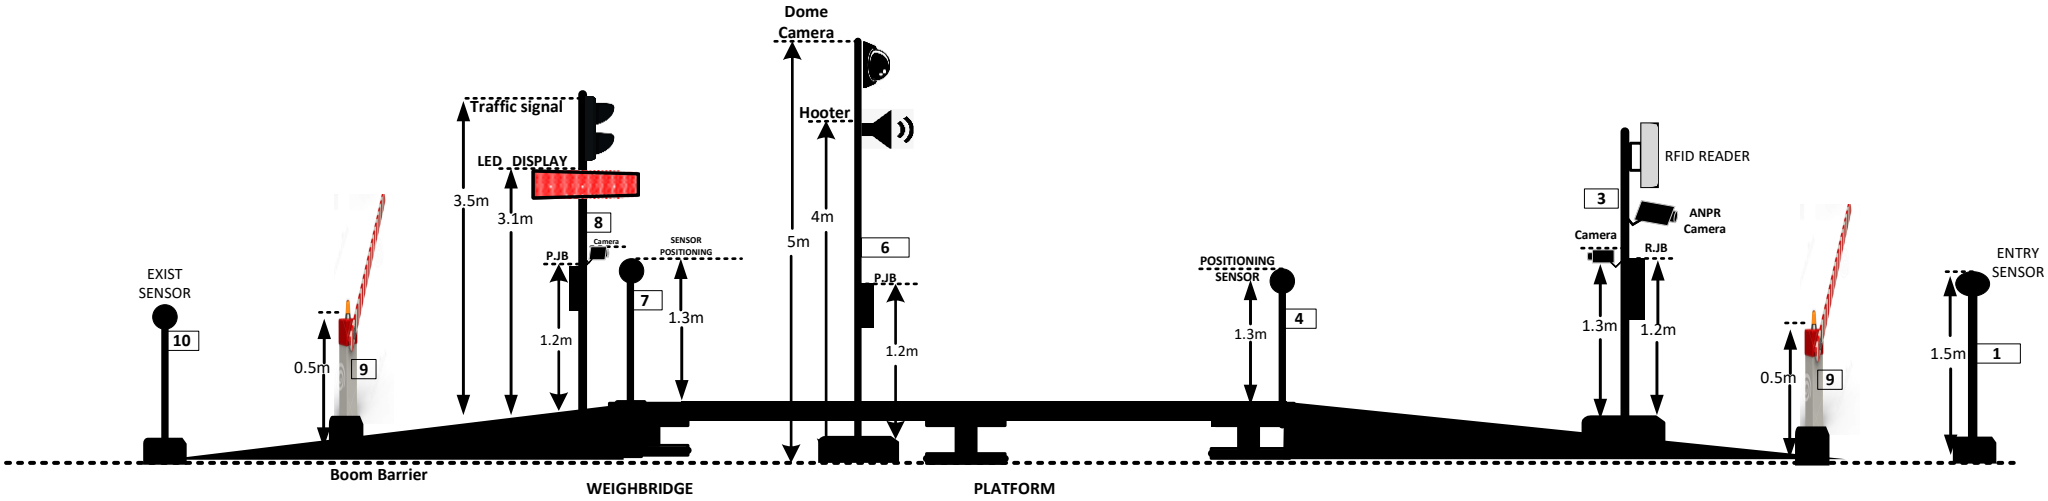

WEIGHMENT STEPS

1. The vehicle arrives at the weighbridge entry. The ANPR camera reads the vehicle number, and the system opens the entry boom barrier.
2. If the ANPR camera cannot read the vehicle number for any reason, the RFID reader reads the vehicle's RFID tag and the system opens the entry boom barrier.
3. Once entry is allowed, the vehicle number is shown on the LED display and announced through the hooter.
4. When the vehicle is correctly positioned between the positioning sensors, the application starts capturing the weight (sampling).
5. When weight sampling is complete, the hooter announces that weighment is complete and the LED display shows the final weight.
6. The LED display shows the EXIT message and the exit boom barrier opens.
7. After the vehicle leaves the platform and clears the exit sensor, the application resets automatically and is ready for the next weighment.

NOTE: The length of the cable will depend on the distance between Control Room/Controller and Weighbridge (the maximum allowed length of a Cat 6 cable is 60 meters)

REV.	DATE	DOCUMENT HISTORY
01	10/07/2024	Initial Release

All information contained in this drawing is a sole property of Amazin Automation Pvt Ltd and must not be copied without any legal consent.

All Dimensions are in mm unless specified


A3

SIZE

TITLE: **WEIGHBRIDGE 01 ARCHITECTURE**

Dwg No	Scale	Sheet No
NA	NA	1/1

Bulker WB

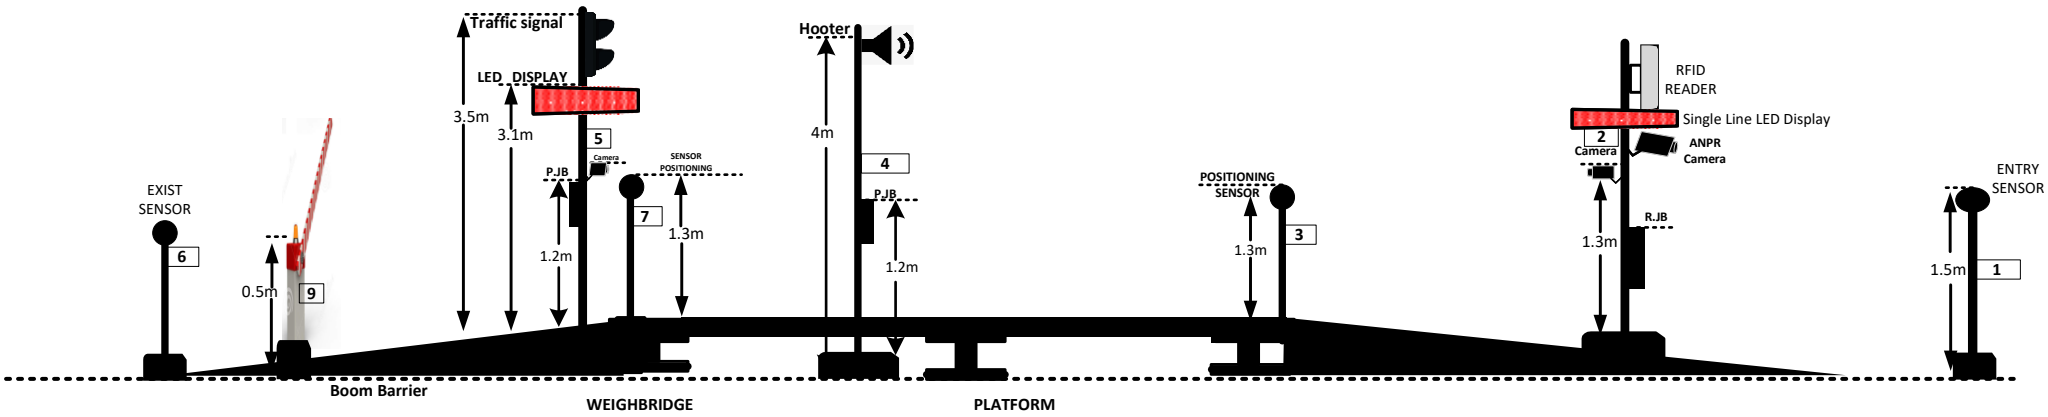

WEIGHMENT STEPS

1. The vehicle arrives at the Bulker weighbridge entry. The ANPR camera reads the vehicle number, and the system allows the vehicle to enter.
2. If the ANPR camera cannot read the vehicle number for any reason, the RFID reader reads the vehicle's RFID tag and the system allows the vehicle to enter.
3. Once entry is allowed, the vehicle number is shown on the single-line LED display and announced through the hooter.
4. The driver parks the vehicle on the weighbridge, aligned with the loading chute.
5. When the vehicle is correctly positioned between the positioning sensors, the application starts capturing the weight (sampling).
6. When sampling is complete, the hooter announces that weighment is complete and the LED display shows the Tare Weight.
7. After the Tare Weight is captured, the operator starts cement filling by pressing the Start button.
8. The LED display shows the live loading weight during filling.
9. When filling stops, the application starts sampling for the Gross Weight.
10. When sampling is complete, the hooter announces that weighment is complete and the LED display shows the Gross Weight.
11. The LED display shows the EXIT message and the exit boom barrier opens.
12. After the vehicle leaves the platform and clears the exit sensor, the application resets automatically and is ready for the next weighment.

NOTE: The length of the cable will depend on the distance between Control Room/Controller and Weighbridge (the maximum allowed length of a Cat 6 cable is 60 meters)

REV.	DATE	DOCUMENT HISTORY
01	10/07/2024	Initial Release

All information contained in this drawing is a sole property of Amazin Automation Pvt Ltd and must not be copied without any legal consent.

All Dimensions are in mm unless specified

SIZE A3

TITLE: **WEIGHBRIDGE 01 ARCHITECTURE**

Dwg No	Scale	Sheet No
NA	NA	1/1