



How to Edit/Update LUT?

NOTE: This feature is available only for Customer and Admin role.

Step 1: Open LUT module in the application

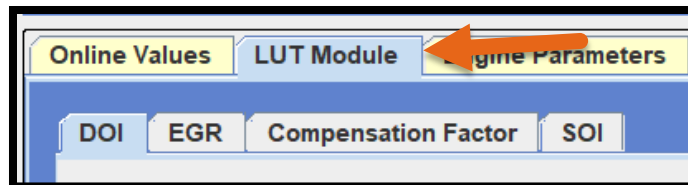

Step 2: Navigate the LUT file to edit/update.

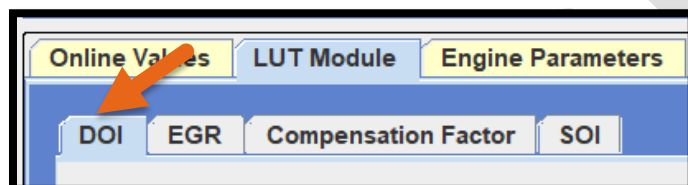

Step 3: Double click the cell in the table you want to edit or update.

The screenshot shows the application interface with the 'DOI' sub-tab selected. A table is displayed with the following data:

	Title 1	Title 2	Title 3	Title 4	Title 5
Load/R...		800	1000	1500	1800
15		1	1	1	1
20		1	1	1	1
25		1	1	1	1
30		1	1	1	1
35		1	1	1	1
40		1	1	1	1

An orange arrow points to the cell containing the value '1' in the row for '15' and 'Title 2'.


Step 4: Update the value and hit "enter" button.

The screenshot shows the application interface with the 'DOI' sub-tab selected. The table is updated with the following data:

	Title 1	Title 2	Title 3	Title 4	Title 5
Load/R...		800	1300	1500	1800
15		5	1	1	1
20		1	1	1	1
25		1	1	1	1
30		1	1	1	1
35		1	1	1	1
40		1	1	1	1

An orange arrow points to the cell containing the value '5' in the row for '15' and 'Title 2'.

Step 5: Click on update button to update the LUT file.

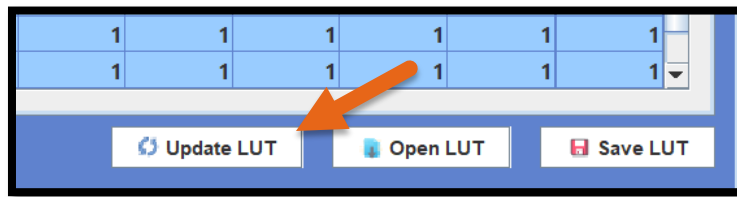

Note: This updated file is volatile and data may get lost if not saved externally.