



How to Flash LUT?


Step 0: Make sure UART is connected and LUT file is selected.

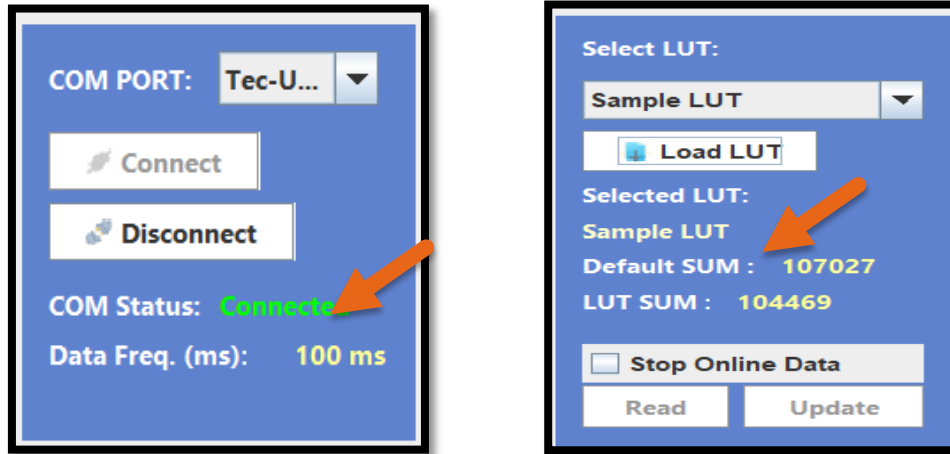

Step 2: Click on Flash Button to Flash the ECU

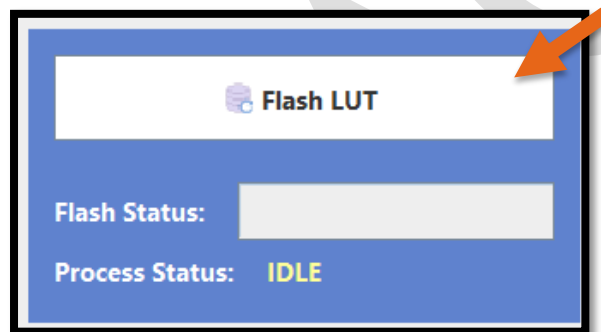

Note: Application will check all the conditions before flashing if error persist, shows error.

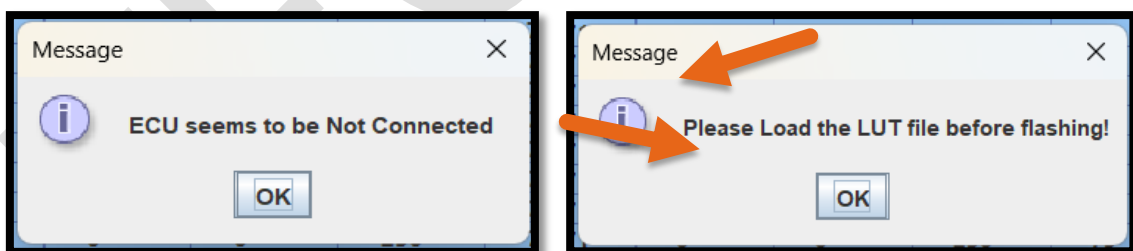

Step 3: After successful flashing, progress and process status will change as shown below.

