


## How to Flash VIN?

**Note:** This feature is only available for Customer and Admin Role.

**Step 0:** Make sure UART is connected and ECU is connected.

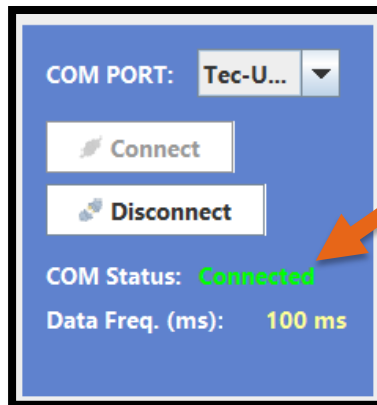

**Step 2:** Enter 17-digit VIN number in text field with label VIN.



**Step 3:** Flash VIN button will become active if VIN length is 17.



**Step 4:** Click on Flash VIN button to flash the VIN. After flashing it will show a pop-up.

