



How to Read LUT from ECU?


Step 0: Make sure UART is connected and ECU is connected.

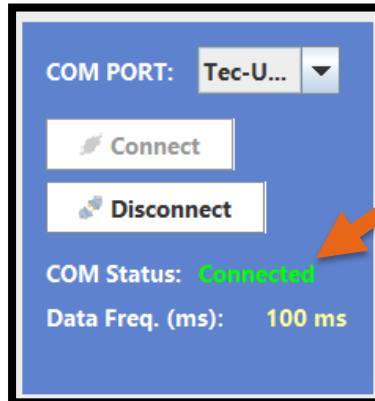


Step 2: Check the “Stop online data” checkbox to stop the incoming data.

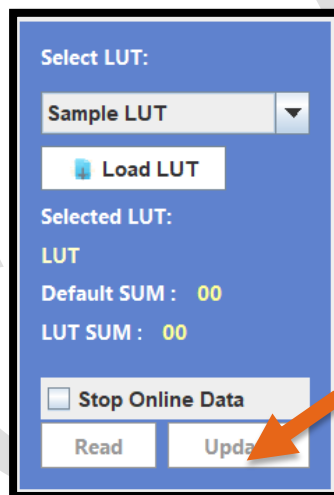

Step 3: Click on Read button to read the data from ECU.

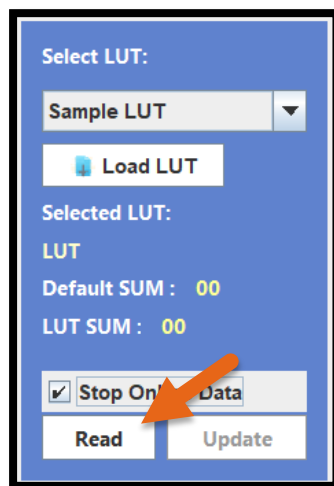

Step 4: Click on Update button to update the read LUT.

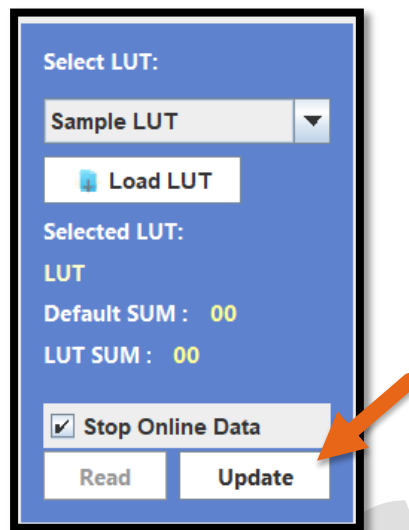

Select LUT:

Sample LUT

Load LUT

Selected LUT:

LUT


Default SUM : 00

LUT SUM : 00

☒ Stop Online Data

Read Update

Note: Pop-up will show up “Reading Succesfull!” Click OK.

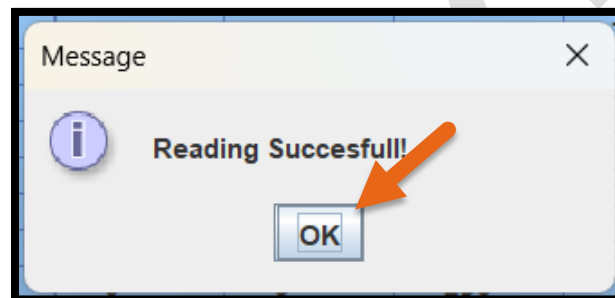


Message

Reading Succesfull!

OK

Read LUT can be verified by CVN and CAL-ID

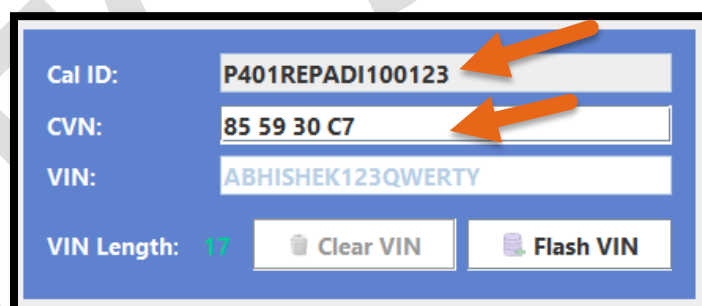

Cal ID: P401REPADI100123

CVN: 85 59 30 C7

VIN: ABHISHEK123QWERTY

VIN Length: 17

Clear VIN Flash VIN