


How to Disconnect?

Step 0: Make sure UART is connected to the application.

Step 1: Click on Disconnect button to disconnect the connection.

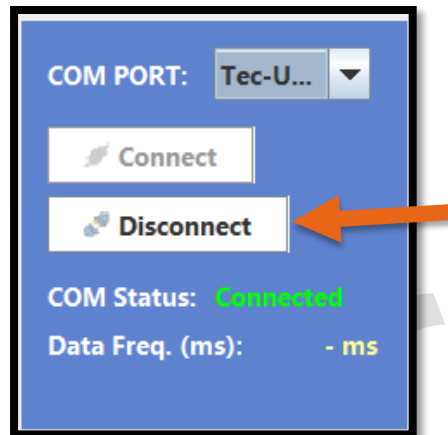

Note: COM status will read “Disconnected” and connect button will get enabled.

