



How to Generate Error?

Note: This feature is only available for Customer and Admin Role.


Step 0: Make sure UART is connected and ECU is connected.

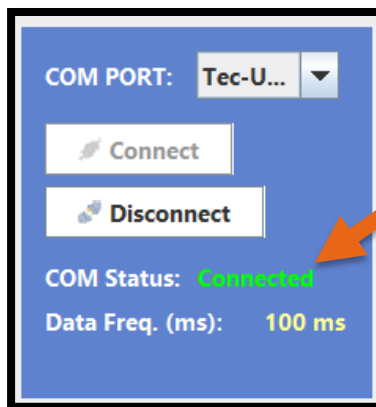

Step 2: Open ADC module in application.

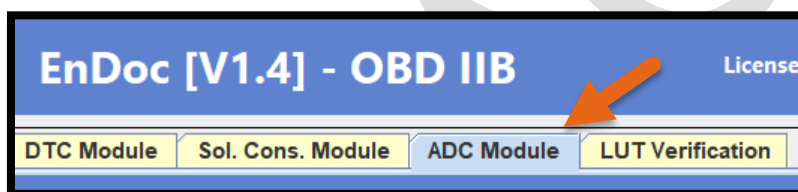

Step 3: Check the desired sensor/actuator for which error is to be generated and add ADC.

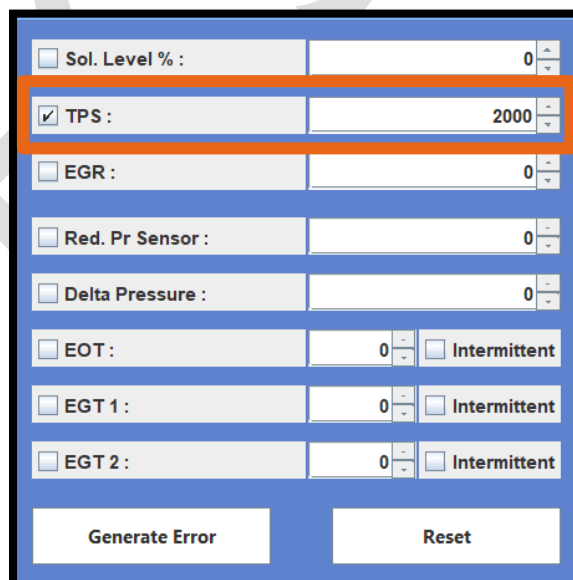

Step 4: Click on Generate Error button.

☐	Sol. Level % :	0	
☒	TPS :	2000	
☐	EGR :	0	
☐	Red. Pr Sensor :	0	
☐	Delta Pressure :	0	
☐	EOT :	0	☐ Intermittent
☐	EGT 1 :	0	☐ Intermittent
☐	EGT 2 :	0	☐ Intermittent
Generate Error		Reset	

Note: Errors can be removed by using Reset button.