
ROV CONTROLS

PS5 DualSense / PS4 controller · press **OPTIONS** to arm, **CIRCLE** to stop

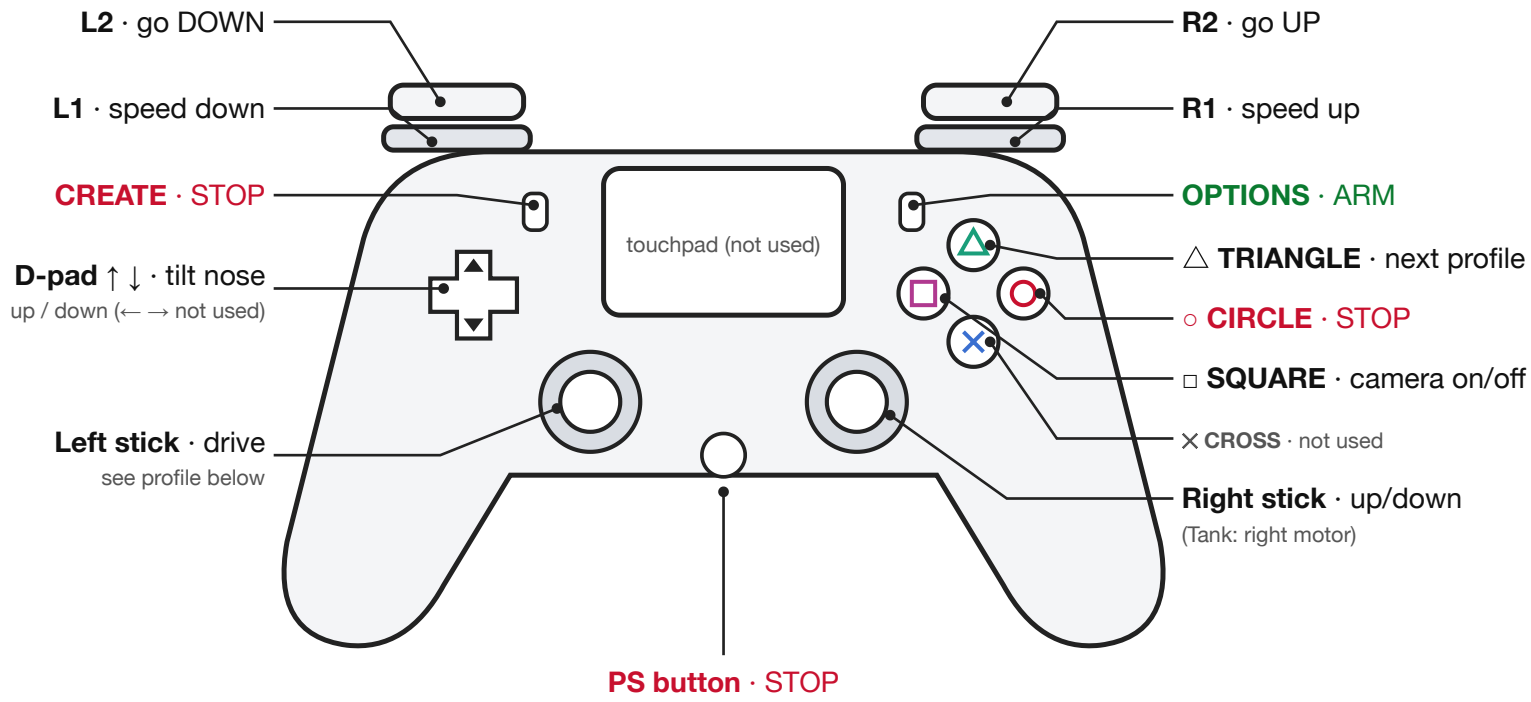

STANDARD profile 2 · default

Left stick ↕	forward / back
Left stick ↔	turn left / right
Right stick ↕	up / down
R2 / L2	up / down
D-pad ↑ ↓	tilt nose up / down

TANK profile 1

Left stick ↕	left motor fwd / back
Right stick ↕	right motor fwd / back
R2 / L2	up / down
D-pad ↑ ↓	tilt nose up / down

TRIANGLE switches profile (only while SAFE). Edit or add profiles on the screen with the mouse: SETUP › PROFILES.

DRIVING

1. Turn the controller on (PS button). Screen shows it connected.
2. Let go of the sticks, triggers and D-pad.
3. Press **OPTIONS** to ARM. The motors beep 3 rising notes.
4. Press **CIRCLE** to STOP at any time.

Motors stop by themselves if the controller disconnects or goes quiet for 0.5 s; then press OPTIONS again. **Keyboard** (switch on in SETUP › EXTRAS): WASD drive · Space/Shift up/down · R/F tilt · Enter ARM · Esc STOP.