
# ROV CONTROLS

PS5 DualSense / PS4 controller · press **OPTIONS** to arm, **CIRCLE** to stop

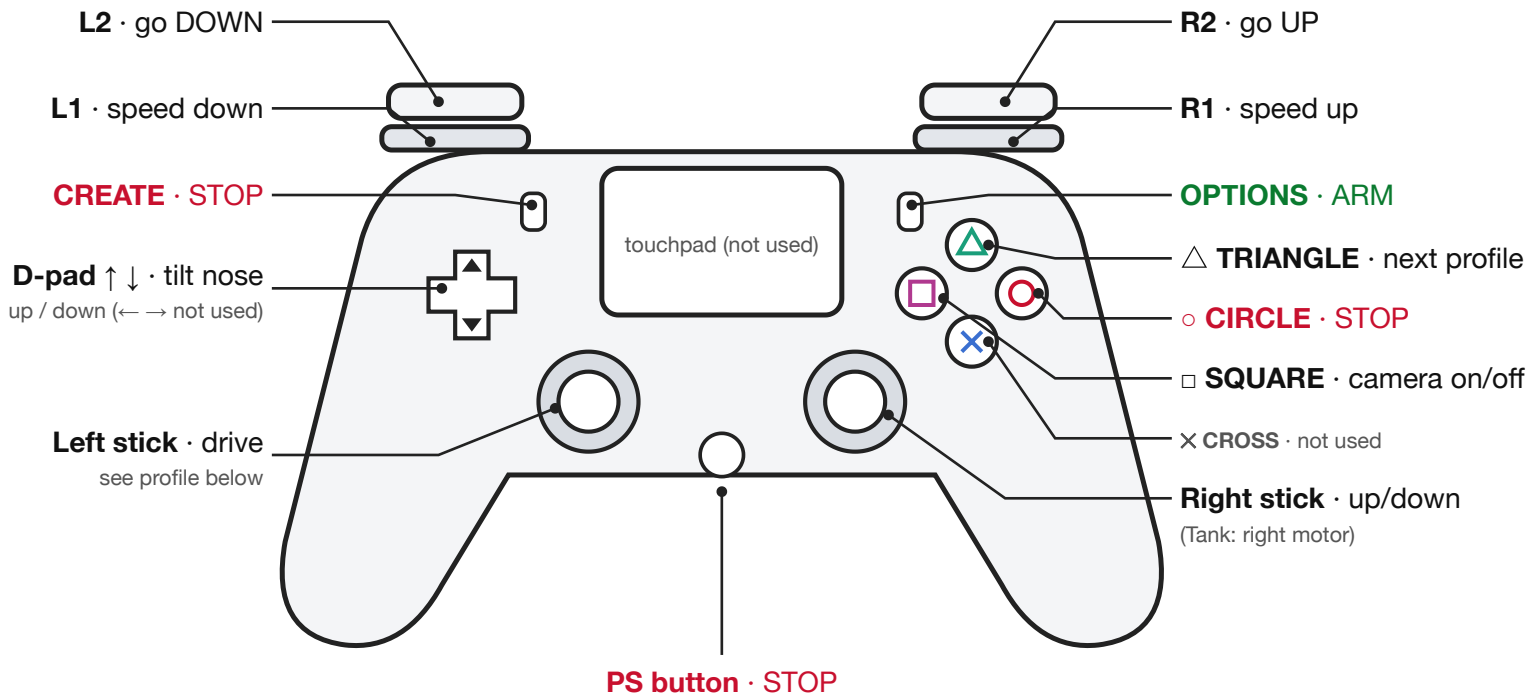


## STANDARD profile 2 · default

| | |
|---|---|
| **Left stick ↕** | forward / back |
| **Left stick ↔** | turn left / right |
| **Right stick ↕** | up / down |
| **R2 / L2** | up / down |
| **D-pad ↑ ↓** | tilt nose up / down |

## TANK profile 1

| | |
|---|---|
| **Left stick ↕** | left motor fwd / back |
| **Right stick ↕** | right motor fwd / back |
| **R2 / L2** | up / down |
| **D-pad ↑ ↓** | tilt nose up / down |

TRIANGLE switches profile (only while SAFE). Edit or add profiles on the screen with the mouse: SETUP › PROFILES.

## DRIVING

1. Turn the controller on (PS button). Screen shows it connected.
2. Let go of the sticks, triggers and D-pad.
3. Press **OPTIONS** to ARM. The motors play a tune: touch any control to skip it.
4. Press **CIRCLE** to STOP at any time.

Motors stop by themselves if the controller disconnects or goes quiet for 0.5 s; then press OPTIONS again. **Keyboard** (switch on in SETUP › EXTRAS): WASD drive · Space/Shift up/down · R/F tilt · Enter ARM · Esc STOP.