
DISPLAY

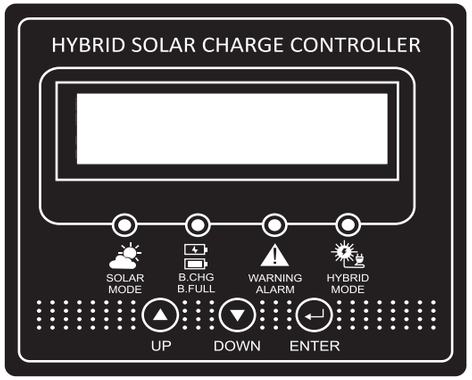

LCD DISPLAY

LCD DISPLAY SHOWS ALL THE INPUT AND OUTPUT PARAMETERS AS WELL AS WARNING's.

- PV INPUT VOLTAGES AND CURRENT.
- BATTERY VOLTAGE AND CHARGING CURRENT.
- WARNING MESSAGE's.

LED DISPLAY

1. YELLOW LED INDICATES MPPT IS RUNNING IN SOLAR MODE ONLY.
2. GREEN LED
   - BLINKING INDICATES BATTERY IS CHARGING.
   - STABLE INDICATES BATTERY IS FULLY CHARGED.
3. RED LED INDICATES WARNING.
4. BLUE LED INDICATES MPPT IS RUNNING IN HYBRID MODE (SOLAR + GRID).

FEATURES

- DUAL DISPLAY
  - LCD DISPLAY
  - LED INDICATIONS
- ALL PARAMETERS DISPLAY ON LCD.
- SOLAR REVERSE POLARITY PROTECTION. (MODEL #: EXO-M-100)
- SOLAR REVERSE CURRENT PROTECTION.
- HIGH PV VOLTAGE WARNING.
- BATTERY OVER CHARGE PROTECTION.
- OVER CURRENT PROTECTION.
- OVER HEAT PROTECTION.
-
-
- LOW BATTERY VOLTAGE ALARM AND INDICATION.
- SMART SHIFTING BETWEEN SOLAR AND GRID.
- TEMPERATURE CONTROLLING THROUGH AUTO COOLING FAN.
- COMPATIBLE WITH ALL TYPE OF UPS AND SOLAR PANELS.

WARNING MESSAGE

WARNING MESSAGE	DESCRIPTION	SUGGESTION
OVER HEAT	TEMPERATURE IS TOO HIGH	1. CHECK THE DEVICE TEMPERATURE, THE INSTALLATION PLACE SHOULD BE SHADED AND AIRY. IT IS NOT RECOMMENDED TO EXPOSE THE UNIT DIRECTLY TO STRONG SUNLIGHT TO PREVENT OVERHEATING AND CAUSE POWER DERATING. 2. IF THE FAULT MESSAGE STILL EXISTS, CONTACT THE MANUFACTURER
OVER CHARGE	BATTERY VOLTAGE IS TOO HIGH	1. DISCONNECT THE DC SWITCH & CHECK THE BATTERY CONNECTIONS, ENSURE THERE IS NO LOSSING BETWEEN MPPT AND BATTERY CONNECTIONS. 2. IF THE FAULT MESSAGE STILL EXISTS, CONTACT THE MANUFACTURER
HIGH PV VOLTAGE	PV PANEL VOLTAGE HAS EXCEEDED DEVICE RATED MAXIMUM INPUT VOLTAGE	1. DISCONNECT THE DC SWITCH IMMEDIATELTY AND CONFIRM THE VOLTAGE ARE BELOW THE DEVICE RATED MAXIMUM INPUT VOLTAGE. 2. AFTER THE NORMAL VOLTAGE IS RESTORED, IF THE FAULT MESSAGE STILL EXISTS, CONTACT THE MANUFACTURER
LOW BATTERY	BATTERY VOLTAGE IS TOO LOW	1. DISCONNECT ANY LOAD RUNNING ON BATTERY IMMEDIATELTY AND CONFIRM THE VOLTAGE. 2. AFTER THE NORMAL VOLTAGE IS RESTORED, IF THE FAULT MESSAGE STILL EXISTS, CONTACT THE MANUFACTURER

ERROR MESSAGE

ERROR MESSAGE	DESCRIPTION	SUGGESTION
PV NOT CONNECTED	PV PANEL VOLTAGE IS TOO LOW	1. CHECK PV PANEL VOC VOLTAGE, THEY MUST BE GREATER THAN 1.5 TIMES BATTERY VOLTAGES 2. IF THE FAULT MESSAGE STILL EXISTS, CONTACT THE MANUFACTURER
FAN FAULT	TEMPERATURE SENSOR FAULTY	1. TEMPERATURE SENSOR IS FAULTY; DEVICE MUST BE SENT TO SERVICE CENTRE FOR REPAIRING