LOW BATTERY ALARM	CONDITION	ALARM STATUS
POWERED OFF	BATTERY VOLTAGE > LOW BATTERY ALARM VOLTAGE	ALARM IS OFF
	BATTERY VOLTAGE < LOW BATTERY ALARM VOLTAGE	ALARM IS OFF
POWERED ON	BATTERY VOLTAGE > LOW BATTERY ALARM VOLTAGE	ALARM IS OFF
	BATTERY VOLTAGE < LOW BATTERY ALARM VOLTAGE	ALARM IS ON (ING EVERY SECOND)

9. BACK TO DEFAULT SETTINGS

DISCARD ALL SETTINGS AND RETURN TO FACTORY SETTINGS

FACTORY SETTINGS

1. **BATTERY FULL VOLTAGE**

   12V = 14.6V **24V** = 29.2V

2. **FLOAT CHARGE VOLTAGE**

   12V = 13.8V **24V** = 27.6V

3. **BACK TO SOLAR VOLTAGE**

   12V = 14.0V **24V** = 28.0V

4. **BACK TO HYBRID/UTILITY VOLTAGE**

   12V = 11.5V **24V** = 23.0V

5. **DC LOAD OFF VOLTAGE**

   12V = 10.0V **24V** = 20.0V

6. **DC LOAD ON VOLTAGE**


   12V = 11.5V **24V** = 23.0V

7. **LOW BATTERY WARNING VOLTAGE**

   12V = 10.5V **24V** = 21.0V

8. **LOW BATTERY ALARM**
   - ALARM STATUS = POWERED ON (ING EVERY SECOND)

BLOCK DIAGRAM

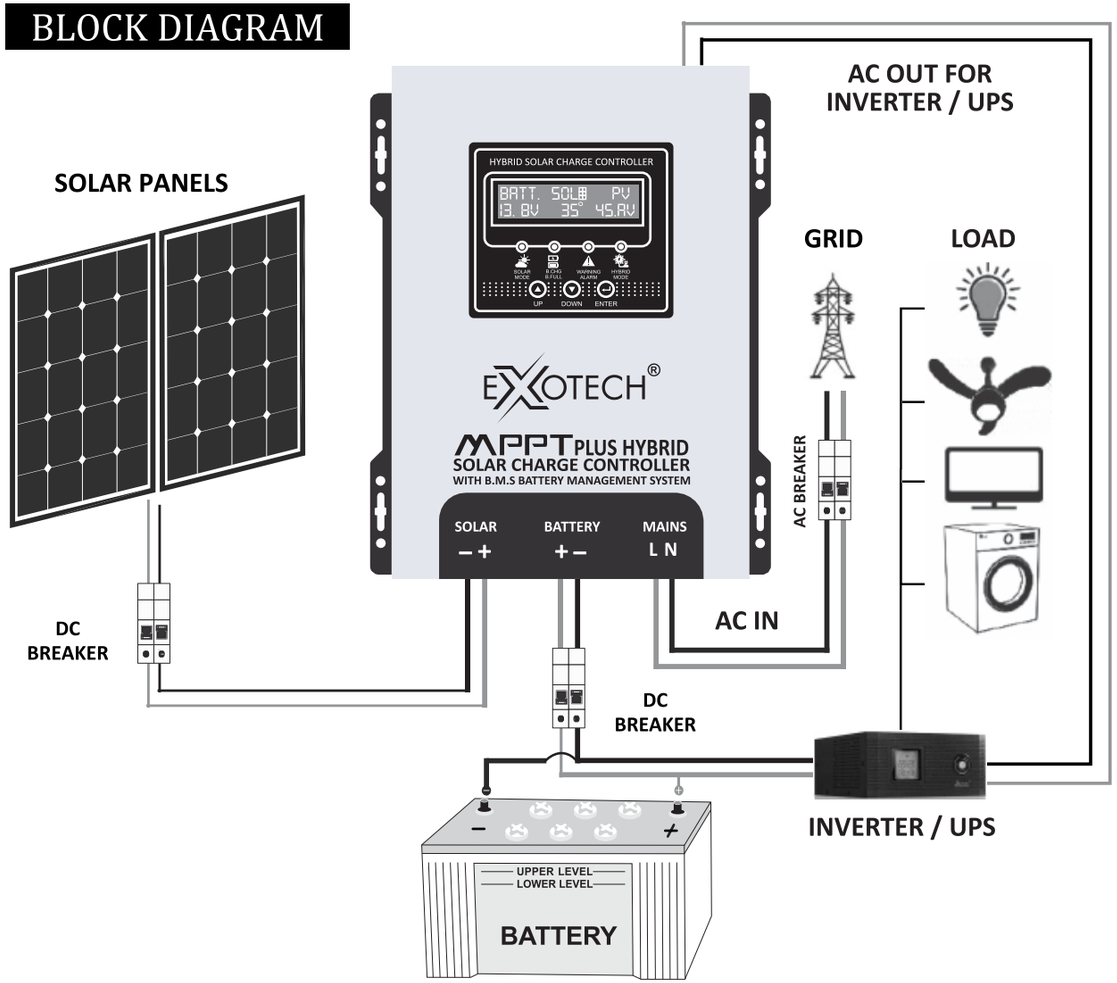

SAFETY INSTRUCTIONS

- BEFORE INSTALLING THE UNIT READ ALL THE INSTRUCTIONS CAREFULLY.
- INSTALL THE UNIT AT EYE LEVEL ON A WALL VERTICALLY.
- THE INSTALLATION PLACE SHOULD BE SHADED AND AIRY.
- DONOT REMOVE THE COVER WHEN THE UNIT IS RUNNING, RISK OF ELECTRIC SHOCK.
- ALL THE WIRES SHOULD BE WELL TIGHTENED IN THEIR RESPECTIVE CONNECTORS.
- IT IS IMPORTANT FOR SYSTEM SAFETY TO USE PROPER BREAKERS AND WIRES IN THE RIGHT POLARITY AS INDICATED ON THE CONNECTOR BOX.
- USE ALL WIRES ACCORDING TO THE LOAD AS MENTIONED IN THE WIRE SELECTION TABLE.
- DONOT SHORT CIRCUIT THE BATTERY OR SOLAR CONNECTORS WHEN UNIT IS RUNNING.
- WHEN INSTALLING THE UNIT, FIRST INSTALL THE BATTERY.
- WHEN UNINSTALLING THE UNIT, FIRST UNINSTALL THE SOLAR.