

BBQ Rig User Guide

Operating manual for equipment and features

Printed 8/26/2026

Table of Contents

1. Roof System and FIRGELLI Controller Guide
 - 1.1. Step-by-Step Setup
 - 1.2. Pre-Check Before Operation
 - 1.3. Power On Actuators
 - 1.4. Raising and Lowering the Roof System
2. Electric Trailer Mover
 - 2.1. Power On/Off
 - 2.2. Operation: Moving Back/Forward Guide
 - 2.3. Prepare For Transport
3. Fridge/Freezer Operation
 - 3.1. Test Run
 - 3.2. UNDERSTANDING THE TEMPERATURE CONTROL SETTING
 - 3.3. Temperature Adjustment
 - 3.4. Fast Freezer Mode
 - 3.5. Food Storage
 - 3.6. Troubleshooting
4. Portable Hot Water Heater
 - 4.1. Before Operating the Water Heater
 - 4.2. Check for Propane Leaks
 - 4.3. Water, Propane & Battery Connections
 - 4.4. Starting the Water Heater
 - 4.5. Adjusting Water Temperature
 - 4.6. Normal Operation
 - 4.7. Shutting Down the Water Heater
 - 4.8. Draining / Freeze Protection
 - 4.9. Routine Inspection & Maintenance
 - 4.10. 10. Quick Troubleshooting
 - 4.11. 11. Critical Safety Rules
 - 4.12. 12. Quick Start
5. Tent Setup
 - 5.1. Front Table Setup
 - 5.2. Side Table Setup
6. Generators Operation Guide
 - 6.1. OUPES Generator

6.1.1. Power On/Off

6.1.2. Charging Methods

6.1.2.1. Charge from a Wall Outlet — AC Adapter

6.1.2.2. Charge from a Vehicle — 12V Car Charger

6.1.2.3. Charge with Solar Panels

6.1.3. LCD Screen Indicators

6.1.4. AC Output Operation

6.1.5. DC Output Operation

6.1.6. LED Light Operation

6.1.7. Power Input/Output Specification

6.1.8. Fault Codes Troubleshooting

6.2. Growatt Generator

7. Jensen TV Operations

7.1. Power On/Off TV

7.2. Remote Control Operation

7.3. Changing the TV Input / Source

7.4. Watching Over-the-Air Antenna TV

7.5. Quick Troubleshooting

7.6. Quick Start — Watch TV

7.7. Watching Streaming TV — Fire TV / Google TV

8. Jensen Stereo Receiver Operation Guide

8.1. Power ON/OFF & Basic Controls

8.2. Speaker Zones

8.3. AM/FM Radio

8.4. Bluetooth / Playing Music from a Phone

8.5. DVD Playback Through the TV

8.6. Remote Control

8.7. AUX & USB

8.8. Troubleshooting

9. Fresh / Dirty Water System for Sink

9.1. Emptying Dirty Water Tank

9.2. Add Fresh Water to Tank

9.3. Powering Water Pump

10. Square Terminal – MCP31CI Receipt Printer Setup

10.1. Before You Begin

10.2. Connect the Printer to the Square Terminal

10.3. Add the Printer in Square

10.4. Configure the Receipt Printer

10.5. Test the Printer

10.6. Normal Daily Operation

10.7. If the Printer Does Not Appear

10.8. Quick Start

1. Roof System and FIRGELLI Controller Guide

How to setup and operate the Actuator controller system and raise the roof operations

1.1. Step-by-Step Setup

How to setup the system

Step-By-Step Guide

- 1 Connect all units to FCB
- 2 Connect power to FCB (Make certain the polarity is correct before plugging in)
- 3 Click "NEXT" in bottom right corner
- 4 Go to "Number of Actuators Installed"
- 5 Activate Additional Actuators Ports
- 6 Run the "HOME" routine in ACTUATOR SETTINGS menu (page 2)
- 7 Run the "CALIBRATION" routine from the same menu (page 2)
- 8 Once completed return to ACTUATOR SETTINGS menu
- 9 Complete the remaining parts of the Set-Up Process for your specific application and dimensions. At minimum, you will need to adjust the following:
Set "Length" to total stroke length of your units
Set "LIMITS" to the desired stopping points. (or ends of actuator)
Set "Speed" to 99.9% in both directions [change later if needed]
- 10 Use Manual Control to check function, including limit-stops (if used)

1.2. Pre-Check Before Operation

⚠ WARNING

Do not attempt to raise the roof system if the awning flaps are down. The flaps are secured to the frame by clamps and the roof system will not raise when these flaps are secured. Do these steps first:

1. Release the clamps on the awning and the awning will then be in a horizontal position; then, it will be safe to raise the roof system.

1.3. Power On Actuators

On the front of the Entertainment System enclosure, you should see two switch panels. Look at the gray one and you should see a switch that reads "Actuators". Flip the switch to the right will power on our actuators.

Note: this will only give it power but view our next section on how to actually raise the roof system.

1.4. Raising and Lowering the Roof System

There is a toggle switch located behind the TV enclosure. This toggle switch is secured to the lower right side of the TV enclosure.

1. **Preparing Roof for Raising:** Make sure the clamp that holds down the awning is released and when doing so the struts will expand; thus, the awning flaps should be all the way out/open
2. **Raising the Roof:** Hold the toggle switch in the up direction and the roof will start to raise. There are already presets in place that will not allow the roof to raise a defined set of inches.
3. **Lowering the Roof:** Hold the toggle switch in the down direction and the roof will start to lower, continue to hold until the roof rest on the top of the frame, you can visually see this.

2. Electric Trailer Mover

How to connect the trailer to the van's power

2.1. Power On/Off

2.2. Operation: Moving Back/Forward Guide

2.3. Prepare For Transport

3. Fridge/Freezer Operation

Instructions on operating or fridge/freezer

3.1. Test Run

DC Input Power

DC input power

When powering your portable freezer with a standard 12 V socket, the unit will not work

if socket has a voltage of less than 10.4 V. The unit will restart when the voltage is

11.8V or greater.

When powering your portable freezer into a standard 24 V socket, the unit will not work

if the socket has a voltage of less than 22.5 V. The unit will restart when the voltage is

24.2 V or greater.

3.2. UNDERSTANDING THE TEMPERATURE CONTROL SETTING

Your portable freezer uses a digital control system for adjusting the thermostat.

1.Set

Press the Set Button to select desired temperature and low voltage cut-off. Battery cut-out setting only can be operated in DC power.

Battery cut-out voltage setting:

This function sets the minimum voltage that the unit will run. Press the SET button 3 times to set the Battery cut-out voltage. To select different cut-out voltage (10V/10.7V/11.8V), press the +/- buttons.

2-3. Temperature Control Buttons

Press the Set button and choose your desired temperature setting. For lower temperature setting, press the Down button and set to a lower temperature value. For higher temperature setting, press the Up button and set to a higher temperature value. Once the desired temperature is set, the temperature display will flash 4 times confirming the chosen temperature and then it will revert back to current temperature setting. The set temperature can be check by pressing the Set Button again.

4. Mode/ Power Button

Press the "Mode" button to turn on the portable freezer. To turn off, press the "Mode" button for 5 seconds. When the portable freezer is in operation, press the "Mode" button to select Auto, Low Speed and Fast freeze Operation.

5. Auto Mode Indicator Light

The Auto indicator light will illuminate a yellow light when the freezer is running on Auto Mode

6. Low Speed Mode Indicator Light

The Low indicator light will illuminate a green light the freezer is running on Low Speed Mode.

7. Fast Freeze indicator

LED display "FF". The freezer will rapidly cool the unit to -8°F.

8. Temperature Display(°F)

The LED display shows the actual temperature inside the portable freezer.

9. Voltage Display

If 120 volt connection is active and the AC Cord is plugged in, the LED Display will display "AC" indicator. If 12 volt connection is active and DC Cord is plugged in, the LED Display will display "DC" indicator.

10. Battery Display

The battery icon will be displayed only when connected to a DC power source. The battery icon symbolizes the remaining battery source voltage

3.3. Temperature Adjustment

1. When the freezer is plugged in to a power outlet, press the "Set" button. The LED will display the factory pre-set temperature of 0°F
2. To adjust the temperature:
 - a. Press the "Set" button again
 - b. While the LED is flashing, press the "▲" or "▼" buttons to reach the desired temperature
 - c. Once the desired temperature is set, the LED stops flashing. The current internal temperature will then be displayed. After the LED has stopped flashing, you can check the set temperature by pressing the set button again
 - d. To change the preset temperature again repeat steps a., b. and c.

Note: Do not use the refrigerator-freezer as a refrigerator when the ambient temperature is lower than 41°F

3.4. Fast Freezer Mode

Press the "FF" button to run the freezer on the "Fast Freeze" mode. The Fast Freeze mode rapidly cools the unit to -8°F. The freezer will then maintain this temperature.

Note: Do not run the unit on "FF" (fast freeze) for more than four hours, as this might adversely affect the refrigeration system.

3.5. Food Storage

Fresh foods should **NOT** be stored together with frozen foods.

⚠ When the temperature is set below 32°F, do not keep glass-bottled drinks such as beer and lemonade or soda cans, as the glass and cans might shatter.

3.6. Troubleshooting

Steps to Troubleshooting

TROUBLESHOOTING		
Problem	Cause	Solution
The compressor runs for 1 to 5 minutes and stops.	The voltage is not in the correct range.	Switch off the power and restart when the power is normal.
	The ambient temperature is too high.	The operating temperature of this unit is <90F. If temperature is higher than 90F, the unit need longer to cool to the set temperature.
The compressor runs but the inner liner does not get very cold.	The system is blocked.	Contact service department via email at service@whynter.com
	The ice layer on the evaporator is too thick.	Defrost the freezer
The inner liner is very cold and the compressor runs continuously.	The door is being opened and closed too frequently.	The door should be opened as little as possible
	The freezer is overloaded.	Remove some products from the freezer.
	The condenser is not well-ventilated.	Place the freezer in a well-ventilated place.
	The temperature sensor-tube is out of the evaporator or the controller is faulty.	Contact service department via email at service@whynter.com
The compressor does not run.	The controller is faulty (the power indicator is not on).	Contact service department via email at service@whynter.com
	The thermostat is set too high and the ambient temperature is too low.	Set the freezer to a lower temperature.
The freezer is noisy.	The freezer is not level.	Place the freezer on a flat and hard surface.
	The voltage is not in the correct range.	Switch off the power and restart when the power is normal.
Can the unit plugged into both AC and DC power supply?		Yes. If both AC and DC are plugged in at the same time, then the unit will primarily operate on AC. If the AC power source fails, DC will become primary source of power supply.

Steps to Troubleshooting

4. Portable Hot Water Heater

4.1. Before Operating the Water Heater

Before each use:

1. Make sure the heater is being operated **outdoors in a well-ventilated area**.
2. Check the area around and above the heater for combustible materials or obstructions.
3. Inspect the propane hose and regulator for cuts, excessive wear or damage.
4. Verify that the propane cylinder is upright and securely positioned.
5. Make sure the cold-water supply is connected to **WATER INLET**.
6. Make sure the hot-water hose/faucet is connected to **WATER OUTLET**.
7. Verify that two fresh **D-cell batteries** are installed in the battery compartment.
8. Make sure the drain plug is securely installed.


⚠ WARNING

OUTDOOR USE ONLY: Never operate this water heater inside an enclosed trailer, vehicle, tent, building or other enclosed space. The heater produces carbon monoxide.

⚠ WARNING

The top/exhaust area becomes extremely hot during operation. Keep combustible materials and objects away from the heater.

Construction & Components

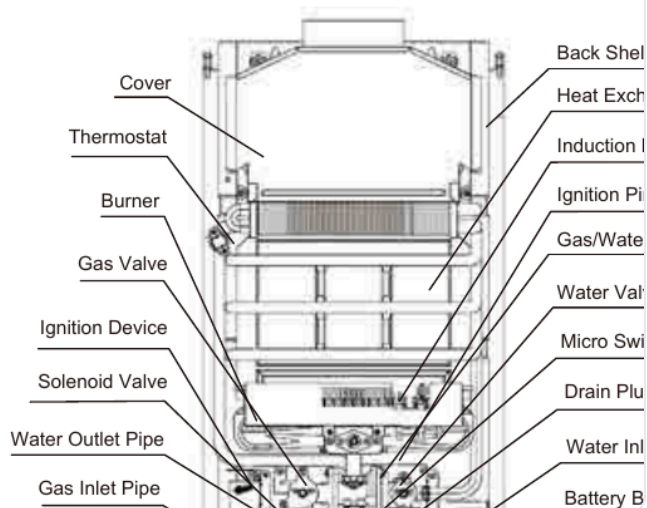

4.2. Check for Propane Leaks

Perform a leak check before operating the heater.

1. Make sure all propane connections are secure.
2. Slowly open the propane cylinder valve.
3. Apply a **soapy-water solution** to the propane connections and fittings.
4. Watch for bubbles.

No bubbles: Connection is properly sealed.

Bubbles: A propane leak is present.

If bubbles appear:

1. Immediately close the propane cylinder valve.
2. Do not operate the heater.
3. Correct the connection before attempting to use the heater again.

⚠ WARNING

NEVER use a match, lighter or open flame to check for propane leaks.

Installation Instructions

How to use the garden hose

1. Garden Hose



GARDEN HOSE MALE
1/2" BSP FEMALE X 3/4" GHT MALE



GARDEN HOSE FEMALE
1/2" BSP FEMALE X 3/4" GHT FEM

NOTICE: MAKE SURE PUT THE RUBBER GASKET IN ALL FITTINGS BEFORE CO

4.3. Water, Propane & Battery Connections

Cold-Water Connection

Connect the pressurized cold-water supply to the connection marked:

WATER INLET

The water inlet is located on the **far right** when viewing the connections from the front of the heater.

Make sure the supplied rubber gasket is installed in the fitting before connecting the water line.

Hot-Water Connection

Connect the hot-water hose or plumbing to:

WATER OUTLET

The water outlet is the **middle water connection**.

Make sure the rubber gasket is installed and do not overtighten the connection.

Propane Connection

Connect the supplied GASLAND propane regulator and hose to the heater's:

GAS INLET

Use only the regulator/hose specified for the heater.

Connect the regulator to the propane cylinder with the propane valve **OFF**.

IMPORTANT: Always inspect the propane hose before operating the heater.


Install Ignition Batteries

The heater's automatic ignition system uses:

2 × D-cell batteries

Install the batteries in the battery compartment according to the polarity markings.

The batteries power the ignition system; the heater does not require 120V electricity for ignition.

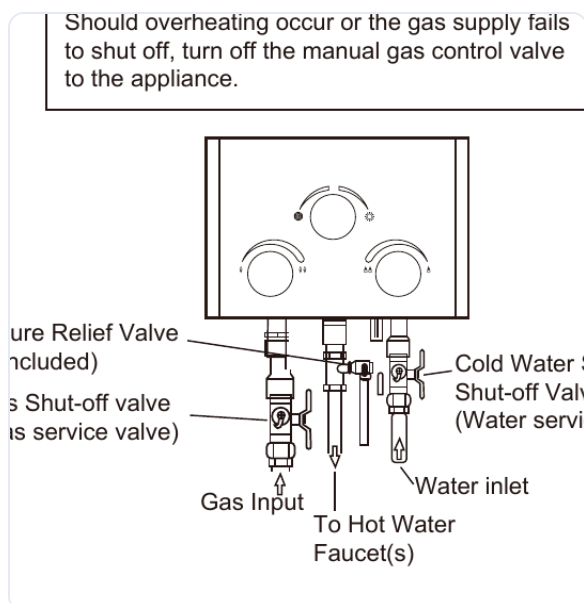

Do not over tighten. Over tighten may cause
use supplied washers on all connectors and
connect with torque force between 20-28N/r
ut device (shower head) to the fitting marked
DO NOT TIGHTEN! Make sure to insert the supplied
ions. Tighten by hand only.
ulator & hose supplied with this appliance.
valve, complying with the standard for relief
f devices for hot water supply system, ANSI
at the hot water outlet connection of the water
cal codes shall govern the installation of any
ttached with gas water heater.

4.4. Starting the Water Heater

1. Turn ON the incoming cold-water supply.
2. Keep the hot-water faucet/output OFF initially.
3. Open the propane cylinder valve completely.
4. Check for any propane odor.

If propane is smelled:

STOP → CLOSE PROPANE VALVE → DO NOT OPERATE HEATER

1. Set the **Water Flow control** toward its maximum-flow starting position.
2. Set the **Gas control** toward its lowest-temperature/minimum starting position.
3. Set the center **Burner Power / Summer-Winter control** appropriately.
4. Open the hot-water faucet/output.

The heater should automatically begin ignition.

You should hear a series of **clicking sounds**, followed by burner ignition.

The digital display will show the water temperature.

⚠ WARNING

If the burner does not ignite within approximately **5 seconds**, turn the water output OFF and troubleshoot the problem rather than repeatedly attempting ignition.

ighting.

Turn on incoming water supply. Ensure that you have abundant water pressure of between 10-110 PSI/70-760 kPa for ideal operation.

Turn your water output device to its "off" position.


Turn the gas valve on the cylinder all the way open.

IF THE SMELL OF GAS IS DETECTED, TURN OFF THE GAS VALVE IMMEDIATELY!!

Set the water control knob on BLUE mark to 💧 .

Set the gas control knob on RED mark to 🔥 .

Set the burner power switch knob to 🌞 position. (In winter this knob switch to ❄ .)

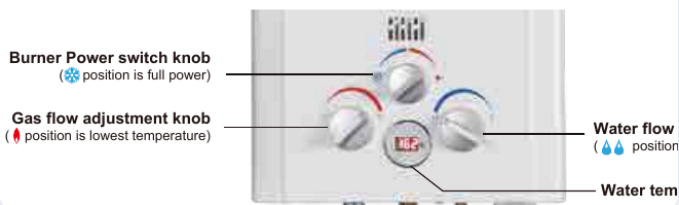

4.5. Adjusting Water Temperature

Start with a lower water temperature and gradually increase it.

For Cooler Water

Use:

More Water Flow + Less Gas

To Make the Water Hotter

First:

1. Slowly increase the **Gas** setting.
2. Allow several seconds for the temperature to stabilize.
3. Check the water temperature.

If additional heat is needed:

1. Slowly reduce the **Water Flow**.

Reducing the water flow allows the burner to heat the water more before it exits the heater.

Summer / Winter Burner Control

The center control changes the amount of burner capacity being used.

Summer / Warm Incoming Water

Use the reduced-burner setting to lower heat output and conserve propane.

Winter / Cold Incoming Water

Use the higher-burner setting so all available burners provide additional heating.

⚠ WARNING

SCALDING HAZARD: The BE158 can produce extremely hot water. Always test the water temperature before placing hands under the faucet or using the water.

Adjustment

The temperature of the outgoing water is dependent on the temperature of the incoming water balanced with the amount of heat applied. Use extreme caution when setting the outlet water temperature.

1. The water flow knob (blue) in position  the gas knob (red) in position . This is the lowest temperature setting available;




2. To raise the initially water temperature, adjust the gas knob up (toward right);



3. After step 2, if you still need water temperature higher, adjust the flow rate knob down (toward right) until you have the desired temperature.



4. The middle knob is for adjusting the amount of propane burned per hour. When the initial water is too hot in summer, you could turn it to the left (marked with a blue snowflake icon) then there is one burner works to lower the temperature and saves propane. When the initial water is too cold in winter, you could turn it to the right (marked with a red sun icon) then all of the burners will work to raise the temperature.

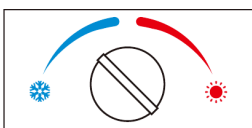

WARNING: Do not alter or change this water heater's original temperature settings.

4.6. Normal Operation

Once the desired temperature has been established, normal operation is automatic.

Hot Water ON

Open the hot-water faucet.

Water begins flowing → Igniter activates → Burner ignites → Hot water is produced

Hot Water OFF

Close the hot-water faucet.

Water flow stops → Burner automatically shuts OFF

There is no pilot light that must remain burning between uses.

4.7. Shutting Down the Water Heater

At the end of normal operation:

1. Turn the hot-water faucet/output **OFF**.
2. Confirm that the burner shuts down.
3. Close the **propane cylinder valve**.
4. Turn OFF the incoming water supply.

If the heater is being stored, transported or exposed to freezing temperatures, drain the heater as described below.

ⓘ WARNING

The propane cylinder valve should be OFF whenever the heater is not being used.

4.8. Draining / Freeze Protection

Water remaining inside the heat exchanger can freeze and severely damage the heater.

If temperatures may approach 32°F / 0°C, completely drain the heater after use.

Drain the Heater

1. Turn OFF the propane supply.
2. Turn OFF the water supply.
3. Allow the heater and water to cool.
4. Disconnect the outgoing hot-water line.
5. Open/remove the **drain plug located near the water inlet**.
6. Keep the heater upright while the remaining water drains.
7. Allow all residual water to drain from the heat exchanger.
8. Reinstall the drain plug after draining.

⚠ WARNING

IMPORTANT: Freeze damage caused by water remaining inside the heater is preventable and may not be covered by the manufacturer's warranty.

Over heat protection	Water heater automatically shuts off when water temperature is 167°F (75°C)(BE158), 185°F(85°C)(BE264).	Re-start water heater when water becomes cool
----------------------	---	---

Please Protect Your Water Heater From Freeze Damage!

During the stage of no using, the temperature is same between the inside and outside of water, the water will expand when temperature reach 32°F(0°C) and may broken the water pipe. This is normal phenomenon and not the quality problem. Open the drain plug to drain off the residual water in the water heater and screw it tightly if the environment where the water heater is installed drop below 32°F(0°C). This can prevent the cold from damaging the water heater.

To drain the residual water totally, please keep the water heater in vertical statue when draining water.



Drain plug

https://admin.thejigglingspig.com/user-guide

20/59

4.9. Routine Inspection & Maintenance

Before operation, inspect:

1. Propane hose
2. Propane regulator
3. Gas connections
4. Water connections
5. Water inlet
6. Water filter
7. Exhaust opening
8. Burner operation

During normal operation, observe the burner flame when possible.

A **clean blue flame** generally indicates proper combustion.

A yellow/red or abnormal flame can indicate inadequate combustion or another problem.

Do not continue operating the heater if combustion appears abnormal.

The manufacturer recommends periodic maintenance and inspection of the burner, water filter and exhaust system.

4.10. 10. Quick Troubleshooting

Heater Does Nothing / No Clicking

Check:

1. Cold water is connected to **WATER INLET**.
2. Hot-water line is connected to **WATER OUTLET**.
3. Water inlet and outlet have not been reversed.
4. Water supply is ON.
5. There is sufficient water pressure.
6. Both D-cell batteries are fresh.
7. Batteries are installed with correct polarity.

The manual identifies insufficient water pressure as a common cause of ignition failure.

Clicking Occurs but Burner Does Not Ignite

Check:

1. Propane cylinder contains propane.
2. Propane cylinder valve is fully open.
3. Regulator is properly connected.
4. Gas hose is not damaged or restricted.
5. Gas connections are leak-free.

A new propane cylinder or recently disconnected gas line may contain air that must clear before gas reaches the burner.

Water Flows but Is Not Hot

Check:

1. Propane supply.
2. Gas control setting.
3. Burner setting.
4. Water-flow setting.
5. Battery condition.
6. Water pressure.

Increase the **Gas** setting gradually.

If additional heat is required, reduce the **Water Flow** slightly.

Water Is Too Hot

1. Reduce the Gas setting.
2. Increase Water Flow.
3. Use the reduced-burner/Summer setting when incoming water is already warm.

Always allow several seconds for the outlet temperature to stabilize after making an adjustment.

Heater Shuts Off During Operation

Possible causes include:

1. Insufficient water flow
2. Low water pressure
3. Low batteries

4. Overheating protection
5. Propane supply interruption

The BE158's overheating protection can automatically shut down the heater if the water reaches approximately 167°F / 75°C.

Allow the heater to cool before restarting.

Heater Will Not Ignite Due to Water Pressure

The heater requires adequate water pressure to activate its ignition system.

The manual's troubleshooting section states that ignition may not occur below approximately:

3.6 PSI / 25 kPa

Check the water supply, pump, filter and hoses for restrictions.

Common Issues With Solutions		
Issue	Indication	Solution
Water pressure too high	If water pressure is over 110 PSI/760 kPa, the water-out valve will release water and lower the pressure	Increase the valve according to local pressure
Water pressure too low	If water pressure is below 3.6 PSI/25 kPa,the water heater cannot be ignited	Use the water heater pressure becomes
Low battery	The power of battery will become less after use for some time, thus the water heater cannot be ignited	Change Batteries
Over heat protection	Water heater automatically shuts off when water temperature is 167°F (75°C)(BE158),185°F(85°C)(BE264).	Re-start water heater, water becomes co

4.11. 11. Critical Safety Rules

1. OUTDOOR USE ONLY.
2. Use propane only.
3. Never operate the heater in an enclosed trailer or vehicle.
4. Never leave the operating heater unattended.
5. Keep the exhaust and top of the heater clear.
6. Keep gasoline and other flammable materials away from the heater.
7. Never use an open flame to check for propane leaks.
8. Turn the propane cylinder OFF after use.
9. Drain the heater whenever freezing temperatures are possible.
10. Do not operate with damaged propane hoses or fittings.
11. Always test hot-water temperature before use.

⚠ WARNING

1.

IMPORTANT – NON-POTABLE WATER: GASLAND identifies this heater as a **non-potable water heater** intended for temporary point-of-use applications such as washing, dishwashing and showering. The manufacturer states that it is **not suitable for drinking or cooking water**.

4.12. 12. Quick Start

START

Water Supply ON → Propane ON → Water Flow HIGH → Gas LOW → Select Burner Setting → Open Hot-Water Faucet → Heater Auto-Ignites

ADJUST TEMPERATURE

Hotter: Increase GAS → then reduce WATER FLOW if necessary

Cooler: Reduce GAS → increase WATER FLOW

SHUT DOWN

Hot-Water Faucet OFF → Propane OFF → Water Supply OFF

COLD-WEATHER SHUTDOWN

Propane OFF → Water OFF → Disconnect Hot-Water Line → Open Drain Plug → Completely Drain Heater

5. Tent Setup

5.1. Front Table Setup

- 1 Grab a Black 6ft foldable table from van and setup in front of tent
- 2 There is a large black bag with all supplies related to your front table setup, grab that bag.
- 3 Cover your table with the "Jiggling Pig" table cover
- 4 Add the following items from your bag and place them on the table:
 1. Square Terminal
 2. iPad Kiosk System
 3. Business Card Holder with business cards
 4. Display shelf to promote sauces and rubs
 5. Empty soda cans and water bottle to show the drinks we have available
 6. Any portable signage (if available)
- 5 Connect Square Terminal and iPad to wireless network. Use iphone hotspot as the source for the connections.

5.2. Side Table Setup

- 1 Grab 6ft black table from van and unfold it to the left side(facing tent)
- 2 Place the "Jiggling Pig" table cover on the table
- 3 Add the following items on the table:
 1. Storage containers with 2 oz plastic ramekins and tops
 2. Sauce bottle holder w/ the following sauces: "Backyard Boogie, Uuu-Wee and Geechie Gold"
- 4 We can also add any additional promotion material and business cards.

6. Generators Operation Guide

6.1. OUPES Generator

6.1.1. Power On/Off

Turn the Power Station ON

1. Locate the **Main Power button** on the front control panel.
2. **Press and hold the Main Power button for approximately 3 seconds.**
3. Release the button when the unit powers on.
4. Confirm that:
 - a. The light around the Main Power button is illuminated.
 - b. The LCD screen is illuminated.
 - c. The LCD displays the current **battery percentage** and battery level.

Turn the Power Station OFF

1. Make sure connected equipment is no longer being used.
2. **Press and hold the Main Power button for approximately 3 seconds.**
3. The light around the Main Power button and the LCD screen will turn off.
4. Confirm that the LCD screen is completely off before leaving the unit unattended.

💡 TIP


NOTE: Turning on the Main Power does not automatically turn on the AC outlets. The AC output must be turned on separately before using equipment connected to the AC outlets.

4.2 AC Output Instructions

Main Power Switch

POWER ON: Long press the main power button for 3 seconds, the background light around the button will lit up , and the LCD screen will light up too, the blue battery circle and battery percentage will display.

POWER OFF: Long press the main power button for 3 seconds, the background light and LCD screen will be off at the same time.

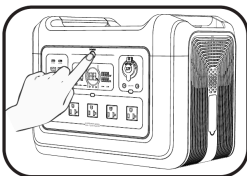

6.1.2. Charging Methods


6.1.2.1. Charge from a Wall Outlet — AC Adapter

Use the supplied AC adapters to charge the power station from a standard wall outlet.

Procedure:

1. Connect the supplied AC adapters to the power station's **7909 charging input ports**.
2. Plug the adapters into a standard wall outlet.
3. Check the LCD screen. The **input power** should appear, indicating that charging has started.
4. Allow the unit to charge until full.
5. Once fully charged, unplug the adapters.

The manual indicates approximately **6 hours for a full charge** using this method

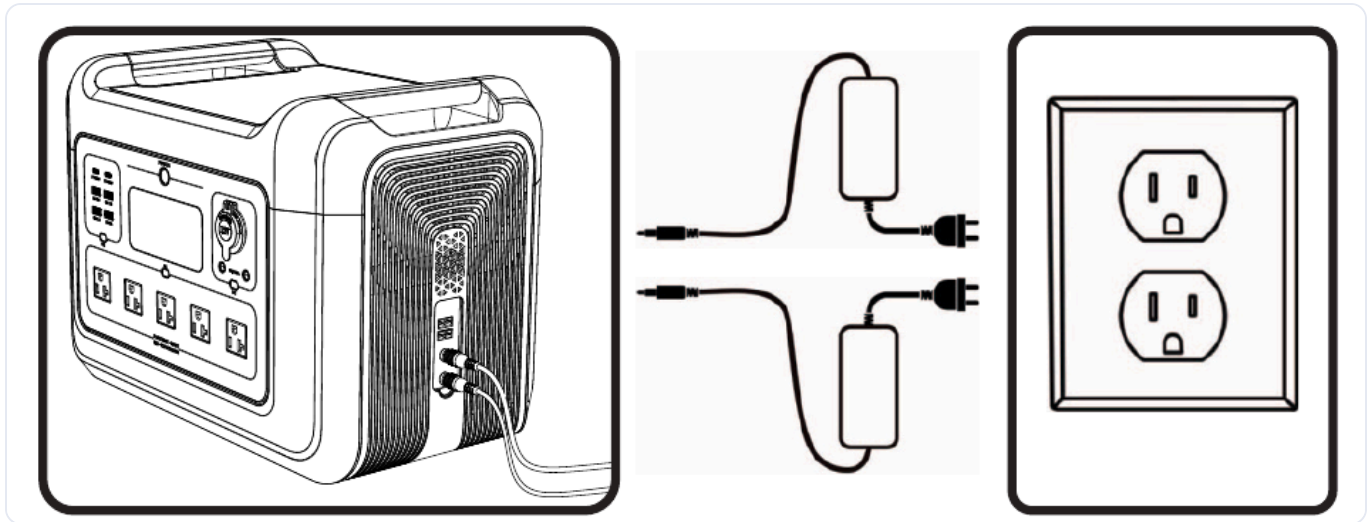

6.1.2.2. Charge from a Vehicle – 12V Car Charger



The power station can also be charged from the vehicle's 12V cigarette-lighter/accessory outlet.

Procedure:

1. Connect the supplied 7909 vehicle charging cable to a 7909 charging input on the power station.
2. Connect the other end to the vehicle's 12V cigarette-lighter outlet.
3. Verify that input power appears on the LCD screen.
4. Allow the power station to charge.

The manual states that a full charge using the vehicle's 12V outlet takes at least 23 hours.

It will take at least 23 hours to fully charge.

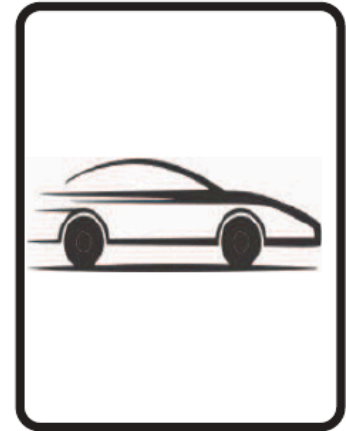
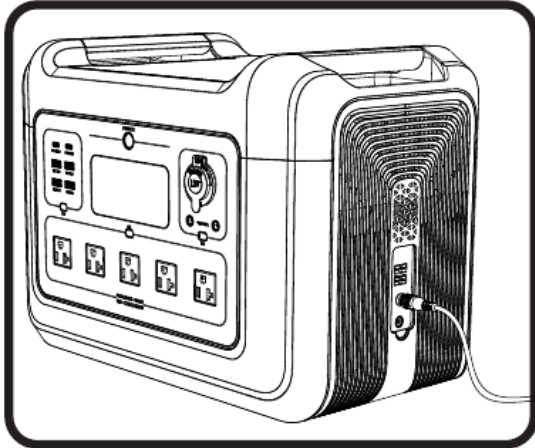


6.1.2.3. Charge with Solar Panels

The OUPES supports two different solar-input methods.

Anderson Input: Connect the solar panels through an Anderson Y-parallel cable, then connect that cable to the Anderson input on the right side of the power station. When properly connected, the battery indicator on the LCD begins scrolling and the input wattage appears. The Anderson input supports up to 45V and a maximum of 500W solar input.

7909 Inputs: Solar panels can alternatively connect to the power station's 7909 DC charging inputs. The manual states that each 7909 input supports up to 300W.

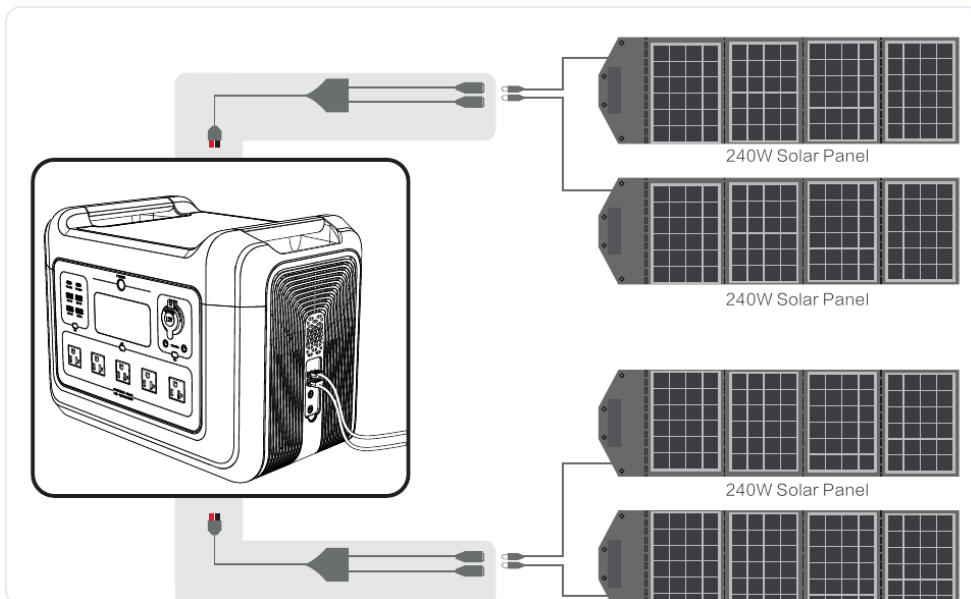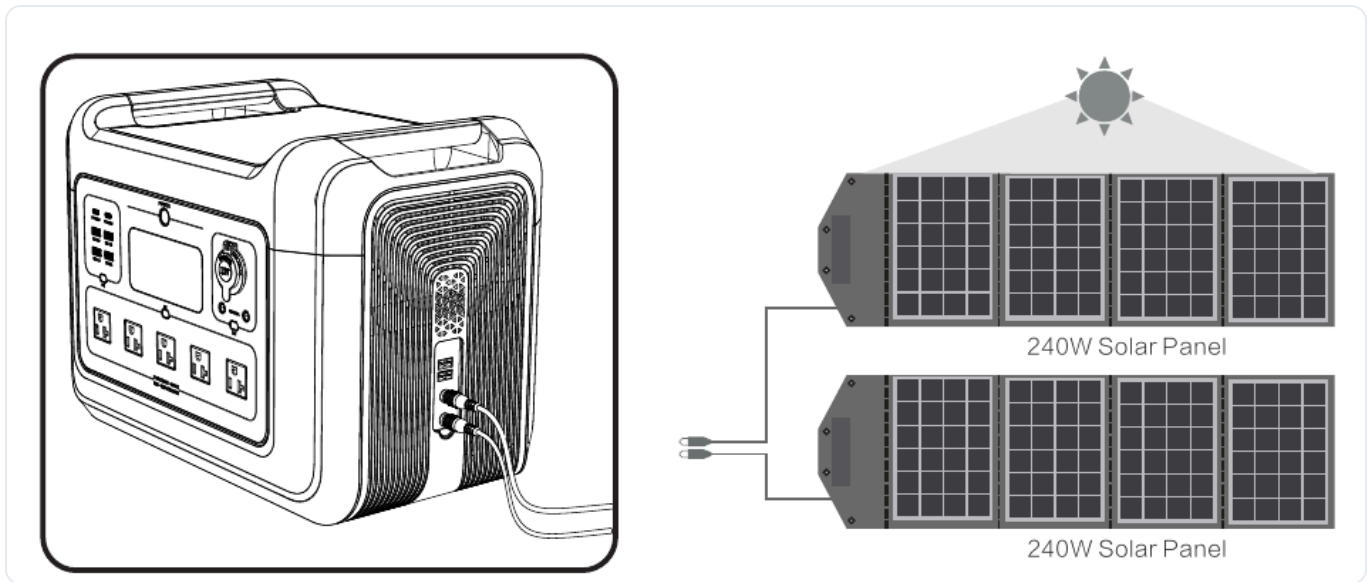

6.1.3. LCD Screen Indicators

The LCD screen provides the current operating status of the OUPES power station.

Battery Level

1. The large percentage number shows the **remaining battery capacity**.
2. The blue battery-capacity circle is divided into six segments representing approximately **17%, 35%, 51%, 68%, 85%, and 100%**.
3. During use, segments disappear as the battery is discharged.
4. During charging, the blue circle scrolls clockwise.
5. When fully charged, the entire blue circle remains illuminated.


Power Information

1. **Input/Charging Power:** Displays the amount of power currently entering the generator while charging.
2. **Output/Discharging Power:** Displays the amount of power currently being supplied to connected equipment.
3. **Charge/Discharge Time:** Displays the estimated operating or charging time.

The screen also contains indicators for:

1. AC output
2. USB-A output
3. USB-C output
4. DC 5521 output
5. 12V vehicle/car output
6. Cooling fan
7. Low-temperature protection
8. High-temperature protection
9. Fault/warning conditions

The LCD battery-capacity operation and indicators are described in the manual's LCD section.

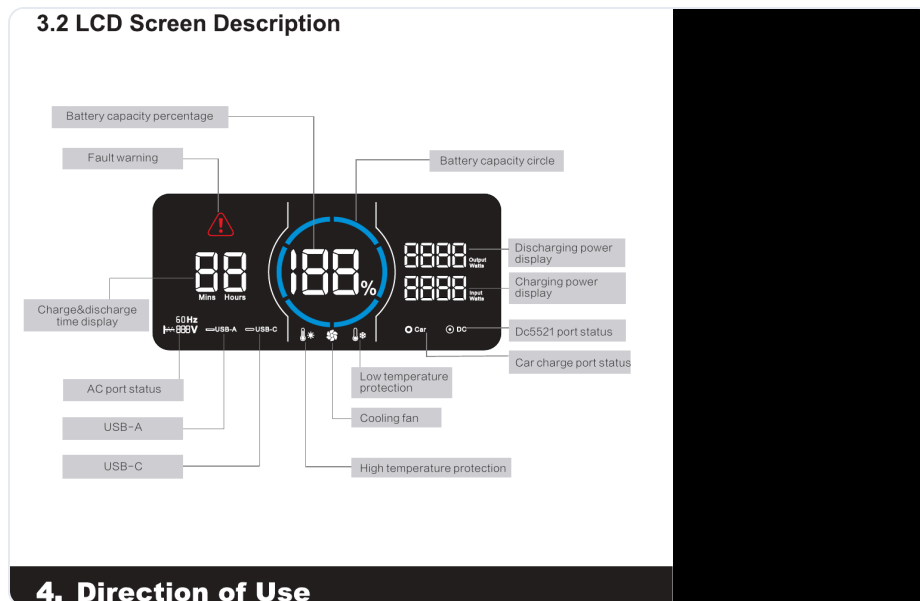

6.1.4. AC Output Operation

Use the **AC Output** function when powering standard 120V equipment from the generator's AC receptacles.

To Turn AC Power ON

1. Turn the generator's **Main Power ON**.
2. Press the **AC Output button** on the front control panel.
3. Confirm that the **AC icon** appears on the LCD screen.
4. The AC outlets are now active and connected equipment can be operated normally.


To Turn AC Power OFF

1. Turn off connected equipment.
2. Press the **AC Output button** again.
3. Confirm that the AC icon disappears from the LCD.
4. The AC outlets are now OFF.

IMPORTANT: Turning on the generator's Main Power does **not** automatically activate the AC outlets. The AC Output button must also be turned on before AC-powered equipment can operate.

4.2.1 AC Output Instructions

When the main power button is turned on, gently press the AC Output button, the icon  in the LCD screen will lit up. It means the function of this area can be used normally. Press this button again, the icon  will disappear, and the function of this area will be turned off.

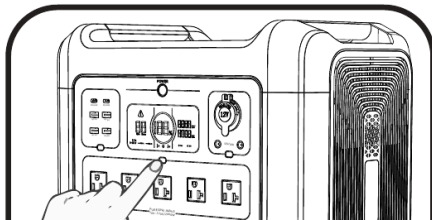

6.1.5. DC Output Operation

The generator provides separate controls for its DC and USB outputs.


The **Main Power must be ON** before activating these outputs.

USB Outputs

1. Turn the generator's **Main Power ON**.
2. Press the **DC button on the left side** of the function panel.
3. The corresponding **USB-A and USB-C indicators** will illuminate on the LCD.
4. The USB ports are now available for use.
5. Press the button again to turn these outputs OFF.

12V / DC Outputs

1. With Main Power ON, press the **DC button on the right side** of the function panel.
2. Confirm that the corresponding **DC and Car/12V indicators** illuminate on the LCD.
3. The DC outputs can now be used.
4. Press the button again to turn these outputs OFF.

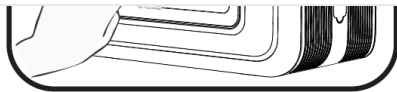

4.2.2 DC Output Instructions

When the main power button is on, press the DC button on the left side of the function panel, USB-C and USB-A function can be used normally, and the corresponding icons  ,  on the LCD screen will lit up. Press the DC button on the right side of the function panel, USB-C and USB-A function can be used normally, and the corresponding icons  ,  on the LCD screen will lit up. Press the power button again, the corresponding icons  ,  ,  and  on the LCD

6.1.6. LED Light Operation

The OUPES power station includes a built-in LED light.

The **Main Power must be ON** before using the light.

Press the LED Light button repeatedly to cycle through the available modes:

1st Press – 50% Brightness

The LED turns on at approximately 50% brightness.

2nd Press – 100% Brightness

The LED increases to full brightness.

3rd Press – SOS Mode

The LED enters an SOS flashing mode.


4th Press – OFF

The LED light turns off.

The manual specifies the sequence as **50% → 100% → SOS → OFF**

4.3 LED Light Instructions

When the main power is on state, the power on/off button is on the other side. Press once, 50% brightness, press twice, 100% brightness, then press thirdly, it will change to SOS flashing mode, and press once more to power off.

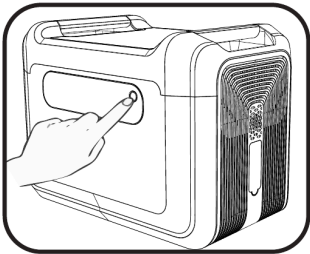

6.1.7. Power Input/Output Specification

These specifications should be observed when connecting equipment to the OUPES power station.

AC Output

1. Rated AC Output: **2400 watts**
2. Peak AC Output: **5000 watts**
3. U.S. Rated Voltage: **100–120V AC**
4. Frequency: **60 Hz**

12V DC / Vehicle Output

1. Rated Voltage: **12V**
2. Rated Current: **10A**

USB-A Output

1. 5V/3A
2. 9V/2A
3. 12V/1.5A
4. Maximum: **18W**
5. Additional 5V/2A output listed by the manufacturer

USB-C Output

1. 5V/3A
2. 9V/3A
3. 12V/3A
4. 15V/3A
5. 20V/3A

Charging/Input

1. Input Voltage Range: **12–45V**
2. 7909 Input: manual lists **2 × 24V/200W (400W maximum)**
3. Anderson Input: **up to 45V / 500W**
4. Maximum Anderson input: **500W**

Battery

1. Rated Capacity: **2232Wh**
2. Battery Type: **LiFePO4**
3. Rated Voltage: **48V / 46.5Ah**

Operating Temperature

1. **0–40°C (32–104°F)**

8. Main Technical Specification			
Output Technical Parameters			
AC Output	Rated Voltage	100~120Vac	220~240Vac
	Frequency	60Hz	50Hz
	Rated Power	2400W	
	Peak Power	5000W	
DC 12V & Car lighter Output	Rated Voltage	12V	
	Rated Power	10A	
USB-A Output	5V/3A; 9V/2A; 12V/1.5A (18W Max) ; 5V/2A		
USB-C Output	5V/3A; 9V/3A; 12V/3A; 15V/3A; 20V/3A		
LED Light	Press once, 50% brightness, press again, 100% brightness, then press again, it will change to SOS flashing mode, and press once more to power off.		
Input			
Input Voltage	12V-45V		
7909 Input Power	2*24V/200W (400W Max)		
Anderson Input Power	2*45V/500W(Single maximum input 500W)		

⚠ WARNING

IMPORTANT: Do not connect equipment that exceeds the generator's rated output capacity.

6.1.8. Fault Codes Troubleshooting

If the generator detects an operating problem, a fault code or warning symbol may appear on the LCD.

E000 – AC Short Circuit Protection

Condition: AC warning/fault indicator appears and there is no AC output.

Action: Press the **AC Output Power ON/OFF button** to recover after correcting the problem.

E001 – Overload Protection

Condition: AC/DC and warning indicators flash and there is no output.

Action: An overload has occurred. Reduce or disconnect the load and press the corresponding output button to recover.

E002 – Battery Low-Voltage Protection

Condition: The related function indicators flash and the corresponding outputs stop operating.

Action: Press the corresponding button to recover. If the battery is depleted, recharge the power station before continuing operation.

E003 – AC & DC Output Running Simultaneously / System Overload

The manual states that the **total AC and DC load must not exceed 2400W**.

If an overload occurs while AC and DC outputs are being used simultaneously:

1. Reduce the connected load.
2. Shut down the **AC output first**.
3. If necessary, shut down or reduce the DC load.

E004 – Inverter Fault

Possible causes listed by the manufacturer include:

1. Inverter output voltage too high or too low
2. Inverter over-temperature
3. DC main-line voltage too high or too low
4. Abnormal connected load/current

Stop using the affected output and investigate the load and operating conditions before restarting.

E005 – BMS Fault

The Battery Management System may activate protection because of:

1. Charge over-voltage
2. Discharge under-voltage
3. High-temperature protection
4. Low-temperature protection
5. Short-circuit protection

Disconnect loads and allow the generator to return to acceptable operating conditions before attempting to resume operation.

9. Fault Code and Trouble Shooting			
Code	Description	Performance	Trouble Shooting
E000	AC Short Circuit Protection	 +  flashing, no output	Press the AC Output Power on/off button for recovery.
E001	Over Load Production	 +  +  flashing, no output	Flashing icons indicates which circuit overload. Press corresponding button for recovery.
E002	Battery Low Voltage Protection	Related function icons flashing , Corresponding terminals no output	Press corresponding button for recovery.
E003	AC&DC Output run simultaneously, system overload	 flashing, AC no output	AC&DC Output run at the same time, the total load power is over 2400W. Shut down the AC output, or lower down the load of AC output, priority support the DC output.
E004	Inverter fault	 +  flashing, no output	Inverter output voltage too high/low; Inverter over temperature; DC main line voltage too high/low; Loaded current abnormal.
E005	BMS fault	 flashing, other function icons Can't lit up, no output	Charge over voltage protection; Discharge under voltage protection; High Temperature Protection; Low Temperature Protection; Short Circuit Protection.

6.2. Growatt Generator

7. Jensen TV Operations

7.1. Power On/Off TV

Turn the TV ON

1. Make sure 12V DC power is available to the television.
2. Point the remote toward the front of the TV.
3. Press the **POWER** button on the remote.
4. Allow several seconds for the television to start.
5. The TV will normally return to the previously selected input/source.

Turn the TV OFF

1. Press the **POWER** button on the remote.
2. Confirm that the television screen turns off.

TIP

If the remote is unavailable, the TV can also be operated using the controls located directly on the television.

7.2. Remote Control Operation

Point the remote toward the TV when operating it.

The primary buttons used during normal Jiggling Pig operation are:

POWER

Turns the television ON or OFF.

SOURCE

Opens the Input Source menu for selecting TV, HDMI or another connected device.

▲ / ▼ / ◀ / ▶

Moves through menus and selections.

ENTER

Confirms the highlighted selection.

MENU

Opens the television's settings menu.

EXIT

Closes the current menu or returns to normal viewing.

VOL + / VOL -

Raises or lowers the TV volume.

MUTE

Immediately turns the television sound OFF. Press MUTE again to restore sound.

CH + / CH -

Changes channels while watching over-the-air television.

0–9 Number Buttons

Allows direct entry of television channel numbers.

RETURN

Returns to the previously viewed channel.

INFO

Displays information about the current television program or input.

EPG

Displays the Electronic Program Guide when available from an over-the-air digital television station.

CC

Turns Closed Captioning options on or off.

SLEEP

Sets the television's automatic sleep timer.

SCALE

Changes the picture/aspect-ratio display mode.

PICTURE

Provides quick access to picture settings.

SOUND

Provides quick access to sound settings.

Remote Batteries

The remote uses **two AA batteries**.

For reliable operation:

1. Point the remote toward the TV's infrared receiver.
2. Stay within approximately **30 feet** of the television.
3. Keep the remote reasonably centered toward the TV.
4. Replace both batteries if remote response becomes weak or intermittent.

⚠ WARNING

The supplied remote is capable of controlling both the TV and compatible Jensen DVD equipment. Several playback buttons on the remote are intended for DVD operation and are not normally needed when operating the television.

7.3. Changing the TV Input / Source

Use this procedure when switching between **antenna television** and **HDMI-connected equipment**.

1. Turn the television ON.
2. Press **SOURCE** on the remote.
3. The Input Source menu will appear.
4. Use **▲ / ▼** to highlight the desired source.
5. Press **ENTER**.

For normal operation, select the source corresponding to the equipment you want to watch.

Watching an HDMI Device

1. Make sure the external device is turned ON.
2. Press **SOURCE**.
3. Select the HDMI input to which the device is connected.
4. Press **ENTER**.
5. Wait several seconds for the picture and sound to appear.

💡 TIP

If the screen displays **No Signal**, first verify that the correct input source has been selected.

7.4. Watching Over-the-Air Antenna TV

The JTV3217DC contains a built-in digital television tuner for receiving available over-the-air TV stations.

Select Antenna TV

1. Make sure the antenna's coaxial cable is securely connected to the TV's **RF IN** connector.
2. Turn the television ON.
3. Press **SOURCE** on the remote.
4. Select **TV**.
5. Press **ENTER**.

If channels have already been programmed, use **CH + / CH -** to move through the available stations.

You can also enter a channel directly using the remote's number buttons.

7.5. Quick Troubleshooting

TV Will Not Turn On

Check the following:

1. Verify that the television is receiving **12V DC power**.
2. Check the TV's power connection.
3. Try pressing **POWER** directly on the television.
4. Try the **POWER** button on the remote.
5. If the TV works from its controls but not the remote, replace the remote's batteries.

Remote Does Not Work

1. Make sure there are no objects blocking the path between the remote and television.
2. Point the remote directly toward the TV's infrared receiver.
3. Move closer to the television.
4. Check that the batteries are installed correctly.
5. Replace both AA batteries if necessary.

TV Has Power but No Picture

1. Press **SOURCE**.
2. Verify that the correct input is selected.
3. Make sure the connected HDMI or video device is turned ON.
4. Check the video/HDMI cable connections.
5. If watching antenna TV, verify that the antenna cable is connected to **RF IN**.
6. Run an **Auto Scan** if local channels have not been programmed.

Screen Shows “No Signal”

A No Signal message usually means that the selected input is not currently receiving a video signal.

Check:

1. The selected **SOURCE**.
2. The connected device's power.
3. HDMI/video cable connections.
4. Antenna connection if using TV mode.

Try selecting another source if necessary.

Picture but No Sound

1. Press **VOL +**.
2. Press **MUTE** to make sure mute is not enabled.
3. Check the sound settings.
4. If using an external HDMI device, verify that the external device is also producing audio.

Cannot Receive Antenna Channels

1. Verify that the antenna is connected to **RF IN**.
2. Select **TV** as the source.
3. Open the Channel menu.
4. Run **Auto Scan**.

5. Allow the complete scan to finish.
6. Reposition or adjust the antenna if reception is poor.

When the rig is moved to a significantly different location, perform another channel scan to locate stations available in the new area.

7.6. Quick Start — Watch TV

POWER → SOURCE → TV → ENTER → CH+/CH-

If channels aren't available:

MENU → Channel → Auto Scan

Quick Start — Watch an HDMI Device

Turn device ON → POWER → SOURCE → HDMI → ENTER

Quick Start — No Sound

VOL+ → Check MUTE

7.7. Watching Streaming TV — Fire TV / Google TV

Initial Setup

1. Connect the Fire TV Stick or Google TV Streamer to an available **HDMI port** on the Jensen TV.
2. Connect power to the streaming device.
3. Turn the Jensen TV ON.
4. Press **SOURCE** on the Jensen remote.
5. Select the HDMI input being used and press **ENTER**.
6. Follow the streaming device's setup instructions.
7. Connect the streaming device to the available **Wi-Fi or mobile hotspot**.
8. Sign in to the desired streaming services.

Normal Operation

1. Turn the Jensen TV ON.
2. Turn/wake the streaming device.
3. Press **SOURCE** on the Jensen remote.
4. Select the appropriate **HDMI** input.
5. Press **ENTER**.
6. Use the Fire TV/Google TV remote to select the desired app or program.

TIP

If the TV displays **No Signal**, verify that the streaming device has power and that the correct HDMI input is selected.

8. Jensen Stereo Receiver Operation Guide

8.1. Power ON/OFF & Basic Controls


Press **POWER** to turn the receiver on or place it in standby. When turned back on, it returns to the last-used mode. The center **VOL/ENTER** knob controls volume; maximum volume is 40. **MUTE** silences the current audio and pressing it again restores the previous level.



DESIGNED TO MOVE "HIFI"

JWM62A

BASIC OPERATION

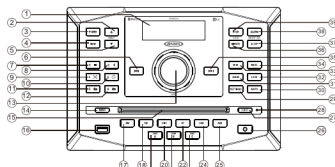

Power

Press the **POWER** button (3) to turn the unit on or enter standby mode.
The unit will resume at the last mode (Tuner, Aux, etc.) after turn on.

Volume Control

Rotate the **VOL** encoder knob (13) clockwise to increase or counter-clockwise to decrease the volume output.
The maximum volume setting is "40". After adjusting the volume, the LCD displays numerical representation of the level.

Audio Menu Setting

Press the **AUDIO** button (31) to step through the following audio adjustment options.
Rotate the **VOL/ENTER** encoder knob control (13) to adjust the selected audio feature.

Audio Adjustment

- **SAC**: Adjust the base level from "-7" to "+7"
- **TRE**: Adjust the Treble from "-7" to "+7"
- **BAL**: Adjust the speaker output balance between "L" (left) and "R" (right).
- **BAL 0**: Indicates an equal balance between the left and right speakers.
- **FRAD**: Adjust the speaker fade between "FR" (rear) and "FR" (front). "FRAD 0" indicates an equal balance between the rear and front speakers.

This function will time out after six seconds of inactivity and the unit will resume normal operation.

Loudness

Press the **LOUD** button (32) to toggle the loudness function on/off.

Mute

Press the **MUTE** button (34) to silence the audio output in tuner, CD, DVD, BT, USB or auxiliary input mode. Press again to restore the previous volume level.

Liquid Crystal Display (LCD)

The liquid crystal display (LCD) panel (1) displays the frequency, time and activated functions.
Press the **BRIGHT UP** button to increase the LCD brightness and press the **BRIGHT DOWN** button to decrease the LCD brightness from "LEVEL Off(0)" to "LEVEL 9" (brightest).

***NOTE:** When subjected to cold temperatures for an extended period of time, LCD panels will take longer to illuminate and the display visibility may slightly decrease. Optimal LCD operation will return to normal when the temperature increases to a normal range.*

System Menu Setting

1. Press the **SETTING** button (29) to enter the system menu.
2. Press **SETTING** button or press the << or >> (6,35) to choose the following system menu list:
- Once the desired menu item appears on the display, adjust that option by rotating the volume encoder knob clockwise or counter-clockwise within 6 seconds.
4. Press the **ENTER** knob button to confirm your selection and exit system menu. The unit will automatically exit the audio menu after 6 seconds of inactivity.

The following items can be adjusted:

- **Beep On/Off**: Turn the audible beep On/Off (heard when functions/blocks are selected).
- **Note**: Beep tone off will not affect the audible tones of the alarm clock.
- **LCD Brightness**: Adjust the brightness of the LCD backlight from "BRI 0" (off) to "BRI 9" (Brightest).
- **Region (USA/Europe)**: Set frequency spacing for various regions.

Setting the Bluetooth

- **Bluetooth (On/Off)**: Choose "Bluetooth On" or "Bluetooth Off".
- **Bluetooth Device** (Locked/Unlocked, Disconnected/Connected, Delete): view, lock and delete from a list of previously paired mobile device models.
- **Bluetooth Pair**: Select "ENTER" knob to automatically pair an device.
- **PRESET Volume (PVOL)**: Select an automatic turn on volume.

Reset

Press **ENTER** knob button to reset the JWM62A to factory default set up values.

8.2. Speaker Zones

The receiver has **three independently selectable speaker zones: A, B and C**. Press **SPK A**, **SPK B** or **SPK C** to turn that speaker zone ON/OFF. The active zones appear on the receiver's display.

Auxiliary Input Function

Press the **AUX** button (26) to directly access auxiliary input modes (AUX IN1 and AUX IN2) from any other mode when a portable audio device is connected to the unit. To connect a portable audio device, insert a standard 3.5mm (audio line) output or headphone output from your portable CD / MP3 / iPod or other media player) into the AUX / AV IN connector (AUX IN1) (26) on the front of the unit or the AUDIO IN (AUX IN2) on the back of the unit (see "Wiring" on page 3).

Auxiliary Input Connector

For front panel AV input, an external audio/video (A/V) source such as a video game player, camera, etc., can be connected to the front panel AV input with the provided 3.5mm A/V cable adapter (Please note that there are several different A/V cable "standards"). Connect the device to the AUX / AV IN connector (26) on the front panel.

In addition to front panel auxiliary input source, the unit can also be connected to the RCA audio input through the AUDIO INPUT jack on the rear of the unit.

Press the **AUX** button (26) to directly access auxiliary input modes (AUX IN1 and AUX IN2) from any other mode when a portable audio device is connected to the unit.

USB Interface Connector

You can connect a USB device directly to USB interface (16) on the front of the JWM62A for playback of compatible files. Playback begins automatically. Press the USB button (16) to switch to USB mode from another source. Refer to "MP3/USB Operation" on page 13 for additional operating instructions.

NOTE: USB will not support Apple device playback. The USB input supplies up to 1A of charging current.

Clock Display

Press the **VIEW** button (4) to alternate between playing time and clock time while in Tuner, CD, DVD, USB or auxiliary input mode.

Clock Setup

Press and hold the HOUR button (30, 38) to access clock setup mode. The number representing the hours and minutes will flash. Press the **STOP** button (30) to adjust the hour and press the **MINUTE** button (36) to adjust minutes. The new time will be saved five seconds after the last adjustment is made.

Sleep Mode

The Sleep Time will automatically turn off the JWM62A in the designated number of minutes. To set the Sleep Time, press the **SLEEP** button (37) and the sleep time will appear in the display with the number representing the minutes (SLEEP 0). Press **SLEEP** button repeatedly to change the sleep time from (OFF), 15, 30, 45 or 60 minutes.

Alarm Setting

To set the alarm, press and hold the **ALARM** set button (38) for 2 seconds and the clock digits will be flashing. Press the **HOUR** button to adjust the hour once at a time or press and hold to advance rapidly. Repeatedly press the **MINUTE** button to adjust the minute one digit at a time, or press and hold to advance rapidly. Press the **ALARM** SET or **ENTER** knob button to save the alarm time. Once a time is set, press **ALARM ON/OFF** (36) to turn the alarm function on or off.

Remote Sensor

The remote sensor is located on the upper left of front panel to receive infrared signal emitted by the remote control.

Speaker Output

The three speaker output buttons (19, 21, 23) (Zone A, Zone B and Zone C) control speaker zones output from the radio. Press any of the three buttons to turn the corresponding speaker zone on or off. SPK A (Zone A), SPK B (Zone B) or SPK C (Zone C) will appear on the display.

Reset

The reset button should be activated for the following reasons:

- initial installation of the unit when all wiring is completed
- function buttons do not operate
- error symbol on the display

Use a ball point pen or similar object to press the **RESET** button (28). This may be necessary should the unit display an error code.

8.3. AM/FM Radio

Press AM or FM to select a band. The receiver provides AM1/AM2 and FM1/FM2/FM3. Use the tuning buttons for manual tuning or hold them to automatically seek the next strong station. The six preset buttons recall saved stations. Holding AS/PS for more than three seconds automatically finds and stores the strongest stations—up to 12 AM and 18 FM presets

JENSEN

DESIGNED TO WORK "SMART"

JWM62A

TUNER OPERATION

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18

19

20

21

22

23

24

25

26

27

28

29

30

31

32

33

34

35

36

37

38

39

40

41

42

43

44

45

46

47

48

49

50

51

52

53

54

55

56

57

58

59

60

61

62

63

64

65

66

67

68

69

70

71

72

73

74

75

76

77

78

79

80

81

82

83

84

85

86

87

88

89

90

91

92

93

94

95

96

97

98

99

100

Select a Band

1. Press **AM** button (17) repeatedly to select the band (AM1, AM2)
2. Press **FM** button (18) repeatedly to select the band (FM1, FM2 and FM3)

Manual Tuning

Press the >>[or]<< buttons (35, 6) to seek stations up/down step by step.

Auto Seek Tuning

Press and hold the >>[or]<< buttons (35, 6) to automatically seek the next or previous strong station.

Preset Stations

Six numbered preset buttons store and recall stations for each AM and FM band.

Store a Station

Select a band (if needed). Press a 1-6 preset button to select the corresponding stored station.

Automatically Store / Preset Scan (AS/PS)

Automatically Store

Select an AM or FM band. Press and hold the **AS/PS** button (30) for more than 3 seconds and the unit will automatically scan for and store 12 or 18 strongest stations for AM or FM respectively. To stop this function before the automatic storing is complete, press **AS/PS** again.

Preset Scan

Select a band. Press **AS/PS** button to scan stations stored in the current band. The unit will pause for 10 seconds at each preset station. Press **AS/PS** again to stop scanning when the desired station is reached.

9

8.4. Bluetooth / Playing Music from a Phone

Press BT to enter Bluetooth mode. For initial pairing, press and hold BT for about 4 seconds. The display shows PAIR, and the receiver remains available for pairing for approximately 120 seconds. On the phone, open Bluetooth settings and select JWM62A. Once connected, audio from the phone can play through the receiver.

JENSEN

DESIGNED TO WORK "SMART"

JWM62A

BLUETOOTH OPERATION

The JWM62A includes built-in Bluetooth technology that allows you to connect this head unit to Bluetooth devices for streaming audio playback.

About Bluetooth Technology

Bluetooth wireless technology is a short-range wireless radio protocol. Operating in the 2.4 GHz range, it transmits audio and data at speeds up to 2.1 Mbit/s over a range of up to 10 meters.

Bluetooth Menu Options

NOTE: Please note that some Bluetooth menu options are only available while the unit is in Bluetooth Audio mode.

Press and hold the BT button (22) to enter menu adjustment mode. Repeatedly press the >>[or]<< buttons (35, 6) or **SETTING** button to access the "Bluetooth On/Off" menu function. Rotate the volume encoder knob to select **BLUETOOTH ON**, then press the **ENTER** button to turn the Bluetooth function On or Off. The following menu options are available when the unit is in Bluetooth mode.

BT Device

Press Enter

Use >>[or]<< to Navigate the List

Device 1

Device 2

Device 3

Device 4

Device 5

Press Enter

Device 1

Lock/Unlock

Connect/Disconnect

Delete

Device 5

Lock/Unlock

Connect/Disconnect

Delete

Bluetooth Pair <ENTER>

Press and hold the **BT** (22) button for about 4 seconds to start pairing with a Bluetooth enabled device.

Bluetooth Device

Press the **ENTER** knob button to view a list of previously paired mobile devices models. Press the >>[or]<< buttons to view devices from the list. You cannot delete a device that is actively connected. Press the **ENTER** knob button to select the device. Press the >>[or]<< button to choose Locked/Unlocked, Connect/Disconnect or Delete for this device.

Bluetooth Pair (BT Pair)

Press and hold the **BT** button (22) for about 4 seconds to start pairing with a Bluetooth enabled device.

DISCONNECT

To disconnect a paired device, press the **ENTER** knob button to temporarily remove the BT link. The link can be re-established through your phone menu by selecting the **JWM62A** for connection.

LOCKED/UNLOCKED

The **JWM62A** can store up to 5 devices for BT connection. The devices are stored in FIFO (First In First Out) order. To prevent a device from being bumped from the list when more than 5 devices are used, you must lock the device. To Lock/Unlock a device, press the **ENTER** knob button.

DELETE

To delete a device from the list, Press the **ENTER** knob button.

Pairing a Bluetooth Device

Before you begin, consult the owner's manual for the Bluetooth device you want to pair with the **JWM62A**.
Make sure the device you intend to pair with is on and ready to pair.
1. Press **BT** button to enter Bluetooth mode.
2. Press and hold **BT** button to start Bluetooth pairing process. The **JWM62A** will display "PAIR" and will be available to pair for 120 seconds.
3. In your device Bluetooth settings, select "JWM62A" to connect.
After connecting successfully, you are able to listen to music stored on your Bluetooth enabled device through the **JWM62A**.

Answering a Call

When answering a call using the connected phone, BT AUDIO will pause. After hanging up from the call, BT AUDIO to continue on some phones. It may be necessary to press the play button to resume BT AUDIO.

Bluetooth Audio (A2DP)

The A2DP music is available for Bluetooth enabled phones when the phone is connected. To access Bluetooth mode and play songs stored in your phone, press the **BT** button (22) to enter the Bluetooth mode.
While in Bluetooth mode, the "BT PAUSE" will display on the LCD.

15

https://admin.thejigglingpig.com/user-guide

51/59

8.5. DVD Playback Through the TV

This one matters because the receiver and TV work together. The JWM62A contains the **DVD player**, while the JTV3217DC serves as the display. The JWM62A manual shows rear **VIDEO OUTPUT** connections for feeding video to an external display.

For the guide, we'll want a very explicit procedure along the lines of:

JWM62A POWER ON → Insert DVD → Turn TV ON → TV SOURCE → select the AV input connected to the JWM62A → PLAY.

One important point I found while checking the actual manual: the JWM62A connection diagram identifies **RCA VIDEO OUTPUT**, not HDMI. So we should document the connection that is actually installed between your receiver and TV rather than assuming HDMI. The manual's troubleshooting table mentions HDMI, but that conflicts with the JWM62A connection diagram and published product specifications, which identify video outputs as RCA.



DESIGNED TO MOVE™

JVM62A

2. Use the **◀** or **▶** cursor buttons (15) on the remote control to access the fields on the "PROG." screen.
3. Use the number buttons on the remote control to enter a track number in each field.
4. Press the **J** button (17) on the remote control or highlight "PLAY" on screen and then press the **ENTER** button (10) to begin playing in the numbered order indicated to delete the list, highlight "CLEAR" and then press **ENTER**. Press **PROG** to exit the programmed playback screen.

DVD Playback Features

The following remote controls are available with many others, are available during DVD playback (see "Remote Control Operation" on page 17 for complete functionality):

- **LANG**: Press to choose an alternate audio language, if available.
- **TEXT**: Press to toggle on alternate subtitle language, if available.
- **ANGLE**: Press to select an alternate viewing angle, if available.
- **VIEW**: Press to zoom the picture at ZOOM 1, ZOOM 2, ZOOM 4, ZOOM 16.
- **ZOOM 1/2**: ZOOM 1/2 or ZOOM 1/4, or select OFF to return to normal view.

NOTE: Feature availability is dependent upon DVD embedded information.


Playback Information

During DVD and VCD playback, press the  button (26) on the remote control to display playback information on the screen, including the media playing and current playback time.

Continue pressing the button to display additional information, as indicated below.

DVD Playback Information

The following information is displayed at the top of the screen during DVD playback:



The image shows a DVD playback information display. At the top, it shows 'DVD TT 5:8 CH 21/8' followed by a time '00:00:33.34'. Below this, there are three buttons: '1/5 ENG', '5.1 CH', and '1/4 ENG'. To the right of these buttons is an 'OFF' button.

TT 5:8 ~ 15:8" indicates the fifth of eight titles on the DVD is currently playing. CH 21/6 ~ 21/16" indicates that the second of 16 chapters on the DVD is currently playing.

Press  repeatedly to view the following information: for elapsed/dramatic playing time:

- 00:02:18 – total elapsed playing time of the current track;
- C 00:34:37 – remaining playing time of the current track;
- T 00:02:18 – total elapsed playing time for disc;
- T 00:34:37 – remaining playing time for disc;
-  1/5 ENG – English is the selected audio language out of 5 possible choices;
-  5.1 CH – The current language is recorded in 5.1 surround sound;
-  1/4 ENG – English is the selected subtitle language out of 4 possible choices;
-  OFF – There are no alternate angles recorded for this scene.

VCD Playback Information

The following information is displayed at the top of the screen during VCD playback:



The image shows a VCD playback information display. At the top, it shows 'VCD TRK 1/18' followed by a time '00:00:33.34'. Below this, there is a time '00:33:34'.

TRK 1/18 ~ 1/18" indicates the first of 18 tracks on the VCD is currently playing. PBC: Indicates when PBC (Playback Control) is turned on.

 ~ "X" indicates repeat play is OFF. "1" indicates repeat track, "D" indicates repeat directory, and "A" indicates repeat album.

Press the  repeatedly to view the following information for elapsed/dramatic playing time:

- 00:02:18 – total elapsed playing time of current track;
- C 00:34:37 – remaining playing time of current track;
- T 00:02:18 – total elapsed playing time for current disc;
- T 00:34:37 – remaining playing time for current disc.

Remote Control Direct Track Entry

To select a track directly, use the number pad on the remote control (10). For single digit entries, press the corresponding number; for two-digit entries, press the 10+ button followed by the last digit (i.e., for track 16, press 16+ then 10).

GOTO Direct Track/Chapter Access

Use the GOTO function to access a track (chapter) directly.

1. Press the **GOTO** button (25) on the remote control. The On Screen Display information will appear with the track number highlighted.
2. Use the number keys on the remote control to enter the 3-digit track number directly, or for track 10, enter "10".
3. Press the **ENTER** button to confirm and begin playback.

12

JENSEN
DESIGNED TO MOVE™ 7907

JVM62A

WIRING

The wiring diagram details all the wiring connections required for proper operation of the unit.

DETAIL A
SHOWN FROM PIN VIEW

PIN NO.	WIRE COLOR	DESCRIPTION
1	PINK/BLACK	RIGHT (C) SPEAKER (-)
2	PINK	RIGHT (C) SPEAKER (+)
3	GREEN	LEFT (C) SPEAKER (+)
4	GREEN/BLACK	LEFT (C) SPEAKER (-)
5	BROWN/BLACK	LEFT (B) SPEAKER (-)
6	GRAY	FRONT RIGHT (A) SPEAKER (+)
7	GRAY/BLACK	FRONT RIGHT (A) SPEAKER (-)
8	N/A	N/A
9	WHITE/BLACK	FRONT LEFT (A) SPEAKER (-)
10	WHITE	FRONT LEFT (A) SPEAKER (+)
11	ORANGE	RIGHT (B) SPEAKER (+)
12	ORANGE/BLACK	RIGHT (B) SPEAKER (-)
13	BROWN	LEFT (B) SPEAKER (+)
14	BLUE	AMP REMOTE (+)2VDC 100mA
15	RED	+12VDC SWITCHED
16	BLACK	GROUND
17	VIOLET	RIGHT REAR (A) SPEAKER (+)
18	VIOLET/BLACK	RIGHT REAR (A) SPEAKER (-)
19	LIGHT GREEN/BLACK	LEFT REAR (A) SPEAKER (-)
20	LIGHT GREEN	LEFT REAR (A) SPEAKER (+)

WARNING: Wiring harness comes with stripped and tinned leads to aid in the installation process. Any unused speaker wires must have their exposed ends cut off or insulated in any manner.

CONNECTIONS

The diagram below depicts all the available audio/video connections available to use with your system.

6

8.6. Remote Control

The remote operates differently depending on whether you're using the radio, Bluetooth, CD/USB or DVD. The manual provides a very useful numbered remote graphic and function table showing exactly what each button does in each mode.

JENSEN

DESIGNED TO MOVE™

JWM62A

REMOTE CONTROL OPERATION

REF	DESCRIPTION	TUNER	BLUETOOTH	CD/MP3/USB	DVD
1	Power	Turn radio on/standby mode.	Turn radio on/standby mode.	Turn radio on/standby mode.	Turn radio on/standby mode.
2	VOL +/-	Adjust volume up/down. Press for Audio Control Setup menu.	Adjust volume up/down. Press for Audio Control Setup menu.	Adjust volume up/down. Press for Audio Control Setup menu.	Adjust volume up/down. Press for Audio Control Setup menu.
3	TUNE +	Tune to higher station.			
4	TUNE -	Tune to lower station.			
5	ENTER		Confirm menu selection.	Confirm menu selection.	Confirm menu selection.
6	ALARM	Turn the alarm feature on/off.	Turn the alarm feature on/off.		Turn the alarm feature on/off.
7	PROG		Display Program Play Menu.	Display Program Play Menu.	Display Program Play Menu.
8	LANG		Display MONO/L MONO or STEREO.	Select alternate audio language, if available.	Select alternate audio language, if available.
9	Numeric Keyboard	Use 1-6 to access preset stations.		Enter track number to access track directly. For track Number > 10, use 10+ followed by second digit.	Enter track number to access track directly. For track Number > 10, use 10+ followed by second digit.
10	Setup			View SETUP menu.	View SETUP menu.
11	Subtitle				Choose subtitle language, if available.
12	Mute/LOUD	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.	Silence Audio output. Press and hold to turn LOUDNESS feature on/off.
13	Eject	Eject Disc.	Eject Disc.	Eject Disc.	Eject Disc.
14	Previous/Next	Select next/previous track.	Select next/previous track.	Select next/previous track.	Select next/previous track.
15	Directional Buttons		Move to desired menu item and then press ENTER to confirm.	Use with DVD menu to move to desired menu item and then press ENTER to confirm.	
16	Fast Reverse/Forward		Fast Forward 2X, 4X, 8X, 20X. Fast Reverse 2X, 4X, 8X, 20X.	Fast Forward 2X, 4X, 8X, 20X. Fast Reverse 2X, 4X, 8X, 20X.	Fast Forward 2X, 4X, 8X, 20X. Fast Reverse 2X, 4X, 8X, 20X.
17	Play/Pause Stop	Pause/resume playback.	Pause/resume playback.	Pause/resume playback.	Pause/resume playback.
18	TITLE		Stop playback.	Stop playback.	Stop playback.

17

8.7. AUX & USB

Press AUX to switch between AUX IN1 and AUX IN2. The front AUX connection accepts a 3.5 mm A/V source. USB devices can be connected to the front USB port for compatible MP3/WMA playback. The manual states that the USB port also supplies up to 1A charging current, but does not support Apple-device playback through USB.

8.8. Troubleshooting

I extracted the troubleshooting table covering receiver won't turn on, receiver has power but no sound, CD/DVD problems, no AM/FM reception, DVD sound but no video, and remote-control problems.

JENSEN

DESIGNED TO MOVE™

JWM62A

CARE AND MAINTENANCE

- Keep the product dry. If it does get wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.
- Keep the product away from dust and dirt, which can cause premature wear of parts.
- Handle the product gently and carefully. Dropping it can damage circuit boards and cases, and can cause the product to work improperly.
- Wipe the product with a dampened cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the product.
- Use and store the product only in normal temperature environments. High temperature can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.

Ignition

The most common source of noise in reception is the ignition system. This is a result of the radio being placed close to the ignition system (engine). This type of noise can be easily detected because it will vary in intensity of pitch with the speed of the engine.

Usually, the ignition noise can be suppressed considerably by using a radio suppression type high voltage ignition wire and suppressor resistor in the ignition system. (Most vehicles employ this wire and resistor but it may be necessary to check them for correct operation.) Another method of suppression is the use of additional noise suppressors. These can be obtained from most CBA radio or electronic supply shops.

Interference

Radio reception in a moving environment is very different from reception in a stationary environment (home). It is very important to understand the difference. AM reception will deteriorate when passing under a bridge or when passing under high voltage lines. Although AM is subject to environmental noise, it has the ability to receive at great distance. This is because broadcasting signals follow the curvature of the earth and are reflected back by the upper atmosphere.

TROUBLESHOOTING

Symptom	Solution
Radio will not turn ON or No front panel operation	Try the reset button. Check fuse. Check 12V+ on accessory wire to radio (RED wire) Check Ground.
Radio turns ON, but no sound	Verify Volume, Fader/Balance, Mute controls are set correctly (see owner's manual). Try the reset button. Verify proper speaker selection. Verify proper speaker connections. Check for shorts or open circuits on speaker wires. - If short on "A" channel, "B" & "C" channels will continue to function. - If short on "B" and/or "C" channels, "A" channel will continue to function.
CD/DVD does not load fully	Make sure unit has power and no other CD/DVD is currently inside. Make sure transport screw has been removed from rear of unit. Disc will load for several seconds and then eject if transport screw has not been removed.
CD/DVD does not play correctly	Check to make sure disc is inserted correctly. Verify disc is free from dirt, scratches, etc. Check with factory CDs. Inspect radio's chassis to verify shipping screw(s) have been removed. Check factory original CDs for compatibility warnings (due to various copy-protection, multimedia content, etc.).
No AM or FM reception	Verify you are tuned to a valid station. Check your antenna connection on rear of stereo. Try a different antenna.
DVD plays sound but no video	Make sure the HDMI cable is routed from the HDMI output to the input on the television.
Unit does not respond to Remote Control	Verify that you have a clear line of sight for the IR signal. Check the batteries. Confirm the remote IR sensor is plugged into IR input (if applicable).

21

9. Fresh / Dirty Water System for Sink

9.1. Emptying Dirty Water Tank

Open up the door to the sink and at the bottom of the sink floor you will see a lever, pull this up and this will release the dirty water in the left water tank.

9.2. Add Fresh Water to Tank

Before taking the rig out, ensure the fresh water tank is full. The image will show the water tank cap in upper right; remove the cap and fill the tank till it's an inch below the top of the tank. You can open the door to the sink to see the tank as it's being filled.



9.3. Powering Water Pump

There are two switches that needs to engaged in order for the water pump to work:

1. The Main Power: On the power panel, on front of entertainment cabinet you will see a switch that says 'Water Pump', toggle this switch to the right.
2. On the water sink cabinet itself you will see a toggle switch, only toggle this switch on when you are getting ready to use the sink. If you are using the sink flip the switch on and you will hear the water pump humming. Turn on the water and the pump will be activated and you will hear the water pumping through the pump

10. Square Terminal – MCP31CI Receipt Printer Setup

10.1. Before You Begin

Make sure you have:

1. Square Terminal
2. Hub for Square Terminal
3. Star Micronics MCP31CI / mC-Print3 receipt printer
4. Printer power adapter
5. USB cable
6. Thermal receipt paper

TIP

Use the USB connection for the normal Jiggling Pig setup. This provides a direct connection between the Square Terminal and receipt printer without requiring the printer to be connected to Wi-Fi or a network.

10.2. Connect the Printer to the Square Terminal

Step 1 — Connect Printer Power

1. Connect the printer's power adapter.
2. Plug the power adapter into an electrical outlet.
3. Turn the printer **ON**.
4. Confirm that the printer powers up normally.

Step 2 — Install Receipt Paper

1. Open the printer cover.
2. Insert a roll of thermal receipt paper.
3. Make sure the paper feeds from the roll in the correct direction.
4. Pull a small amount of paper past the cutter.
5. Close the printer cover.


Step 3 — Connect the USB Cable

Connect the printer's USB cable between the:

MCP31CI Printer → Square Terminal Hub

Do not connect the printer directly to the Square Terminal's charging port.

The Square Terminal Hub provides the USB connections used for compatible accessories.

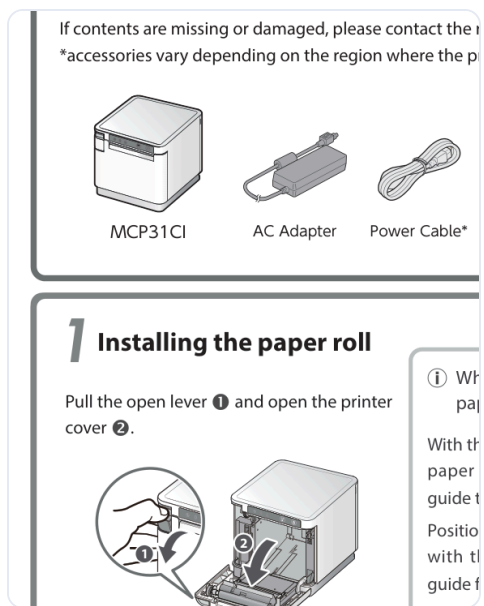

reseller that sold you the printer. The printer was purchased.



Safety
Instructions




Easy
Setup Guide

When using a 58mm roll, install the paper roll guide sold separately.

Align the notch part A (triangle mark) of the roll guide facing down, and angle it to the right and insert it ❶.

Push down so that the notch part A is aligned with the main unit rib B, then slide it from the right ❷.

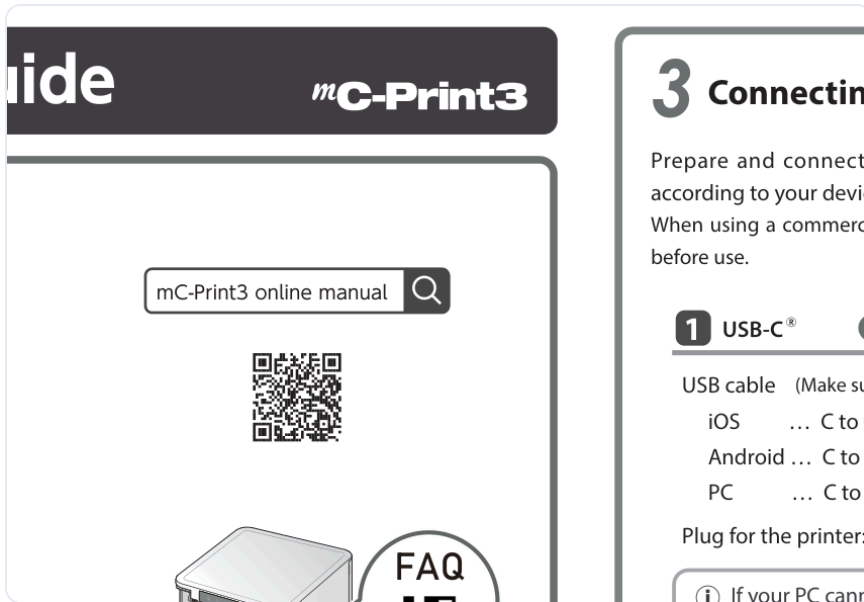

10.3. Add the Printer in Square

Once the printer is connected and powered ON:

1. Turn on the **Square Terminal**.
2. Sign into Square.
3. Tap ≡ **More**.
4. Tap **Settings**.
5. Tap **Hardware**.
6. Tap **Printers**.

The connected Star Micronics printer should appear in the printer list.

Square may also automatically display a message indicating that a new printer has been detected.

10.4. Configure the Receipt Printer

Select the connected Star printer.

Create or assign a **Printer Profile**.

For normal Jiggling Pig operation, configure the printer primarily for:

Receipts — ON

Additional printing options may be enabled later if the printer will also be used for order tickets.

Give the printer an easy-to-identify name such as:

Jiggling Pig Receipt Printer

Save the printer configuration.

10.5. Test the Printer

After configuring the printer:

1. Go to:

More → Settings → Hardware → Printers

1. Select the **Jiggling Pig Receipt Printer**.
2. Select **Print Test**.

The printer should immediately print a test receipt.

If the test receipt prints successfully, the Square Terminal and MCP31CI are ready for use.

10.6. Normal Daily Operation

At the beginning of an event:

1. Turn the MCP31CI printer **ON**.
2. Make sure receipt paper is installed.
3. Turn the Square Terminal **ON**.
4. Allow Square to start normally.
5. Verify that the printer shows as connected.

If desired, perform a **Print Test** before taking the first customer order.

10.7. If the Printer Does Not Appear

Check the following:

Printer Power

Verify that:

1. Printer is plugged in.
2. Printer is turned ON.
3. Printer status lights appear normal.

USB Connection

Check both ends of the USB cable:

Printer → Square Terminal Hub

Disconnect and reconnect the USB cable if necessary.

Square Printer Settings

Go to:

More → Settings → Hardware → Printers

Check whether the Star printer appears.

Restart the Printer

1. Turn the printer OFF.
2. Wait approximately 10 seconds.
3. Turn the printer back ON.
4. Check Square again.

Restart the Square Terminal

If necessary:

1. Press and hold the Square Terminal power button.
2. Release the button when **Restart** appears.
3. Select **Restart**.
4. Allow the Terminal to restart.
5. Return to:

More → Settings → Hardware → Printers

10.8. Quick Start

Connect

Printer ON → USB to Square Terminal Hub → Square Terminal ON

Configure

More → Settings → Hardware → Printers → Select Printer → Assign Printer Profile → Save

Test

Printers → Jiggling Pig Receipt Printer → Print Test

Daily Check

Printer ON → Paper Loaded → Square Terminal ON → Verify Printer Connected