

## Elation Stage Setter-8

Start-Up Settings: These settings must be correct for the light board to work as we want.



The right side of the lightboard should be configured as shown in the picture above.

- Mode: 1 x 16 needs to be selected
- Cross Faders: Both need to be pushed all the way up
- Master: Needs to be pushed all the way up
- Blackout: Needs to be pressed so that the yellow light is off

In the configuration shown above, the light board can send signals to the proper lights. However, in the picture shown, no signals are being sent to the lights because faders 1-16 are at zero. Please see the next section on how to send signals to the lights.

## Basic Overview:

- The top 6 faders, numbered 1-6, control the two inside lights.
  - R = Red (Fader 1)
  - G = Green (Fader 2)
  - B = Blue (Fader 3)
  - W = White (Fader 4)
  - A = Amber (Fader 5)
  - UV = Ultra-Violet (Fader 6)
- The bottom 3 faders, numbered 9-11, control the two outside lights.
  - Cool = Cool White (More of a Blue White) (Fader 9)
  - Warm = Warm White (More of a Yellow White) (Fader 10)
  - Amb = Amber (Very Yellow White) (Fader 11)
- The faders marked “Nothing”, numbered 7, 8, & 12-16, do not control any part of the four lights hanging from the bar, and should remain at zero level.

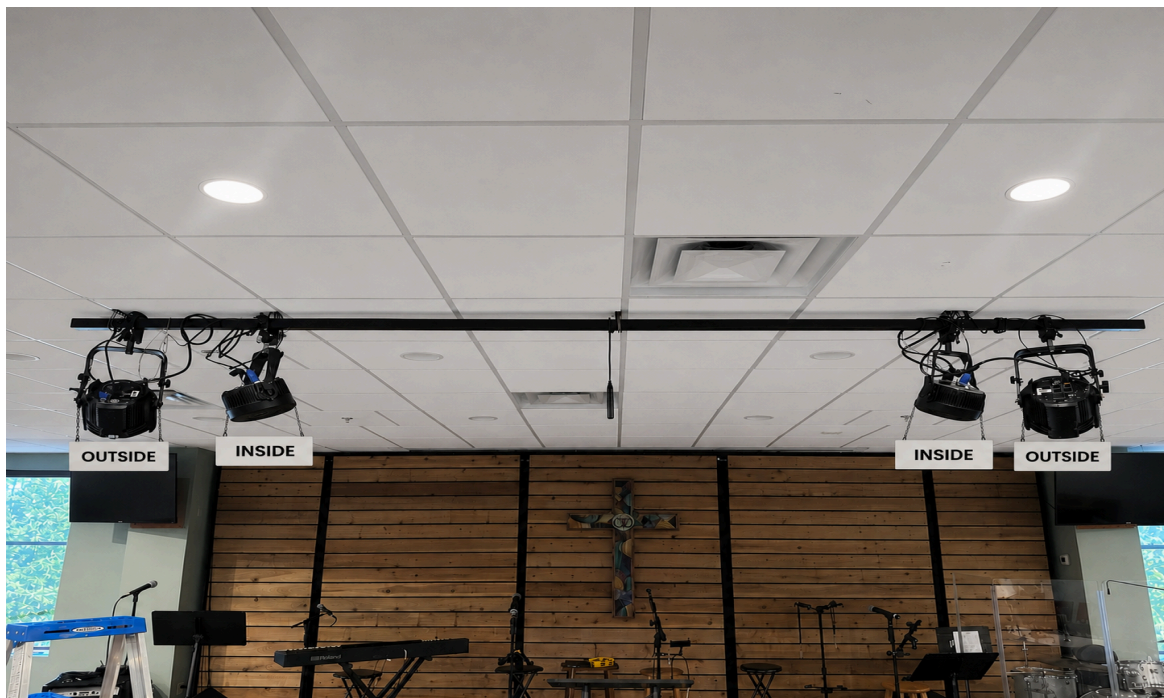


Photo showing “Outside” vs. “Inside” light positioning.