


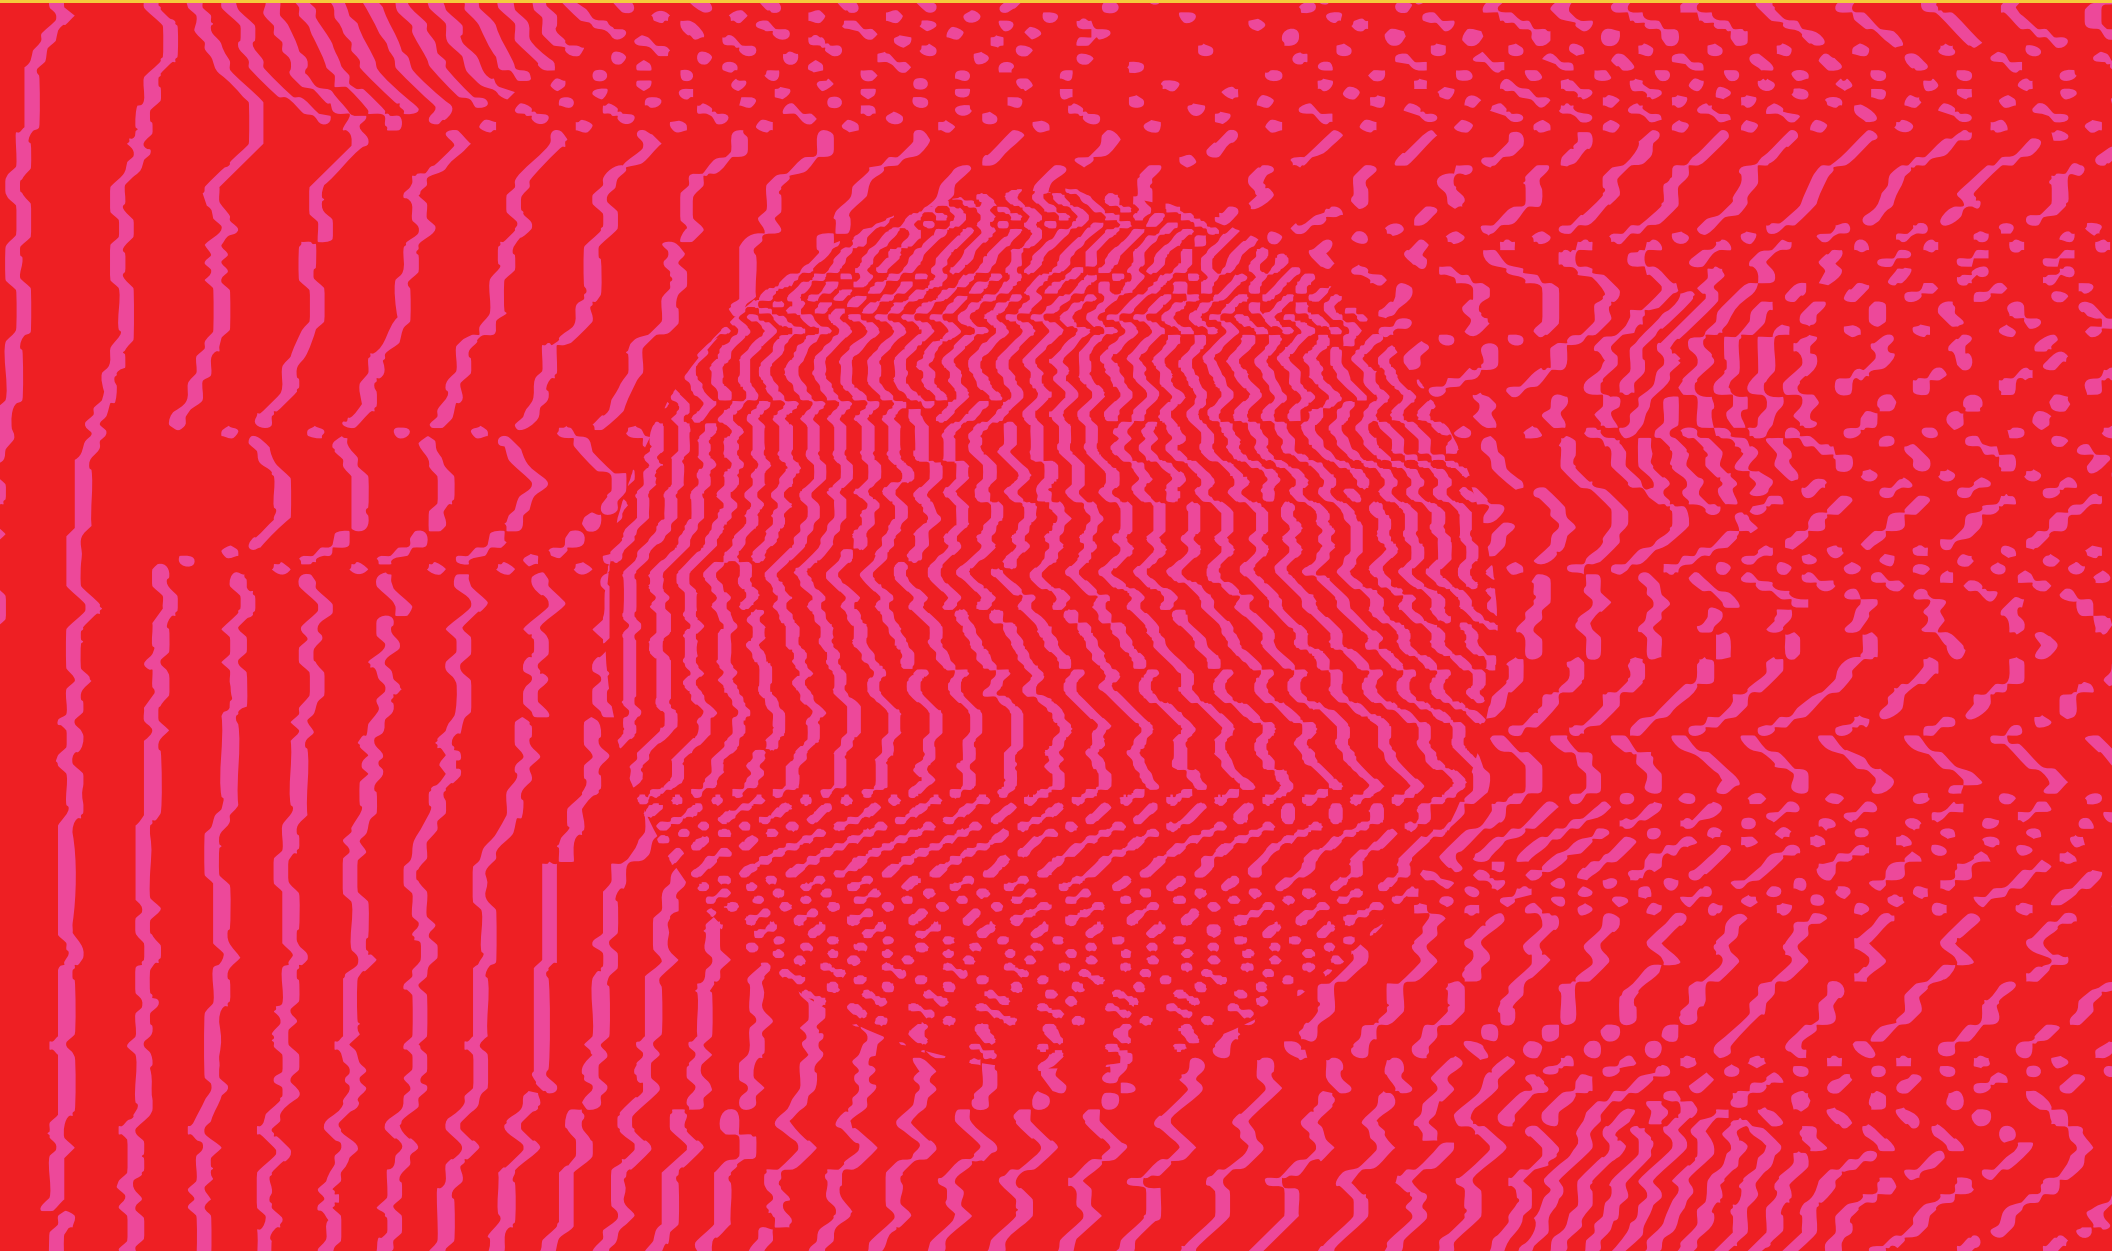

BAD MOOD MIDI Manual



GETTING STARTED



You can use MIDI with **BAD MOOD** to control any of its parameters, sync to external clock, and save and recall up to 122 presets.

You can also use MIDI to access the unique Synth Mode (pg 09).

GETTING CONNECTED

1. **BAD MOOD** receives MIDI through a standard ¼" TRS patch cable. If your controller has a 5-pin output, the Chase Bliss MIDIBox is a simple way to convert 5-pin MIDI to TRS (the MIDIBox is not included with **BAD MOOD**).

2. **BAD MOOD** is set to MIDI channel 2 by default, but it's easy to change. Simply hold down both stomp switches when you power up the pedal. The pedal is now looking for the first "Program Change" message it sees, and it will set itself to that channel.

SAVING A PRESET VIA MIDI

Presets are both saved and recalled by using Program Change (PC) messages.

To save a preset, send a PC message while holding down both foot switches. Sending a Program Change message of 45, for example, will save your current settings to preset 45.

There are 122 total slots.

Slots 1 and 2 correspond to the preset toggle on the pedal. Slot 1 is the right slot. Slot 2 is the left slot.

RECALLING A PRESET VIA MIDI

To recall a preset, simply send **BAD MOOD** a Program Change message.

If the target slot is empty, then nothing will be recalled. There are no factory presets besides the two that come loaded in slots 1 and 2.

Sending a Program Change message of 0 puts the pedal in "Live" mode, matching the pedal's current settings.

BAD MOOD Control Change Channels

What:	MIDI CC:	Value:
FOOTSWITCHES		
 BYPASS	102	OFF = 0 ON = 1 OR >
 BYPASS	103	OFF = 0 ON = 1 OR >
HIDDEN OPTIONS	104	OFF = 0 ON = 1 OR >
 FREEZE	105	OFF = 0, ON = 1 OR >
 OVERDUB	106	OFF = 0 ON = 1 OR >
KNOBS		
TIME	14	0 - 127
MIX	15	0 - 127
LENGTH	16	0 - 127
 MODIFY	17	0 - 127
CLOCK *	18	0 - 127
 MODIFY	19	0 - 127
RAMP SPEED	20	0 - 127

*See page 5 for a detailed breakdown of the specific values

What:	MIDI CC:	Value:
TOGGLES		
 WET CHANNEL	21	SOUP = 0, 1 RELAY = 2 FLIP = >2
ROUTING	22	IN = 0, 1  +IN = 2  = >2
 MICRO-LOOPER	23	BURST = 0, 1 RADIO = 2 MASK = >2
MISC / RANDOM		
MIDI CLOCK IGNORE <i>SAVED GLOBALLY</i>	51	IGNORE = 0 FOLLOW = 1 OR >
STOP RAMPING	52	STOP = 0, RESUME = >0
TRUE BYPASS MODE	55	OFF = 0, ON = >0
FACTORY RESET	56	0 - 127
EQ PER CHANNEL	85	ONLY WET EQ = 0, 1 BOTH EQ (DEFAULT) = 2 ONLY  EQ = >2
TAP TEMPO	93	0 - 127
To exit tap tempo mode hold the  Footswitch and turn the TIME knob.		
EXPRESSION OVER MIDI	100	0 - 127
MIDI RESET **	110	0 - 127
** Ignore MIDI clock OFF, Octave transpose +3 octaves, Clock division set to quarter note, Portamento OFF, Gate mode OFF		
PRESET SAVE	111	0 - 122

BAD MOOD Control Change Channels

What:	MIDI CC:	Value:
HIDDEN OPTIONS		
CROSS	24	0 - 127
BALANCE	25	0 - 127
FADE 	26	0 - 127
EQ	27	0 - 127
GLUE	28	0 - 127
BLEND 	29	0 - 127
MASTER VOLUME	30	0 - 127
SYNC	31	 >  = 0, 1 NO SYNC = 2  >  = >2
SPREAD	32	 ONLY = 0, 1 BOTH = 2  ONLY = >2
CROSS INPUT	33	 >  = 0, 1 INPUT >  +  = 2  >  = >2

What: Value:

STEPPED CLOCK (cc18)

2k	0 - 4
3k	5 - 16
4k	16 - 28
6k	29 - 40
8k	41 - 53
12k	54 - 69
16k	70 - 83
24k	84 - 95
32k	96 - 109
48k	110 - 121
64k	122 - 127

What: Value:

RADIO STATIONS (cc19)

TAPE	0
AMBIENT	32
ORCHESTRAL	63
SHOEGAZE	97
DANCE	127

What:	MIDI CC:	Value:
SUBDIVISIONS		
 CLOCK DIVISION * <i>SAVED GLOBALLY</i>	53	0 = THIRTY SECOND NOTE 1 = SIXTEENTH NOTE 2 = EIGHTH NOTE TRIPLET 3 = EIGHTH NOTE 4 = QUARTER NOTE 5 = HALF NOTE 6 = DOTTED HALF NOTE 7 = WHOLE NOTE 8 = DOUBLE WHOLE NOTE
 CLOCK DIVISION * <i>SAVED GLOBALLY</i>	54	0 = THIRTY SECOND NOTE 1 = SIXTEENTH NOTE 2 = EIGHTH NOTE TRIPLET 3 = EIGHTH NOTE 4 = QUARTER NOTE 5 = HALF NOTE 6 = DOTTED HALF NOTE 7 = WHOLE NOTE 8 = DOUBLE WHOLE NOTE

* BAD MOOD can run at any BPM or clock division, but the pedal must adjust its internal sample rate in order to reach tempos slower than 60 BPM. This will result in the speed and pitch of existing audio being shifted. Note that the BPM of the pedal is dependent on the selected clock division. For example, syncing to an external BPM of 120 with a quarter note division will mean BAD MOOD is running at 120 BPM. Changing the subdivision to a whole note will lower the BPM to 30.

BAD MOOD Control Change Channels

What:	MIDI CC:	Value:
DIP SWITCHES		
LEFT BANK		
(CONTROL)		
≡ TIME	61	OFF = 0, ON = 1 OR >
≡ MODIFY	62	OFF = 0, ON = 1 OR >
CLOCK	63	OFF = 0, ON = 1 OR >
⌚ MODIFY	64	OFF = 0, ON = 1 OR >
⌚ LENGTH	65	OFF = 0, ON = 1 OR >
BOUNCE	66	OFF = 0, ON = 1 OR >
SWEEP	67	B = 0, T = 1 OR >
POLARITY	68	F = 0, R = 1 OR >
RIGHT BANK		
(CUSTOMIZE)		
MISO	71	OFF = 0, ON = 1 OR >
SPREAD	72	OFF = 0, ON = 1 OR >
DRY KILL	73	OFF = 0, ON = 1 OR >
TRAILS	74	OFF = 0, ON = 1 OR >
LATCH	75	OFF = 0, ON = 1 OR >
HALF ⌚	76	OFF = 0, ON = 1 OR >
SMOOTH	77	OFF = 0, ON = 1 OR >
DRY GLUE	78	OFF = 0, ON = 1 OR >

CC numbers are left to right as you look down over the top of the pedal. The left bank is labeled 61-68 and the right bank is 71-78

CHORD SELECTIONS FOR FLIP MODE (CC17)

Value:	Chord:	Note 1:	Note 2:	Note 3:	Note 4:
0-2	1	-Oct	-	-	-
3-5	2	-5th	-	-	-
6-7	3	-4th	-	-	-
8-10	4	+4th	-	-	-
11-13	5	+5th	-	-	-
14-15	6	+Oct	-	-	-
16-18	7	-Oct	-5th	-	-
19-21	8	-5th	+Oct	-	-
22-23	9	-Oct	-4th	-	-
24-26	10	-4th	+Oct	-	-
27-29	11	-Oct	+4th	-	-
30-31	12	+4th	+Oct	-	-
32-34	13	-Oct	+5th	-	-
35-37	14	+5th	+Oct	-	-
38-39	15	-Oct	+Oct	-	-
40-42	16	-5th	-4th	-	-
43-44	17	-4th	+4th	-	-
45-47	18	-5th	+4th	-	-
48-50	19	-5th	+5th	-	-
51-52	20	-4th	+5th	-	-
53-55	21	+4th	+5th	-	-
56-58	22	-Oct	-5th	-4th	-
59-60	23	-5th	-4th	+4th	-
61-63	24	+Oct	+5th	+4th	-
64-66	25	+5th	+4th	-4th	-
67-68	26	-Oct	-5th	+4th	-
69-71	27	-5th	+4th	+5th	-
72-74	28	+Oct	+5th	-5th	-
75-76	29	+5th	-5th	-Oct	-
77-79	30	-Oct	-5th	+Oct	-
80-82	31	-Oct	-4th	+4th	-
83-84	32	-4th	+4th	+Oct	-
85-87	33	+Oct	+5th	-4th	-
88-89	34	+5th	-4th	-Oct	-
90-92	35	-Oct	-4th	+Oct	-
93-95	36	-5th	-4th	+5th	-
96-97	37	-Oct	+4th	+5th	-
98-100	38	+Oct	-4th	-5th	-
101-103	39	-Oct	+4th	+Oct	-
104-105	40	+Oct	+5th	-Oct	-
106-108	41	-Oct	-5th	-4th	+4th
109-111	42	-5th	-4th	+5th	-Oct
112-113	43	-4th	+Oct	-Oct	-5th
114-116	44	+5th	-Oct	-5th	+4th
117-119	45	-5th	+4th	+Oct	-Oct
120-121	46	+5th	+Oct	-Oct	-5th
122-124	47	+4th	+5th	-Oct	-4th
125-127	48	+4th	+Oct	-Oct	-4th

SYNTH MODE

Synth Mode lets you turn **BAD MOOD** into an instrument. The controls work similar to a monophonic synthesizer, complete with ADSR, portamento, and more.

WHAT IT IS

Synth Mode lets you transpose **BAD MOOD** with a keyboard or sequencer. It works by adjusting the Clock knob in semitones based on MIDI notes.

GETTING STARTED

Synth Mode turns on automatically when a MIDI Note is detected; simply press a key or turn on your sequencer and you should hear **BAD MOOD** start to follow along. Move the Clock knob to exit Synth Mode and return to normal operation.

There are also a number of CC commands that you can use to expand and deepen the Synth Mode experience.

- Synth Mode settings are saved globally, not per-preset.
- Synth Mode will automatically follow velocity in Note On/Off and ADSR modes.
- MIDI clock is ignored when in MIDI Synth Mode.

What:	MIDI CC:	Value:
ENTER SYNTH MODE	NA	0 - 127
EXIT SYNTH MODE	59	0 - 127
OUTPUT TYPE	58	OPEN = 0 ON/OFF = 1 ADSR = 1 OR >
ATTACK	80	0 - 127
DECAY	81	0 - 127
SUSTAIN	82	0 - 127
RELEASE	83	0 - 127
OCTAVE TRANSPOSE	57	12 SEMITONES = 1 24 SEMITONES = 2 36 SEMITONES = 3 48 SEMITONES = 4 60 SEMITONES = 5 72 SEMITONES = 6 84 SEMITONES = 7 96 SEMITONES = 8 108 SEMITONES = 9
PORTAMENTO	84	0 - 127
PITCH BEND RANGE +/- 4 SEMITONES	0	0 - 127
MODULATION WHEEL	1	0 - 127

SYNTH MODE – WALKTHROUGH

There's a lot to explore with Synth Mode. It can be a transposable effect, a sampler, or yes, a strange instrument.

You can think of each of **BAD MOOD**'s algorithms as a different synth engine, with its own unique textures and sound-shaping possibilities. You just need to feed it a little sound to get started.

Try this:

Play some sound into Soup mode, then freeze it (make sure the **LATCH** dip switch is on). Now play some notes! This is an easy way to generate a synthy starter sound. Explore how different **MODIFY** and **TIME** positions affect the texture.

If your keyboard has a mod wheel or pitch bend, give them a try. They should be connected automatically, but if not you can use CC numbers to map them to your controller.


You can also use the Micro-Looper to create interesting, layered synth voices. Radio mode is a good starting point – try overdubbing a few sounds and bring both the **LENGTH** and **MODIFY** knobs to 11 o'clock.

So that's a start – capturing a base sound, controlling it with a keyboard, and manipulating its texture. But you won't really sound synthy until you adjust the Output Type.




SYNTH MODE – OUTPUT TYPE

Synth Mode has three different Output Types that shape the overall experience.

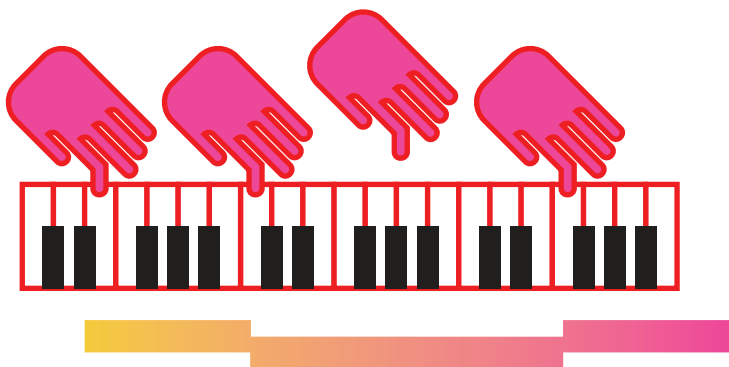


OPEN (CC58, 0)

This is the default and most intuitive option. In this case **BAD MOOD** is constantly making sound, like a drone. This is useful if you want to use **BAD MOOD** as an effect that you can transpose as a melodic element.

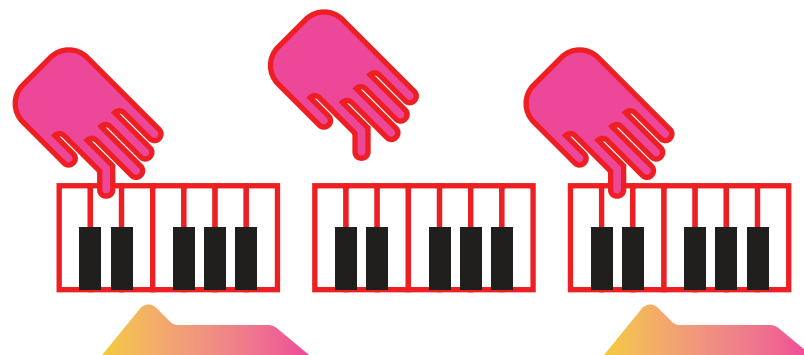

ADSR (CC58, 2-127)

BAD MOOD will only output sound when a MIDI Note is detected, but the onset and fade of that sound will be based on an envelope, like a typical synthesizer. This makes it possible to do swells and have notes with smooth decay, and will produce the most synth-like response.

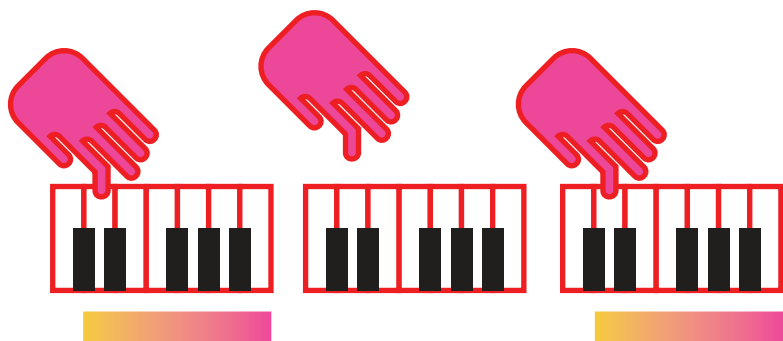

ON / OFF (CC58, 1)

BAD MOOD will only output sound when a MIDI Note is detected. The sound will sustain as long as the note is present, with instant attack and release.

USE THE EXIT

In both the **ON / OFF** and **ADSR** options, **BAD MOOD** will only make sound when you press a key. Make sure to exit Synth Mode when you're done so you don't forget and think your pedal is broken.

You can exit Synth Mode by turning the **CLOCK** knob or by sending any value to CC#59.

**GOOD LUCK ON YOUR
MIDI JOURNEY.**

Contact us any time:
midi@chasebliss.com

Thank you.

