


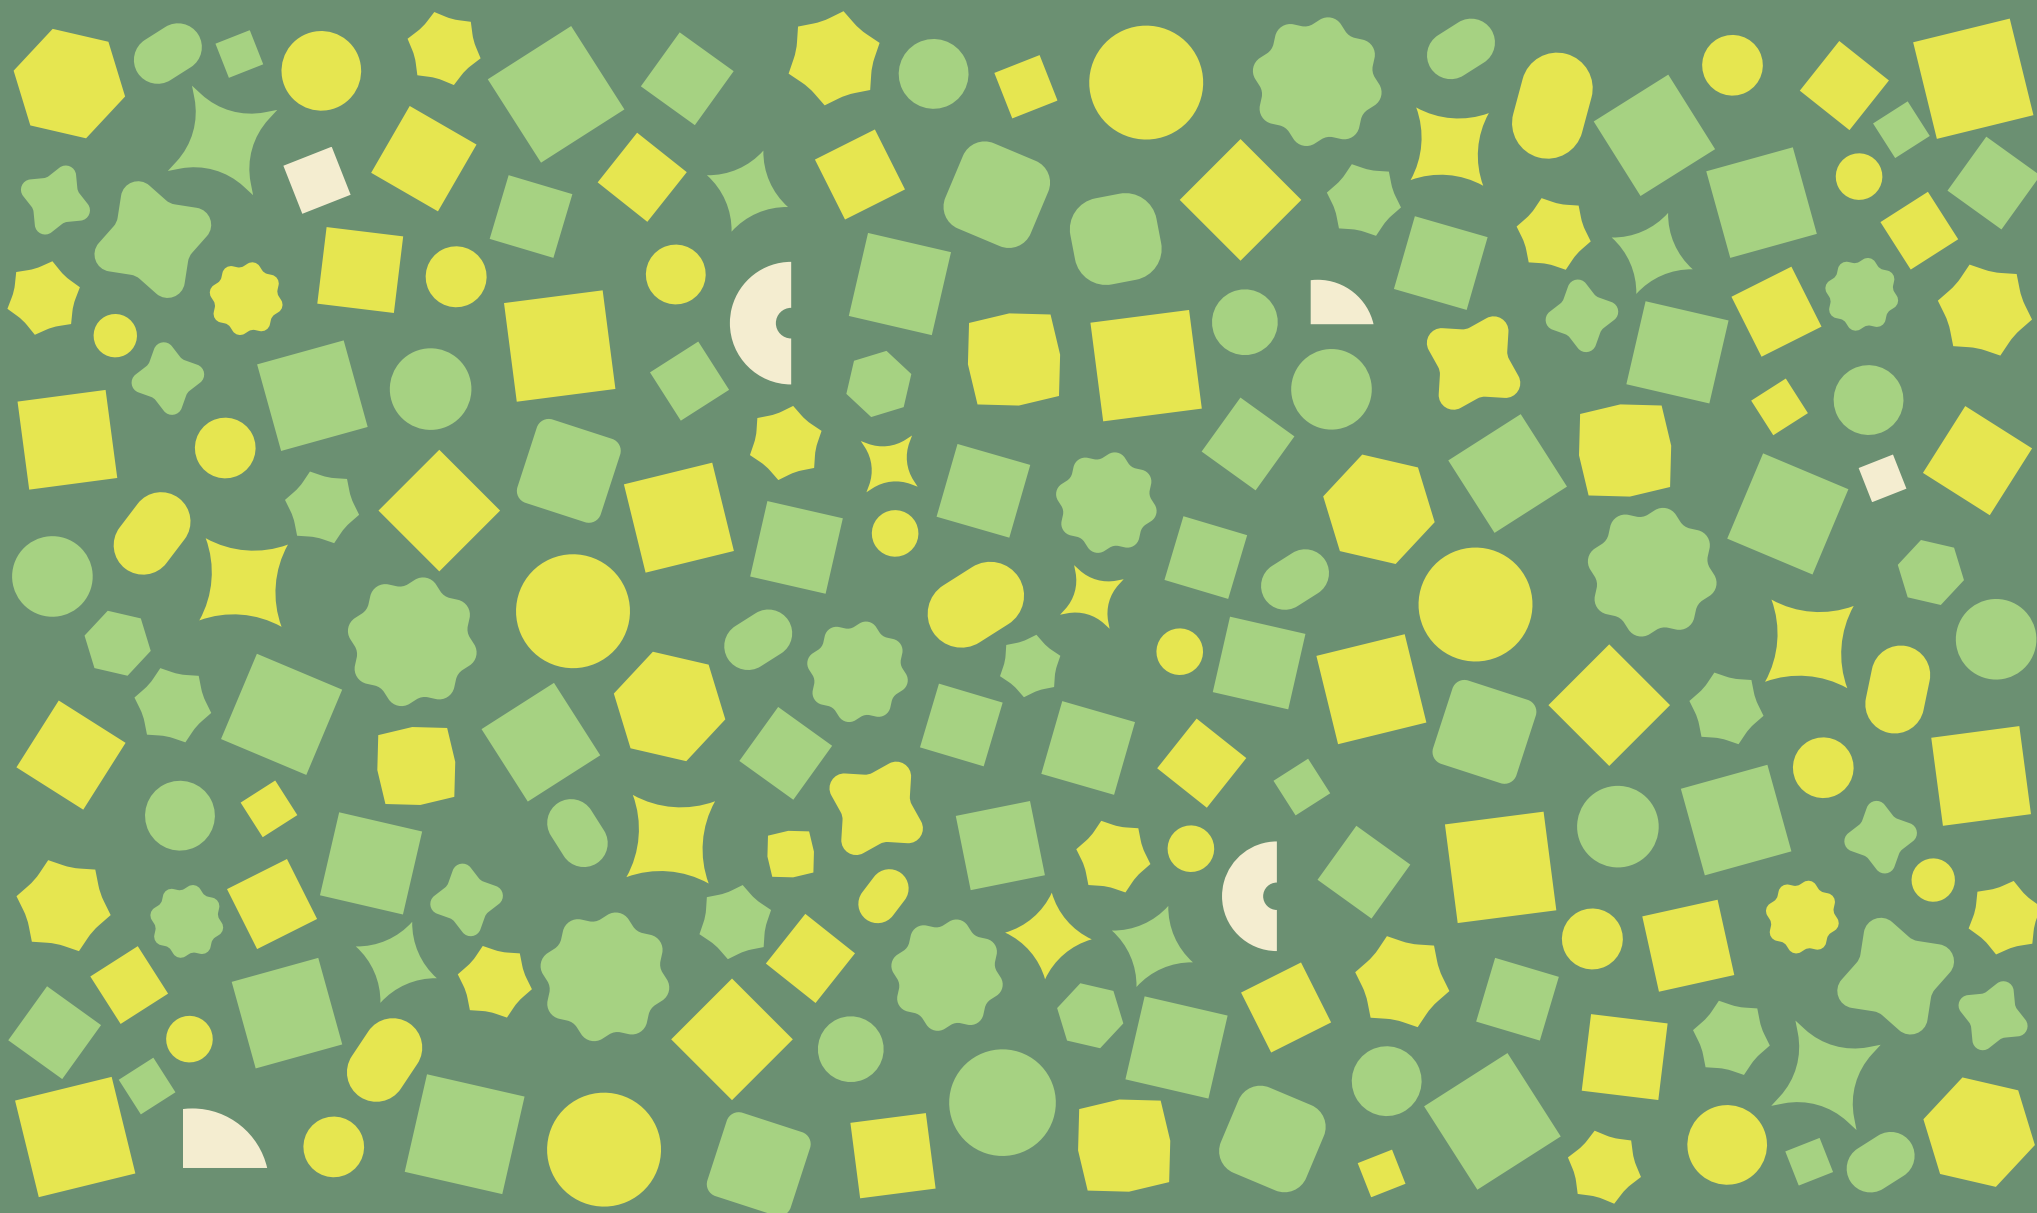



You can use MIDI with **Lost + Found** to control any of its parameters, sync to external clock, and save and recall up to 122 presets.

1. **Lost + Found** receives MIDI through a standard ¼" TRS patch cable. If your controller has a 5-pin output, the Chase Bliss MIDIBox is a simple way to convert 5-pin MIDI to TRS (the MIDIBox is not included with **Lost + Found**).

2. **Lost + Found** is set to MIDI channel 2 by default, but it's easy to change. Simply hold down both stomp switches when you power up the pedal. The pedal is now looking for the first "Program Change" message it sees, and it will set itself to that channel.

SAVING A PRESET VIA MIDI

Presets are both saved and recalled using Program Change (PC) messages.

To save a preset, send a Program Change message while holding down both footswitches. Sending a Program Change message of 45, for example, will save your current settings to preset 45.

There are 122 total slots.

Slots 1 and 2 correspond to the preset toggle on the pedal. Slot 1 is the right slot. Slot 2 is the left slot.

RECALLING A PRESET VIA MIDI

To recall a preset, simply send **Lost + Found** a Program Change message.

If the target slot is empty, nothing will be recalled. There are no factory presets besides the two that come loaded in slots 1 and 2.

Sending a Program Change message of 0 puts the pedal in "Live" mode, matching the pedal's current settings.

Lost + Found Control Change Channels

What:	MIDI CC:	Value:
KNOBS		
L TIME	14	0 - 127
MIX	15	0 - 127
R TIME	16	0 - 127
L MODIFY	17	0 - 127
BLEND	18	0 - 127
R MODIFY	19	0 - 127

What:	MIDI CC:	Value:
FOOTSWITCHES		
R FOOTSWITCH	102	off = 0, on = 1 or >
L FOOTSWITCH	103	off = 0, on = 1 or >
ALT MENU (HOLD BOTH SWITCHES)	104	ALT exit = 0 ALT enter = 1 or >
L HOLD (HOLD LEFT SWITCH)	105	off = 0 on = 1 or >
R HOLD (HOLD RIGHT SWITCH)	106	off = 0 on = 1 or >

What:	MIDI CC:	Value:
HIDDEN OPTIONS		
RAMP SPEED	20	0 - 127
L ALT	24	0 - 127
SPILL	25	0 - 127
R ALT	26	0 - 127
L EQ	27	0 - 127
GLUE	28	0 - 127
R EQ	29	0 - 127
MASTER WET VOLUME	30	0 - 127

TOGGLES		
L EFFECTS MODE	21	1 = 0, 1 2 = 2 3 = 3 or >
ROUTING	22	L > R = 0, 1 L + R = 2 L < R = 3 or >
R EFFECTS MODE	23	4 = 0, 1 5 = 2 6 = 3 or >
SPREAD	32	L ONLY = 0, 1 BOTH = 2 R ONLY = 3 or >

Lost + Found Control Change Channels

What:	MIDI CC:	Value:
DIP SWITCHES		
LEFT BANK		
L TIME	61	off = 0, on = 1 or >
L MODIFY	62	off = 0, on = 1 or >
BLEND	63	off = 0, on = 1 or >
R MODIFY	64	off = 0, on = 1 or >
R TIME	65	off = 0, on = 1 or >
BOUNCE	66	off = 0, on = 1 or >
SWEEP	67	B = 0, T = 1 or >
POLARITY	68	F = 0, R = 1 or >
RIGHT BANK		
MISO	71	off = 0, on = 1 or >
SPREAD	72	off = 0, on = 1 or >
LATCH	73	off = 0, on = 1 or >
L SWAP	74	off = 0, on = 1 or >
R SWAP	75	off = 0, on = 1 or >
UNSYNC	76	off = 0, on = 1 or >
TRAILS	77	off = 0, on = 1 or >
BANK	78	off = 0, on = 1 or >

CC numbers are left to right as you look down over the top of the pedal. The left bank is labeled 61–68 and the right bank is 71–78.

What:	MIDI CC:	Value:
OTHER		
MIDI CLOCK IGNORE	51	ignore = 0, follow = 1 or >
STOP RAMPING	52	on = 0, off = 1 or >
L TAP SUBDIVISION	53	See table on pg 07
R TAP SUBDIVISION	54	See table on pg 07
FACTORY RESET	56	Send any value
DRY KILL	57	off = 0, on = 1 or >
TAP TEMPO	93	Send any value
EOM (EXPRESSION OVER MIDI)	100	0 – 127
SAVE PRESET	111	Preset # = value
RANDOM L MODE	112	Send any value
RANDOM R MODE	113	Send any value
RANDOM BOTH MODES	114	Send any value

Lost + Found Control Change Channels

What:	MIDI CC:	Value:
SUBDIVISIONS		
THIRTY-SECOND	53 or 54	0
SIXTEENTH	53 or 54	1
TRIPLET SIXTEENTH	53 or 54	2
EIGHTH	53 or 54	3
TRIPLET EIGHTH	53 or 54	4
DOTTED EIGHTH	53 or 54	5
QUARTER	53 or 54	6
TRIPLET QUARTER	53 or 54	7
DOTTED QUARTER	53 or 54	8
HALF	53 or 54	9
DOTTED HALF	53 or 54	10
WHOLE	53 or 54	11
DOUBLE WHOLE	53 or 54	>11



We hope you find what
you’re looking for.

Contact us any time:
midi@chasebliss.com