

Thatcham Research

Collision Engineers - Neil O'Reilly

EK25YSG

03/07/2026 12:31 BST

escribe plus information pack

This information is supplied by Thatcham Research ("Thatcham") for use by trained professionals in the motor repair and insurance industries. It is not intended for use by the general public.


You must rely upon your own expertise to ensure that any information, process, procedure or specification used is appropriate for your needs and is followed correctly.

Thatcham shall not be liable for any loss or damage incurred as a result of using this information (including as a result of negligence) save for in respect of death or personal injury or any other losses which cannot be excluded or limited by law.

This information is supplied by Thatcham Research ("Thatcham") under licence from the copyright owner. Copying, reproducing, transmitting, modifying, adapting, all or any part of this information without the written consent of the copyright owner is prohibited. Committing any unauthorised act may result in civil or criminal actions being taken by, or on behalf of, the copyright owner.

AR54.21-P-0705WT	Remove/install long-range radar sensor	09.04.2021
------------------	--	------------

Model 206
with code 233 (Adaptive cruise control Plus (DISTRONIC PLUS))

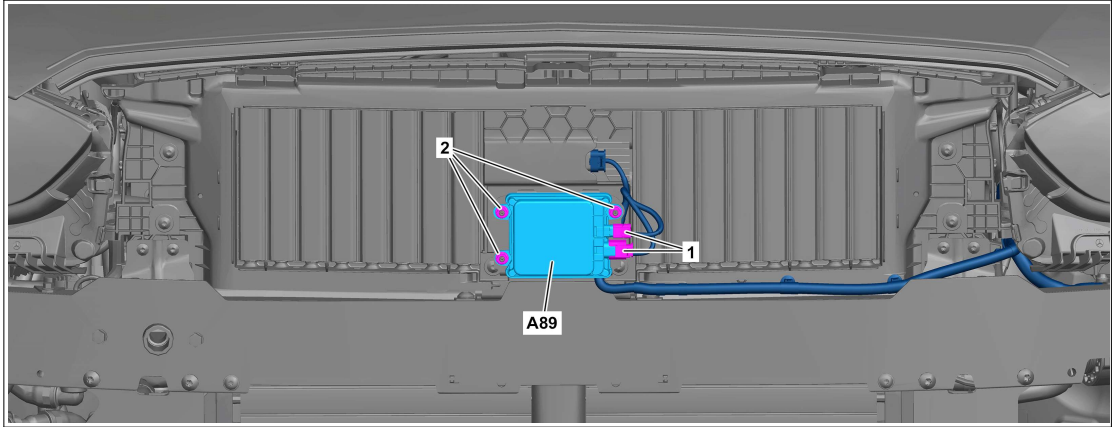

P54.21-A520-78


1 Electrical connectors 2 Nuts A89 Long-range radar sensor

Notice	Notes on preventing damage to electronic components due to a magnetic tool		AH54.00-P-0002-01A
Notice	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Remove front bumper.		AR88.20-P-2000WT
2	Release and disconnect electrical connections (1).		
3	Remove nuts (2).		
4	Remove long-range radar sensor (A89).		
5	Install in the reverse order.		
6	Commission long-range radar sensor (A89).		AD00.00-P-2000-06FR

AR54.21-P-0707WT	Remove/install front midrange radar sensor	15.04.2021
------------------	--	------------

Model 206
with code 239 (Adaptive cruise control Pro (DISTRONIC PRO))
Model 206
with code 258 (Collision warning system with active brake application FCW-Stop)

- 1 Radiator trim
2 Electrical connector
B92/20 Medium-range radar sensor

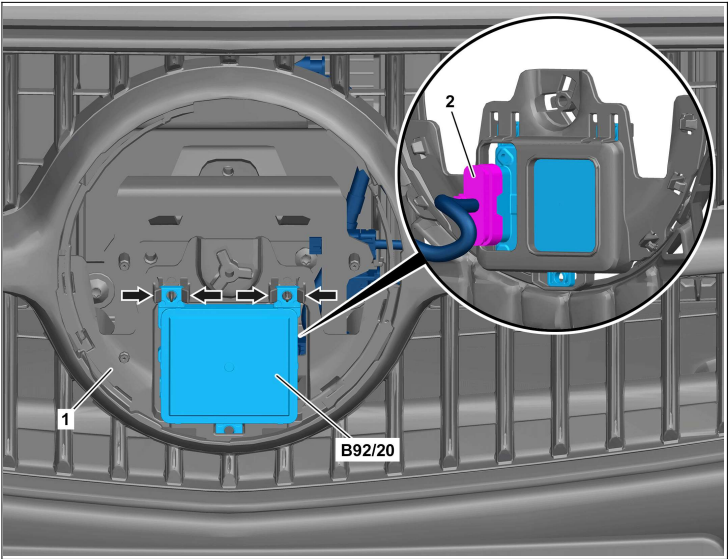


P54.21-A519-76

Notice	Notes on preventing damage to electronic components due to a magnetic tool		AH54.00-P-0002-01A
Notice	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Remove/install		
1	Remove Mercedes star.		AR88.40-P-4053WT
2	Unclip mid-range radar sensor (B92/20) from radiator grille (1) (arrows) and remove until electrical connector (2) is accessible.		
3	Release and disconnect electrical connector (2) and remove mid-range radar sensor (B92/20).		
4	Install in the reverse order.		
5.1	Commission mid-range radar sensor (B92/20).	When replacing mid-range radar sensor (B92/20).	
			AD00.00-P-2000-06FR
5.2	Calibrate mid-range radar sensor (B92/20).	When removing/installing mid-range radar sensor (B92/20).	
			AD00.00-P-2000-06FR

AR54.21-P-0709WT	Remove/install front short-range radar sensor	14.04.2021
------------------	---	------------

Model 206
with code 233 (Adaptive cruise control Plus (DISTRONIC PLUS))
Model 206
with code 507 (Premium remote-controlled parking)

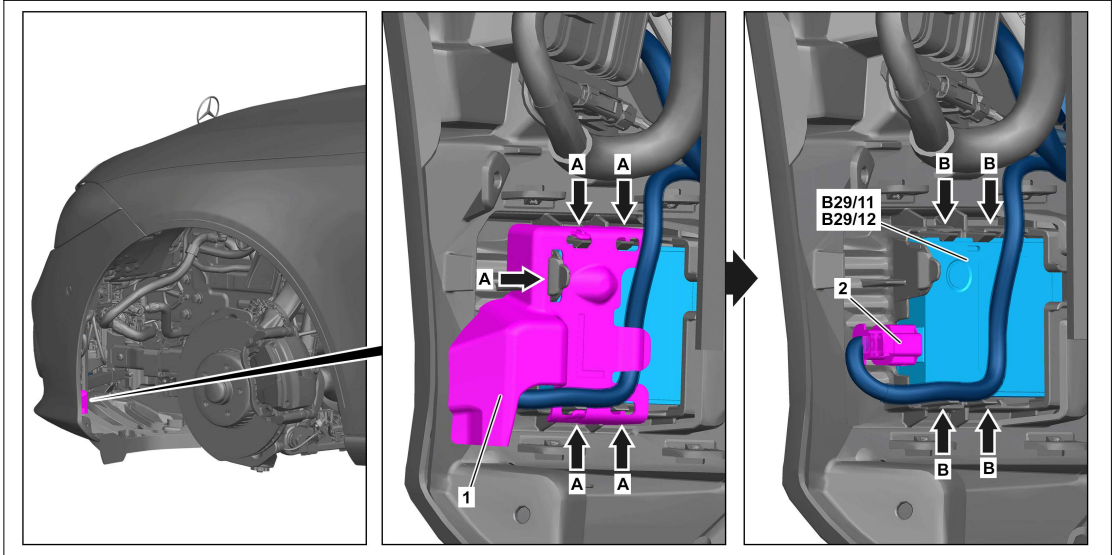

P54.21-A518-79

Shown on left side of vehicle

- | | | | |
|---|----------------------|--------|--------------------------------------|
| 1 | Bracket | B29/11 | Left front short-range radar sensor |
| 2 | Electrical connector | B29/12 | Right front short-range radar sensor |

Notice	Notes on preventing damage to electronic components due to a magnetic tool		AH54.00-P-0002-01A
Notice	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
	Notes on safety-relevant components		AH00.00-Z-0019-01A
	Remove/install		
1	Remove corresponding front fender liner at front.		AR88.10-P-1301WT
2	Unclip holder (1) (arrows A) and remove.		
3	Release and disconnect electrical connector (2).		
4	Unclip front short-range radar sensor (B29/11, B29/12) (arrows B) and remove.		
5	Install in the reverse order.		
6	Commission front short-range radar sensor (B29/11, B29/12).	When replacing front short-range radar sensor (B29/11, B29/12).	AD00.00-P-2000-06FR