

MeshCore 102

Build The People's Repeater

Student Guide and Build Instructions

The Maker's Space · November 2026

Build a solar-powered MeshCore repeater from a Harbor Breeze solar-light enclosure, a Seeed Studio XIAO nRF52840, and a Wio-SX1262 LoRa radio.

What You Will Build

The People's Repeater is a compact, solar-powered MeshCore relay for the 915 MHz band. The original light is removed; the finished repeater has an outdoor antenna and **does not have a light**.



Example finished repeater. The exact PETG mount used in class may differ.

MeshCore Roles and Room Servers


- A **companion** gives a person access to the mesh.
- A **repeater** extends useful coverage by forwarding packets toward their destinations.
- A **Room Server** is a shared message board. It stores posts and can deliver unseen history when a user returns, unlike an ordinary channel where a message can be missed while the user is out of range.

A Room Server and repeater solve different problems. MeshCore recommends separate devices for the best experience; enabling repeat behavior on a Room Server does not provide the full repeater feature set. This class builds a dedicated repeater. See the MeshCore FAQ.


Parts




Harbor Breeze solar light

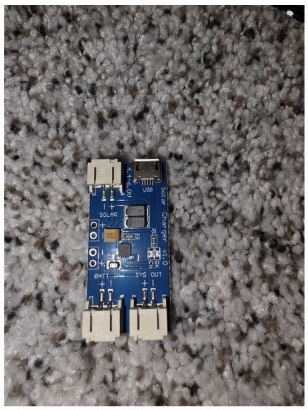

CN3065 solar charger

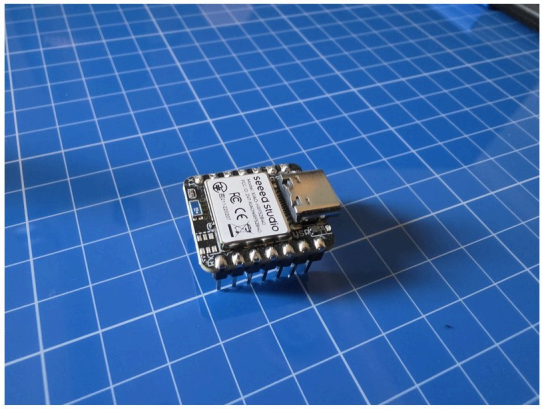

XIAO nRF52840

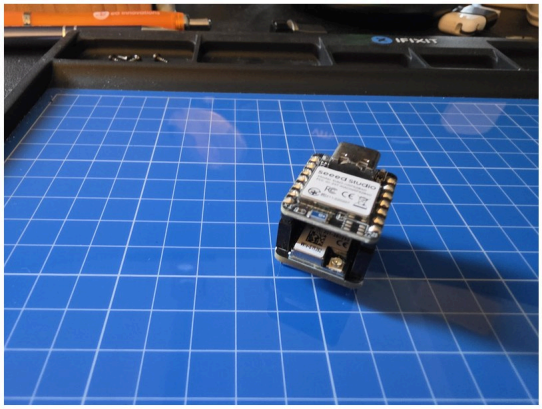

Wio SX1262 under XIAO

Core electronics and power components. The Wio is the lower board beneath the XIAO.


Electronics and power

- Harbor Breeze solar light with included **1500 mAh 18650 battery**
- Seeed Studio **XIAO nRF52840** and **Wio-SX1262** LoRa radio
- **ACEIRMC CN3065** mini solar LiPo charger
- 100 mm female-socket **JST PH 2.0** silicone-wire cables

Antenna system

- **ALFA Network AOA-915-5ACM**, 5 dBi outdoor 915 MHz antenna
- 6 in / 15 cm **U.FL1-to-N-female** RG178 pigtail
- Waterproof self-fusing silicone tape

> The small antenna supplied attached to the Wio is used only during pre-build setup, then disconnected once and set aside. It is not used in the finished repeater.

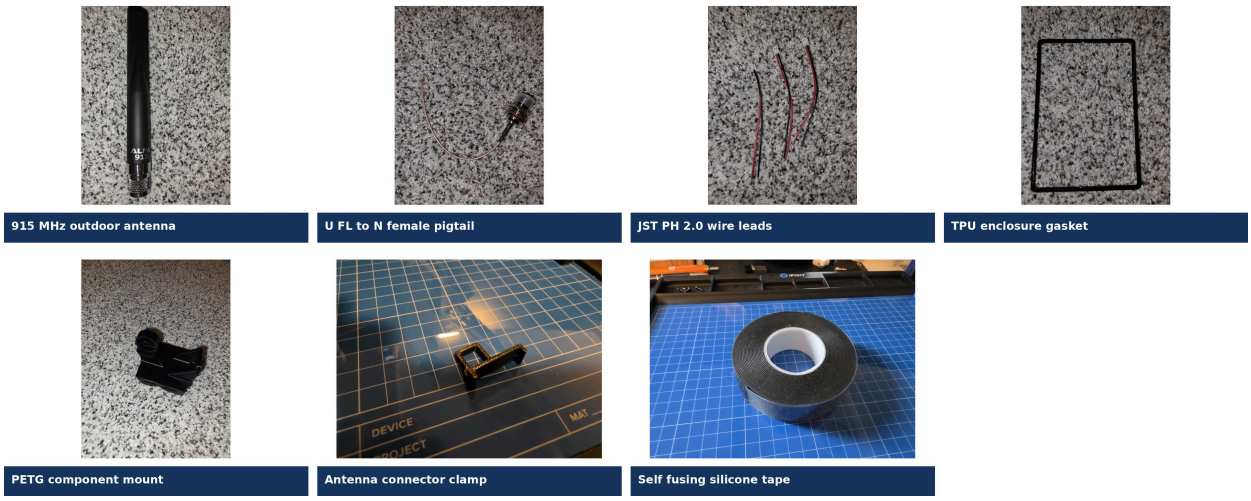

Antenna and enclosure hardware, including the PETG component mount and connector clamp.

Enclosure and mounting

- 3D-printed **TPU gasket** and **PETG component mount**
- 3D-printed **antenna connector clamp**
- Zip ties **or** hose clamps for attaching the mount to a pole
- Original enclosure screws and original mount screw and nut

The Harbor Breeze solar mesh-node models page contains the component mount shown here, alternate mounts, and the TPU gasket.

> Put all removed screws and the separate mount nut in a parts tray. They are reused; they are not extra hardware.

Battery note

The class uses the included 1500 mAh 18650. A larger-capacity compatible 18650 may provide more winter reserve, but verify chemistry, voltage, size, polarity, terminals, protection, and charger compatibility.

Safety Rules

- Remove the battery immediately after opening the enclosure. Use fingers or a nonconductive tool—never a metal tool.
- Keep the battery out during cutting, desoldering, soldering, and rewiring.
- Never short, puncture, crush, overheat, or reverse an 18650.
- Verify polarity with a meter; connector shape and wire color alone are not proof.
- Never transmit without an antenna connected.
- Stop for unexpected heat, odor, smoke, uncertain polarity, or an unexpected measurement.

Placement Before the Build

- Favor useful height, open surroundings, and a clear path toward the area served.
- Keep the vertical antenna clear of nearby metal where practical.

- Give the solar panel several hours of direct sun, including during winter.
- In Indiana, a generally southerly exposure is a useful starting point, adjusted for shade.
- Choose a safe, permitted, stable, serviceable location and orient seams to shed water.

Planning tools:

- MeshMapper for purpose and radio-path planning
- Solar tilt-angle calculator for panel-angle planning

Build Guide

1. Flash and Configure Before Disassembly

Leave the supplied Wio antenna attached during computer setup.

1. Flash the current compatible MeshCore **repeater** firmware.
2. Select the correct legal regional radio preset.
3. Follow the OKI Mesh repeater configuration guide to set the repeater name and class settings.
4. Confirm normal startup.
5. Power down, disconnect the supplied antenna once, and set it aside.

Naming standard: `StateCode.CountyCode.descriptiveName`.

- Allen County: `IN.ALL.descriptiveName`
- Local Fort Wayne convention: `IN.ALL.FWA.descriptiveName`
- Repeater naming reference
- County abbreviations

2. Retain the Mount Hardware



Retain the mounting screw



Retain the matching nut

Retain the mounting screw and separate matching nut. Both are reused.

3. Switch Off and Cut Away the Light


Verify the solar-light switch is **OFF**, then cut the wire joining the enclosure to the light. The exact cut location is not important because the entire wire will eventually be removed.



Switch the light off before cutting the wire.

4. Open the Enclosure and Remove the Battery

Remove and retain the enclosure screws. Open the cover carefully, then remove the 18650 with fingers or a nonconductive tool—never a metal tool. Keep it out until the wiring inspection is complete and the open-unit test is ready. After removing the battery, pull the cut wire through its feed-through and remove and retain the two screws holding the switch/PCB.

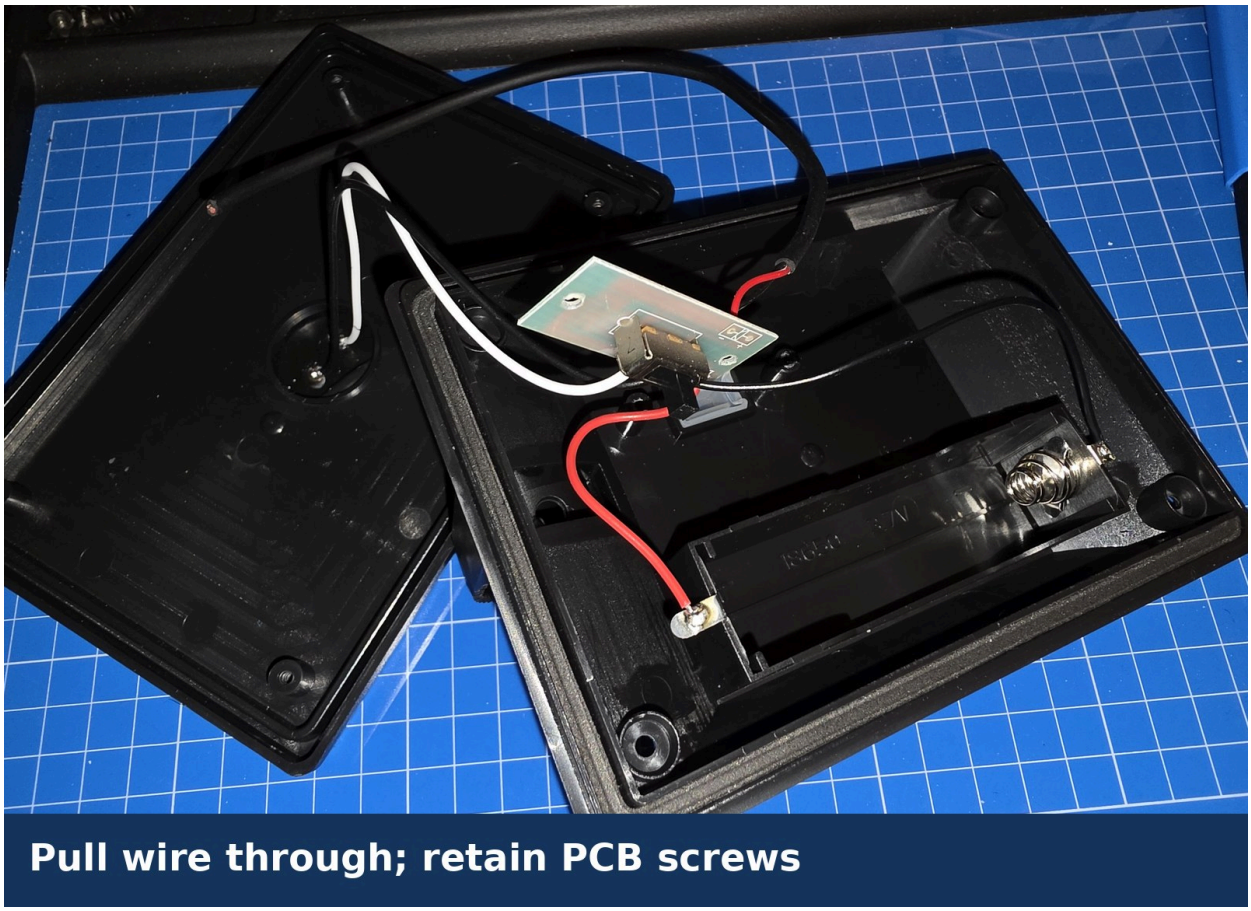

Pull wire through; retain PCB screws

Pull the wire through only after opening the enclosure and removing the battery.

5. Remove the Unused Original Wiring

Clip the cut light wire at both PCB connections, both solar-panel leads at the PCB, and the negative battery lead at the PCB. Retain the PCB and switch; they will be used only as a switch inline with CN3065 SYS OUT.




Clip old wire at PCB



Clip both solar leads at PCB

Clip the old light and solar-panel wires at the PCB.

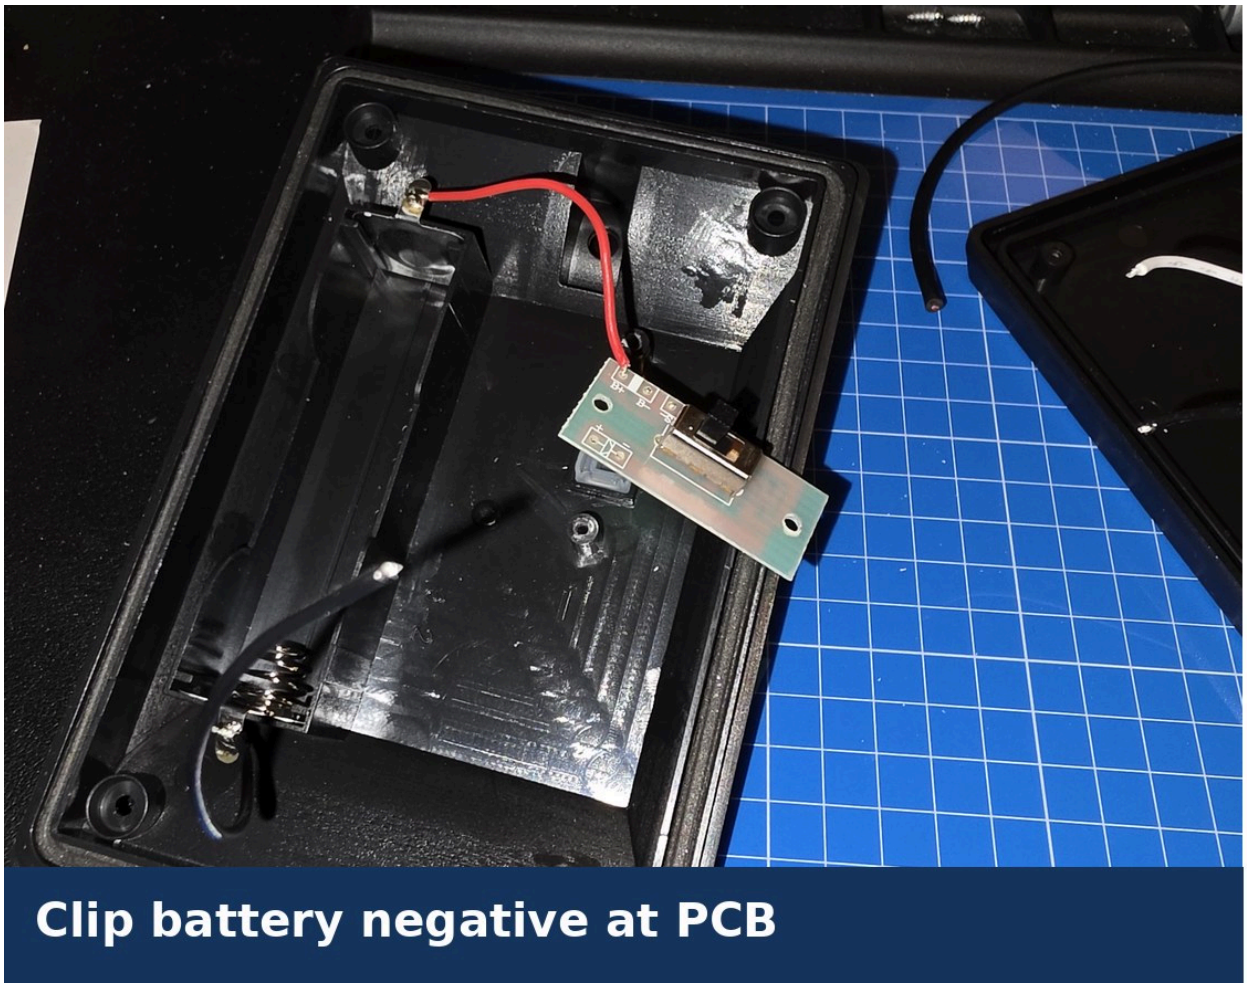


Disconnect battery negative.

6. Open the Two Marked PCB Traces

With the battery and panel disconnected, identify the two marked copper paths.


The instructor will provide additional instructions for completing and checking this modification.

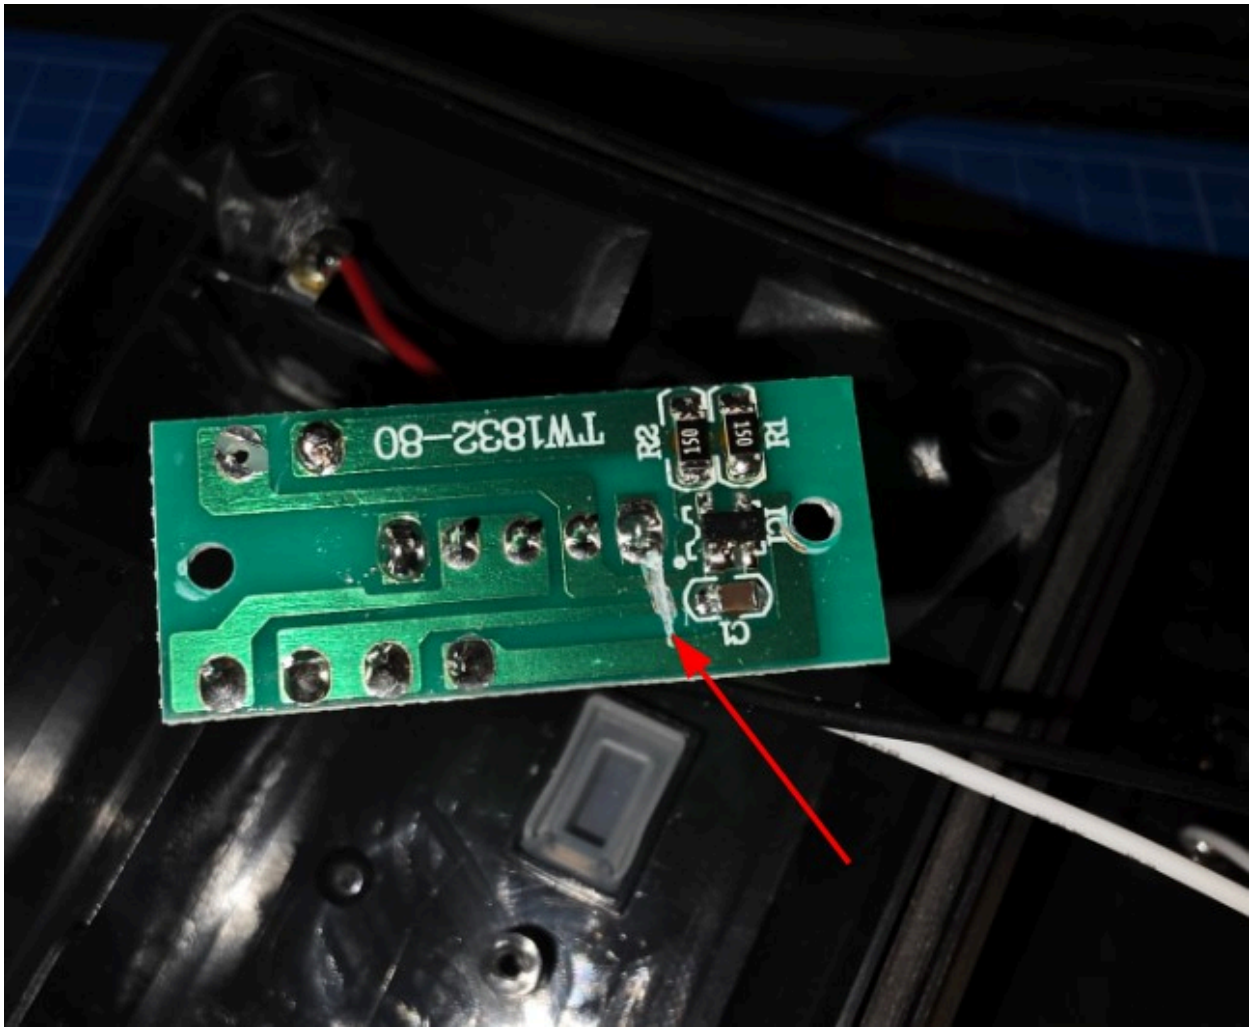

The instructor will demonstrate the two marked PCB modifications.

7. Install the TPU Gasket

Remove the foam gasket, clean the channel, and seat the TPU gasket evenly.

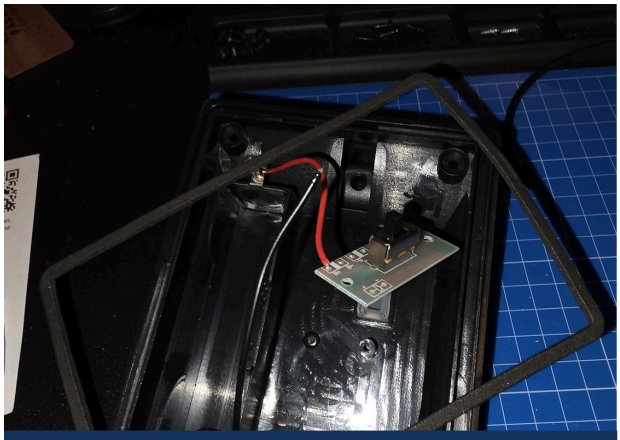


Factory foam gasket removed



TPU gasket before installation

Factory gasket removed; TPU replacement ready.

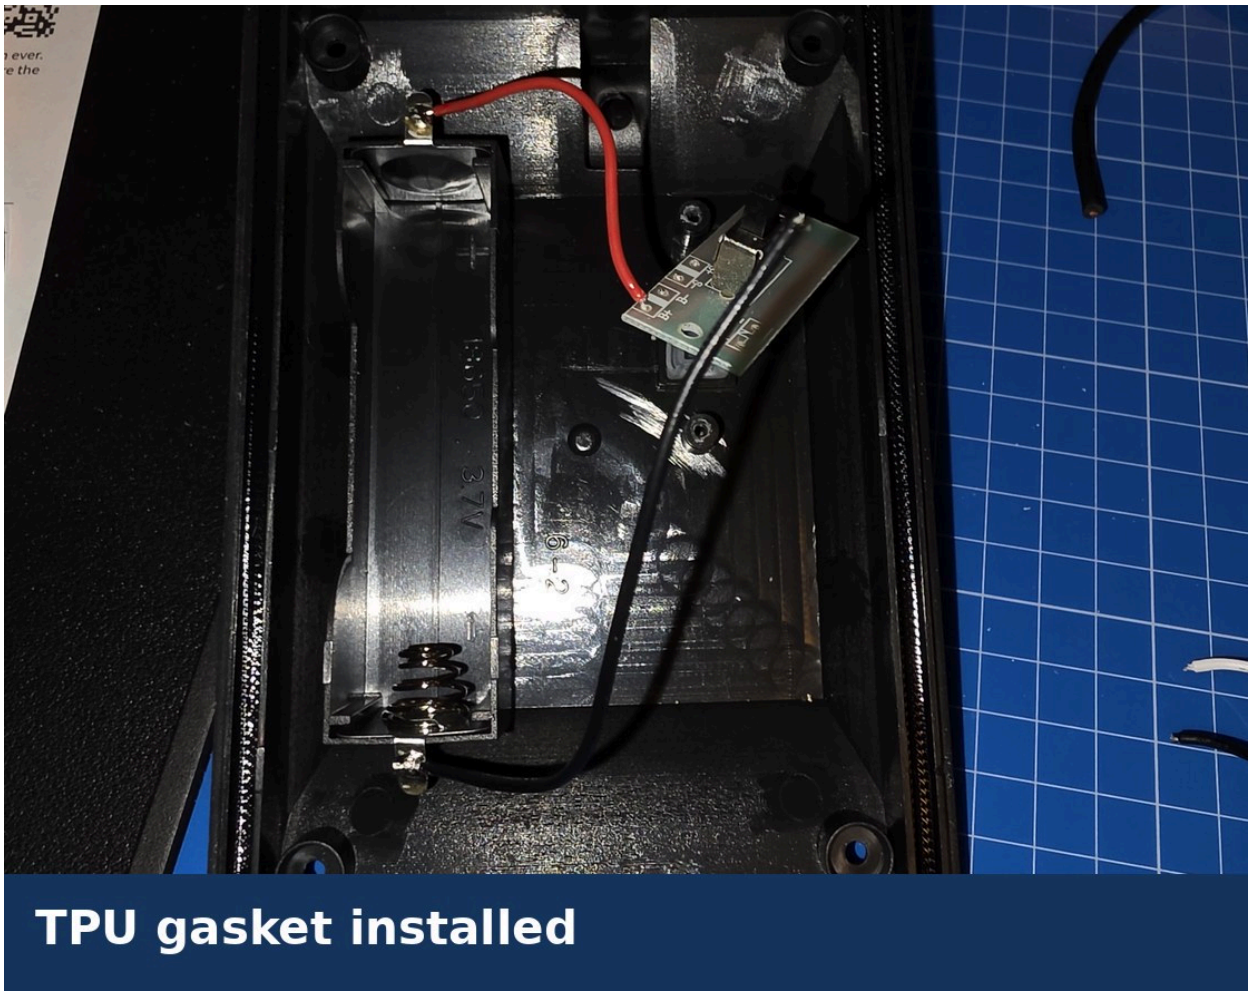

TPU gasket installed.


8. Rewire the Battery Holder

Desolder the original negative wire; it is not reused. Install the negative JST conductor. Then desolder the original positive wire and install the positive JST conductor.





Remove the old negative wire and install the JST negative.

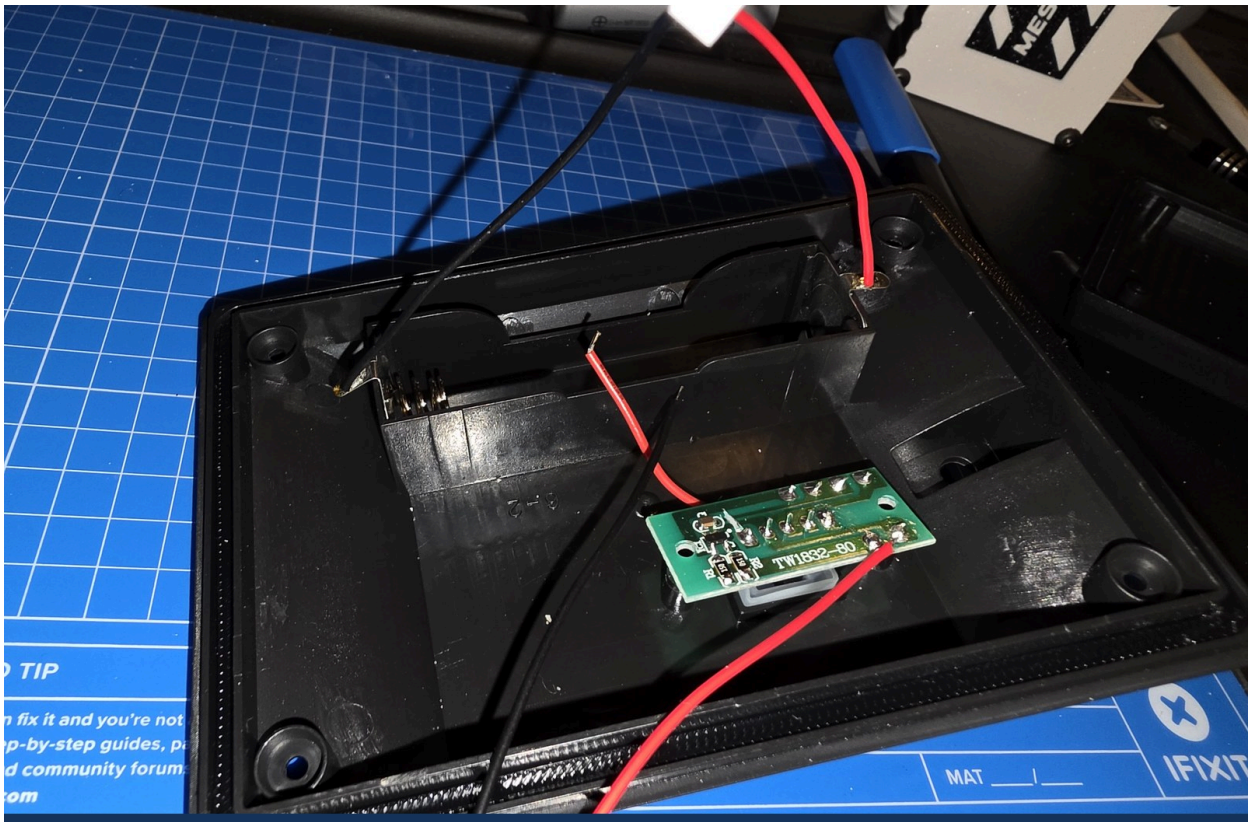


Install battery positive JST


Complete the positive battery-holder connection.

9. Add the Solar-Panel JST Lead

The panel terminals are unlabeled. Change only **one conductor at a time**: remove one original wire and immediately install its matching JST conductor before touching the other terminal.

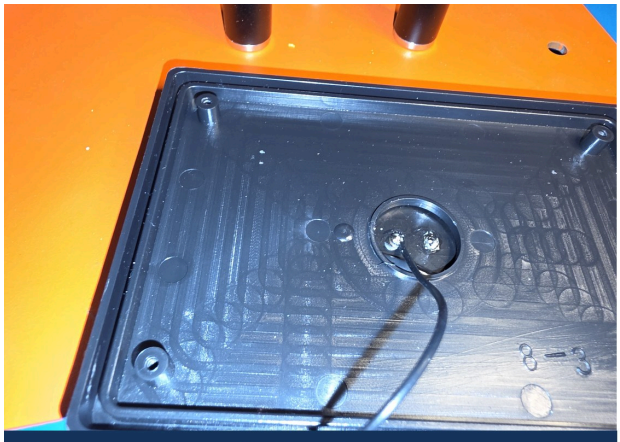

Change one panel wire at a time

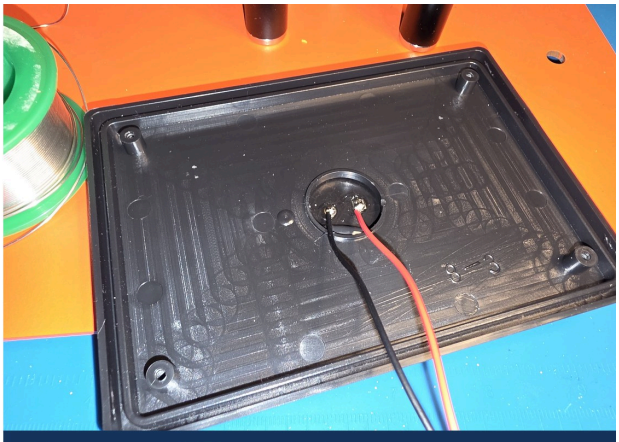


Solar-panel JST complete

Change the panel wires one at a time, then inspect the completed JST lead.

10. Wire the XIAO and Retained Switch

- Original battery-holder positive wire to XIAO BAT+

- JST negative conductor to XIAO BAT−
- That JST lead's positive conductor to the retained PCB, placing the switch inline with CN3065 SYS OUT

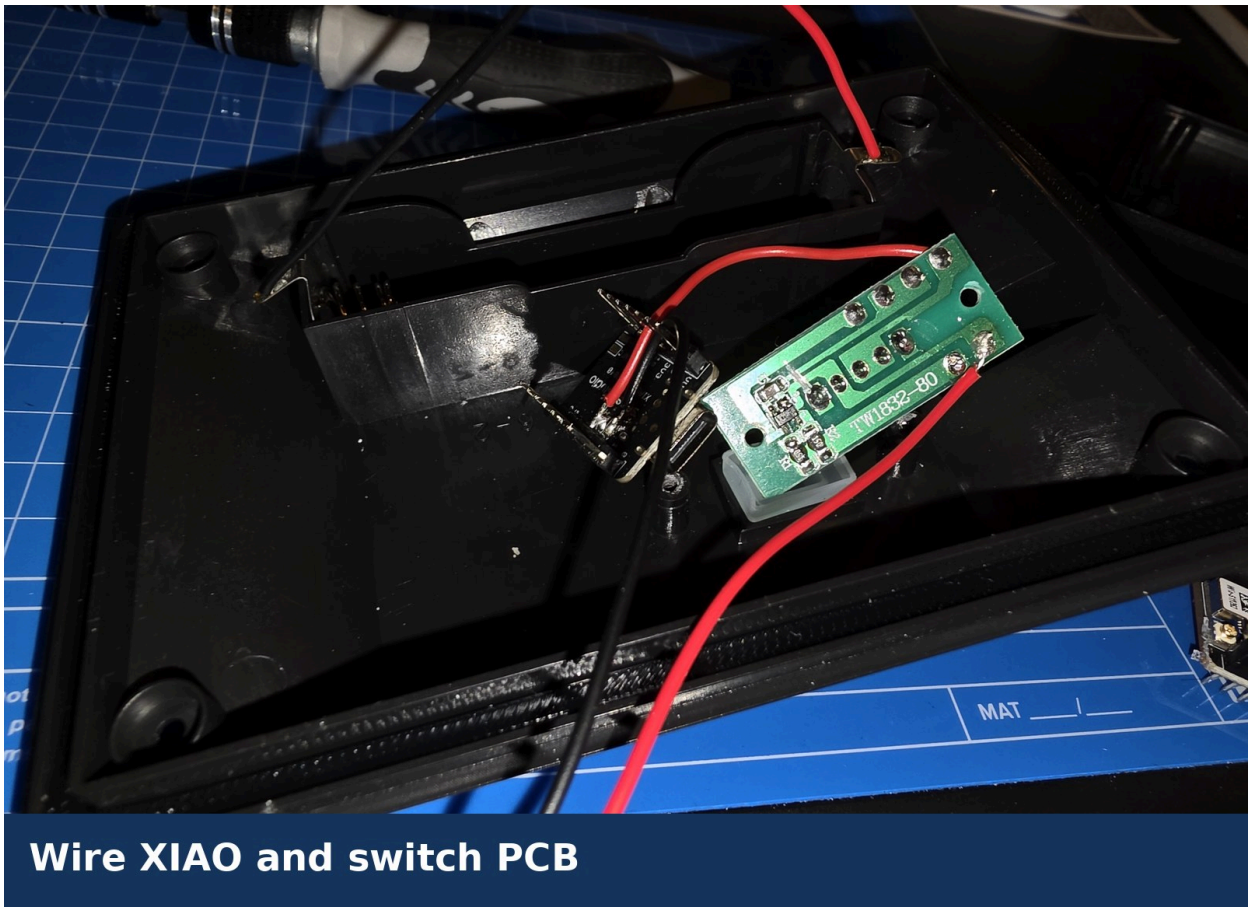

Wire the XIAO battery terminals and retained switch PCB.

11. Connect the CN3065

> **JST polarity:** The class cables have already been corrected by swapping the red and black positions where needed. Still verify actual positive and negative polarity before connecting them.

Connect the three verified JST plugs for solar input, battery, and system output. Do not install the battery yet.




Three JST plugs on CN3065

Connect all three verified JST plugs to the appropriate CN3065 positions.


12. Install the N Connector in the PETG Mount

Feed the pigtail through the mount, then push the connector upward from the bottom. Align its flat sides before applying gentle force. Install the tooth lock washer, then flat washer, then nut.

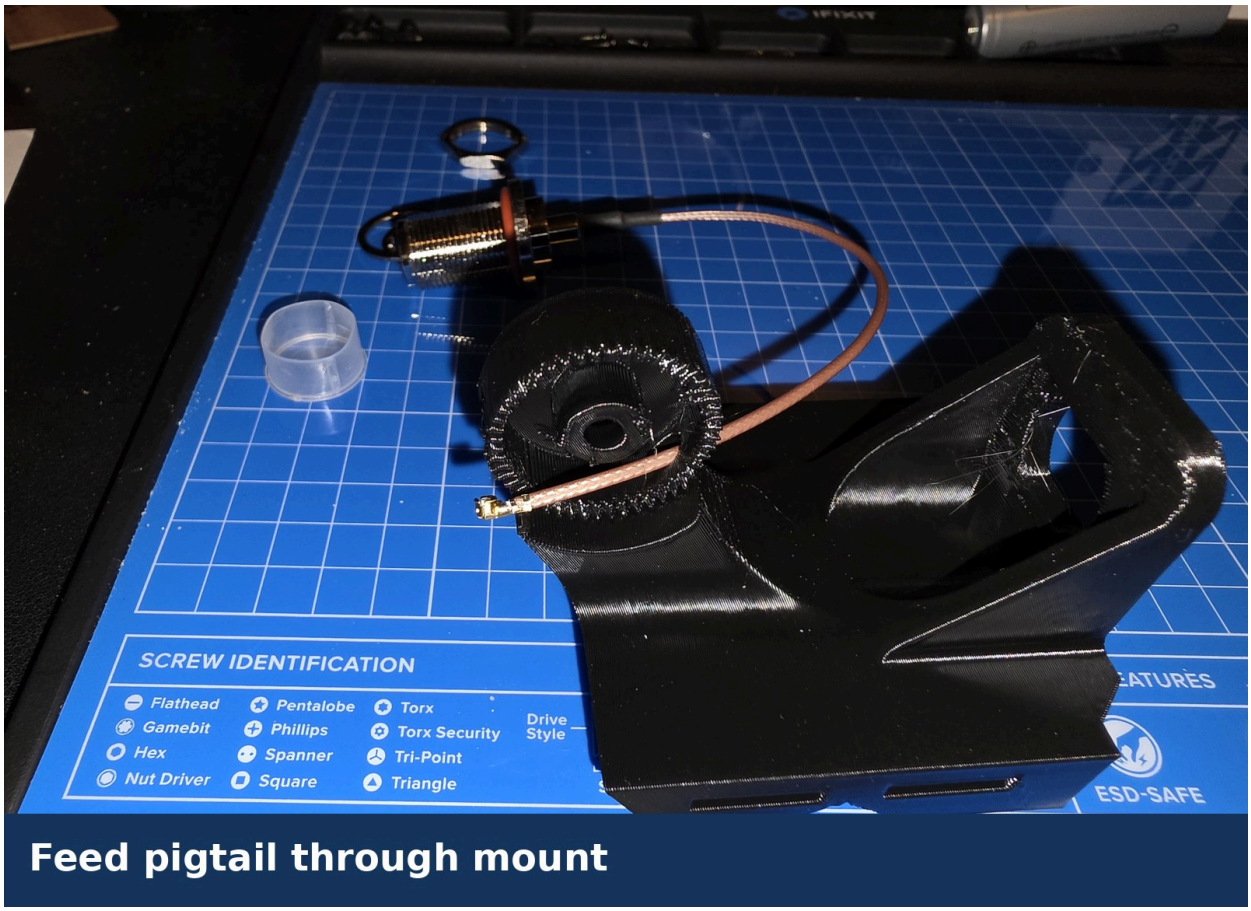


Feed pigtail through mount

Feed the pigtail through the PETG mount before seating the N connector.

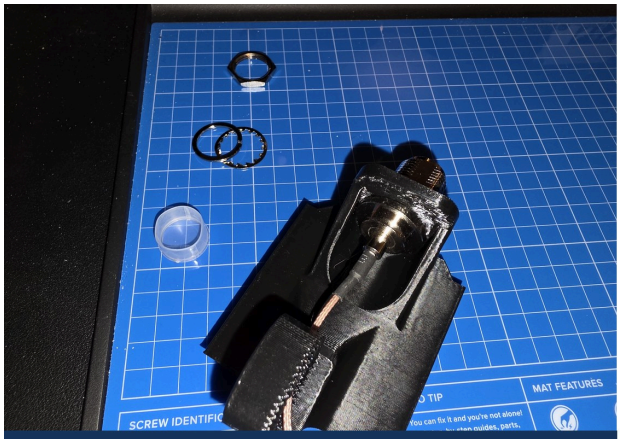


Align N connector flat sides

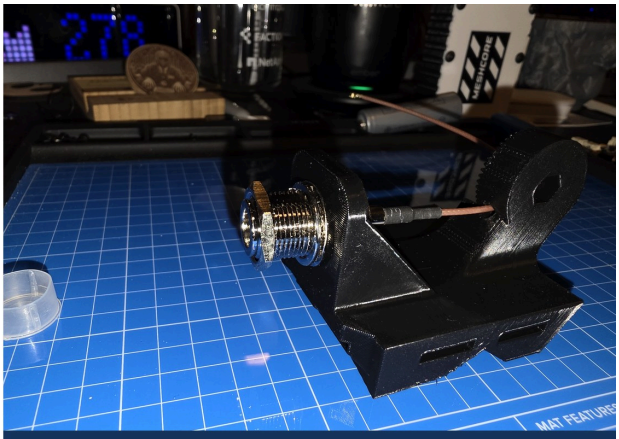

Lock washer, flat washer, nut

Align the flats and use the illustrated washer order.

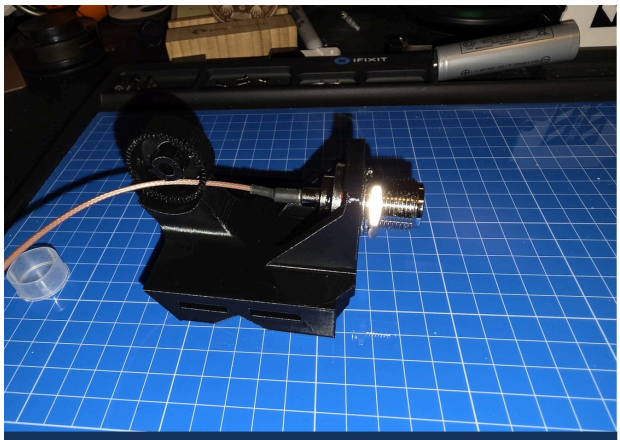

Tighten without crushing PETG




Feed U.FL end into enclosure


Tighten without crushing PETG, then feed the U.FL end inside.

13. Attach the Mount, Antenna, and Route the Pigtail

Attach the mount with the retained screw and nut. Keep the coax bend gentle. Attach and hand-tighten the ALFA antenna on the exterior N connector.

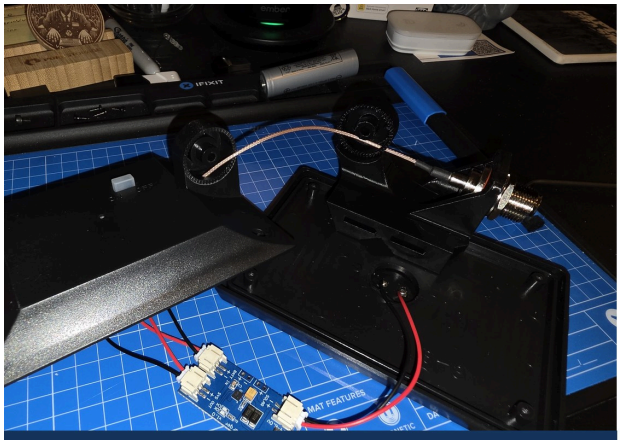

Continue pigtail through opening

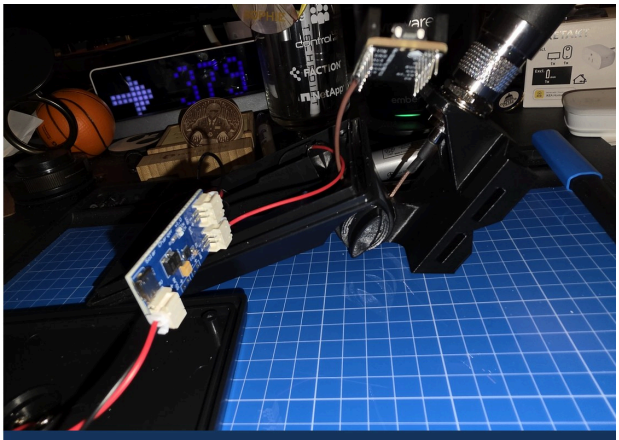

Attach mount to enclosure


Pigtail routed and mount attached.

14. Reinstall the Switch and Connect the Radio

Before reinstalling the switch/PCB, make sure the rubber switch boot is seated correctly to keep moisture out. Reinstall the switch/PCB with its two original screws, then cover it with painter's tape. Press the U.FL plug straight down onto the Wio socket; do not twist or pull on the coax.



Insulate switch with tape

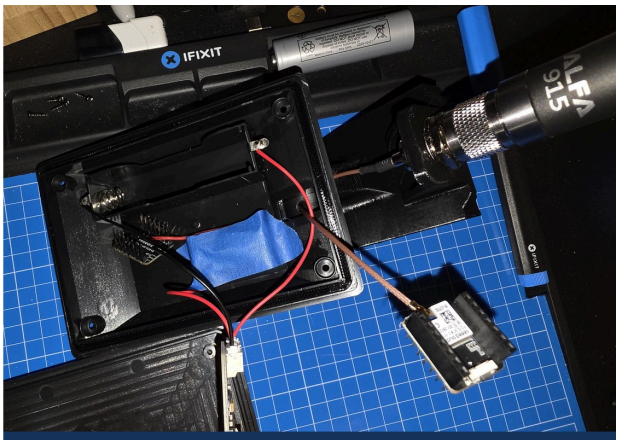


Connect pigtail to Wio


Seat the rubber boot, reinstall the screws, apply tape, and connect the pigtail.

15. Install the Antenna Connector Clamp

Support the boards and pigtail while installing the clamp. Do not flex the boards or lever against U.FL.

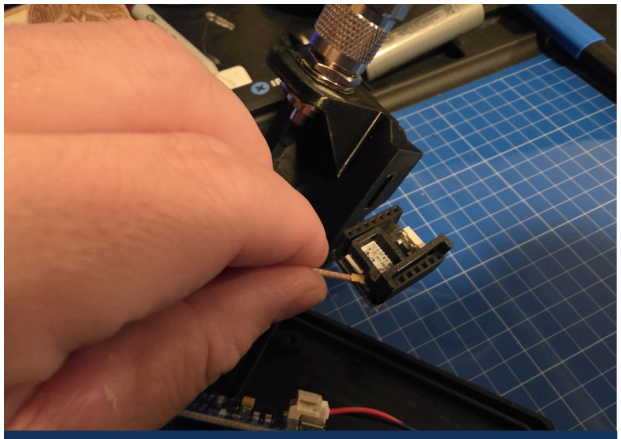

Position connector clamp

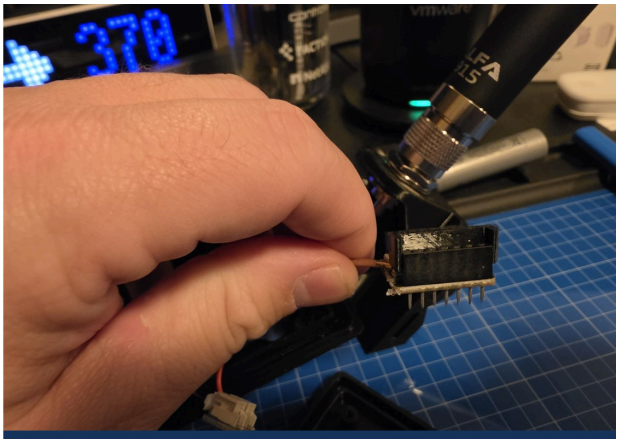

Secure connector clamp

Position and secure the connector clamp.

16. Clean the Panel, Inspect, Install the Battery, and Test


Remove the solar-panel sticker. Use Goo Gone to remove adhesive residue, then clean the panel with isopropyl alcohol. Arrange components and inspect polarity, solder joints, trace cuts, JST positions, switch insulation, and pigtail seating. Install the 18650 with correct polarity and test startup, the saved settings and name, LoRa relay through the ALFA antenna, and charging response. Disconnect immediately for heat, odor, smoke, or abnormal behavior.



Remove the sticker and clean the panel before testing.

17. Close and Finish

After tests pass, arrange wires clear of screw posts, close the enclosure, and reinstall original screws gradually.

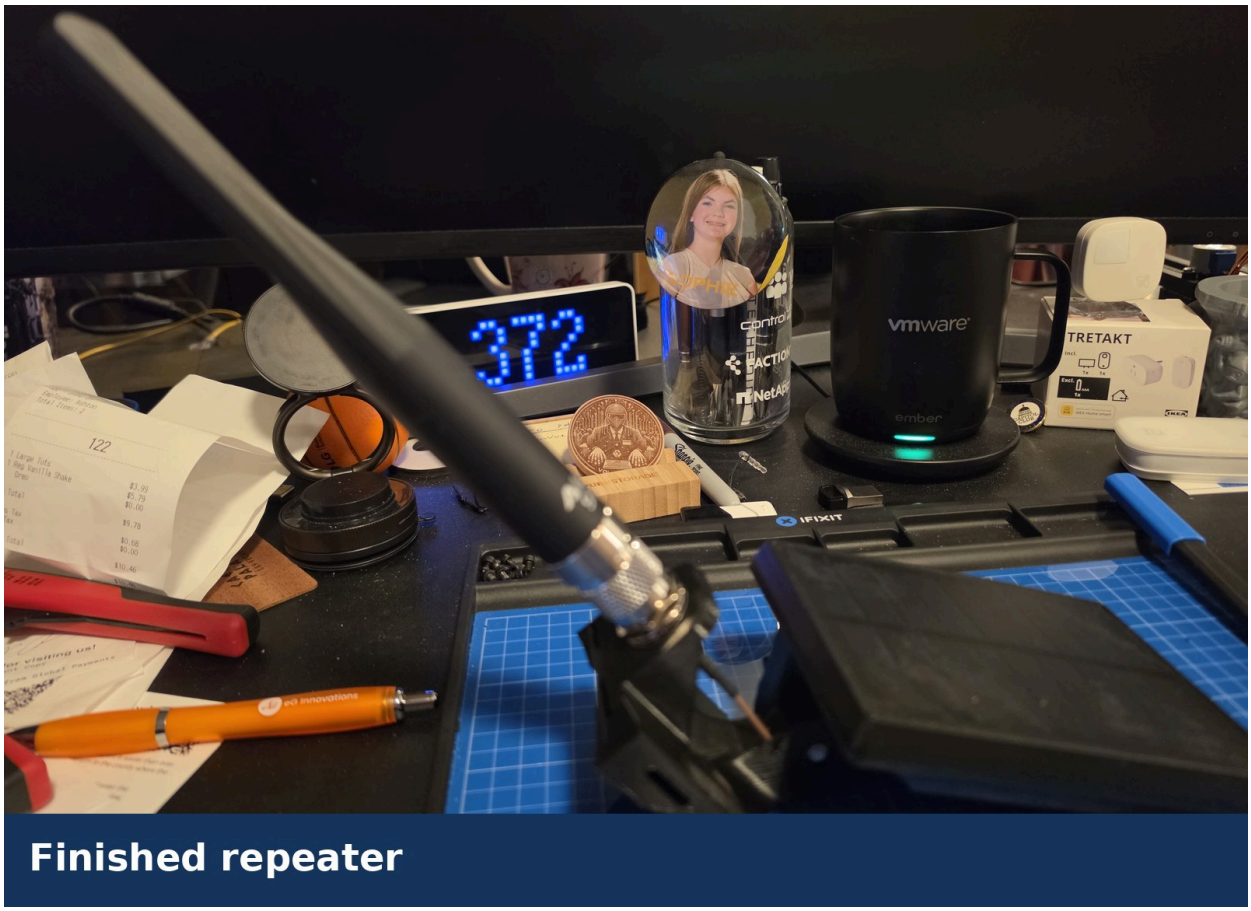

Inspect the finished repeater. The finished unit has no light.

18. Weatherproof and Mount

Confirm that the hand-tightened ALFA antenna connection is clean and dry. Stretch and overlap self-fusing silicone tape across the complete joint without covering the radiating body.

Use zip ties or hose clamps to attach the PETG mount to a pole. They are for pole mounting, not internal cable management or strain relief. Keep the antenna vertical, set the panel for seasonal sun, and confirm permission, stability, safe access, and water-shedding orientation.

Final Acceptance Checklist

- ☐ Correct repeater firmware, regional preset, and standard-form name saved
- ☐ Both PCB trace cuts test open
- ☐ Corrected JST polarity and solder joints verified
- ☐ ALFA antenna and U.FL pigtail secure
- ☐ Battery installed with correct polarity only after inspection
- ☐ LoRa relay and charging tests pass
- ☐ TPU gasket and all original hardware installed
- ☐ Antenna joint sealed with self-fusing silicone tape

Troubleshooting

Symptom	Check first
No power	Battery polarity/voltage, JST polarity, switch wiring, solder joints, and CN3065 path
No charging	Solar illumination, panel polarity, CN3065 connections, and trace cuts
Poor LoRa range	Regional preset, ALFA antenna, U.FL seating, height, and obstructions
Intermittent operation	Loose connection, weak battery, pinched wire, solder joint, water, or shade

Maintenance

Inspect after severe weather and periodically. Clean the panel; inspect the mount, fasteners, gasket, enclosure, and silicone tape; look for corrosion or moisture; review battery performance before winter; and retest after moving the unit or changing its antenna system.

Build Record

Item	Record
Builder	
Build date	
Repeater name	
Firmware/version	
Installation location	
Battery installed	Included 1500 mAh 18650 / Other: _____
Final radio test	Pass / Needs follow-up
Final charging test	Pass / Needs follow-up
Notes	