



COMPAC ONSITE USER MANUAL

CompacOnsite User Manual

Version 1.0.1

Date: 20th February 2019

Conditions of Use

- Read this manual completely before working on, or making adjustments to, the CompacOnline website.
- Along with any warnings, instructions, and procedures in this manual, you should also observe any other common sense procedures that are generally applicable to websites of this type.
- Compac Industries Limited accepts no liability for loss of profits, loss of products, and loss of time, resulting from failure to follow any warnings, instructions, and procedures in this manual, or any other common sense procedures generally applicable to software of this type, whether incurred by the user or their employees, the installer, the commissioner, a service technician, or any third party.
- Unless otherwise noted, references to brand names, product names, or trademarks constitute the intellectual property of the owner thereof.
- Every effort has been made to ensure the accuracy of this document. However, it may contain technical inaccuracies or typographical errors. Compac Industries Limited assumes no responsibility for and disclaims all liability of such inaccuracies, errors, or omissions in this publication.
- Compac Industries Limited reserves the right to change the specifications of its products or the information in this manual without necessarily notifying its users.

Manufactured By:

52 Walls Road, Penrose, Auckland 1061, New Zealand
P.O. Box 12-417, Penrose, Auckland 1641, New Zealand

Phone: + 64 9 579 2094

Fax: + 64 9 579 0635

Email: techsupport@compac.co.nz

www.compac.biz

Copyright ©2015 Compac Industries Limited, All Rights Reserved

Document Control

Document Information	
Document Details	CompacOnsite User Manual v.1.0.0
Current Revision Author(s)	R Liu
Original Publication Date	24/08/18
Authorised By	W Zheng

Revision History			
Version	Date	Author(s)	Revision Notes
1.0.0	24/08/18	S Laycock	New manual
1.0.1	20/02/19	R Liu	Updated screenshot of buttons on Transactions page, updated Tanks Screenshots, added Note on Cards Section, edited VegaTank Setup and FMS settings information

CONDITIONS

Contents

Logging In	2
Users.....	3
Standard User Options.....	4
Transactions.....	4
Tanks	5
Events	5
Cards	6
User IDs	7
CompacOnSite Logins.....	8
Administrator Options	9
Settings	10
Reboot	10
Technician Options	11
Dispenser Setup	11
Vega Tank Strapping.....	15
Fuel Management System Setup.....	16

Logging In

CompacOnsite allows remote access of sites 24/7. From CompacOnsite, transactions, tanks, pricing and more can be managed quickly and easily.

To access CompacOnsite, the device ID is needed. The following should be entered into an internet browser, replacing device ID with the specific ID of the unit. Refer to Local Setup for instructions on finding the Device ID.

https://_____.compaconsite.com

The standard passwords are shown below.

IMPORTANT NOTES:

For the security of the site, ensure the passwords are changed once the unit is installed.

Access to online data is heavily dependent on the unit being powered on and connected to the internet. Ensure the unit is online in order to have full access to all site data.

Username	Password
user	c0mpac5KUser
admin	c0mpac5KAdmin
tech	c0mpac5KTech

After logging in, the CompacOnSite home screen will appear. See Logins for managing logins.

compaconsite

Home

Status

Site Name	
Device ID	CFM000301
DateTime	17/08/2018 04:30:05 pm
Timezone	(UTC+12:00) Auckland, Wellington

Storage


Transaction storage
5.8% used

Card storage
6/200 cards in use

User ID storage
0/400 User IDs in use

Users

There are three different user options when logging into Compac Onsite; standard, technician and administrator. Each user can access different functionalities. Standard users can access all basic functionalities, such as tanks, cards and transactions. Admin users can also access these, as well as being able to access the system settings and reboot. The technician can access all these options, as well as being able to access set up options which are needed when setting up the site.

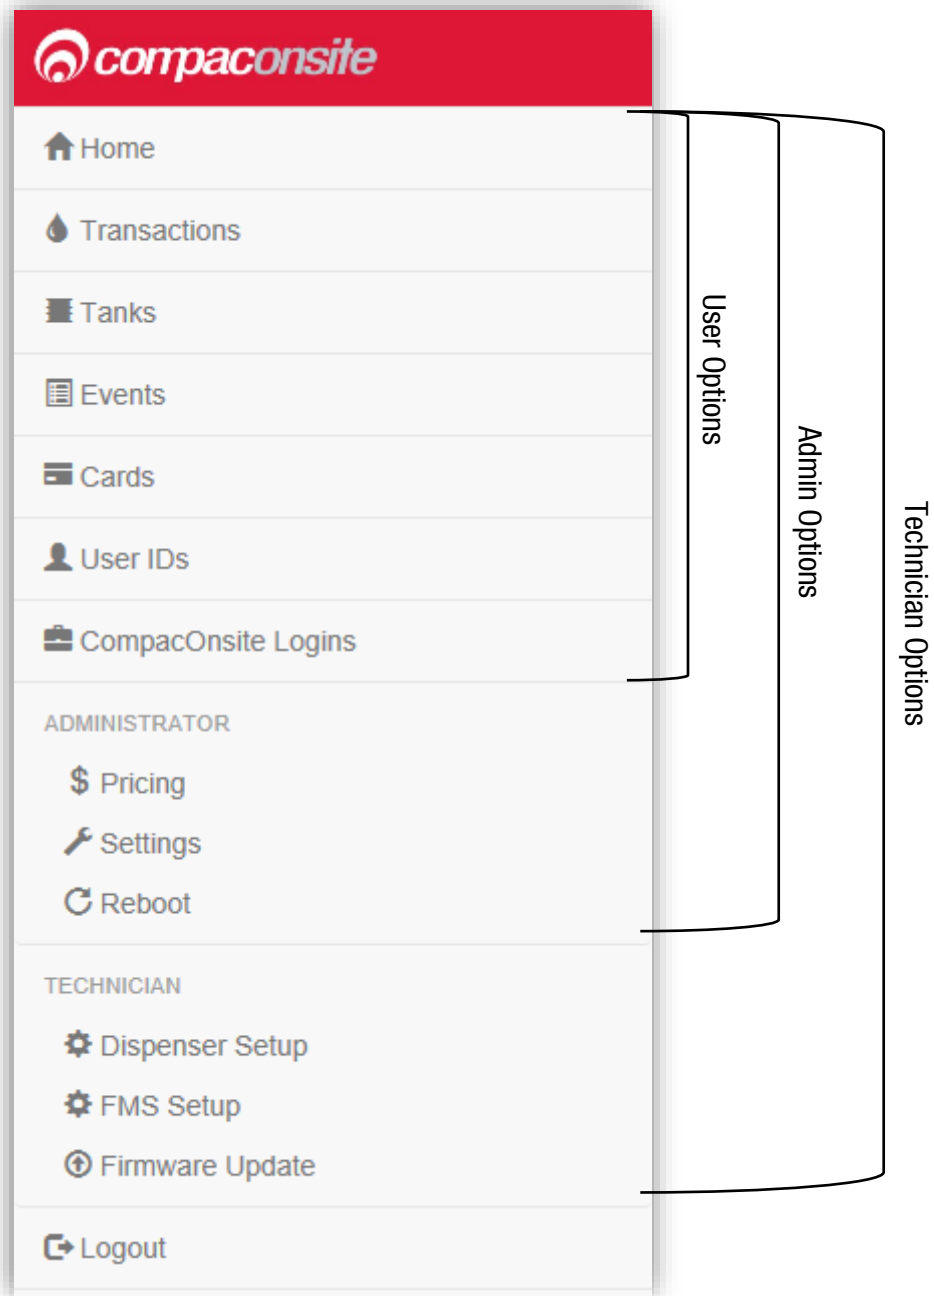

Standard User Options

Users have access to all the following basic functionalities.

Transactions

Transactions									
Transactions									
Transaction storage									
0.1% used									
Reference	Card Number	Local Date Time	Product	Product Code	Pump	Hose	Amount	Quantity	
23	7824331000132...	02/03/2018 11:46:0...	Diesel		3	1	4.38	4.3	
22	7824331000132...	02/03/2018 11:45:5...	Diesel		3	2	1.60	1.6	
21	7824331000132...	02/03/2018 11:45:2...	Diesel		3	1	3.26	3.2	
20	7824331000132...	02/03/2018 11:45:0...	Diesel		3	2	1.71	1.7	
19	7824331000132...	02/03/2018 11:44:1...	Diesel		3	1	0.66	0.6	
64	7824331000132...	23/02/2018 15:04:4...				2	2.84	2.8	
63	7824331000132...	23/02/2018 13:46:3...				1	0.00	0.0	
62	7824331000132...	23/02/2018 13:45:2...				1	7.26	7.2	
61	7824331000132...	23/02/2018 13:43:4...				1	0.00	0.0	
60	7824331000132...	23/02/2018 13:32:5...				2	2.60	2.6	
59	7824331000132...	23/02/2018 13:31:5...				2	29.00	29.0	
58	7824331000132...	23/02/2018 13:29:4...				1	12.10	12.1	
57	7824331000132...	23/02/2018 13:28:4...				1	0.00	0.0	

NOTE: Table columns shown on page can be expanded.

The Transactions page shows the transactions of fuel into the tank. The Transactions storage is limited. When Transaction storage is at 100%, the user will have to Export CSV. This will store the data locally onto your device while making the transactions data overwritable once more transactions are recorded.

☒ Only load new transactions

Refresh

Export CSV

NOTE: Select Refresh before adding more transactions.

Transactions that have not been exported will be viewed in the screen as a default. To show exported transactions untick 'Only load new transactions'.

Tanks

The Tanks section indicates product details and volume of fuel in the tank.

Tanks

Tanks

Download

Refresh

Tank No.	Product	Product Code	Gross Vol. (L)	Net Vol. (L)	Safe Fill Level	Ullage	Water Height	Temperature	Last Updated
1	Super	1	905.8	898.6	0	-905.8	34	21.8	22/01/2019 01:35:58

< >

Deliveries (last 10)

Download

Refresh

Tank No.	Date Time	Gross			Net			
		Delivery (L)	Start (L)	End (L)	Delivery (L)	Start (L)	End (L)	
1	31/12/2099 07:15:0...	3147.6	771.7	3919.3	3121.8	765.4	3887.2	

Deliveries indicate when the last transaction of fuel from the tank occurred, including the tank number and date time. The data in this section can be downloaded by pressing Download. Select Refresh to view new data. For Technician Only tank settings, see Dispenser Setup.

NOTE: A reboot is required for any changes to be applied. This may take up to 30s.

Events

Events are notable events that occur with the pumps.

Pump Snapshot = Accumulative amount of fuel pumped from selected pump, logged at the midnight instant daily

Tank Snapshot = Dip of fuel remaining in the tank, logged at the midnight instant daily

Controller Power On = The processor turns on

Time Update = Synchronises time on processor with real online time

Select Download to download the list of events on screen. Select Refresh to load the most recent events.

Events

Events

Refresh

Download

Local Date Time	Event	Event Code	Text	Pump	Hose	Unit Price	Amount	Quantity	Tank	
21/12/2018 03:53:52 pm	Controller Power On	80								
21/12/2018 03:55:33 pm	Time update	76	Time sync ok							
22/12/2018 12:00:01 am	Pump Snapshot	46		1	1	1.000	41043.5	41043.5		
22/12/2018 12:00:01 am	Pump Snapshot	46		2	1	1.000	68076.82	68076.82		
22/12/2018 12:00:06 am	Tank Snapshot	45						0	1	
23/12/2018 12:00:00 am	Pump Snapshot	46		1	1	1.000	41043.5	41043.5		
23/12/2018 12:00:00 am	Pump Snapshot	46		2	1	1.000	68076.82	68076.82		
23/12/2018 12:00:05 am	Tank Snapshot	45						0	1	
24/12/2018 08:51:02 am	Controller Power On	80								
24/12/2018 08:51:07 am	Pump Snapshot	46		1	1	1.000	41043.5	41043.5		
24/12/2018 08:51:07 am	Pump Snapshot	46		2	1	1.000	68076.82	68076.82		
24/12/2018 08:51:12 am	Tank Snapshot	45						0	1	
24/12/2018 09:11:03 am	Controller Power On	80								

Cards

In this section, a new card can be created with Create New card. Decide on a card number, PIN and owner details, then select Submit.

NOTE: For card base management, see Fuel Management System Setup

NOTE: Ensure Enabled box is ticked to validate card.

If a mistake has been made, select Edit and edit card details. Select the trash can icon if a card is not needed. The maximum Card storage is limited at 200 cards.

Cards

Cards

Card storage

9/200 cards in use

Standard User Options

Card Number ▲	Enabled ▲	PIN ▲	Card Total (l) ▲	Owner detail 1 ▲	Owner detail 2 ▲	
12345	✗		0.0	123	456	Edit
123213	✗		0.0			Edit
123456	✓		0.0	123	456	Edit
245687f	✗		0.0	123	456	Edit
24568789	✓		0.0	123	456	Edit
1234567890123456...	✗		0.0			Edit
1234567890123456...	✗		0.0			Edit
ABCD1234	✗	1234	0.0	K	John	Edit
ERCD1234	✗	3333	0.0	G	Q	Edit

User IDs

User IDs consist of any 6 numbers or less. Select Edit to Edit User IDs and owner details. Tick the enable box to make the User ID valid for use. The trash can icon can be selected to permanently delete the user.

NOTE: A card can have multiple users.

Different users will have different User IDs. The purpose of this is to know which user has made a transaction, and ensure they are only fuelling when required.

To add a user ID, click Create New User ID. To insert large numbers of user, importing a User ID file is recommended. Exporting a user ID file exports the data from the website onto your local device.

NOTE: All User ID files created/imported **MUST** be a csv file not an excel file.

User IDs

[Import User IDs](#)
[Export User IDs](#)
[Create New User ID](#)

User ID storage

18/400 User IDs in

Filter User IDs

Field:

▼

Value:

User ID ▲	Enabled ▲	Owner detail ▲			
1	✗		Edit		
104	✗		Edit		

CompacOnSite Logins

For the security of the site, the standard passwords should be changed during set up of the unit. In case the passwords were not changed during installation, the process is outlined here. To change the passwords, go to CompacOnsite Logins, shown on the left options tab.

User Management

Users

Username ▲		
tech	Edit	
admin	Edit	
user	Edit	

Not all users may be shown depending on the access level of the user. To edit, click Edit.

Edit User

Username:

tech

Password

Password

Minimum of 8 characters

[Submit](#)

Enter the desired new password, confirm this and press Submit.

Administrator Options

Administrators can access all the above options, as well as being able to reboot the site and access pricing and settings.

Pricing

From Pricing, the pricing for different products can be viewed and/or changed.

Pricing

Product Prices

Product ▲	Product Code ▲	Active Price ▲	New Price ▲		
ULP	2	2.500	2.500	Set New Price	
Diesel	3	1.310	1.310	Set New Price	

Price Change

Apply new product prices. This will change prices on pumps.

Note: For commercial variants, price changes only apply to external pumps.

[Use New Prices](#)

The Active Price is the price being used currently for the pumps. To change this, select Set New Price.

Set New Price

Product Name:

ULP

New Price:

2.500

[Change Price](#)

Enter the new price for any product and select Change Price. This will change the New Price. However, the unit will continue to use the Active Price until Use New Prices is selected, under Price Change. Clicking this will change the Active Price and update them to the New Price.

Settings

Settings can be used to set site details. Enter the site details and press submit.

Site Details

Site Name:

Site Address 1:

Site Address 2:

Site Address 3:

Site Address 4:

Time

Timezone

☒ Daylight Saving Time

The time zone can also be set. In some cases, timezone will be automatically synced. Enter the timezone and press submit.

Reboot

You can reboot the site to restart the application. Some settings require rebooting to update recent actions. The page needs to be refreshed after the Reboot process has been completed.

NOTE: The unit can only be rebooted when no transactions are taking place.


When someone is refuelling, the C5000 unit cannot be rebooted. The pumps may stop fuelling as the transaction has been interrupted.

Technician Options

Technician users can access both administrator and standard user options. As well as this, they can access site setup options.

Dispenser Setup

Dispenser Setup will bring up a setup menu with four options; Products, Pumps, Tank Gauging and Tank Strapping.

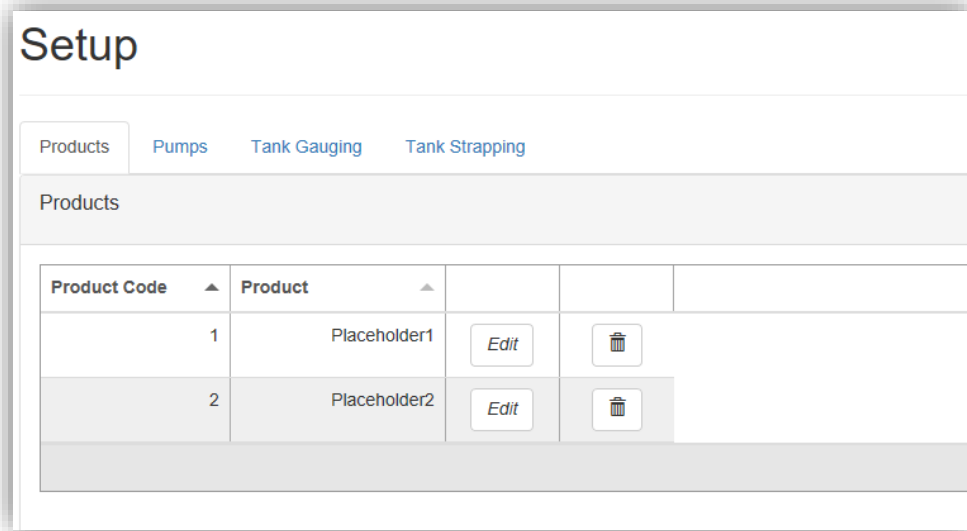


The screenshot shows a web interface titled "Setup". Below the title are four tabs: "Products", "Pumps", "Tank Gauging", and "Tank Strapping". The "Products" tab is selected. Below the tabs is a section titled "Products" containing a table with two columns: "Product Code" and "Product". The table has two rows of data. Each row has an "Edit" button and a delete icon (trash can) to its right.

Product Code	Product		
1	Placeholder1	Edit	
2	Placeholder2	Edit	

In the Products tab, the current products can be viewed.

To create a product, Add Product can be selected. The product must be named and numbered before it can be saved. The following menu will appear.

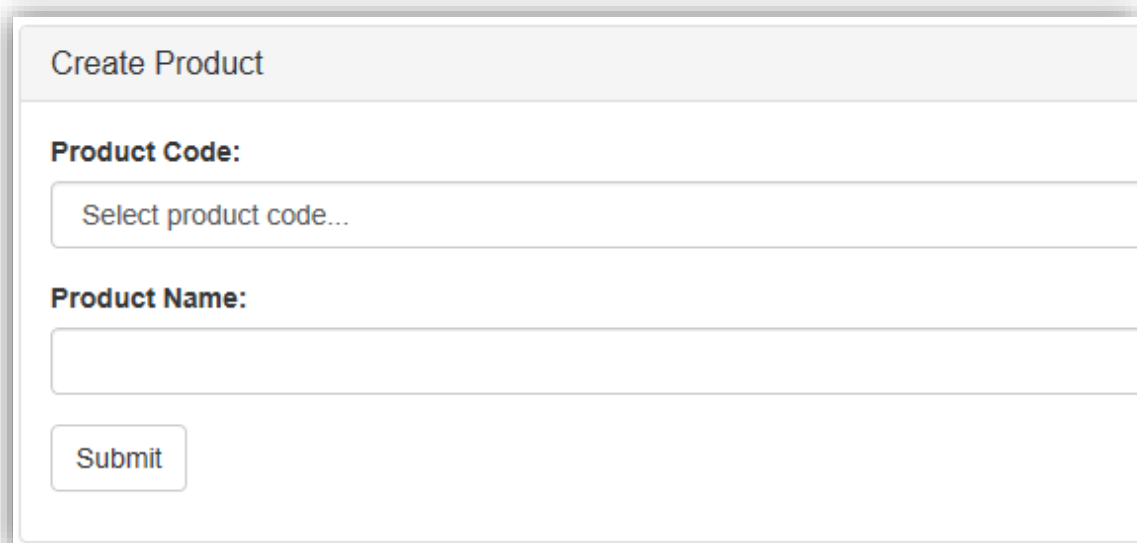

The screenshot shows a web form titled "Create Product". It has two main sections: "Product Code:" and "Product Name:". The "Product Code:" section has a dropdown menu with the text "Select product code...". The "Product Name:" section has a text input field. At the bottom of the form is a "Submit" button.

Pressing Submit will add the product. When a product is edited the same menu will appear, and the product's name and number can be changed before resubmitting.

To delete a product, select the recycle bin icon in the products table, and click OK on the pop-up.

The next tab is the Pumps tab. From this tab, the configuration of the unit (single or dual) can be chosen, as well as the settings for each pump.

Setup

Products Pumps Tank Gauging Tank Strapping

Pumps

Side A

Pump number (1-98)	0
Product	
Meter type	
State	Disabled

Update

Depending on the chosen configuration, only one side may be displayed.

To change the Pump number simply enter the new value and press Update.

To change the product, meter type or state, select the relevant option from the drop-down menus and press update.

The Tank Gauging tab shows which tank gauge is selected for each tank.

For the Side B pump, change the State to Enabled for a dual pump.

Setup

Products Pumps **Tank Gauging** Tank Strapping

Tank Gauging

Enabled	Gauge Type ▼	Product ▲	Capacity (L) ▲	Safe Fill Lev... ▲	Gauge C... ▲	Tank Num... ▲	
✗			0	0	0	0	Edit
✗			0	0	0	0	Edit

The current settings can be viewed. To edit a row, select Edit.

Edit Tank Gauge Settings

Gauge Type

Veeder-Root

Product

Placeholder

Tank Number

1

Tank Capacity (L)

0

Safe Fill Level (L)

0

☐ Enabled

[Submit](#)

To change a setting, enter the new setting and Submit the new values.

If a Vega tank gauge is being used, more information is required. The required fields will automatically appear if a Vega meter is selected.

Edit Tank Gauge Settings

Gauge Type

Vega

Tank Strapping Table ID

Distance from probe to product for full tank (mm)

0

Distance from probe to tank bottom (mm)

0

Tank Gauge Channel

Product

AdBlue

Tank Number

1

Tank Capacity (L)

0

Safe Fill Level (L)

0

☐ Enabled

Submit

The final tab in Dispenser Setup is the Tank Strapping section. This section is only relevant if a Vega meter is fitted. Refer to Vega Tank Strapping for information.

Setup

Products

Pumps

Tank Gauging

Tank Strapping

Tank Strapping

Tank Strapping Table ID

1

To download the tank strapping table, select download current strapping table. At the bottom of the page, tables can be uploaded and the table template can be downloaded. Use the table ID drop down menu to select the table ID.

Vega Tank Strapping

If a Vega electronic dipstick is being used, a tank strapping table will need to be created to gauge the amount of liquid in a tank. To do this, the tank dipstick will need to be accessed. This is a ruler showing volume that is a component of tanks.

To gather values for the tank strapping table:

1. Load a quantity of the product into the tank (eg 50L)
2. Insert a dipstick into the tank so it is perpendicular to the base.
3. Remove the dipstick gently.
4. Use a measuring tape to measure and record the length of wet dipstick onto the table. This length will correspond to the volume 50L.
5. Load more of the product into the tank (eg +50L=100L)
6. Repeat steps 2 and 4.
7. Repeat steps 5 and 6 for every volume of product. After making a table, reinsert the dipstick into the tank and then read the volume of fuel in the tank. This is also required on CompacOnSite.

NOTE: The more readings done on the tank, the more accurate the tank gauging will be.

level (mm)	volume (L)
0	0
10	50
20	100
30	150
40	200
50	250
60	300
70	350
80	400
90	450
100	500
110	550
120	600
130	650

Fuel Management System Setup

When setting up the unit, the FMS setup tab can be used to set up card records.

Cards can be imported and exported as .csv files. This option can be found in this tab. To add a new card, fill in the required fields and check which prompts are desired. Checking Enabled will enable the card. When the card is finished, press Submit. Current cards can be viewed in the Card Prefix Table.

PIN Pad = Requires users to type in a PIN number/passcode for authentication

HID = Requires users to swipe a tag for authentication

Card Reader= Requires users to swipe a card into the card reader for authentication

NOTE: If two of the three boxes are ticked, both authentication modes will be required.

NOTE: The HID and Card Reader modes cannot both be ticked as they cannot both fit onto a device's hardware and software.

FMS Settings

Authentication

Card Prefix Table

Name	Enabled	BIN high	BIN low	
HID	✓	1995000	1995000	Edit
PIN	✓	99999999	0	Edit

Auth Mode

☒ Pinpad
☒ HID
☐ Card Reader

Submit

To edit a card prefix, click Edit. The following should pop up:

Edit Card Prefix Record

Name:	HID
BIN high:	1995000
BIN low:	1995000
Access:	0
PAN length:	8

Mode

☐ Hotlist
☒ User ID

Prompts

☐ Expiry check
☐ Preset
☒ Odometer

☒ Enabled

Submit

The PAN length is the maximum number of digits the PAN number (Card Number) can be.
The Access Number is used as an extra step of authentication.

Here are the boxes that can be ticked/unticked:

Mode:

Hotlist – Checks for BIN Number only, not Card Number (recommended setting: disabled)

User ID – Asks for the User ID as an additional step of authentication for the specific user

Prompts:

Expiry Check (only when Card Reader Auth Mode is enabled) – checks for the expiry month and year of a card, declines the card if expired

Preset – Prompts the user to enter the amount of fuel they want dispensed

Odometer- Prompts the user to enter their odometer reading