
Supersedes: ASM0078

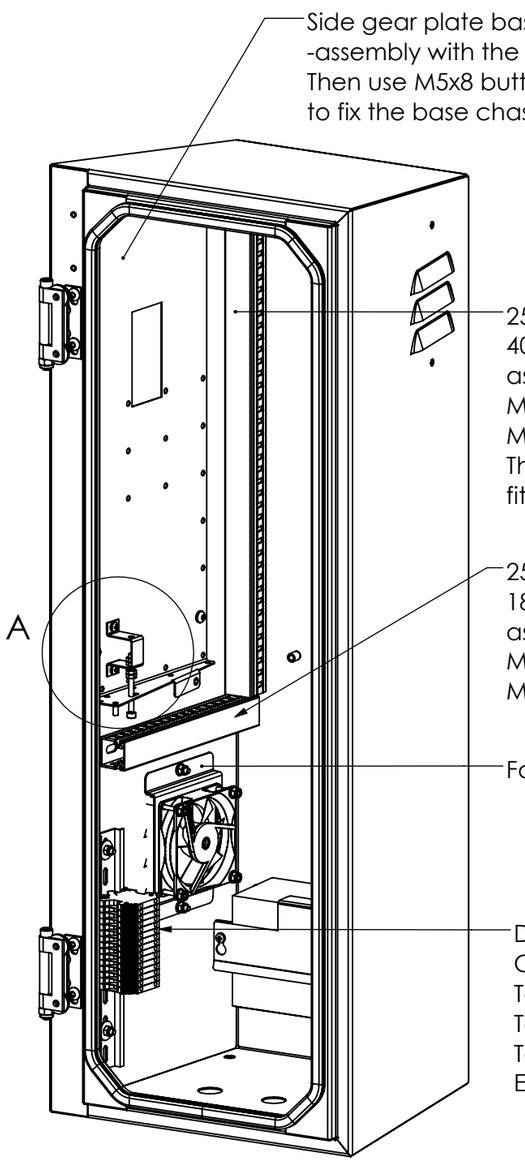


Side gear plate base chassis
-assembly with the locking mechanise (Detail C)
Then use M5x8 button head screws on the M5 spring washers
to fix the base chassis to the cabinet.

25x25 Trunking cut to
400mm Length
assembled with
M4 Nyloc Nuts over
M4 wide flat washers.
Thermostat sensor
fitted inside.

25x25 Trunking cut to
180mm Length
assembled with
M4 Nyloc Nuts over
M4 wide flat washers.

Fan Module assembly


Data terminal assembly
COMMS (one or more types)
Tankgauging
Tank Probe 1
Tank Probe 2
E-stop

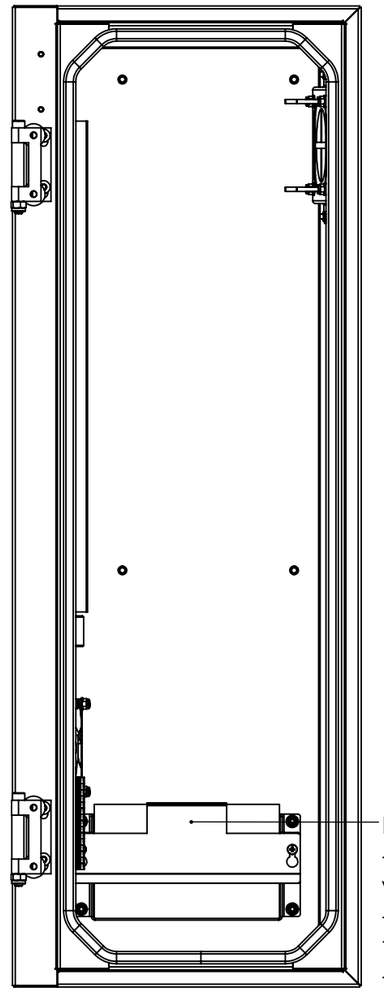


Battery mount Assembly
- attach the battery support bracket to the cabinet with M4x10 screws, M4 spring and nuts.
- place the battery on the support bracket with the terminal on the right hand side.
- attach the battery secure bracket (front bracket) with M4x10 screws

Filter Module assembly

Security Alarm Reed Switch (Optional)
-install inside the cabinet

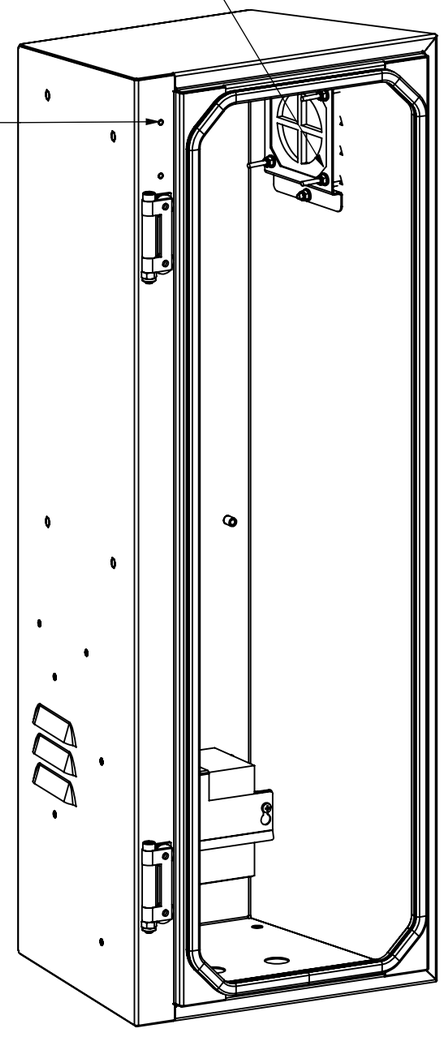

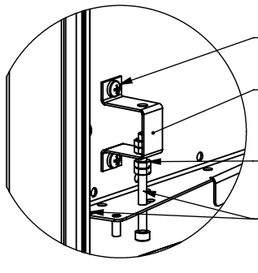

Fasten with M4x10 screws, M4 flat washers and M4 Nyloc Nuts.

Hinge bracket

Leave a gap of about 3mm for the lever screw to move.

Connect the spring between the lever screw and the hook on the chassis

DETAIL A

Date: 4/06/2025

Revision Description: initial release


© Copyright
Compac Industries Ltd
PO Box 12-417
52 Walls Road
Penrose, Auckland, NZ
Ph 649 5792094
Fax 649 5790635


General Tolerances
All dimensions millimetres

Remove all burrs and sharp edges.
Original Size A3.
Do not scale from drawing.

COM5 OPT
COM5 Payment Terminal Cabinet Assembly

Drawing	Sheet	Part Revision
ASM0120A	1/5	A

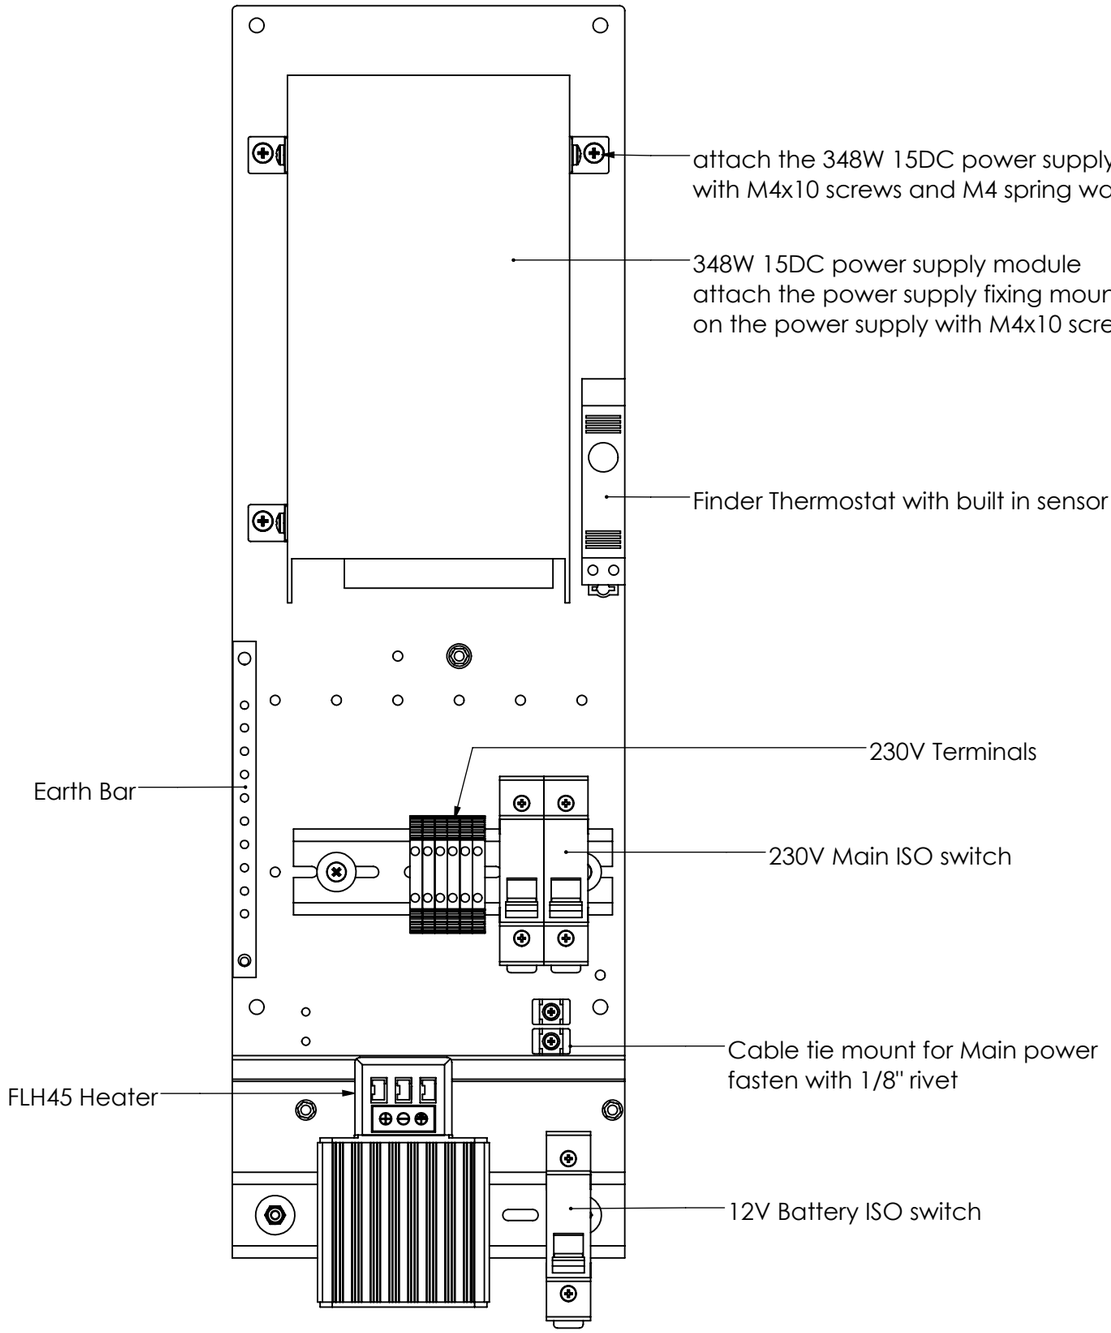

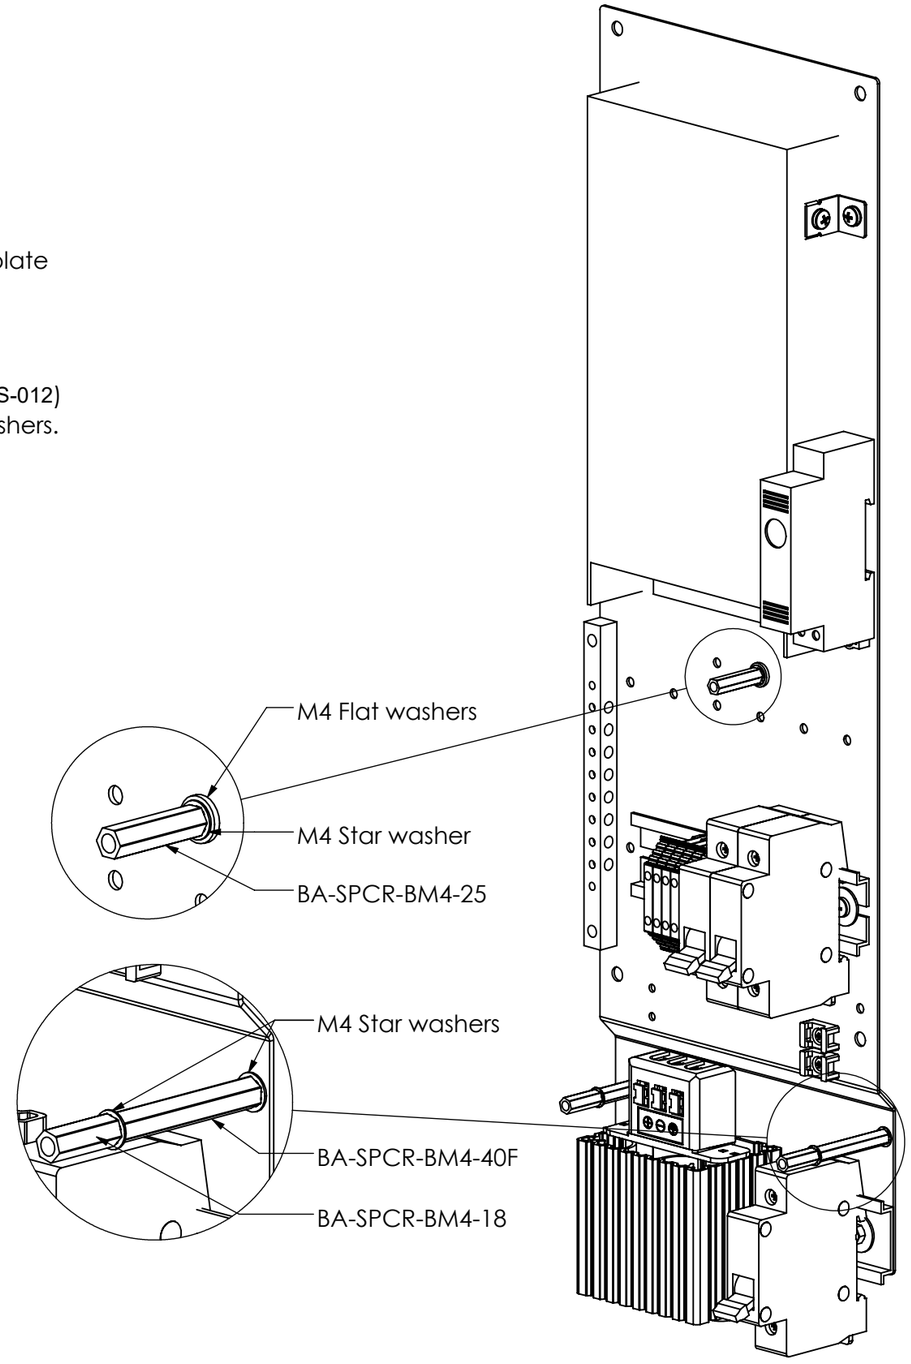

Use M5x8 Button head screws on M5 spring washers to install the back gear plate assembly on the cabinet.

Date: 4/06/2025

Revision Description: initial release


© Copyright
Compac Industries Ltd
PO Box 12-417
52 Walls Road
Penrose, Auckland, NZ
Ph 649 5792094
Fax 649 5790635


General Tolerances
All dimensions millimetres


Remove all burrs and sharp edges.
Original Size A3.
Do not scale from drawing.


COM5 OPT
COM5 Payment Terminal Main Gear Plate Assembly (230V)

Drawing	Sheet	Part Revision
ASM0120A	2/5	B

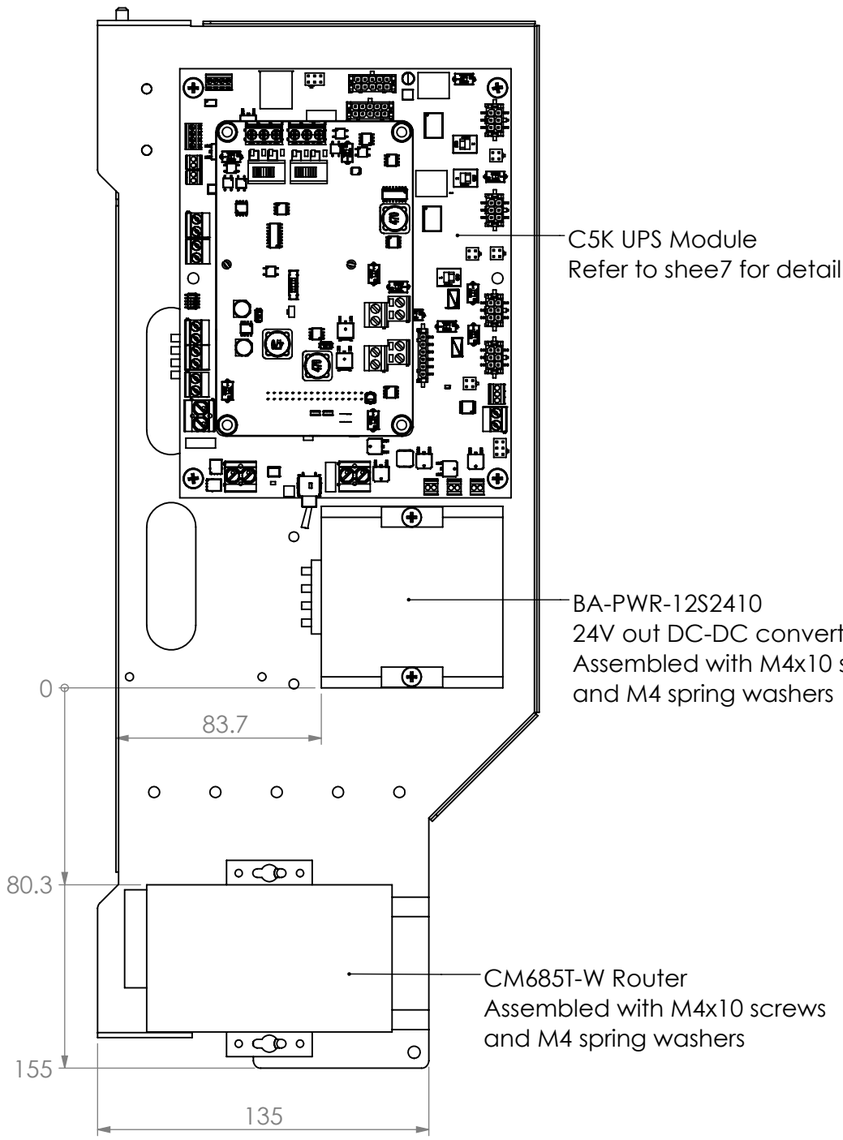

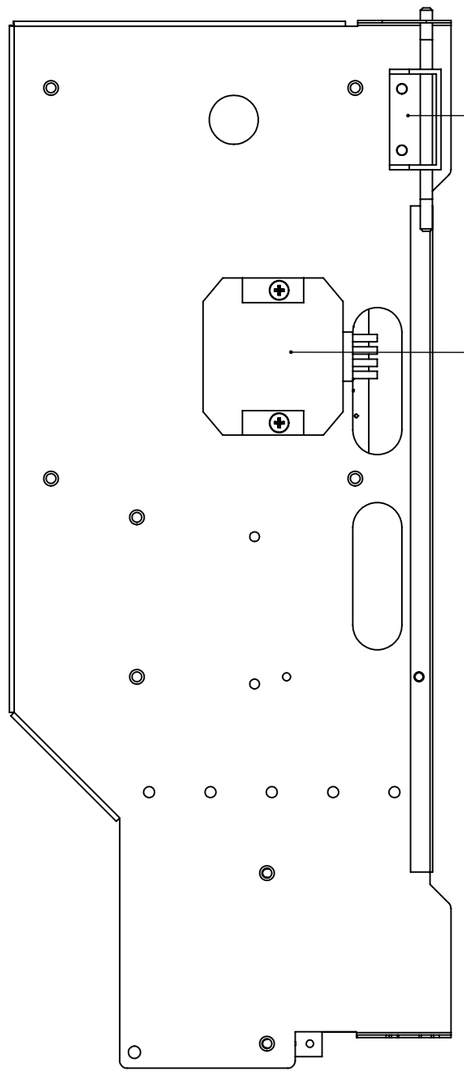

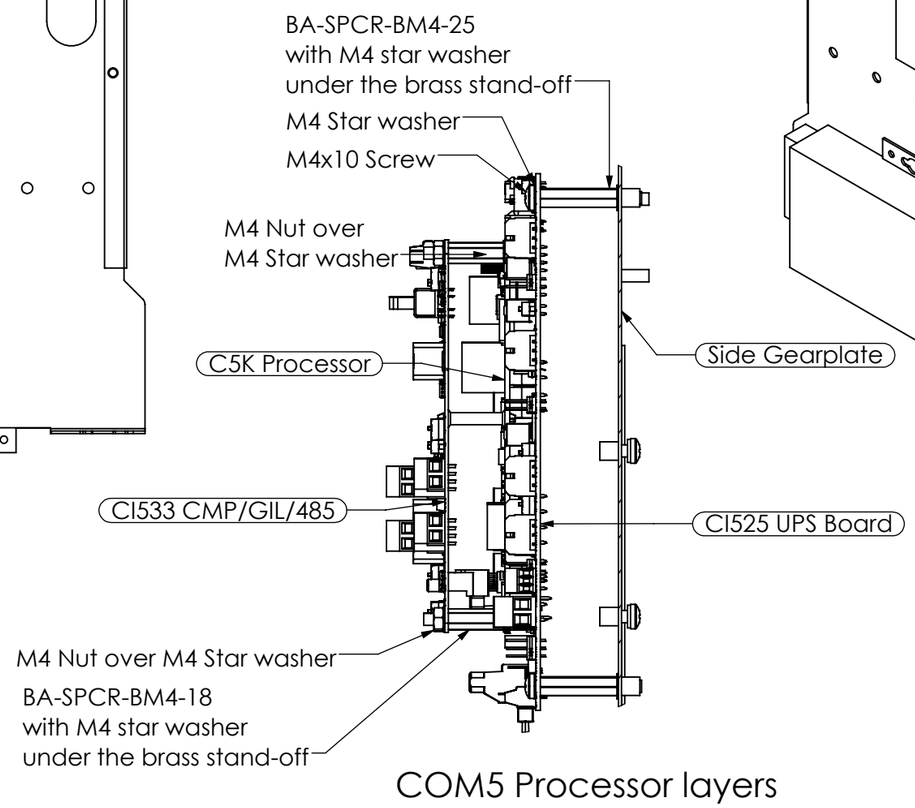

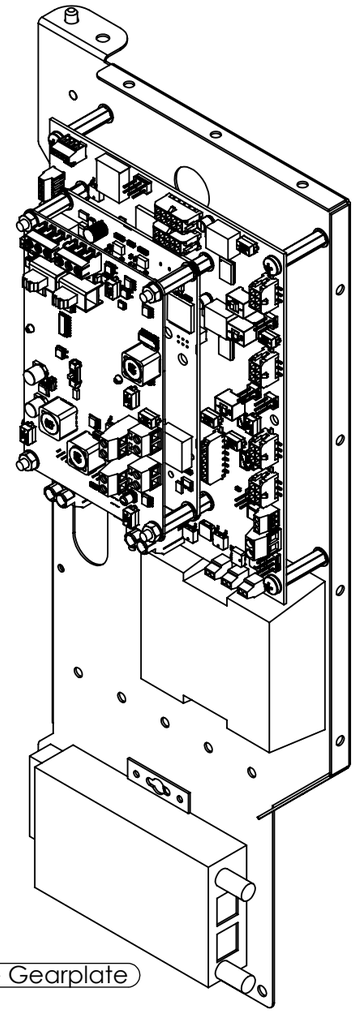

COM5 Processor layers

Install the side gearplate assembly on the side gear base inside the cabinet (refer to Sheet 3).
-Align the bottom hole on the side gear plate with the stud on the chassis.
-Pull the lever on the top spring hinge, and then insert the hinge pin into the top mounting hole on the chassis.

Date: 4/06/2025

Revision Description: initial release

© Copyright
Compac Industries Ltd
PO Box 12-417
52 Walls Road
Penrose, Auckland, NZ
Ph 649 5792094
Fax 649 5790635


General Tolerances
All dimensions millimetres

Remove all burrs and sharp edges.
Original Size A3.
Do not scale from drawing.


COM5 OPT
COM5 Payment Terminal Side Gear Plate Assembly (with CI533 Comms Board)

Drawing	Sheet	Part Revision
ASM0120A	3/5	A

Connections for 'GPI1' & 'GPI2

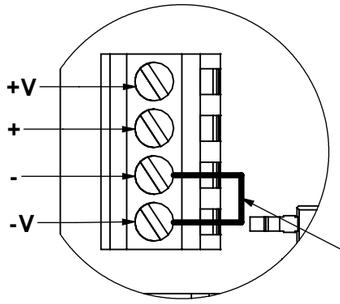

DETAIL H

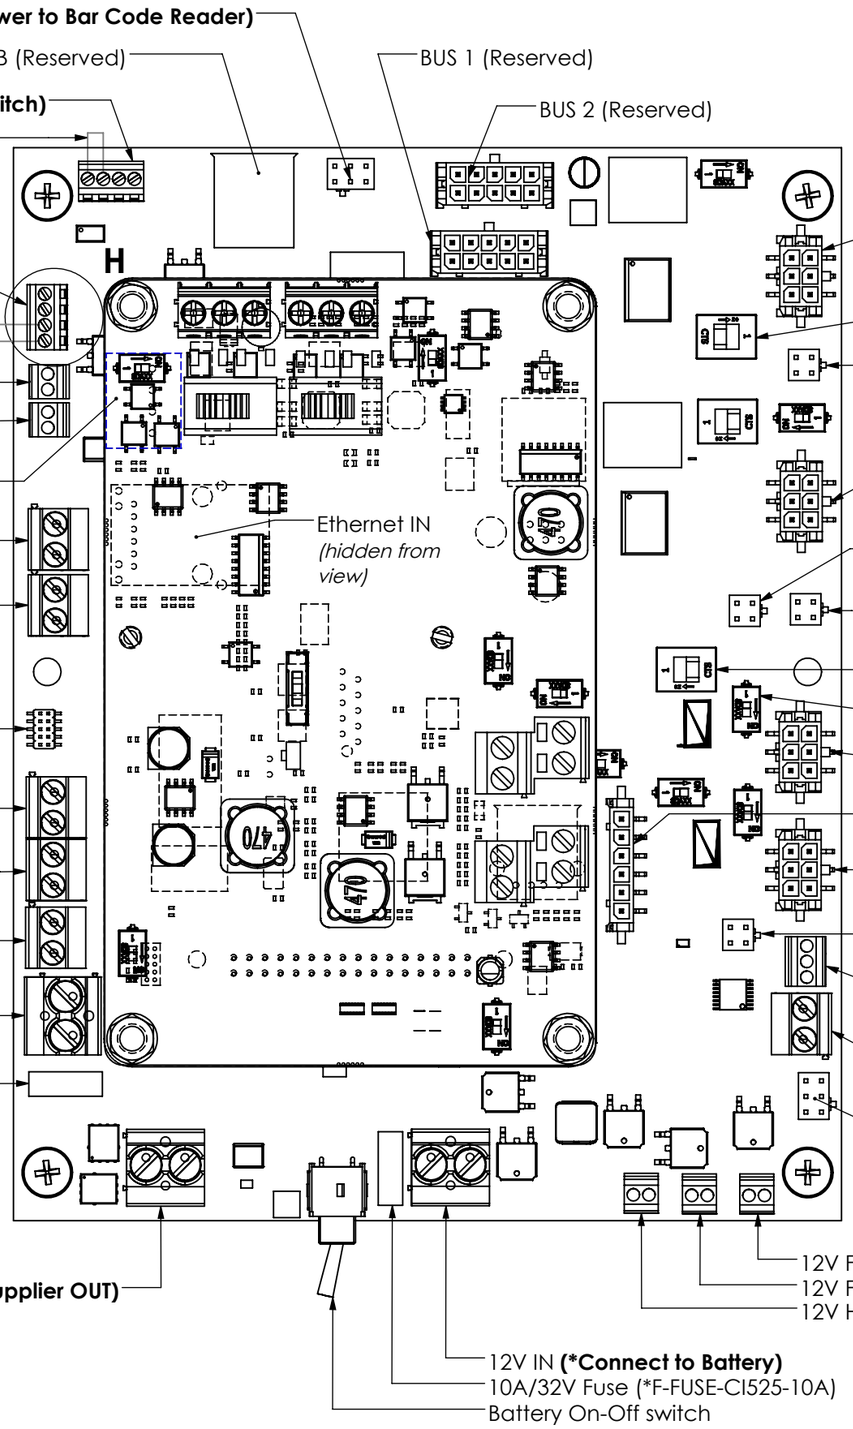

USB Header Pins **(* Power to Bar Code Reader)**
USB (Reserved)
BUS 1 (Reserved)
BUS 2 (Reserved)
GPI2 **(*Connect to Door Switch)**
*Jumper wire
GPI1 **(*Connect to Side Terminal Rail E-stop)**
*Jumper wire
GPO2 (Reserved)
GPO1 (Reserved)
P200 RS485 connector is under the COMMS board.
May need Remove COMMS board to retrofit **touchscreen loom.**
12V/2A Out **(*Connect to Modem router)**
12V/2A IN **(*Connect to BA-PWR-40S1203 OUT)**
P501 JTAG (Reserved)
24V/10A IN **(*Connect to BA-PWR-12S2410 OUT)**
24V/10A OUT **(*Connect to Vkp80iii printer power port)**
12V/20A Out **(*Connect to BA-PWR-12S2410 IN)**
12V/20A Out **(*Connect to BA-PWR-40S1203 IN)**
10A/32V Fuse (*F-FUSE-CI525-10A)
16V IN **(*Connect to 350W 16V power supplier OUT)**
Ethernet IN *(hidden from view)*
ISO1 Comms **(*Connect to Bever or 'other' Price Controller)**
ISO1 Selector Switch **(Set to 'ON')**
ISO1 TTL Header (Reserved)
ISO2 Comms (Reserved)
ISO2 TTL Header (Reserved)
P2 TTL Header (Reserved)
P2 232/485 Selector Switch **(Set to 'ON')**
RS485 Termination Switch **(Default: Set to 'OFF')**
P2 232/485 **(*Connect to Bar Code Reader)**
Secondary Reader port **(*Connect to HID or TTL CDRD)**
P1 232/485 **(*Connect to SKP200 pinpad cable)**
P1 TTL Header (Reserved)
Printer out **(*connect to printer cable)**
- REF:ET336 cable instruction
12V/2A OUT (**Connect to SKP200 pinpad cable**)
422/TTL (Reserved)
12V Fan1 **(*Connect to Fan)**
12V Fan2 (Reserved)
12V Heater (reserved)
12V IN **(*Connect to Battery)**
10A/32V Fuse (*F-FUSE-CI525-10A)
Battery On-Off switch

Date: 4/06/2025

Revision Description: initial release

© Copyright
Compac Industries Ltd
PO Box 12-417
52 Walls Road
Penrose, Auckland, NZ
Ph 649 5792094
Fax 649 5790635

General Tolerances
All dimensions millimetres


Remove all burrs and sharp edges.
Original Size A3.
Do not scale from drawing.

COM5 OPT
COM5 Payment Terminal Side Gear Plate Assembly (with CI533 Comms Board)

Drawing	Sheet	Part Revision
ASM0120A	4/5	A

SIDE TERMINAL RAIL * / CI533 COMMS BOARD * 15 CORE MULTICORE LOOM CONNECTIONS

**** NOTE:** 'BRACKETED' DESIGNATIONS, e.g **"(A/RED)" ARE THE CI533 BOARD TERMINAL DESIGNATIONS. THE COLOUR/S FOR EACH CORE USED FOLLOWS AFTER THE** 'BRACKETED' DESIGNATIONS.*

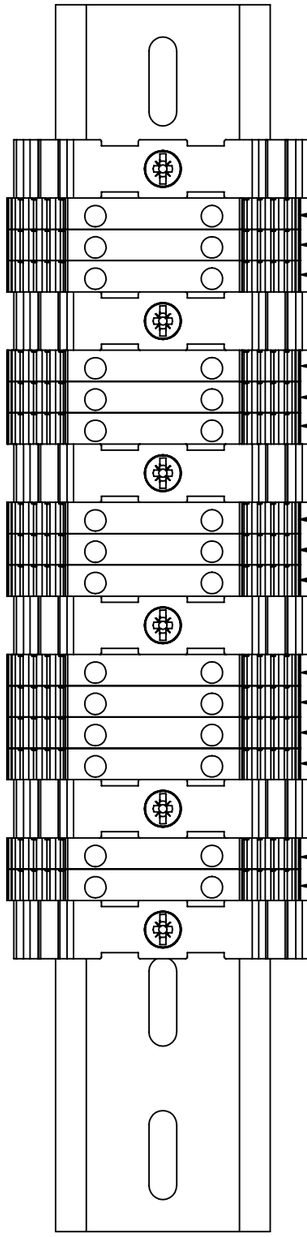

CH1 Comms **(A/RED)** **Red**
CH1 Comms **(B/BLK)** **Black**
CH1 Comms **(GND1)** **Green**/White

CH2 Comms **(A/RED)** **Orange**
CH2 Comms **(B/BLK)** **Green**
CH2 Comms **(GND2)** **Blue**/White


CH3 RS232/RS485 **(Rx/A)** White/**Black**
CH3 RS232/RS485 **(Tx/B)** **Red**/**Black**
CH3 RS232/RS485 **(G)** **Green**/**Black**

Tank 1 4-20mA **(+)** **Orange**/**Black**
Tank 1 4-20mA **(-)** **Blue**/**Black**
Tank 2 4-20mA **(+)** **Red**/White
Tank 2 4-20mA **(-)** **Black**/White

E-stop (V+) **Blue**
E-stop (+) White

CH2 Comms
(A/RED) **Orange**
(B/BLK) **Green**
(GND2) **Blue**/White

CH1 Comms
(GND1) **Green**/White
(B/BLK) **Black**
(A/RED) **Red**

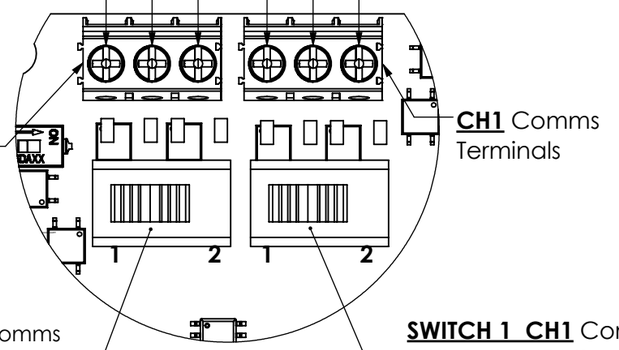

CH2 Comms Terminals


CH1 Comms Terminals

SWITCH 2 CH2 Comms
POS#1: GILBARCO
POS#2: RS485

SWITCH 1 CH1 Comms
POS#1: COMPAC
POS#2: RS485

DETAIL F

CH3 RS232/485
Selector Switch
ON: RS232
OFF: RS485

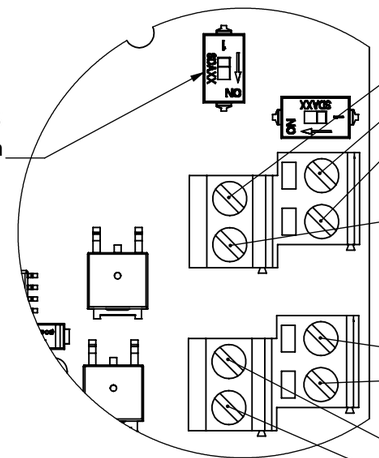

CH3 RS232/RS485 **(Tx/B)** **Red**/**Black**
CH3 RS232/RS485 **(G)** **Green**/**Black**
CH3 RS232 **(Rx)** White/**Black** * *


CH3 RS485 **(A)** White/**Black** * *
(NOTE: *White/**Black** Core can **ONLY** be connected to one of the two terminal positions for **RS232 OR RS485**)*

Tank 2 4-20mA **(-)** **Black**/White
Tank 2 4-20mA **(+)** **Red**/White


Tank 1 4-20mA **(-)** **Blue**/**Black**
Tank 1 4-20mA **(+)** **Orange**/**Black**

DETAIL G

*** BEVER PRICEBOARD INTERFACE (Option)**



NOTE: Ensure the Terminal numbers matches the "Bever" Terminal numbers This option supplied with BW-WLOOM-PTMBEV wire loom, which connects to the ISO1 port on the CI525 UPS Board (Refer to sheet 7).

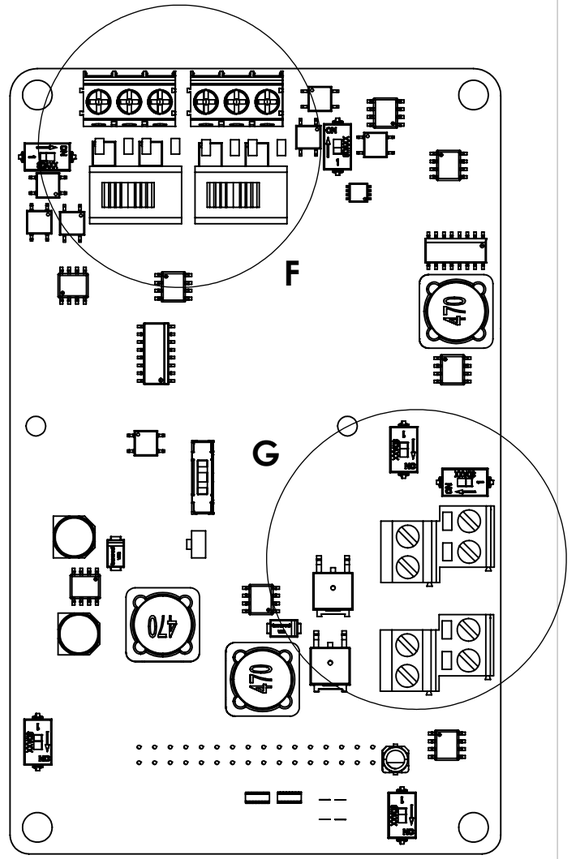

CI533 C5K Comms Driver Board:
'Default' setting for **CH1 & CH2** Comms Switches is **'POS#1'**
'Default' setting for **CH3** RS232/485 Selector Switch is **'ON'**

Date: 4/06/2025

Revision Description: initial release

© Copyright
Compac Industries Ltd
PO Box 12-417
52 Walls Road
Penrose, Auckland, NZ
Ph 649 5792094
Fax 649 5790635

General Tolerances
All dimensions millimetres

Remove all burrs and sharp edges. Original Size A3. Do not scale from drawing.

COM5 OPT
COM5 OPT (with CI533 Comms Board) Side Terminal Rail Assembly

Drawing	Sheet	Part Revision
ASM0120A	**5/5**	**A**