



# **Vivado Design Suite User Guide: Using Tcl Scripting (UG894)**

# Tcl Scripting in Vivado

Introduction  
A Brief Overview of Tcl  
Getting Help  
Platform Specific Tcl Behaviors  
Compilation and Reporting Example Scripts  
Loading and Running Tcl Scripts  
Writing a Tcl Script  
Accessing Design Objects  
Handling Lists of Objects  
Redirecting Output  
Controlling Loops  
Error Handling  
Accessing Environment Variables  
Calling External Programs  
Vivado Integrated Design Environment (IDE)/Tcl Modes versus Batch Mode  
Creating Custom Design Rules Checks (DRCs)  
Custom GUI Buttons  
Vivado Tcl Store  
Tcl Scripting Tips

## Additional Resources and Legal Notices

Finding Additional Documentation  
Support Resources  
References  
Revision History  
Please Read: Important Legal Notices

# Tcl Scripting in Vivado

## Introduction

The Tool Command Language, or Tcl, is an interpreted programming language with variables, procedures (procs), and control structures, to interface to a variety of design tools and to the design data.

---

★ **Tip:** For more information, see the *Vivado Design Suite Tcl Command Reference Guide* ([UG835](#)), or type `<command> -help`. For information on launching and using the AMD Vivado™ Design Suite, see the *Vivado Design Suite User Guide: Getting Started* ([UG910](#)).

---

The language is easily extended with new function calls, and has been expanded to support new tools and technology because its inception and adoption in the early 1990s. It has been adopted as the standard application programming interface, or API, among most EDA vendors to control and extend their applications.

AMD has adopted Tcl as the native programming language for the AMD Vivado™ Design Suite, as it is easily adopted and mastered by designers familiar with this industry standard language. The Tcl interpreter inside the Vivado Design Suite provides the full power and flexibility of Tcl to control the application, access design objects and their properties, and create custom reports. Using Tcl, you can adapt your design flow to meet specific design challenges.

Tcl provides built-in commands to read and write files to the local file system. This enables you to dynamically create directories, start FPGA design projects, add files to the projects, run synthesis and implementation. You can customize the reports generated from design projects, on device usage and quality of results, to share across the organization.

You can also use Tcl to implement new design approaches, or work around existing problems, inserting, and deleting design objects, or modifying properties as needed. You can write scripts to replay established portions of your design flow to standardize the process. Many of the Tcl commands discussed in the following text and script examples are specific to the Vivado Design Suite. You can find detailed information regarding Tcl commands specific to the Vivado Design Suite in the *Vivado Design Suite Tcl Command Reference Guide* ([UG835](#)), or in

the Help system of the Vivado tools.

The AMD Vivado™ IDE uses Xilinx Design Constraints (XDC) to specify the design constraints. XDC is based on a subset of all the Tcl commands available in Vivado and is interpreted exactly like Tcl. The XDC commands are primarily timing constraints, physical constraints, object queries and a few Tcl built-in commands: set, list, and expr. For a complete description of the XDC commands, see Appendix B of the *Vivado Design Suite User Guide: Using Constraints* ([UG903](#)). Unlike Tcl scripts, XDC files are managed by the Vivado IDE so that any constraint edited through the graphical interface or the Timing Constraints Editor can be saved back to its original XDC file. For this reason, only XDC commands can be used in a XDC file. If you need to use other Tcl commands to write your constraints, you must use a Tcl script.

The Vivado tools write a journal file called vivado.jou into the directory from which Vivado was launched. The journal is a record of the Tcl commands run during the session that can be used as a starting point to create new Tcl scripts.

A log file, vivado.log is also created by the tool and includes the output of the commands that are executed. Both the journal and log file are useful to verify which commands were run and what result they produced.

Additional Tcl commands are provided by the Tcl interpreter that is built into the Vivado Design Suite. For Tcl built-in commands, Tcl reference material is provided by the Tcl Developer Xchange website, which maintains the open-source code base and documentation for Tcl, and is located at [Tcl Developer Xchange](#).

See [this tutorial](#) for an introductory tutorial to the Tcl programming language. Also see the Tclers' Wiki located [here](#) for some example scripts.

In this document, there are some examples of Tcl commands and Tcl scripts, and the results that are returned by the Vivado Design Suite when these commands are run. The commands and their return values appear with the following formats:

- Tcl commands and example scripts:

```
puts $outputDir
```

- Output to Tcl Console or results of Tcl commands:

```
./Tutorial_Created_Data/cpu_output
```

## Navigating Content by Design Process

AMD Adaptive Computing documentation is organized around a set of standard design processes to help you find relevant content for your current development task. You can access the AMD Versal™ adaptive SoC design processes on the [Design Hubs](#) page. You can also use the [Design Flow Assistant](#) to better understand the design flows and find content that is specific to your intended design needs.

### **Hardware, IP, and Platform Development**

Creating the PL IP blocks for the hardware platform, creating PL kernels, functional simulation, and evaluating the AMD Vivado™ timing, resource use, and power closure. Also involves developing the hardware platform for system integration. Topics in this document that apply to this design process include:

- [Compilation and Reporting Example Scripts](#)
- [Accessing Design Objects](#)
- [Creating Custom Design Rules Checks \(DRCs\)](#)
- [Tcl Scripting Tips](#)

### **System Integration and Validation**

Integrating and validating the system functional performance, including timing, resource use, and power closure. Topics in this document that apply to this design process include:

- [Compilation and Reporting Example Scripts](#)
- [Accessing Design Objects](#)
- [Creating Custom Design Rules Checks \(DRCs\)](#)
- [Tcl Scripting Tips](#)

## A Brief Overview of Tcl

A Tcl script is a series of Tcl commands, separated by new-lines or

semicolons. A Tcl command is a string of words, separated by blanks or tabs. The Tcl interpreter breaks the command line into words and performs command and variable substitutions as needed. The Tcl interpreter reads the line from left to right, and evaluates each word completely before attempting to evaluate the next. Command and variable substitutions are performed from left to right as the line is read. A word is a string that can be a single word, or multiple words within braces, {}, or multiple words within quotation marks, "". Semicolons, brackets, tabs, spaces, and new-lines, within quotation marks or braces are treated as ordinary characters. However, the backslash, \, is treated as a special character even within braces and quotation marks, as discussed below.

The first word identifies the command, and all subsequent words are passed to the command as arguments.

```
set outputDir ./Tutorial_Created_Data/cpu_output
```

In the preceding example, the first word is the Tcl set command, which is used to assign variables. The second and third words are passed to the set command as the variable name (outputDir), and the variable value (./Tutorial\_Created\_Data/cpu\_output).

When a backslash, '\', is used in a word, then the Tcl interpreter performs backslash substitution. In most cases, this means that the character following the backslash is treated as a standard character in the word. This is used to add quotes, braces, dollar signs, or other special characters to a string. Refer to a Tcl/Tk reference source for more information on how the Tcl interpreter handles the backslash character.

```
puts $outputDir  
./Tutorial_Created_Data/cpu_output  
puts \$outputDir  
$outputDir
```

There is also a difference between the use of braces and quotation marks. No substitutions are performed on the characters between the braces. Words, or strings, within braces are taken verbatim, and are not evaluated for variable or command substitution by the Tcl interpreter. The word consists of exactly the characters between the outer braces, not including the braces themselves, as shown in the example below.

Strings within quotation marks are evaluated, and variable and command substitutions are performed as needed. Command substitution, variable substitution, and backslash substitution are performed on the characters between quotes.

```
puts {The version of Vivado Design Suite is [version -short]}\nThe version of Vivado Design Suite is [version -short]\nputs "The version of Vivado Design Suite is [version -short]"  
The version of Vivado Design Suite is 2023.2
```

Notice in the example above, that the [version -short] command is substituted for the returned value when enclosed within quotation marks, but is not substituted when enclosed within braces. Keep substitution in mind when choosing to use either "" or {} to enclose a string of words. Variable assignment is performed using the set command. You can access a previously assigned variable by specifying the name of the variable with a leading dollar sign, '\$'. If a word starts with a dollar sign the Tcl interpreter performs variable substitution, replacing the variable with the value currently stored by the variable. The '\$' is a reserved character in Tcl.

```
set outputDir ./Tutorial_Created_Data/cpu_output\nputs $outputDir\n./Tutorial_Created_Data/cpu_output
```

Commands can also be nested inside other commands within brackets, [], which are evaluated from left to right in a bottom-up manner. The Tcl interpreter recursively processes the strings within the brackets as a new Tcl script. A nested command can also contain other nested commands. The result of a nested command is passed up into the higher-level command, which is then processed.

```
set listCells [lsort [get_cells]]
```

The preceding example assigns the sorted list of cell objects existing at the top-level of the current design to the listCells variable. The get\_cells command is executed first, the returned objects are sorted by the lsort command, and the sorted list is assigned to the specified variable.

However, the Vivado Design Suite handles square brackets slightly differently than standard Tcl. Square brackets are treated as standard characters in Verilog and VHDL names (net, instances, etc.), and usually identify one or more elements of vectors, such as buses or arrays of instances. In the Vivado Design Suite tools the square brackets are not evaluated in a bottom-up manner when they are expected to be part of a netlist object name.

The following three commands are equivalent:

```
1.) set list_of_pins [get_pins transformLoop[0].ct/  
xOutReg_reg/CARRYOUT[*] ]  
2.) set list_of_pins [get_pins {transformLoop[0].ct/  
xOutReg_reg/CARRYOUT[*] } ]  
3.) set list_of_pins [get_pins transformLoop\[0\].ct/  
xOutReg_reg/CARRYOUT\[*\]\] ]
```

In line 1, the outer pair of brackets indicate a nested command, [get\_pins], as is standard in Tcl. However, the subsequent square brackets are interpreted by the Vivado tools as part of the specified object name transformLoop[0]. This is handled automatically by the Vivado Design Suite, but is limited to certain characters. These characters must be in one of the following forms, or the brackets are interpreted as they would be in normal Tcl syntax:

- star: [\*] - The wildcard indicates any of a number of bits or instances.
- integer: [12] - The integer indicates a specific bit or instance.

In line 2 the use of the braces, {} prevent command substitution of the string inside the braces. In this case the square brackets would be evaluated as part of the object name, transformLoop[0].

In line 3, the backslash indicates that the bracket should be interpreted as a standard character rather than a special character, and this prevents nested command substitution.

While lines 2 and 3 prevent the square brackets from being misinterpreted, those lines require you to manually apply the braces or backslash as needed by standard Tcl. Line 1 shows how the Vivado Design Suite automatically handles this for you.

Finally, to add comments to a Tcl script, simply start a new-line with the number sign, or hash character, '#'. Characters that follow a hash

character are ignored, up to the next new-line. To add a comment to the end of a line, simply end the command with a semicolon, ';', and then begin the comment with a hash character as shown below:

```
# This is a comment  
puts "This is a command"; # followed by a comment
```

## Getting Help

You can get help directly from the Tcl Console. Every Vivado command supports the -help command line argument that can be used anywhere in the line.

For example:

```
Vivado% create_clock -help  
Vivado% create_clock -name CLK1 -period 10 -help
```

In addition, there is a help command that provides additional information. Providing a command name to the help command (that is, help < command >) reports the same help information as < command > -help:

```
Vivado% help create_clock
```

The help command can also just return a short description of the arguments using the -args option:

```
Vivado% help create_clock -args  
create_clock  
Description:  
Create a clock object  
Syntax:  
create_clock -period <arg> [-name <arg>] [-waveform <args>]  
[-add] [-quiet]  
[-verbose] [<objects>]  
Returns:  
new clock object  
Usage:  
Name      Description  
-----
```

```
-period    Clock period: Value > 0
[-name]   Clock name
[-waveform] Clock edge specification
[-add]     Add to the existing clock in source_objects
[-quiet]   Ignore command errors
[-verbose] Suspend message limits during command execution
[<objects>] List of clock source ports, pins or nets
```

A short summary of the syntax of a command is also available with the `-syntax` option:

```
Vivado% help create_clock -syntax
create_clock
Syntax:
create_clock -period <arg> [-name <arg>] [-waveform <args>]
[-add]
[-quiet][-verbose] [<objects>]
```

In addition to providing help for the specific commands, the `help` command can also provide information on categories of commands or classes of objects. A list of categories can be obtained by executing the `help` command without any argument or option. A non-exhaustive list of categories is:

```
Vivado% help
ChipScope
DRC
FileIO
Floorplan
GUIControl
IPFlow
Object
PinPlanning
Power
Project
PropertyAndParameter
Report
SDC
Simulation
TclBuiltIn
Timing
```

ToolLaunch

Tools

XDC

The list of commands available under each category can be also reported with the -category option. For example, the following command reports all the commands under the Tools category:

```
Vivado% help -category tools
Topic      Description
link_design  Open a netlist design
list_features List available features.
load_features Load Tcl commands for a specified feature.
opt_design   Optimize the current netlist. This will perform
the retarget,
                           propconst, and sweep optimizations by
default.
phys_opt_design Optimize the current placed netlist.
place_design   Automatically place ports and leaf-level
instances
route_design   Route the current design
synth_design   Synthesize a design using Vivado Synthesis and
open that design
```

## Platform Specific Tcl Behaviors

In some rare cases, Tcl can behave differently depending on the platform where it is being used (32-bit or 64-bit). This is not related to Vivado but to Tcl.

For example, if you have a list of large integers that you want to sort, you might use the following command:

```
vivado% lsort $list -integer
```

This command behaves differently when the script is running on a 32-bit machine than on a 64-bit machine. The reason is that integers are coded differently on a 32-bit platform versus 64-bit platform:

```
win32, win64, lnx32: sizeof(int) is 4bytes
lnx64: sizeof(int) is 8bytes
```

A workaround for that particular example would be to use the command line option -command of lsort and provide a custom proc to do the sorting.

# Compilation and Reporting Example Scripts

## Compilation with a Non-Project Flow

The following is an example Tcl script that defines a Non-Project design flow.

The example script uses a custom command reportCriticalPaths. This is an illustration on how the Vivado Design Suite can be augmented with custom commands and procedures. The content of reportCriticalPaths is provided and explained in the section [Defining Tcl Procedures](#).

```
# STEP#1: define the output directory area.  
#  
set outputDir ./Tutorial_Created_Data/cpu_output  
file mkdir $outputDir  
#  
# STEP#2: setup design sources and constraints  
#  
read_vhdl -library bftLib [ glob ./Sources/hdl/bftLib/*.vhdl ]  
read_vhdl ./Sources/hdl/bft.vhdl  
read_verilog [ glob ./Sources/hdl/*.v ]  
read_verilog [ glob ./Sources/hdl/mgt/*.v ]  
read_verilog [ glob ./Sources/hdl/or1200/*.v ]  
read_verilog [ glob ./Sources/hdl/usbf/*.v ]  
read_verilog [ glob ./Sources/hdl/wb_conmax/*.v ]  
read_xdc ./Sources/top_full.xdc  
#  
# STEP#3: run synthesis, write design checkpoint, report  
timing,  
# and utilization estimates  
#  
synth_design -top top -part xc7k70tfbg676-2  
write_checkpoint -force $outputDir/post_synth.dcp
```

```

report_timing_summary -file $outputDir/
post_synth_timing_summary.rpt
report_utilization -file $outputDir/post_synth_util.rpt
#
# Run custom script to report critical timing paths
reportCriticalPaths $outputDir/post_synth_critpath_report.csv
#
# STEP#4: run logic optimization, placement and physical
logic optimization,
# write design checkpoint, report utilization and timing
estimates
#
opt_design
reportCriticalPaths $outputDir/post_opt_critpath_report.csv
place_design
report_clock_utilization -file $outputDir/clock_util.rpt
#
# Optionally run optimization if there are timing violations
after placement
if {[get_property SLACK [get_timing_paths -max_paths 1 -
nworst 1 -setup]] < 0} {
    puts "Found setup timing violations => running physical
optimization"
    phys_opt_design
}
write_checkpoint -force $outputDir/post_place.dcp
report_utilization -file $outputDir/post_place_util.rpt
report_timing_summary -file $outputDir/
post_place_timing_summary.rpt
#
# STEP#5: run the router, write the post-route design
checkpoint, report the routing
# status, report timing, power, and DRC, and finally save the
Verilog netlist.
#
route_design
write_checkpoint -force $outputDir/post_route.dcp
report_route_status -file $outputDir/post_route_status.rpt
report_timing_summary -file $outputDir/
post_route_timing_summary.rpt
report_power -file $outputDir/post_route_power.rpt
report_drc -file $outputDir/post_imp_drc.rpt

```

```
write_verilog -force $outputDir/cpu_impl_netlist.v -mode  
timesim -sdf_anno true  
#  
# STEP#6: generate a bitstream  
#  
write_bitstream -force $outputDir/cpu.bit
```

## Details of the Sample Script

The key steps of the preceding script can be broken down as follows:

1. Defines a variable, \$outputDir, that points to an output directory and also physically creates the directory. The \$outputDir variable is referenced as needed at other points in the script.
2. Reads the VHDL and Verilog files that contain the design description, and the XDC file that contains the physical and/or timing constraints for the design. You can also read synthesized netlists (EDIF or NGC) using the `read_edif` command.

The Vivado Design Suite uses design constraints to define requirements for both the physical and timing characteristics of the design. The `read_xdc` command reads an XDC constraints file which is used during synthesis and implementation.

---

**!! Important:** The Vivado Design Suite does not support the UCF format. For information on migrating UCF constraints to XDC commands refer to the *ISE to Vivado Design Suite Migration Guide (UG911)* for more information.

The `read_*` Tcl commands are designed for use in Non-Project mode, as it allows a file on the disk to be read by the Vivado Design Suite to build an in-memory design database, without copying the file or creating a dependency on the file in any way, as it would in Project mode. All actions taken in the Non-Project mode are directed at the in-memory database within the Vivado tools. The advantages of this approach make the Non-Project mode extremely flexible with regard to the design. However, a limitation of the Non-Project mode is that you must monitor any changes to the source design files, and update the design as needed. For more information on running the Vivado Design Suite using either Project mode or Non-Project mode, refer to the *Vivado Design Suite User Guide: Design Flows Overview (UG892)*.

### 3. Synthesizes the design on the specified target device.

This step compiles the HDL design files, applies the timing constraints located in the XDC file, and maps the logic onto AMD primitives to create a design database in memory. The in-memory design resides in the Vivado tools, whether running in batch mode, Tcl shell mode for interactive Tcl commands, or in the Vivado Integrated Design Environment (IDE) for interaction with the design data in a graphical form.

Once synthesis completes, a checkpoint is saved for reference. At this point the design is an unplaced synthesized netlist with timing and physical constraints. Various reports like timing and utilization can provide a useful resource to better understand the challenges of the design.

This sample script uses a custom command, `reportCriticalPaths`, to report the TNS/WNS/Violators into a CSV file. This provides the ability for you to quickly identify which paths are critical.

Any additional XDC file read in after synthesis by the `read_xdc` or source commands is used during the implementation steps only. They are stored in any subsequent design checkpoints, along with the netlist.

### 4. Performs pre-placement logic optimization, in preparation for placement and routing. The objective of optimization is to simplify the logic design before committing to physical resources on the target part. Optimization is followed by timing-driven placement with the Vivado placer.

After each of those steps, the `reportCriticalPaths` command is run to generate a new CSV file. Having multiple CSV files from different stages of the design lets you create a custom timing summary spreadsheet that can help visualizing how timing improves during each implementation step.

Once the placement is done, the script uses the `get_timing_paths` command to examine the SLACK property of the worst timing path in the placed design. While the `report_timing` command returns a detailed text report of the timing path with the worst slack, the `get_timing_paths` command returns the same timing path as a Tcl object with properties that correspond to the main timing characteristics of the path. The SLACK property returns the slack of the specified timing path, or worst path in this case. If the slack is

negative then the script runs physical optimization to resolve the placement timing violations whenever possible.

At the end of Step 4, another checkpoint is saved and the device utilization is reported along with a timing summary of the design. This lets you compare pre-routed and post-routed timing to assess the impact that routing has on the design timing.

5. The Vivado router performs timing-driven routing, and a checkpoint is saved for reference. Now that the in-memory design is routed, additional reports provide critical information regarding power consumption, design rule violations, and final timing. You can output reports to files, for later review, or you can direct the reports to the Vivado IDE for more interactive examination. A Verilog netlist is exported, for use in timing simulation.
6. Writes a bitstream to test and program the design onto the AMD FPGA.

## Compilation with a Project Flow

The following script illustrates a Project flow that synthesizes the design and performs a complete implementation, including bitstream generation. It is based on the CPU example design provided in the Vivado installation tree.

```
#  
# STEP#1: define the output directory area.  
#  
set outputDir ./Tutorial_Created_Data/cpu_project  
file mkdir $outputDir  
create_project project_cpu_project ./  
Tutorial_Created_Data/cpu_project \  
-part xc7k70tfbg676-2 -force  
#  
# STEP#2: setup design sources and constraints  
#  
add_files -fileset sim_1 ./Sources/hdl/cpu_tb.v  
add_files [ glob ./Sources/hdl/bftLib/*.vhdl ]  
add_files ./Sources/hdl/bft.vhdl  
add_files [ glob ./Sources/hdl/*.v ]  
add_files [ glob ./Sources/hdl/mgt/*.v ]  
add_files [ glob ./Sources/hdl/or1200/*.v ]
```

```

    add_files [ glob ./Sources/hdl/usbf/*.v ]
    add_files [ glob ./Sources/hdl/wb_conmax/*.v ]
    add_files -fileset constrs_1 ./Sources/top_full.xdc
    set_property library bftLib [ get_files [ glob ./Sources/hdl/bftLib/*.vhdl ]]

    #
    # Physically import the files under project_cpu.srcts/
    sources_1/imports directory
    import_files -force -norecurse
    #
    # Physically import bft_full.xdc under
    project_cpu.srcts/constrs_1/imports directory
    import_files -fileset constrs_1 -force -norecurse ./Sources/top_full.xdc
    # Update compile order for the fileset 'sources_1'
    set_property top top [current_fileset]
    update_compile_order -fileset sources_1
    update_compile_order -fileset sim_1
    #
    # STEP#3: run synthesis and the default utilization
    report.

    #
    launch_runs synth_1
    wait_on_run synth_1
    #
    # STEP#4: run logic optimization, placement, physical
    logic optimization, route and
        # bitstream generation. Generates design checkpoints,
    utilization and timing
        # reports, plus custom reports.
        set_property STEPS.PHYS_OPT_DESIGN.IS_ENABLED true
[get_runs impl_1]
        set_property STEPS.OPT_DESIGN.TCL.PRE [pwd]/
pre_opt_design.tcl [get_runs impl_1]
        set_property STEPS.OPT_DESIGN.TCL.POST [pwd]/
post_opt_design.tcl [get_runs impl_1]
        set_property STEPS.PLACE_DESIGN.TCL.POST [pwd]/
post_place_design.tcl [get_runs impl_1]
        set_property STEPS.PHYS_OPT_DESIGN.TCL.POST [pwd]/
post_phys_opt_design.tcl [get_runs impl_1]
        set_property STEPS.ROUTE_DESIGN.TCL.POST [pwd]/
post_route_design.tcl [get_runs impl_1]

```

```
launch_runs impl_1 -to_step write_bitstream  
wait_on_run impl_1  
puts "Implementation done!"
```

## Details of the Sample Script

1. The project is created with the `create_project` command. The project directory and the target device are specified. The project directory is automatically created if it does not already exist. In this example, the output directory where the various reports are saved is the same as the project directory.
2. All the files that are used in a project need to be explicitly declared and added to the project. This is done with the `add_files` command. When a file is added to the project, it is added to a specific fileset. A fileset is a container that groups files together for a purpose. In this example script, most of the files are added to the default fileset (`sources_1`). Only the Verilog test bench `cpu_tb.v` is added to the default simulation fileset `sim_1`.  
The files are also copied inside the project directories with the `import_files` command. By doing this, the project points to the local copy of the source files and does not track the original source files anymore.
3. The design is synthesized by launching a synthesis run in the background (`launch_run synth_1`). The Vivado IDE automatically generates all the necessary scripts to run synthesis in a separate Vivado session. Because synthesis runs in a different process, it is necessary to wait for its completion before continuing the current script. This is done by using the `wait_on_run` command.  
Once the synthesis run is completed, the results can be loaded in memory with the `open_run synth_1` command. A checkpoint without constraints is saved in the project directories, where synthesis was run. In this example, it can be found under:

```
./Tutorial_Created_Data/cpu_project/project_cpu.runs/  
synth_1/top.dcp
```

---

 **Note:** The names `synth_1` and `impl_1` are default names for the synthesis and implementation runs. Additional runs can be created with `create_run` command.

4. The implementation is done by using the `launch_run` command. The complete P&R flow from pre-place optimization to writing the bitstream can be performed in a single command. In this example script, the implementation is done up to the bitstream generation (`launch_run impl_1 -to_step write_bitstream`).

The optional step `phys_opt_design` is enabled in the script through the property `STEPS.PHYS_OPT_DESIGN.IS_ENABLED`. Unlike with the Non-Project flow which allows dynamically calling the implementation commands based on conditions defined by the user, the run of a project flow must be configured statically before it is launched. This is why, in this example, the physical logic optimization step is enabled without checking the timing slack value after placement, unlike in the Compilation with a Non-Project flow example.

The various reports are generated before or after each implementation step by using the run Tcl hook properties `STEPS.<STEPNAME>.TCL.PRE` and `STEPS.<STEPNAME>.TCL.POST`. These properties allow the user to specify where a Tcl script is executed in the flow when using the run infrastructure. See [Defining Tcl Hook Scripts](#) for additional information. Because the implementation run is executed in a separate Vivado session, all the Tcl variables and procs need to be initialized in that session to be used by the scripts. This can be done in several ways:

### **Method 1**

Define the Tcl variables and procs in your `Vivado_init.tcl` (see [Initializing Tcl Scripts](#)). This is sticky to all your Vivado projects and sessions.

### **Method 2**

Add a Tcl script which contains the variables and procs to the constraints set used by the run. It is always sourced as part of your constraints when opening the design in memory.

### **Method 3**

Set `STEPS.OPT_DESIGN.TCL.PRE` to a Tcl script which contains the variables and proc. This script is only sourced if the `OPT_DESIGN` step is enabled, which is true by default.

The current example uses the Method 3. The Tcl scripts are associated with the implementation steps as follows:

```
set_property STEPS.OPT_DESIGN.TCL.PRE      [pwd]/
pre_opt_design.tcl      [get_runs impl_1]
set_property STEPS.OPT_DESIGN.TCL.POST     [pwd]/
post_opt_design.tcl     [get_runs impl_1]
set_property STEPS.PLACE_DESIGN.TCL.POST   [pwd]/
post_place_design.tcl   [get_runs impl_1]
set_property STEPS.PHYS_OPT_DESIGN.TCL.POST [pwd]/
post_phys_opt_design.tcl [get_runs impl_1]
set_property STEPS.ROUTE_DESIGN.TCL.POST   [pwd]/
post_route_design.tcl   [get_runs impl_1]
```

The absolute Tcl script path must be specified because the implementation run is executed in a sub-directory of the project tree, which is different from the one where the full compilation Tcl script is executed.

- pre\_opt\_design.tcl

```
#####
# pre_opt_design.tcl #####
set outputDir [file dirname [info script]]/
Tutorial_Created_Data/cpu_project
source [file dirname [info script]]/
reportCriticalPaths.tcl
#
report_timing_summary -file $outputDir/
post_synth_timing_summary.rpt
report_utilization -file $outputDir/post_synth_util.rpt
reportCriticalPaths $outputDir/
post_synth_critpath_report.csv
```

The two first lines correspond to the initialization of the variable and proc used by several scripts later in the implementation run. The next three lines run some utilization and timing reports. It is generally recommended to run timing analysis at the beginning of implementation to validate the timing constraints used during place and route, and ensure there is no large violation. The reportCriticalPaths report provides more information on the worst paths of the design. This Tcl proc is described further in [Defining Tcl Procedures](#).

- post\_opt\_design.tcl

```
#####
# post_opt_design.tcl #####
# Run custom script to report critical timing paths
reportCriticalPaths $outputDir/
post_opt_critpath_report.csv
```

This script does not need to define the outputDir variable and reportCriticalPaths proc because they are already defined in pre\_opt\_design.tcl which is sourced earlier in the run in the same Vivado session.

It is recommended to also run utilization and timing analysis after opt\_design.

- post\_place\_design.tcl

```
#####
# post_place_design.tcl #####
report_clock_utilization -file $outputDir/clock_util.rpt
```

After placement, you can review the utilization of the clock resources and where they are located in the device. It is recommended to run timing analysis to identify large timing violations that cannot be resolved later in the flow.

- `post_phys_opt_design.tcl`

```
##### post_phys_opt_design.tcl #####
report_utilization -file $outputDir/
post_phys_opt_util.rpt
report_timing_summary -file $outputDir/
post_phys_opt_timing_summary.rpt
```

Like after placement, it is important to review the timing report at this point of the flow.

- `post_route_design.tcl`

```
##### post_route_design.tcl #####
report_route_status -file $outputDir/
post_route_status.rpt
report_timing_summary -file $outputDir/
post_route_timing_summary.rpt
report_power -file $outputDir/post_route_power.rpt
report_drc -file $outputDir/post_imp_drc.rpt
write_verilog -force $outputDir/cpu_impl_netlist.v -mode
timesim -sdf_anno true
```

After route, the timing analysis uses actual routed net delays and must be reviewed for timing sign-off. The route status report summarizes the number of unresolved routing issues. If there are any, the DRC report often helps identify what the routing issues are.

---

☞ **Note:** When running an implementation step inside the hook script, you can use the Tcl variable ACTIVE\_STEP to, for instance, make the report file names unique. The variable ACTIVE\_STEP is automatically updated by Vivado when using the run infrastructure. See [Sharing Hook Scripts Between Steps](#) for more information.

---

☞ **Note:** Most of the Tcl reports generated during post-route above are also automatically created by the run infrastructure. Similarly, a design checkpoint is generated after each step of the flow, so there is usually no need to call the `write_checkpoint` command in your

scripts when using a project flow. You can find all the checkpoints and default reports in the implementation run directory:

---

```
./Tutorial_Created_Data/cpu_project/project_cpu.runs/  
impl_1/  
    top_opt.dcp  
    top_placed.dcp  
    top_physopt.dcp  
    top_routed.dcp  
    top_clock_utilization_placed.rpt  
    top_control_sets_placed.rpt  
    top_utilization_placed.rpt  
    top_io_placed.rpt  
    top_drc_routed.rpt  
    top_power_routed.rpt  
    top_route_status.rpt  
    top_timing_summary_routed.rpt
```

After the implementation run is complete, the implemented design can be loaded in memory with the `open_run impl_1` command.

## Loading and Running Tcl Scripts

The Vivado Design Suite offers several different ways to load and run a Tcl script during a design session. You can have script files loaded automatically when the tool is launched, source scripts from the Tcl command line, or add them to the menus in the Vivado IDE.

### Initializing Tcl Scripts

The Vivado Design Suite can automatically load Tcl scripts defined in `Vivado_init.tcl` file. This approach is useful when you have written Tcl procedures that define new commands that you want to make available in all your Vivado sessions.

---

 **Note:** Starting with 2017.1, the startup script for the Vivado Design Suite has been renamed `Vivado_init.tcl`. In the earlier versions it was called `init.tcl`. If `Vivado_init.tcl` does not exist but `init.tcl` is present, the Vivado tools source the `init.tcl` and issue a deprecation message.

---

When you start the Vivado tools, it looks for a Tcl initialization script in several locations with the following precedence:

1. In the software installation: < installdir >/Vivado/<VivadoVersion>/scripts/Vivado\_init.tcl  
Where < installdir > is the installation directory where the Vivado Design Suite is installed.
2. In the local user directory (Vivado tools version dependent):
  - For Windows 7: %APPDATA%/Xilinx/Vivado/<VivadoVersion>/Vivado\_init.tcl  
For example: %APPDATA%/Xilinx/Vivado/2017.1/Vivado\_init.tcl
  - For Linux: \$HOME/.Xilinx/Vivado/<VivadoVersion>/Vivado\_init.tcl  
For example: \$HOME/.Xilinx/Vivado/2017.1/Vivado\_init.tcl
3. In the local user directory (Vivado tools version independent):
  - For Windows 7: %APPDATA%/Xilinx/Vivado/Vivado\_init.tcl
  - For Linux: \$HOME/.Xilinx/Vivado/Vivado\_init.tcl
4. In the local run directory where the Vivado tools is started with the command line option -init. With this command line argument, Vivado can load a fourth initialization file with the expected file name vivado.tcl instead of Vivado\_init.tcl.  
For example: <WORKING\_DIRECTORY>/vivado.tcl

If Vivado\_init.tcl exists in several locations, the Vivado tool sources the file following the precedence explained above.

The Vivado\_init.tcl file in the installation directory allows a company or design group to support a common initialization script for all users.

Anyone starting the Vivado tools from that software installation sources the enterprise Vivado\_init.tcl script.

The Vivado\_init.tcl file in the home directory allows each user to specify additional commands, or to override commands from the software installation to meet their specific design requirements.

The Vivado\_init.tcl file is a standard Tcl script file that can contain any valid Tcl command supported by the Vivado tools. You can even source another Tcl script file from within Vivado\_init.tcl by adding the source command.

---

 **Note:** Vivado\_init.tcl follows the naming convention < program >\_init.tcl. Other supported program names are xsim and vivado\_lab. For instance, Vivado simulator looks for xsim\_init.tcl at startup.

---

## Sourcing Tcl Scripts

The source command lets you manually load Tcl script files into the

Vivado tools:

```
source <filename>
```

Where < filename > specifies both the name of the file, as well as the relative or absolute path to the file. If no path is specified as part of the file name, then the Vivado tools look for the file in the working directory, or the directory from which the Vivado Design Suite was launched.

Within the Vivado IDE you can also source a Tcl script from the Tools > Run Tcl Script menu command.

By default, the source command echoes each line of the file to the Tcl Console. This can be prevented by using the -notrace option, which is specific to the Vivado Tcl interpreter:

```
source <filename> -notrace
```

## Executing a Tcl Script at Startup

To specify a script to be executed at startup on the Vivado tools command line, use the -source option:

```
vivado -source myscript.tcl
```

The following is equivalent to manually sourcing the script after first starting Vivado tools:

```
source myscript.tcl
```

A checkpoint can also be specified on the command line along with a Tcl script:

```
vivado design.dcp -source myscript.tcl
```

The above command line is equivalent to manually opening the checkpoint and then sourcing the script:

```
open_checkpoint design.dcp  
source myscript.tcl
```

The combination of a checkpoint and script provides the flexibility to

write a Tcl script independent of any design and then easily associate a checkpoint with the script:

```
vivado design1.dcp -source myscript.tcl  
vivado design2.dcp -source myscript.tcl
```

## Using Tcl Scripts in a Constraints Set

Tcl scripts can be added to project constraint sets like any regular XDC file, except that the XDC files are managed by the tool, and not Tcl scripts. Any constraint defined by a Tcl script and edited by the tool cannot be saved back to the Tcl script automatically. If you need to save your edits, you must export all the constraints in memory to a file and use this file to update your script manually. When opening a design in memory (`open_run`), the Tcl scripts are sourced after the XDC files. In a Non-Project flow, this is equivalent to explicitly sourcing the Tcl scripts after loading the XDC files with `read_xdc`. For more information on using XDC files and Tcl scripts in a constraints set, see the *Vivado Design Suite User Guide: Using Constraints* ([UG903](#)).

## xdc Constraints: `read_xdc` versus `source`

When applying constraints to the design, the commands `read_xdc` and `source` differ in behavior. The constraints applied through the command `source` are always saved inside the checkpoint after the constraints applied through the command `read_xdc`. To preserve the XDC constraints inside the checkpoint in the same order that they are applied to the design, use `read_xdc -unmanaged` instead of `source`.

For more information, see the *Vivado Design Suite User Guide: Using Constraints* ([UG903](#)).

## Defining Tcl Hook Scripts

In a Non-Project flow you have the ability to source a Tcl script at any point in the flow, such as before or after running the `synth_design` command. You can also do this in a project-based flow, using the Vivado IDE, or by using the `set_property` command to set a property on either a synthesis or implementation run. Tcl hook scripts allow you to run custom Tcl scripts prior to (`tcl.pre`) and after (`tcl.post`) synthesis and implementation design runs, or any of the implementation steps.


Whenever you launch a synthesis or implementation run, the Vivado tools use a predefined Tcl script to process a standard design flow based on the selected strategy. Tcl hook scripts let you customize the standard flow, with pre-processors or post-processors. Being able to add Tcl script processing anywhere in a run can be useful. Every step in the design flow has a pre-hook and post-hook capability. Common uses are:

- Custom reports: timing, power, utilization, or any user-defined Tcl report.
- Modifying the timing constraints for portions of the flow only.
- Modifications to netlist, constraint, or device programming.

In the GUI you can specify the Tcl hook scripts to be sourced by using the Change Run Settings command for the design run. Right-click a run in the Design Runs window and select the Change Run Settings from the pop-up menu to open the Design Run Settings dialog box. The `tcl.pre` and `tcl.post` options can be used to specify a Tcl hook script.

The Vivado IDE sets a property on the synthesis or implementation run to specify the `tcl.pre` or `tcl.post` script to apply before or after the run, as shown in [Defining Tcl Hook Scripts](#). You can also set this property directly on a synthesis or implementation run, either in the Tcl Console or as part of a Tcl script.

### **Figure: Defining Pre and Post Run Tcl Scripts**

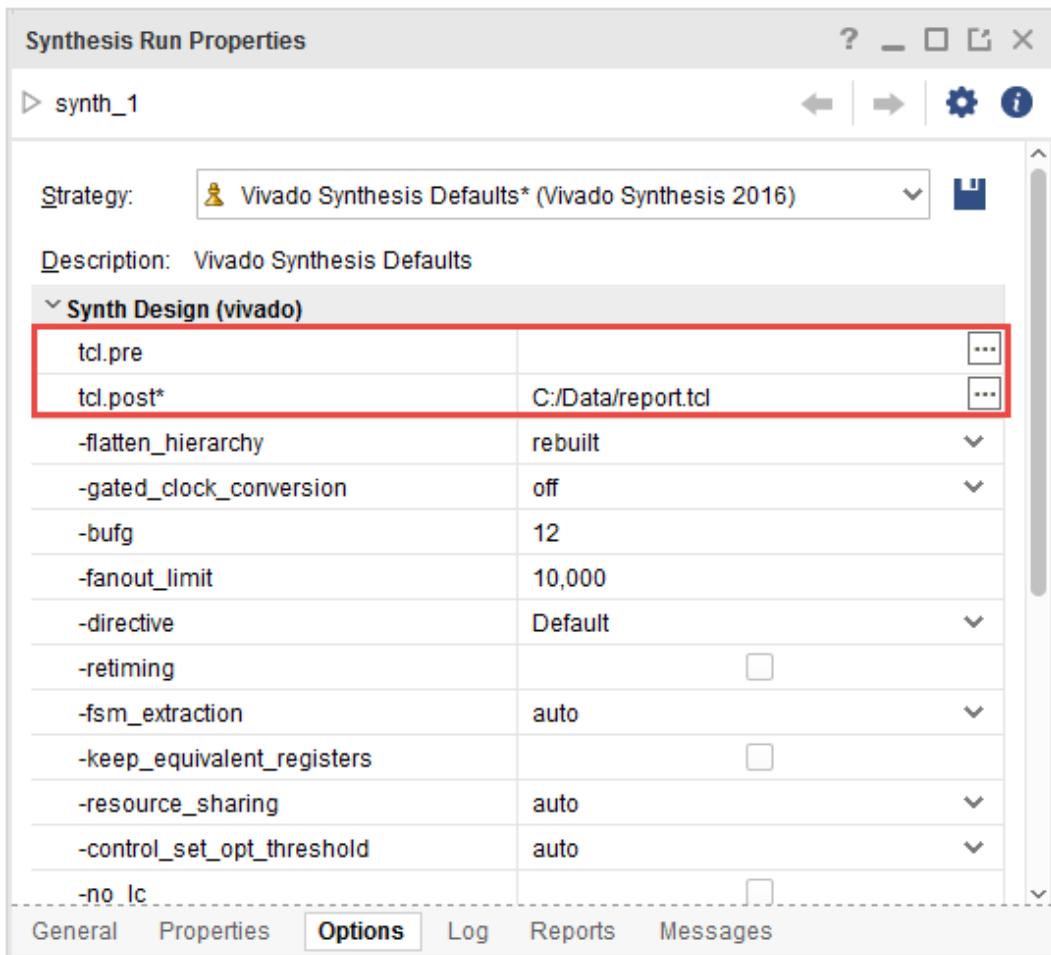

The properties to set on a synthesis run are:

STEPS.SYNTH\_DESIGN.TCL.PRE  
 STEPS.SYNTH\_DESIGN.TCL.POST

For instance, set the following property to have the `report.tcl` script launched before synthesis is complete:

```
set_property STEPS.SYNTH_DESIGN.TCL.PRE {C:/Data/report.tcl}
[get_runs synth_1]
```

For an implementation run you can define Tcl scripts before and after each step of the implementation process: Opt Design, Power Opt Design, Place Design, Post-Place Power Opt Design, Phys Opt Design, Route Design and Bitstream generation. The properties for each of these are:

STEPS.OPT\_DESIGN.TCL.PRE  
 STEPS.OPT\_DESIGN.TCL.POST  
 STEPS.POWER\_OPT\_DESIGN.TCL.PRE  
 STEPS.POWER\_OPT\_DESIGN.TCL.POST  
 STEPS.PLACE\_DESIGN.TCL.PRE

```
STEPS.PLACE_DESIGN.TCL.POST  
STEPS.POST_PLACE_POWER_OPT_DESIGN.TCL.PRE  
STEPS.POST_PLACE_POWER_OPT_DESIGN.TCL.POST  
STEPS.PHYS_OPT_DESIGN.TCL.PRE  
STEPS.PHYS_OPT_DESIGN.TCL.POST  
STEPS.ROUTE_DESIGN.TCL.PRE  
STEPS.ROUTE_DESIGN.TCL.POST  
STEPS.WRITE_BITSTREAM.TCL.PRE  
STEPS.WRITE_BITSTREAM.TCL.POST
```

---

**!! Important:** Relative paths within the tcl.pre and tcl.post scripts are relative to the appropriate run directory of the project they are applied to: <project>/<project.runs>/<run\_name>. You can use the DIRECTORY property of the current project or current run to define the relative paths in your Tcl hook scripts:

```
get_property DIRECTORY [current_project]  
get_property DIRECTORY [current_run]
```

---

## Sharing Hook Scripts Between Steps

When the hook script is step agnostic and only generates a set of reports for an implementation step, it is not efficient to duplicate the script content for each step and just change, for instance, the report file name to match the implementation step. A better way to proceed is to share the same hook script for all the implementation steps and use the Tcl variable ACTIVE\_STEP to build the report filename. This ensures a different file name for each step.

In Project mode, the Vivado IDE automatically updates the Tcl variable ACTIVE\_STEP when submitting a run through the run infrastructure to match the implementation step being run.

---

 **Note:** The Tcl variable ACTIVE\_STEP is only available in Project mode while using the run infrastructure.

---

The following is an example of a hook script using the ACTIVE\_STEP variable:

```
set step $ACTIVE_STEP  
report_timing_summary -file tim_summary_${step}.rpt  
if {$step == {route_design}} {
```

```
    report_route_status -file route_status.rpt
}
```

## Customizing the GUI

You can use the Tools > Custom Commands > Customize Commands menu item to add system or user-defined Tcl commands to the Vivado IDE main menu and toolbar menu. For more information on adding custom commands to the menu, refer *Vivado Design Suite User Guide: Using the Vivado IDE* ([UG893](#)).

# Writing a Tcl Script

When writing a Tcl script, the emphasis should be, whenever possible, on providing code that can enhance the user experience. This means writing scripts that provide the same type of user experience as the embedded Vivado commands such as providing embedded Help and interactive command line argument. It is also critical to consider all the corner cases that could happen, whether Vivado objects are empty or not after using the `get_*` commands and so forth. It is also common when writing Tcl code, to create some lower-level procedures that are used in the code. To avoid name collision of procedures and global variables, it is recommended that you develop the code within its own namespace so that name collisions are minimized.

## Defining Tcl Procedures

Because the Vivado Design Suite provides a full Tcl interpreter built into the tool, creating new custom commands and procedures is a simple task. You can write Tcl scripts that can be loaded and run from the Vivado IDE, or you can write procedures, to act like new Tcl commands, taking arguments, checking for errors, and returning results.

A Tcl procedure is defined with the `proc` command which takes three arguments: the procedure name, the list of arguments, and the body of code to be executed. The following code provides a simple example of a procedure definition:

```
proc helloProc { arg1 } {
    # This is a comment inside the body of the procedure
    puts "Hello World! Arg1 is $arg1"
```

```
}
```

---

★ **Tip:** Although the curly brackets are optional for the argument definition of this procedure, because helloProc has only one argument, it makes the procedure definition easier to read by enclosing the arguments in braces. The braces are required when the procedure accepts multiple arguments.

A procedure usually has predefined arguments. Each of them can optionally have a default value. When an argument has a default value, it does not need to be specified when calling the procedure if all the mandatory preceding arguments are specified. A procedure returns an empty string unless the return command is used to return a different value.

The following example defines a procedure, reportWorstViolations, with three arguments:

```
proc reportWorstViolations { nbrPaths corner delayType } {  
    report_timing -max_paths $nbrPaths -corner $corner -  
    delay_type $delayType -nworst 1  
}
```

When running the procedure, all the arguments must be specified as shown:

```
%> reportWorstViolations 2 Slow max  
%> reportWorstViolations 10 Fast min
```

The next example is a different form of the same procedure, where the last two of the three arguments have a default value. The default value for corner is Slow, and the default value for delayType is Max. With default values specified in the definition of the procedure, the corner and delayType arguments are optional when calling the procedure.

```
proc reportWorstViolations { nbrPaths { corner Slow } {  
    delayType Max } } {  
    report_timing -max_paths $nbrPaths -corner $corner -  
    delay_type $delayType -nworst 1  
}
```

When running this procedure, all of the following calls of the command

are valid:

```
%> reportWorstViolations 2  
%> reportWorstViolations 10 Fast  
%> reportWorstViolations 10 Slow Min
```

The following example is an illustration of a procedure that has one mandatory argument, nbrPath, but that can also accept any number of additional arguments. This uses the Tcl keyword args in the list of arguments when defining the procedure. The args keyword is a Tcl list that can have any number of elements, including none.

```
proc reportWorstViolations { nbrPaths args } {  
    eval report_timing -max_paths $nbrPaths $args  
}
```

When executing a Tcl command, you can use variable substitution to replace some of the command line arguments accepted or required by the Tcl command. In this case, you must use the Tcl eval command to evaluate the command line with the Tcl variable as part of the command. In the preceding example, the variable list of arguments (\$args) is passed to the encapsulated report\_timing command as a variable, and so requires the use of the eval command.

When running this procedure, any of the following forms of the command works:

```
%> reportWorstViolations 2  
%> reportWorstViolations 1 -to [get_ports]  
%> reportWorstViolations 10 -delay_type min_max -nworst 2
```

In the first example, the number 2 is passed to the \$nbrPaths argument, and applied to -max\_paths. In the second and third examples, the numbers 1 and 10 respectively are applied to -max\_paths, and all the subsequent characters are assigned to \$args.

The following example provides the procedure definition for the reportCriticalPaths command that was previously used in the Non-Project mode example script. The procedure takes a single argument, \$filename, and has been commented to explain each section:

```
#-----
```

```

-----
# reportCriticalPaths
#-----

-----
# This function generates a CSV file that provides a summary
of the first
# 50 violations for both Setup and Hold analysis. So a
maximum number of
# 100 paths are reported.
#-----

-----
proc reportCriticalPaths { fileName } {
    # Open the specified output file in write mode
    set FH [open $fileName w]
    # Write the current date and CSV format to a file header
    puts $FH "#\n# File created on [clock format [clock
seconds]]\n#\n"
    puts $FH
"Startpoint,Endpoint,DelayType,Slack,#Levels,#LUTs"
    # Iterate through both Min and Max delay types
    foreach delayType {max min} {
        # Collect details from the 50 worst timing paths for the
        current analysis
        # (max = setup/recovery, min = hold/removal)
        # The $path variable contains a Timing Path object.
        foreach path [get_timing_paths -delay_type $delayType -
max_paths 50 -nworst 1] {
            # Get the LUT cells of the timing paths
            set luts [get_cells -filter {REF_NAME =~ LUT*} -
of_object $path]
            # Get the startpoint of the Timing Path object
            set startpoint [get_property STARTPOINT_PIN $path]
            # Get the endpoint of the Timing Path object
            set endpoint [get_property ENDPOINT_PIN $path]
            # Get the slack on the Timing Path object
            set slack [get_property SLACK $path]
            # Get the number of logic levels between startpoint and
            endpoint
            set levels [get_property LOGIC_LEVELS $path]
            # Save the collected path details to the CSV file
            puts $FH "$startpoint,$endpoint,$delayType,$slack,
$levels,[llength $luts]"
        }
    }
}

```

```

    }
}

# Close the output file
close $FH
puts "CSV file $fileName has been created.\n"
return 0
}; # End PROC

```

## Parsing Command Line Arguments

It can be useful and sometimes necessary to write procedures that use external parameters or arguments as they can broaden the spectrum of usage of the procedure without having to write too much redundant code. A single procedure that can handle multiple contexts is easier to use and maintain than multiple procedures that cover the same range of contexts with duplicated code.

This is especially useful when the procedure is being used interactively. It is a lot friendlier for the user to be able to specify some command line options like with any Vivado commands.

Tcl provides an easy way to do this through the args variable. The keyword args used inside the list of arguments of a procedure can match any number of elements, including none. The args variable is a regular Tcl list that can be processed and analyzed like any Tcl list.

There are multiple techniques to parse the command line arguments, and the example code below shows one of them:

```

01 proc lshift listVar {
02     upvar 1 $listVar L
03     set r [lindex $L 0]
04     set L [lreplace $L [set L 0] 0]
05     return $r
06 }
07
08
09 proc myproc { args } {
10
11 #-----
12 # Process command line arguments
13 #-----
14 set error 0

```

```
15 set help 0
16 set verbose 0
17 set ports {}
18 # if {[llength $args] == 0} { incr help }; # Uncomment if
necessary
19 while {[llength $args]} {
20     set flag [lshift args]
21     switch -exact -- $flag {
22         -p -
23         -ports {
24             set ports [lshift args]
25         }
26         -v -
27         -verbose {
28             set verbose 1
29         }
30         -h -
31         -help {
32             incr help
33         }
34         default {
35             if {[string match "-*" $flag]} {
36                 puts "ERROR - option '$flag' is not a valid
option."
37                 incr error
38             } else {
39                 puts "ERROR - option '$flag' is not a valid
option."
40                 incr error
41             }
42         }
43     }
44 }
45
46 if {$help} {
47     set callerflag [lindex [info level [expr [info level]
-1]] 0]
48     # <-- HELP
49     puts [format {
50 Usage: %s
51         [-ports|-p <listOfPorts>]
52         [-verbose|-v]
```

```

53      [-help|-h]
54
55  Description: xxxxxxxxxxxxxxxxxxxx.
56          xxxxxxxxxxxxxxxxxxxx.
57
58  Example:
59      %s -port xxxxxxxxxxxxxxxxx
60
61 } $callerflag $callerflag ]
62 # HELP -->
63 return -code ok {}
64 }
65
66 # Check validity of arguments. Increment $error to
generate an error
67
68 if {$error} {
69     return -code error {Oops, something is not correct}
70 }
71
72 # Do something
73
74 return -code ok {}
75 }
```

### Explanations:

1. Lines 1-6: Definition for the `lshift` procedure that removes the first element of a list.
2. Line 9: `myproc` is defined with a single argument, `args`, that can take any number of elements. In this example code, `myproc` supports three command line options: `-ports < string >`, `-verbose`, and `-help`.
3. Lines 19-44: Loop through all the command line arguments. When all the arguments are processed, the `args` variable is empty.
4. Line 20: The command line argument that needs to be processed is saved inside the `flag` variable. Use the `lshift` proc to get the argument and remove it from the `args` variable.
5. Lines 21-43: Check the content of the `flag` variable against all the valid arguments. The `switch` statement uses the `-exact` option so that the full option name is checked against the content of `flag`. For

example, to define the ports, the user needs to specify -p or -ports. The -p/-ports option takes a command line argument that is being read and removed from the list args with lshift args (line 24). The -v/-verbose option is a boolean and therefore does not need any additional argument from args (line 28).

Lines 31-33: Check for the -h/-help options.

Lines 36-38: Check for any command line argument starting with "-" (without quotes). In this sample proc, they are not supported.

Lines 39-40: Check for a command line argument that does not start with "-" (without quotes). In this example proc, they are not supported.

6. Lines 46-64: Display the embedded Help if -h/-help has been specified. Those lines and lines 30-33 can be removed if the proc does not need to provide any embedded Help.
7. Lines 68-70: Check if any error has occurred. Typically, some additional code to check the validity of the arguments should happen before line 68. If there would be any error or, for example, incompatibility between the command line options provided by the user, then the error variable could be incremented which would then trigger line 69.
8. Line 73 and beyond: Add your code here.

The above code parses the command line arguments and searches for an exact match with the supported options (line 21). However, there are some cases when it might be better to match the command line arguments against some expressions instead of searching for an exact match. This is done by using the -glob switch instead of the -exact switch on line 21. See the following example.

```
21 switch -glob -- $flag {  
22     -p* -  
23     -ports {  
24         set ports [lshift args]  
25     }  
26     -v* -  
27     -verbose {  
28         set verbose 1  
29     }  
30     -h* -  
31     -help {
```

```

32     incr help
33 }
34 default {
35     if {[string match "-*" $flag]} {
36         puts " ERROR - option '$flag' is not a valid
option."
37         incr error
38     } else {
39         puts "ERROR - option '$flag' is not a valid
option."
40         incr error
41     }
42 }
43 }

```

Lines 22, 26, and 30 illustrate some expressions using the "\*" as a wildcard. The above code matches any string starting with -p as a valid command line option to define the ports, for example -pfoo.

## Example

Although the example procedure, myproc, is acceptable for an interactive command, it has some runtime overhead due to the parsing of the arguments. The runtime overhead might not be acceptable for a low-level procedure that is called many times. A different technique can be used to add some command line arguments to a procedure that needs very little runtime overhead. This is done by assigning the list of command line arguments to a Tcl array. However, this implies that each command line option has one and only one argument. See the following example.

```

01 proc myproc2 { args } {
02 # Default values
03 set defaults [list -p 123 -v 0]
04 # First, assign default values
05 array set options $defaults
06 # Then, override with user choice
07 array set options $args
08
09 set ports $options(-p)

```

```

10 set verbose $options(-v)
11 set error 0
12
13 # Check validity of arguments. Increment $error to
generate an error
14
15 if {$error} {
16   return -code error {Oops, something is not correct}
17 }
18
19 # Do something
20
21 return -code ok {}
22 }
```

Explanations:

1. Line 1: myproc2 is defined with a single argument, args, that can take any number of elements. However, because args is used later to set a Tcl array, it must have an even number of arguments.
2. Line 3: Default values for the various options. Each option has one and only one value.
3. The format of the list is:

```

expanses="page"> <option1> <valueForOption1> <option2>
<valueForOption2> ... <optionN> <valueForOptionN>
```

4. Line 5: The Tcl array options is initialized with the default values.
5. Line 7: The args variable overrides the default values
6. Line 9-10: The value of each option is being read with \$options(<option>). It is also possible to check that an option exist with the following.

```
if [info exists options(<option>)] { ... }
```

 **Note:** The command line options that are working as a flag and have no intrinsic value are easily implemented by passing, for example, a value of 0 or 1 with the option. In the previous example procedure, the flag -v is turned on with: myproc2 -v 1.

## Local and Global Variables

A local variable is a variable created inside a procedure. It is created at runtime inside the stack of the function. The variable is only accessible within the procedure and the variable name is not subject to name collision with variable names outside of the procedure. This means that, for example, a local variable `foo` created inside a procedure is different from a variable `foo` created outside of the procedure and both variables have independent content. A local variable is created with the set `Tcl` keyword like any other variable.

The parameters defined as the arguments of a procedure are, by default, local variables. Whenever a procedure is called (for example `reportCriticalPaths $myfilename`), the content of the calling variables (for example `$myfilename`) are copied inside the stack of the procedure. If the calling variables are `Tcl` lists with a large number of elements, this mechanism has a runtime and memory penalty. There are also some scenarios when it is necessary to modify the content of the caller variables. `Tcl` provides a way to do that by passing a variable name as a reference instead of passing the content of the variable. Once a variable is passed as a reference, any modification of the variable inside the procedure directly modifies the caller's variable inside the caller's space. The keyword `upvar` is used inside the body of the procedure to define a parameter that is passed as reference. The procedure `lshift` that has been introduced earlier uses this technique:

```
proc lshift {listVar} {
    upvar 1 $listVar L
    set r [lindex $L 0]
    set L [lreplace $L [set L 0] 0]
    return $r
}
```

In the example proc `myproc`, `lshift` is called by passing the variable name `args` instead of the content `$args`.

A global variable is a variable created outside of a procedure and that belongs to the global namespace. To refer to a global variable inside a procedure, the keyword `global` is used followed by the variable name:

```
proc printEnv {} {
    global env
    foreach var [lsort [array names env]] { puts " $var =
```

```
$env($var)" }  
}
```

The above example defines a procedure `printEnv` that prints the system environment variables. The Tcl array, `env` is a global variable initialized when the Vivado tools start. The `printEnv` procedure refers to the global `env` variable through the `global env` command. After the global variable is declared, it is accessed like any local variable. The global variable can be read and modified.

Another way to access a global variable is to specify the namespace qualifier with it. The namespace qualifier for the global namespace is `:::` (without any quotes) and therefore a procedure can refer to the global variable `env` with `::env`. The syntax is the same for any global variable. For example:

```
proc printEnv {} {  
    foreach var [lsort [array names ::env]] { puts " $var =  
$::env($var)" }  
}
```

Since `printEnv` specifies the full path to the `env` variable, the procedure does not need to declare `global env`.

---

 **Note:** AMD does not recommend that you use global variables as they rely on variable names created outside the scope of the procedure. Global variables are sometimes used to avoid having to pass large Tcl lists to a procedure. The `upvar` technique should always be considered before using a global variable.

---

 **Note:** When using the run infrastructure in Project mode, it is not possible to share global variables defined inside the Vivado environment with the hook scripts. Refer to [Getting User Input](#)for recommended methods to share information between scripts.

---

 **Note:** The `close_project` and `close_design` commands do not change the state of the Tcl interpreter. All the global variables and user created namespaces are persistent after running those commands.

---

## Namespaces for Procedures

By default, every procedure created inside the Tcl interpreter is created inside the global namespace. A disadvantage of this is potential conflicts

with the procedure or variable names when multiple Tcl scripts from different sources are being used. In addition, the global namespace is also being polluted by procedure names that might be only be used by some other procedures and that are not meant to be directly accessed by the user.

Instead of defining all the variables and procedures in the global namespace, Tcl supports the concept of namespace that encompasses variables and procedures inside a more private scope. Namespaces can also be nested, so a namespace can be defined inside another namespace without restriction on the number of levels of scoping.

Namespaces add a new syntax to procedure and variable names. A double-colon, ::, separates the namespace name from the variable or procedure name.

Below is an example that illustrates how a namespace is created and how procedures and variables are assigned to the namespace. This example creates a namespace, foo that reproduces the functionality of a small stack with two public procedures (push and pop):

```
01 namespace eval foo {  
02     variable stack [list]  
03     variable count 0  
04     variable params  
05     array set params [list var1 value1 var2 value2 var3  
value3]  
06  
07     namespace export push pop  
08  
09     proc push { args } {  
10         variable stack  
11         variable count  
12         lappend stack $args  
13         incr count  
14     }  
15  
16     proc pop {} {  
17         variable stack  
18         variable count  
19         if {[llength $stack] > 0} {  
20             set value [lindex $stack end]  
21             set stack [lrange $stack 0 end-1]
```

```

22     incr count -1
23     return $value
24 } else {
25     error " no more element in the stack"
26 }
27 }
28
29 }
30
31 proc foo::dump {} {
32     variable stack
33     variable count
34     if {[llength $stack] > 0} {
35         puts " There are $count element(s) in the stack:"
36         foreach element $stack {
37             puts " $element"
38         }
39         return 0
40     } else {
41         error " no element in the stack"
42     }
43 }
44
45 namespace import foo::*

```

Explanations:

1. The namespace is defined with the command:

```
namespace eval <name> { ... }
```

2. Line 1 declares the namespace, foo and line 29 is the closing curly bracket of the namespace definition.
3. Variables inside the namespace are created with the command variable (lines 2-4):

```
variable <varname> ?<varvalue>?
```

A Tcl array cannot be initialized with the variable command. It needs to be created first (line 4) and initialized afterward (line 5).

---

 **Note:** Do not use the set command to declare variables inside a

namespace as it confuses the Tcl interpreter in the case the same variable name exists in the global namespace.

---

4. Procedures can be created directly inside the namespace definition or outside. When a procedure is created within the command, `namespace eval ... { ... }`, it does not need to have the namespace qualifier in the name (in this example `foo::`).  
Lines 9 and 16: `push` and `pop` are created inside the namespace definition
5. Procedures can also be created outside of the namespace definition and added to the namespace by using the full namespace qualifier prepended to the procedure name. In the above example, the procedure `dump` (line 31) is created output of the namespace definition but added to the namespace `foo`.
6. Lines 10-11, 17-18, 32-33: Procedures refer to variables created inside the namespace using the keyword `variable`.
7. A procedure created inside a namespace can be accessed with the full namespace qualifier, for example `foo::push`, `foo::pop` and `foo::dump`. From within the namespace itself, the namespace qualifier is not needed when referring to procedures from the same namespace. For instance, if the procedure `dump` needs to call `push`, it does not need to specify `foo::push`, but just `push`.
8. Line 7: The namespace supports the concept of public and private procedures. Although all the procedures within a namespace can be accessed with the full namespace qualifier, a namespace can specify which of the procedures can be exported outside of the namespace with the command, `namespace export...`. Once a procedure name is exported, it can be imported into the global namespace with the command, `namespace import...` (line 45). Doing that enables the procedure to be directly called without having to specify the full namespace qualifier.

Here is an example usage of the namespace `foo`:

```
vivado% foo::push This is a test
1
vivado% foo::push {This is another line}
2
vivado% push This is the third line
3
vivado% foo::dump
```

```

There are 3 element(s) in the stack:
    This is a test
    {This is another line}
    This is the third line
0
vivado% puts "The last element stacked is: [foo::pop]"
The last element stacked is: This is the third line
vivado% puts "The previous element stacked is: [pop]"
The previous element stacked is: {This is another line}
vivado% foo::dump
There are 1 element(s) in the stack:
    This is a test
0
vivado% dump
invalid command name "dump"

```

## Template Script

Below is a template script based on the notions that been introduced earlier. It illustrates:

1. Usage of a private namespace to avoid polluting the global namespace (`lshift` is only available inside the namespace `foo`).
2. Handling of command line arguments (including `-help` and `-version` to provide a version of the script).
3. Usage of `return -error` (or `error`) command to generate Tcl errors when it is needed.

```

namespace eval foo {
    namespace export myproc
    variable version 1.0
}
proc foo::lshift listVar {
    upvar 1 $listVar L
    set r [lindex $L 0]
    set L [lreplace $L [set L 0] 0]
    return $r
}
proc foo::myproc { args } {
    #-----
    -

```

```

# Process command line arguments
#-----
-
set error 0
set help 0
set verbose 0
set ports {}
# if {[llength $args] == 0} { incr help }; # Uncomment
if necessary
while {[llength $args]} {
    set flag [lshift args]
    switch -exact -- $flag {
        -p -
        -ports {
            set ports [lshift args]
        }
        -v -
        -verbose {
            set verbose 1
        }
        -h -
        -help {
            incr help
        }
        -version {
            variable version
            return $version
        }
        default {
            if {[string match "-*" $flag]} {
                puts "ERROR - option '$flag' is not a valid
option."
                incr error
            } else {
                puts "ERROR - option '$flag' is not a valid
option."
                incr error
            }
        }
    }
}
if {$help} {

```

```

set callerflag [lindex [info level [expr [info level]
-1]] 0]
# <-- HELP
puts [format {
Usage: %s
        [-ports|-p <listOfPorts>]
        [-verbose|-v]
        [-version]
        [-help|-h]
Description: xxxxxxxxxxxxxxxxxxxx.
              xxxxxxxxxxxxxxxxxxxx.

Example:
%s -port xxxxxxxxxxxxxxxx
} $callerflag $callerflag ]
# HELP -->
return -code ok {}
}
# Check validity of arguments. Increment $error to
generate an error
if {$error} {
    return -code error {Oops, something is not correct}
}
# Do something
return -code ok {}
}

```

## Accessing Design Objects

The Vivado Design Suite loads the project, design, and device information into an in-memory database, which is used by synthesis, implementation, timing analysis, and to generate a bitstream. The database is the same for project and Non-Project flows. The database is updated as you step through the FPGA design flow. You can write the database contents out to disk as a checkpoint file (.dcp) at any point of the design flow. Using Tcl commands in the Vivado tools lets you interact with the design database, query Tcl objects, read, or set their properties, and use them in Tcl scripts for various purposes. It is very helpful to understand the content of the database, to understand how efficient scripts can be written around it.

The Vivado Design Suite Tcl interpreter provides access to many first

class objects such as project, device, nets, cells, and pins. The Vivado Design Suite updates these design objects dynamically, as the design progresses, and loads them into the in-memory database in both Project and Non-Project modes.

You can interactively query design objects, analyze the state of your project, write a script to access the in-memory design, and run custom reports or execute optional design flow steps. Each object comes with a number of properties that can always be read and sometimes written. Most design objects are related to other design objects, allowing you to traverse the design to find related objects or information.

You can query design objects using the `get_*` Tcl commands which return list of design objects, that can be directly manipulated, or assigned to a Tcl variable. The complete list of `get_*` commands can be returned with `help get_*`. Caching objects in variables can save runtime by reducing the number of queries to the design database. Querying the list of nets or pins can be a time consuming process, so saving the results can speed the design flow when accessing the information repeatedly. See [Caching Objects](#) for more on this topic.

Each class of design object (net, pin, port, ...) has a unique set of standard properties that can be read and sometimes written to modify their value in the database. In addition, the design attributes specified in the RTL source files, the Verilog parameters and VHDL generics are stored with the associated netlist object as properties. For example, a port object has a property that indicates its direction, while a net object has a property that defines its fanout. The Vivado tools provides a number of commands for adding, changing, and reporting these properties. Using the `get_* -filter` option lets you get a list of design objects that is filtered, or reduced, to match specific property values, as described in [Filtering Results](#). You can get the list of properties on an object by using the `list_property` command. When a property type is enum, it is possible to get the list of all the valid values by using the `list_property_value` command.

There are two properties that are common to all objects: NAME and CLASS. When an object is assigned to a Tcl variable, a pointer to the object is stored in the variable. Objects can be passed by variable to Tcl commands or Tcl procs. When an object is passed as an argument to a Tcl proc or command which expects a string, the object's NAME property value is passed instead of the object itself. The example below shows a

cell object assigned to the variable, \$inst, and the results of the puts command and the report\_property command on the \$inst variable. The puts command just prints the object NAME because it only works with strings, while the report\_property command returns all of the object properties and their values:

```
set inst [get_cells cpuEngine]
cpuEngine
puts $inst
cpuEngine
report_property $inst
Property      Type  Read-only Value
CLASS          string true   cell
FILE_NAME      string true
C:/2014.1/cpu/project_1.srcs/sources_1/imports/netlist/
top.edf
IS_BLACKBOX    bool  true    0
IS_PRIMITIVE   bool  true    0
IS_SEQUENTIAL  bool  true    0
LINE_NUMBER    int   true    812044
NAME           string true   cpuEngine
PRIMITIVE_COUNT int   true    11720
REF_NAME       string true   or1200_top
```

You can also create custom properties for any class of design objects in the Vivado Design Suite. This can be useful when you want to annotate some information from a script onto the in-memory design objects. The following example creates a property, SELECTED, for a cell object. The value of the property is defined as an integer.

```
create_property SELECTED cell -type int
```


Once a property has been created on a class of objects, it can be managed on a specific object with set\_property and get\_property commands, and reported with list\_property and report\_property commands. The following example sets the SELECTED property to a value of 1 on all the cells that match the specified name pattern, \*aurora\_64b66b\*:

```
set_property SELECTED 1 [get_cells -hier *aurora_64b66b*]
```

## Getting Objects By Name

Most designs are made up of a series of blocks or modules connected in some hierarchical fashion. Whether the design is crafted from the bottom-up, or the top-down, or from the middle out, searching the design hierarchy to locate a specific object is a common task.

**Figure: Searching the Design Hierarchy**

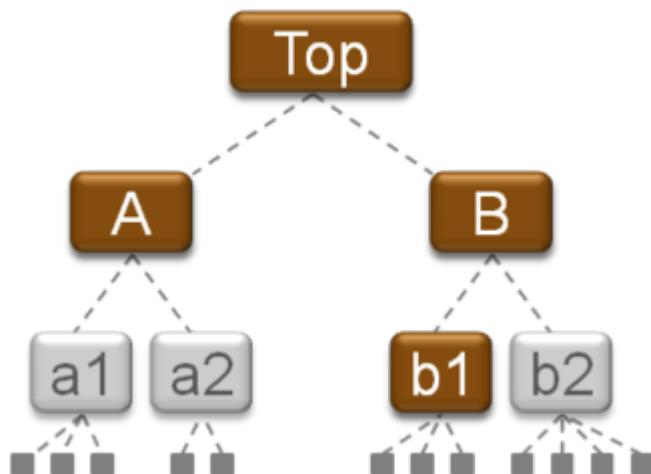

By default, the `get_*` commands only return objects from the top-level of the design. You can use the `current_instance` command before using the `get_*` commands to scope the design object queries to a specific hierarchical instance of the design. To move the scope back to the top-level of the design, you simply have to use the `current_instance` command with no argument.

As an example, [Getting Objects By Name](#) shows a hierarchical design where the modules A and B are instantiated at the top-level. Module A includes the a1 and a2 hierarchical instances, and module B includes the b1 and b2 hierarchical instances. Each of a1, a2, b1, and b2 has leaf cells (unisim instances) inside, as indicated in the figure.

```
# Set the current instance of the design to module B.  
current_instance B  
get_cells * ; # Returns b1 and b2, cells found in the level  
of the current instance.  
get_nets * ; # Returns nets from module B, the current  
instance.  
# Reset the current instance to the top-level of the design.  
current_instance
```

```
get_cells * ; # Returns A and B, located at the top-level of  
the design.
```

Although the `get_*` commands only search the top level, or the level of the current instance, you can specify a search pattern that includes a hierarchical instance name relative to the current instance. By default, the current instance is set to the top-level of the design. To query the instance `b1` from the top level, you can specify the following name pattern:

```
get_cells B/b1 ; # Search the top-level for an instance with  
a hierarchical name.
```

## Using the `-hierarchical` Option

While the default behavior is to search for objects only at the level of the current instance, many of the `get_*` commands have a `-hierarchical` option to enable searching the design hierarchy level by level, starting from the level of the current instance.

```
get_cells -hierarchical * ; # Returns all cells of the  
design.  
get_nets -hier *nt* ; # Returns all hierarchical nets that  
match *nt*.
```

However, one important feature of the `-hierarchical` option is that the Vivado tools try to match the specified name pattern at each level of the design hierarchy, and not against the full hierarchical name of an object. In general, when `-hierarchical` is used, the specified search pattern must not include the hierarchical separator otherwise no object is returned. There is an exception to this rule when the netlist has been partially flattened during synthesis. That is when the hierarchy separator is also used to mark the flattened netlist level. In this case, it is possible to use it in the search pattern as it only represents a level of hierarchy in the name and not in the design loaded in memory.

The following example is based on [Getting Objects By Name](#) which shows a purely hierarchical netlist.

```
get_cells -hierarchical B/* ; # No cell is returned.
```

```
get_cells -hierarchical b* ; # B/b1 and B/b2 are returned.
```

The -hierarchical search is equivalent to manually performing a search at each level of the hierarchy, using the current\_instance command to set the search scope to a particular hierarchical instance, and return all the objects that match the specified name pattern at that level. The following Tcl code, based on [Getting Objects By Name](#), illustrates this manual process:

```
set result {}
foreach hcell [list "" A B A/a1 A/a2 B/b1 B/b2] {
    current_instance $hcell ;# Move scope to $hcell
    set result [concat $result [get_cells <pattern>]]
    current_instance ;# Return scope to design top-level
}
```

---

**!! Important:** When -hierarchical is used with -regexp, the specified search string is matched against the full hierarchical name, and B/.<sup>\*</sup> returns all cell names that match this pattern. For example, based on [Getting Objects By Name](#), get\_cells -hierarchical -regexp B/.<sup>\*</sup> returns all the cells below the block B. See the *Vivado Design Suite Tcl Command Reference Guide (UG835)* for more information on -regexp.

---

## Using the -filter and -regexp Options

The Vivado Design Suite offers multiple ways to select a subset of objects with the get\_\* commands, using the -filter and/or -regexp options with the -hierarchical option.

The following table summarizes the effect of the -hierarchical/-filter/-regexp options on the pattern that is provided to the command:

```
get_* [-hierarchical] [-filter] [-regexp] pattern
```

**Table: Effects of -hierarchical/-filter/-regexp Options**

-hierarchical	-filter	-regexp	Result
			Pattern matches the local name of objects that belong to the current hierarchical level (current_instance).

<b>-hierarchicalfilter</b>	<b>-regexp</b>		<b>Result</b>
Yes			Pattern matches the local name of objects that belong to the current hierarchical level ( <code>current_instance</code> ) and below.
	Yes		Pattern is a filtering expression applied to objects that belong to the current hierarchical level ( <code>current_instance</code> ). The <code>NAME</code> property matches against the full hierarchical name of the object.
Yes	Yes		Pattern is a filtering expression applied to objects that belong to the current hierarchical level ( <code>current_instance</code> ) and below. The <code>NAME</code> property matches against the full hierarchical name of the object.
		Yes	Pattern is a regular expression that matches the local name of objects that belong to the current hierarchical level ( <code>current_instance</code> ).
Yes		Yes	Pattern is a regular expression that matches the local name of objects that belong to the current hierarchical level ( <code>current_instance</code> ) and below.
	Yes	Yes	Pattern is a filtering expression applied to objects that belong to the current hierarchical level ( <code>current_instance</code> ). The <code>Name</code> property matches against the full hierarchical name of the object. The matching expressions are based on the regular expression format.
Yes	Yes	Yes	Pattern is a filtering expression applied to objects that belong to the current hierarchical level ( <code>current_instance</code> ) and below. The <code>Name</code> property matches

<b>-hierarchical</b>	<b>-filter</b>	<b>-regexp</b>	<b>Result</b>
			against the full hierarchical name of the object. The matching expressions are based on the regular expression format.

---

☞ **Note:** The local name of an object refers to the part of the name that comes from the current hierarchical level (`current_instance`). It does not include the part of the name inherited from the parent.

---

☞ **Note:** When some parts of the design are flattened, the local name of objects that belonged to the flattened levels includes the hierarchical separator. In such a case, the hierarchy separator in this part of the name is not seen any more as a separator, but as a literal character.

---

☞ **Note:** The `-filter` option specifies a filtering expression where the pattern matching inside the expression follows the global expression format. A filtering expression involves string matching based on object properties and can be as complex as required. When the `NAME` property is used inside a filtering expression, the full hierarchical name of the object is used for the string matching and not its local name. However, only objects that belong to the current hierarchical level (`current_instance`) are being considered. If `-hierarchical` is used with `-filter`, then all the objects that belong to the current hierarchical level and below are considered for the filtering. If `-regexp` is used with `-filter`, the pattern matching inside the expression follows the regular expression format.

---

☞ **Note:** The `- regexp` option implies that the pattern provided to the command is a regular expression. Be careful as some characters, such as `*` `.` `[ ]` `+`, have a special meaning inside a regular expression. Those characters need to be escaped when used as literal and not as special characters in the context of the regular expression.

The string matching is case sensitive and always anchored to the start and end of the search string. To match a sub-string of a search string, use the following syntax depending on whether or not a regular expression is used:

- The pattern follows the format of a regular expression (`- regexp` only): `.*<substring>.*`
- The pattern follows the format of a global expression (other options): `*<substring>*`

Following are some examples based on the `cpu_hdl` project, which can be found under the Open Example Project link on the Getting Started page of the Vivado IDE, that illustrate the differences between the options.

- Change the current instance to fftEngine/fftInst/ingressLoop[7].ingressFifo:

```
vivado% current_instance fftEngine/fftInst/
ingressLoop[7].ingressFifo
fftEngine/fftInst/ingressLoop[7].ingressFifo
```

- Get all the cells under the current instance: there is only one (hierarchical) cell:

```
vivado% get_cells
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo
vivado% get_cells -hier
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo/
infer_fifo.two_rd_addr_reg
[8]_i_1_29 ... (154 other cells)
```

- The local name of the cells under the current instance and below does not include ingressLoop. The string ingressLoop is inherited from the parent cell and is part of the full hierarchical name:

```
vivado% get_cells *ingressLoop*
WARNING: [Vivado 12-180] No cells matched
'*ingressLoop*'.
vivado% get_cells *ingressLoop* -hier
WARNING: [Vivado 12-180] No cells matched
'*ingressLoop*'.
```

- With the -filter option, the NAME property matches the full hierarchical names:

```
vivado% get_cells -filter {NAME =~ *ingressLoop*}
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo
vivado% get_cells -filter {NAME =~ *ingressLoop*} -hier
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo/
infer_fifo.two_rd_addr_reg
[8]_i_1_29 ... (154 other cells)
```

- Search for cells matching the pattern \*reg[\*]\*:

```

vivado% get_cells *reg[*]*
WARNING: [Vivado 12-180] No cells matched '*reg[*]*'.
vivado% get_cells *reg[*]*
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo/
infer_fifo.wr_addr_reg[9]_
i_1_15 ... (109 other cells)
vivado% get_cells -hier -regexp {.*reg\[.*\].*}
fftEngine/fftInst/ingressLoop[7].ingressFifo/buffer_fifo/
infer_fifo.wr_addr_reg[9]_
i_1_15 ... (109 other cells)
vivado% get_cells -hier -regexp {.*reg[.*].*}
WARNING: [Vivado 12-180] No cells matched '.*reg[.*].*'.

```

The last query, `get_cells -hier -regexp {.*reg[.*].*}` does not match any cell because the square brackets, [] have not been escaped. As a result, they are processed as special characters for the regular expression and not as literal square brackets in the cell name. When a range of values needs to be specified in the filtering expression, the `-regexp` option should be used in addition to the `-filter` option. For example, the code below only gets the cells from `*reg[0]*` to `*reg[16]*`. The regular expression is built around matching `.*reg\[ [0-9]\].*` or matching `.*reg\[1[0-6]\].*` as shown below:

```

expanse="page">>vivado% get_cells -hierarchical -regexp -
filter {NAME =~ ".*reg\[([0-9]|1[0-6])\].*"}

```

In another example, both commands below return all the tiles matching CLB\*X\*Y\*, excluding the tiles from CLB\*X1Y\* to CLB\*X16Y\* with X between 1 and 16:

```

expanse="page">>vivado% get_tiles -regexp -filter {NAME !~
"CLB.*X([1][0-6]| [0-9])Y.*" && TYPE=~ "CLB.*"}

```


```

expanse="page">>vivado% get_tiles -regexp -filter {NAME !~
"CLB.*X1[0-6]Y.*" && NAME !~ "CLB.*X[1-9]Y.*" &&
TYPE=~ "CLB.*"}

```

Searching for Pins

**Figure: Searching for Pin Names**

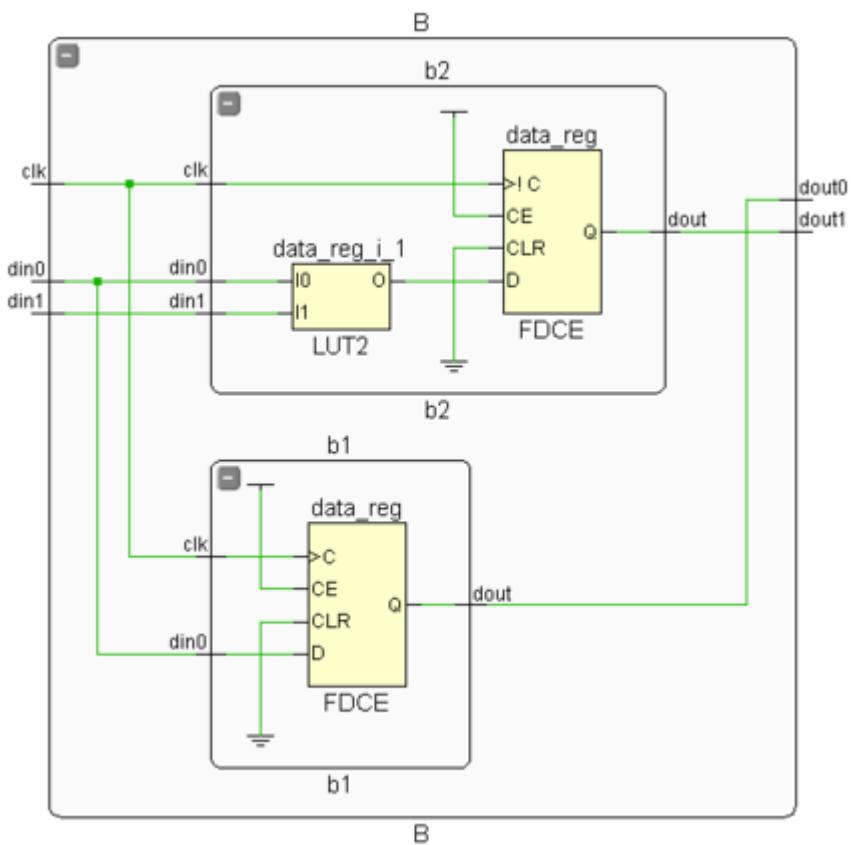

The names of pins are based on the instance they belong to. When searching for pins, you must use the hierarchy separator character to separate the instance name and the pin name patterns. The following examples are illustrated by [Searching for Pins](#).

```
# Current instance is set to design top-level
get_pins B/* ; # Returns B/clk B/din0 B/din1 B/dout0 B/dout1
get_pins B/b2/*/0 ; # Returns B/b2/data_reg_i_1/0
current_instance B/b2 ; # Change scope to B/b2
get_pins *_reg/D ; # Returns B/b2/data_reg/D
```

You can also use the `-hierarchical` option when searching for pins:

```
current_instance ; # Reset to the top-level of the hierarchy
get_pins -hier */D # Returns pin objects for all D pins in
the design
```

---

 **Note:** `-hierarchical` and `-hier` refer to the same option. The Vivado Design Suite Tcl shell completes option names automatically if enough


characters are provided to identify a unique option. Therefore, -of\_object and -of can also refer to the same option.

---

## Filtering Results

More often than not, when you use get\_\* to search for design objects, you are only interested in a subset of the objects returned. You might not want all of the netlist objects in the design, but for example, only cells of a certain type, or nets of a certain name. In some cases, only a subset of elements are of interest and need to be returned.

**Figure: Searching Hierarchical Designs**

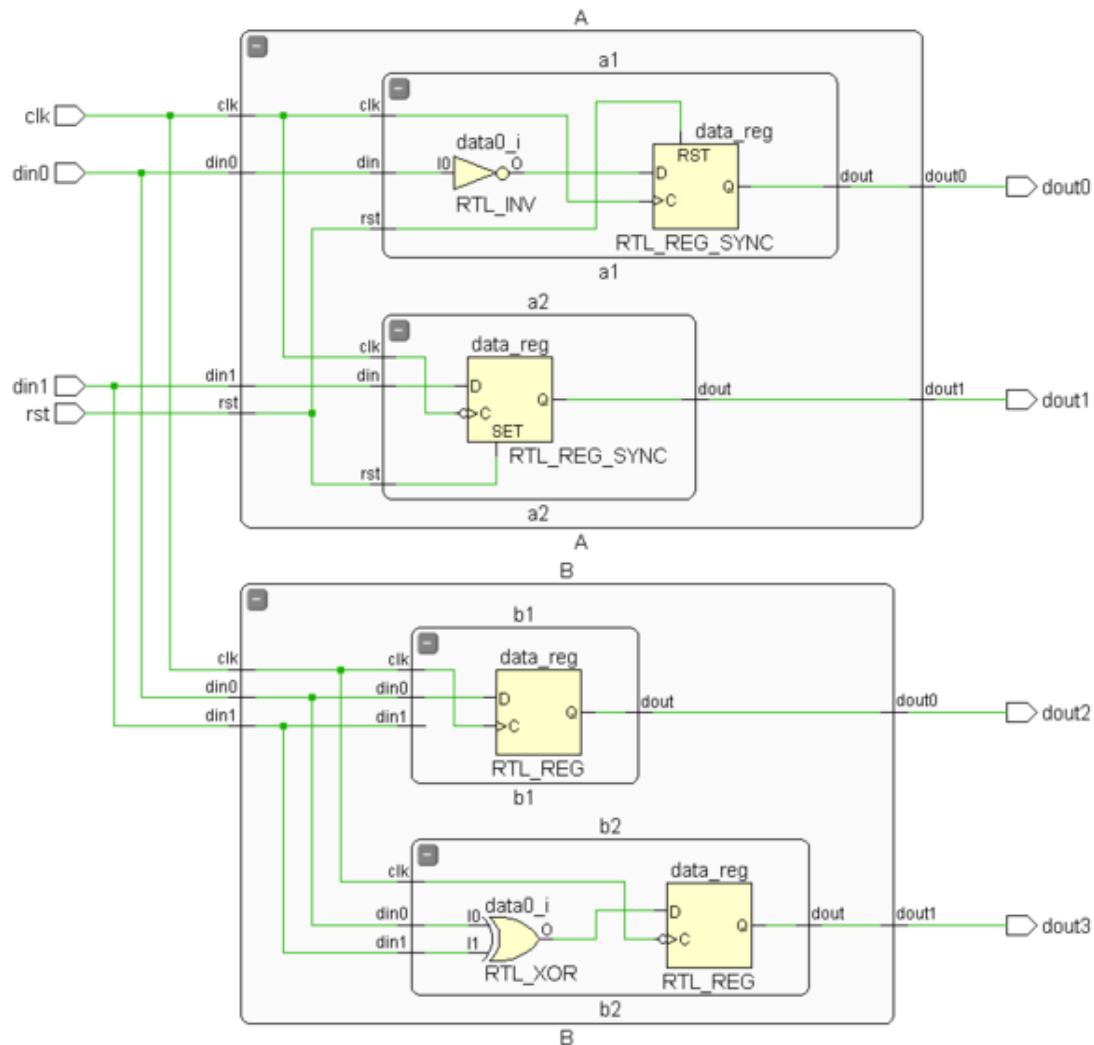

You can limit the search results, by narrowly defining your search pattern, using wildcards '\*' and '?', or using -regexp to build complex search patterns to evaluate. You can limit the scope of hierarchy being searched, by setting the current\_instance or by specifying -hierarchy.

For example, the following expressions return different results:

```
get_cells * ; # Returns 2 cells: A,B  
get_cells -hier * ; # Returns all cells of the design (leaf  
and hierarchical)  
get_cells -hier * -filter {NAME =~ */?1/*} ; # Returns 3  
cells: A/a1/data0_i,  
# A/a1/  
data_reg, B/b1/data_reg
```

The -filter option lets you filter the results of the get\_\* commands, based on specific properties of the objects being searched. For example, the following command returns all the cells with a hierarchical name that begins with B/b\*, and that have not been placed by the user, so that IS\_LOC\_FIXED is FALSE, or 0:

```
set unLoced [ get_cells -hier -filter {NAME =~ B/b* && !  
IS_LOC_FIXED} ]
```

---

**!! Important:** The NAME property contains the full hierarchical name of the object. When filtering on the NAME property, the pattern is evaluated against the complete NAME string, regardless of the other options used in the command, including -hierarchical.

The -filter option causes Vivado to filter the results of a query before it is returned. However, in some cases you might have assigned the results of a prior search to a variable, that is now stored in memory. The filter command lets you filter the content of any list of objects, including lists stored in a variable. Using the results of the prior example, stored in \$unLoced, you can further filter the list of objects as follows:

```
set unLocedLeaf [filter $unLoced {IS_PRIMITIVE}]
```

The preceding example filters the stored results of the prior search, filtering the list to return only the objects that are primitive instances in the design.

---

**!! Important:** The filter command does not modify the original Tcl variable and therefore the result must be saved inside another Tcl variable.

---

**★ Tip:** Note the direct use of the boolean properties IS\_LOC\_FIXED and


`IS_PRIMITIVE` in the example above. Boolean (bool) type properties can be directly evaluated in filter expressions as true or false.

The specific operators that can be used in filter expressions are "equals" and "not-equals" (`==` and `!=`), and "contains" and "not-contains" (`=~` and `!~`). Numeric comparison operators `<`, `>`, `<=`, and `>=` can also be used. Multiple filter expressions can be joined by AND and OR ( `&&` and `||`).

## Getting Objects by Relationship

There are times when you need to find objects that are related to other objects in the design. For instance, selecting all of the nets connected to the pins of a specific cell, or all of the cells connected to a specific net. The Vivado Design Suite provides the ability to traverse the elements of the design through their various relationships to one another. This is accomplished through the use of the `-of_objects` option supported by many of the `get_*` commands. [Getting Objects by Relationship](#) illustrates the relationship of objects in the in-memory design.

**Figure: Vivado Design Suite Object Relationships**

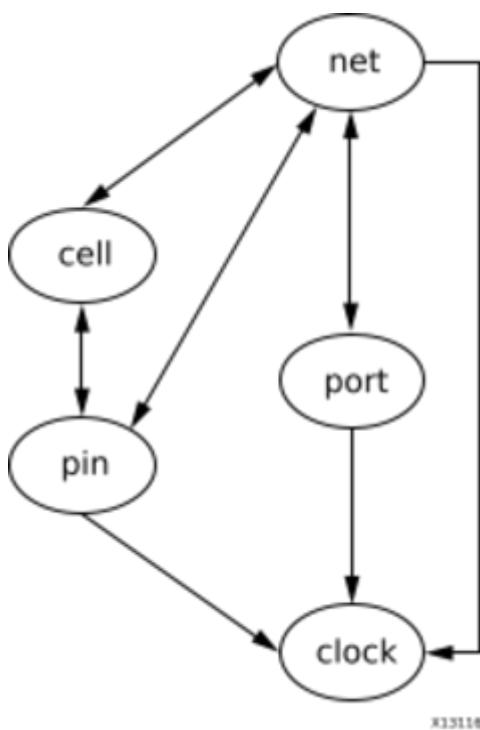

**Note:** This image is intended to be representative, and is not a complete map of all objects and relationships in the Vivado Design Suite database.

The Help message for each of the `get_*` commands that supports the `-of_objects` option lists the related objects that can be traversed:

```
get_cells -of_objects {pins, timing paths, nets, bels or
sites}
get_clocks -of_objects {nets, ports, or pins}
get_nets -of_objects {pins, ports, cells, timing paths or
clocks}
get_pins -of_objects {cells, nets, bel pins, timing paths or
clocks}
get_ports -of_objects {nets, instances, sites, clocks, timing
paths, io standards, io
banks, package pins}
```

With the `-of_objects` option, getting the list of all pin objects attached to a list of net objects becomes very simple:

```
get_pins -of_objects [get_nets -hier]
```

To only get the list of drivers for those nets you need to use the `-filter` option:

```
get_pins -of [get_nets -hier] -filter {DIRECTION == OUT}
```


---

☞ **Note:** If an empty list of objects is passed through `-of_objects`, then the `get_*` command returns an empty Tcl list.

---

You can also get the list of pins from a list of cells, or a list of cells from a list of nets and so on.

## Figure: Traversing Objects by Relationship

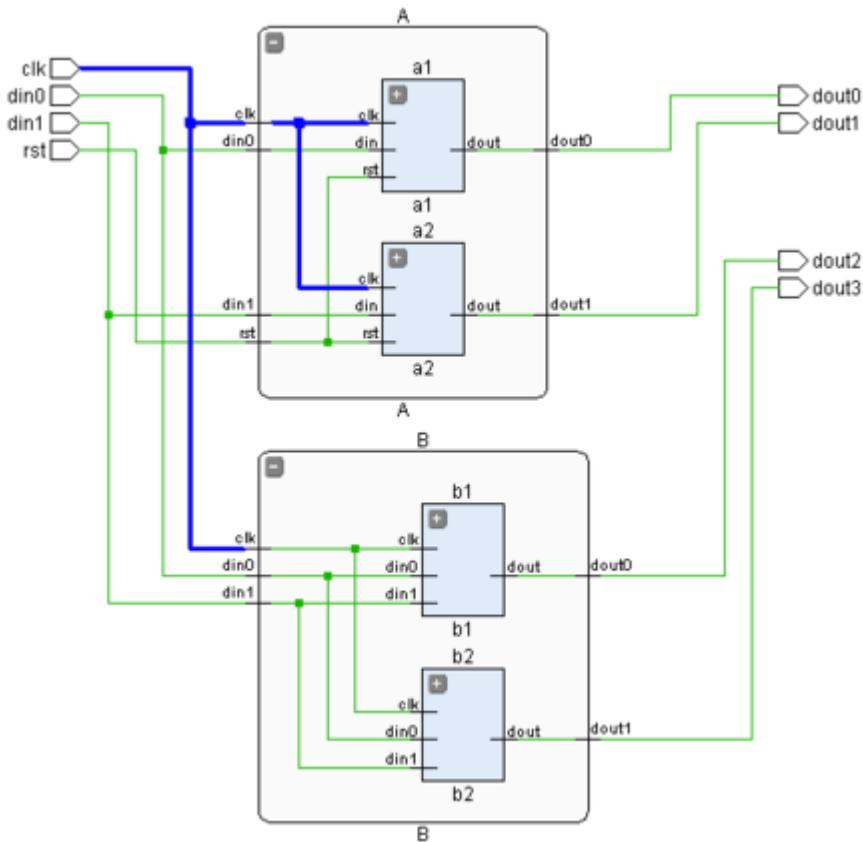

Using [Getting Objects by Relationship](#) as an illustration, the following example gets the clock pin from instance a1, then works its way outward and upward through the hierarchy. It gets the net connected to that pin, and gets the pins connected to that net, then gets the nets connected to those pins, and finally gets the pins connected to those nets.

```
get_pins -of [get_nets -of [get_pins -of [get_nets -of
[get_pins A/a1/clk]]]]
A/a2/clk A/clk A/a1/clk B/clk
```

The last get\_pins command returns the clock pin of hierarchical module B, B/clk, along with the other pins that have already been returned. However, to cross the hierarchy, and return the primitive pins on the clock net object, you can use the -leaf option of the get\_pins command. The following example shows what is returned when -leaf is used:

```
get_pins -leaf -of [get_nets -of [get_pins -of [get_nets -of
[get_pins A/a1/clk]]]]
B/b1/data_reg/C A/a2/data_reg/C A/a1/data_reg/C B/b2/
data_reg/C
```


## get\_nets Command

The get\_nets command can return multiple representations of the same net as the net traverses through the design hierarchy. Below are some examples using the options provided with get\_nets to ensure that the proper representation of the net is selected.

The following examples use the leaf pin of a LUT2 as defined below to query different segments of the net connected to the leaf pin.

```
set mypin [get_pins{egressLoop[7].egressFifo/buffer_fifo/
infer_fifo.wr_addr_reg[9]_i_1_6/I0}]
mark_objects -color green $mypin
```

**Figure: Set mypin Example**

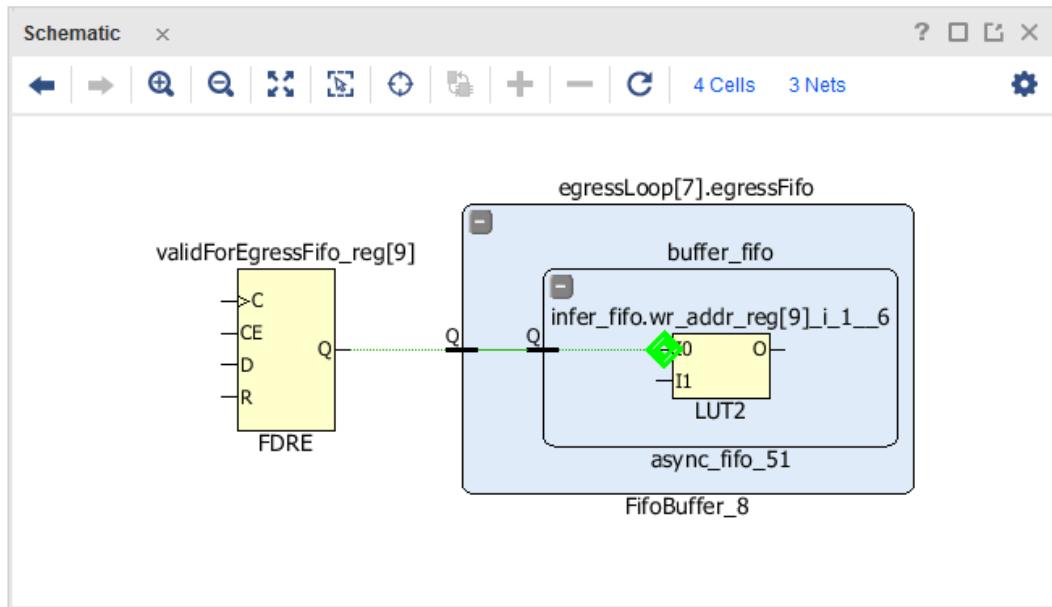


Simply getting the net connected to the leaf pin mypin returns the net segment within the hierarchy directly connected to the leaf pin.

```
select_objects [get_nets -of $mypin]
```

In order to select all segments of the net connected to leaf pin mypin, use the -segments option.

```
select_objects [get_nets -segments -of $mypin]
```


## Figure: get\_nets Segments Example

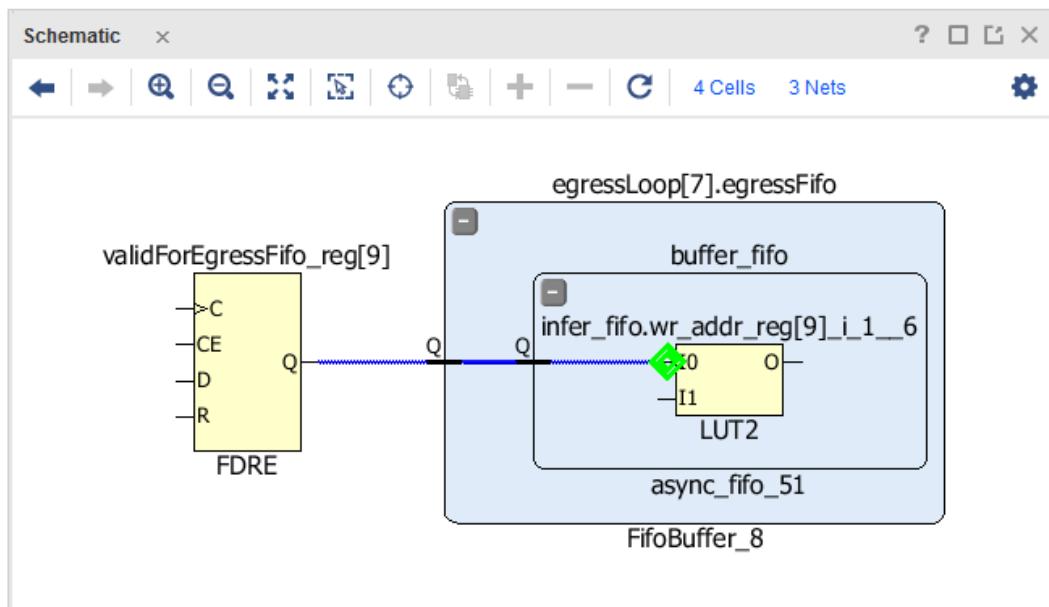


In order to only get the net segment at the highest level of the hierarchy connected to the leaf pin `mypin`, use the `-top_net_of_hierarchical_group` along with the `-segments` option. This is often useful when printing debug statements as this will provide the name of the net with the shortest number of characters.

```
select_objects [get_nets -top_net_of_hierarchical_group -  
segments -of $mypin]
```

## Figure: get\_nets Top Segments Example

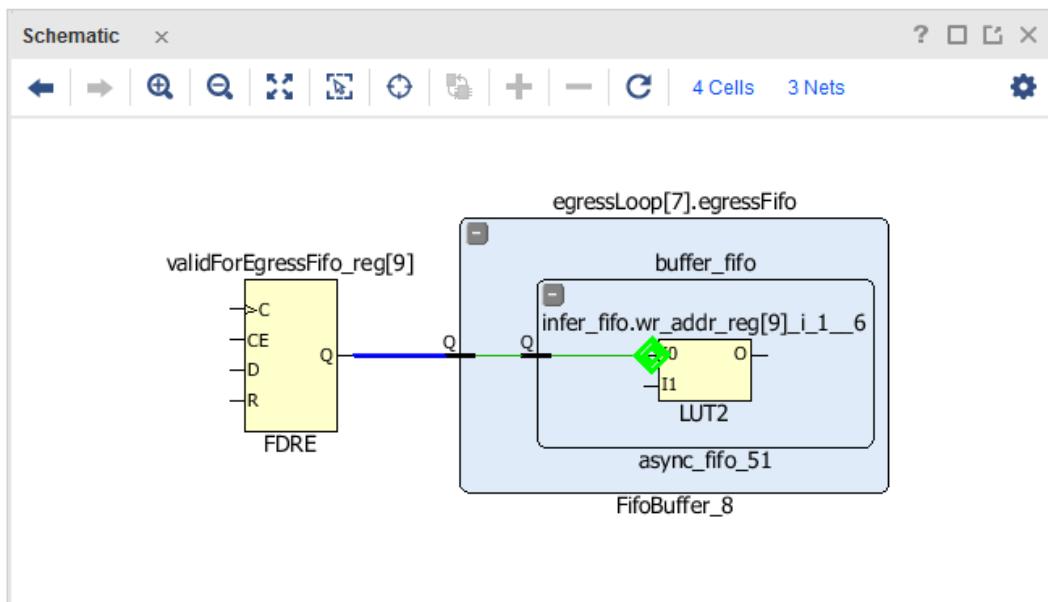

**Figure: get\_nets of Pin Example**

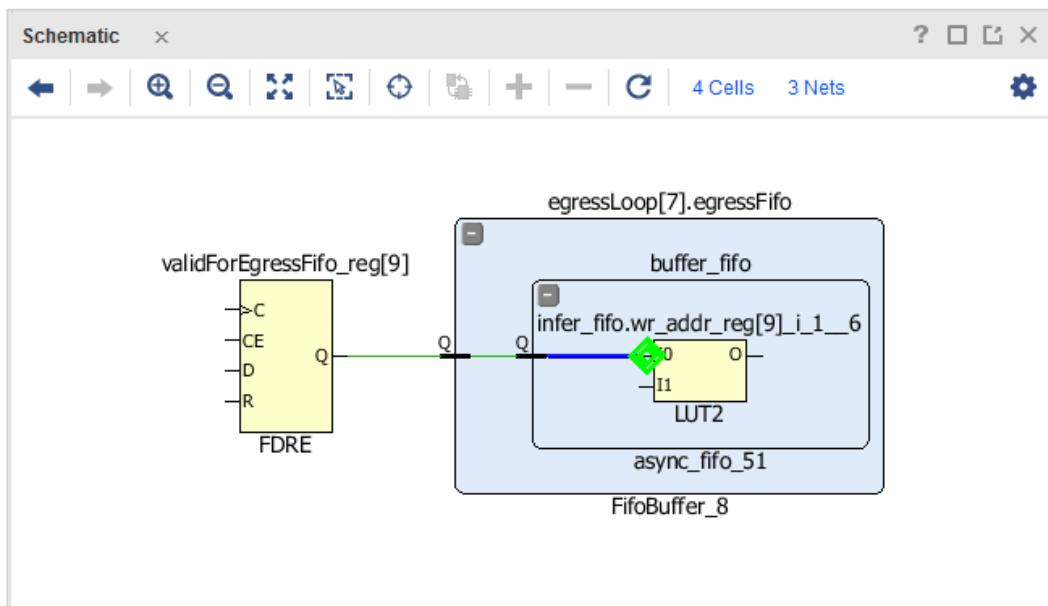

## Timing Path Object

The `get_timing_path` command can be used to return a list of timing path objects. Because the `get_timing_path` command uses the same engine as the `report_timing` command, it also shares most of its command line options.

Timing path objects can be very practical to perform advanced scripting related to static timing analysis. The timing path object can also be used to generate the full text report of the path using `report_timing -of <timingPathObject>`.

The commands `get_nets`, `get_cells`, or `get_pins` can be used on a timing path object to query list of nets/cells/pins in the datapath section of the path. The design elements inside the source and destination clock networks cannot be queried.

The list of objects returned from a timing path objects by `get_nets`, `get_cells`, or `get_pins` is sorted based on the appearance of the design elements inside the datapath.

## Persistency of Objects

A Vivado object persists as long as the element it points to exists in memory. For example, if a Tcl variable points to a cell object and the cell is deleted afterward (either manually or thought some optimization steps), the cell object becomes null. This could lead to unexpected results or crash if you execute a command that relies on it.

In the same way, once a design or a project is closed, all the design objects and potentially all the other Vivado objects are nullified, and any Tcl variable pointing to Vivado objects that no longer exist is stalled.

---

**⚠ CAUTION!** If you execute a command that relies on an object that no longer exists in memory, the command could produce unexpected results or cause a system crash.

---

For example, the code below is flawed:

```
foreach port [get_ports] {  
    # The 'port' object is used as key  
    set dir($port) [get_property DIRECTION $port]  
}  
foreach key [array name dir] {  
    puts "$key -> $dir($key)"  
}  
close_project  
# All the objects have been nullified  
foreach key [array name dir] {  
    # null  
    puts "$key -> $dir($key)"  
}
```

Once the project is closed, all the objects (i.e., port objects in this example) are nullified and therefore it is no longer possible to print the list of ports.

To be able to print the list of ports after the design is closed, the associative array 'dir' should have been built using the property NAME of the 'port' object:

```
foreach port [get_ports] {  
    set dir([get_property NAME $port]) [get_property  
DIRECTION $port]}
```

Another example of objects becoming invalid is after using the command 'read\_checkpoint -cell <cell>'. When a checkpoint is read for a cell, the design is rebuilt in the background and previous first-class objects become invalid. The code below could result in a crash as the objects from the get\_cell query are invalidated after the first read\_checkpoint:

```
foreach cell_hd [get_cell -hier -filter HD.RECONFIGURABLE==1]  
{  
    read_checkpoint -cell $cell ...  
}
```

The safe way to write the code is to convert the objects into their string representation:

```
foreach cell_hd [get_property NAME [get_cell -hier -filter  
HD.RECONFIGURABLE==1]] {  
    read_checkpoint -cell $cell ...  
}
```

## Handling Lists of Objects

When using the get\_\* commands, the returned object looks and acts like a standard Tcl list. However, the Vivado Design Suite is returning a container of a single class of objects (for example cells, nets, pins, or ports), which is not a generic Tcl list. However, for most of your purposes, the container of objects looks and acts like any Tcl list. The container of objects is handled automatically by the Vivado Design Suite, and is totally transparent to the user. For example, the standard Tcl `llength` command can be used on a container of objects (for example from `get_cells`) and returns the number of elements in the container, like it would for any standard Tcl list.

The built-in Tcl commands that handle lists in the Vivado Design Suite are overloaded and enhanced to fully support objects and containers of objects. For example, `lsort`, `lappend`, `lindex`, and `llength`, have been enhanced to manage the container based on the `NAME` property of the object. The result of these commands, when passed a container of objects, returns a container of objects. For example, `lsort` sorts a container of cells from the `get_cells` command based on the hierarchical names of the objects.

The `lindex` implementation inside Vivado returns a non-iterable object. When used with a `foreach` command, only the string representation is used by the iterator, not the object. The following error is expected because the Tcl variable `slr` is of a type string inside the loop:

```
foreach slr [lindex [get_slrs] 0] {  
    report_property $slr  
}  
=> ERROR: [Common 17-58] 'SLR0' is not a valid first class  
Tcl object.
```

There are 2 ways to iterate with `lindex`. Either by explicitly converting the element to a Tcl list or by using the `lrange` command instead of `lindex`. For example,

```
foreach slr [list [lindex [get_slrs] 0]] {  
    report_property $slr  
}  
  
foreach slr [lrange [get_slrs] 0 end] {  
    report_property $slr  
}
```

You can add new objects to the container (using `lappend`, for instance), but you can only add the same type of object that is currently in the container. Adding a different type of object, or string, to the list is not permitted and results in a Tcl error.

The following example shows a Vivado container being sorted in a descending order, and each object put onto a separate line, by using the `puts` command and a `foreach` loop:

```
foreach X [lsort -decreasing [get_cells]] {puts $X}
```

```
wbArbEngine  
usb_vbus_pad_1_i_IBUF_inst  
usb_vbus_pad_0_i_IBUF_inst  
usbEngine1  
usbEngine0  
...
```

---

 **Note:** Although the `lappend` command is supported by the Tcl Console, it is not supported in a XDC constraint file with the `read_xdc` command. However, it is possible to convert a list built with the `lappend` command in a different way that is compatible with the `read_xdc` command. In the following example:

---

```
set myClocks {}  
lappend myClocks [get_clocks CLK1]  
lappend myClocks [get_clocks CLK2]  
lappend myClocks [get_clocks CLK3]
```

The Tcl variable `myClocks` can be built differently to be compatible with the `read_xdc` command:

```
set myClocks [list [get_clocks CLK1] \  
                   [get_clocks CLK2] \  
                   [get_clocks CLK3] \  
]
```

## Collection versus String Representation

The `get_*` commands do not create a regular Tcl list of elements. They create a Vivado collection of objects, but the Vivado collections are implemented in such way that they behave like any regular Tcl list. The process is transparent to the user and to Tcl. Vivado collections behave like Tcl lists and can be manipulated in the very same way and with the same commands.

Vivado collections are implemented in Tcl to improve runtime and reduce the memory footprint when dealing with Vivado objects.

Now, when a Vivado collection is converted as a string, it is possible to limit the number of objects to be converted. So, for example, if you print in the Tcl Console a list of instances, and that the list (a Vivado collection under the hood) has 100,000 instances, only the first 500 (default limit)

instances are exported. This avoids cluttering the Tcl Console with a string that could be extremely long.

The notion of string representation of a Vivado collection of objects is important to understand. The maximum number of objects to include in the string representation of a collection is controlled through the parameter `tcl.collectionResultDisplayLimit`:

```
tcl.collectionResultDisplayLimit 500 integer true
```

The maximum number of elements can be displayed by any command that displays a collection. You can make this unlimited by setting the limit to 0. (default: 500). For example:

```
set_param tcl.collectionResultDisplayLimit 0  
set_param tcl.collectionResultDisplayLimit 1000
```

When a Vivado collection has more elements than the limit defined by the parameter `tcl.collectionResultDisplayLimit`, only the first *n*th elements are converted as a string, then '...' is added at the end of the string representation to indicate that more elements in the original collection have not been included.

---

☞ **Note:** The string representation does not alter the original collection in any way so there is never any loss of elements in the original collection.

---

☞ **Note:** The parameter `tcl.collectionResultDisplayLimit` only applies to string representation of Vivado collections. It does not apply to string representation of regular Tcl lists.

For example, if a design has 20000 instances:

```
vivado% set cells [get_cells -hier]  
vivado% llength $cells  
20000  
vivado% set var [join $cells "\n"]  
vivado% llength $var  
501  
vivado% lindex $var end  
...
```

## Redirecting Output

Many of the Vivado Design Suite Tcl commands allow you to redirect the information returned by the command to a file with the `-file` option, for printing or processing outside of the tool; or as a string that can be saved in a variable with the `-return_string` option for further processing within the Vivado tools.

All of the report commands support the `-file` option. File output is useful for report commands that output a great deal of information, that might require further review, or support the documentation of a design project, or to pass to downstream processes such as other design disciplines, or other departments. Some of the commands supporting file output include:

```
report_datasheet  
report_drc  
report_power  
report_timing  
report_timing_summary  
report_utilization
```

For example, to save the results of the `report_timing` command to a file:

```
report_timing -delay_type max -file setup_violations.rpt  
report_timing -delay_type min -file hold_violations.rpt
```

A relative or absolute path can be specified as part of the file name. A relative path is relative to the directory from which the Vivado tools are started, or to the current working directory which can be retrieved with the `pwd` command.

---

**★ Tip:** If the path is not specified as part of the file name, the file is written into the current working directory, or the directory from which the Vivado tools were launched.

---

To append the content from a command to an existing file, use the `-append` option in addition to `-file`. For example, the code below creates one file, `allViolations.rpt`, that combines the output of two separate commands:

```
report_timing -delay_type max -file allViolations.rpt  
report_timing -delay_type min -file -append
```

`all_violations.rpt`

After the file has been created, you might need to access the file from the file system, opening the file to read from it, or to write to it. The Vivado Design Suite Tcl Console offers a number of commands for accessing files. See [Accessing Files](#) for more information.

All `report_*` commands also support the `-return_string` option. This option directs the command to return its output as a string that can be assigned to a Tcl variable. Assigning the command output to a variable is useful for further processing within the Tcl script, to allow extraction of key information to enable flow control, branching, and to set other variables for use in the script.

Some of the commands that support `-return_string` are:

```
report_clocks  
report_clock_interaction  
report_disable_timing  
report_environment  
report_high_fanout_nets  
report_operating_conditions  
report_power  
report_property  
report_pulse_width  
report_route_status  
report_utilization
```

You can split the returned string from the report on the newline character, `\n`, to process the string line by line as a list:

```
set timeLines [split [report_timing -return_string -max_paths 10] \n ]
```

The Vivado Design Suite Tcl Console also offers many tool for working with strings. See [Working with Strings](#) for more information.

## Accessing Files

After a file has been written to the file system, Tcl provides many useful commands for working with the files. You can extract elements of a file, such as the file path, file name and file extension. Some of the Tcl

commands available to examine information about file include:

**file exists <filename>**

A boolean test that returns 1 if filename exists, and you have permission to read its location; returns 0 otherwise. Use this to determine if the file you are looking for already exists.

**file type <filename>**

Returns the type of filename as a string with one of the following values: file, directory, characterSpecial, blockSpecial, fifo, link, or socket.

**file dirname <filename>**

This returns the directory structure of the fileName, up to but not including the last slash.

**file rootname <filename>**

Returns all the characters in filename up to but not including last dot.

**file tail <filename>**

Return all characters in filename after the last slash.

**file extension <filename>**

Returns all characters in filename after, and including, the last dot.

The following examples illustrates some of the Tcl commands:

```
set filePath {C:/Data/carry_chain.txt}
file dirname $filePath ; # Returns C:/Data
file tail $filePath ; # Returns carry_chain.txt
file extension $filePath ; # Returns .txt
```

After the Vivado tools have created a file, through a report\_\* command, or write\_\* command, you can open the file from within a Tcl script to read its contents, or to write additional content. To open, read from, write to, and close a file, you can use some of the following Tcl commands:

**open <filename> [ access ] [ perms ]**

Opens the filename and returns the file handle, or fileId, used to access the file. It is a standard practice to capture the fileId in a Tcl variable, so that you can refer to the file handle when needed. The file permissions of a new file are set to the conjunction of perms and the process umask. The access mode determines whether you can read to or write to the open file. Some common access modes are:

**r**

Read only. The file must exist; it is not created. This is the default access mode if one is not specified.

**w**

Write only. This creates the specified file if it does not already exist. The data is written to the front of the file, truncating or overwriting the content of an existing file.

**a**

Append only. This will create the specified file if it does not already exist. The data is written at the end of the file, appending to any existing file content.

#### **read [-newline] fileId**

Read all remaining bytes from fileId, optionally discarding the last character if it is a newline, \n. When used in this form right after opening the file, the read command reads the entire file at once.

#### **read fileId numBytes**

Read the specified number of bytes, numBytes, from fileId. Use this form of the command to read blocks of the file, up to the end of the file.

#### **eof fileId**

Returns 1 if an end-of-file (EOF) has occurred on fileId, 0 otherwise.

#### **gets fileId [ varName ]**

Read the next line from fileId, discarding the newline character. Places the characters of line in \$varName if given, otherwise returns them to the command shell. The following are different forms of the gets commands:

```
gets $fileHandle  
Append line 4 of file.  
gets $fileHandle line  
28  
puts $line  
Append line 5 of file.  
set line [gets $fileHandle]  
Append line 6 of file.  
puts $line  
Append line 6 of file.
```

In the preceding example, \$fileHandle is the file handle returned when the file was opened. The first line uses the simple form of gets, without specifying a Tcl variable to capture the output. In this case the output is returned to stdout. The second form of the command assigns the output to a variable called \$line, and the gets command returns the number of characters it has read, 28.

---

 **Note:** You can assign the return of the gets command to a Tcl variable, but depending on which form you are using you might capture the contents of the file, or the number of characters the gets command has read.

---

### **puts [-nonewline] [ fileId ] string**

Write a string to the specified fileId, optionally omitting the newline character, \n. The default fileId for the puts command is stdout.

### **close fileId**

Close the open file channel fileId. It is very important to close any files your Tcl scripts have opened, or you might develop memory leaks in the Vivado application, or encounter other undesirable effects.

The following example opens a file in read access mode, storing the file handle as \$FH, reads the contents of the file in a single operation, assigning it to \$content, and splits the contents into a Tcl list. The file is

closed upon completion.

---

☞ **Note:** It is not recommended to read large files in a single operation due to performance and memory considerations.

---

Rather than reading the entire file at once, and then parsing the results, the following example reads the file line-by-line until the end of the file has been reached, and writes the line number and line content to stdout. The file is closed upon completion:

```
set FH [open C:/Data/carry_chains.txt r]
set i 1
while {[!eof $FH]} {
    # Read a line from the file, and assign it to the $line
    variable
    set line [gets $FH]
    puts "Line $i: $line"
    incr i
}
close $FH
set FH [open C:/Data/carry_chains.txt r]
set content [read $FH]; # The entire file content is saved to
$content
foreach line [split $content \n] {
    # The current line is saved inside $line variable
    puts $line
}
close $FH
```

The example below writes to a file, ports.rpt, saving all the I/O ports from the design, with the port direction, sorted by name:

```
set FH [open C:/Data/ports.rpt w]
foreach port [lsort [get_ports *]] {
    puts $FH [format "%-18s %-4s" $port [get_property DIRECTION
    $port]]
}
close $FH
```

In the example above, the file is opened in write mode. Unlike read mode, the write mode creates the file if it does not exist, or overwrite the

file if it does exist. To write new content to the end of an existing file, you should open the file in append mode instead.

## Working with Strings

The `-return_string` argument directs the output of a `report_*` command to a Tcl string rather than to `stdout`. The string can be assigned to a Tcl variable, and parsed or otherwise processed.

```
set rpt [report_timing -return_string]
```

After the string has been assigned to a variable, Tcl provides many useful commands for processing the string in a number of ways:

### **append string [arg1 arg2 ... argN]**

Appends the specified args to the end of `string`.

### **format formatString [arg1 arg2 ... argN]**

Returns a formatted string generated to match the format specified by the `formatString` template. The template must be specified using % conversion specifiers as used in `sprintf`. The additional arguments, `args`, provide values to be substituted into the formatted string.

### **reg exp [switches] exp string**

Returns 1 if the regular expression, `exp`, matches all or part of `string`, 0 otherwise. The `-nocase` switch can be specified to ignore character case when matching.

### **string match pattern string**

Returns 1 if the glob pattern matches `string`, 0 otherwise.

### **scan string formatString [ varName1 varName2 ... ]**

Extracts values from the specified `string` into variables, `varName`, applying the `formatString` using % conversion specifiers as in `sscanf` behavior. If no `varNames` are specified, `scan` returns the list of values to `stdout`

### **string range string first last**

Returns the range of characters from `string` specified by character indices `first` through `last` inclusive.

### **string compare string1 string2**

Performs a lexicographical comparison of two strings, and returns -1 if string1 comes before string2, 0 if they are the same, and 1 if string1 comes after string2.

### **string last string1 string2**

Return the character index in string2 of the last occurrence of string1. Returns -1 if string1 is not found in string2.

### **string length string**

Returns the number of characters in string.

The following example assigns the results of the report\_timing command to the \$report Tcl variable, using -return\_string. The string is processed to extract the start point, end point, path group and path type of each path. After the path information is extracted, a summary of that path is printed to the Tcl Console.

```
# Capture return string of timing report, and assign variables
set report [report_timing -return_string -max_paths 10]
set startPoint {}
set endPoint {}
set pathGroup {}
set pathType {}

# Write the header for string output
puts [format " %-12s %-12s %-20s -> %-20s" "Path Type" "Path Group" "Start Point" "End Point"]
puts [format " %-12s %-12s %-20s -> %-20s" "-----"
"-----" "-----" "-----"]

# Split the return string into multiple lines to allow line by line processing
foreach line [split $report \n] {
    if {[regexp -nocase -- {^\\s*Source:\\s*([[:blank:]]+)((\\s+
\\(?)|$)} $line - startPoint]} {
    } elseif {[regexp -nocase -- {^\\s*Destination:
\\s*([[:blank:]]+)((\\s+\\(?)|$)} $line - endPoint]} {
    } elseif {[regexp -nocase -- {^\\s*Path Group:
\\s*([[:blank:]]+)\\s*$} $line - pathGroup]} {
    } elseif {[regexp -nocase -- {^\\s*Path Type:
\\s*([[:blank:]]+)((\\s+\\(?)|$)} $line - pathType]} {
        puts [format " %-12s %-12s %-20s -> %-20s" $pathType
$pathGroup $startPoint $endPoint]
```

```
}
```

```
}
```

An example output from the code is:

Path	Type	Path	Group	Start Point	->	End Point
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[0]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[10]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[11]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[12]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[13]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[14]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[15]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[16]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[17]				
Setup	bftClk	ingressLoop[0]/ram/CLKBWRCLK			->	
		transformLoop[0].ct/xOutReg_reg/A[18]				

## Controlling Loops

Tcl has few built-in commands such as `for`, `foreach`, and `while` that are used to loop or iterate through a section of code.

Their syntax is:

```
for <start testCondition next body>
foreach <varname list body>
while <testCondition body>
```

With all the above commands, the entire Tcl script body is executed at each iteration. However, Tcl provides two commands to change the

control flow of the loop: break and continue.

The break statement is used to abort the looping command. The continue statement is used to jump to the next iteration of the loop.

---

☞ **Note:** When running inside a proc, the loop can also be aborted using the return command. In this case, not only the loop is aborted but the control goes back to the caller of the proc.

---

For example, you have a file that contains a list of cell names with the format of one instance name per line. The sample code below reads this file and build a Tcl list that only includes the cell names that currently exist in the design. The code reuses the procedure get\_file\_content that was introduced earlier. If too many cell names are not found inside the current design then the code stops processing the content of the file:

```
set valid_cell_names [list]
set error 0
set max_errors 1000
foreach line [split [get_file_content ./all_cell_names.lst]
\n] {
    if {[get_cells $line] == {}} {
        # cell name not found
        puts " Error - cell $line not found "
        incr error
        if {$error > $max_errors} {
            puts " Too many errors occurred. Cannot continue "
            break
        } else {
            # Go to next cell name
            continue
        }
    }
    lappend valid_cell_names $line
}
puts " [llength $valid_cell_names] valid cells have been
found "
```

## Error Handling

### Checking Validity of Variables

When developing Tcl scripts, it is recommended to always check for

corner cases and for conditions where the code could fail. By doing the proper checks, it is possible to inform the user of issues and/or incorrect usage of the script. If the checks are not correctly performed, then the script could stop without informing the user about what went wrong and therefore what should be corrected.

Example 1: Check when a file is opened for read/write (unsafe version).

```
if {[file exists $filename]} {
    set FH [open $filename r]
    if {$FH != {}} {
        # The file is opened, do something
        #
        close $FH
    } else {
        puts " File $filename could not be opened"
    }
} else {
    puts " File $filename does not exist"
}
```

Although the above script seems algorithmically correct, it would not work properly as the open command generates a low-level Tcl error (TCL\_ERROR) that would stop the execution of the script in the event the file could not be opened. Later, the Example 3 shows how this script can be improved.

Example 2: Check that the Vivado objects are valid after using the get\_\* commands.

```
proc get_pin_dir { pinName } {
    if {$pinName == {}} {
        puts " Error - no pin name provided"
        return {}
    }
    set pin [get_pins $pinName]
    if {$pin == {}} {
        puts " Error - pin $pinName does not exist"
        return {}
    }
    set direction [get_property DIRECTION $pin]
    return $direction
```

```
}
```

It is especially important to check that Vivado objects do exist after using the `get_*` commands when those objects are used inside other commands (`filter`, `get_*`, ...).

## Handling Tcl Errors

Some built-in Tcl commands (but also user procs) can generate a Tcl error (`TCL_ERROR`) that can stop the execution of the script if the error is not caught by the program. An example is the `file` command that generates a `TCL_ERROR` when the file cannot be opened.

To do safe programming and catch the `TCL_ERROR` condition, Tcl has a built-in `catch` command that returns 1 when an error is caught and otherwise returns 0. The `catch` command can be used on a single command or a set of commands.

The basic syntax of the `catch` command is:

```
catch script [varname]
```

Where the `script` is a single or a set of Tcl commands and `varname` is a variable name in which the message explaining the `TCL_ERROR` is saved.

---

 **Note:** The `varname` argument is optional.

---

The `catch` command is often used as illustrated below:

```
If {[catch script errorstring]} {  
    # A low-level TCL_ERROR happened  
    puts " Error - $errorstring "  
} else {  
    # No TCL_ERROR was generated  
    puts " The code completed successfully "  
}
```

Example 1 can be made safer using the `catch` command to cover the case where the file cannot be opened:

Example 3: Check when a file is opened for read/write (safe version).

```
if {[file exists $filename]} {  
    if {[catch { set FH [open $filename r] } errorstring]} {  
        puts " File $filename could not be opened : $errorstring"  
    }  
}
```

```

} else {
    # The file is opened, do something
    #
    close $FH
}
} else {
    puts " File $filename does not exist"
}

```

A Tcl error can also be user generated using the `error` command. This can be used, for example, to propagate a `TCL_ERROR` that is caught with the `catch` command to the upper level (bubbling). However, the `error` command can be used as well to generate a `TCL_ERROR` when, for example, a corner case is not supported by the script or an unexpected condition has happened in the code.

For example, the proc below returns the file content or generates a `TCL_ERROR` when the file cannot be opened:

```

proc get_file_content { filename } {
    if {[catch {
        set FH [open $filename r]
        set content [read $FH]
        close $FH
    } errorstring]} {
        error " File $filename could not be opened : $errorstring "
    }
    return $content
}

```

The proc `get_file_content` can be called through a `catch` command to catch the potential error:

```

if {[catch { set content [get_file_content ./myreport.rpt] } errorstring]} {
    puts " The following error was generated: $errorstring "
} else {
    puts " The content of the file is: $content "
}

```

Example 2 can also be improved to generate a `TCL_ERROR` when a wrong

condition occurs as shown in Example 4:

Example 4: Check that the Vivado objects are valid. Generate a `TCL_ERROR` otherwise (revised).

```
proc get_pin_dir { pinName } {
    if {$pinName == {}} {
        error " Error - no pin name provided"
    }
    set pin [get_pins $pinName]
    if {$pin == {}} {
        error " Error - pin $pinName does not exist"
    }
    set direction [get_property DIRECTION $pin]
    return $direction
}
```

## Accessing Environment Variables

Tcl provides a convenient way to access the environment variables in a read-only mode through the Tcl global variable `env`. The variable `env` is a Tcl array that is automatically created and initialized at startup inside the Tcl interpreter.

---

 **Note:** After initialization, any change to the `env` variable is not applied to the environment outside of the Tcl interpreter. Similarly, any change to your environment variables done after starting the Tcl interpreter is not reflected by the `env` variable.

---

The keys of the `env` array are the environment variables at the time Vivado Design Suite starts. The keys are case sensitive.

For example:

```
Vivado% puts "The PATH variable is $env(PATH) "
```

To get the list of all the Unix environment variables:

```
Vivado%: set all_env_var [array names env]
```

It is possible to check if an environment variable exists (i.e a key to `env` array exists) by using the `info` command. For example to check for `MYVARNAME`:

```
Vivado% if {[info exists env(MYVARNAME)]} { ... }
```

The env array is a global variable and can therefore be referenced inside a proc after being declared as global.

For example:

```
proc print_env {} {
    global env
    puts " UNIX Environment:"
    foreach var [lsort [array names env]] {
        puts "$var : $env($var)"
    }
}
```

## Calling External Programs

It is possible to call external programs from within Tcl and capture the returned result. Although there is an automated mechanism to send unknown Tcl commands to the OS (Windows/Linux) for execution, it is always recommended to be explicit when calling external programs or commands. This is done using the exec command.

It is important to use the exec command for consistency of results, to make sure that the script works under every host OS (Windows or Linux) and all Vivado modes (Tcl mode, GUI, or batch mode).

The following example (Linux) gets the list of all files and directories under the run directory by calling the ls command.

```
vivado% set result [exec ls]
vivado% foreach element [split $result \n] { ... }
```

The equivalent example on Windows is shown below.

```
vivado% set result [exec cmd /c dir /B]
vivado% foreach element [split $result \n] { ... }
```

It is not recommended to call the ls command without exec as the script could fail in some of the Vivado modes (see [Vivado Integrated Design Environment \(IDE\)/Tcl Modes versus Batch Mode](#)).

The next example executes a Perl script and sends the result to the Tcl

environment. The exec command calls /bin/perl (assuming it matches your environment), which in turn calls the Perl script itself:

```
vivado% set result [exec /bin/perl <path_to>/  
my_perl_script.pl]
```

## Vivado Integrated Design Environment (IDE)/Tcl Modes versus Batch Mode

The Tcl Console that runs under the Vivado Integrated Design Environment (IDE) or Tcl mode (vivado -mode tcl or vivado -mode gui) is slightly different from the one that runs under the batch mode (vivado -mode batch).

This behavior is inherent to Tcl and is not related to the Vivado tool. Literature can be found on the web that explains the underlying reasons. But the consequence is that during an interactive session (Tcl or GUI modes), Vivado runs under tclsh mode. However, in batch mode, Vivado runs in Tcl script mode.

Although in all three modes (Tcl, GUI, and batch) the Tcl Console behaves mostly the same, the Tcl environment is slightly different. One difference is that in batch mode, the unknown commands are not sent to the OS for execution. To make sure that a script works under all the three Vivado modes, it is recommended to explicitly use the exec command to execute external programs.

## Creating Custom Design Rules Checks (DRCs)

The Vivado Design Suite lets you define and use custom design rule checks (DRCs) written in Tcl. When creating custom DRCs be aware of the following:

- The basis of creating a custom DRC is a Tcl checker procedure that gets design objects of interest, or attributes of those design objects, and a checking function that defines the design rule. The Tcl checker procedure is defined in a separate Tcl script that must be loaded into the Vivado Design Suite prior to running `report_drc`. Inside of the Tcl checker procedure, the `create_drcViolation` command is used to identify and flag violations when checking the rule against a design. The `create_drcViolation` command creates a violation object within the in-memory design, with properties that can be reported and further processed in the Vivado Design Suite.
- The Tcl checker procedure is associated to a user-defined DRC that is created using the `create_drcCheck` command. Call this rule by name when you run the `report_drc` command.
- Optionally, you can elect to create a DRC rule deck by using the `create_drcRuleDeck` command. A DRC rule deck is a collection of DRCs. A mix of both user-created and predefined DRCs can be added to the user-created DRC rule deck by using the `add_drcChecks` command.
- Checking the design against the design rules is performed by running the `report_drc` command. When running `report_drc`, you can specify to run either a DRC rule deck, user-defined design rule checks, or predefined DRCs.

## Creating a Tcl Checker Procedure

The Tcl checker procedure selects the design objects of interest to be checked. It then performs the necessary tests or evaluations of the design objects, and finally returns the results in the form of DRC violation objects that identify the objects associated with the specific error.

The following Tcl script defines the `dataWidthCheck` Tcl checker procedure which checks the width of the `WRITE_B` bus. This Tcl script file must be loaded into the Vivado tools prior to running the `report_drc` command. Refer to [Loading and Running Tcl Scripts](#) for more information on loading the Tcl checker procedure.

```
# This is a simplistic check -- report BRAM cells with
# WRITE_WIDTH_B wider than 36.
proc dataWidthCheck {} {
    # list to hold violations
```

```

set vios {}
# iterate through the objects to be checked
foreach bram [get_cells -hier -filter {PRIMITIVE_SUBGROUP
== bram}] {
    set bwidth [get_property WRITE_WIDTH_B $bram]
    if { $bwidth > 36} {
        # define the message to report when violations are
        found
        set msg "On cell %ELG, WRITE_WIDTH_B is $bwidth"
        set vio [ create_drcViolation -name {RAMW-1} -msg $msg
$bram ]
        lappend vios $vio
    }; # End IF
}; # End FOR
if {[llength $vios] > 0} {
    return -code error $vios
} else {
    return {}
}; # End IF
} ; # End PROC

```

As you can see from the proc definition, the `dataWidthCheck` procedure accepts no arguments and can find everything it needs from the design. It creates an empty list variable, `$vios`, to store the violation objects returned by the `create_drcViolation` command.

The `dataWidthCheck` procedure iterates through all of the BRAMs in the design, and performs an evaluation of the `WRITE_WIDTH_B` property on each of those cells. If the `WRITE_WIDTH_B` of the block RAM cell exceeds a width of 36, a DRC violation is created with a specific message, `$msg`. The message contains a placeholder for the cell `%ELG` and the width of the bus found, `$bwidth`. In the `dataWidthCheck` procedure, the `create_drcViolation` command only returns one object, `$bram`, that maps to the `%ELG` placeholder defined in the message string. The `create_drcViolation` command supports messaging placeholders for netlist objects, clock regions, device sites, and package I/O banks by using their respective keys `%ELG`, `%CRG`, `%SIG`, and `%PBG`.

---

**!! Important:** Both the order and the type of objects passed by `create_drcViolation` must match the `-msg` specification in the `create_drcCheck` command, or the expected substitution does not occur.

---

A violation object is created using the `create_drcViolation` each time the tested block RAM exceeds the allowable width of the `WRITE_WIDTH_B` property. The violation object is given the same name as the associated DRC rule in the Vivado Design Suite. It includes the previously defined messaging string, and identifies the specific object or objects that are involved in violation of the rule. The standard object that the design rule violation can return includes cells, ports, pins, nets, clock regions, device sites, and package I/O banks. The message string from the violation can also pass other information, such as the value of a specific property, to provide as much detail in the DRC report as needed.

If any violations are found, the `dataWidthCheck` proc returns an error code to inform the `report_drc` command of the results of that specific check:

```
return -code error $vios
```

In addition to the error code, the violation objects are returned with the `$vios` variable, which stores a list of violation objects created by the procedure.

## Creating a DRC Check

Once the Tcl checker procedure is defined, you must now define the DRC as part of the DRC reporting system within the Vivado Design Suite. First, you must register the new design rule using the `create_drc_check` command. This command requires you to provide a unique name for the user-defined rule check. This name that must match the name given to the violation created by the Tcl checker procedure. You need to specify this unique name when adding the check to DRC rule decks or when running `report_drc`. In the `dataWidthCheck` Tcl checker procedure above, the `create_drcViolation` command uses the name `RAMW-1`. In addition, the `create_drc_check` command requires you to provide the procedure name of the Tcl checker procedure to be run when the rule is checked. In this case above, the Tcl checker procedure `dataWidthCheck` is provided as the `-rule_body` argument and must be loaded into the Vivado Design Suite prior to running the `report_drc` command.

```
create_drc_check -name {RAMW-1} -hiername {RAMB Checks} \
    -desc {Block RAM Data Width Check} -rule_body
    dataWidthCheck -severity Advisory
```

You can optionally group the DRC into a special category, provide a description of the rule for reporting purposes, and assign a severity. You can define a message to add to the DRC report when violations are encountered. By default, the message created by the `create_drcViolation` command in the Tcl checker procedure is passed upward to the DRC object. In this case, any message defined by `create_drcViolation` is simply passed through to the DRC report. The DRC object features the `is_enabled` property that can be set to TRUE or FALSE using the `set_property` command. When a new rule check is created, the `is_enabled` property is set to TRUE as a default. Set the `is_enabled` property to FALSE to disable the DRC from being used when `report_drc` is run.

## Creating a DRC Rule Deck

You can optionally group multiple related DRC checks that can be run together into a DRC rule deck. To do this, you must first create the DRC rule deck by using the `create_drc_ruledeck` command. Once the DRC rule deck is created, DRCs can be added and removed from the DRC rule deck by using the `add_drc_checks` and `remove_drc_checks` commands. Mixing user-defined checks and predefined checks into a single DRC rule deck is allowed in the Vivado Design Suite. Below is an example of creating a DRC rule deck called `myrules` along with the addition and removal of DRCs from the DRC rule deck.

```
create_drc_ruledeck myrules
add_drc_checks -ruledeck myrules {RAMW-1 RAMW-2 RAMW-3}
remove_drc_checks {RAMW-2} -ruledeck myrules
```

---

 **Note:** If the `is_enabled` property of the DRC is set to FALSE, the DRC does not run as part of the DRC rule deck when running `report_drc`. In some cases, it might be more desirable to disable the DRC than to remove it from the DRC rule deck.

---

## Reporting Custom DRCs

A user-defined DRC can be run individually, with other rules, or as part of a DRC rule deck using the report\_drc command. Below are examples of running the previously defined RAMW-1 rule individually, with other rules, and as part of the previously created DRC rule deck.

```
report_drc -check {RAMW-1}
report_drc -check {RAMW-1 RAMW-2}
report_drc -ruledecks myrules
```

Remember that the is\_enabled property of the rule check must be set to TRUE in order for report\_drc to run the check.

## DRC Explanation Script

There are times when the designer has a DRC rule name or a pattern of DRC rules and wants to get an explanation about what these rules are doing. This can be done by reporting properties on the DRC objects.

The example script below takes as input a pattern matching a set of DRC rule(s) and prints some explanation (severity and description) for each rule. If the pattern does not match any rule then an error message is issued.

```
proc explain_drc { drcs } {
    package require struct::matrix
    set loop_drcs [get_drc_checks $drcs -quiet]
    if {$loop_drcs == {}} {
        puts " Error: $drcs does not match any existing DRC rule"
        return
    }
    struct::matrix drcsm
    drcsm add columns 3
    drcsm add row {DRC_ID SEVERITY DESCRIPTION}
    foreach drc $loop_drcs {
        set description "[get_property DESCRIPTION
[get_drc_checks $drc]]"
        set severity "[get_property SEVERITY [get_drc_checks
$drc]]"
        set key "[get_property NAME [get_drc_checks $drc]]"
        drcsm add row "$key $severity $description"
    }
    puts "[drcsm format 2chan]";
```

```
drcsm destroy  
}
```

There are a number of Tcl packages embedded inside Vivado and this example script uses the `struct::matrix` package to format the summary table.

The following are some sample outputs from the `explain_drc` proc:

```
Vivado% explain_drc CFGBVS-1  
DRC_ID  SEVERITY DESCRIPTION  
CFGBVS-1 Warning Missing CFGBVS and CONFIG_VOLTAGE Design  
Properties  
Vivado% explain_drc CFGBVS-*  
DRC_ID  SEVERITY      DESCRIPTION  
CFGBVS-1 Warning      Missing CFGBVS and CONFIG_VOLTAGE Design  
Properties  
CFGBVS-2 Critical Warning CFGBVS Design Property  
CFGBVS-3 Warning      CONFIG_VOLTAGE Design Property  
CFGBVS-4 Critical Warning CFGBVS and CONFIG_VOLTAGE Design  
Properties  
CFGBVS-5 Critical Warning CONFIG_VOLTAGE Design Property  
CFGBVS-6 Critical Warning CONFIG_VOLTAGE with HP Config Banks  
CFGBVS-7 Warning      CONFIG_VOLTAGE with Config Bank VCC0  
Vivado% explain_drc foo  
Error: foo does not match any existing DRC rule
```

## Manipulating DRCs

DRCs are just like other objects in Tcl and their properties can be changed. Use the following command to list the properties of a DRC Object.

```
Vivado% report_property [get_drc_checks RAMW-1]  
Property      Type   Read-only Visible Value  
ARCHITECTURES string* true    true  
CLASS         string  true    true    drc_check  
DESCRIPTION   string  true    true    Block RAM Data Width  
Check  
GROUP         string  true    true    RAMW  
HIERNAME     string  true    true    RAMB Checks  
IS_ENABLED    bool   false   true    1
```

```
IS_USER_DEFINED bool    true    true    1
MESSAGE      string   true    true
MSG_ID       int     true    true    1
NAME         string   true    true    RAMW-1
SEVERITY     enum    false   true    Advisory
```

---

☞ **Note:** There are two properties of the RAMW-1 DRC check that you can modify. Those are the IS\_ENABLED property and the SEVERITY property. Change the values of these properties on the DRC Check object by using the set\_property command, just like any other object.

---

To disable the RAMW-1 DRC check, issue the Tcl command:

```
Vivado% set_property IS_ENABLED false [get_drc_checks RAMW-1]
```

To increase the severity of the RAMW-1 DRC Check, issue the Tcl command:

```
Vivado% set_property SEVERITY {Critical Warning}
[get_drc_checks RAMW-1]
```

These properties can also be changed on built-in DRC rules. In order to reset the built-in DRC rules to factory defaults, use the following Tcl command:

```
Vivado% reset_drc_check [get_drc_checks]
```

---

⚠ **CAUTION!** Although Vivado allows you to disable and downgrade the severity of the built-in DRC Objects, this practice is highly discouraged as it can cause unpredictable results and could potentially cause permanent damage to the device.

---

For more information on Running DRCs, see the *Vivado Design Suite User Guide: System-Level Design Entry (UG895)*.

## Custom GUI Buttons

In GUI mode, custom buttons can be added to the main toolbar. These buttons can be linked to a Vivado command or user proc and can be defined with or without arguments. Dedicated icons can also be used for the custom buttons. If a button defines arguments, a simple widget

opens up when the button is activated by the user.

Any change to the custom buttons is automatically saved on-disk inside the user area for the Vivado tools version that is modified. These changes are reflected in subsequent calls of the same Vivado tools version. Custom buttons do not need to be re-defined every time Vivado Design Suite is started.

There are two ways to define a custom button:

- Through the GUI: Tools > Custom Commands > Customize Commands.
- Programmatically through a Tcl API.

The following table lists commands of the Tcl API to create or delete custom GUI buttons.

**Table: Tcl APIs for Custom GUI buttons**

Tcl API	Description
create_gui_custom_command	Create a custom GUI button
remove_gui_custom_command	Remove a custom GUI button
get_gui_custom_commands	Get the list of custom GUI buttons
create_gui_custom_command_arg	Create an argument for an existing custom GUI button
remove_gui_custom_command_arg	Remove an argument for an existing custom GUI button
get_gui_custom_command_arg	Get the list of arguments for an existing custom GUI button

A custom button can be defined with or without one or more arguments. After the custom button has been created using `create_gui_custom_command`, each argument must be added with `create_gui_custom_command_arg`.

When a custom button is removed, Vivado Design Suite automatically removes all its arguments. There is no need to manually remove the arguments.

## Create a Custom GUI Button

A custom button is created using the `create_gui_custom_command` command.

The syntax is:

```
create_gui_custom_command -name <arg> [-menu_name <arg>] [-description <arg>]
                                         [-show_on_toolbar] [-run_proc
<arg>]
                                         [-toolbar_icon <arg>] [-command
<arg>]
                                         [-tcl_file <arg>] [-quiet] [-verbose]
```

**Usage:**

Name	Description
-name	Unique name of the command to create.
[-menu_name]	Menu name for the custom command.
[-description]	Display this text for the description of the menu item
	and optionally the toolbar button
[-show_on_toolbar]	Add this command to the toolbar
[-run_proc]	Needed when '-command' and 'tcl_file' options are both specified.
mentioned in	If true, gui button will run command
script mentioned in	'-command' option otherwise source
	'-tcl_file' option
[-toolbar_icon]	The full path to the PNG or JPEG file to display on the
	toolbar button
[-command]	The command to execute
[-tcl_file]	The full path to the Tcl file to source
[-quiet]	Ignore command errors
[-verbose]	Suspend message limits during command execution

The name specified using `-name` must be unique among all the custom

buttons and should not contain any spaces. This name is used to add arguments to the button.

Example 1: Create a custom button calling the proc, myProc:

```
create_gui_custom_command -name "myButton" \
    -menu_name "Do something" \
    -command "myProc" \
    -show_on_toolbar \
    -run_proc true
```

Example 2: Create a custom button to print inside the Tcl Console the clock(s) propagating through the selected object(s):

```
create_gui_custom_command -name "getClock" \
    -menu_name "get_clock" \
    -command {get_clocks -of [get_selected_objects]} \
    -description {This button returns the clocks going through \
    the selected objects} \
    -show_on_toolbar
```

## Remove a Custom GUI Button

A custom button can be removed either directly from the GUI or using the remove\_gui\_custom\_command command.

The syntax is:

```
remove_gui_custom_commands [-quiet] [-verbose] <names>...
Usage:
  Name      Description
  -----
  [-quiet]  Ignore command errors
  [-verbose] Suspend message limits during command execution
  <names>   name of one or more custom commands to remove
```

The name that must be specified is the name defined using create\_gui\_custom\_command -name.

The custom buttons defined in [Create a Custom GUI Button](#) and [Create a Custom GUI Button](#) can be removed using the following commands:

```
remove_gui_custom_command myButton  
remove_gui_custom_command getClock
```

## Add Arguments to a Custom Button

A custom button can have one or more arguments. Arguments are optional. After an argument is specified, a widget opens when the button is activated by the user. Arguments are defined with the command `create_gui_custom_command_arg`.

The syntax is:

```
create_gui_custom_command_arg -command_name <arg> -arg_name  
<arg>  
                                [-default <arg>] [-comment  
<arg>] [-optional]  
                                [-quiet] [-verbose]
```

Usage:

Name	Description
-----	
-command_name	Unique name of the custom command for which an argument is being created.
-arg_name	Unique name of the custom command argument to create.
[-default]	Default value of the custom command argument.
[-comment]	Comment for the custom command argument.
[-optional]	Make the custom command argument optional.
[-quiet]	Ignore command errors
[-verbose]	Suspend message limits during command execution

In the example below, three arguments are created for the button, `myButton`. The last two arguments are optional.

```
create_gui_custom_command -name "myButton" \  
-menu_name "Do something" \  
-command "myProc" \  
-show_on_toolbar \  
-run_proc true  
create_gui_custom_command_arg -command_name "myButton" -  
arg_name "Top_Module" \  
-arg_name "Bottom_Module" \  
-arg_name "Left_Module" \  
-arg_name "Right_Module"
```

```
-default "\[lindex \[find_top\] 0\]"
create_gui_custom_command_arg -command_name "myButton" -
arg_name "Output_Directory"
\
    -default "-output_dir report" -optional
create_gui_custom_command_arg -command_name "myButton" -
arg_name "Force" \
    -default "-force" -optional
```

## Vivado Tcl Store

Vivado Design Suite features the Vivado Tcl Store, a powerful way to deliver and share Tcl code across the AMD community. The Vivado Tcl Store delivers apps (sets of Tcl scripts) and plug-ins that are maintained by the AMD community. Any AMD user can become a contributor. For further information, refer to the Vivado Tcl Store Wiki at <https://github.com/Xilinx/XilinxTclStore/wiki/Xilinx-Tcl-Store-Home>.


### Accessing the Vivado Tcl Store

The Vivado Tcl Store saves information related to the Tcl Store inside your \$HOME/.Xilinx (Linux) or %APPDATA%/Xilinx (Windows) area. The information that is saved enables the tool to keep track of the list of apps that are installed by the user on a per Vivado release basis. These directories are also used to cache the apps that have been refreshed and updated from the online Vivado Tcl Store repository.

### Accessing the Tcl Store GUI


The AMD Tcl Store GUI is accessible under the Vivado Store from the Getting Started page when the tool starts or from the menu bar Tools > Vivado Store.

### **Figure: Accessing Vivado Store**

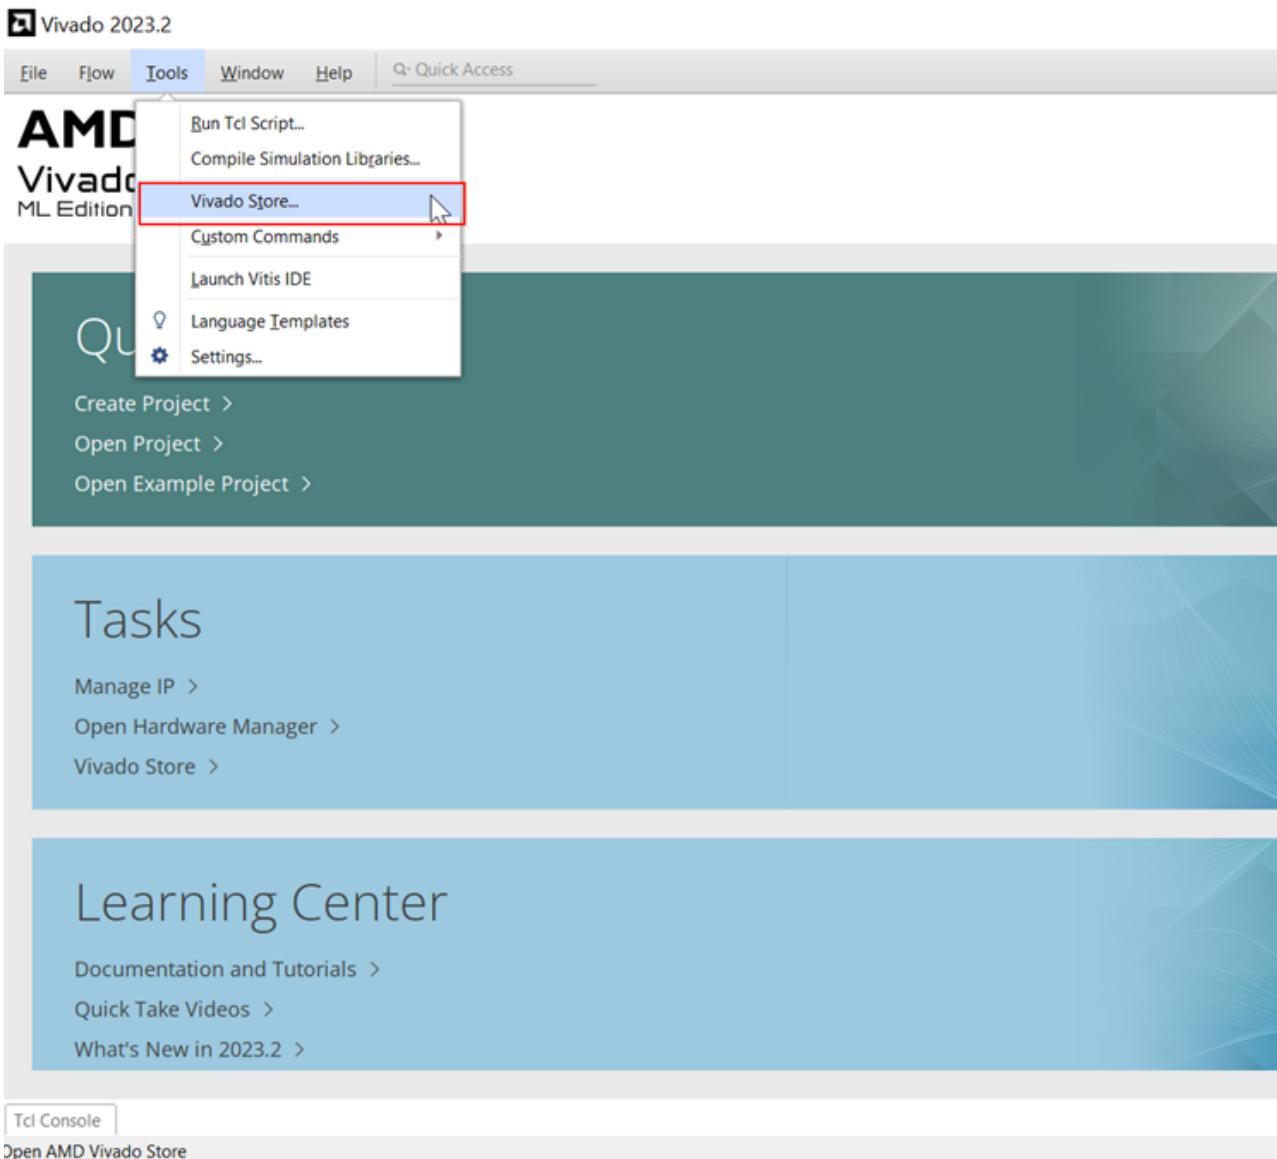


**Note:** The first time you open the Vivado Store GUI, a disclaimer window displays the terms of usage of the Vivado Store.

**Figure: Vivado Store GUI Disclaimer**

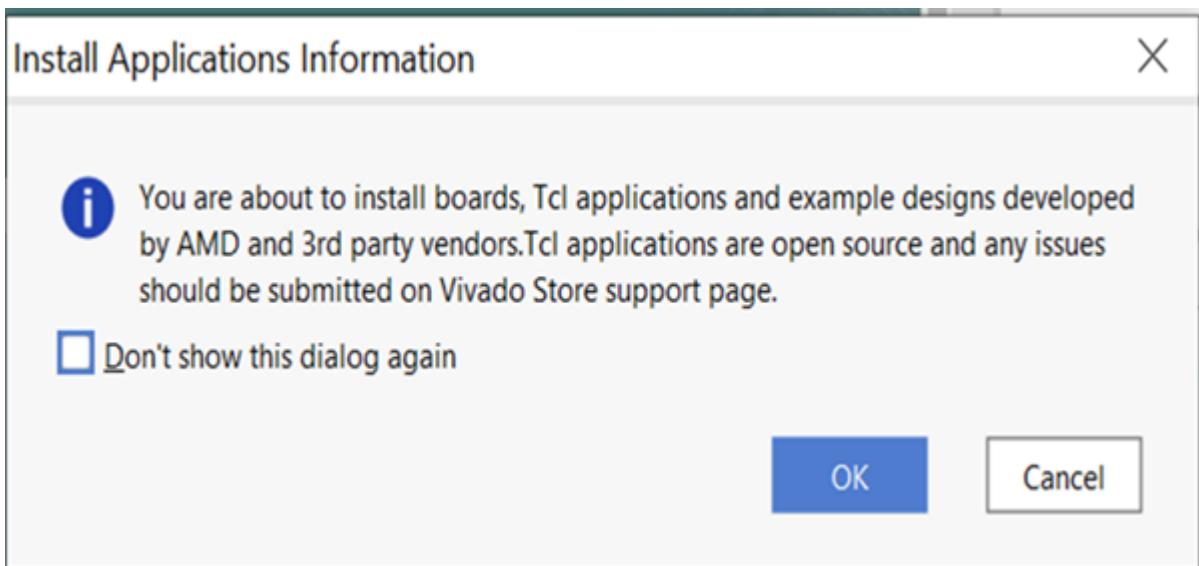

The Tcl Store GUI is divided into two panels.

**Figure: Vivado Store GUI**

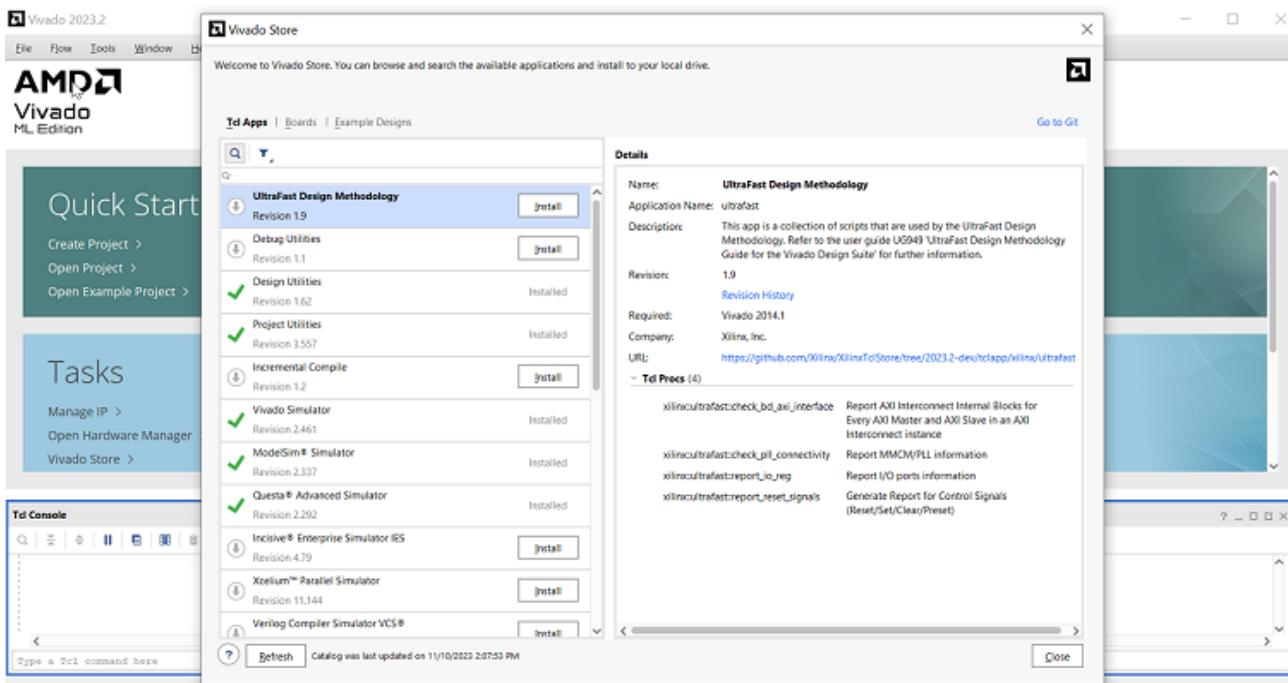

The left panel shows the available apps. The right panel provides information on the app selected in the left panel. The detailed information for each app includes the following:

### Name

Name of the app.

### Description

A short description of the app.

### Revision

The app revision number.

## **Required**

The minimum required Vivado release version for the app to work (Vivado 2014.1 in [Accessing the Tcl Store GUI](#)).

## **Company**

The company name providing and maintaining the app.

## **URL**

A hyperlink to the app page under GitHub. The code for the various procs can be accessed from there.

## **Tcl Procs**


The list of Tcl procs provided with the app. A short summary is provided for each proc.

## Installing an App

To install an app, click the Install button on the right side of the app name. Once installed, the procs defined in the app become available for use. The procs are pulled to a specific namespace (built from the app name and company name) and behave like native Vivado built-in commands. The new Tcl commands are automatically registered to the Help infrastructure.


[Installing an App](#) shows the steps. AMD recommends that you refresh the catalog (Refresh button) before installing an app to make sure that you install the latest version of the app (Step 1). Click Install to install the app (Step 2).

## **Figure: Install Button**

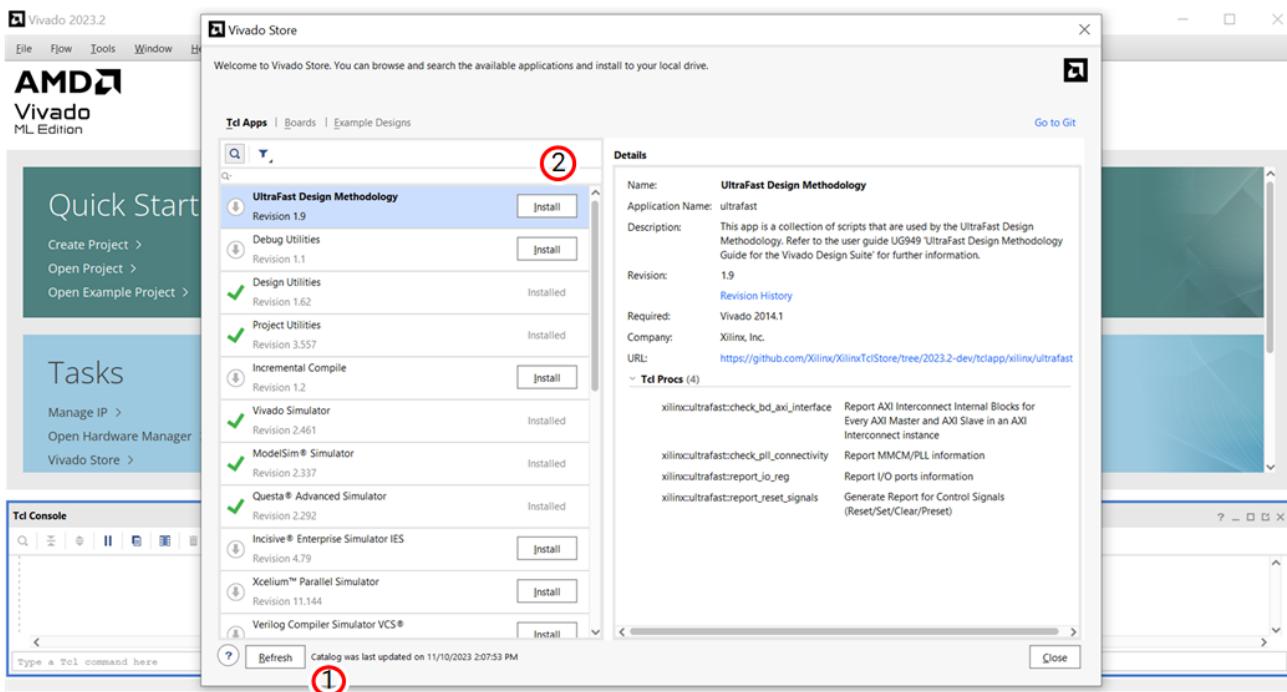

After the app is installed, the proc names become hyperlinks and the Install button is greyed-out. In [Installing an App](#) the designutils app has been installed.

## Figure: designutils App Installed

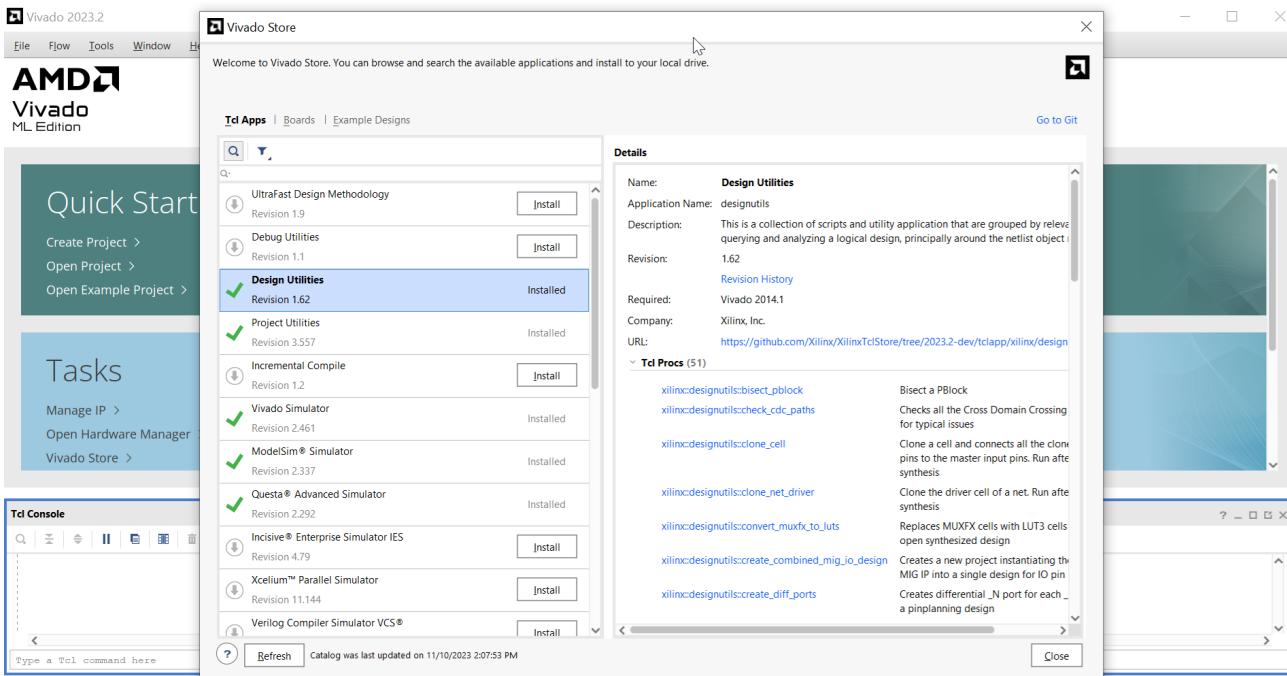


## Getting Help from an Installed App

After an app has been installed, additional Help is available on each proc. The detailed Help for a proc can be accessed in three different ways. You

can select the hyperlinked proc name to open a dialog box that shows the detailed Help. You can also right-click the proc name to open a context window with a Help menu item. Selecting Help opens the embedded Help information for the selected proc. Finally, the detailed Help can also be accessed from the Tcl Console using the full namespace for the proc name along with the -help command line option. The following figure shows the detailed Help for `xilinx::designutils::write_template`.

## Figure: write\_template Help

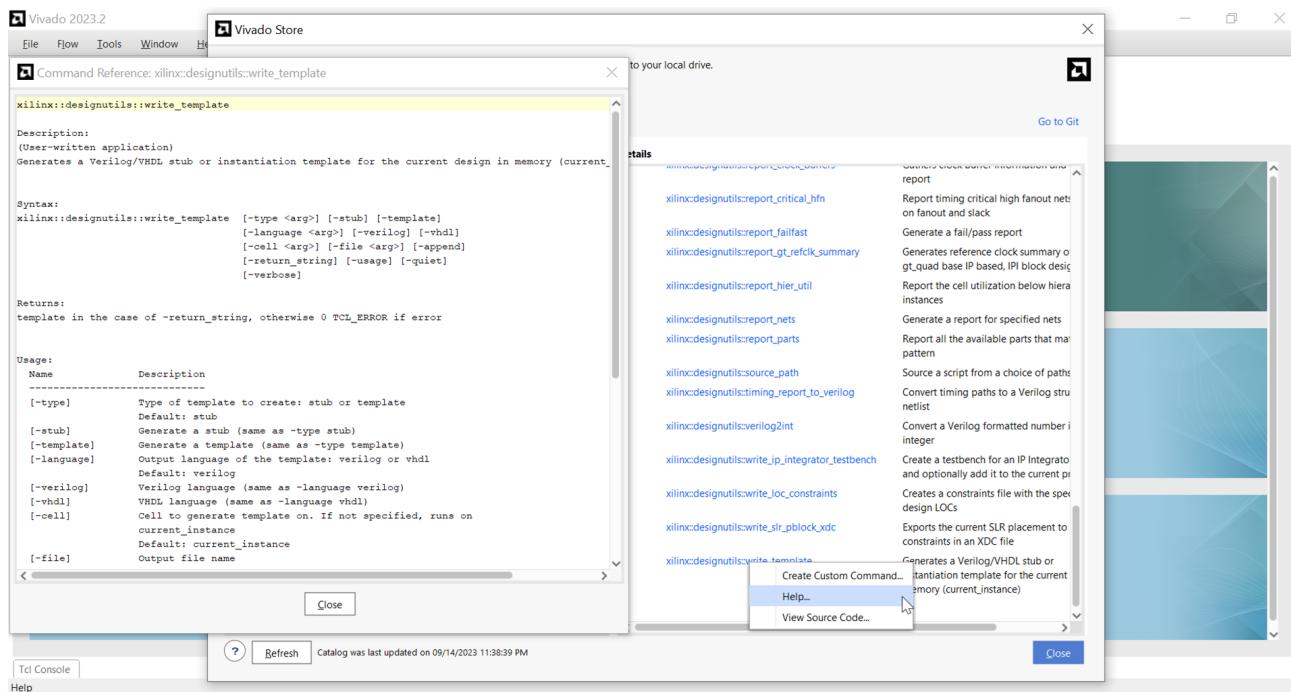

The same Help text can be printed from the Tcl Console with:

```
vivado% xilinx::designutils::write_template -help
```

---

**Note:** The full name qualifier for this proc is `xilinx::designutils::write_template` and not just `write_template`.

---

## Accessing Tcl Procs from an Installed App

Once you have installed an app, all the user procs that belong to this app can be accessed from the command line in two different ways:

- From the `::<company>::<app>` namespace. When Vivado IDE starts, a wrapper is automatically created for all the user procs for each installed app.
- From the app full namespace qualifier `::tclapp::<company>::<app>`, namespace in which the user proc has been defined.

For example, after the `designutils` app has been installed, the user proc, `write_template`, can be accessed with:

```
vivado% ::xilinx::designutils::write_template
vivado% ::tclapp::xilinx::designutils::write_template
```

The benefit of calling the proc from the `::xilinx` namespace over the `::tclapp::xilinx` namespace is that the wrapper that is created by Vivado supports a number of default command line arguments such as `-help`, `-verbose`, and `-quiet`, which are common to all built-in Vivado commands.

For example:

```
Vivado% xilinx::designutils::write_template -help
xilinx::designutils::write_template
Description:
(User-written application)
Generates a Verilog/VHDL stub or instantiation template for
the current design in
memory (current_instance)
Syntax:
xilinx::designutils::write_template [-type <arg>] [-stub] [-
template]
[-language <arg>] [-
verilog] [-vhdl]
[-cell <arg>] [-file
<arg>] [-append]
[-return_string] [-
usage] [-quiet]
[-verbose]
Returns:
template in the case of -return_string, otherwise 0 TCL_ERROR
if error
Usage:
```

Name	Description
<hr/>	
[-type]	Type of template to create: stub or template Default: stub
[-stub]	Generate a stub (same as -type stub)
[-template]	Generate a template (same as -type template)
[-language]	Output language of the template: verilog or vhdl Default: verilog
[-verilog]	Verilog language (same as -language verilog)
[-vhdl]	VHDL language (same as -language vhdl)
[-cell]	Cell to generate template on. If not specified, runs on
	current_instance Default: current_instance
[-file]	Output file name Default: <module>.v or <module>.vhd
[-append]	Append to file
[-return_string]	Return template as string
[-usage]	Usage information
[-quiet]	Ignore command errors
[-verbose]	Suspend message limits during command execution

**Categories:**

**Description:**

Generates a Verilog/VHDL stub or instantiation template for the current design in memory (current\_instance).

This command must be run on a synthesized or implemented design.


**Example:**

```
::xilinx::designutils::write_template -verilog -return_string
```

## Accessing the Source Code

There are two ways to access the source code for an app or a particular proc. The Details pane includes a URL link to GitHub. Clicking this link opens the default browser directly to the app page inside GitHub. The source code of individual procs can be accessed from this page.


## Figure: Hyperlink to GitHub App Page

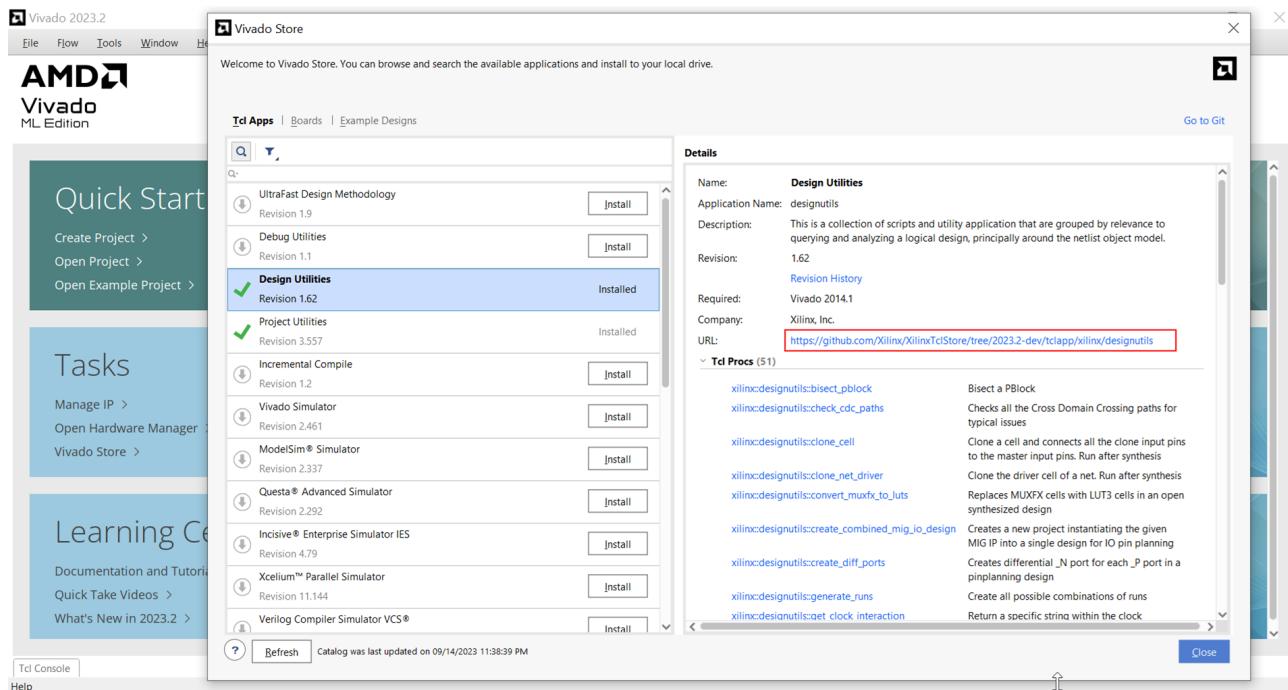

After an app has been installed, the proc names become hyperlinks. To view the source code, click the proc name, and select View Source Code.

**Note:** The Tcl Store does not track the procs dependencies. Only the content of the selected proc is displayed in the source window, not dependent procs. The full app code can be browsed from GitHub by following the app's URL.


## Figure: Proc Source Code

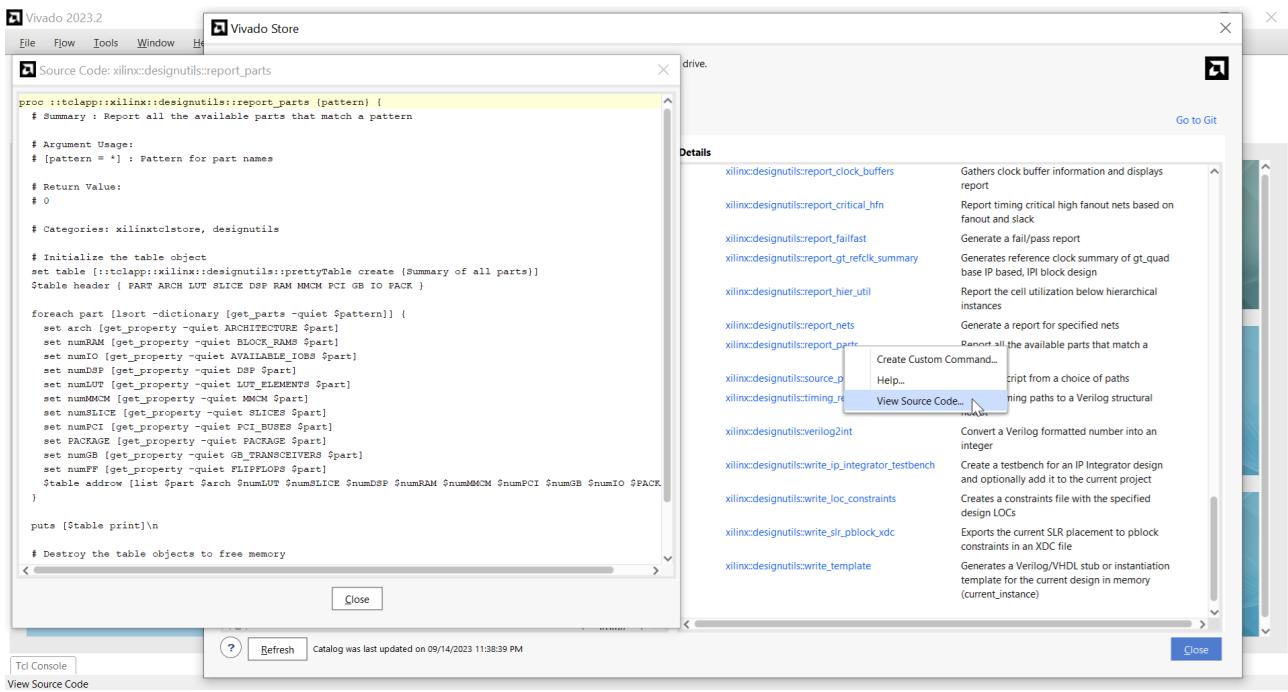

## Searching the Tcl Store

To search through the Tcl Store, use the embedded search bar located above the list of apps. The search applies on the proc names and proc summaries. The list of apps is reduced to those having one or more matches. After an app is selected, the matching areas are highlighted in white and non-matching ones are grayed out.


## Figure: Search Bar

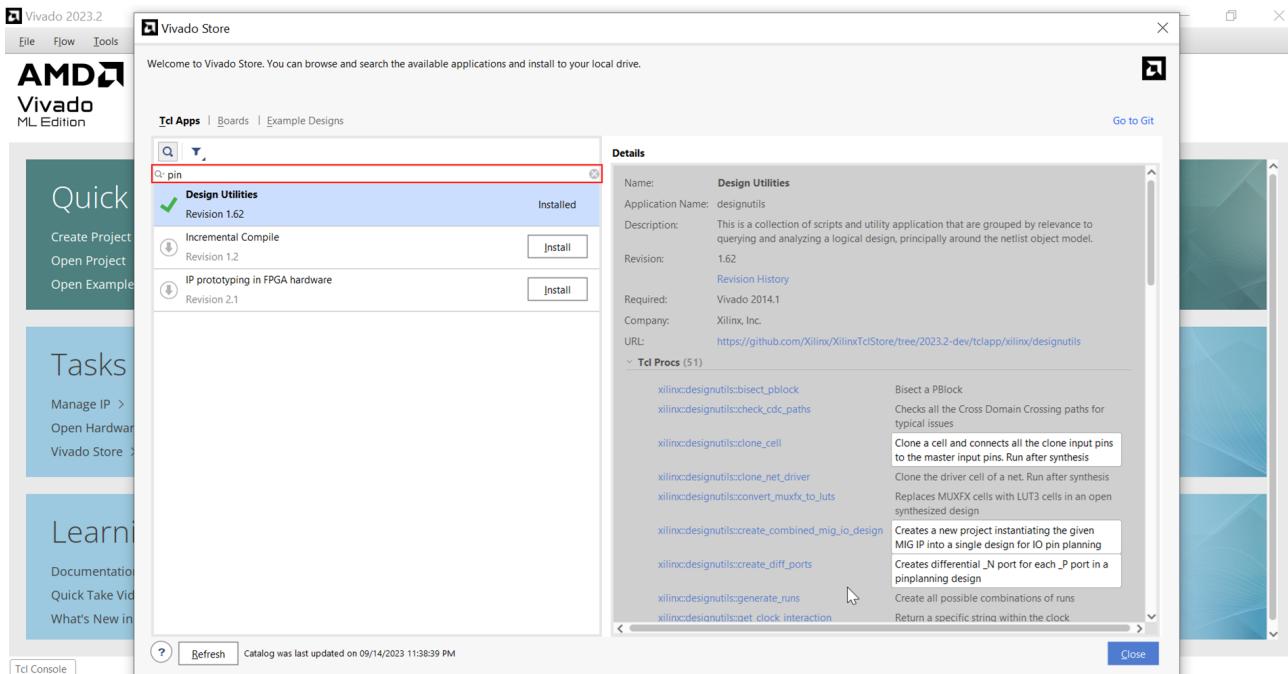

## Vivado Tcl Store Support

To report an issue for a particular app or proc, click the Go to Git link on the top-right of the Tcl Store GUI. Clicking this link opens the default browser directly to the Tcl Store support page inside GitHub. The GitHub Support page provides additional information for filing an issue.

### Figure: Hyperlink to GitHub Support Page

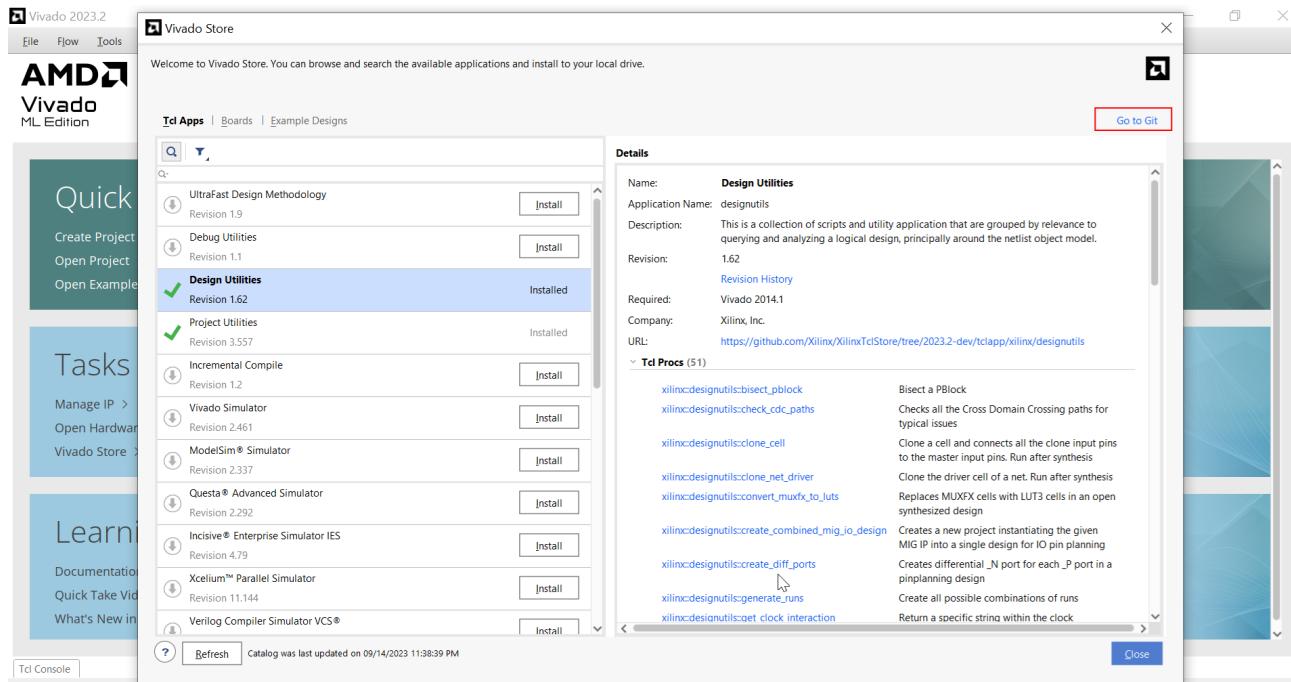


### Refreshing the Catalog

Apps are released to GitHub asynchronous to the Vivado Design Suite releases. Refreshing the catalog provides access to the latest version of an app.

Refresh the catalog by selecting the Refresh button at bottom left of the Vivado Tcl Store window (Step 1). This action queries the online git repository for the latest information of all the apps and opens a dialog (Step 2). If an app is then installed, the Tcl Store mechanism automatically downloads any newer content from the online repository.


### Figure: Refreshing the Catalog

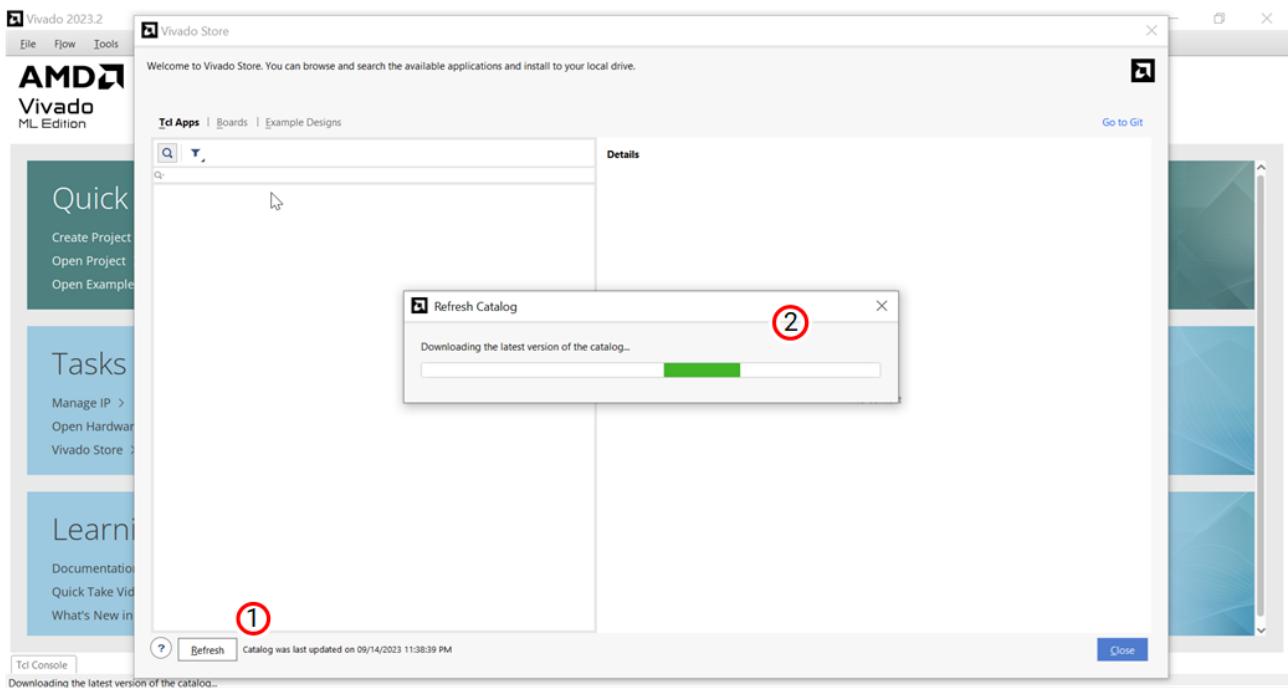

## Updating an App

After the catalog has been refreshed, the GUI notifies the user of any available updates for the apps from the online repository. In the previous steps, the projutils app version 3.228 is installed. After refreshing the catalog, a What's New hyperlink appears to notify you that a newer version is available. If you select the What's New hyperlink, a notification dialog opens to confirm the newest version available for the app, which is 3.230 in the Updating an App figure below.

**Figure: Confirming the App Version**

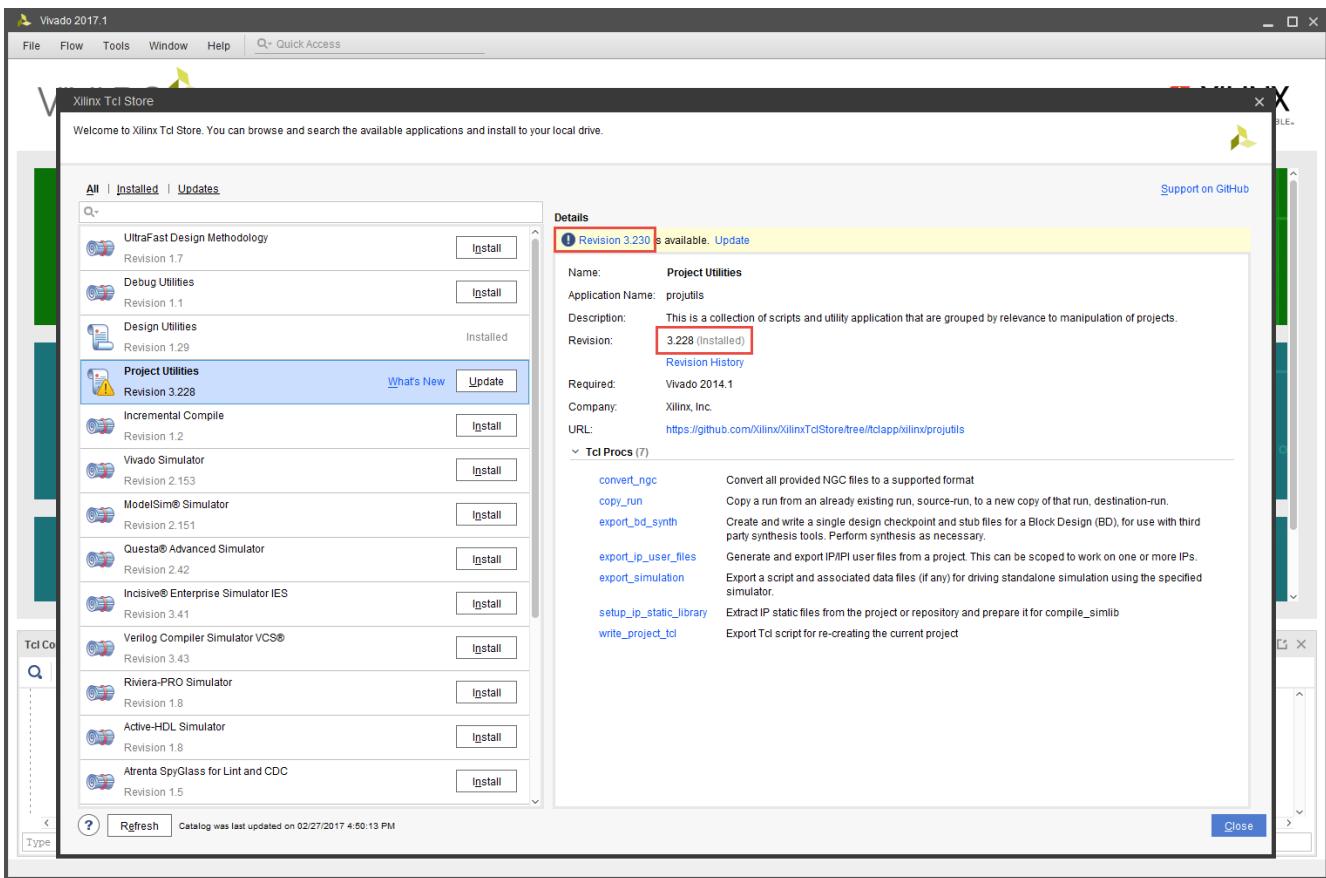

This is a notification that the app is not updated yet. The version of the projutils app remains 3.228 until you click the Update button.


---

**Note:** It is not possible to revert an app to a previous version.

---


To update the app to the newest version, click the Update button (Step 1) and a dialog window opens to confirm the update (Step 2) as shown in the following figure.

## Figure: Updating the App

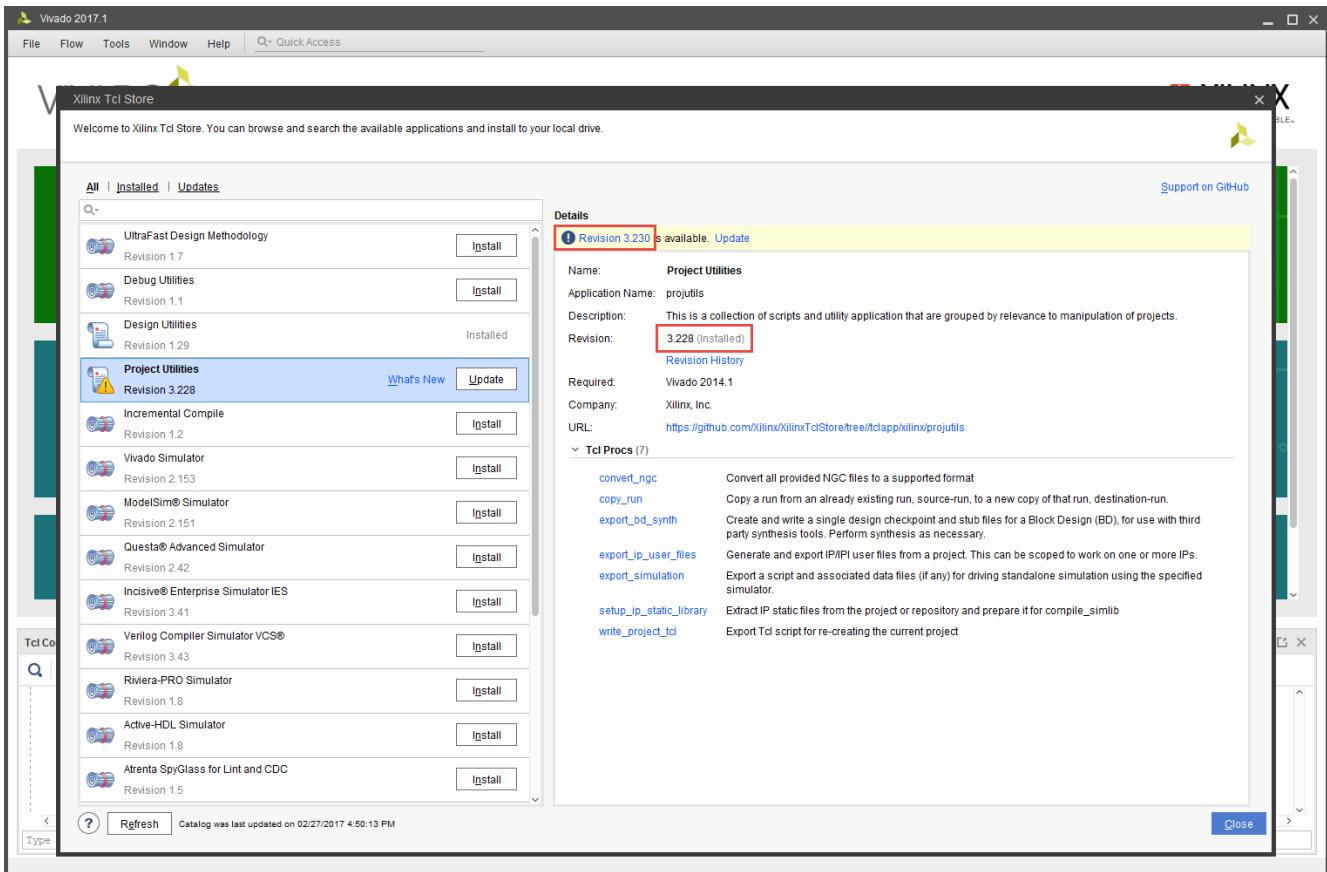

After the update is completed, the installed version of projutils is upgraded to the latest version.


## Figure: Confirming the Update

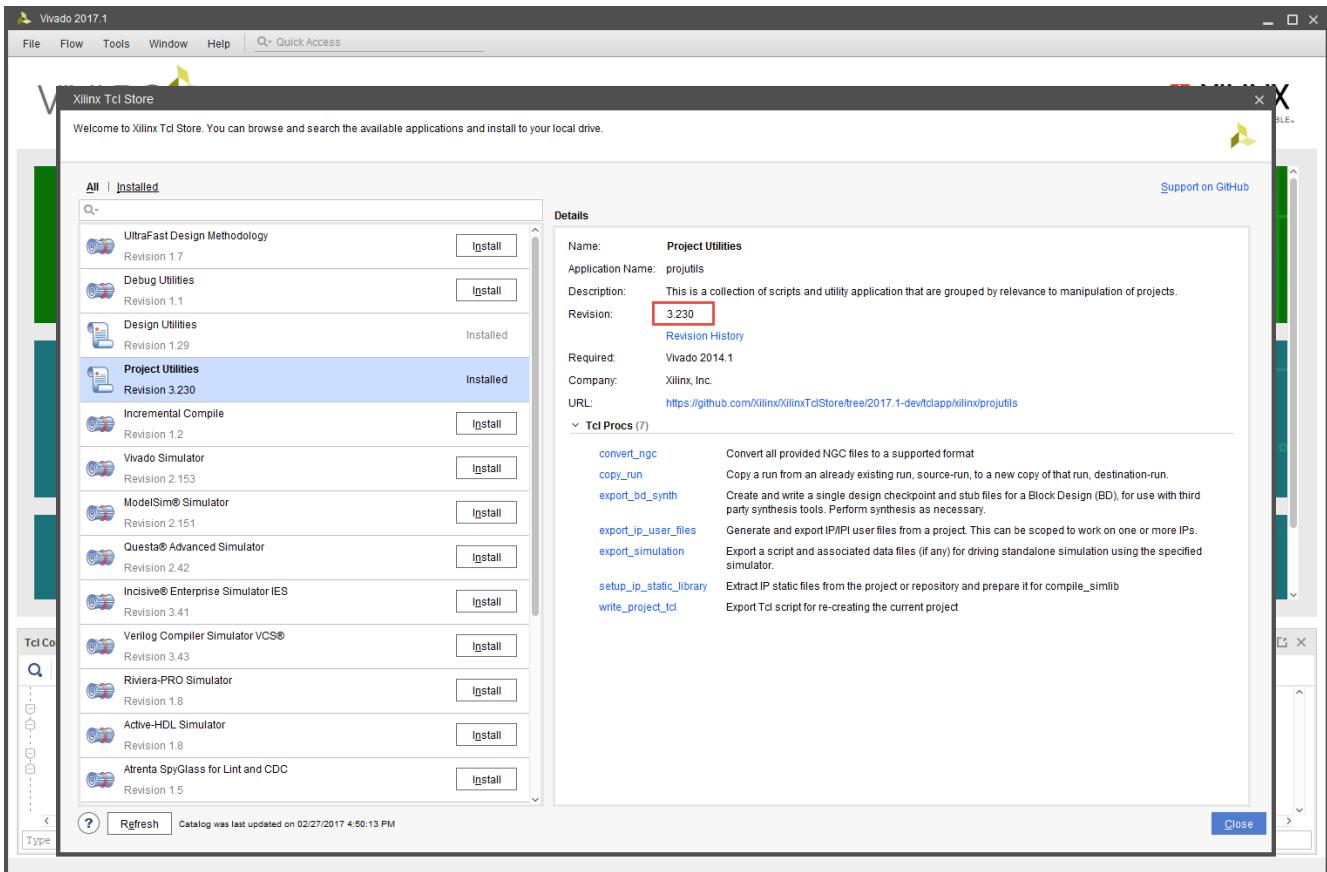

## Uninstalling an App

To uninstall an app, select the app in the left panel of the GUI. Then in the right panel, at the bottom of the Details section, click the Uninstall Application hyperlink (Step 1). A dialog window opens to confirm the uninstall (Step 2).

## Figure: Uninstalling the App

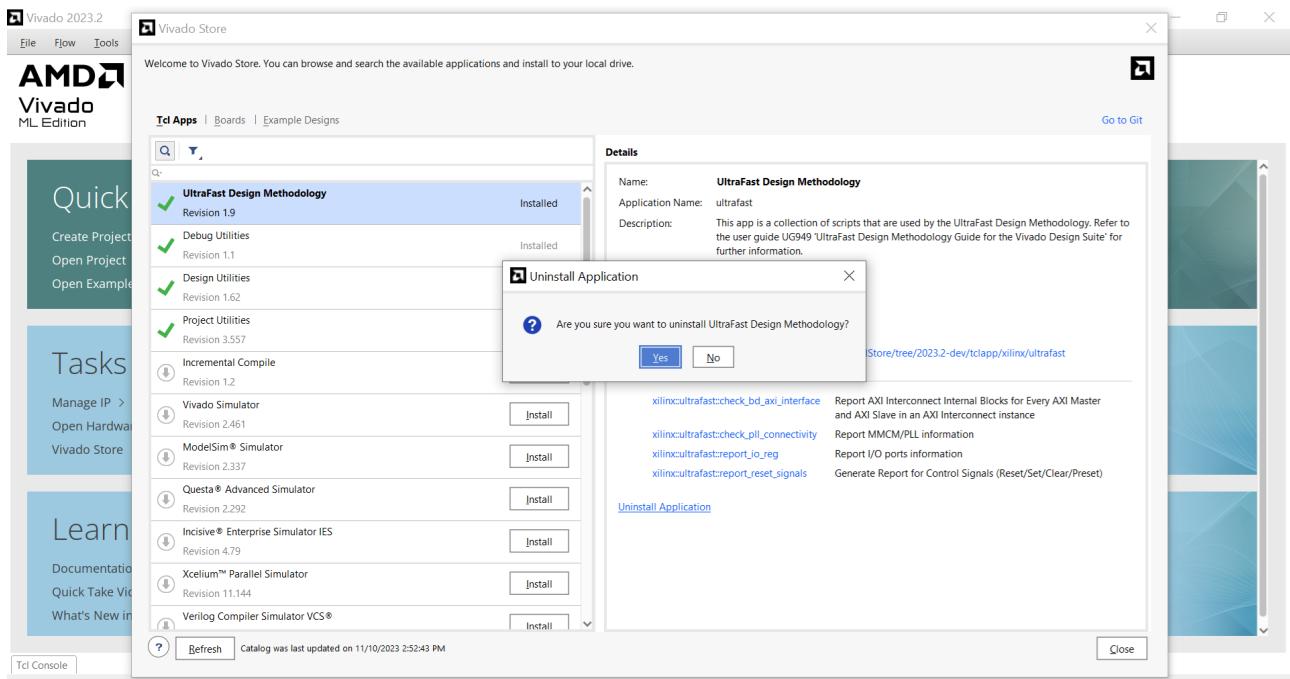

After an app is uninstalled, the procs provided by the app are no longer available inside the Tcl Console.


## Disabling Catalog Refresh

For some companies that are concerned about applications querying information outside the firewall, there is a feature to disable refreshing of the repository. This prevents Vivado from querying the app catalog. In this case users are limited to the current static version of the repo. To disable refresh capability, the following Tcl param can be set in the startup Vivado\_init.tcl script for all Vivado sessions:

```
vivado% set_param tclapp.enableGitAccess 0
```

After the catalog refresh is disabled, the Refresh button is replaced by the message shown in [Disabling Catalog Refresh: Internet access is not available](#).

## Figure: Disabling Refresh

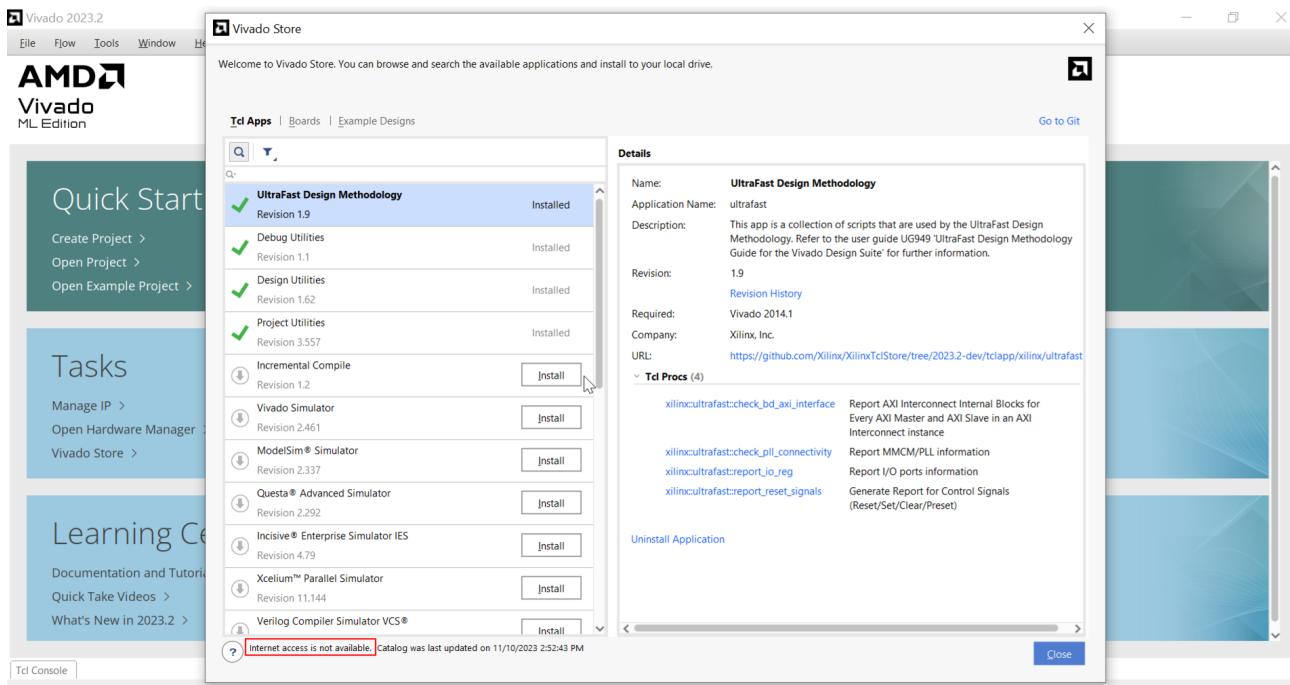

## Coding Guidelines

The Vivado Tcl Store is an open source repository that allows internal and external users to contribute Tcl scripts for use by the AMD community. To prevent redundant efforts and ensure consistency, a gatekeeping committee reviews requests from contributors. Refer to the online Wiki for further information on this process (<https://github.com/Xilinx/XilinxTclStore/wiki/Xilinx-Tcl-Store-Home>).

This section reviews the various coding guidelines that a Tcl script must follow before being added to the Vivado Tcl Store. Those guidelines ensure, for instance, that the script is compliant with the underlying Vivado Tcl Store mechanism or that there is no name collision between proc names and variables across all the apps and Tcl scripts. However, this section does not cover the process you must follow to contribute to the Tcl Store. The online Wiki covers that aspect.

The Vivado Tcl Store includes many Tcl scripts that can be used as reference and as example code. In addition, a template app that can be found under:

```
<VIVADO_INSTALL>/data/XilinxTclStore/tclapp/mycompany/
template/*
```

This template illustrates the directory structure that a new app must follow along with sample scripts. This section uses the following script as example code and reference:

```
<VIVADO_INSTALL>/data/XilinxTclStore/tclapp/mycompany/  
template/myscript1.tcl
```

The example code in this section assumes that the app name is template and that the app is provided and maintained by a company named mycompany.

## Terminology

- A user proc is referred to in this guide as a proc that is expected to be executed by the user.
- A helper proc is a proc that can be used behind the scenes by a user proc to perform a task. However, a helper proc is not expected to be directly executed by the user. Helper procs are not included in the Help system.

## Vivado Package

Each app requires a minimum Vivado version to work. The app can check this by requiring a minimum Vivado package version number inside the Tcl code. The Vivado package name follows the format 1.<release>. For example: 1.2023.1, 1.2023.2 and so forth.

If the app requires, for instance, Vivado 2023.1 to work, the following code should be added at the very top of the script:

```
package require Vivado 1.2023.1
```

If the app depends on some functionalities added, for instance, to Vivado 2023.2, then the following code should be used instead:

```
package require Vivado 1.2023.2
```

The required Vivado package should be the minimum Vivado release that works with the app. This means that the Tcl scripts should not update the Vivado package that is required unless this is necessary, for instance, if the app would be enhanced to support functionalities that are delivered with the new release of Vivado.

## App Namespace

Inside the Vivado Tcl Store, a Tcl script belongs to an app, and an app (for example, template) is provided by a company (for example, mycompany). An app is an organizational container that offers some type of functionality. To avoid naming collision, each app has its own namespace. The full namespace qualifier for an app is:

```
::tclapp::<company>::<app>
```

or

```
::tclapp::mycompany::template
```

See the examples below:

```
namespace eval ::tclapp::mycompany::template {namespace  
    export my_command1  
}  
proc ::tclapp::mycompany::template::my_command1 { args } {  
}
```

The above code creates the proc `my_command1` under the namespace `::tclapp::mycompany::template`. Since `my_command1` is expected to be executed by the user, it needs to be exported out of the app namespace. That is done with namespace `export my_command1`.

## User Procs and Helper Procs

A Tcl script can define multiple user procs. A user proc is a Tcl proc (that is, a command) expected to be executed by the user. As stated previously, all the user procs need to be exported from the namespace of the app.

In addition to user procs, a Tcl script can define some helper procs. Helper procs are only used by the user procs and should not be exposed to the user. As a result, helper procs should not be exported from the namespace. Exporting a proc from the namespace is the only way to specify to the system which of the procs should be exposed to the user through the command line interface (scripting and/or Tcl Console).

When a user proc uses helper procs, it is recommended to create a sub-namespace under the app and move the user proc and helper procs below it. Doing this ensures that there is no name collision between all

the helper procs within the app. It is especially important as the app grows in size and more scripts are added along with their own helper procs.

The code below illustrates the recommended structure for the Tcl code. The user proc still exists directly under the app's namespace, but it is just a wrapper used to call the original proc that has been moved under the sub-namespace, `::tclapp::mycompany::template::my_command1`.

```
namespace eval ::tclapp::mycompany::template {
    namespace export my_command1
}
proc ::tclapp::mycompany::template::my_command1 { args } {
    # Calling the original code moved under the sub-namespace
    uplevel [concat
        ::tclapp::mycompany::template::my_command1::my_command1
        $args]
}
eval [list namespace eval
    ::tclapp::mycompany::template::my_command1 {
} ]
proc
    ::tclapp::mycompany::template::my_command1::my_command1 {
    args } {
    # Here is the code of the original proc
}
proc ::tclapp::mycompany::template::my_command1::helper1 {
    args } {
    # Here is the code of the helper proc
}
```

---

 **Note:** The sub-namespace

`::tclapp::mycompany::template::my_command1` needs to be created prior to defining the procs inside. The syntax to create the sub-namespace must be `eval [list namespace eval ::tclapp::mycompany::template::my_command1 {}]` to prevent an error message from the linter.

---

 **Note:** To make the code easier to read, the above code does not include the mandatory meta-comments that are discussed later in this section.

---

## Install and Uninstall Hook Procs

Each app can have an `install` and `uninstall` proc. After they are defined, the procs are recognized by the Tcl Store and automatically called in specific situations:

- The `install` proc is automatically called when the app is installed. This is the first proc called by the Tcl Store during the install process. After the app has been installed, the `install` proc is no longer called. During the subsequent start of Vivado tools, the `install` proc is not called because the app is only loaded.
- The `uninstall` proc is automatically called when the app is uninstalled. This is the last proc called by the Tcl Store during the uninstall process.

The name of the `install` proc is

`::tclapp::<company>::<app>::install` and the name of the `uninstall` proc is `::tclapp::<company>::<app>::uninstall`.

For example:

```
::tclapp::mycompany::template::install  
::tclapp::mycompany::template::uninstall
```

The `install` and `uninstall` procs can be used to handle, for example, a custom GUI button. The button can be installed by the `install` proc and removed by the `uninstall` proc. Multiple custom GUI buttons can be associated with an app. After a button is installed, it is available through all subsequent calls of the same Vivado tools version, until the app is uninstalled. The `install` and `uninstall` procs are optional. If the app does not use the `install` and `uninstall` procs, these procs can either be left undefined or defined with an empty body.

Below is an example of empty procs:

```
proc ::tclapp::mycompany::template::install { args } {  
    # Summary :  
    # Argument Usage:  
    # Return Value:  
    # Here is the code of the install proc  
    # For example, a GUI custom button could be added  
}
```

```

proc ::tclapp::mycompany::template::uninstall { args } {
    # Summary :
    # Argument Usage:
    # Return Value:
    # Here is the code of the uninstall proc
    # For example, the GUI custom button added by the install
    proc should be removed
}

```

The example procs below reference a custom GUI button:

```

proc ::tclapp::mycompany::template::install { args } {
    # Summary :
    # Argument Usage:
    # Return Value:
    ## Add Vivado GUI button for the app
    if { [lsearch [get_gui_custom_commands] myButton] >= 0 } {
        puts "INFO: Vivado GUI button for the app is already
installed. Exiting ..."
        return -code ok
    }
    puts "INFO: Adding Vivado GUI button for the app"
    create_gui_custom_command -name "myButton" \
    -menu_name "Do something" \
    -command "::tclapp::mycompany::template::my_command1" \
    -show_on_toolbar \
    -run_proc true
    create_gui_custom_command_arg -command_name "myButton" -
    arg_name "Top_Module"
    -default "\[lindex \[find_top\] 0\]"
    create_gui_custom_command_arg -command_name "myButton" -
    arg_name
    "Output_Directory" -default "-output_dir report" -optional
    create_gui_custom_command_arg -command_name "myButton" -
    arg_name "Force" -default
    "-force" -optional
    return -code ok
}
proc ::tclapp::mycompany::template::uninstall { args } {
    # Summary :
    # Argument Usage:

```

```

# Return Value:
if { [lsearch [get_gui_custom_commands] myButton] >= 0 } {
    puts "INFO: Vivado GUI button for this app is removed."
    remove_gui_custom_commands "myButton"
} else {
    puts "INFO: Vivado GUI button for this app is not
installed."
}
return -code ok
}

```

## Sharing Variables

The golden rule regarding variables is that global variables are forbidden. The Vivado Tcl Store linter checks for global variables inside the scripts and generates an error message if any global variable is defined. If some variables need to be shared within procs of an app, then they should be declared inside the namespace. This is done by creating the variables with the keyword `variable` inside the namespace. Such variables can be used like global variables, but only within the namespace.

The code below creates the variable `verbose` that can be shared within all the procs that belong to the same namespace. The variable is initialized to 0:

```

namespace eval ::tclapp::mycompany::template {
    variable verbose 0
}

```

To access the variable inside a proc, the variable should be declared with the keyword `variable` inside the proc.

For example:

```

proc
::tclapp::mycompany::template::::my_command1::my_command1 {
args } {
    variable verbose
    # The variable verbose can be accessed here
    set verbose 1
}

```

```
proc ::tclapp::mycompany::template::my_command1::helper1 {  
    args } {  
        variable verbose  
        # The variable verbose can be accessed here  
        if {$verbose} {  
            ..  
        }  
    }  
}
```

---

☞ **Note:** The variable verbose can also be accessed from any namespace (including the global namespace) by using the full namespace qualifier. For example:

---

```
set ::tclapp::mycompany::template::verbose 1
```

## Meta-Comments

All the procs inside the Tcl scripts must include some mandatory meta-comments. This applies to user procs (exported out of the namespace) and helper procs. The Vivado Tcl Store linter generates error messages if the meta-comments are missing. The meta-comments for all the exported procs must have complete information. The helper procs however can have empty meta-comments, but the meta-comments must be declared.

The meta-comments provide information to the system such as a short description of what the procs are doing, some category information and the list of the command line options supported by the procs. The meta-comments must be included between the proc definition and before the first line of code. All of the meta-comments are mandatory.

The list of mandatory meta-comments is as follows:

### Summary

Summary of what the proc is doing. This can be a multi-line summary. The summary is displayed inside the GUI as the proc short description.

### Argument Usage

List of command line arguments in the proc. This meta-comment is used to build the Help system. Another section in this document describes the supported format.

## Return Value

Use this meta-comment to specify the possible return values for the proc. This meta-comment is used to build the Help system.

## Categories

List of categories the app belongs to. Use this meta-comment to specify which categories in the Vivado Help system your app should be listed under. In this meta-comment, "Categories :" should be followed by a comma-separated list. By convention, the first category listed should always be xilinxclstore followed by the app name.

Below is an example of meta-comments needed for a user proc.

```
proc ::tclapp::mycompany::template::my_command1 { args } {
    # Summary: Multi-lines summary of
    # what the proc is doing
    # Argument Usage:
    # [-verbose]: Verbose mode
    # [-file <arg>]: Report file name
    # [-append]: Append to file
    # [-return_string]: Return report as string
    # [-usage]: Usage information
    # Return Value:
    # return report if -return_string is used, otherwise 0. If
    any error occur TCL_ERROR
    is returned
    # Categories: xilinxclstore, template
    # The code for the proc starts below
    ...
}
```

---

☞ **Note:** The detailed meta-comments must be included in the user proc being exported out of the namespace, not the proc my\_command1 that was created in the sub-namespace with its helper proc.

---

Below is an example of meta-comment for a helper proc. All the meta-comments are defined although they are empty:

```
proc ::tclapp::mycompany::template::my_command1::lshift
{inputlist} {
    # Summary :
```

```

# Argument Usage:
# Return Value:
# Categories:
# The code starts below
...
}

}

```

To summarize, the rule is that all Tcl procs inside the scripts must include all the meta-comments. However, on the user procs exported from the namespace need to have detailed information.

### Meta-Comment for Command Line Arguments

The user proc's command line arguments must be described with the meta-comment `Argument Usage` inside the user procs. This meta-comment is used by the Help system to generate the message when `<command> -help` is executed by the user or when the proc help is displayed in the GUI. For example:

```

# Argument Usage:
# [-verbose]: Verbose mode
# [-file <arg>]: Report file name
# [-append]: Append to file
# [-return_string]: Return report as string
# [-usage]: Usage information

```

The above meta-comment `Argument Usage` generates the following message from the Help system:

#### Syntax:

```
xilinx::designutils::write_template [-verbose] [-file <arg>]
[-append]
[-return_string] [-
usage] [-quiet]
```

#### Usage:

Name	Description
<code>-verbose</code>	Verbose mode Default: 0
<code>-file</code>	Report file name Default: None

```
[ -append]      Append to file
                  Default: 0
[ -return_string] Return report as string
                  Default: 0
[ -usage]        Usage information
                  Default: 0
[ -quiet]        Ignore command errors
```

It is important to keep in mind that the meta-comment Argument Usage is not a preprocessing of the command line argument by Vivado before calling the Tcl proc. It is only used by the Help system. The Tcl code of the proc has to handle the complete processing of the command line arguments.

### User Procs without Command Line Argument

If the user proc does not provide any command line arguments, the meta-comment Argument Usage, although mandatory, must be left empty. For example:

```
proc ::tclapp::mycompany::template::my_command2 {} {
    # Summary : A one line summary of what this proc does
    # Argument Usage:
    # Return Value:
    # TCL_OK is returned with result set to a string
    # Categories: xilinxxtlstore, template
    ...
}
```

### User Procs with Command Line Argument

Like any Tcl proc, the arguments definition of the user procs can be either position-based or accept a variable list of arguments through the args variable.

```
proc ::tclapp::mycompany::template::my_command2 { arg1
{optional1 ,} } {
    ...
}
```

or,

```
proc ::tclapp::mycompany::template::my_command2 { args } {  
    ...  
}
```

In both cases, it is up to the developer to define the meta-comment Argument Usage to reflect the list of command line arguments accepted by the proc. The system does not check the consistency between the list of arguments from the meta-comment Argument Usage with the actual arguments definition.

Because the meta-comment Argument Usage is used to build the Help message, whatever above form is used for the proc to pass argument, the meta-comment must be updated accordingly. For example:

```
proc ::tclapp::mycompany::template::my_command2 { arg1  
{optional1 ,} } {  
    # Summary : A one line summary of what this proc does  
    # Argument Usage:  
    # arg1 : A one line summary of this argument  
    # [optional1=,] : A one line summary of this argument  
    # Return Value:  
    # TCL_OK is returned with result set to a string  
    # Categories: xilinxxtclstore, template  
    ...  
}
```

or,

```
proc ::tclapp::mycompany::template::my_command2 { args } {  
    # Summary : A one line summary of what this proc does  
    # Argument Usage:  
    # arg1 : A one line summary of this argument  
    # [optional1=,] : A one line summary of this argument  
    # Return Value:  
    # TCL_OK is returned with result set to a string  
    # Categories: xilinxxtclstore, template  
    ...  
}
```

---

 **Note:** Using args should always be preferred whenever possible over

using position-based arguments. The args method provides the best user experience as the list and order of the command line arguments has no restriction. If the proc supports only one or two command arguments then the position-based can be still used, but is not as user-friendly because the arguments are ordered and the user does not know in which order the arguments should be passed to the proc (information not provided by the Help system).

---

## Meta-Comment Argument Usage

This is the most complex of the meta-comments. There should be one line for each mandatory or optional argument supported by your proc. Optional arguments should be enclosed within []. Arguments that are accompanied by a value must be followed by the literal text '<arg>' (without quotes), indicating to the *user* where the value should be placed. The summary should explain what are the valid values that a *user* could use. You can also specify a default value, which is a value that is assumed if the *user* does not specify the given optional argument. You can also have optional arguments that do not take any value (these are often referred to as "flags"). A flag's presence on the command line implies a value of true, indicating that some optional action should be taken by the app. An exception to this rule is if the name of the flag is prefixed with "no\_" (for example, -no\_cleanup), in which case a value of false is implied, indicating that the app does not take some action, which by default it normally performs.

You can also specify positional arguments. A positional argument is one for which a value is specified and that has no corresponding flag (for example, -arg1).

For example, the following meta-comment:

```
# Argument Usage:  
# timingPath : mandatory name  
# [-append]: optional flag  
# -cell <arg>: mandatory argument with no default value  
# [-template <arg> = stub]: optional argument with a  
default value. The default  
value is: stub
```

Results in the following Help message:

Syntax:

```
mycompany::template::mycommand [-append] -cell <arg> [-  
template <arg>]  
                                [-quiet] [-verbose]
```

<timingPath> <-name>

Returns:

template in the case of -return\_string, otherwise 0 TCL\_ERROR  
if error

Usage:

Name	Description
-----	
[-append]	optional flag Default: 0
-cell	mandatory argument with no default value
[-template]	optional argument with a default value. The default value is: stub Default: stub
[-quiet]	Ignore command errors
[-verbose]	Suspend message limits during command execution
<timingPath>	mandatory

The actual processing of the command line arguments has to be  
programmatically done inside the proc.

---

 **Note:** The -append argument is optional and has a default value of 0.  
After the -append argument is specified on the command line, the  
system returns 1.

---

## Example Script

The complete script used as example in this section can be found under:

```
<XilinxTclStore>/tclapp/mycompany/template/myscript1.tcl  
package require Vivado 1.2014.1  
namespace eval ::tclapp::mycompany::template {  
    # Export procs that should be allowed to import into  
    other namespaces  
    namespace export my_command1  
}  
proc ::tclapp::mycompany::template::my_command1 { args } {  
    # Summary: Multi-lines summary of
```

```

# what the proc is doing
# Argument Usage:
# [-verbose]: Verbose mode
# [-file <arg>]: Report file name
# [-append]: Append to file
# [-return_string]: Return report as string
# [-usage]: Usage information
# Return Value:
# return report if -return_string is used, otherwise 0. If
any error occur TCL_ERROR
is returned
# Categories: xilinxclstore, template
uplevel [concat
::tclapp::mycompany::template::my_command1::my_command1
$args]
}
# Trick to silence the linter
eval [list namespace eval
::tclapp::mycompany::template::my_command1 {
} ]
proc ::tclapp::mycompany::template::my_command1::lshift
{inputlist} {
    # Summary :
    # Argument Usage:
    # Return Value:
    # Categories:
    upvar $inputlist argv
    set arg [lindex $argv 0]
    set argv [lrange $argv 1 end]
    return $arg
}
proc ::tclapp::mycompany::template::my_command1::my_command1
{args} {
    # Summary :
    # Argument Usage:
    # Return Value:
    # Categories:
    #-----
    # Process command line arguments
    #-----
    set error 0
    set help 0

```

```

set filename {}
set cell {}
set returnString 0
while {[llength $args]} {
    set name [lshift args]
    switch -regexp -- $name {
        -cell -
        {^-c(e(ll?)?)?$_} {
            set cell [lshift args]
        }
        -file -
        {^-f(i(le?)?)?$_} {
            set filename [lshift args]
            if {$filename == {}} {
                puts " -E- no filename specified."
                incr error
            }
        }
        -append -
        {^-a(p(p(e(nd?)?)?)?)?$_} {
            set mode {a}
        }
        -return_string -
        {^-r(e(t(u(r(n(_(s(t(r(i(ng?)?)?)?)?)?)?)?)?)?)?$_}
    {
        set returnString 1
    }
    -usage -
    {^-u(s(a(ge?)?)?)?$_} {
        set help 1
    }
    default {
        if {[string match "-*" $name]} {
            puts " -E- option '$name' is not a valid
option. Use the -usage option
            for more details"
            incr error
        } else {
            puts " -E- option '$name' is not a valid
option. Use the -usage option
            for more details"
            incr error
        }
    }
}

```

```

        }
    }
}

if {$help} {
    puts [format {
Usage: my_command1
    [-cell <arg>]      - Cell to generate template
on. If not specified,
                                runs on current_instance
    [-file <arg>]       - Output file name
                                Default: <module>.v or
<module>.vhd
    [-append]           - Append to file
    [-return_string]   - Return template as string
    [-usage|-u]        - This help message
Description: Get information on a cell and generate a
report
Example:
    tclapp::mycompany::template::my_command1
    tclapp::mycompany::template::my_command1 -cell
ila_v2_1_0 -return_string
} ]
    # HELP -->
    return {}
}
if {$error} {
    error "-E- some error(s) happened. Cannot continue"
}
return -code ok "my_command1 result"
}

```

You can run the Vivado Tcl Store linter on your Tcl script using the Vivado command linter. The arguments are a list of Tcl script(s). For example:

```
vivado% linter myscript.tcl
vivado% linter [glob -nocomplain *.tcl]
```

Every error generated by the linter should be fixed. To be submitted, all the Tcl scripts of the app must pass the linter.

## Contributing to the Vivado Tcl Store

If you are interested to contribute to the Vivado Tcl Store, refer to the online Wiki at: <https://github.com/Xilinx/XilinxTclStore/wiki/Xilinx-Tcl-Store-Home>

The Wiki includes detailed information about the various steps and workflow.

## Tcl Scripting Tips

The runtime and efficiency of Tcl scripts can be improved by following a few rules. The following examples are a few suggestions for ways to improve runtime and memory footprint when using Tcl scripting in the Vivado Design Suite.

### Performance via Nesting

When a Tcl command is executed from the Tcl Console, the command is first being processed at the level of the Tcl interpreter. If there is no syntax error, the command is then executed at the C++ level. If the command returns a value, the C++ code sends the returned value to the Tcl interpreter through some layers of software. This layering back and forth between the Tcl interpreter and the low-level C++ code has some runtime penalty. However, when nesting is used within the same command, nested commands are directly called from the C++ code. The C++ code only returns to the Tcl interpreter once the whole command has been completed. For example, this code:

```
set nets [get_nets -hier]
set pins [get_pins -of_objects $nets]
```

is slower than this code:

```
set pins [get_pins -of_objects [get_nets -hier]]
```

This is because the first code sample creates an intermediate Tcl variable, nets.

However, it might sometimes be preferable to create intermediate Tcl variables if the results of these variables can be reused in other parts of the code.

### Caching Objects

Objects or lists of objects should be cached in Tcl variables so they can be reused later.

For example, if the same list of nets is going to be reused multiple times in the script, it does not make sense to do the same query over and over. Although the Tcl commands in the Vivado tools are implemented efficiently, every Tcl query goes back and forth between the Tcl interpreter and the lower level C++ code of the application. This C++/Tcl interface consumes runtime that should be avoided when possible. Use the different filtering capabilities of the Vivado tools as often as possible. Tools such as effective search pattern definition, `-of_objects` option, the `-filter` option, and the `filter` command can reduce runtime. Those features are implemented at a very low level in the application, and are very efficient in terms of runtime and memory. By caching the results of a general query, a list of objects can be post-processed using the `filter` command to create a sub-list of objects. You can also use standard Tcl list commands to parse the results assigned to the Tcl variable without accessing the in-memory design unless necessary.

```
set allCells [get_cells * -hier]
lsort $allCells ; # Returns a sort ordered list of all cells
filter $allCells {IS_PRIMITIVE} ; # Returns only the
primitive cells
filter $allCells {!IS_PRIMITIVE} ; # Returns non-primitive
cells
```

## Object Names and the NAME Property

While some Tcl commands expect a design object, other commands might expect a string input. The Vivado Design Suite has been implemented to allow design objects to be passed directly to Tcl commands, even those expecting a string argument. In this case, the hierarchical name of the design object is passed to the Tcl command as a string. There is no need to access the NAME property of the object to pass it to the Tcl command.

For example in the following `regexp` command, both IF statements are equivalent, because in both cases the Tcl interpreter is passed the name of the object:

```
if {[regexp {.*enable.*} $MyObject]} { ... }
if {[regexp {.*enable.*} [get_property NAME $MyObject]]} {
... }
```

In this example, the first expression is not only easier to read than the second expression, it also runs much faster than the second, because it does not have to access and return the properties on the object. The `get_property` command in the second statement causes the Vivado tools to iterate between the Tcl interpreter and the underlying C++ application code to access and return the object properties. If this is done in a looping construct, for multiple objects, it can significantly increase the runtime for your Tcl script.

## Connecting and Disconnecting Nets

The runtime for connecting or disconnecting a collection of objects can vary significantly depending on which command line options are used.

`disconnect_net`: for disconnecting a large number of nets or pins, when the list of netlist elements is already available as first-class objects, the command line option `-pinlist` should be used instead of `-objects`.

However, when the netlist elements are only known by name (string), then `-objects` can be used and results in Vivado automatically converting the strings into first-class objects. The `-objects` forces the conversion into first-class objects even when first-class objects are passed as argument.

`connect_net`: for faster runtime, the command line option `-dict` should be favored as an alternative to `-net_object_list` but it requires a list of net and pin/port object pairs.

For example:

```
set myNetA [get_nets netA]
set myPin1 [get_pins pin1]
set myPin2 [get_pins pin2]
set myPin3 [get_pins pin3]
connect_net -dict [list $myNetA $myPin1 $myNetA $myPin2
$myNetA $myPin3 ]
```

## get\_property and Sorted Lists

The list of elements (strings or objects) returned by `get_property` is

ordered based on the input list of objects. It also has the same number of elements. This property can be used to iterate with the Tcl command foreach through multiple lists at once.

Inefficient code:

```
set cells [get_cells -hier -filter {...}]
foreach cell $cells {
    set loc [get_property LOC $cell]
    ...
}
```

In the code above, the command get\_property LOC \$cell is executed for each cell inside the collection \$cells.

Efficient code:

```
set cells [get_cells -hier -filter {...}]
foreach cell $cells loc [get_property LOC $cells] {
    ...
}
```

In the code above, the command get\_property LOC \$cells is executed only once which improves the runtime significantly when a long list of objects is processed. This is possible because the list returned by get\_property has the same number of elements as the Tcl list \$cells and the returned elements are in the same order as the input list.

## Formatting Lists of Objects

When a list is returned from the get\_\* commands, the list is un-formatted and returned to stdout in a single line delimited by a space. This is shown in the following example:

```
get_cells
A B clk_IBUF_inst rst_IBUF_inst din0_IBUF_inst din1_IBUF_inst
dout0_OBUF_inst
dout1_OBUF_inst dout2_OBUF_inst dout3_OBUF_inst
clk_BUFG_inst
```

This un-formatted return makes it difficult to see what has been returned in the Tcl Console and the Vivado IDE. To have each item in the list returned on a separate line, simply execute the command nested in a

join command, with the newline character, '\n', as follows:

```
join [get_cells] \n
A
B
clk_IBUF_inst
rst_IBUF_inst
din0_IBUF_inst
din1_IBUF_inst
dout0_OBUF_inst
dout1_OBUF_inst
dout2_OBUF_inst
dout3_OBUF_inst
clk_IBUF_BUFG_inst
```

The list returned by the get\_\* command is unaffected by the join command.

---

 **Note:** When converting a Vivado collection of objects into a string representation, not all the objects have to be included in the string representation. The number of objects to be included in the string representation is defined with the parameter `tcl.collectionResultDisplayLimit` (default: 500). Refer to section [Collection versus String Representation](#) for more information.

---

## Finding Vivado Tcl Commands by Options

The following procedure, `findCmd`, searches through the syntax of all the Tcl commands in the Vivado Design Suite, and displays a list of commands that support the specified option:

```
proc findCmd {option} {
    foreach cmd [lsort [info commands *]] {
        catch {
            if {[regexp "$option" [help -syntax $cmd]]} {
                puts $cmd
            }
        }
    }
} ; # End proc
```

To find the Vivado tools commands that support the `-return_string`

option use:

```
findCmd return_string
```

## Writing Efficient Code

One way to improve runtime is to write code efficiently such that a container is built and a command runs on the entire container versus running the command within a loop on each item that would be part of the container. The following example illustrates this and is similar to that seen in the [Creating Custom Design Rules Checks \(DRCs\)](#) section.

Inefficient code:

```
foreach bram [get_cells -hier -filter {PRIMITIVE_SUBGROUP ==  
bram}] {  
    set bwidth [get_property WRITE_WIDTH_B $bram]  
    if { $bwidth > 36} {  
        highlight_object -color red [get_cells $bram]  
    }; # End IF  
}; # End FOR
```

Efficient code:

```
foreach bram [get_cells -hier -filter {PRIMITIVE_SUBGROUP ==  
bram}] {  
    set bwidth [get_property WRITE_WIDTH_B $bram]  
    if { $bwidth > 36} {  
        lappend bram_list $bram  
    }; # End IF  
}; # End FOR  
highlight_object -color red [get_cells $bram_list]
```

An even more compact and efficient way to code this is to apply the filter as part of the `get_cells` command. This removes the need to perform a `foreach` loop with individualized checking at the expense of a slightly more complicated filter.

```
highlight_object -color red [get_cells -hier -filter  
{PRIMITIVE_SUBGROUP == bram &&  
WRITE_WIDTH_B > 36}]
```

## Getting User Input

In a traditional tclsh shell, your input is typically captured using the stdin channel. For example:

```
gets stdin answer
```

In the Vivado IDE, the Tcl code can be executed in different environments that are most of the time incompatible with the stdin channel. Unless you know that the script is only executed in Vivado Tcl mode on a local shell, stdin cannot be used to get user input.

Your input is typically used to alter the behavior of a script or set values for parameters. In this regard, getting some information through stdin is unreliable and prone to errors (typos, wrong value, etc.).

It is recommended that you provide custom values to a script through a configuration file that can be easily read by the Tcl script. A configuration file can be as simple as a list of Tcl variables in a file that can be imported in a script using the command:

```
source <configuration_file>
```

Such a configuration file can be used whether the Vivado IDE is run in batch mode or using a remote machine (LSF, etc.).

## Additional Resources and Legal Notices

### Finding Additional Documentation

#### Technical Information Portal

The AMD Technical Information Portal is an online tool that provides robust search and navigation for documentation using your web browser. To access the Technical Information Portal, go to <https://docs.amd.com>.

#### Documentation Navigator

Documentation Navigator (DocNav) is an installed tool that provides access to AMD Adaptive Computing documents, videos, and support resources, which you can filter and search to find information. To open DocNav:

- From the AMD Vivado™ IDE, select Help > Documentation and Tutorials.
- On Windows, click the Start button and select Xilinx Design Tools > DocNav.
- At the Linux command prompt, enter docnav.

---

 **Note:** For more information on DocNav, refer to the *Documentation Navigator User Guide* ([UG968](#)).

---

## Design Hubs

AMD Design Hubs provide links to documentation organized by design tasks and other topics, which you can use to learn key concepts and address frequently asked questions. To access the Design Hubs:

- In DocNav, click the Design Hubs View tab.
- Go to the [Design Hubs](#) web page.

## Support Resources

For support resources such as Answers, Documentation, Downloads, and Forums, see [Support](#).

## References

These documents provide supplemental material useful with this guide:

1. *Vivado Design Suite Tcl Command Reference Guide* ([UG835](#))
2. *Vivado Design Suite User Guide: Getting Started* ([UG910](#))
3. *Vivado Design Suite User Guide: Using Constraints* ([UG903](#))
4. *ISE to Vivado Design Suite Migration Guide* ([UG911](#))
5. *Vivado Design Suite User Guide: Design Flows Overview* ([UG892](#))
6. *Vivado Design Suite User Guide: Using the Vivado IDE* ([UG893](#))
7. *Vivado Design Suite User Guide: System-Level Design Entry* ([UG895](#))

8. [Tcl Developer Xchange](#)
9. [Vivado Design Suite Documentation](#)

## Revision History

11-13-2024: Released with Vivado Design Suite 2024.2 without changes from the previous version.

Section	Revision Summary
	05/30/2024 Version 2024.2
<a href="#">Connecting and Disconnecting Nets</a>	Updated the example.

## Please Read: Important Legal Notices

The information presented in this document is for informational purposes only and may contain technical inaccuracies, omissions, and typographical errors. The information contained herein is subject to change and may be rendered inaccurate for many reasons, including but not limited to product and roadmap changes, component and motherboard version changes, new model and/or product releases, product differences between differing manufacturers, software changes, BIOS flashes, firmware upgrades, or the like. Any computer system has risks of security vulnerabilities that cannot be completely prevented or mitigated. AMD assumes no obligation to update or otherwise correct or revise this information. However, AMD reserves the right to revise this information and to make changes from time to time to the content hereof without obligation of AMD to notify any person of such revisions or changes. THIS INFORMATION IS PROVIDED "AS IS." AMD MAKES NO REPRESENTATIONS OR WARRANTIES WITH RESPECT TO THE CONTENTS HEREOF AND ASSUMES NO RESPONSIBILITY FOR ANY INACCURACIES, ERRORS, OR OMISSIONS THAT MAY APPEAR IN THIS INFORMATION. AMD SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. IN NO EVENT WILL AMD BE LIABLE TO ANY PERSON FOR ANY RELIANCE, DIRECT, INDIRECT, SPECIAL, OR OTHER CONSEQUENTIAL

DAMAGES ARISING FROM THE USE OF ANY INFORMATION CONTAINED HEREIN, EVEN IF AMD IS EXPRESSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## AUTOMOTIVE APPLICATIONS DISCLAIMER

AUTOMOTIVE PRODUCTS (IDENTIFIED AS "XA" IN THE PART NUMBER) ARE NOT WARRANTED FOR USE IN THE DEPLOYMENT OF AIRBAGS OR FOR USE IN APPLICATIONS THAT AFFECT CONTROL OF A VEHICLE ("SAFETY APPLICATION") UNLESS THERE IS A SAFETY CONCEPT OR REDUNDANCY FEATURE CONSISTENT WITH THE ISO 26262 AUTOMOTIVE SAFETY STANDARD ("SAFETY DESIGN"). CUSTOMER SHALL, PRIOR TO USING OR DISTRIBUTING ANY SYSTEMS THAT INCORPORATE PRODUCTS, THOROUGHLY TEST SUCH SYSTEMS FOR SAFETY PURPOSES. USE OF PRODUCTS IN A SAFETY APPLICATION WITHOUT A SAFETY DESIGN IS FULLY AT THE RISK OF CUSTOMER, SUBJECT ONLY TO APPLICABLE LAWS AND REGULATIONS GOVERNING LIMITATIONS ON PRODUCT LIABILITY.

## Copyright

© Copyright 2012-2024 Advanced Micro Devices, Inc. AMD, the AMD Arrow logo, Vivado, Versal, and combinations thereof are trademarks of Advanced Micro Devices, Inc. Other product names used in this publication are for identification purposes only and may be trademarks of their respective companies.