

OFAD GOLEM

GETTING STARTED · SHORTCUTS

16-track groovebox, free software (AGPL) by One For All Distribution.

This manual covers the basics; the instruments and effects are described in detail in the **Catalogue**.

> **The interface is in French for now** — an English interface is on its way. This manual uses the English names of the controls; the table below gives the French label you will see on screen.

In this manual	On screen (French)
Screens TRACKS, LAUNCH, SEQUENCE, SOUND, EFFECTS, MIXER, SCENES, SETTINGS	PISTES, LANCEMENT, SÉQUENCE, SON, EFFETS, MIXEUR, SCÈNES, RÉGLAGES
LAUNCH tabs: Grid, Song, Audio	Grille, Morceau, Audio
Transport: Rec, Play, Stop, Fill, Break, Shift	Enr., Lecture, Arrêt, Fill, Break, Maj
Pad roles: Play, Mute, Scenes, Step, Erase	Jouer, Couper, Scènes, Pas, Effacer
Open the synth · Photo · Recall · Knob mods · Live view	Ouvrir le synthé · Photo · Rappel · Mod. boutons · Vue live
Assign to… · Free the knob · Learn MIDI	Assigner à… · Libérer le bouton · Apprendre MIDI
Accent · Slide · Locks · Locks only	Accent · Glissé · Verrous · Verrous seuls
Writing: Acid / Locks · Follow · Nudge · Hide / Show	Écriture : Acide / À verrous · Suivre · Décaler · Masquer / Afficher
Edit · Done · Pad active / stopped · Corners · Size · Height · Rotation	Éditer · Terminer · Pavé actif / arrêté · Coins · Taille · Hauteur · Rotation
Rec performance · Rec motion · Record a take · Arrange mode · Loop	Enr. le jeu · Enr. les mouvements · Enregistrer une prise · Mode montage · Boucle

Keyboard and mouse shortcuts

Everywhere	
Space bar	Play / stop
Ctrl + Z	Undo
Ctrl + Y (or Ctrl + Shift + Z)	Redo
F11	Full screen / back to window
Esc	Close the open window: synth panel, pedalboard, instrument or effect picker, presets, menu, home screen

B held	Break: the Break scene while the key is held (and Fill at the same time)
N held	Fill: FILL steps play, NOT FILL steps go silent
Right-click (long press with a finger) on an LED button, Photo, Recall, M / S...	Assign to the MIDI controller
Touch the tempo (status bar, or the Tempo row on a phone)	Type the tempo (40 to 240 BPM, to a tenth)



Where the main controls are

1. **Open the synth**: the track's instrument panel, full size.
2. **Undo / Redo** (Ctrl + Z / Ctrl + Y), **Photo** and **Recall** of all settings.
3. **Audio**: record what comes out (master or separate tracks).
4. **Full screen** (F11).
5. The **16 assignable knobs** (blue diamond): each one drives the value you gave it (see below).
6. **M / S**: mute and solo of the tracks shown.
7. **Transport**: Rec, Play, Stop (space bar); Fill (N), Break (B), timed Break, Shift.
8. **Crossfader** for scenes A / B (double-click: back to the middle).
9. The **8 screens**.
10. The **pad role**: Play, Mute, Scenes, Step, Erase.

Pads on the computer keyboard (AZERTY)

1 2 3 4	13 to 16 (top row)
A Z E R	9 to 12
Q S D F	5 to 8

W X C V	1 to 4 (bottom row)
Shift + key	Accented hit (full velocity)

The keys follow the pad role chosen on the right: Play, Mute, Scenes, Step, Erase.



The keyboard key on each pad (the same small letter is shown in the top right corner of each pad)

Knobs and values (synth panel knobs, values at the bottom of the screens, assignable knobs)	
Drag up / down	Adjust
Shift + drag	Fine adjustment
Mouse wheel	One step (**Shift** + wheel: fine step)
Double-click (double tap with a finger)	Default value
Arrows ↑ ↓ ← → (knob selected)	One step (**Shift**: fine step)
Right-click (long press with a finger)	Menu: exact value, modulation, Learn MIDI, assignable knob (and macros, on a synth panel)
Mixer: double-click on a fader	Default value; double-click on a group name: rename it
Crossfader: double-click	Back to the middle

The values at the bottom of the screens (Swing, Length, Division, X, Y, Crossfader, Scene A…) are adjusted by dragging on them. A **long press** (right-click on PC) opens their menu, the same

everywhere: exact value (list of choices or a number to type), **Learn MIDI**, **drive with knob 1 to 16**; modulation only appears for a sound, effect or mix setting. The synth **macros** are only offered on a synth panel.



Adjusting a value and handing it to a knob


1. A **value at the bottom of the screen**: drag, double-click.
2. Its **menu** (long press, right-click): exact value, modulation, Learn MIDI, knob 1 to 16.
3. The **16 assignable knobs**.

The 16 assignable knobs replace the old encoders: they no longer change with the screen, each one keeps the value you gave it. On PC and tablet they sit in one row of 16; on a phone, in two rows of 8. A **blue diamond** marks them: hollow when the knob is free, filled when it drives something (its name is written under the number). The full travel, from 0 to maximum, takes **a single gesture**.



Long press on an assignable knob

- **Long press** (right-click) on a knob › **Assign to…**: the knob **blinks blue** and everything that can be driven is **underlined in dotted blue**. Touch the value you want: a value at the bottom of a screen, a synth or effect knob, a macro, the crossfader, the tempo, Play, Fill, an M / S… You can change screen or open a synth before touching. **Esc** cancels.
- **Free the knob**: it no longer drives anything.
- **Modulate the knob**: the 16 knobs have **their own modulation sources** (4 sources: LFO, function, follower or sequencer), independent from the synths' ones: a setting can be modulated both by the synth's LFO and by the knob's. The knob menu offers these 4 sources, the **depth** (−100 to +100 %) and "Remove modulation"; a coloured dot shows the source and the knob moves with it. Removing the modulation or freeing the knob puts the setting back as it was. Everything the knob drives can be modulated (sound, effects, mix, crossfader, vector pad, macros), except the tempo and the commands.
- **Knob mods** (next to Photo / Recall, at the top on PC, under the 16 knobs on phone and tablet) opens the panel of these 4 sources, the same as a synth's modulations: shape, tempo sync, speed, phase…; **Assign to a knob…** then touch the knobs to modulate.
- **Learn MIDI**: a knob or fader on the controller turns this knob.

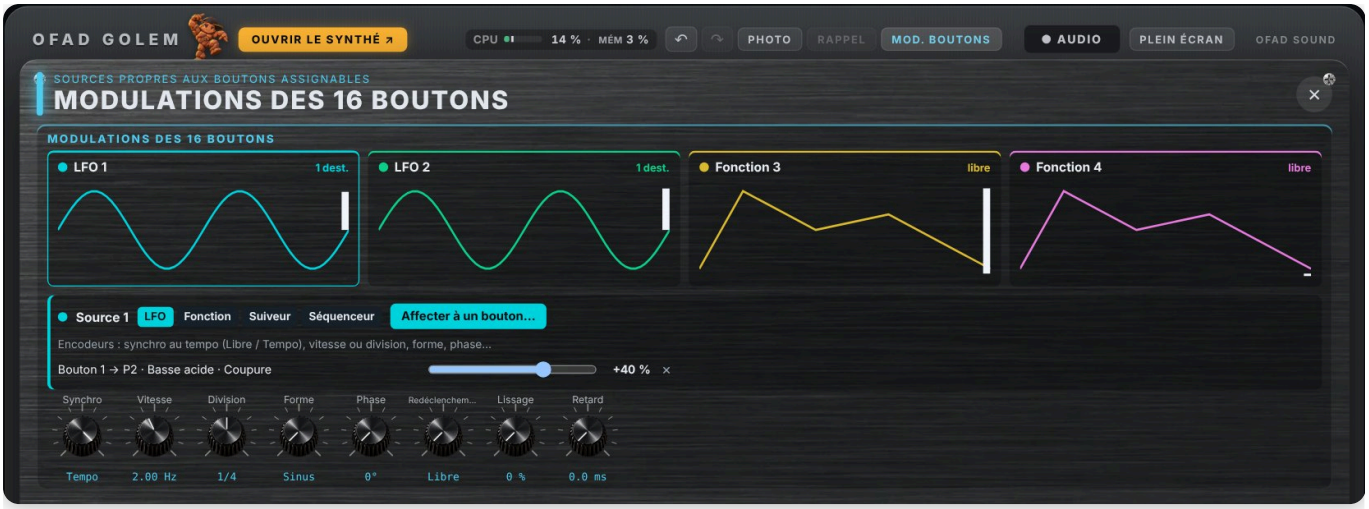

Knob mods: the 4 sources of the 16 knobs



Knob 3 is waiting: touch the value it should drive

Values that belong to one screen (Length, Division, Family...) follow their knob while the interface is open; after opening a project, show the screen concerned once. Sound, effects, tempo, swing, crossfader, scenes, vector pad and macros always respond.

SEQUENCE screen (notes and steps)	
Click on a cell	Add / remove a step (or a note)
P	Brush: dragging writes one step per cell crossed
Ctrl + click	Add to / remove from the selection
Drag from an empty cell	Selection rectangle (**Shift**: adds)

Drag a selection	Move it; **Ctrl** (or Alt) + drag: copy it
Ctrl + A	Select all
Ctrl + C / Ctrl + X / Ctrl + V	Copy / cut / paste under the mouse
Ctrl + D	Duplicate right after
Delete (or Backspace)	Clear the selection
Esc	Empty the selection
Arrows ← →	Move by one step (**Shift**: by one bar)
Arrows ↑ ↓	Note: one semitone (**Shift**: one octave); drums: next pad
Right-click on a step	Step settings (velocity, duration, condition, locks)
Touch an **Accent** / **Slide** cell	Turn the step's accent or slide on / off
Long press (right-click) on an **Accent** / **Slide** cell	The step's value: accent strength, slide time
◀ ▶ next to the pattern (or the small dots)	Turn pages (one page = 16 steps)
Shift + Octave ◀ ▶ (transport)	Previous / next page
Rec then play	The notes you play are written into the pattern (quantise: Settings)



The SEQUENCE screen of a melodic instrument (here the acid bass)

1. The **track** shown (◀ ▶ or the list).
2. The **pattern**: number of bars (1 to 32), division (1/16, triplets…), speed.
3. **Turn pages**: ◀ ▶ and "page / total" (dots up to 4 pages).
4. The **Accent** and **Slide** lines (and "Locks only": the step sets its settings without playing). Long press on a cell: its value (see "A step's value").
5. The **piano roll**: each step gets whatever note you want, up to 4 notes per step (chords).
6. **Select**, **Brush**, select all, patterns **A to P** (8 at a time; the small "I–P" / "A–H" chip shows the other page), duplicate, clear.
7. **Notes / Curves**: the knob movements recorded with **REC** in this pattern.
8. The **track settings** when no step is selected (swing, length, speed…) — see "3. Writing a sequence".

LAUNCH screen › Grid

Touch a cell	Launch and edit the pattern
Shift (button) + touch	Edit without launching
Ctrl + C then a cell, **Ctrl + V**	Copy a pattern to another cell (same track or another track)
▶ at the head of a row	Launch the same letter on all tracks (and the scene linked to the row)



LAUNCH › Grid

1. The **Grid**, **Song**, **Audio** tabs.
2. The **grid**: one column per track, one cell per pattern; ▶ launches a row, ■ stops a track. The 16 rows (A to P) are shown 8 at a time: **A–H** / **I–P** in the top left corner.
3. Copy, clear or edit the selected pattern or row.
4. The values at the bottom: track, edited pattern, **launch quantise**, row, **linked scene**.

LAUNCH screen › Song and curves

Ctrl + wheel	Zoom the timeline
Curve editor: **Shift** + drag	Draw a straight line
Curve editor: right-click + drag	Erase



LAUNCH › Song

1. **Song mode** (the rows play one after another) or **Loop** (the grid plays).
2. ● **Rec performance** (your playing becomes rows) and ● **Rec motion** (knobs, faders, mutes, solos, crossfader as curves).
3. The **rows** played one after the other; the **curves** below.
4. Add what is playing as a row, clear the rows or the curves.

LAUNCH screen › Audio (arrangement)

Drag a clip	Move it (also to another track)
Drag the edge of a clip	Trim it
Ctrl (or Shift) + click	Select several clips
Drag a rectangle in empty space	Select the clips it touches (**Ctrl**: adds)
Ctrl + A	Select all clips
Right-click on a clip	Menu: split here, copy, duplicate, volume to 0 dB, delete
Right-click in empty space	Menu: paste here, playhead here, select all
✂ tool, or **S** key	Split (S: at the playhead)
Ctrl + C / Ctrl + V	Copy / paste at the playhead

Ctrl + D	Duplicate right after
Delete (or Backspace)	Delete
Ctrl + Z / Ctrl + Y	Undo / redo (arrangement)
Click on the ruler (drag: move it)	Place the playhead — the next take lands there
Right-click (or **Shift**) + drag on the ruler	New loop
Drag the orange loop bar	Move the loop; its edges: lengthen or shorten it
Loop on + "● Record a take"	The take lasts exactly the loop and **stops by itself** at its end



LAUNCH › Audio (arrangement)

1. ● **Record a take** (it lands at the playhead, or at the start of the loop when Loop is on).
2. **Arrange mode**: playback plays the clips instead of the instruments.
3. A **clip**: drag, trim by the edges, right-click: menu.
4. **WAV / MP3 export** of the finished arrangement.
5. The **ruler**: click = playhead; right-click (or Shift) + drag = loop (orange bar).
6. **Select** / **Scissors** tools and snap (bar, beat, 1/16, free).
7. **Loop**: when it is on during a take, it sets the take's length to the step.

Getting started

- At launch, the mascot shows while loading, then the **home screen**: resume the last session, new empty project, demo project, open a file, or a project from the folder. (Settings › "Home screen at startup" to show it or not.)

- Sound card: **Options** (top left of the window) › Audio/MIDI Settings. For the lowest latency: the sound card's ASIO driver or "Windows Audio (Low Latency Mode)", buffer of 128 to 256 samples.



The home screen at launch: resume, new project, demo, open, projects in the folder

The device

- **8 screens** (buttons on the right): Tracks, Launch, Sequence, Sound, Effects, Mixer, Scenes, Settings.
- **16 assignable knobs** under the screen: each one drives the value you gave it (see "Knobs and values"). The screen's own values are adjusted directly at the bottom of the screen.
- **16 pads** on the right: their role (Play, Mute, Scenes, Step, Erase) is chosen above them.
- **Transport** at the bottom: Rec (record into the pattern), Play, Stop; Fill, Break, Shift; octave; crossfader for scenes A / B.
- **On a phone**: next to the screen, two tabs. **Controls**: the screens, the 16 knobs, the transport, Fill and Break, the crossfader, Photo / Recall and the **Tempo** row (– / value to touch to type it /
- / **Tap**: tap in time, the tempo follows). **Pads**: the pad role, the 16 pads, the scene bank.
- **Top bar**: "Open the synth" (the instrument panel, full size), CPU load, undo / redo, Photo and Recall of the settings, Audio recording, full screen.




The device: the screen (here LAUNCH › Grid), the 16 assignable knobs, M / S, transport, the 8 screens and the 16 pads

Editing basics

1. Choosing a sound

TRACKS screen: choose the instrument of each track (or "⇄ Instrument" on the panel, with pictures). **Presets** are chosen by category.

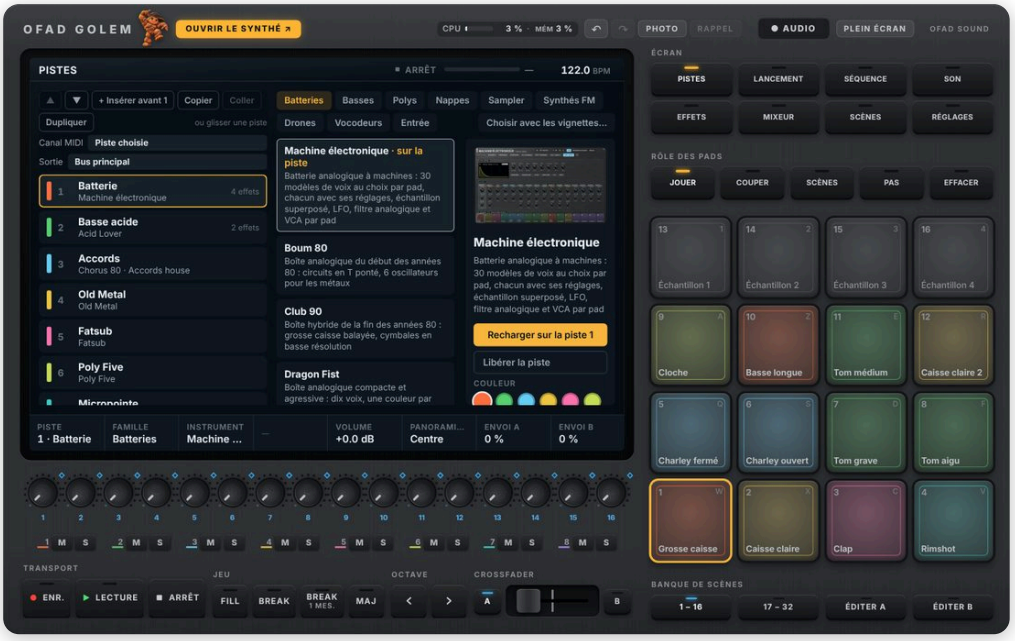

TRACKS screen: the instrument, name and colour of each track

2. Playing

The pads, the computer keyboard, the panel's keyboard or a MIDI controller (notes go to the track shown). "Open the synth" shows the instrument panel full size.



An instrument panel (here the drum machine kit): all its settings, its pads or its keyboard

The header of every panel always has three lines, on PC as on a phone: 1. the instrument name, the transport (● ▶ ■), the track selector (◀ ▶, M, S) and ✕ to close; 2. the pages (Sound, Steps, Track modulations, Macros…), which scroll sideways when there are many; 3. the tools: sample and library (if the instrument has them), ⇄ Instrument, FX · Effects, Presets.

3. Writing a sequence

Each track has **16 patterns** (A to P), from 1 to 32 bars. A sequence can be written in three ways, as you like — it is **always the same sequence**: a step set on the panel shows up at once in the SEQUENCE screen, and the other way round.

- **With the mouse**, SEQUENCE screen: one line per pad (drums) or a piano roll (melodic instrument), where **each step gets whatever note you want** (up to 4 notes per step for chords).
- **By playing**: **Rec**, then play the pads, the panel's keyboard, the computer keyboard or the MIDI controller, in time. The notes are written into the pattern while it loops (quantise from 0 to 100 % in Settings; the rest of the timing offset is kept). **REC** also records the **movements** of the track's knobs as curves in the pattern (Curves tab).
- **On the synth panel**, in "Sequence steps", with two writing modes to choose from ("Writing"): **Acid** or **Locks**. The choice is kept, and the same everywhere. On melodic synths, the chosen row is also **above the keyboard**, on every page of the panel: you write your steps without leaving the Sound page. **Hide** ▾ folds it away (more room for the settings), **Show** ▴ brings it back.
- **Step** pad role: the 16 pads set or remove the steps of the page shown, like a drum machine's step programming.



The step row above the keyboard: Writing Acid or Locks, Nudge, Hide


The acid sequencer (basses and synths): the 80s step row, step by step.



Bass panel: "Acid" writing

1. **Writing**: Acid or Locks.
2. The **pages** of 16 steps (one button per page when the pattern is longer).
3. The step's **note**: touch to set or remove the step; drag up or down (or the wheel) to change the note by a semitone.
4. ▲ ▼: one octave up or down.
5. Step **velocity** and **duration** (drag on the value).
6. **Acc.** (accent: the step plays louder and with more "bite", set by the Accent knob) and **Sl.** (slide: the note holds until the next step and glides to it; same note: tied, without retriggering). Touch: on / off; **long press**: the step's value (see below).
7. **FX · Effects**: the track's effects as pedals (see 5).
8. **Sound · Track modulations · Macros**: the other pages of the panel.
9. ⇄ **Instrument**: change instrument with pictures.

The locks sequencer: each step can keep its own settings (cutoff, resonance, effects...), on top of its note.

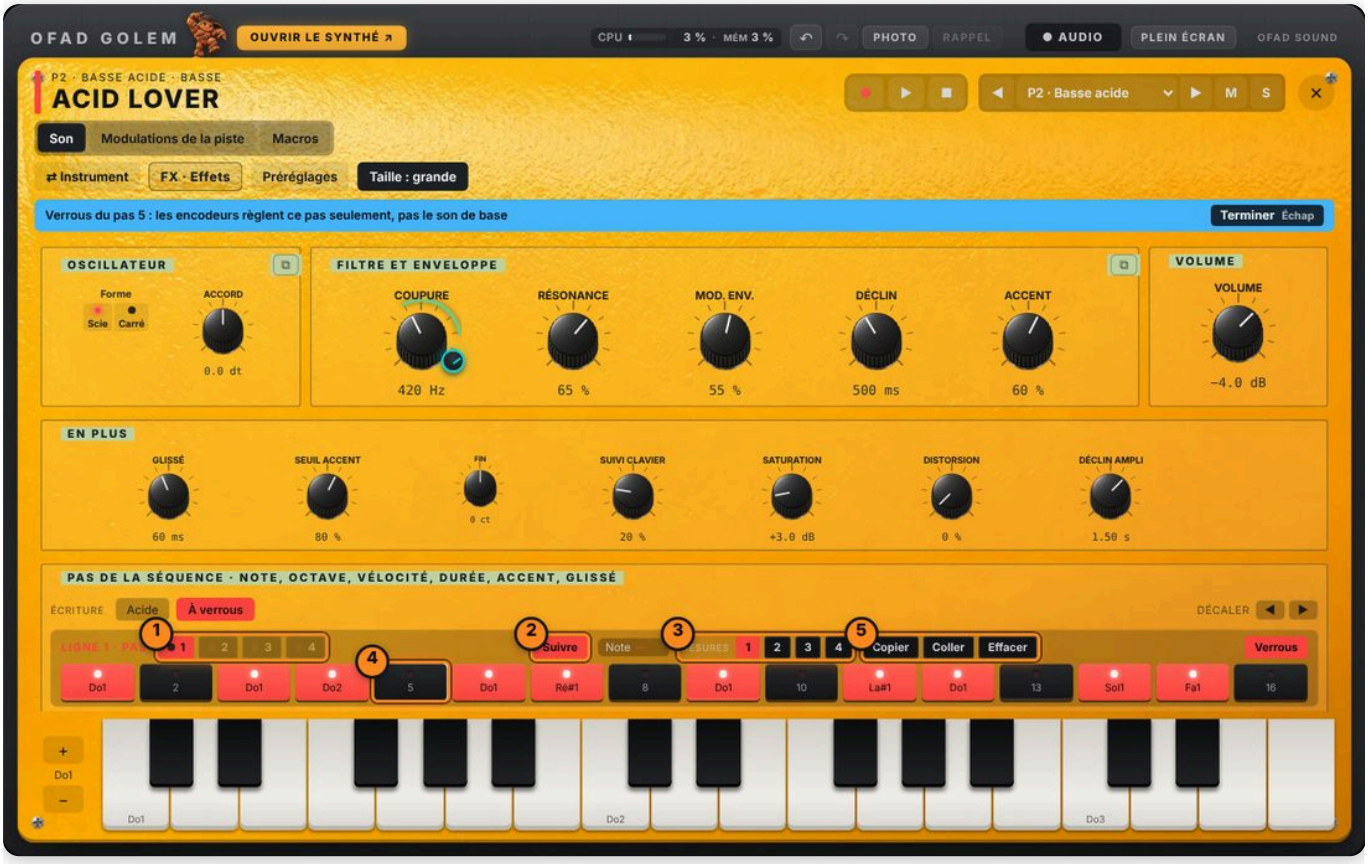

Bass panel: "Locks" writing, step 5 selected

1. **Pages 1 to 4** (16 steps each): touch a page to show it.
2. **Follow**: the page turns by itself with playback (touching a page stops following).
3. **Bars**: length of the line, 1 to 4 bars (the pattern grows if needed).
4. A **selected step** (long press on the step, or the **Locks** button then touch the step): turn any knob on the panel, the pedalboard or the SOUND screen — the value is **locked on that step** only. A banner reminds you; Esc or "Done" exits.
5. **Copy / Paste / Clear** the locks of the selected step ("No locks": all those of the line).

On synths, the locks row writes **the last note played** (pads, the panel's keyboard, or a MIDI keyboard while stopped): it is shown ("**Note** F1") and each step set shows its note instead of its number. A

selected step (long press) takes the note of the next key played.

Nudge ◀ ▶: the whole writing slides one step left or right, wrapping around (the step that falls off comes back on the other side); notes, accents, slides, conditions and locks follow. On the panel: to the right of "Writing" (drums: **All** or the selected **Pad** only), or in the locks row (that line only); in the SEQUENCE screen: ◀ ▶ after "Clear pattern" (**Shift**: the selected line only).

Panel transport: on the first line of every panel, just left of the track selector, ● record, ▶ play (❚❚ to stop), ■ stop — without leaving the instrument.

A step's value: accent and slide. In the SEQUENCE screen (**Accent** and **Slide** lines) as on the panel (**Acc.** and **Sl.**), a touch turns the step's function on or off; a **long press** (right-click on PC) opens its value, full size:

- **Accent**: the strength of this step's accent, from 1 to 100 %. With no value, the step takes the track's accent (the Accent setting at the bottom of the screen).
- **Slide**: the glide time to the next note, from 1 to 100 % of the step (the higher, the longer the glide), on synths that have portamento. With no value: the instrument's portamento.
- ▲ ▼ (held, the value scrolls), **drag** your finger on the value, or **Type...**; **Default** goes back to the track's or instrument's value. Every change is heard at once, and the window stays open while you adjust. Setting a value turns the step's function on.
- A cell that has its own value shows it (for example "54"). Values follow copy, nudge and undo, and are saved in the project.



The accent strength of a step

In the SEQUENCE screen, right-clicking a step opens the same settings: velocity, duration, offset, **note**, condition (probability, A:B, Fill...), repeats, flam, and the **Locks** button.

Turning pages: a page shows 16 steps (one bar in 1/16). In the SEQUENCE screen, ◀ ▶ at the top (or the dots), or **Shift** + Octave ◀ ▶ on the transport; on the panel, the page buttons (and **Follow** in Locks

writing); for the pads in Step role, the page shown is the one being written.

Track settings (no step selected)

The values at the bottom of the screen set the track's pattern:

Value	Action
Swing	Shifts every other step (50 %: straight, up to 75 %)
Length	Number of bars of the pattern (1 to 32)
Steps (end)	Length to the step (e.g. 15 steps for an odd loop)
Speed	×1/8 to ×2: the pattern plays slower or faster than the tempo
Division	Length of a step: 1/4, 1/8, 1/16, 1/32, 1/64, or triplets
Direction (drums: **Pad direction**)	Forward, backward, ping-pong, random
Pad length (drums)	A line that loops on its own length (polyrhythms)
Accent	Strength of the steps on the Accent line
Visible octaves (melodic)	The octaves shown in the piano roll

Step settings

A **first click** on a set step **selects** it (it gets a frame); a second click removes it. With the step selected, the values at the bottom of the screen set **that step only**:



A kick drum step selected: its settings at the bottom

1. The **line** (a pad of the kit): touching its name selects it and all its steps (once more: deselects them).
2. **M / S** of the line: mute or solo a line.
3. The **selected step**.
4. The **Accent** lines (here "Total accent": every sound of the step louder) and **Locks only**.
5. The **tools**: Select, Brush, Select all, patterns A to P (right-click: launch it), Duplicate ×2, Clear line, Clear pattern, ◀ ▶ Nudge; for the selected step: "Lock settings on this step", "Close the step", "Remove condition and locks".
6. The **step settings**:

Value	Action
Note (melodic) or **Flam** (drums)	The step's note; or a small hit just before the main one (8 to 60 ms)
Velocity	The **volume** of the hit (1 to 127)
Duration	How long the note holds (from 1/8 of a step to several bars)
Offset	Push the step slightly early or late (± 32/64 of a step): "human" feel
Condition	When the step plays (see the table below)
Probability	Chance that the step plays (0 to 100 %), on top of the condition
Repeats	2 to 8 hits within the step (rolls), at equal, decreasing ↘ or increasing ↗ strength
Locks	Turn it right: the knobs of every screen write into this step

Conditions: steps that don't play every time

A condition makes a step play only in certain cases: that is what brings a short loop to life, with variations and small fills without writing other patterns.

Condition	The step plays…
None	every time
A:B (1:2, 2:2, 1:4, 3:4…)	on pass A out of B: 1:2 = every other loop (the 1st), 4:4 = on the 4th loop only
FILL	only while **Fill** is held (or Break): the fills
NOT FILL	only while Fill is **not** held (what goes silent during the fill)
PRE / **NOT PRE**	if the last conditional step on the same line played / did not play
NEIGHBOUR / **NOT NEIGHBOUR**	if the last conditional step on the line above played / did not play
1ST / **NOT 1ST**	only on the pattern's first loop / on every loop except the first

Fill and Break: live fills and drops

- **Fill** (transport button, or **N** key held): while it is held, the **FILL** steps play and the **NOT FILL** steps go silent. In the same pattern you can prepare a snare fill, a tom roll (with **Repeats** ↗), an open hi-hat… which only appear when you press: mini-breaks on demand.
- **Break** (button, or **B** key held): applies the **Break scene** while it is held — it's a scene like any other (set in the SCENES screen): for example kick muted, filter closed, echo pushed. Break **also triggers Fill**: FILL steps play at the same time.

- **Break · N bars** (timed Break): Break for 1, 2, 4, 8 or 16 beats, then it stops by itself on a beat (**Shift** + press: change the length).
- With **Shift** on, Fill and Break latch instead of being held.

Selecting, clearing, deleting everything



"Select all": the 20 steps of the pattern selected

1. The **selection**: selected steps are framed.
2. The values at the bottom set **all the selected steps at once**: velocity (average; the differences between steps are kept), duration, offset, condition, probability, repeats, locks; on melodic instruments, "Transpose".
3. The **selection bar**: ◀ ▶ (nudge one step), Copy, Cut, Paste, Duplicate, Clear, Copy on drag, Locks, All.

The gestures:

- **Select**: **Ctrl + A** or "Select all" (the whole pattern); the name of a line (all its steps); **Ctrl** + click (one step more or less); drag a rectangle from an empty cell; with a finger, the **Select** button then touch the steps.
- **Clear the selection**: **Delete** (or "Clear" in the bar).
- **Clear a line**: "Clear line" (the selected line: the pad, on drums).
- **Delete everything**: "**Clear pattern**" empties the whole pattern shown (notes, conditions, locks); the other patterns are untouched.
- A step keeps its note but loses its conditions and locks: "Remove condition and locks".
- A mistake? **Ctrl + Z** undoes (50 steps).



SEQUENCE screen: one line per pad (drums) or a piano roll (melodic instrument)

4. Launching

LAUNCH › Grid screen: each cell launches a pattern (at the start of the next bar); ▶ at the head of a row launches the same letter on all tracks; ■ stops a track.

16 rows, on two pages. Each track has 16 patterns: the rows go from **A to P**. The **Rows** bar (Mixer, Scenes, live view) shows them on a single line, 8 at a time:

- ◀ / ▶ (labelled "I–P" or "A–H") turn the page. They get a yellow outline when the row that is playing is on the other page.
- **−1 / +1** launch the previous or next row and **turn the page by themselves** (from H, +1 goes to I). They **skip empty rows**: if I to P are not written, +1 from H goes back to A.
- The page follows the row launched, also from the MIDI controller or the song, and it is the same everywhere (rows bar, LAUNCH grid).
- From a MIDI controller, each of the 16 rows can be learned (right-click on its button), like −1 / +1 and ■.

5. Shaping the sound

One instrument, three views, the same settings. A track's sound is set:

- on the **synth panel** ("Open the synth"): all its knobs, like on the machine;
- in the **SOUND screen**: the same settings in tabs, at the bottom of the screen, with the presets;
- as **pedals** ("FX · Effects" on the panel): the track's 4 insert effects as a pedalboard, over the instrument (Esc goes back to the instrument); the **EFFECTS screen** shows the same effects in signal order.

Everything is linked: turning the cutoff on the panel also turns it in the SOUND screen, an effect changed as a pedal also changes in the EFFECTS screen. Step locks, scenes, modulations, macros and MIDI learn work the same way from all three views.



SOUND screen: the instrument settings in tabs, with its presets



"FX · Effects" from the panel: the track's effects as pedals, over the instrument



EFFECTS screen: the channel's 4 insert effects, in signal order

6. Mixing

MIXER screen: volume, pan, mute (M), solo (S), sends to returns A to D, 7 groups and the master.



MIXER screen: tracks and groups, returns and master

7. Scenes


A **scene** is a list of settings (from any track, effect or mixer) with their values. There are **32 scenes** (two banks of 16) and a **Break scene**. Two scenes sit on either side of the **crossfader**: scene **A** on the left, scene **B** on the right. As you push the crossfader, the settings move **smoothly** from A's values to B's (stepped settings switch in the middle). Only the settings stored in A or B move: everything else stays as it is.



SCENES screen

1. **Scene A**: "Edit", then turn knobs on any screen (SOUND, EFFECTS, MIXER, panel, pedals): each setting you touch is added to the scene with its value. "Done" to exit. Values can also be adjusted in the list (drag), × removes a setting.
2. **Scene B**: the same, on the other side.
3. The **crossfader position**.
4. The **scene grid**: touching a scene places it **on the side you hear** (where the crossfader is); with **Shift**, it goes **to the other side**, ready to be brought in with the crossfader. Right-click: mute scene. The "Scene A" / "Scene B" values at the bottom also choose the scene on each side.
5. The **Break scene**: applied while **Break** (or the **B** key) is held.
6. The transport **crossfader** (also from the MIDI controller; double-click: back to the middle).
7. **Rows A to P**: launching a row also launches its **linked scene** (set in LAUNCH).

Playing several scenes in a chain: crossfader on the left on scene 1. **Shift** + scene 2: it goes to B. Push the crossfader to the right: the sound glides from scene 1 to scene 2. **Shift** + scene 3: it goes to A (the side you no longer hear). Bring the crossfader back to the left: the sound glides to scene 3. And so on, as many scenes as you like, without a gap. Crossfader movements are recorded in the song ("Rec motion"). From a MIDI controller, Program Change 0 to 31 launch scenes 1 to 32.

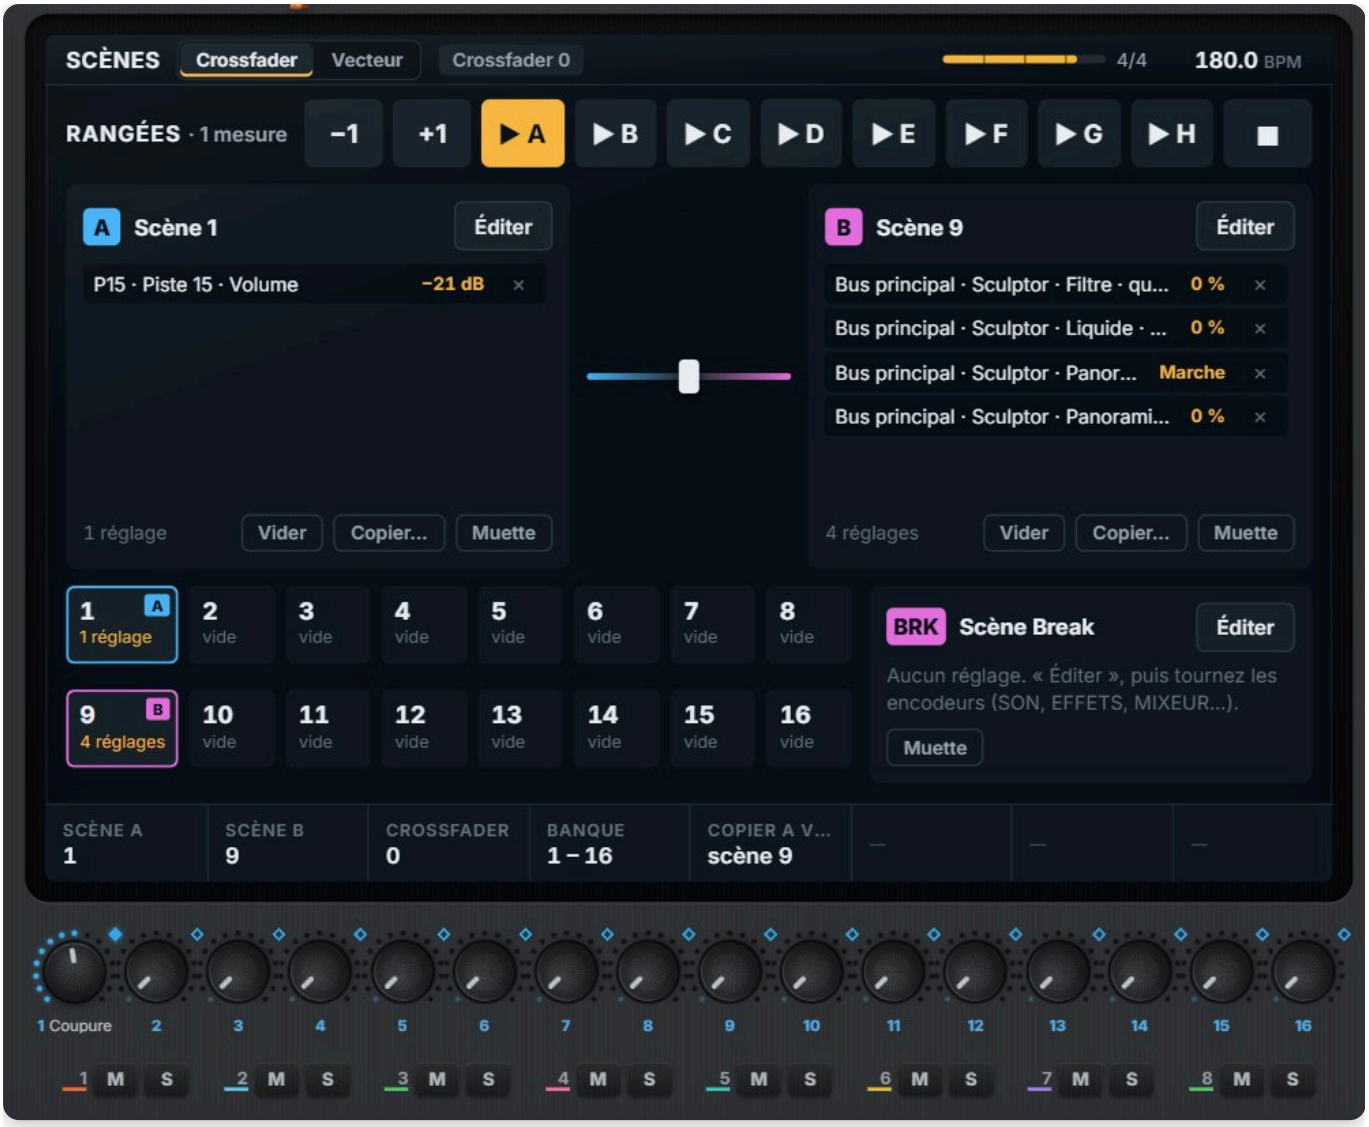

SCENES › Crossfader (PC): scene 1 in A, scene 9 in B, the crossfader between them

The vector pad (SCENES screen, **Vector** tab; the **Crossfader** tab keeps the A / B crossfader). Four scenes, one per corner (**A B C D**, chosen in "Corners"), blend according to the position of the dot on the pad: in the centre, all four in equal parts; in a corner, that corner's scene.

- **Pad active**: the pad replaces the A / B crossfader. Touching the pad activates it and places the dot; double-click: back to the centre. **X** and **Y** are also set at the bottom of the screen.
- **Motion**: the dot moves by itself around its place — Circle, Infinity, Diamond, Square, Triangle, Bounce, Random, or **Drawn** ("Draw a shape": draw it with your finger). The chosen shape is shown on the pad.
- **One cycle in**: from 1/2 to 128 bars, locked to the tempo. **Size**: the extent of the motion. **Height**: flattens or stretches the shape (from 5 % to 200 %): the circle becomes an oval, the square a rectangle, the infinity sign squashes or stretches. **Rotation**: turns the shape (0°, 45°, 90°, 135° in one touch; Infinity turns vertical at 90°). A drawn shape keeps its place and direction.
- **Shaping the motion on the pad**: dragging **moves** it (without jumping). On PC, **right-click drag** up or down: size; left or right: rotation; **wheel**: size, **Shift + wheel**: rotation. With fingers, **two fingers**: pinch for size, twist for rotation.
- All these values can be handed to an assignable knob or to the MIDI controller.



SCENES › Vector (PC): the "Infinity" motion travels through the four scenes

⛶ **Live view** (raspberry button next to the Crossfader / Vector tabs): the whole performance on a single screen, the showcase for playing live. At the top: Back, ● ▶ ■, **Crossfader** or **Vector** mode (with, in Vector, the motion, cycle length, Draw), the selected track and **Open the instrument**; then the **16 assignable knobs with the name of their function**; the **rows** (see below).

- **Crossfader mode**: scene A and its settings, a big crossfader (A, B, double-click: middle), scene B; next to it, the scene grid (banks 1–16 / 17–32, touch: launch) and the Break scene.
- **Vector mode**: the square pad and all its settings (corners, motion, length, size, height, rotation, drawing). **Crossfader** and **Vector** choose the view: switching to Crossfader stops the pad, switching to Vector does not start it. You set it up (you can even place the dot with your finger) without the sound changing, then **Pad stopped / Pad active** (green while it plays) starts or stops it.
- The live view's **scene cards** are for playing: the scene name and its settings. You edit them beforehand, in the SCENES screen.
- **Console** (PC): the 16 tracks with volume fader, peak meter, **FX** (the track's effects, as pedals), **M / S**; **Tracks / Groups** shows the mixer groups, and in Tracks view the groups in use take the place of tracks with no instrument. Touching a track's name or fader selects it (Open the instrument, effects, knobs to assign); ✕ in the instrument or the effects brings you back to the live view.


- At the bottom: the **position** (bar, beat, loop, song row) and **Photo / Recall / Knob mods**.
- On a phone, the console becomes the track list (name: select, M / S).



Live view · Crossfader



Live view · Vector

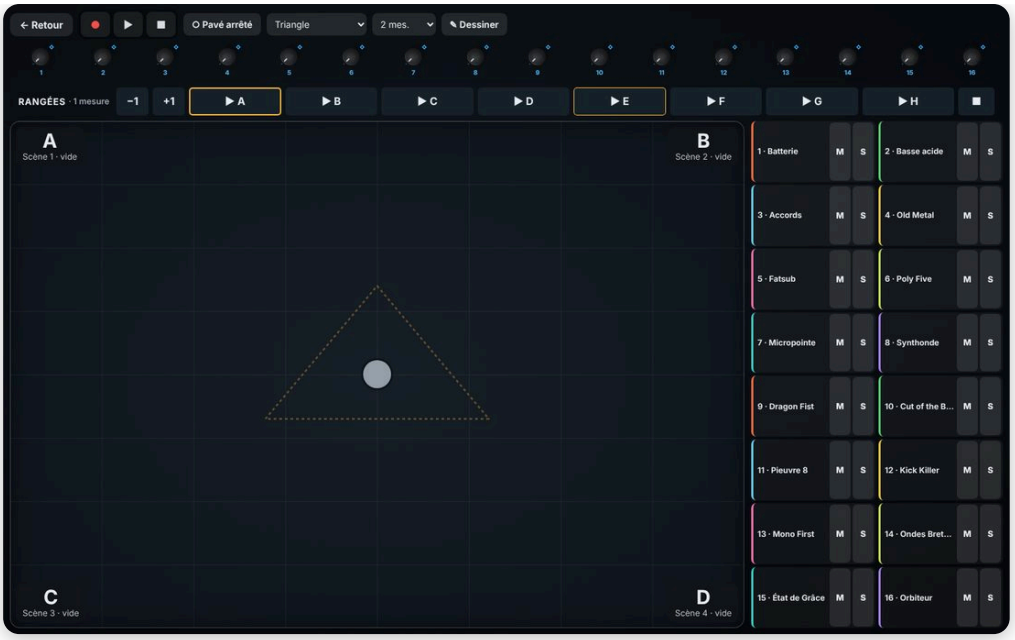

Live view on a phone

8. Song

LAUNCH › Song screen: **rows** played one after another in song mode. "Rec performance" turns your playing into rows; **REC** (or "Rec motion") records the movements: knobs, faders, EQs, mutes, solos, groups, crossfader. In song mode they go to the song; in loop mode, a track's settings go into its pattern's loop.



LAUNCH › Song: the rows (pattern of each track) and, below, the recorded curves

9. Audio arrangement

LAUNCH › Audio screen: place the playhead, "● Record a take", play (the take starts at the beginning of the next bar and lands at the playhead); at the end, each track becomes audio clips, to split, move, duplicate; **Arrange mode** to hear them; WAV or MP3 export of the finished track.

Recording a loop, right on the bar: place the loop on the ruler (right-click + drag, "Bar" snap), turn **Loop** on, then "● Record a take". The take starts at the beginning of the next bar, lasts **exactly** the length of the loop, **stops by itself** at its end (to the sample) and lands at the start of the loop: each

track played becomes a clip exactly the length of the loop. No more stopping by hand at the right moment.



LAUNCH › Audio: the clips of each track, the ruler, the playhead; below, the selected clip (volume, fades, split, copy, duplicate)

10. Saving

SETTINGS › Project screen: Save (a .gbx file with sounds, samples, sequences, scenes) or "As template" (settings and sounds, without the writing). **Demo project**, **New empty project** and **Open…** light up yellow when touched, and a message confirms the loading. The demo is deliberately light (7 instruments, 11 effects) to run on every phone. It also shows the vector pad in motion (Circle, one cycle in 16 bars) and assignable knob 1 linked to the filter cutoff of Kick Killer. The audio arrangement is stored in the "<project name> - audio" folder next to the file.



SETTINGS screen: project (demo, empty, open, save, template), folders, recording, MIDI

Undo and photo: ↶ ↷ (Ctrl+Z, Ctrl+Y) undo up to 50 steps. **Photo** freezes all settings; **Recall** goes back to it in one gesture (and can be undone with Ctrl+Z).

MIDI controller

Plugging in a controller: plug and play

- **USB**: plug in the keyboard or controller, it is recognised by itself, with nothing to set up — in the PC application as on an Android phone or tablet (with a USB-C "OTG" cable or hub). You can plug it in or unplug it while the Groovebox is running.
- **Bluetooth (Android)**: Settings › "**Pair a Bluetooth controller...**". The first time, Android asks for Bluetooth permission; then choose your wireless MIDI keyboard or controller from the list: it plays like a USB controller.
- **On PC**, a Bluetooth controller only works if Windows presents it as a MIDI port: USB is the simplest.
- **In a host application** (VST3): the host receives the controller and sends it to the Groovebox.
- Notes play the selected track (or the tracks set to a channel, Settings › MIDI); on a drum kit, notes 36 to 51 play the 16 pads. The mod wheel, pitch bend and sustain pedal follow the track being played.
- Phone with a single USB-C port: a USB-C hub with charging (PD) lets you plug in the keyboard, the USB audio output to the mixing desk and the charger at the same time.

Assigning the controller's controls

- Right-click (long press) on a setting › **Learn MIDI**, then touch the control on the controller. This also works for the **values at the bottom of the screens** and the global settings: tempo, swing, crossfader, scenes A and B, vector pad (X, Y, motion, size...) and macros.
- The **16 assignable knobs** can be learned too: map a row of knobs on the controller to knobs 1 to 16, then hand them whatever you want (Assign to...).
- Right-click on the buttons (M / S, rows, Photo, Recall, transport...): assign them to the controller.
- Settings › MIDI: notes channel, commands channel, a channel for each track.
- In the Android app: Settings › "**Pair a Bluetooth controller...**" (wireless MIDI keyboard or controller); a USB keyboard is recognised by itself.



Long press (right-click) on a bottom value: exact value, modulation, Learn MIDI, knob 1 to 16

Where your files are

- Projects, samples, presets: Documents\Groovebox (folders can be changed in Settings).
- Audio recordings and arrangement exports: Documents\Groovebox\Enregistrements.
- Takes from a project's arrangement: the "<project name> - audio" folder next to the .gbx.