


C O R E D E C K

Tactile fire-control for the agentic coding workflow

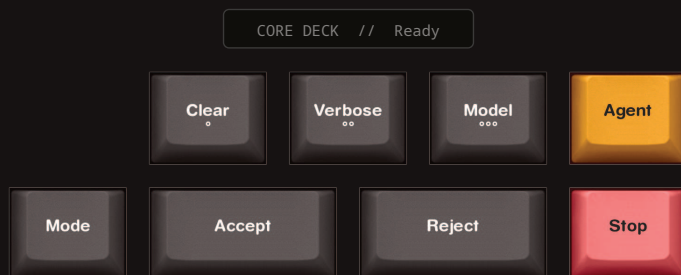

○ ○ ○ — Soft keys: reconfigurable via companion app.

Cherry MX

QMK / VIAL

USB-C

TFT Display

RGB LEDs

coredeck.sh

SPECIFICATIONS

Controller	RP2040 (Cortex-M0+)
Keys	8 × Cherry MX mech.
Encoder	EC11 rotary + push
Display	2.25" TFT, 284×76 px
LEDs	8 × WS2812B RGB
Connection	USB 2.0 Type-C
Firmware	QMK / VIAL (open)
Power	< 500 mA bus pwr

GETTING STARTED

- 1 Plug in USB-C. Display shows the Core Deck logo.
- 2 All buttons work instantly as a USB keyboard.
- 3 Install companion app for display & soft key config.
- 4 Hold a soft key (° °° °°°) to peek at its assignment.

FIRMWARE UPDATES

1. Unplug the device.
2. Hold Agent (orange) + plug USB-C.
3. USB drive "RPI-RP2" appears.
4. Drag .uf2 firmware onto drive.

Alt: double-press reset button accessible through bottom plate within 500 ms.

REQUIREMENTS

- USB port required (USB-C cable included)
- No drivers — standard USB keyboard
- Optional: companion app for display & soft key features

KEY BINDINGS

Key	Sends	Function
Agent	F20	Trigger app
Clear °	Esc × 2	Clear input
Verbose °°	Ctrl+O	Verbose output
Model °°°	/model ⇐	Model selector
Stop	Ctrl+C	Interrupt
Accept	Enter	Confirm
Reject	Esc	Cancel
Mode	Shift+Tab	Cycle mode

ENCODER & COMBOS

Input	Action
Rotate	↑ / ↓ scroll
Press	Enter
sd/sdf	Switch tabs
	Mouse scroll
	Auto-approve
g n t	Peek at alert details

Source & docs

github.com/core-deck

Companion app

github.com/core-deck/core-deck



Core Deck · Calle Gil-Vernet 54/55, Poligono Les Tapies 1 #1118, 43890 Hospitalet de l'Infant, Tarragona, Spain
Product: Core Deck Macropad Rev 1 · EMC 2014/30/EU · RoHS 2011/65/EU · EU DoC: coredeck.sh/doc
Do not dispose with household waste. Return to a designated WEEE collection point.