
# Custom Roles

Updated September 28, 2026 at 11:21 PM

In addition to the default administrative roles available in the Samsara dashboard, you can customize your own roles and permissions for administrators.

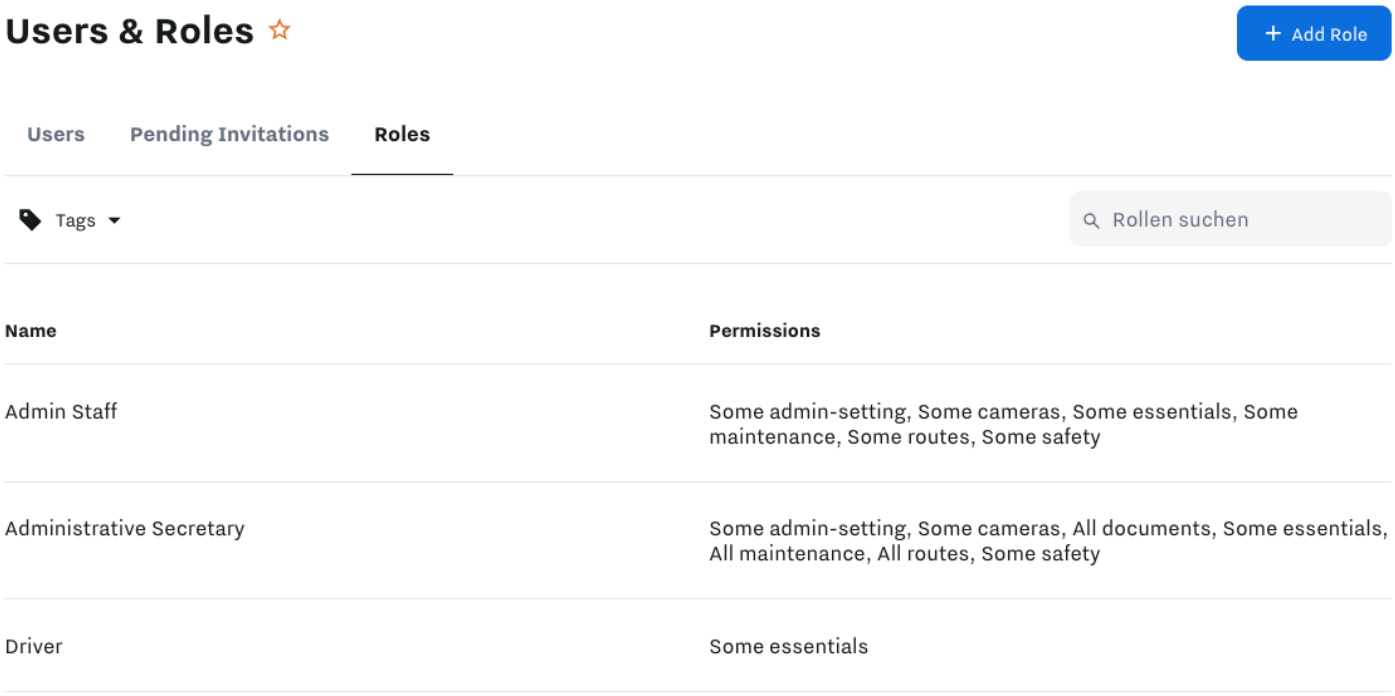


To view permissions or add a custom role, reference the following topics:

- Add a Custom Role
- Duplicate a Role
- Permissions for Custom Roles


## Add a Custom Role

After you create a custom role, you can assign it when you create new administrative users. Using a custom role type and a tag in combination will limit administrative access to the features allocated within their role, to manage or view the drivers, vehicles, and other devices assigned the tag.


You can also create a copy of an existing role, such as a default Samsara administrator role, and modify it into a new role. See Duplicate a Role for more information.

To add a custom role, perform the following workflow:

1. Select the Settings icon ( ⚙ ) at the bottom of your Fleet menu.
2. In **Organization > Users & Roles > Roles**, select **+ Add role**.
3. Click into the **Name your role** field and enter a descriptive name.

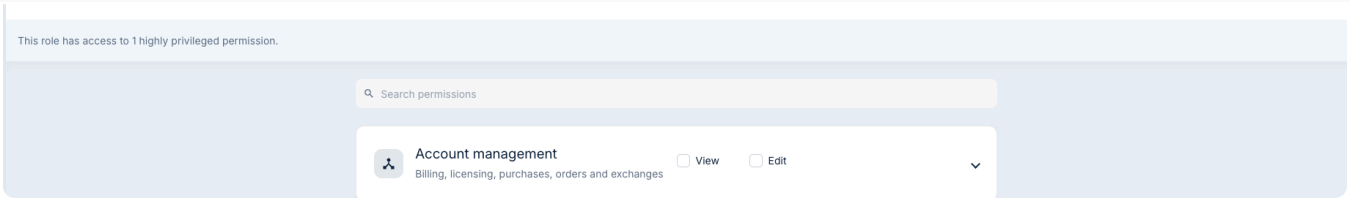


4. (Optional) Add a custom description if you want to set a description of the role instead of view an auto-populated list of permissions the custom role can access.

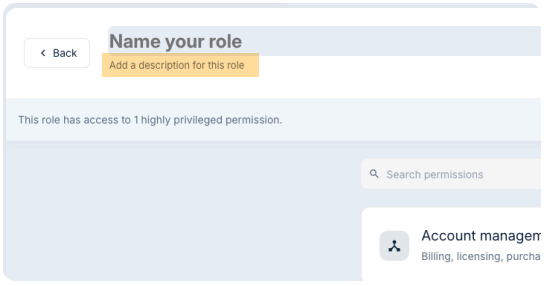



5. Enable **View** or **Edit** permissions for each section or, for more granular permissions, expand the section and select the permissions individually. See Permissions for Custom Roles for granular detail of each permission.
6. **Save** the custom role.

# Duplicate a Role


You can create a copy of any administrative role, which you can then modify. This enables you to modify Samsara default roles which are otherwise not editable, or make a copy of custom roles instead of building roles from scratch.

To duplicate a role, perform the following workflow:

1. Select the Settings icon ( ⚙ ) at the bottom of your Fleet menu.
2. In **Organization > Users & Roles > Roles**, select the more actions ( ••• ) menu of the role you would like to copy and modify, then select **Duplicate**.

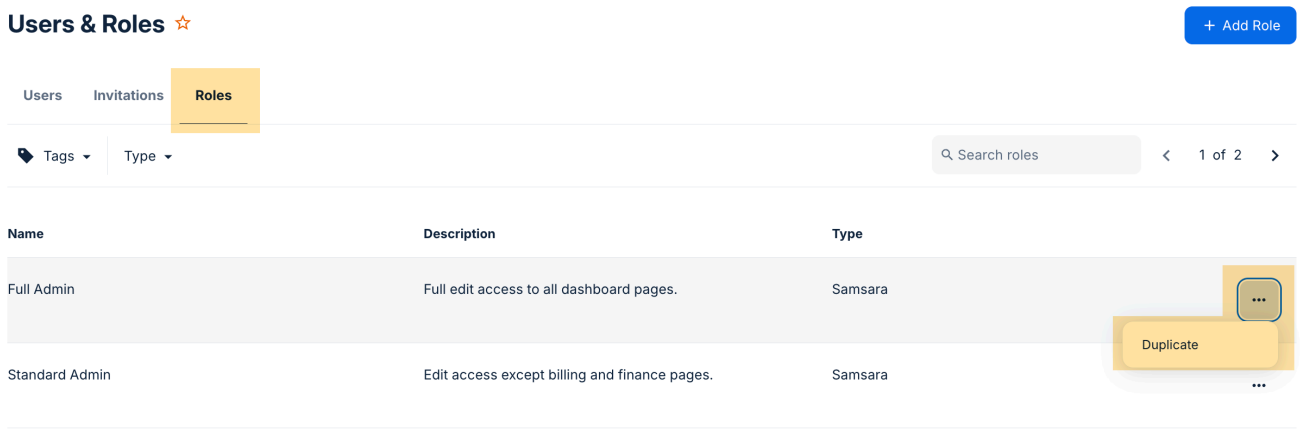



3. Rename the copy of the role.

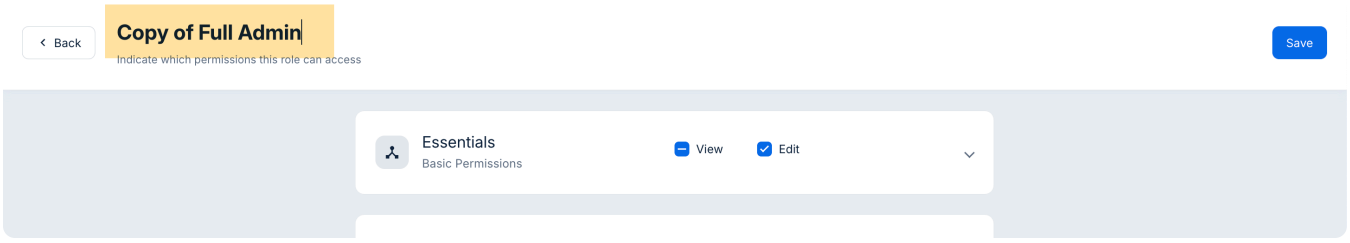

# Permissions for Custom Roles

For each role that you create, you can assign unique levels of administrative access and granular permissions required for specific workflows. You can assign basic or custom permissions for each user including view and edit capabilities for certain categories. Samsara frequently updates categories and permissions to optimize site-wide usability. You can use the **Search permissions** bar to quickly find permissions using keywords such as privacy, driver, safety, etc.

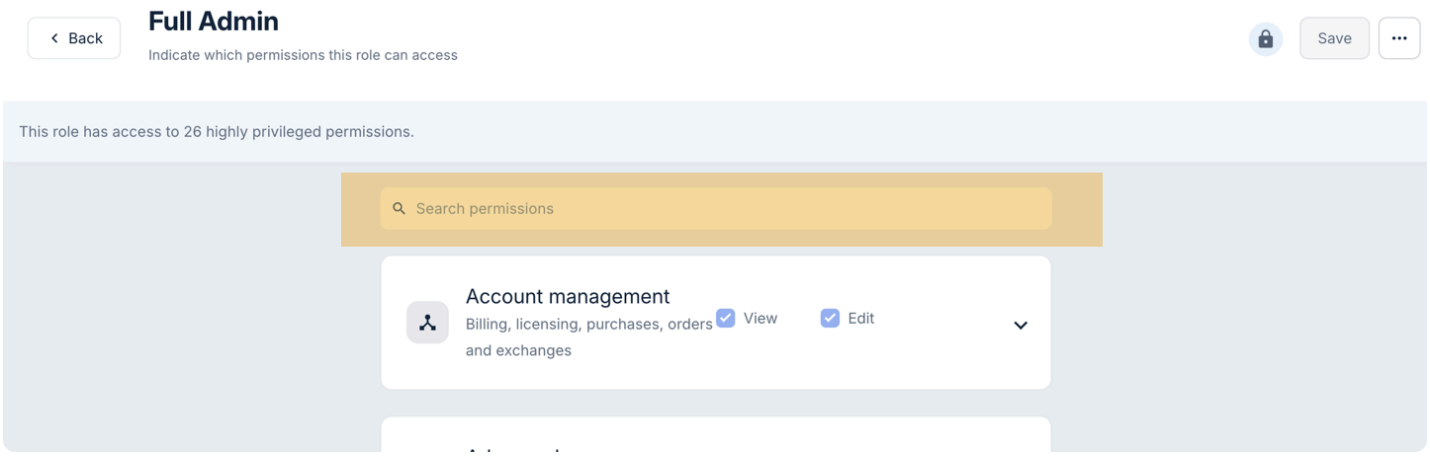


## Note

All custom roles come with default, read-only permissions to access and load basic navigation content in the Samsara dashboard. These permissions include the ability to see the name and logo of your organization, and the names of drivers, devices, tags, and map overlays.

These are identity-level reads only, meaning they display names and IDs, but not detailed records, telemetry, scores, or settings (which you can customize to include). These default permissions come with all custom roles and cannot be turned off because the application requires them to function.

Click the links below to navigate directly to that section in the table.

- Account Management (Billing, licensing, purchases, orders and exchanges)
- Advanced (Advanced features for administrators)
- AI Assistant (Control interactions with Samsara's AI Chat)
- API & Integrations (API & Integration Settings)
- Asset Qualifications (Asset Qualifications Settings)
- Cameras (Manage access to videos, images & audio)
- Compliance (Available to organizations in the EU: Manage compliance reports)
- Competitions (Driver competitions and leaderboards)
- Device Configs (Permissions for managing device configs)
- Documents (Document Settings)
- Driver Assignment (Manage driver assignment methods)
- Driver Details (Create and manage drivers)
- Essentials (Basic Permissions)
- Fleet Security (Fleet security)
- Forms (Form Settings)
- Fuel (Fuel Settings)
- Hubs (Create and manage hubs)
- Incident Center (View and manage incidents by type
- Maintenance (Inspection reports and defects)
- MEM (Mobile Experience Management)
- Privacy (Privacy Settings)
- Recognition (Manage positive recognition)
- Reservations (Create and manage vehicle and equipment reservations)
- Route Planning (Create and manage route planners)
- Routes (Create and manage routes)
- Safety (View Camera Assets, Manage Safety Events)
- Security Policies (Configure your organization's security policies, such as MFA and driver passwords)
- Settings (Organizational Settings)
- Speeding (Manage device speeding)
- Training (Training Settings)
- Worker Qualifications (Worker Qualification Settings)
- Worker Safety (Manage worker safety incidents)

| Permission | Access | Description |
|---|---|---|
| ***Account Management (Billing, licensing, purchases, orders, and exchanges)*** | | |
| Billing | View | Billing, payments, and invoices<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| | Edit | Payment method<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| Itemized Billing | View | Itemized billing reports |
| | Edit | Create, edit, and delete itemized billing configurations |
| Billing Roles | Edit | Create, delete, or edit roles with Billing permissions<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role.<br>This permission requires that you additionally enable **Settings > Edit: Users, Roles, and Tags** |
| Orders & Exchanges | View | View orders and exchange records on order history page<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| | Edit | Grants permission to make purchases and submit warranty exchanges<br>Choose from these individual settings below to fine-tune access:<br>• Purchase licenses and hardware from the Webstore<br>• Purchase only hardware from the Webstore<br>• Submit warranty exchanges<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| License Assignment | View | License assignments |
| | Edit | Create and edit license assignments<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| ***Advanced (Advanced features for administrators)*** | | |

| | | |
|---|---|---|
| Remotely Sign Out Drivers | Edit | Sign out drivers from the Samsara Driver App through the dashboard. |
| ***AI Assistant (Control interactions with Samsara's AI Chat)*** | | |
| Assistant Access | View | Allows users to interact with the AI Assistant. |
| ***API & Integrations (API & Integration Settings)*** | | |
| API Authentication | View | View API token and view OAuth 2.0 identities. API tokens and OAuth 2.0 secrets will be blurred.<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role.<br>This permission also grants access to view Users and Roles. |
| | Edit | View and create API tokens and OAuth 2.0 Apps.<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| App Marketplace | View | App marketplace, integrations, and information about your developer account<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| | Edit | Install third party applications and configure integrations<br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| Webhooks | View | Webhooks |
| | Edit | Create, edit, and delete webhooks |
| Developer Metrics | View | API requests on the developer metrics page |
| Data Streaming | View | View API stream subscriptions |
| | Edit | Create, edit, and delete API stream subscriptions |

| | | |
|---|---|---|
| | | Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| | Edit | Create, edit, and delete the CARB Clean Truck Check Application |
| Functions | View | View created functions, function configuration, and function logs |
| | Edit | Create, modify, and delete functions and function configuration |
| ***Asset Qualifications (Asset Qualifications Settings)*** | | |
| Manage Asset Qualification Sets And Types | View | View Asset Qualification Sets and Types |
| | Edit | Create, edit and delete Asset Qualification Sets and Types and manage their tag or attribute mapping.<br>This permission should be granted at the organization level. It cannot be assigned to individual tags. |
| Manage Asset Qualification Records | View | View Asset Qualification Records<br>This permission includes the ability to view all information within a Qualification Record. Only provide this permission to users that should have access to potentially sensitive data |
| | Edit | Create, edit, renew and archive Asset Qualification Records |
| View limited information within Asset Qualification Records | View | View limited information within an Asset Qualification Record.<br>This permission only includes viewing Issue Date and Expiration Date and hides all other sensitive data. |
| ***Cameras (Manage access to videos, images & audio)*** | | |
| Live Streaming | Edit | Initiate and watch live stream video footage from vehicles on trips<br>This permission requires that you additionally enable **Essentials > View: Drivers, Gateways, Location Data, and Reports** |
| Two-Way Audio Call | Edit | Initiate two-way audio calls to drivers through the dash cam. |
| Road Camera Assets | View | Enable user to view Road-facing camera assets. |
| Driver Assets | View | Enable user to view Driver-facing assets. |
| External Assets | View | Enable user to view External-facing assets. |

| | | |
|---|---|---|
| Left Side Camera Role | View | Enable user to view camera feeds assigned the Left Side camera role. |
| Left Forward Facing View Camera Role | View | Enable user to view camera feeds assigned the Left Forward Facing View camera role. |
| Left Back Camera Role | View | Enable user to view camera feeds assigned the Left Back camera role. |
| Right Side Camera Role | View | Enable user to view camera feeds assigned the Right Side camera role. |
| Right Forward Facing View Camera Role | View | Enable user to view camera feeds assigned the Right Forward Facing View camera role. |
| Right Back Camera Role | View | Enable user to view camera feeds assigned the Right Back camera role. |
| Rear High Camera Role | View | Enable user to view camera feeds assigned the Rear High camera role. |
| Rear Bumper Camera Role | View | Enable user to view camera feeds assigned the Rear Bumper camera role. |
| Front Camera Role | View | Enable user to view camera feeds assigned the Front camera role. |
| In Cab Camera Role | View | Enable user to view camera feeds assigned the In Cab camera role. |
| Lift Arm Camera Role | View | Enable user to view camera feeds assigned the Lift Arm camera role. |
| Gripper Camera Role | View | Enable user to view camera feeds assigned the Gripper camera role. |
| Hopper Camera Role | View | Enable user to view camera feeds assigned the Hopper camera role. |
| Front Door Camera Role | View | Enable user to view camera feeds assigned the Front Door camera role. |
| Side Door Camera Role | View | Enable user to view camera feeds assigned the Side Door camera role. |
| Rear Door Camera Role | View | Enable user to view camera feeds assigned the Rear Door camera role. |
| Left BEV Camera Role | View | Enable user to view camera feeds assigned the Left BEV camera role. |

| | | |
|---|---|---|
| Rear BEV Camera Role | View | Enable user to view camera feeds assigned the Rear BEV camera role. |
| Front BEV Camera Role | View | Enable user to view camera feeds assigned the Front BEV camera role. |
| Other BEV Camera Role | View | Enable user to view camera feeds assigned the Other BEV camera role. |
| BEV Not Used Camera Role | View | Enable user to view camera feeds assigned the BEV Not Used camera role. |
| Other 1 Camera Role | View | Enable user to view camera feeds assigned the Other 1 camera role. |
| Other 2 Camera Role | View | Enable user to view camera feeds assigned the Other 2 camera role. |
| Other 3 Camera Role | View | Enable user to view camera feeds assigned the Other 3 camera role. |
| Other 4 Camera Role | View | Enable user to view camera feeds assigned the Other 4 camera role. |
| Other 5 Camera Role | View | Enable user to view camera feeds assigned the Other 5 camera role. |
| Not Used Camera Role | View | Enable user to view camera feeds assigned the Not Used camera role. |
| Unblurred Assets | View | Enable user to view unblurred assets. |
| Audio | View | Enable user to hear audio from camera assets. |
| ***Compliance (Manage compliance reports. For organizations in the EU only)*** | | |
| Driver Hours | View | View Driver Hours Report<br>This permission requires that you additionally enable **Essentials > View: Reports/General**. |
| Infringements | View | View Infringements<br>This permission requires that you additionally enable **Essentials > View: Reports/General**. |
| Tachograph Downloads | View | View Tachograph File Downloads<br>This permission requires that you additionally enable **Essentials > View: Reports/General**. |

| | | |
|---|---|---|
| | | This permission requires that you additionally enable **Essentials > View: Reports/General**. |
| Timesheet | View | View Timesheet Report<br>This permission requires that you additionally enable **Essentials > View: Reports/General**. |
| Unassigned Driving | View | View Unassigned Driving Report<br>This permission requires that you additionally enable **Essentials > View: Reports/General**. |
| Infringements Rulesets | Edit | Create and modify EU Infringements Rulesets |
| ***Competitions (Driver competitions and leaderboards)*** | | |
| View Competitions | View | View competitions and leaderboards |
| Manage Competitions | Edit | Create, update, and manage competitions |
| ***Device Configs (Permissions for managing device configs)*** | | |
| Override camera config fields | Edit | Set camera config fields via json config override |
| ***Documents (Document Settings)*** | | |
| Documents | View | View documents |
| | Edit | Edit, archive, and delete documents |
| Document Templates | Edit | Create and edit document templates<br>This permission requires that you additionally be an organizational admin and enable **Documents > Edit: Documents** |
| ***Driver Assignment (Manage driver assignment methods)*** | | |
| Manage QR Codes | Edit | Share and revoke driver QR Codes<br>This permission requires that you additionally enable **Essentials > View: Drivers** |
| ***Driver Details (Create and manage drivers)*** | | |

| | | |
|---|---|---|
| Driver Activation | Edit | Activate and deactivate drivers from the drivers page in settings<br><br>This permission requires that you additionally enable **Driver Details > View: Drivers** |
| Driver Settings | Edit | Edit all driver settings from the drivers page in settings and driver view page<br><br>This permission requires that you additionally enable **Driver Details > View: Drivers**<br><br>Choose from these individual settings below to fine-tune access:<br><br>• Edit driver name<br>• Edit driver phone number<br>• Edit driver license number<br>• Edit driver license state or province<br>• Edit driver tags<br>• Edit driver attributes<br>• Edit driver notes<br>• Edit driver username and password<br>• Edit driver HOS<br>• Edit driver ruleset<br>• Edit driver carrier information<br>• Edit driver locale override<br>• Edit driver peer group<br>• Edit driver static vehicle<br>• Edit driver vehicle and trailer selection<br>• Edit driver ID token |
| ***Essentials (Basic Permissions)*** | | |
| Driver Logs | View | Compliance pages and HOS logs<br><br>To open the Driver Hours of Service (HOS) page, also enable **Essentials > View: Reports/General** and scope the role to the Entire Organization. A role scoped to a tag can still view HOS for drivers in that tag from the driver profile. |
| | Edit | HOS logs |
| Driver Logs - Ignore | Edit | Ignore driving segments |
| Unassigned Segments | View | Unassigned segments |
| | Edit | Annotate and assign unassigned segments |
| Gateways | View | Vehicle, asset, site, and industrial gateways |
| | Edit | Edit and remove gateway settings and edit vehicle gateway from vehicle page |
| Manage General Vehicle Attributes | Edit | Edit only vehicle name and license plate<br><br>This permission requires that you additionally enable **Essentials > View: Gateways** |

| | | |
|---|---|---|
| OEM Health | View | View OEM gateway health issues and reporting. |
| Location data | View | View location of vehicles, trailers, and assets on fleet overview, dispatch, and proximity pages |
| Live Share | Copy | Existing live share links |
| | Edit | Create and edit live share links |
| Sensors | View | View environment page, sensors throughout the dashboard, and sensors in settings |
| | Edit | Edit sensor configurations in settings |
| Alerts/Automations | View | View and download alerts/automations |
| | Edit | Create, edit, and remove alerts/automations |
| Messages | View | View and print messages<br>This permission requires that you additionally enable **Driver Details > View: Drivers** |
| | Edit | Send messages<br>This permission requires that you additionally enable **Driver Details > View: Drivers** |
| Reports/General | View | View reports page, trip history, time on site and equipment report |
| Custom Reports and Benchmarking | View | Custom reports & benchmarks |
| | Edit | Custom reports & benchmarks |
| Reefer Control | Edit | Remotely control reefer on/off status, run mode, and set point |
| Map Editor | View | View data in the Map Editor |
| | Edit | Edit or Apply new overrides in Map Editor |

| | | |
|---|---|---|
| Fleet Security Manager | Edit | Allows user to configure organization wide immobilization configurations<br>This permission requires that you additionally enable **Settings > Edit: Additional Admin Settings** |
| Immobilization Manager | Edit | Allows user to remotely immobilize a vehicle (immobilization depends on the speed threshold)<br>This permission requires that you additionally enable **Essentials > Edit: Gateways** |
| ***Forms (Form Settings)*** | | |
| Forms Submissions | View | View Form Submissions. Also enables permission to read the form template and display submission fields.<br>This permission is required for all other Forms Submissions settings and permissions. |
| | Assign | Assign and reassign Form Submissions.<br>Independent Edit sub-permission (enables view and assignment of Form Submissions only). |
| | Create | Create Form Submissions. |
| | Edit | Edit and approve Form Submissions. |
| Form Templates | View | View Form Templates.<br>This permission is required for all other Forms Templates settings and permissions. |
| | Create | Create and edit Form Templates. |
| | Delete | Delete Form Templates.<br>Separate from Edit as an additional guardrail since deletion is irreversible. |
| Issues | View | View Issues.<br>This permission is required for all other Issues settings and permissions. |
| | Assign | Assign and reassign Issues.<br>Independent Edit sub-permission (enables view and assignment of Issues only). |
| | Create | Create Issues. |
| | Edit | Edit Issues. |

| | | |
|---|---|---|
| Fuel & Energy Reports | View | Fuel & Energy Hub, Fuel & Energy Report, Fuel Benchmark Report, IFTA, Idling Events Report, Driver Efficiency (Eco-Driving) Report, Sustainability Report, EV Suitability Report, and Idling Heatmap overlay<br>This permission requires that you additionally enable **Essentials > View: Reports/General**. |
| | Edit | Driver Efficiency (Eco-Driving) profiles, edit carbon emission factors, view and edit vehicle engine and fuel types<br>This permission requires that you additionally enable **Settings > View: Additional Admin Settings**. |
| Fuel Purchases | View | Fuel Purchases and Fuel Purchase details |
| | Edit | Upload, edit, and delete Fuel Purchases and Fuel Purchase details |
| Fuel Cards | View | Fuel Card Vendors |
| | Edit | Add, edit, and delete Fuel Card Vendors |
| Fuel Costs | View | Fuel Costs |
| | Edit | Create and edit Fuel Costs |
| Unproductive Idling Configuration | Edit | Create and edit the global unproductive idling config |
| ***Hubs (Create and manage hubs)*** | | |
| Manage hubs | View | View hubs |
| | Edit | Create, edit, and remove hubs |
| ***Incident Center (View and manage incidents by type)*** | | |
| For more information on what each incident type does, see Incident Center. | | |
| Away from Org | View | View Away from Org incidents |
| | Edit | Manage Away from Org incidents |

| | | |
|---|---|---|
| | Edit | Manage Asset left behind incidents |
| SOS on Driver App | View | View SOS on Driver App incidents |
| | Edit | Manage SOS on Driver App incidents |
| Vehicle crash | View | View Vehicle crash incidents |
| | Edit | Manage Vehicle crash incidents |
| Suspicious fuel drop | View | View Suspicious fuel drop incidents |
| | Edit | Manage Suspicious fuel drop incidents |
| GPS jamming | View | View Marked as missing incidents |
| | Edit | Manage Marked as missing incidents |
| Marked as missing | View | View Marked as missing incidents |
| | Edit | Manage Marked as missing incidents |
| Panic Button pressed | View | View Panic Button pressed incidents |
| | Edit | Manage Panic Button pressed incidents |
| Unqualified Move | View | View Unqualified move incidents |
| | Edit | Manage Unqualified move incidents |
| SOS on Wearable | View | View SOS on Wearable incidents |
| | Edit | Manage SOS on Wearable incidents |

| | | |
|---|---|---|
| Maintenance Log | View | View maintenance features<br><br>This permission requires that you additionally enable **Essentials > View: Gateways** |
| | Edit | Create and edit schedules, DVIRs, and logs<br><br>When your organization uses granular maintenance permissions, creating and editing DVIRs from the dashboard uses the separate **DVIRs** permission. That permission is distinct from **Service Logs** and from **Preventive Maintenance Schedules**.<br><br>This permission requires that you additionally enable **Essentials > View: Gateways** |
| Work Orders | View | View all Work Order details except labor costs.<br><br>To view labor cost information, enable the View labor rate permission. |
| | Edit | Edit all aspects of a Work Order. Choose from these individual settings below to fine-tune access:<br><br>• Create Work Orders<br>• Edit Work Order properties (priority, category, etc.)<br>• Edit Items in a Work Order<br>• Edit Service Tasks and Attachments in a Work Order<br>• Edit Work Order assignment<br>• Can self assign Work Order<br>• Close Work Order<br>• Delete Work Orders<br>• View, create, edit, and delete Forms Submissions and Forms Issues in a Work Order |
| Labor Rate | View | View labor rate<br><br>Disabling this permission impacts all areas of reporting that include labor costs |
| | Edit | Edit labor rate |
| Maintenance Settings | View | View maintenance settings page |
| | Edit | Edit maintenance settings |
| Warranty | View | View warranty list page |
| | Edit | Edit warranties |
| Inventory | View | View inventory list page |
| | Edit | Edit inventory |
| Maintenance Report | View | View maintenance reports |

| | | |
|---|---|---|
| Mobile Experience Management | View | View access to all MEM pages such as devices and policies associated with the Samsara MEM solution.<br><br>Does not permit any device commands such as to initiate a remote session, restart, reset, or edit device name.<br><br>This permission requires that you additionally enable **Essentials > View: Drivers, Gateways, Location Data, and Messages** |
| | Edit | Edit access to all MEM pages such as devices and policies associated with the Samsara MEM solution.<br><br>Enables you to perform device commands such as to initiate a remote session, perform a restart or factory reset, edit the device name, and lock the device.<br><br>This permission requires that you additionally enable **Essentials > View: Drivers, Gateways, Location Data, and Messages** |
| ***Privacy*** | | |
| Sensitive Assets | Edit | View sensitive media and add or remove a **Sensitive** context label.<br><br>Those without access to sensitive media see a placeholder instead of the still or video, and won't be able to add or remove a **Sensitive** context label.<br><br>This permission requires that you additionally enable:<br><br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports**<br><br>or<br><br>• **Cameras > View: Driver Assets**<br>• **Cameras > View: External Assets** |
| ***Recognition (Manage positive recognition)*** | | |
| Recognition Pages & Reports | View | View Streaks, Milestones, Score Improvements, and historical reward information.<br><br>This permission requires that you additionally enable **Essentials > View: Drivers** |
| Send Kudos | Edit | Send kudos to drivers and view historical kudos information.<br><br>This permission requires that you additionally enable:<br><br>• **Recognition > View: Recognition Pages & Reports**<br>• **Driver Details > View: Drivers** |
| Send Rewards | Edit | Send monetary rewards to drivers and view historical reward information.<br><br>This permission requires that you additionally enable:<br><br>• **Recognition > Pages & Reports**<br>• **Driver Details > View: Drivers** |
| ***Reservations (Create and manage vehicle and equipment reservations)*** | | |

| | | |
|---|---|---|
| | Edit | Create, edit, and cancel reservations |
| ***Route Planning (Create and manage route planners)*** | | |
| Manage route plans | View | View and create route plans |
| | Edit | Create, edit, and remove route plans |
| ***Routes (Create and Manage Routes)*** | | |
| Manage Routes | View | View routes page, dispatch page, route reports, and download routes.<br>This permission requires that you additionally enable **Essentials > View: Location Data** |
| | Edit | Create, edit and remove routes |
| ***Safety (View Camera Assets, Manage Safety Events)*** | | |
| Inbox & Report | View | View safety inbox, safety report, dash cam pages, visual review, and other applicable pages, and view videos of events surfaced in safety inbox.<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports** |
| | Edit | Edit safety events (add labels on events, add safety managers, assign drivers, and add comments)<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports** |
| Dash Cam Images | View | View dash cam images, such as trip stills and recent images, across the dashboard, including the Cameras page.<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports** |
| Dismiss Safety Events | Edit | Update coaching status of a safety event to Dismissed only<br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |

| | | |
|---|---|---|
| | | This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| Review Safety Events | Edit | Update coaching status of a safety event to Reviewed only<br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| Share Safety Events | Edit | Share events to drivers through the Driver App and Driver Portal<br>This permission requires that you additionally enable:<br>• **Safety > Edit: Inbox & Report**<br>• **Safety > Edit: Coaching**<br>• **Essentials > View: Drivers** |
| Coach Safety Events | Edit | Update coaching status of a safety event to Coached or Recognized only<br>This permission requires that you additionally enable **Safety > Edit: Inbox & Report** |
| Add Behavior Labels | Edit | Create behavior labels for safety events<br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| Remove Behavior Labels | Edit | Remove behavior labels from safety events<br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| Comment on Safety Events | Edit | Add comments on safety events<br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| Safety Event Assignment | Edit | Assign, update, and remove drivers and coaches for safety events<br>This permission requires that you additionally enable:<br>• **Safety > View: Coaching**<br>• **Driver Details > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Custom Reports and Benchmarking**<br>• **Essentials > View: Location Data** |
| Safety Event Access - Coach | View | View safety events for all coaches.<br>This permission requires that you additionally enable:<br>• **Safety > View: Safety Event Access - Driver**<br>• **Safety > View: Safety Event Access - Vehicle** |
| Safety Event Access - Panic Button | View | View dash cam videos and trip details for panic button events. To install the Panic Button and configure Panic Button video retrieval and alerts, see Panic Button.<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data** |
| Safety Event Access - Driver | View | Enable user to view safety events in the Safety Inbox based on driver assignment.<br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |

| | | |
|---|---|---|
| | | This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| Video Download | Edit | Download video from events surfaced in safety inbox<br>This permission requires that you additionally enable:<br>• **Safety > View: Inbox & Report**<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports** |
| Multicam Installation | View | Multicam devices |
| | Edit | Multicam devices and check activated multicam assets |
| Dash Cam Installation | View | Check dash cam installation (take picture functionality)<br>This permission requires that you additionally enable:<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data** |
| Coaching | View | Coaching page and other users<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports** |
| | Edit | Coach drivers, edit coaching status, and add coaching comments<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports**<br>• **Safety > Edit: Inbox & Report** |
| Coaching Priority | View | Provides access to Coaching Priority.<br>This permission requires that you additionally enable **Essentials > View: Drivers** |
| Video Retrieval | View | View video retrievals and video library page.<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports** |
| | Edit | Request video retrieval.<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Essentials > View: Gateways**<br>• **Essentials > View: Location Data**<br>• **Essentials > View: Reports** |

This permission requires that you additionally enable:

- **Essentials > View: Drivers**
- **Essentials > View: Gateways**
- **Essentials > View: Location Data**
- **Essentials > View: Reports**
- **Settings > View: Additional Admin Settings**

| | | |
|---|---|---|
| Safety Detection Log | View | Allows users to see all detections captured by Samsara, including those that did not meet thresholds to become Safety Inbox events.<br><br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| | Edit | Allows users to promote detections from the Detection Log into the Safety Inbox, turning them into Safety Events.<br><br>This permission requires that you additionally enable **Safety > View: Inbox & Report** |
| ***Security Policies (Configure your organization's security policies, such as MFA and driver passwords)*** | | |
| View Security Policies | View | Allows users to view the organization's security policies. |
| Create Security Policies | Edit | Highly Privileged<br><br>Allows users to create the organization's security policies. |
| Update Security Policies | Edit | Highly Privileged<br><br>Allows users to update the organization's security policies. |
| Delete Security Policies | Edit | Highly Privileged<br><br>Allows users to delete the organization's security policies. |
| ***Settings (Organizational Settings)*** | | |
| Users, Roles, and Tags | View | Users, roles, and tags |
| | Edit | Choose from these individual settings below to fine-tune access:<br><br>• Create, edit, and delete all users<br>• Create, edit, and delete users who do not have the pre-built admin roles (Full Admin, Standard Admin, or Read-only Admin)<br>• Create, edit, and delete roles<br>• Create, edit, and delete tags |
| Attributes | View | View attributes in settings |
| | Edit | Create, edit, and delete attributes |

| | | |
|---|---|---|
| | | Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| | Edit | Edit general organization settings<br><br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| Device Activation | Edit | Activate devices<br><br>This permission requires that you additionally enable **Essentials > View: Gateways** |
| Device Deactivation | Edit | Deactivate devices<br><br>This permission requires that you additionally enable **Essentials > View: Gateways** |
| Device Returns | View | View devices that need replacement<br><br>This permission requires that you additionally enable:<br><br>• **Essentials > View: Gateways**<br>• **Account Management > Orders & Exchanges (View and Edit)** |
| | Edit | Return devices that need replacement<br><br>This permission requires that you additionally enable:<br><br>• **Essentials > View: Gateways**<br>• **Account Management > Orders & Exchanges (View and Edit)** |
| Scheduled Reports | View | View scheduled reports |
| | Edit | Create, edit, and remove scheduled reports |
| Scheduled Report Owners | Edit | Edit Scheduled Report Owners<br><br>This permission requires that you additionally enable **Settings > Edit: Scheduled Reports** |
| Alert contacts | View | Alert contacts |
| | Edit | Create, edit, and remove alert contacts |
| Addresses / Geofences | View | View addresses |
| | Edit | Choose from these individual settings below to fine-tune access:<br><br>• Create addresses<br>• Edit addresses<br>• Remove addresses |

| | | |
|---|---|---|
| | | Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role.<br><br>This permission requires that you additionally enable **Settings > View: Users, Roles, and Tags** |
| | Edit | Enable / disable available features for any accessible user |
| Single Sign On | View | Single sign on settings<br><br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| | Edit | Create, edit, and delete single sign on settings<br><br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| QR Code Driver Assignment | Edit | Edit QR Code driver assignment settings |
| Org Domains | View | View domains |
| | Edit | Edit org domains<br><br>Users who are granted this permission must have Entire Organization access enabled before they are assigned a custom role. |
| Rewards | View | View Rewards settings<br><br>This permission requires that you additionally enable **Settings > View: Additional Admin Settings** |
| | Edit | Edit Rewards settings<br><br>This permission requires that you additionally enable **Settings > View: Additional Admin Settings** |
| ***Speeding (Manage device speeding)*** | | |
| Excuse Speeding | View | Excuse speeding on the vehicle show page |
| ***Training (Training Settings)*** | | |

| | | |
|---|---|---|
| | | This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Safety > View: Inbox & Report**<br>• **Safety > View: Coaching** |
| | Edit | Assign, edit, and delete assignments<br>This permission requires that you additionally enable:<br>• **Essentials > View: Drivers**<br>• **Safety > View: Inbox & Report**<br>• **Safety > View: Coaching** |
| Manage Courses | Edit | Author Training courses or Import standards based (Scorm, CMI5, etc.,) zip files. Also edit, archive, delete existing courses and manage categories.<br>This permission requires that you additionally enable **Training > View: Manage Assignments** |
| ***Worker Qualifications (Worker Qualification Settings)*** | | |
| Manage Worker Qualification Sets And Types | View | View Worker Qualification Sets and Types |
| | Edit | Create, edit and delete Worker Qualification Sets and Types and manage their tag, attribute mapping.<br>This permission should be granted at the organization level. It cannot be assigned to individual tags. |
| Manage Worker Qualification Records | View | View Worker Qualification Records.<br>This permission includes the ability to view all information within a Qualification Record. Only provide this permission to users that should have access to potentially sensitive data |
| | Edit | Create, edit, renew and archive Worker Qualification Records |
| View limited information within Worker Qualification Records | View | View limited information within a Worker Qualification Record.<br>This permission only includes viewing Issue Date and Expiration Date and hides all other sensitive data. |
| ***Worker Safety (Manage worker safety incidents)*** | | |
| Incidents | View | Receive worker safety notifications and view incident details |
| | Edit | Edit worker safety incidents including updating status, priority, or assigned user |
| Check-Ins | View | View worker safety check-ins |
| | Edit | Request a worker safety check-in |

| | | |
|---|---|---|
| | Edit | Assign a worker safety wearable |
| Always-On Location | View | View Worker Safety always-on location.<br>Always-on location must be enabled in Worker Safety settings. |