


Changing of Date and Time in the Dealer Terminal

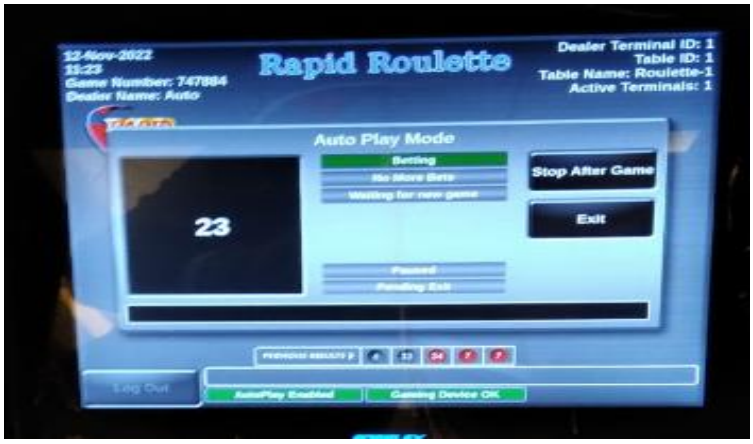


1. Make sure all Tables must be closed.
2. Connect a USB Keyboard and a mouse.
3. Restart the QXI PC Server and while rebooting press F12 it will show you this screen.

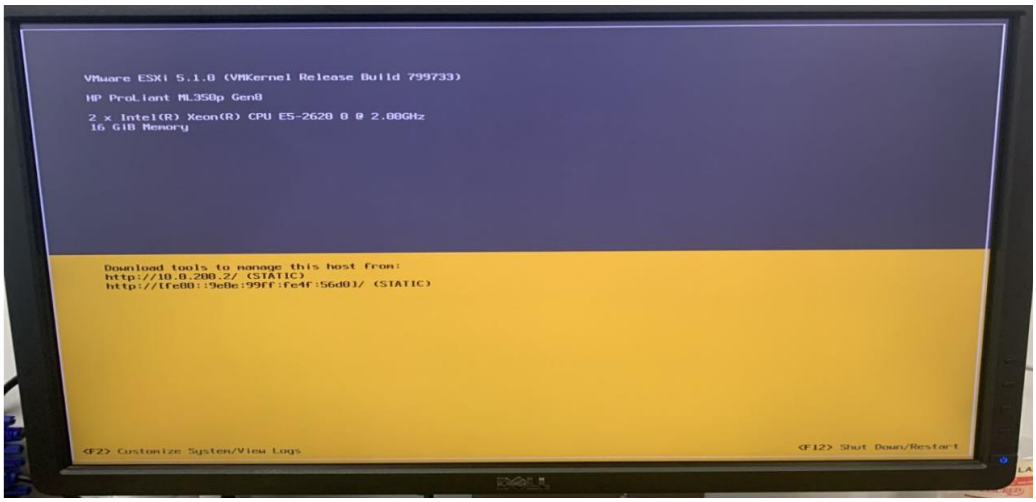


4. Authentication Required by Login in:
   Login Name : Administrator
   Password : etsserver@1234

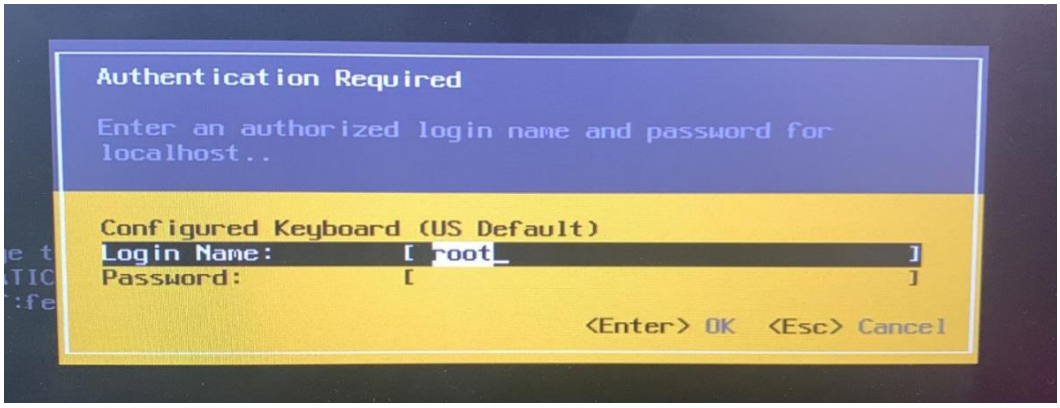


5. After that F11 to restart server system.

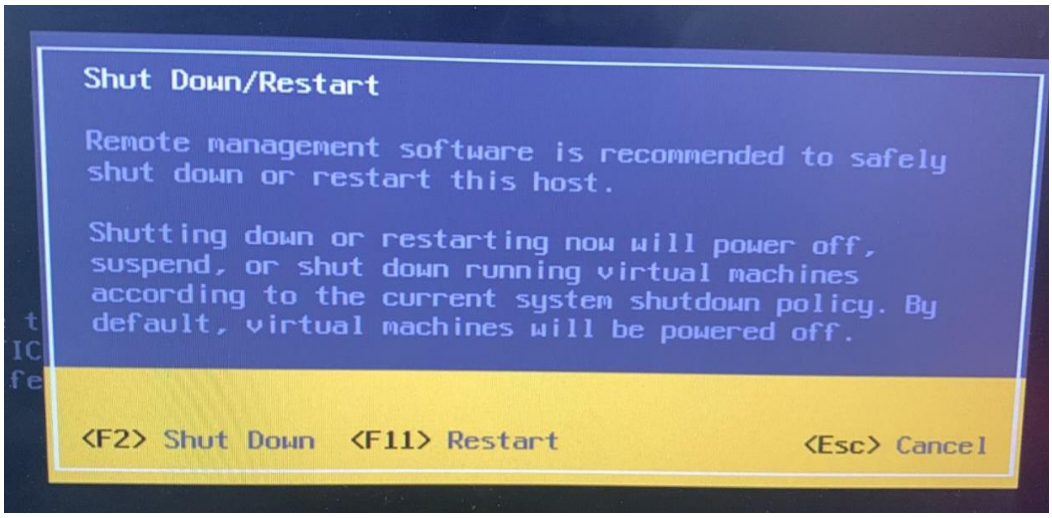


6. Then click “Enter”

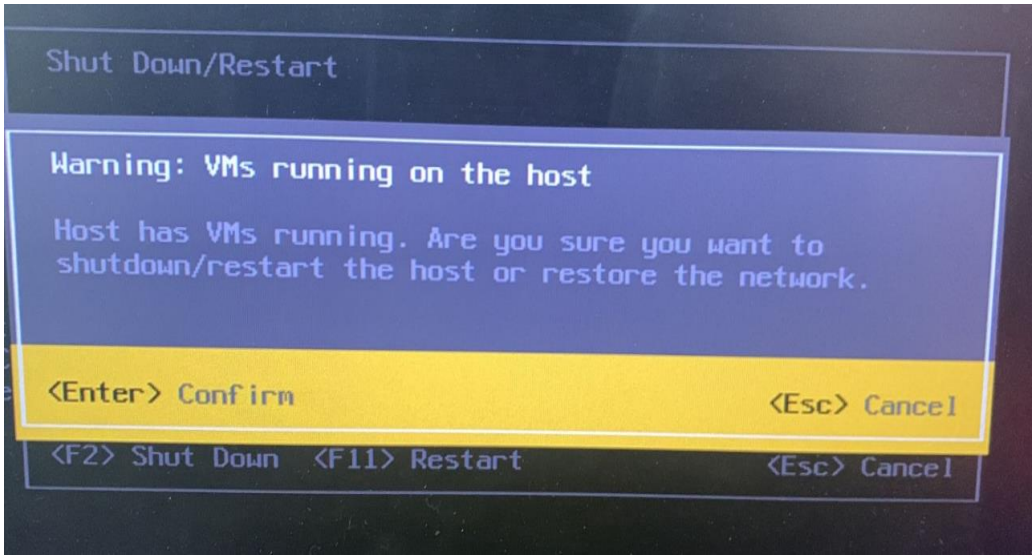


7. The server will show this screen and wait

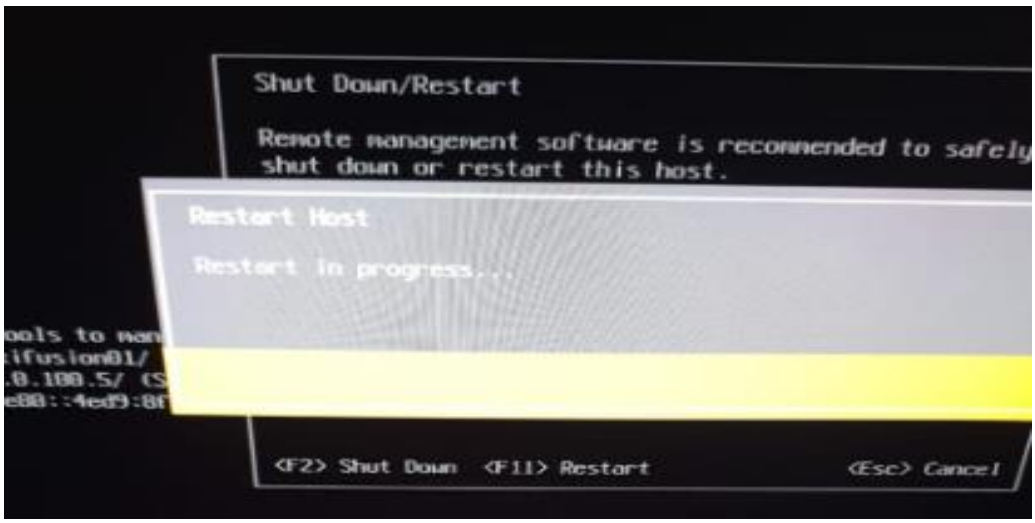

8. Then u need to check which button can go in the Bios setting page
9. For example: other PC using F9 go to setup, then click F9. Other PC is using is F12, then click F12

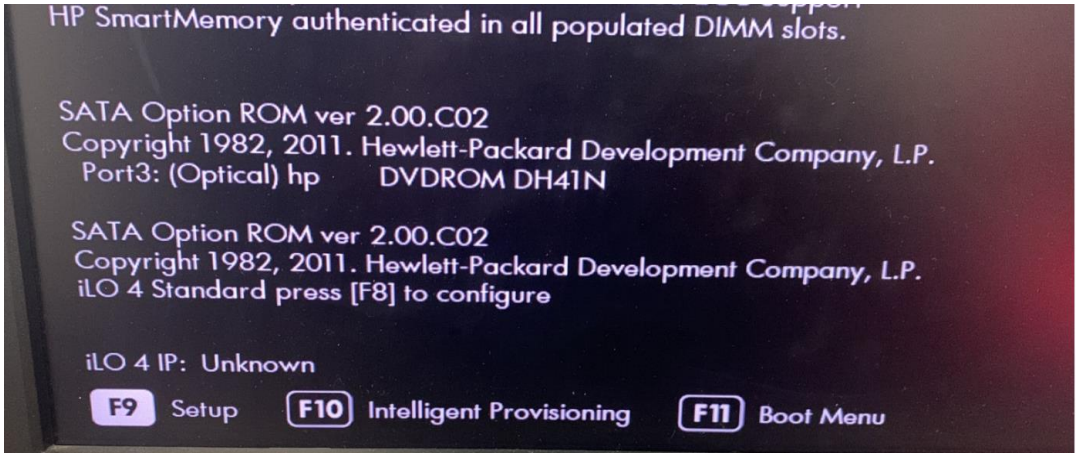

10. Then u need select date and time icon and go inside set correct the date and time
11. before u set the time, please check the UTC time in internet

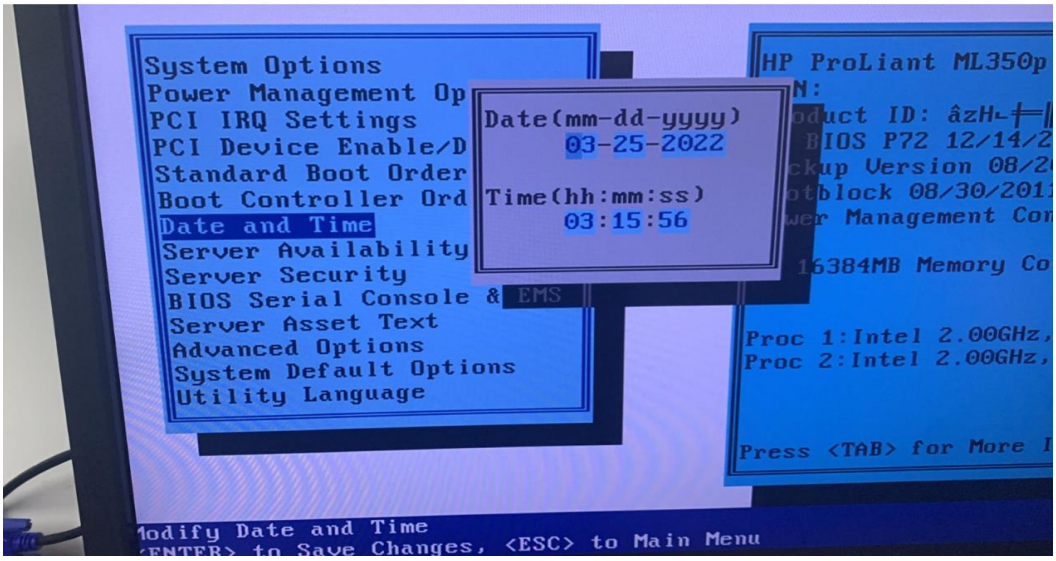

12. When setting done, save and exit.
13. When the EXSI boot up, remote in 10.0.100.1 and set the current time
14. When all done, open table and check the time on DT also

NOTE:

Please try these steps to the other QXI PC, remember reboot the server and set the time, all the table need close first.