CORONA
RESORT & CASINO

Novomatic Novo Unity II - RAM Clear Procedure

Technical Luke

February 1, 2025

Novomatic Novo Unity II Cabinet


Technical Features



Symbolic Picture

Cabinet Type	Slant Top (SL)		
Top Light	Flat (horizontal, 3 colours)		
Monitor	1 TFT 23,8" (16:9) / 1x PCAP Touch		
Cash Handling			
Bill Validator	JCM iVIZON-100-SS, JCM UBA-1x-SS, MEI SCNxx (Cashflow)		
Ticket Printer	Ithaca EPIC 950, FutureLogic GEN 2, FutureLogic GEN 5		
Player Tracking	Available and customisable		
Gaming Board	**Platform**	**Abbr.**	**Game Content**
	FireFox	FF	NOVO LINE™, Impera
	FireFox II	FF2	NOVO LINE™
Sound	2 full range loudspeakers and 1 soundbox		



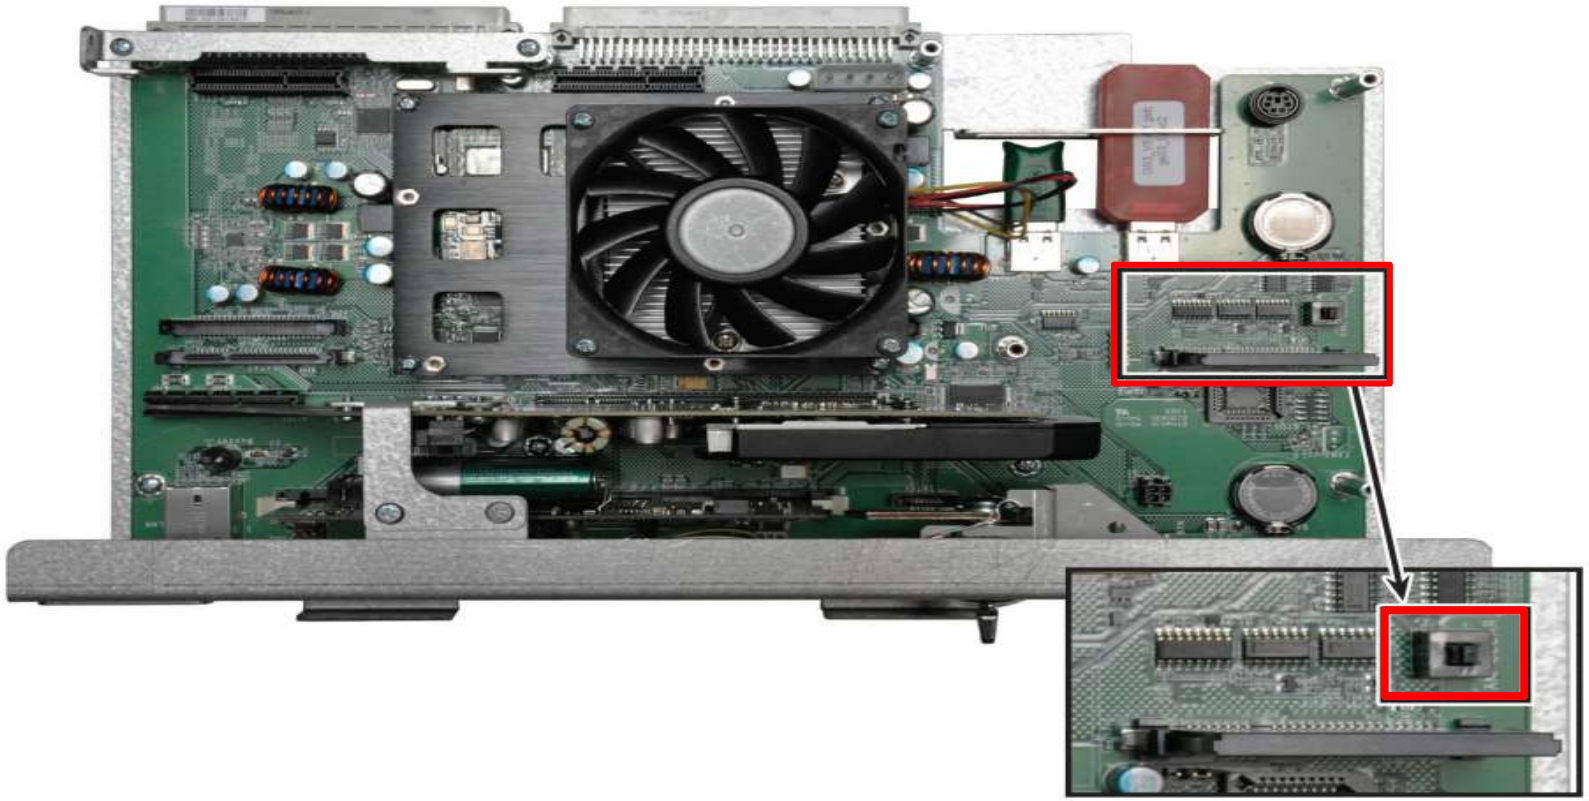

- **To RAM Clear:**
- **Open the Lower door of machine to access the logic box/MPU**
- **Turn off the main power switch**
- **Locate the RAM Clear switch on located on mainboard of the logic box/MPU**
- **Press the button switchon the FireFox II for 2 to 3 times to be take effect the RAM Clear**
- **Close the logic door properly and power ON**

TURN AUDIT KEY TO PERFORM RAMCLEAR



- **Power up the terminal. After restart of the terminal the following message will be displayed:**
- **Turn Audit Key and let it wait in while**
- **Turn the audit key to enter the audit menu where the following screen will be displayed:**
- **Perform a Partial RAM-Clear to clear this error**
- **Press PARTIAL RAM CLEAR**



- After reviewing and confirming all the setting are correct.
- Turn the Operator/Audit reset switch
- Power OFF/ON machines until it will go to normal game mode.
- Reset the power adapter of the UCB to gather new soft meters and settings of the machine. And to reset the error of ticket error and validation error.

- After the RAM-Clear is successfully completed the following message will be displayed:

- Turn back the audit key. The terminal will be restarted automatically.
- The machine will restart automatically and will configure back all the terminal settings from the Database Server to the Terminals