Novomatic FV640 F2 Impera - RAM Clear Procedure

Technical Luke

February 1, 2025




Novomatic FV 310 F2 SCORPION





- **Open the main door of machine to access the logic box/MPU**
- **Turnoff the main power switch**

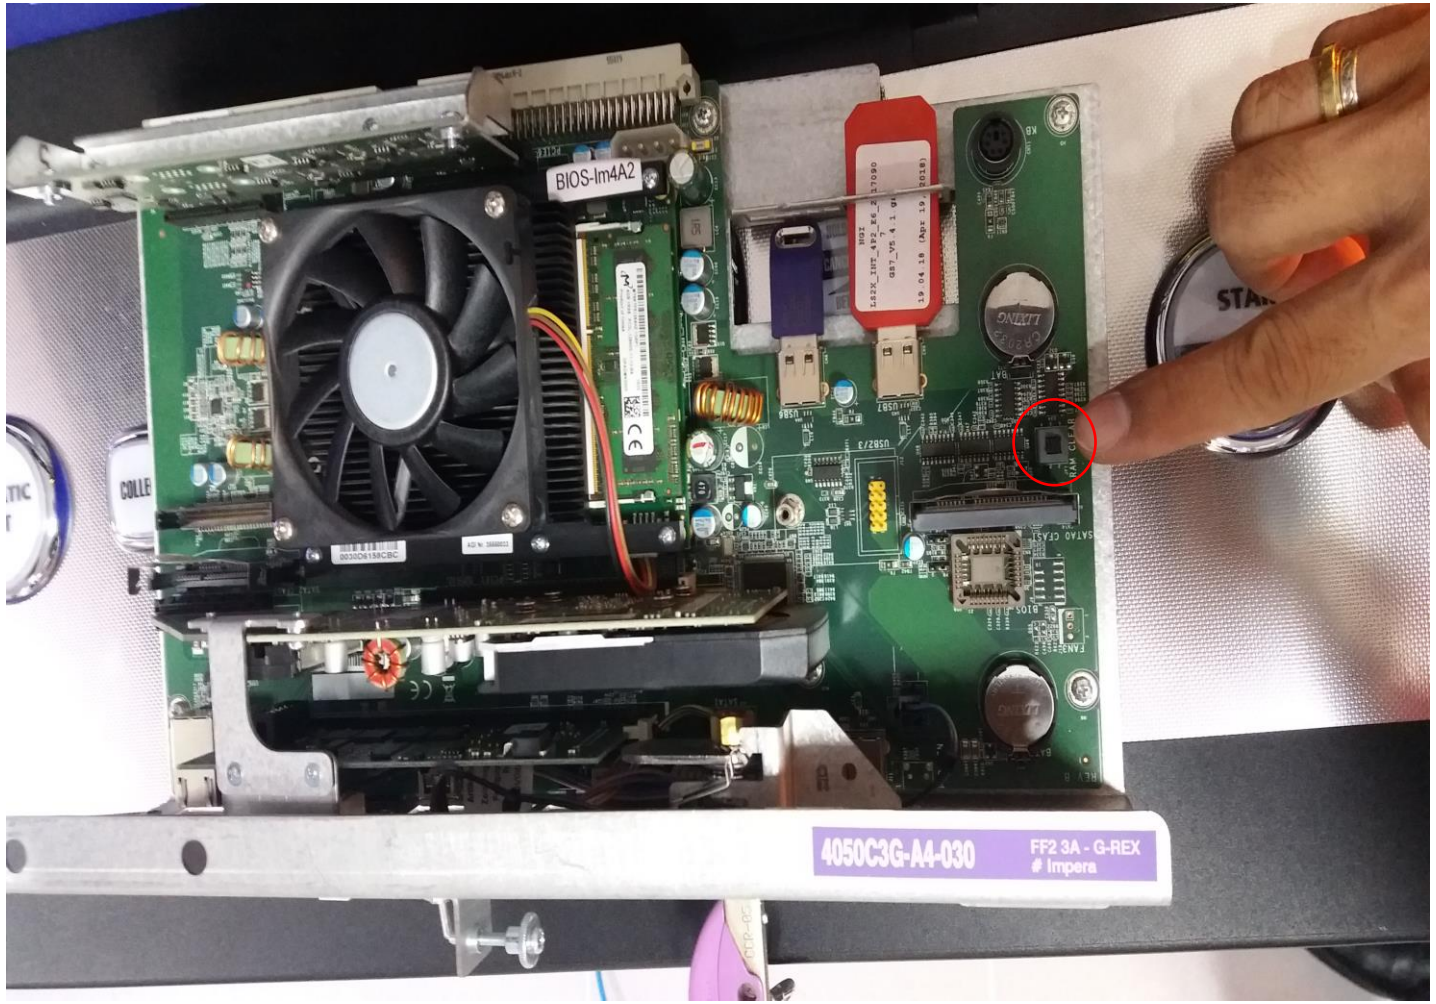


- **Locate the RAM Clear switch on located on mainboard of the logic box/MPU**
- **Press the button switch for 2 to 3 times to be take effect the RAM Clear**





- **Put back Logic box/MPU into the machine and switch on the power switch**
- **Wait until the machine boot up**



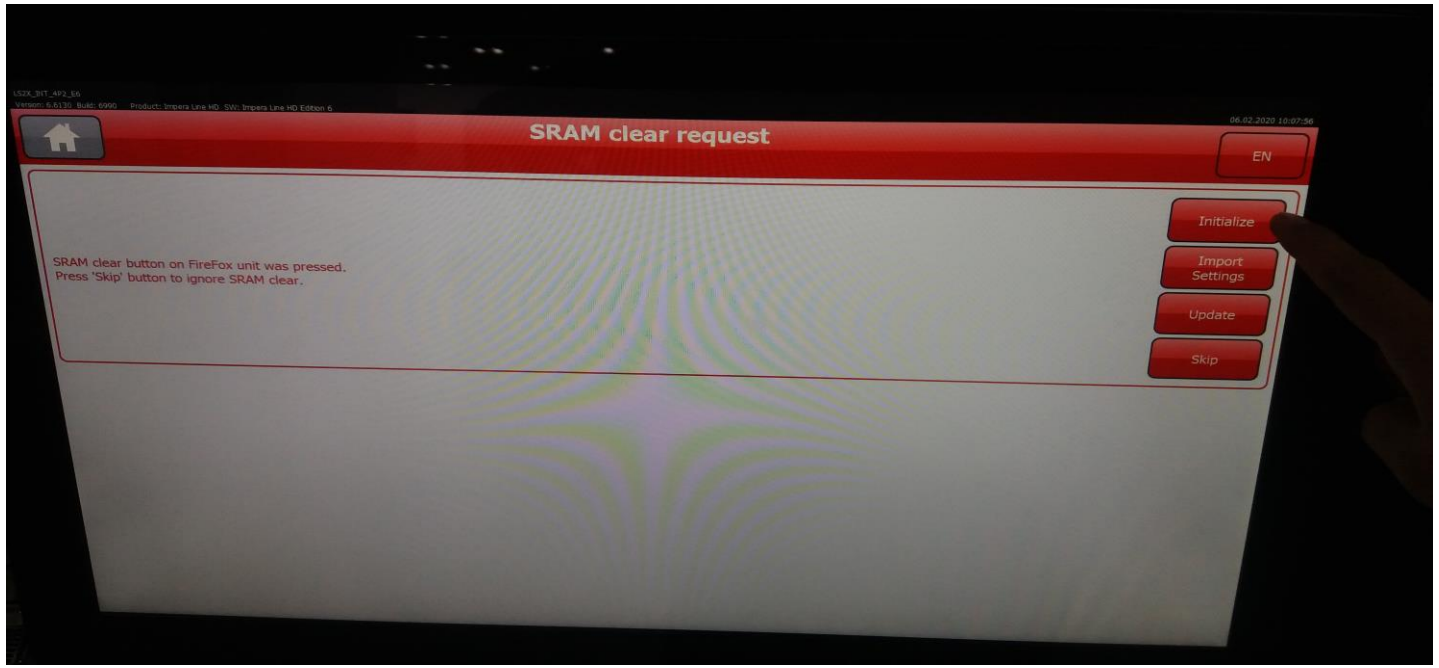

- **Toggle the switch located in front of the logic box/MPU to setup the settings**
- **The main screen of the machine display will show “SRAM clear request menu” press the “Initialize” to proceed**

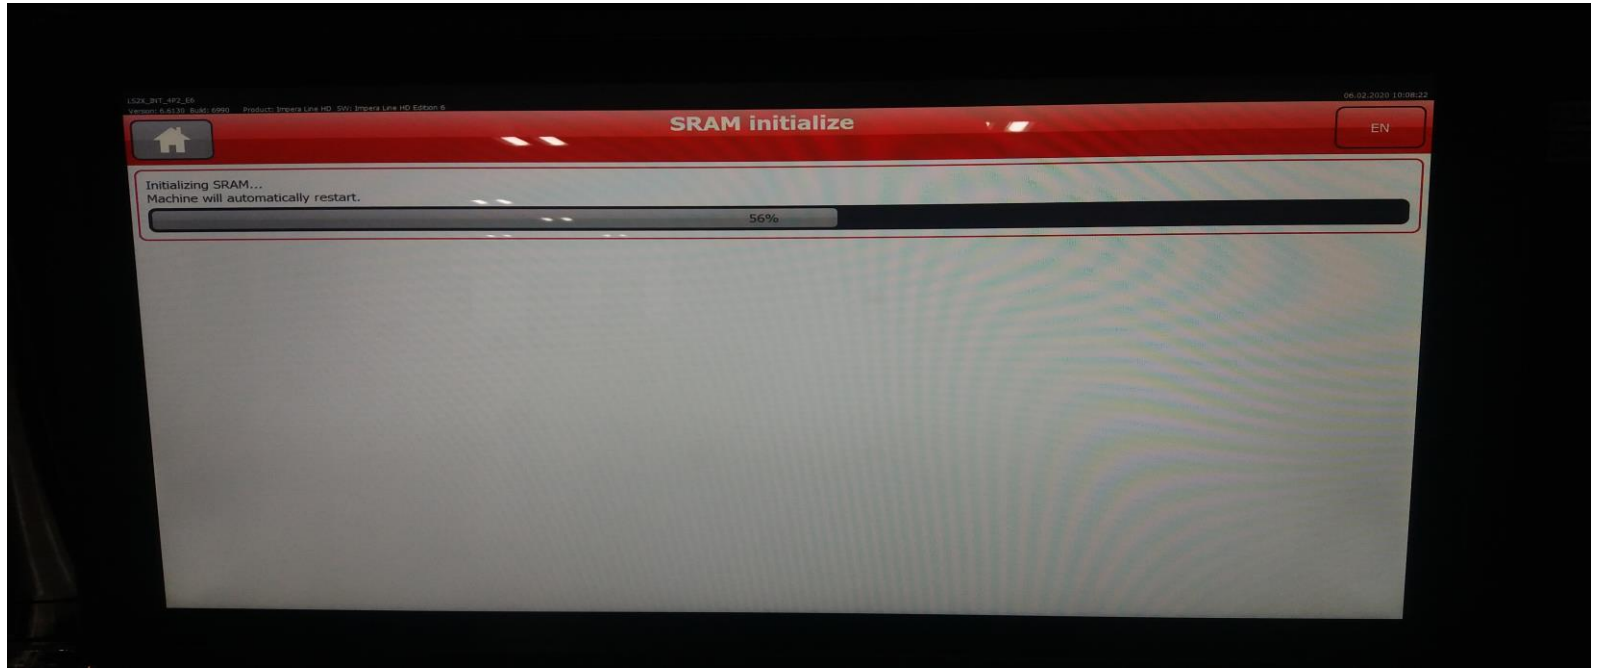


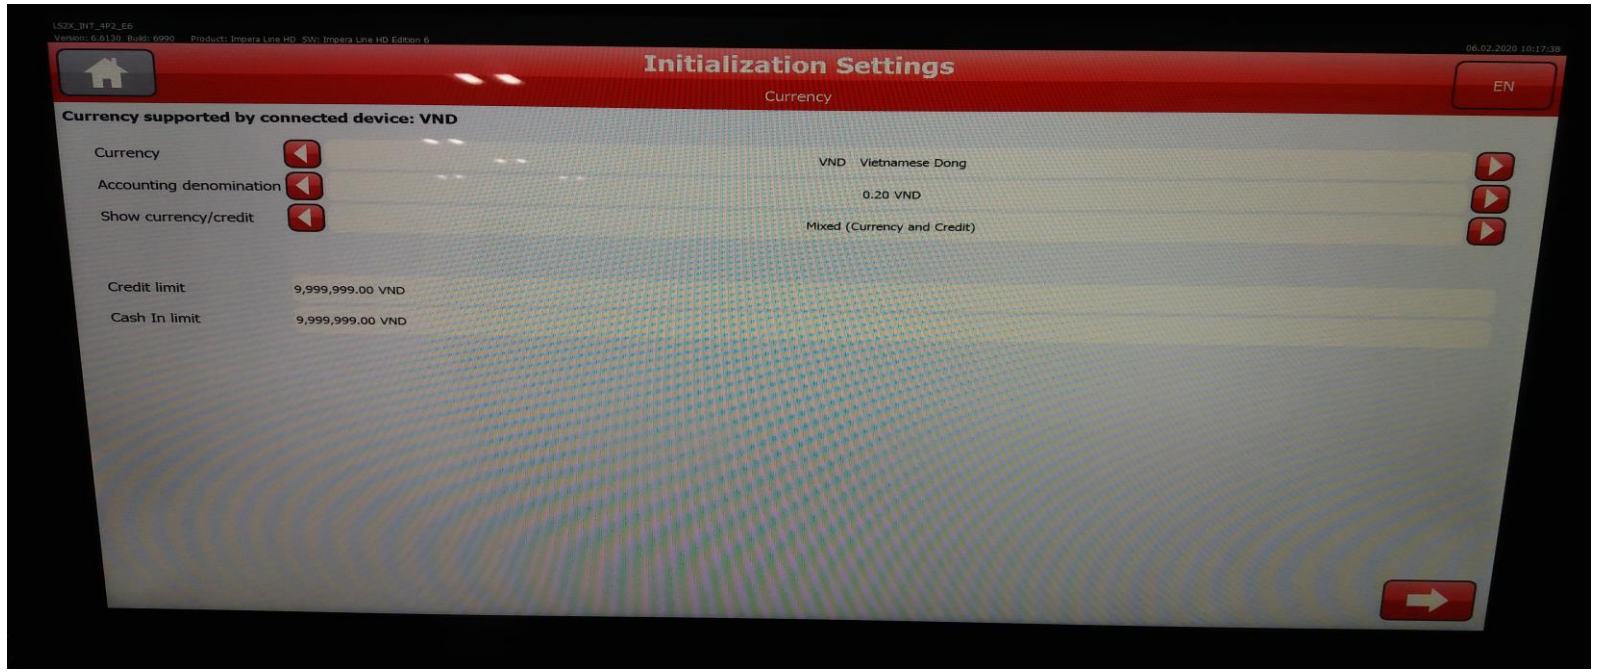


- **After pressing the Intialize the machine start RAM Clear**


Machine will ask to set the Initialization settings

- **Set currency VND Vietnam Dong**
- **Set the machine accounting denom based on machine denomination**
- **Leave the other settings as it is and press Next button**

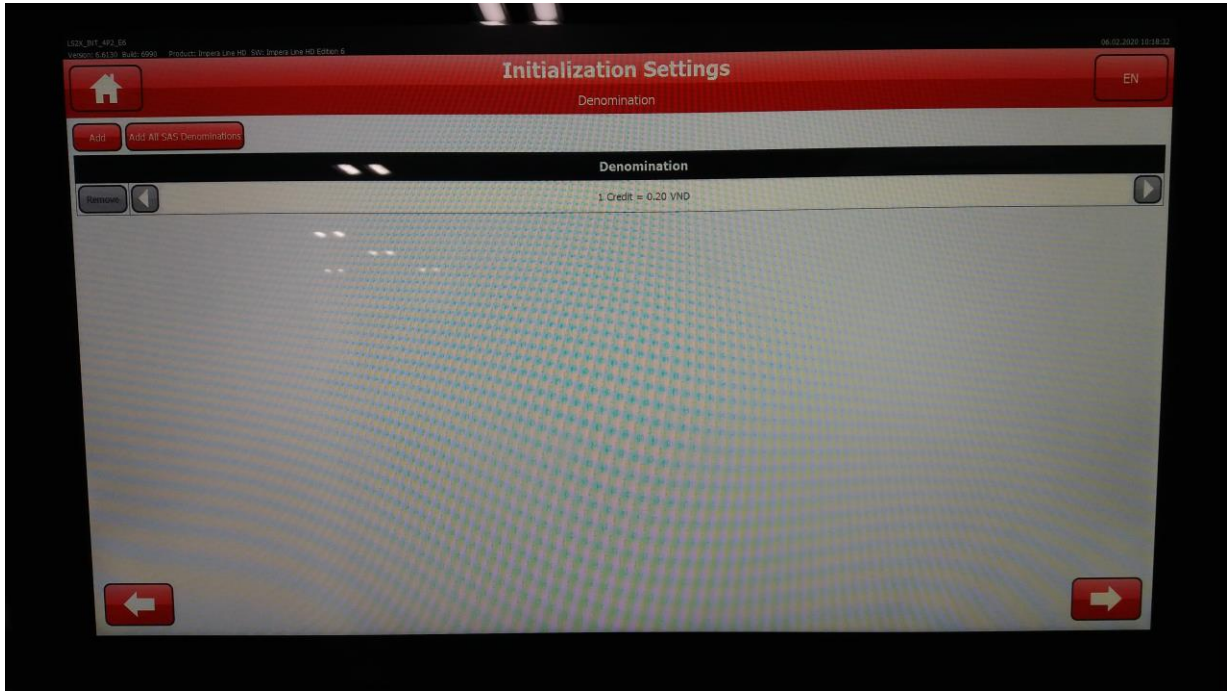


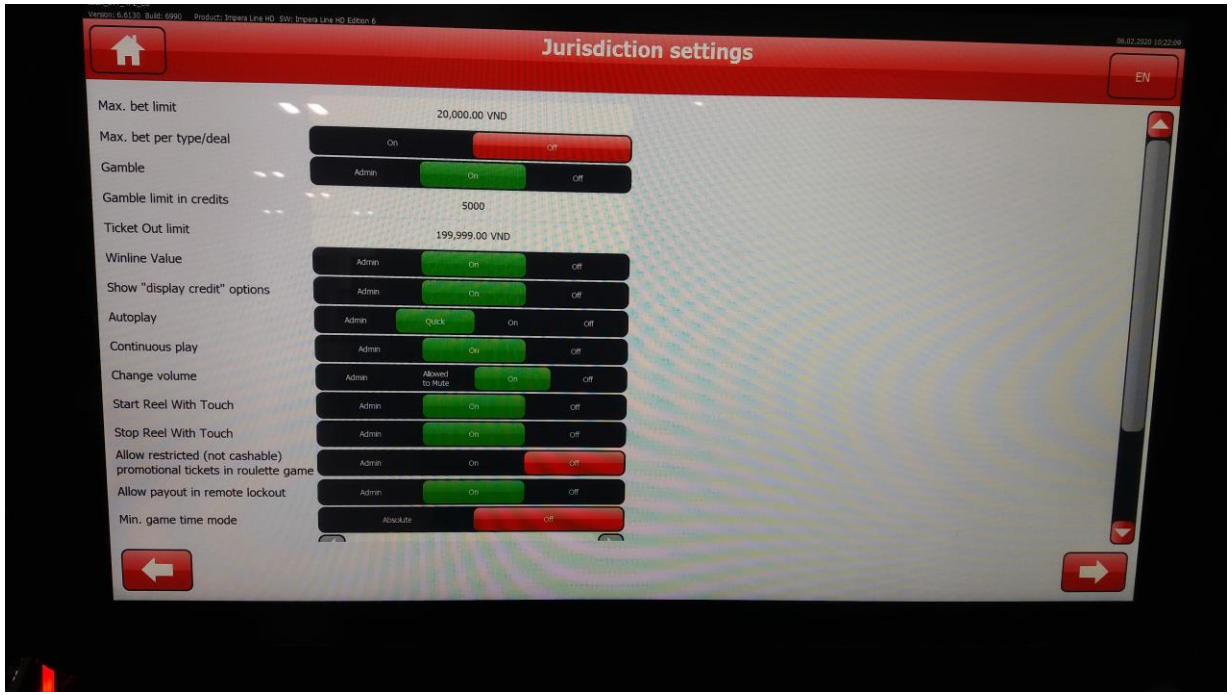


- **Confirm if the Denomination that have been set is correct and click next to proceed**
- **Next is configuring the Jurisdiction settings kindly follow the settings as per on the image**

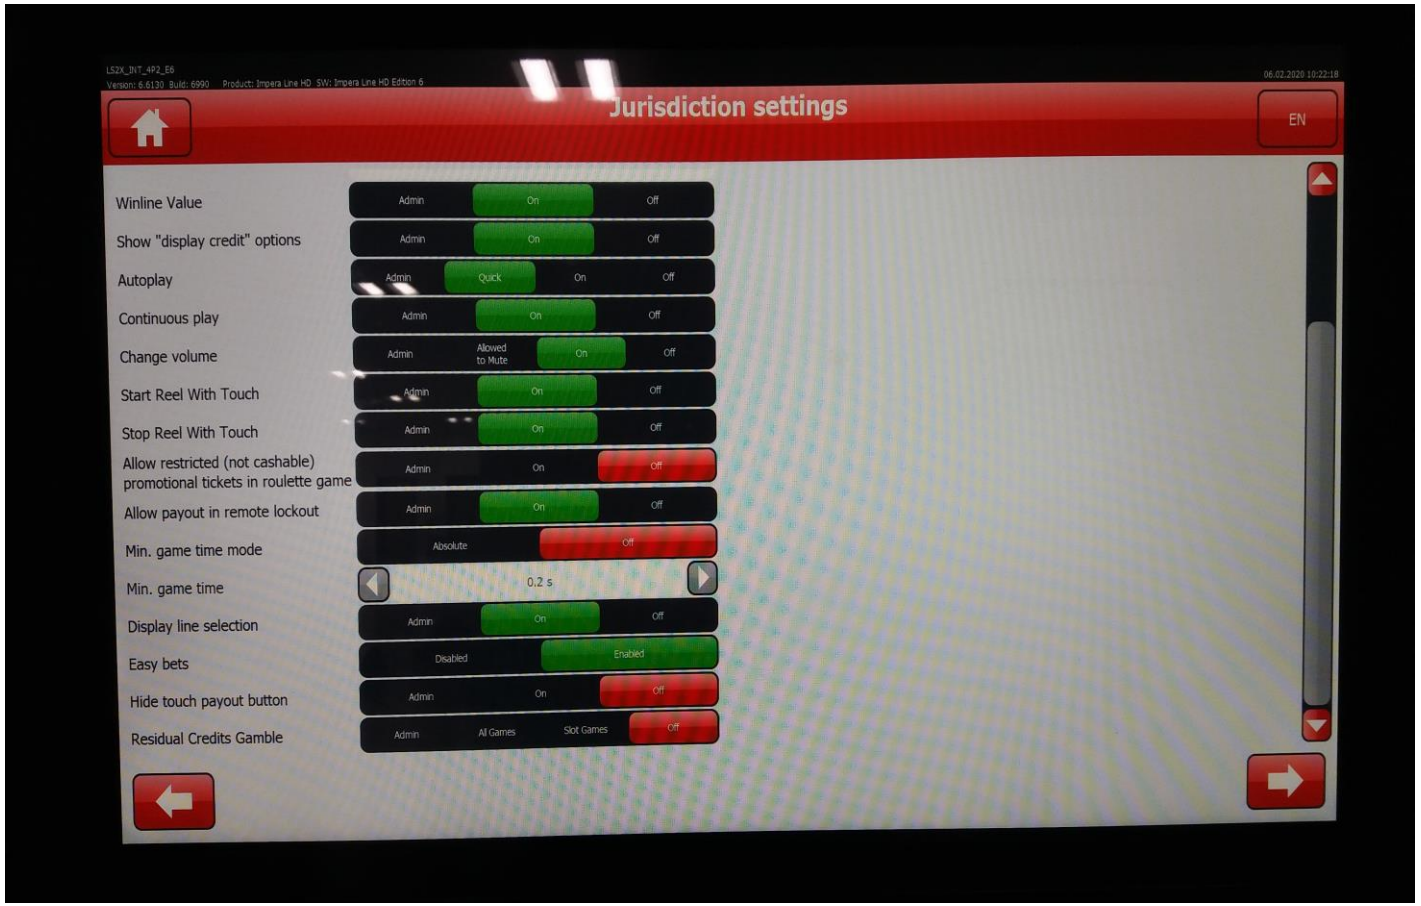


- **Complete all of the parameter settings for Jurisdiction settings**

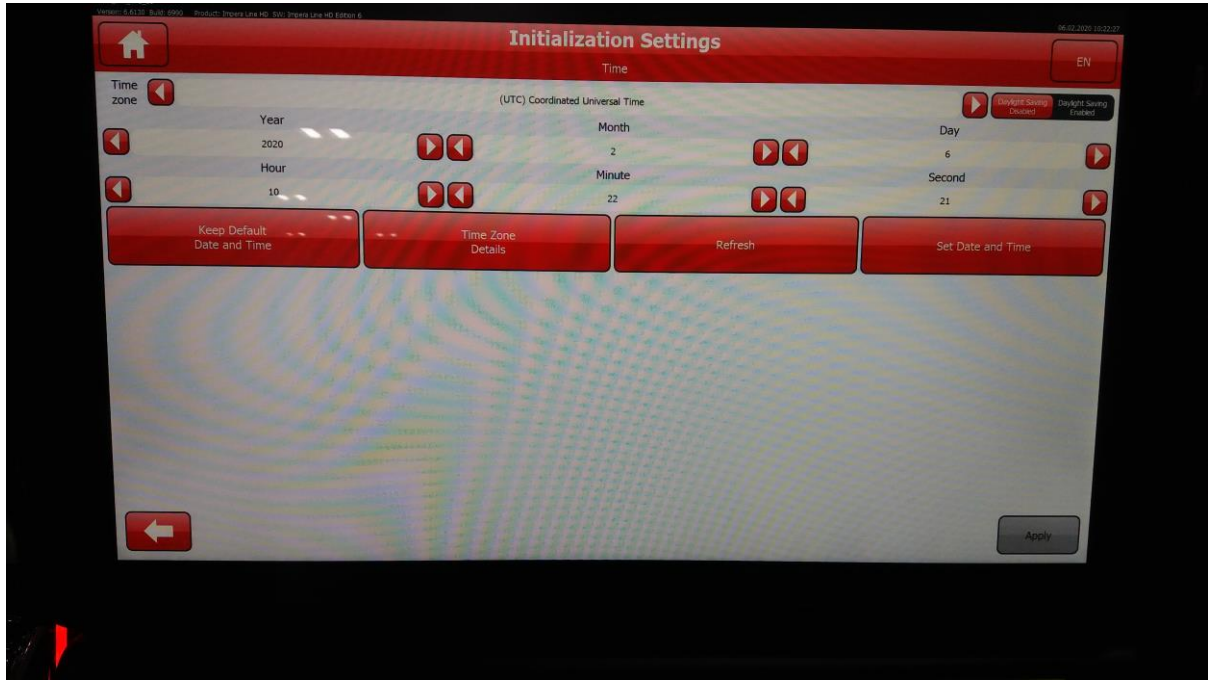

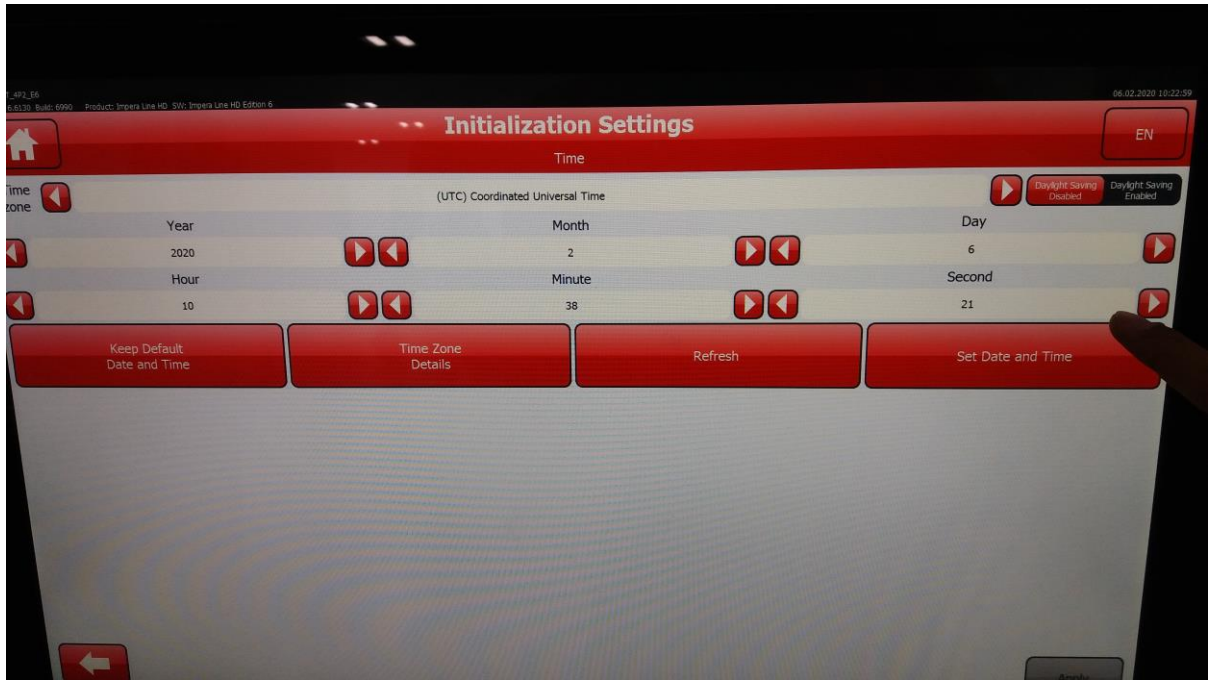

- **Set the correct time and date**
- **Press the Set Date and Time after setting the correct Time and date**
- **Press next to proceed for the next step (the machine will automatically restart after pressing “Apply”**

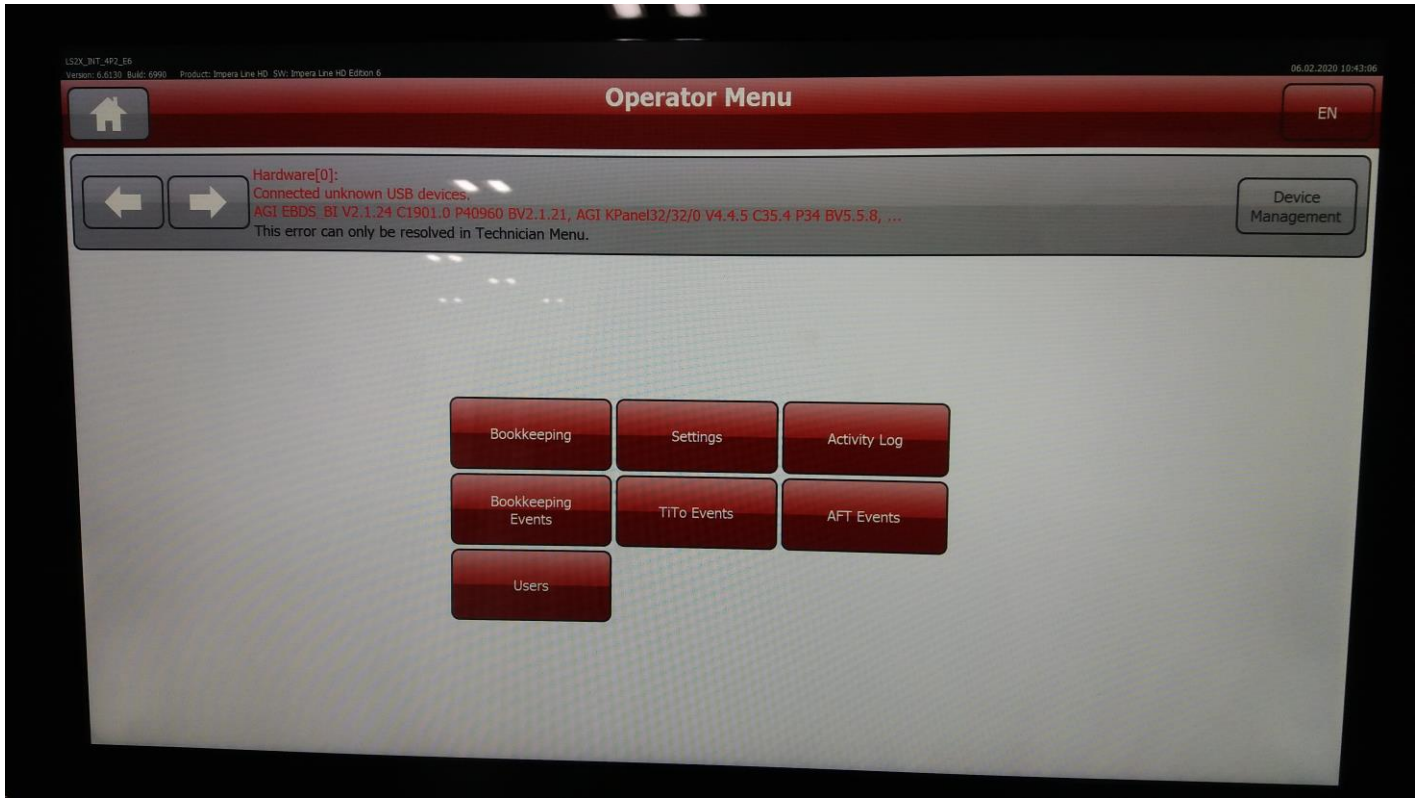


- **After the machine boot up turn the Operator switch located on the top right side of the machine cabinet. The machine will display as show on the image**
- **On the Operator menu it will show error's on the devices**




- **Locate the toggle switch in front of the logic box/MPU to configure the hardware and machine settings**
- **Select the “Settings” to configure the machine parameters**



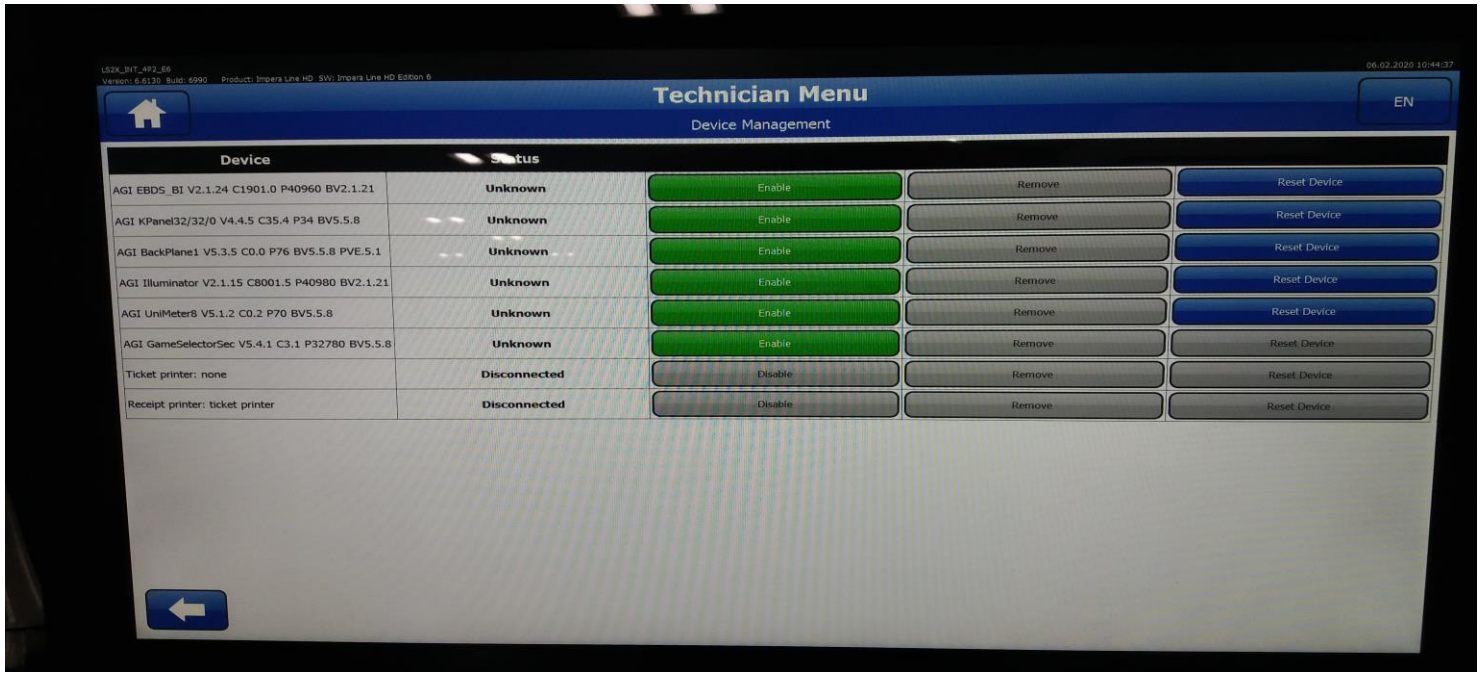


- **Press Device Management to configure hardware devices**
- **Enable all of the devices listed and go back to main menu**

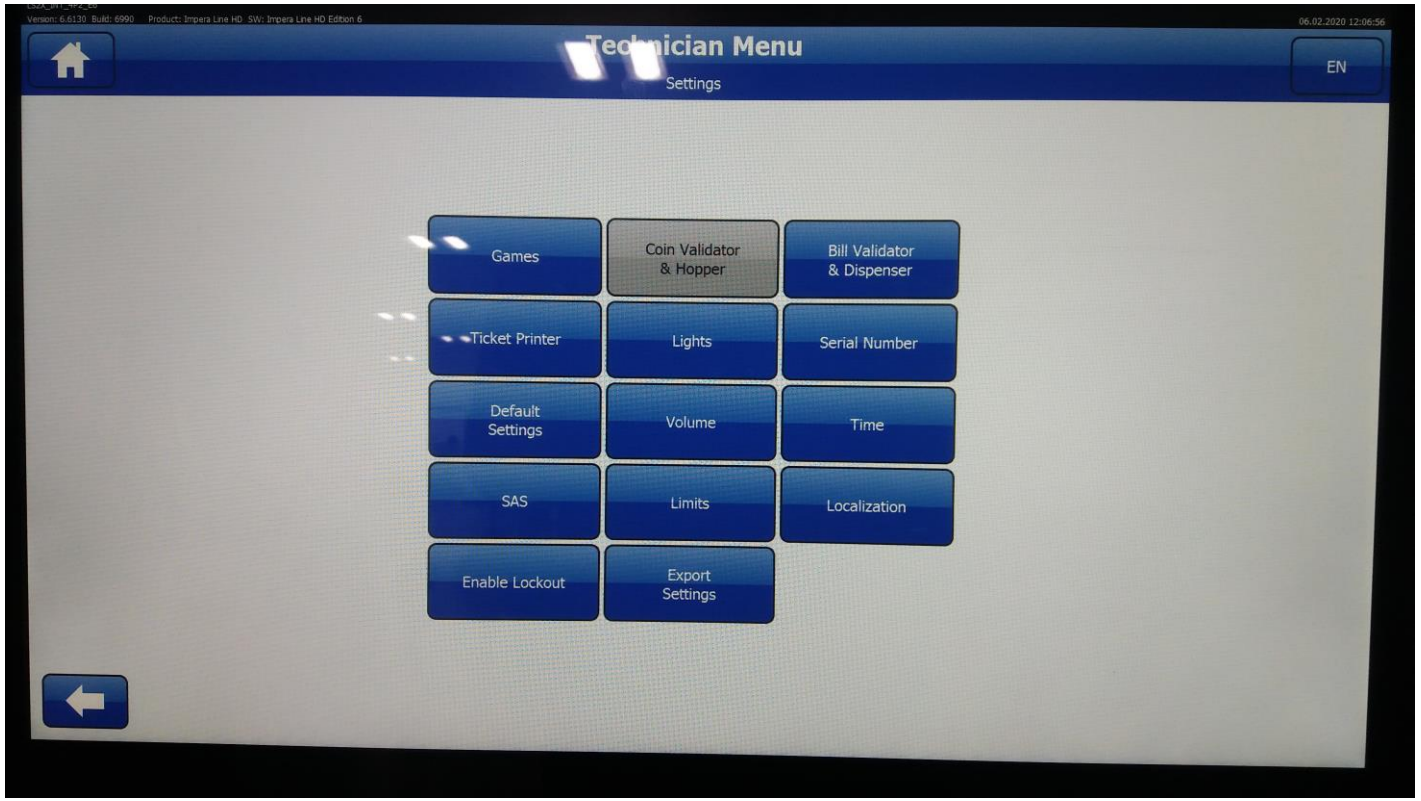


- **Main menu to configure all of the parameters**



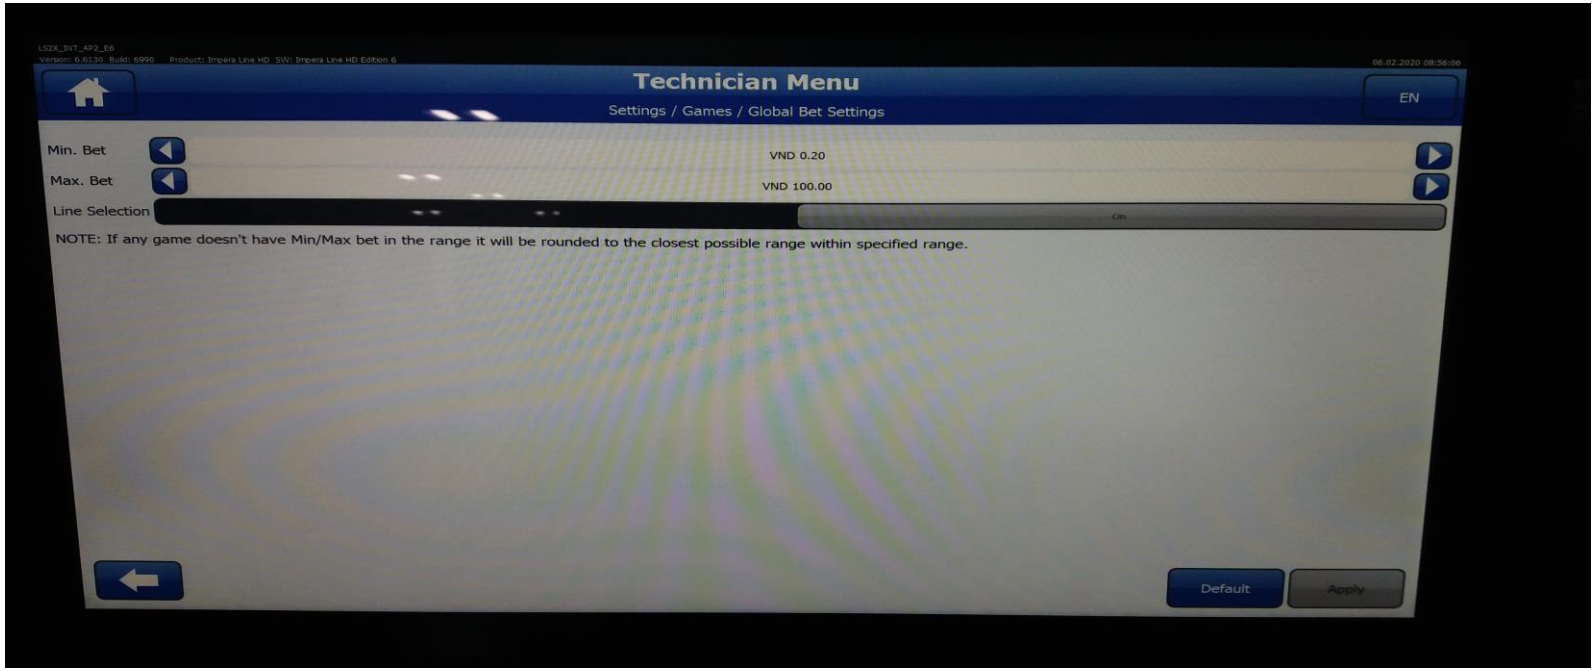


- **Press Game on the main menu**
- **No need to change anything on this parameters**
- **Press “Global Bet Settings” to confirm correct Min and Max bet parameters**
- **Press back button to return to Games menu**



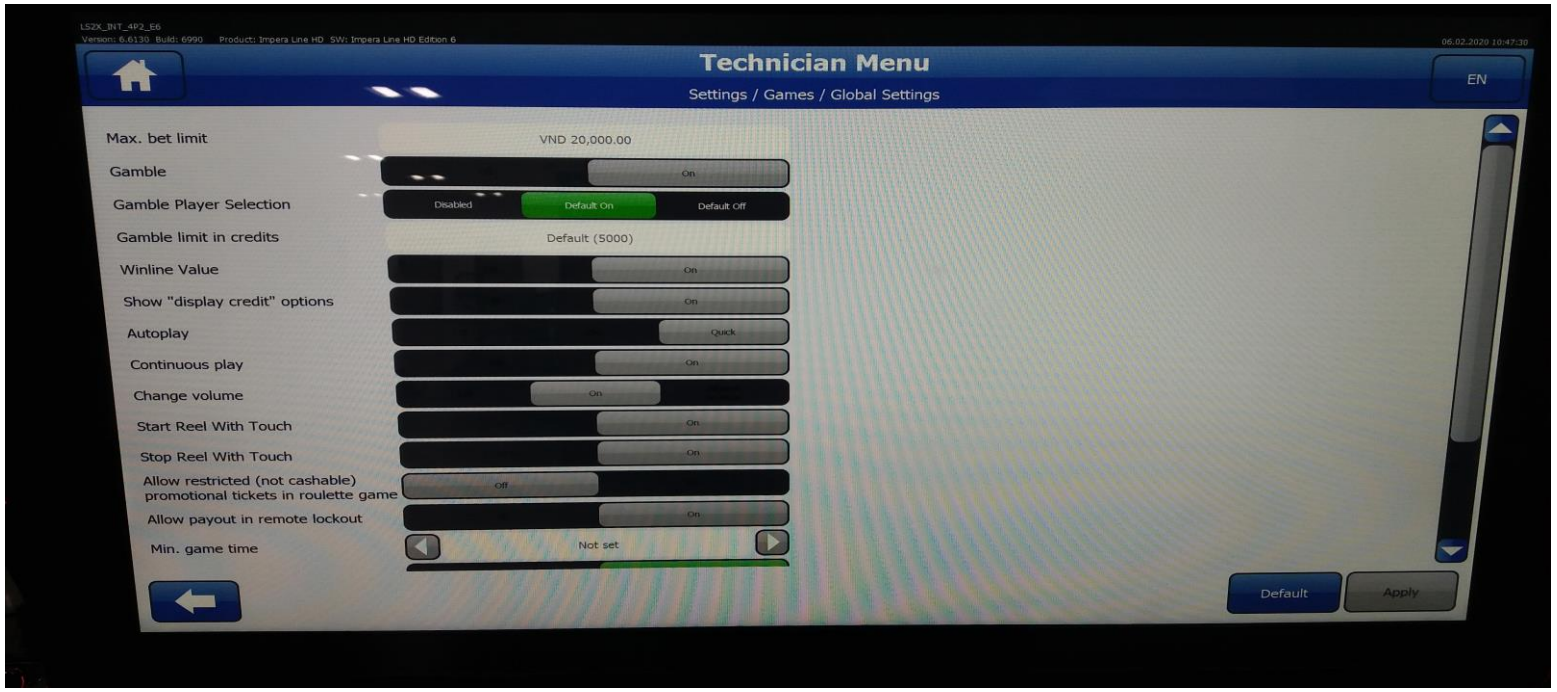



- **Press Global Easy Bet settings to confirm bet sequence**
- **Press back button to go back to Game Menu**
- **Press Global Settings**
- **Confirm for correct parameters for the Global settings and press back button if already confirmed**
- **Press back button to back to the main menu**

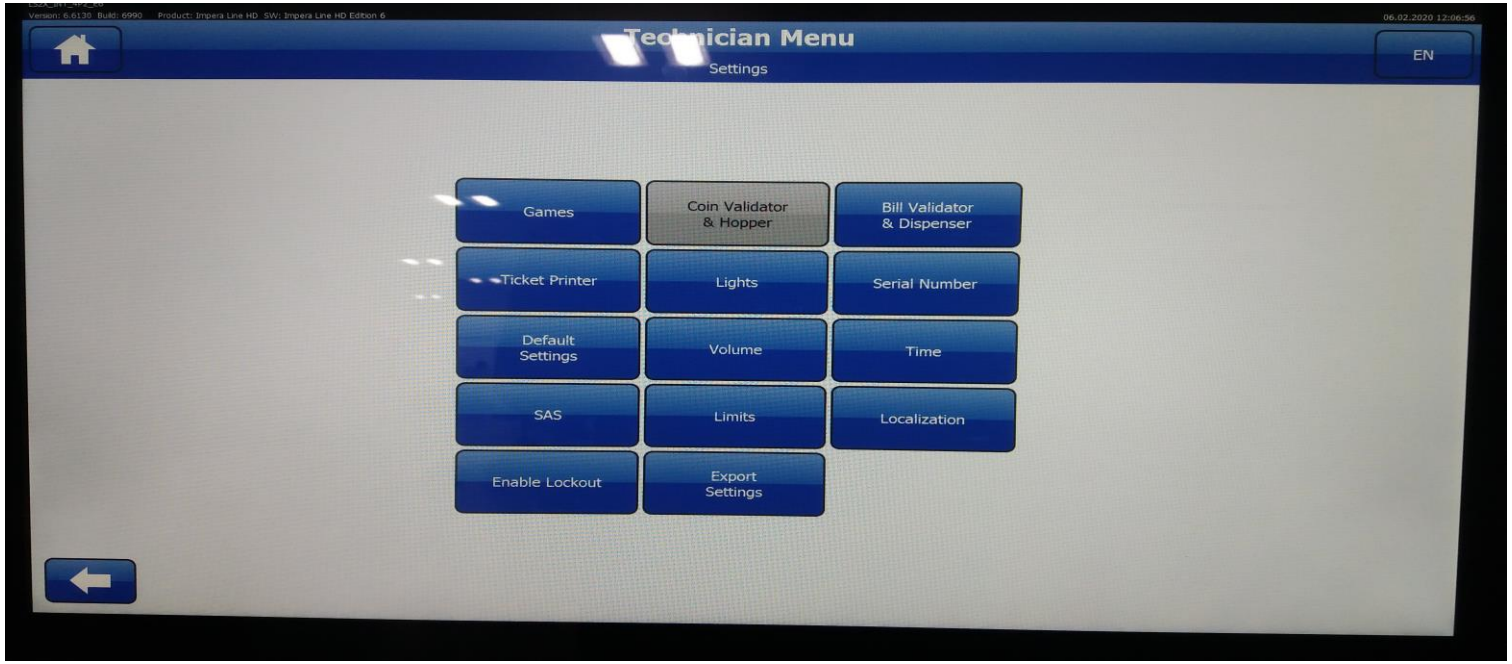





- **Press Bill Validator and Dispenser**
- **Enable first the Bill Validator**
- **Select Off for VND10,000 and VND20,000**
- **And Select Cashbox for the Ticket**
- **Disabled back the Bill Validator and click Apply to confirm the settings**
- **Go back to Main Menu**

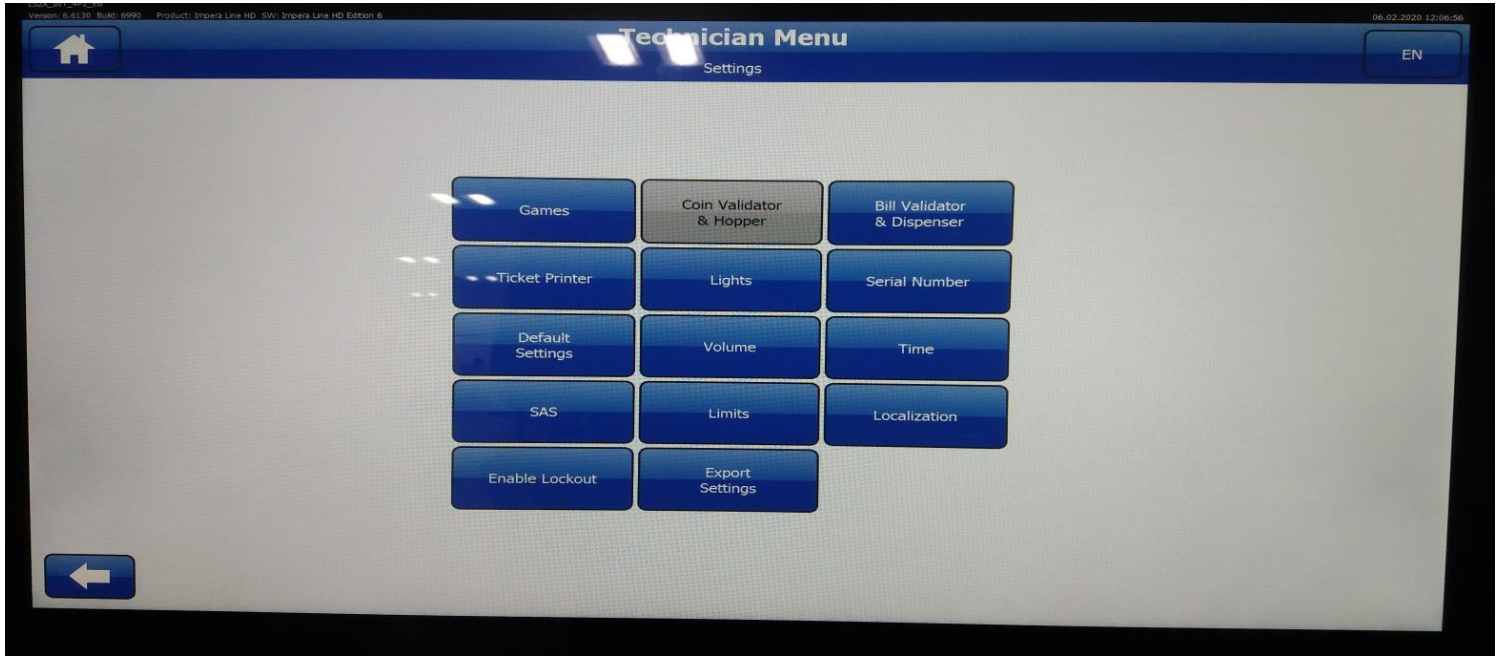

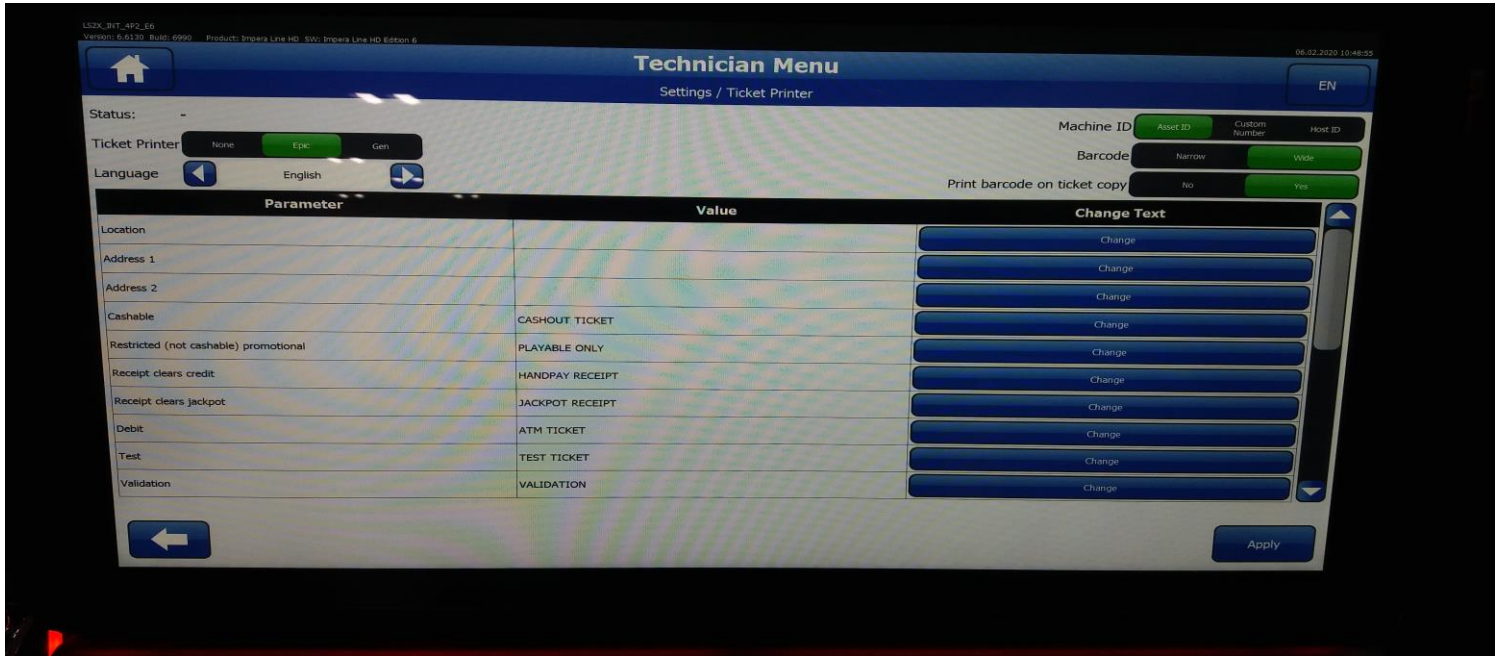



- **Select Ticket Printer**
- **On the Ticket printer selecet Epic**
- **Leave the rest unchanged and press apply to save changes**
- **Go back to main menu**

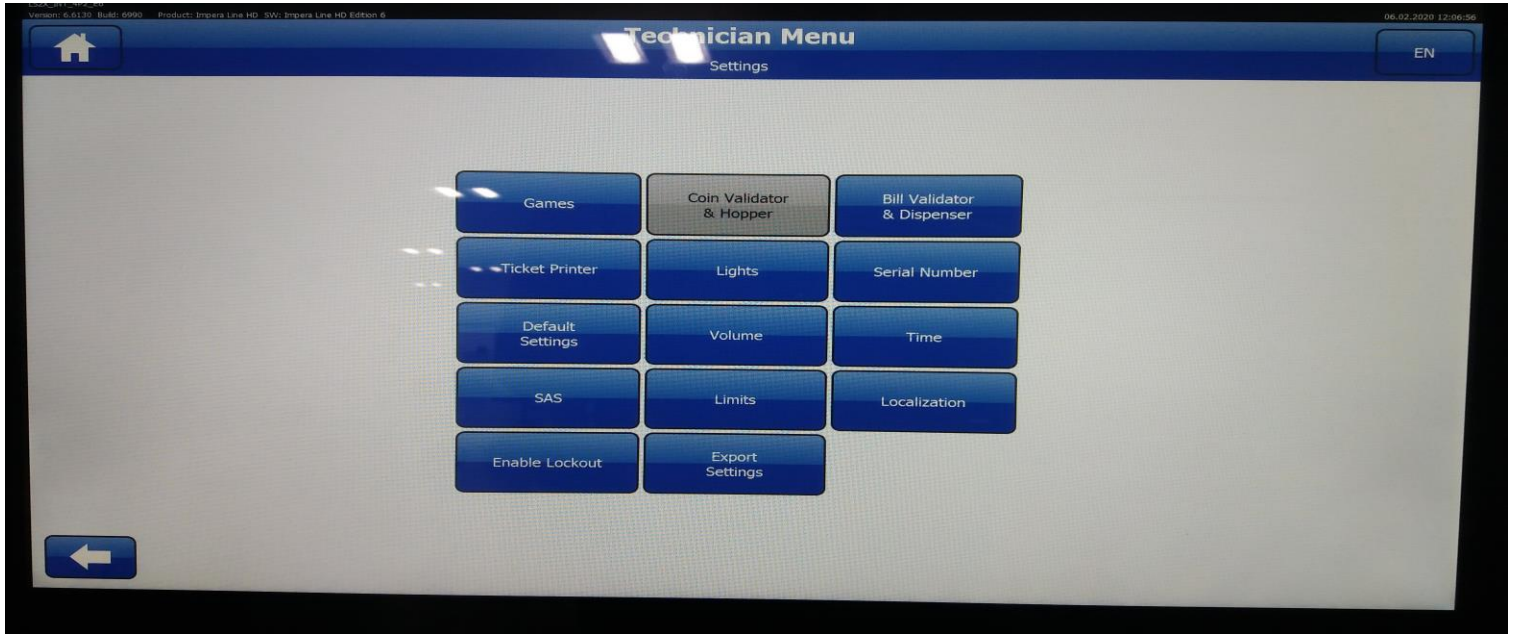

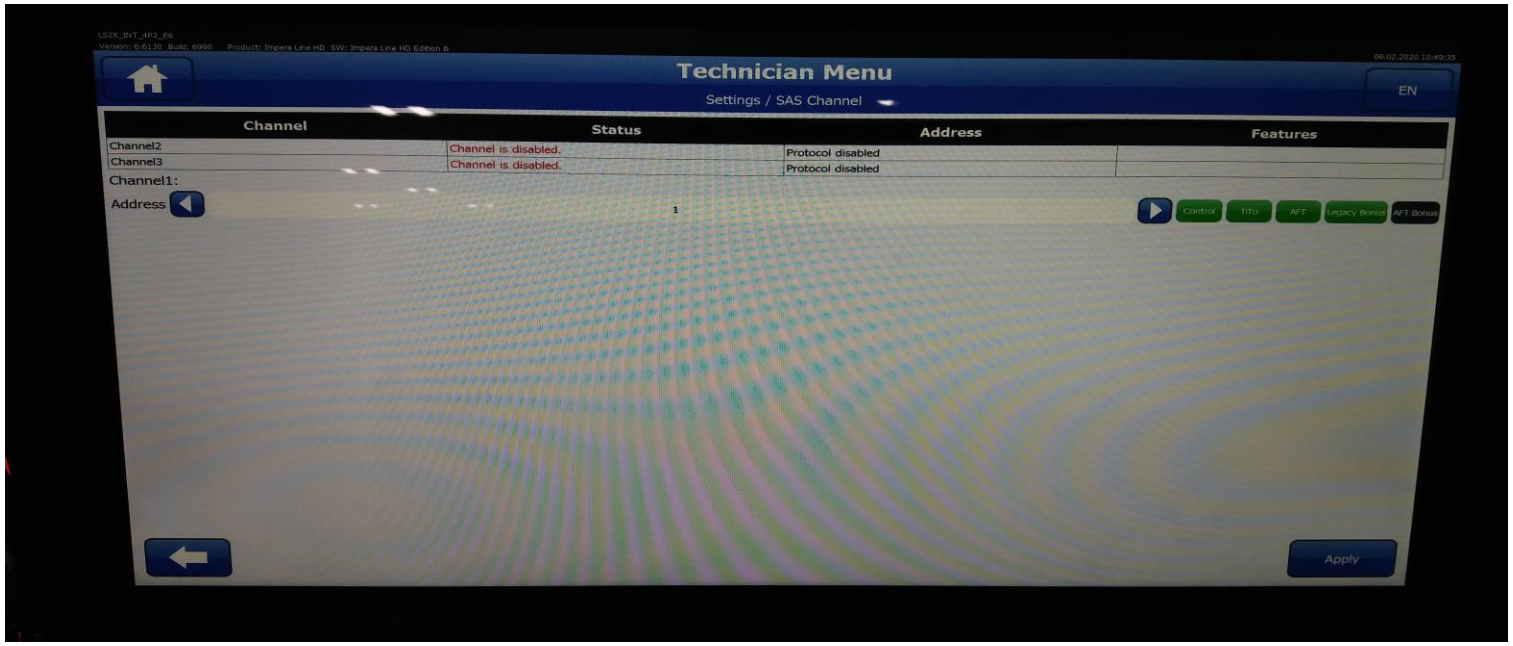

- **Press SAS to configure SAS Channel**
- **Change Address to 1**
- **Enable “Controll, TITO, AFT and Legacy Bonus”**
- **Press Apply to save changes**
- **After setting the SAS Channel the display will prompt you to set SAS parameters**

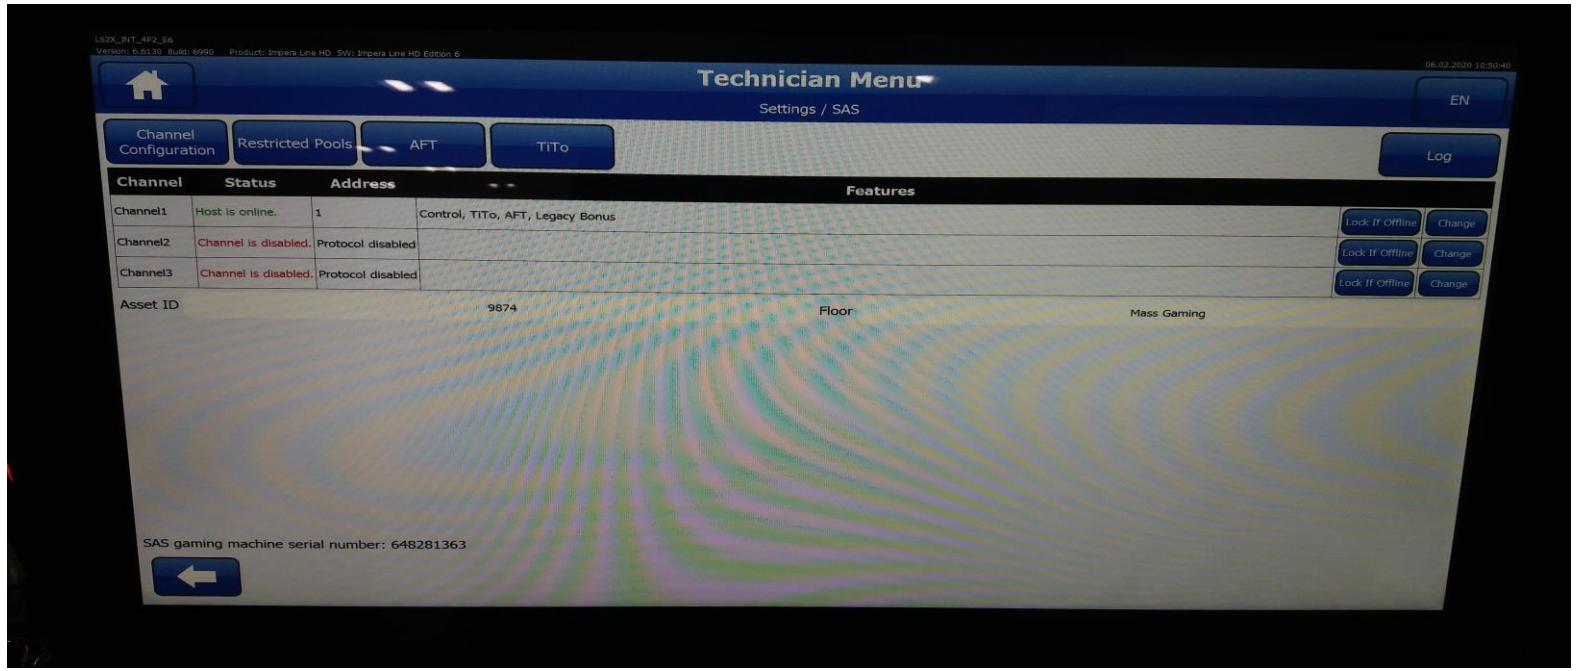

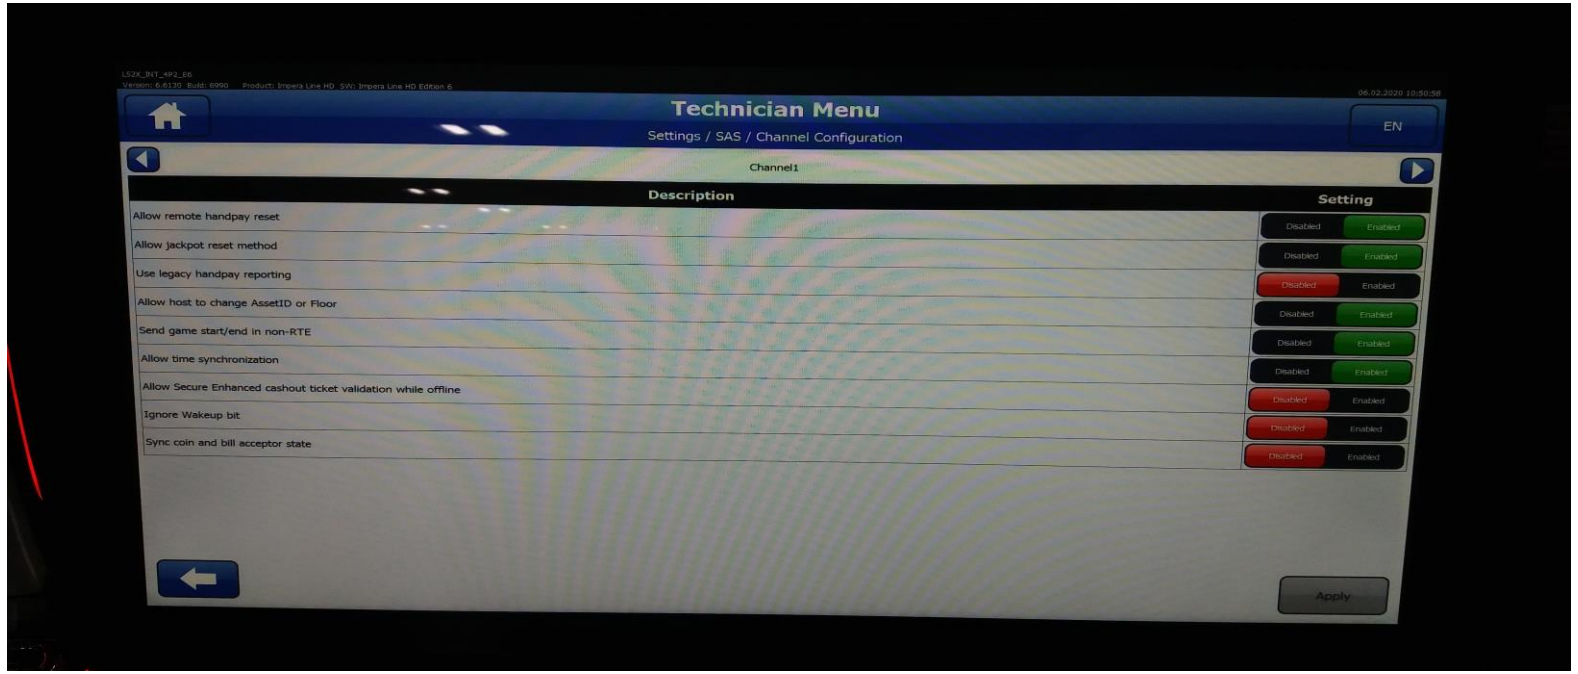


- **Set the Asset ID based on the assigned Asset number of machine and Floor for the Location number**
- **Press “Channel Configuration”**
- **Enable all of the Description based on the image and click apply for confirmation of the settings**
- **Press back button to return to SAS Menu**






- **Press Restricted pools**
- **Confirm if the option is “Accept All”**
- **Press back button to return to SAS Menu**

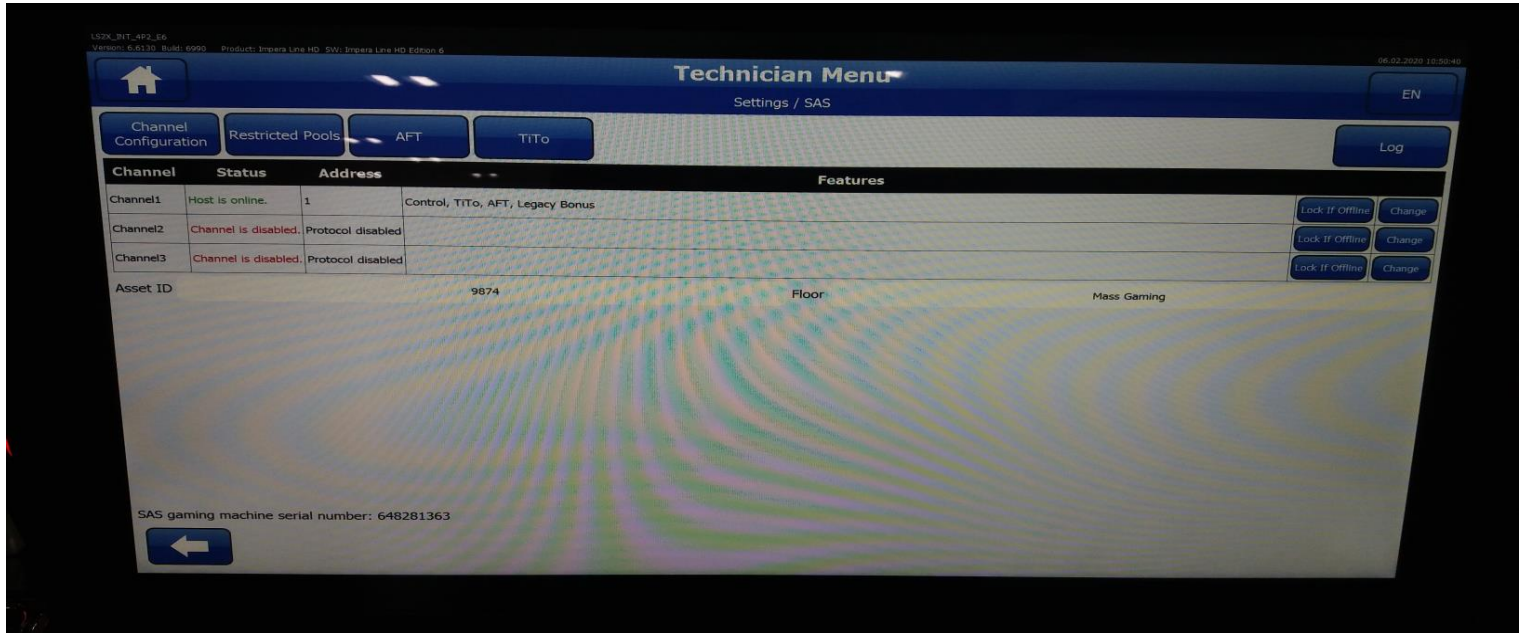





- **Press AFT**
- **Make sure all of the AFT Parameters are Enabled**
- **Press back button to return to SAS Menu**

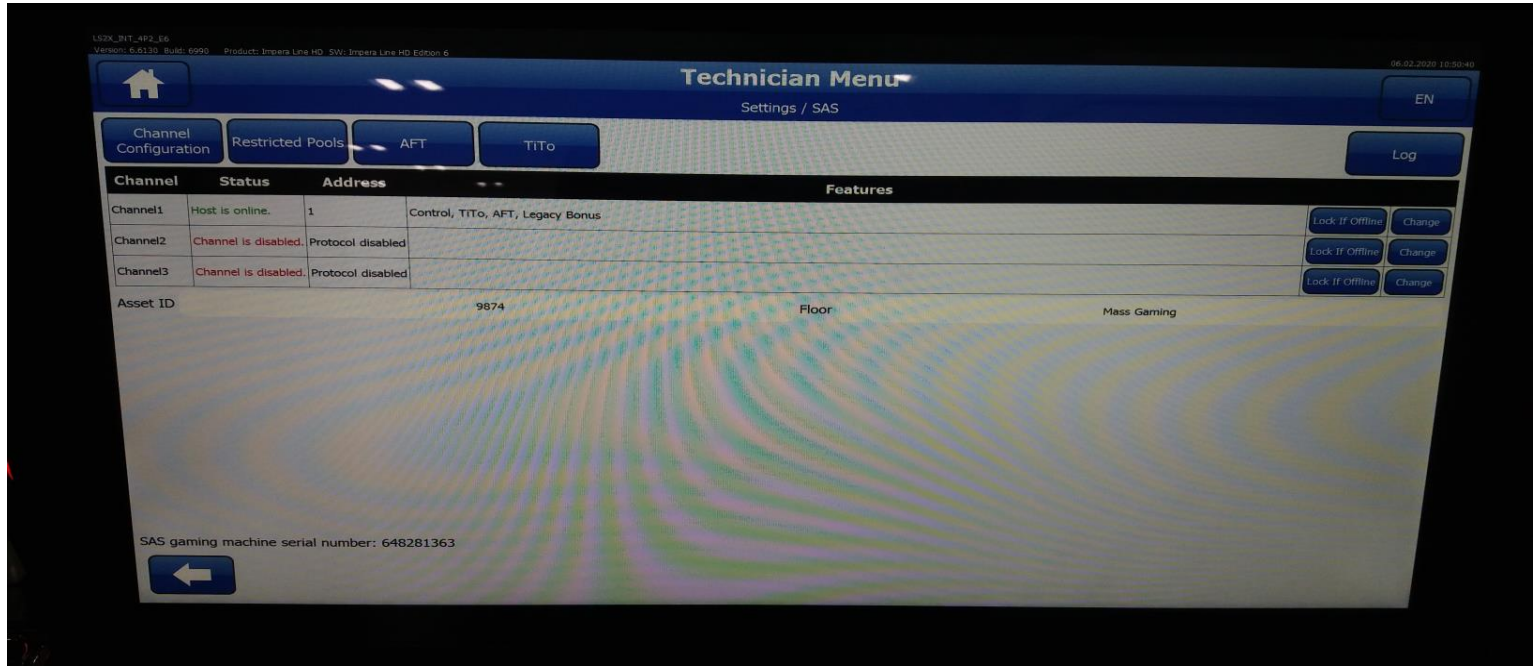




- **Press TITO**
- **“Disable” Printer for HP Receipt**
- **Just remain the other parameters unchanged and press Apply to save changes**
- **Back button to return Main Menu**

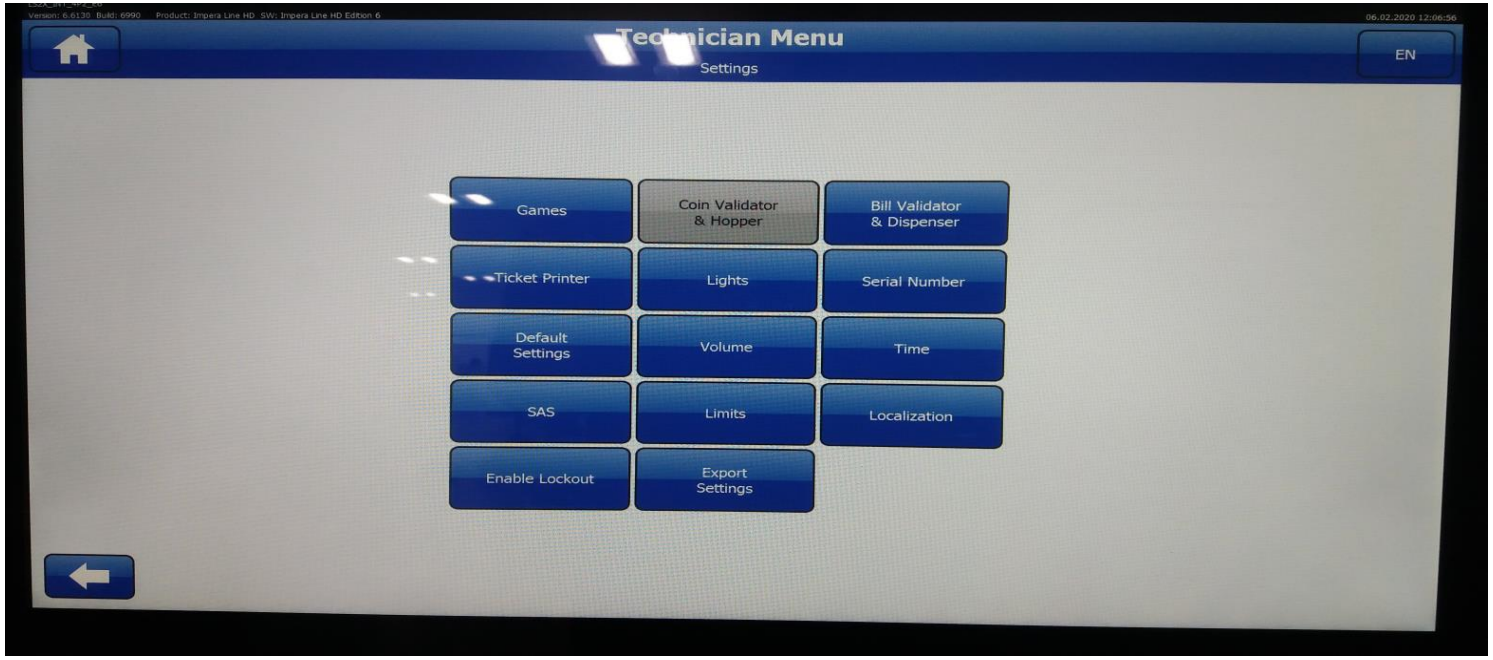

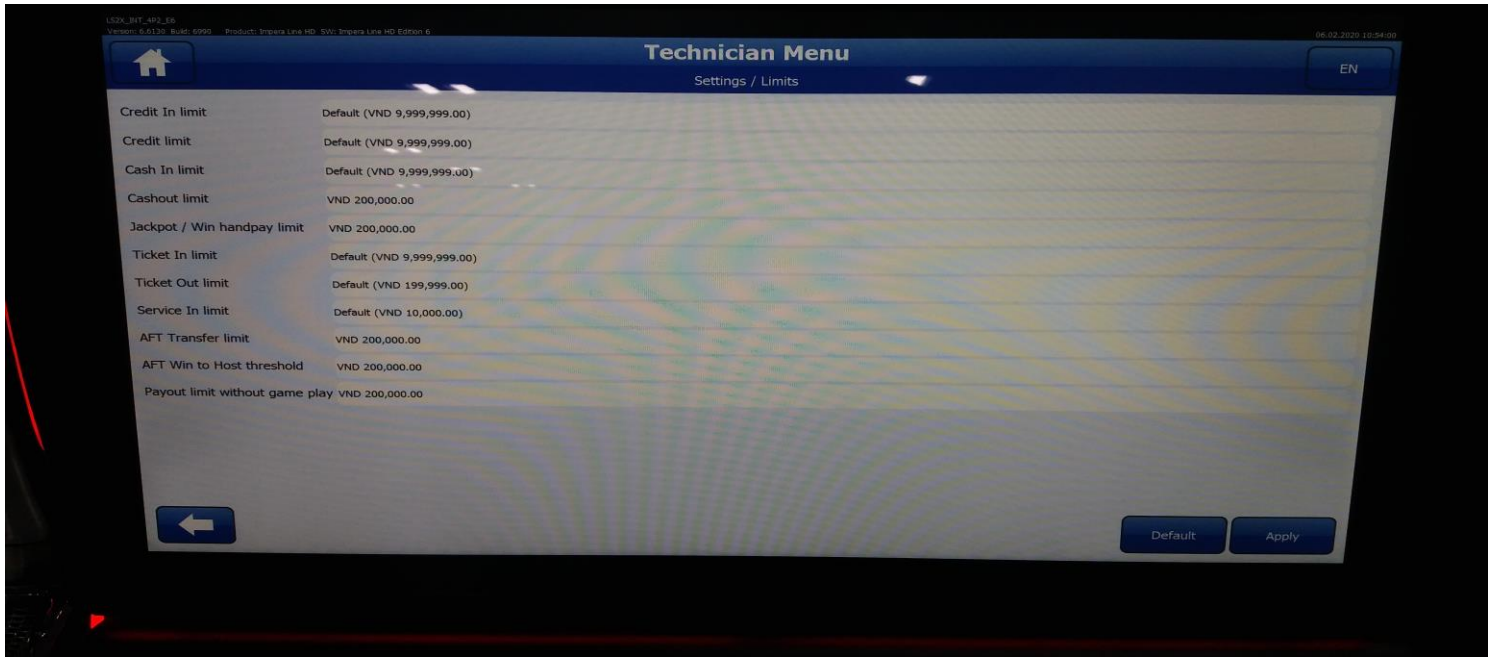

- **Press Limits for machine limit settings**
- **Set limit settings as per attached image**
- **Press Apply to save changes**
- **Make sure all of the parameters is correct before loading to game**

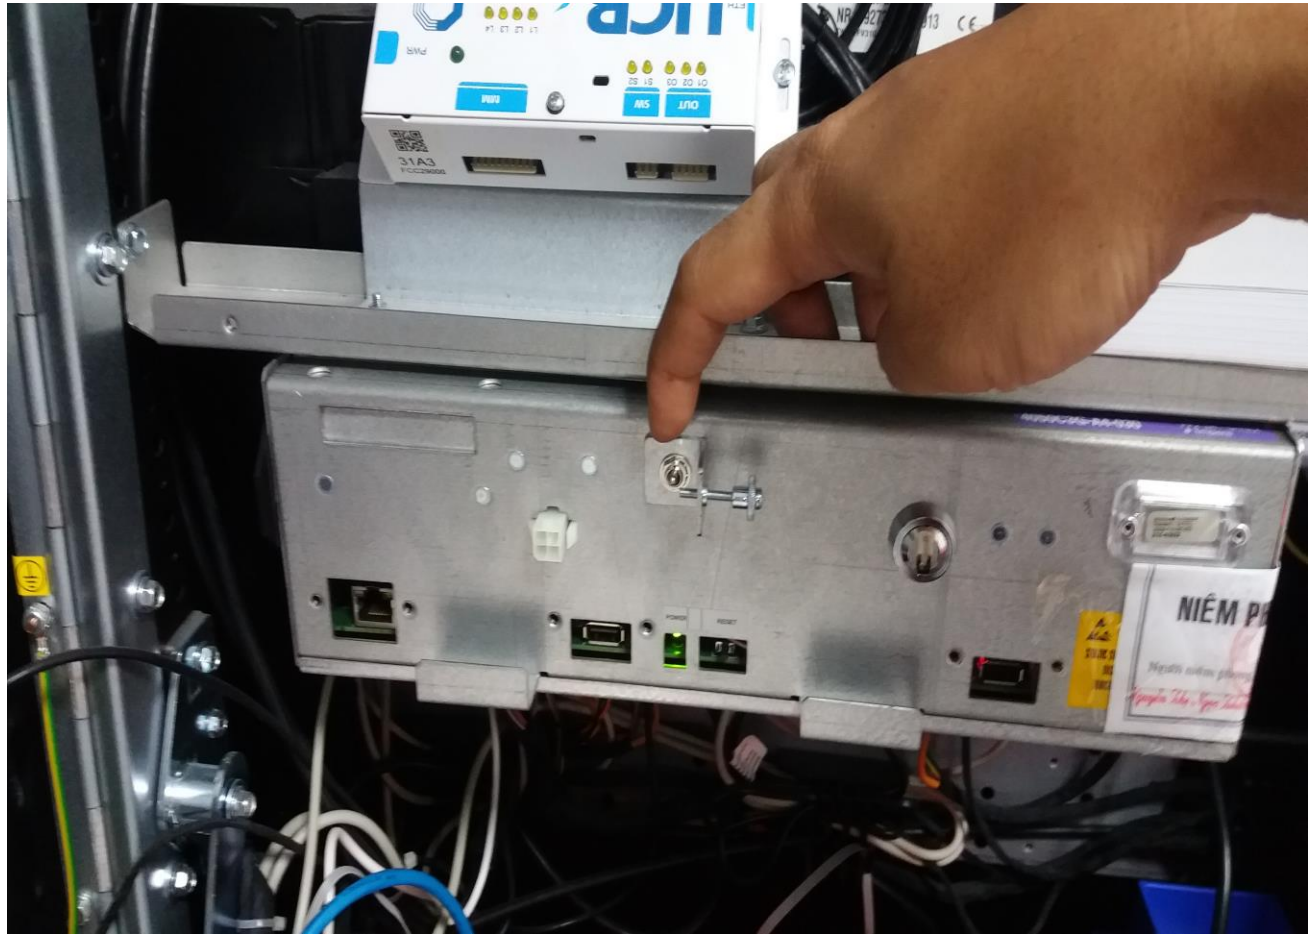

- After reviewing the settings toggle down the switch to exit the Technician access
- Turn the Operator reset switch
- Machine will go back to normal operation
- Reset the power supply of the UCB to gather new soft meters and settings of the machine