CORONA
— RESORT & CASINO —
PHÚ QUỐC

Slot Technical Department

IGT Crystal Core Base RAM Clear Procedure

Technical Luke


November 1,2025



IGT - CRYSTAL CORE BASE



- **You will have prepare two (2) USB or thumbdrive provided by the IGT support, to proceed with the RAM clear procedure**
  - **Diagnostic USB**
  - **EKEY00007**

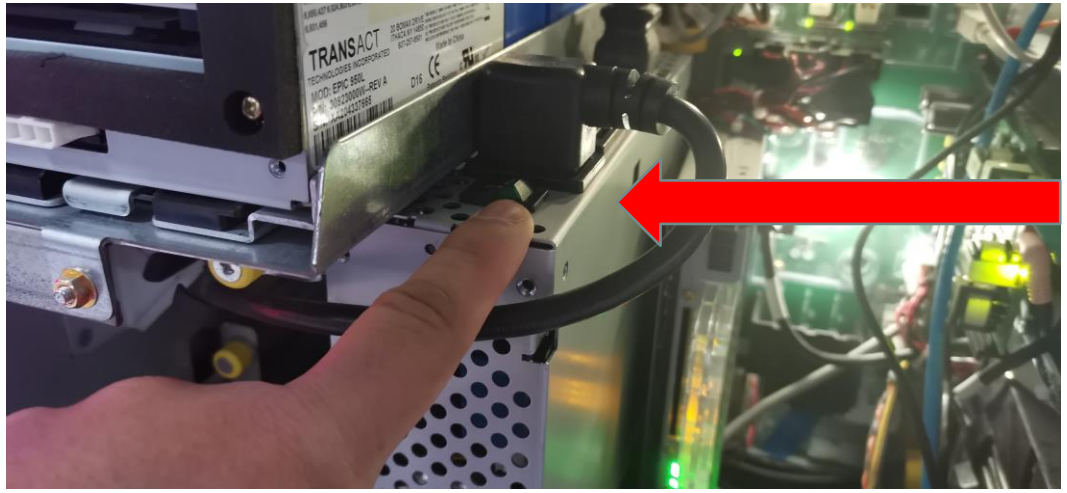


Power Switch

- **Open the main door of the machine to access the logic box and turnoff the main power switch**



Brain Box or logic box

Turn Key to access secured USB port

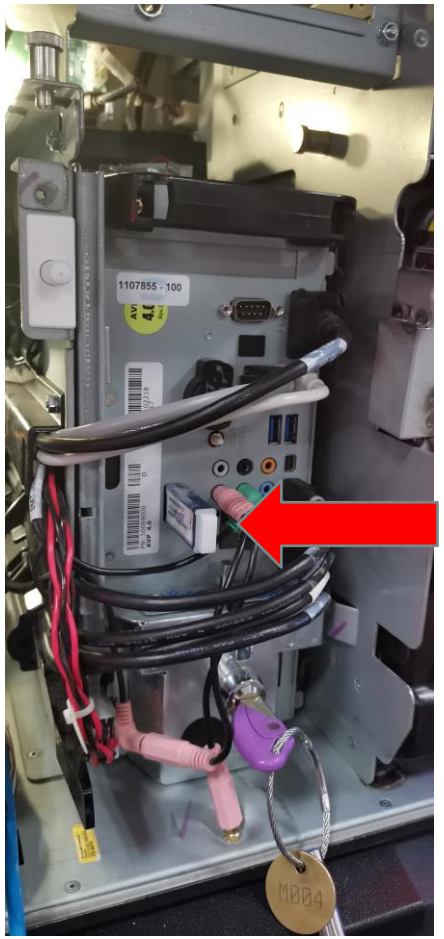

Insert Diagnostic USB

- **Open the secured USB port by turning the key**
- **Insert the Diagnostic USB**
- **Power ON the machine**



Clear Diagnostic Utility




- **Machine will load to the following Menu Interface**
- **Select CLEAR DIAGNOSTIC**







- **Clear Diagnostic Utility Menu**
  - **Select Ultimate Master Reset**
  - **Then press or tap *CLEAR SELECTED MEMORY***

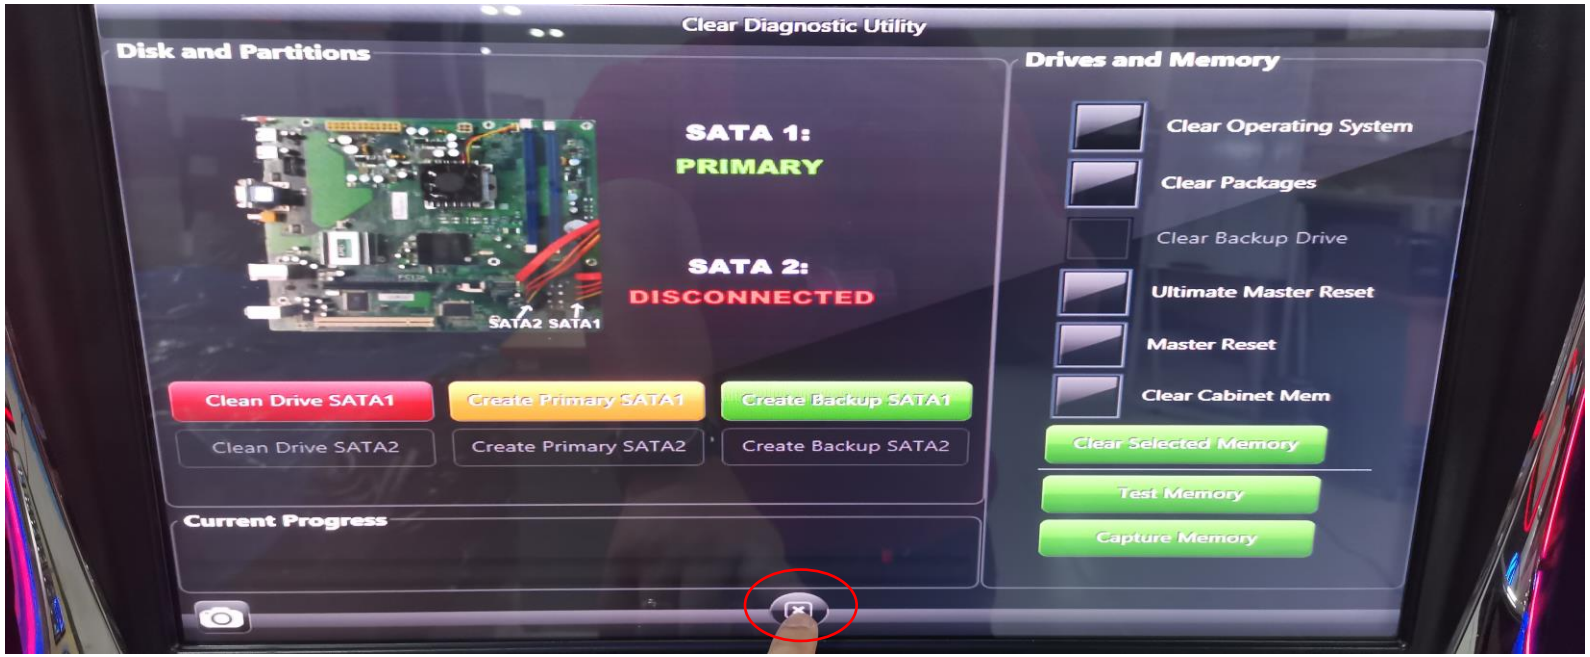





- **Press or Tap X after clearing the selected memory process**
- **Press or Tap again**
- **Then Select Yes to exit and restart the machine.**

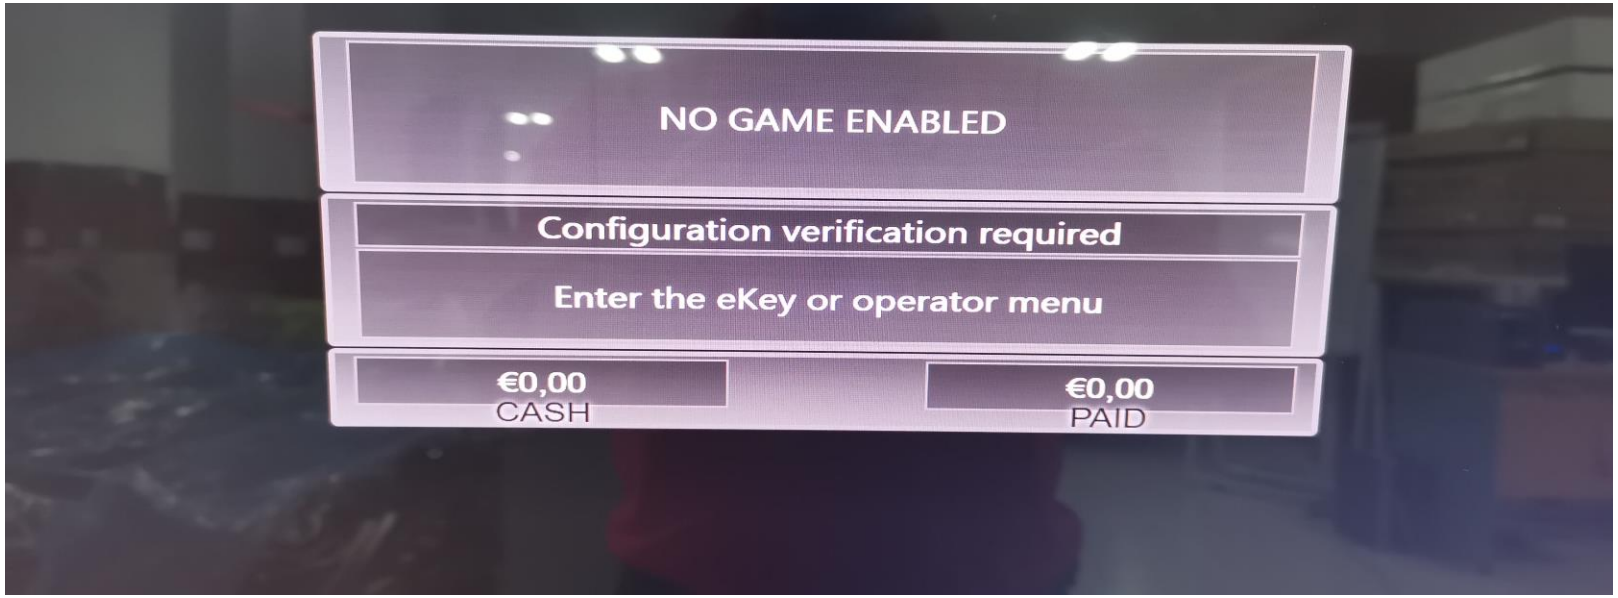

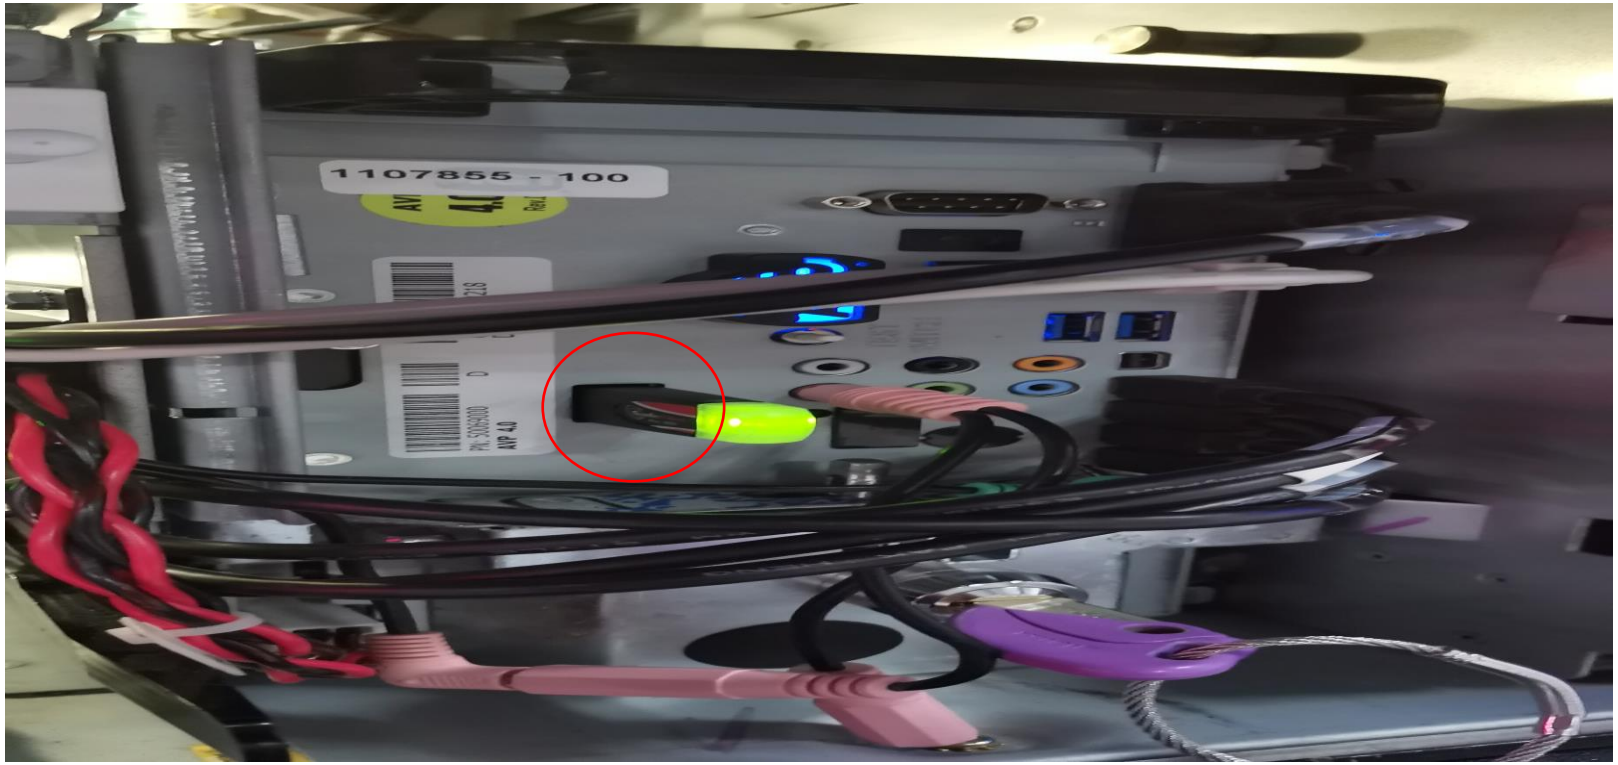

- Insert EKEY usb thumbdrive

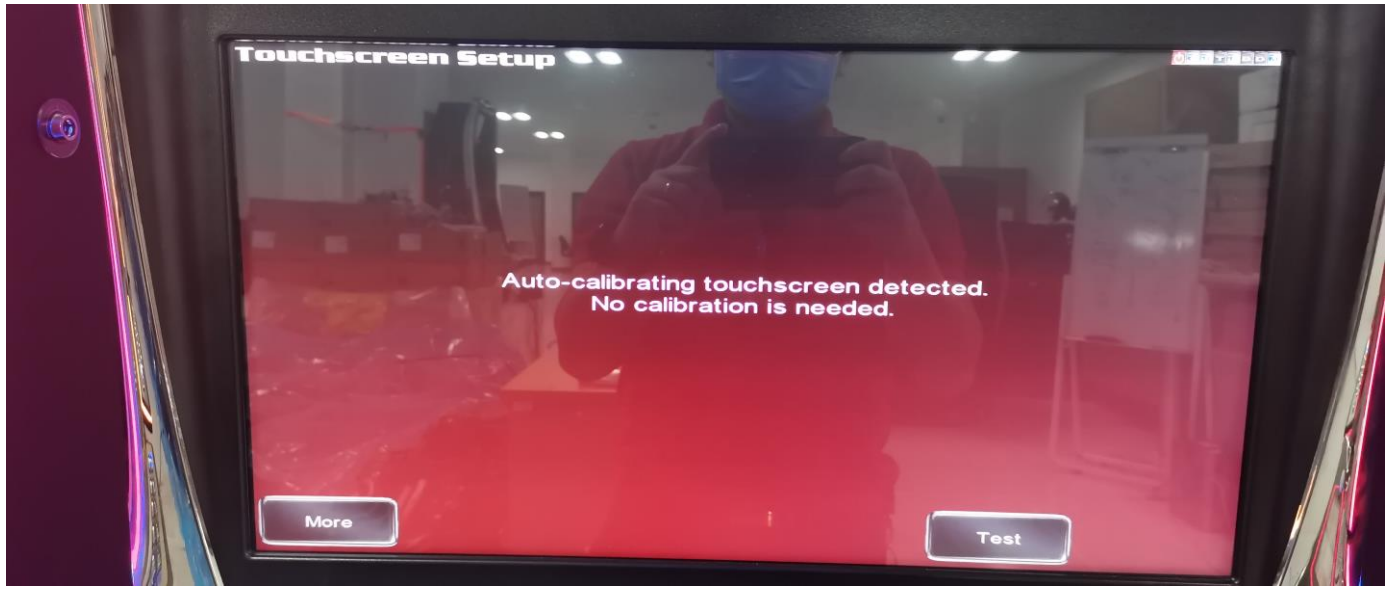

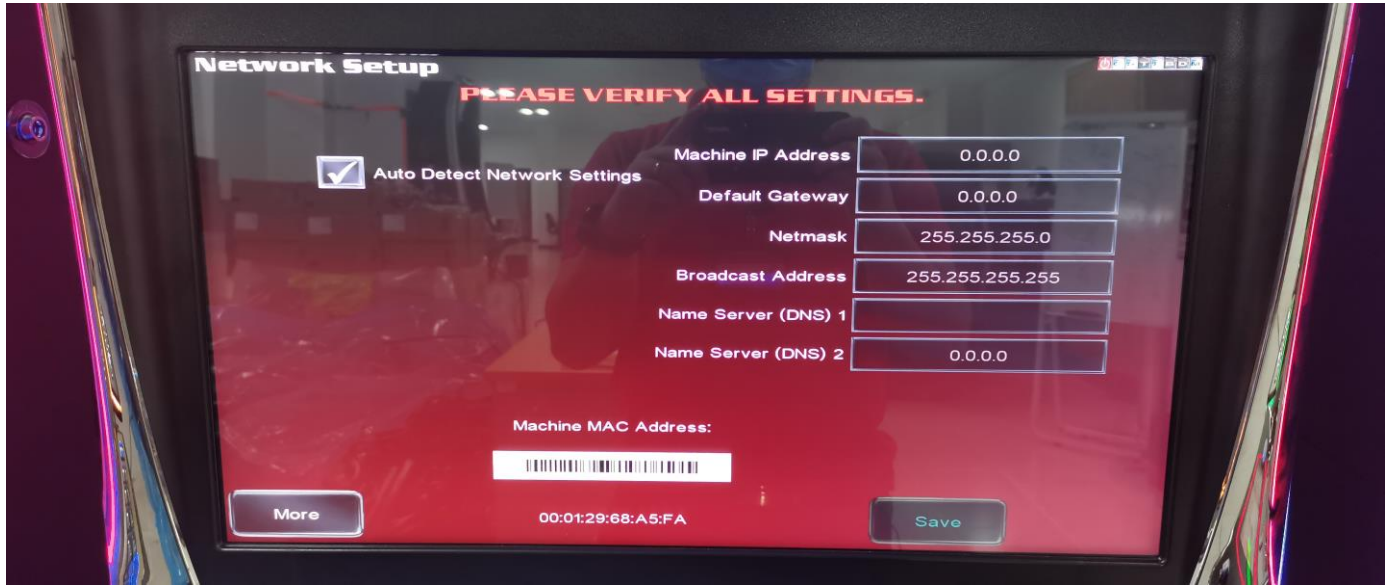


Touchscreen Setup

- Press or Tap MORE

Network Setup

- Press or Tap MORE

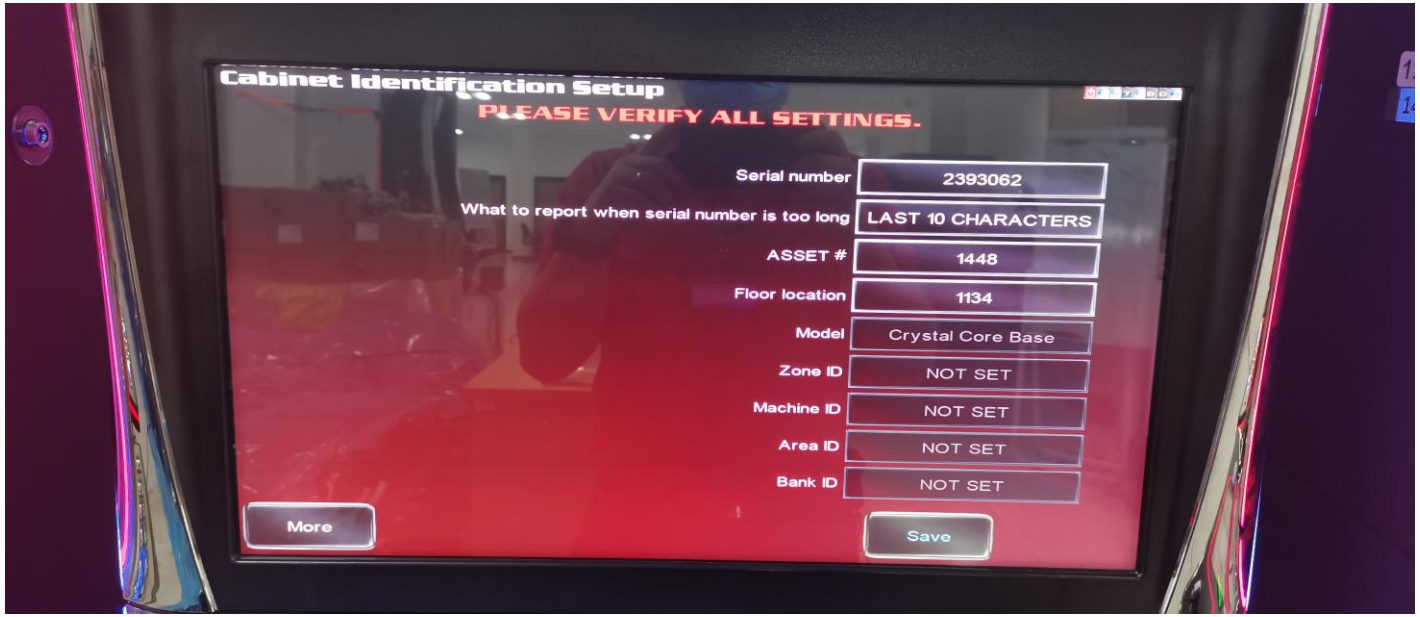





Cabinet Identification Setup

- Enter Serial Number, Asset # and Location
- Press Save and then Tap More

Configuration Import and Export

- Tap More button

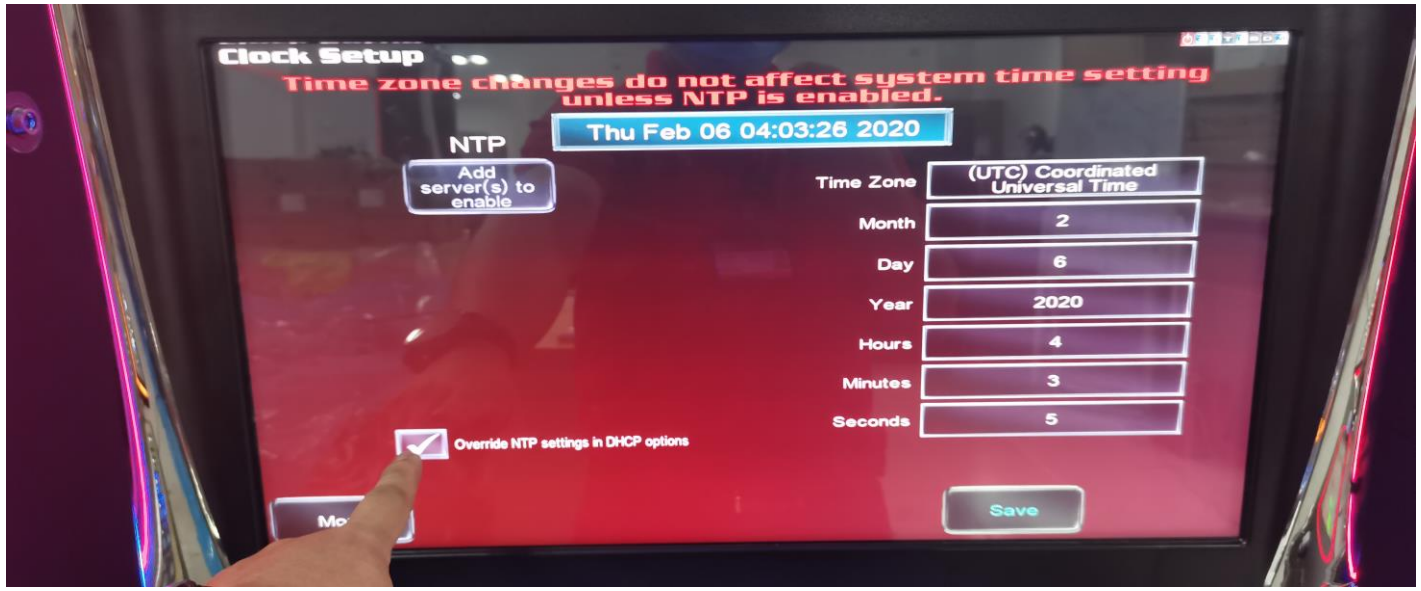

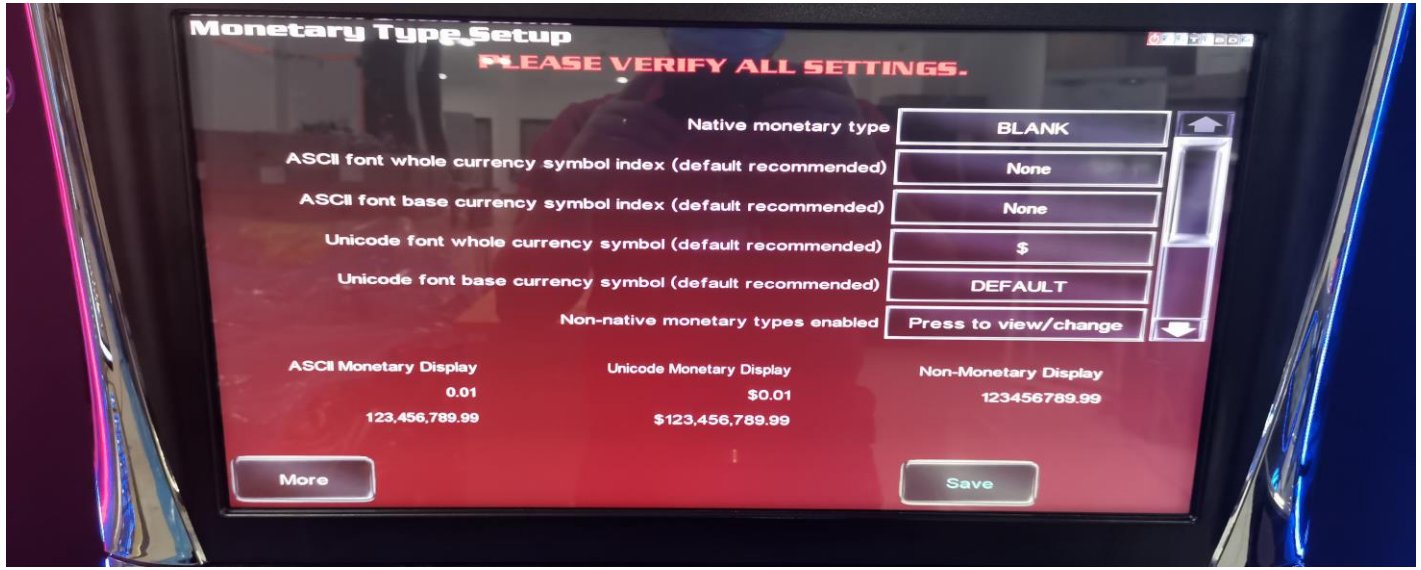


Clock Setup

- Select Override NTP settings in DHCP options
- Press Save and then Tap More


Monetary Type Setup

- Set the following entry as per photo.

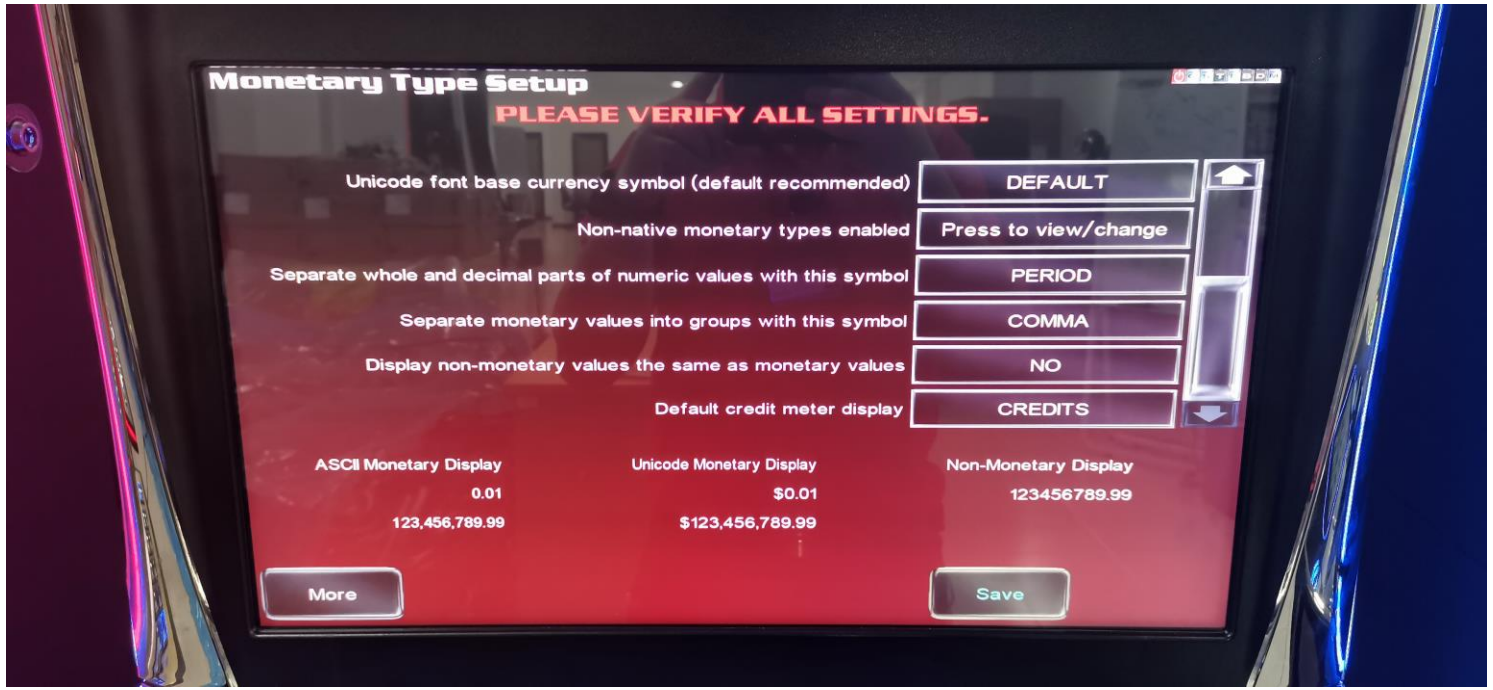


Monetary Type Setup

- Tap Save and More

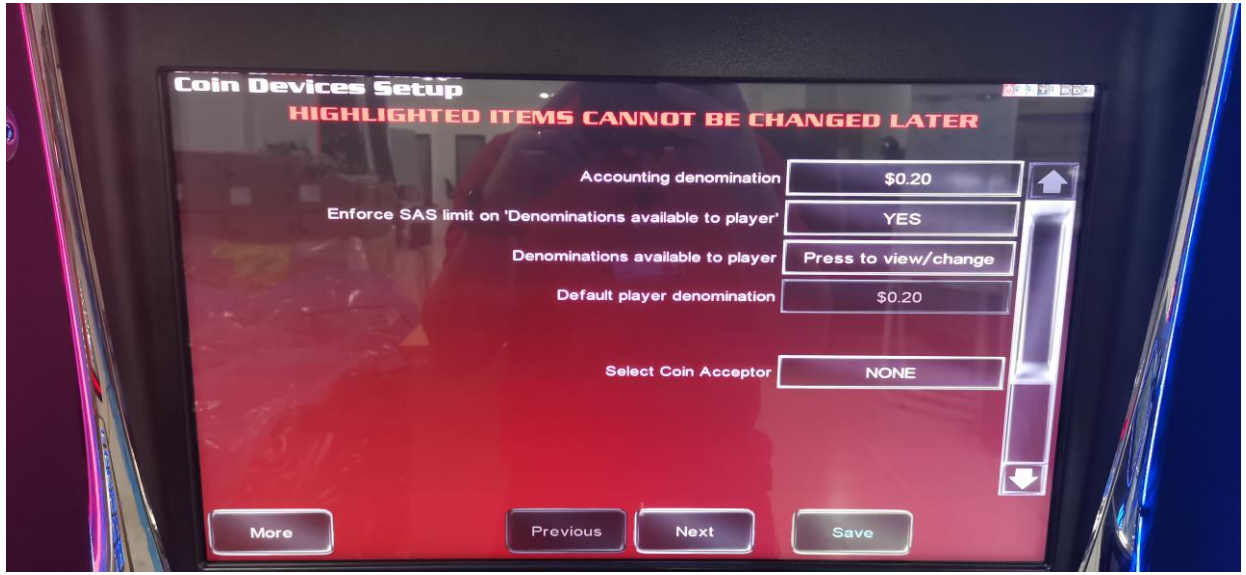


Coin Devices Setup

- Set Accounting denomination
- Set Default player denomination
- Select Next button

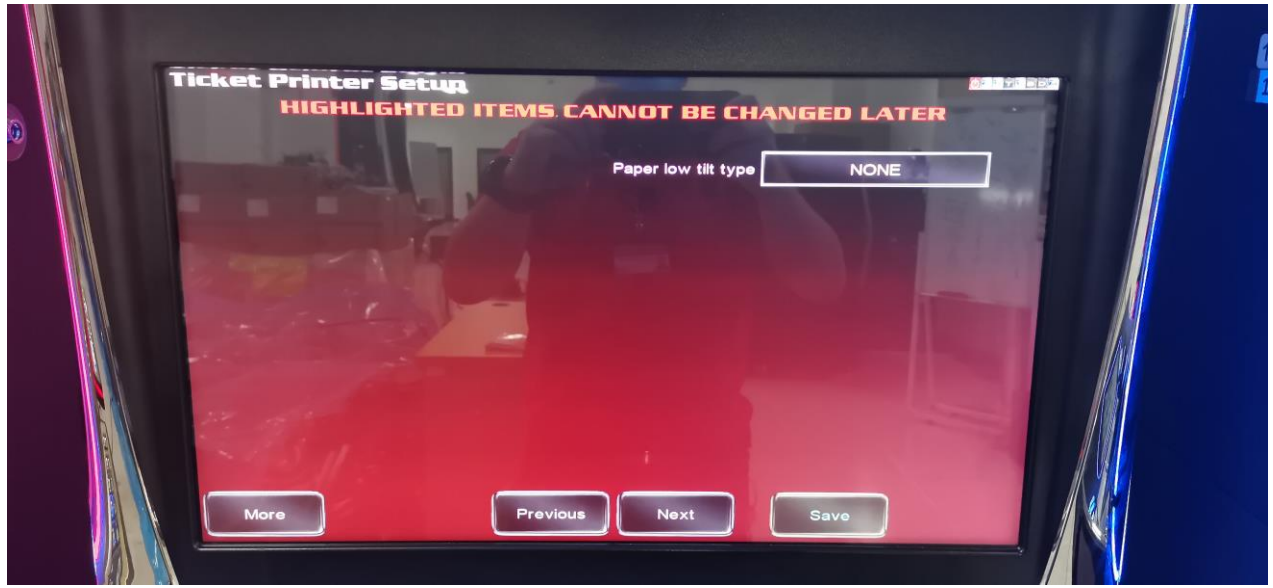


Ticket Printer Setup


- Select Next

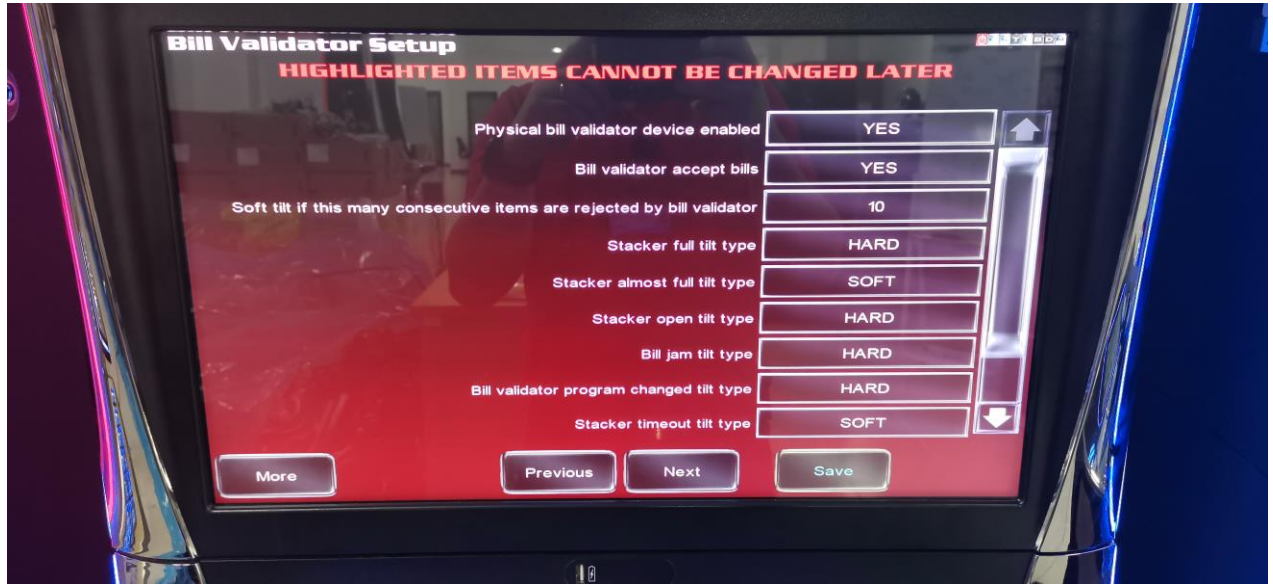

Bill Validator Setup


- Move the scroll side bar downward to see other settings

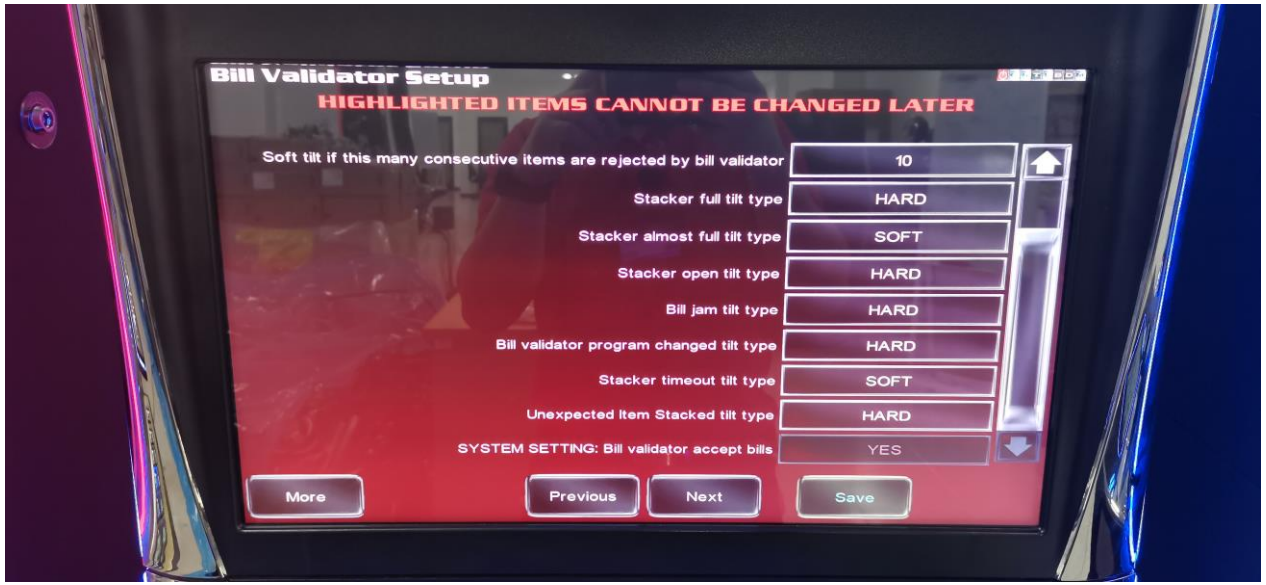


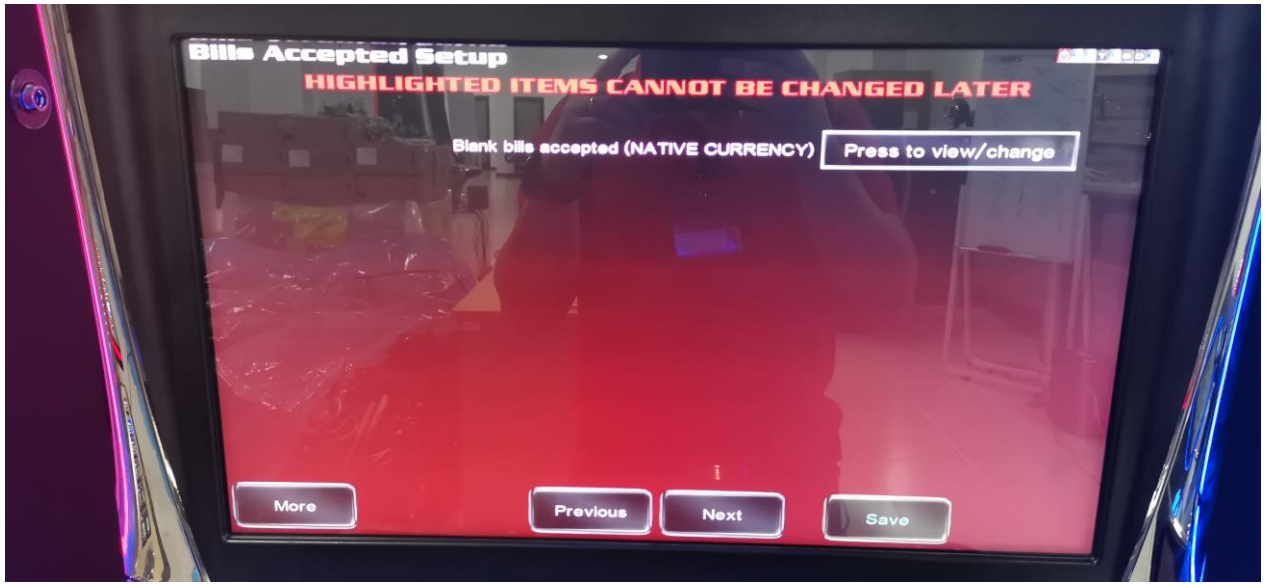

Bills Accepted setup

- Press to view/change if there is something to change else,
- Select Next

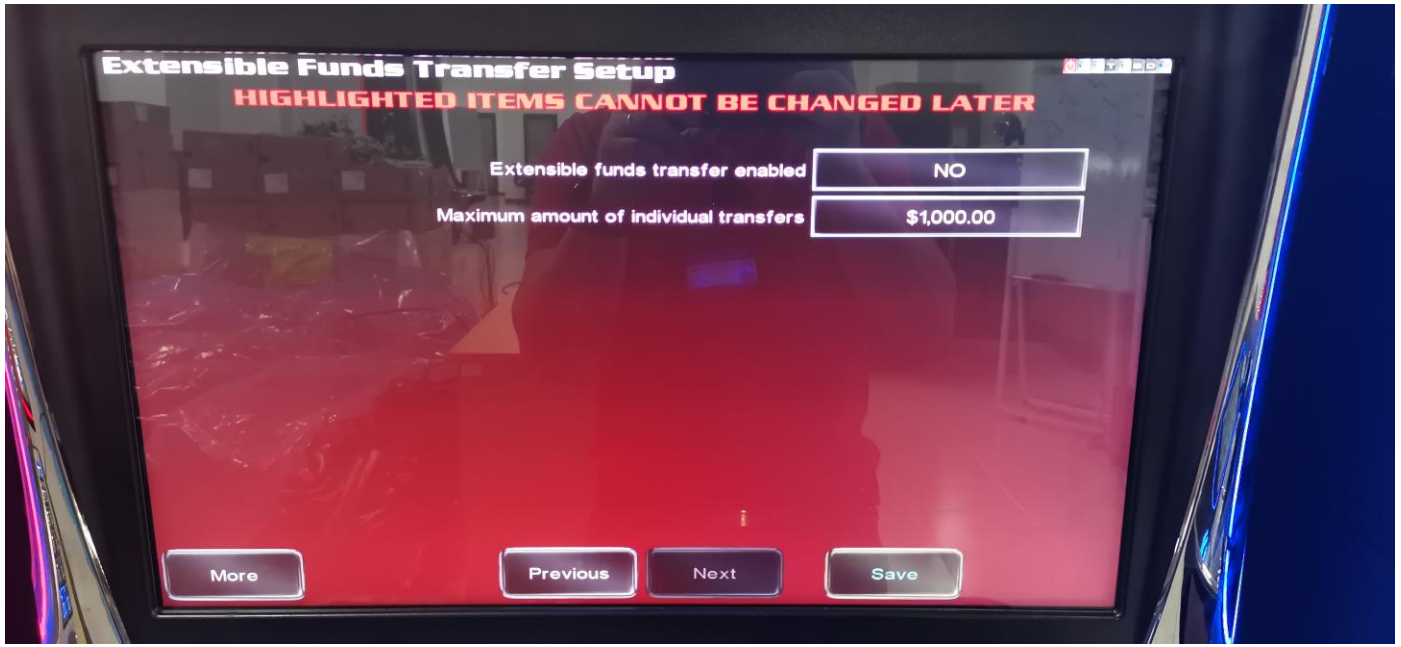

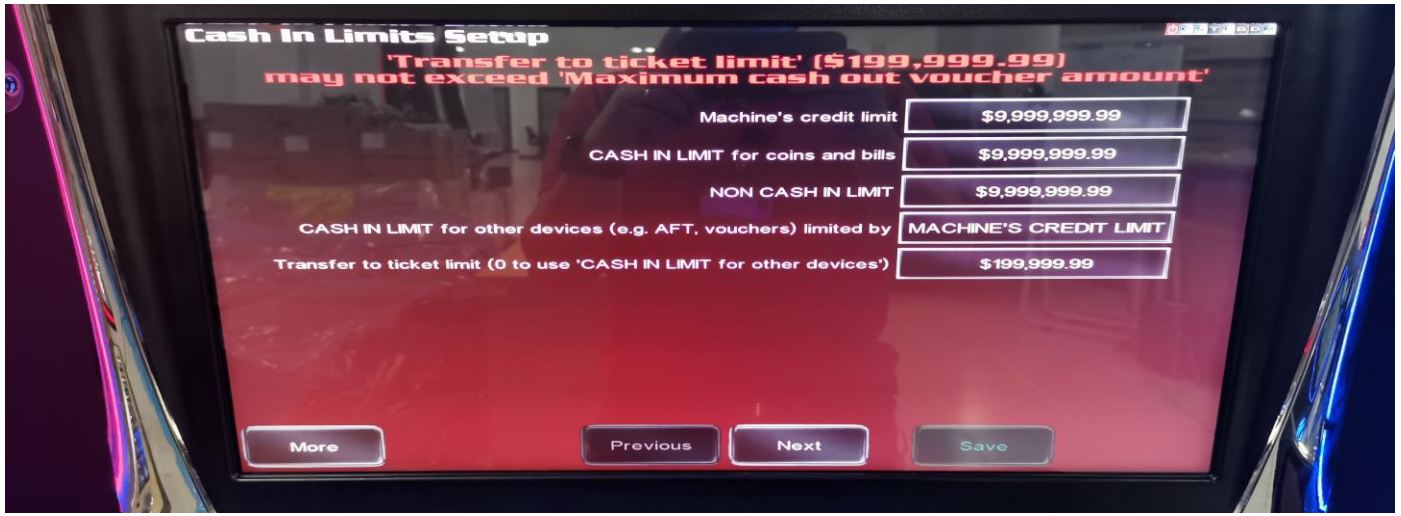



Extensible Funds Transfer Setup

- Leave as default
- Press or Tap Save
- Press or Tap More

Cash in Limit Setup

- Set the values as per photo or verify with slots operation management for the limit values
- Press or Tap NEXT

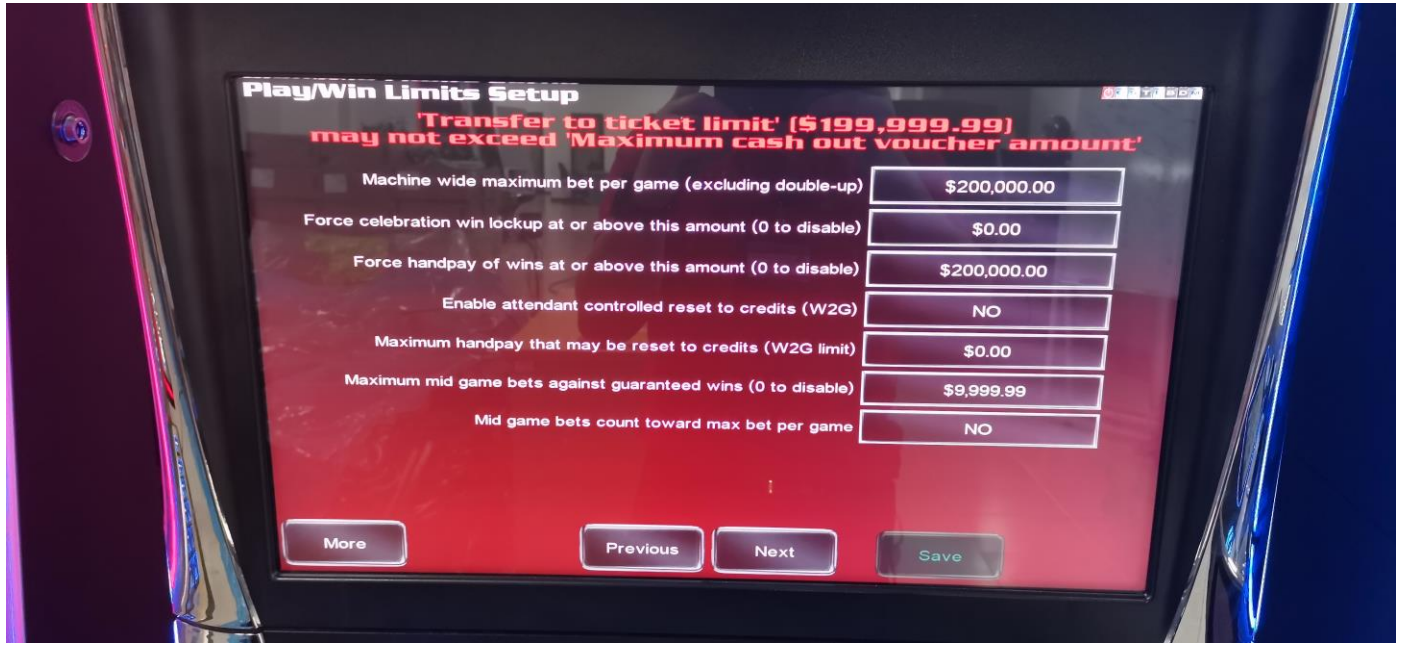

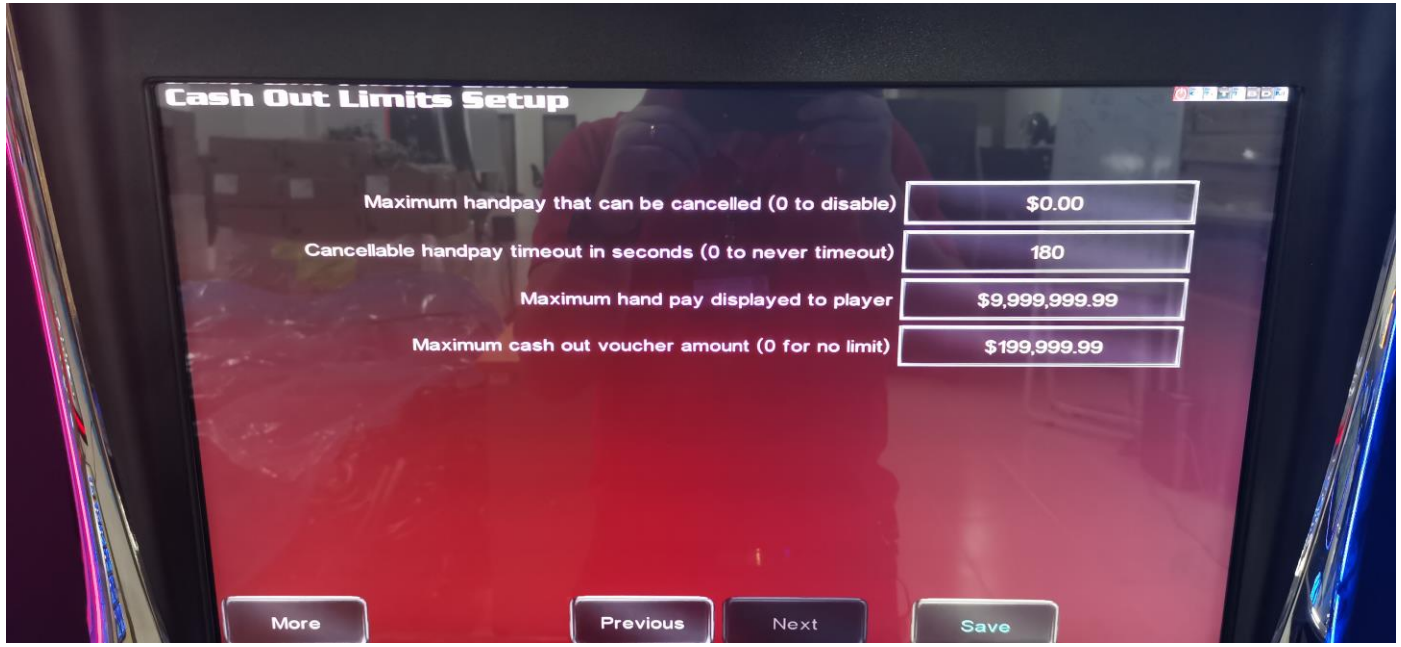



Play/Win Limits Setup

- Set the values as per photo or verify with slots operation management for the limit values
- Select Next

Cash Out Limits Setup

- Set the values as per photo or verify with slots operation management for the limit values
- Select SAVE and then Tap MORE

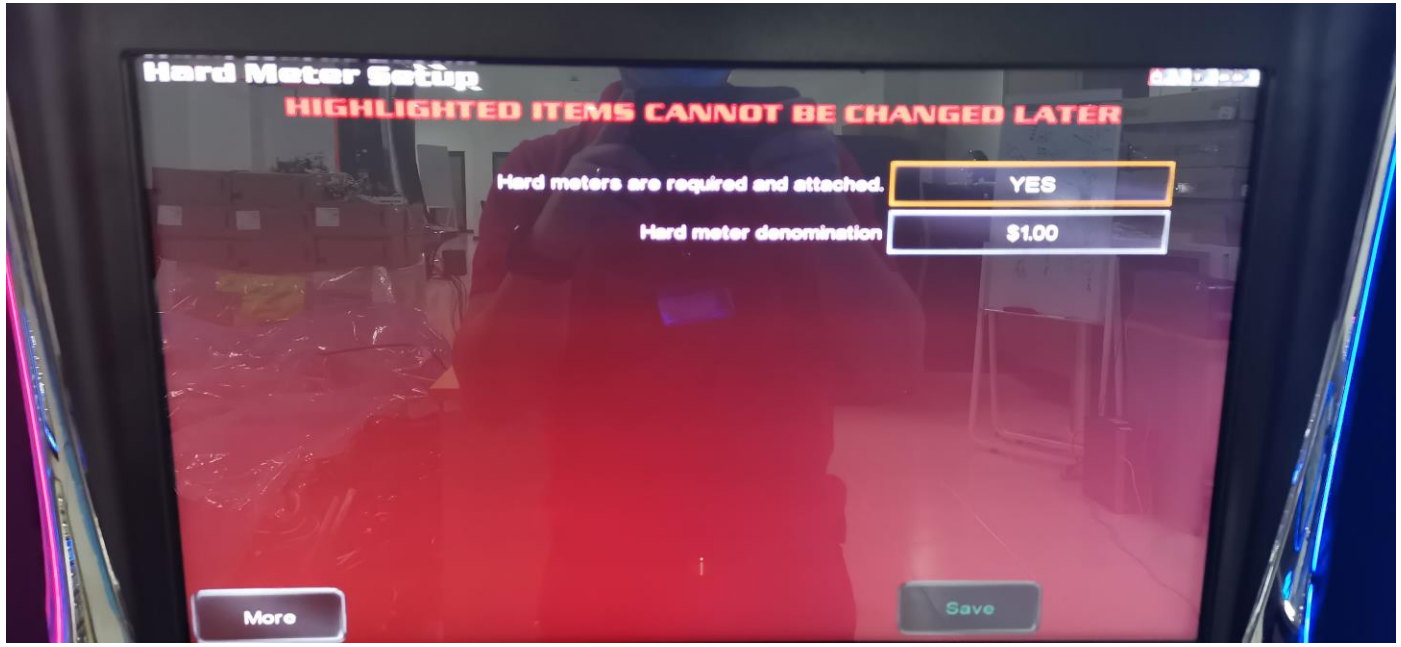

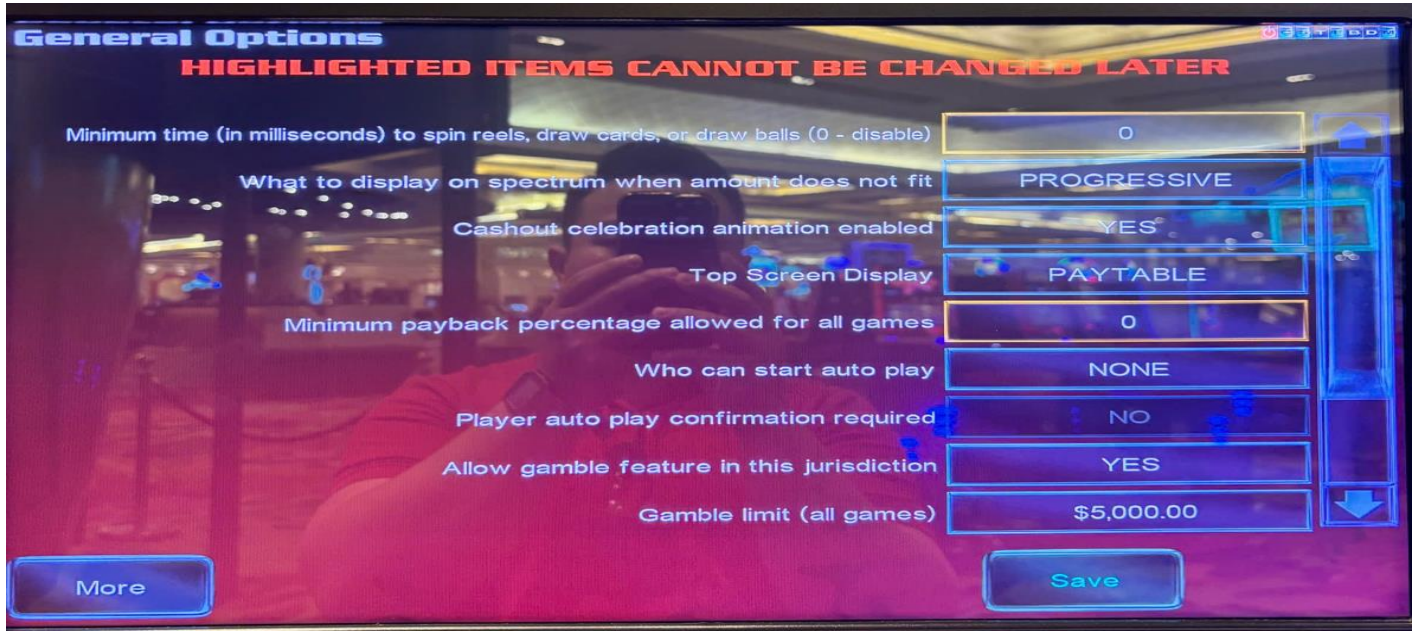


Hard Meter Setup

- Press More

General Options

- Set the values as per management slot, move side bar to view more menu settings below

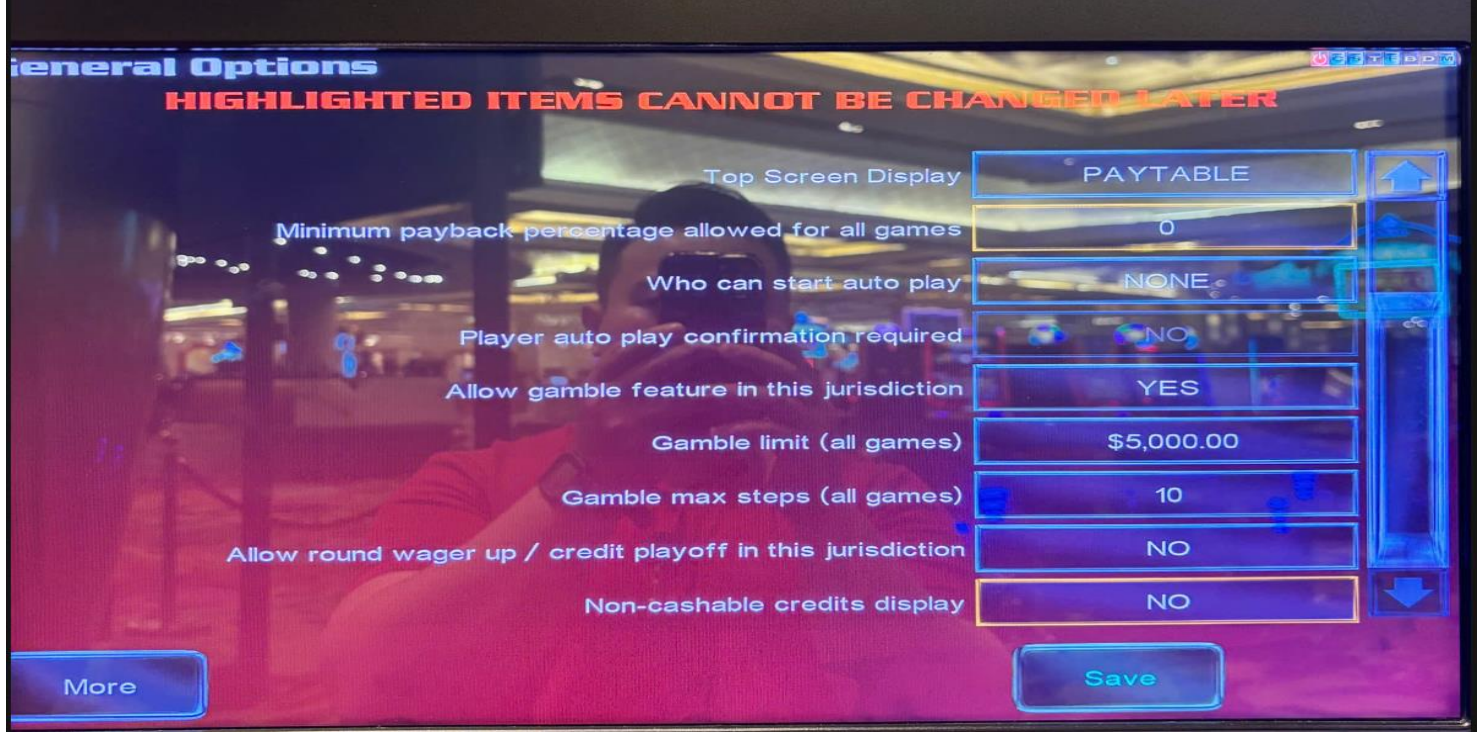




General Options

- Tap Save and press more


Game Setup – Configured Games

- Press Configure games

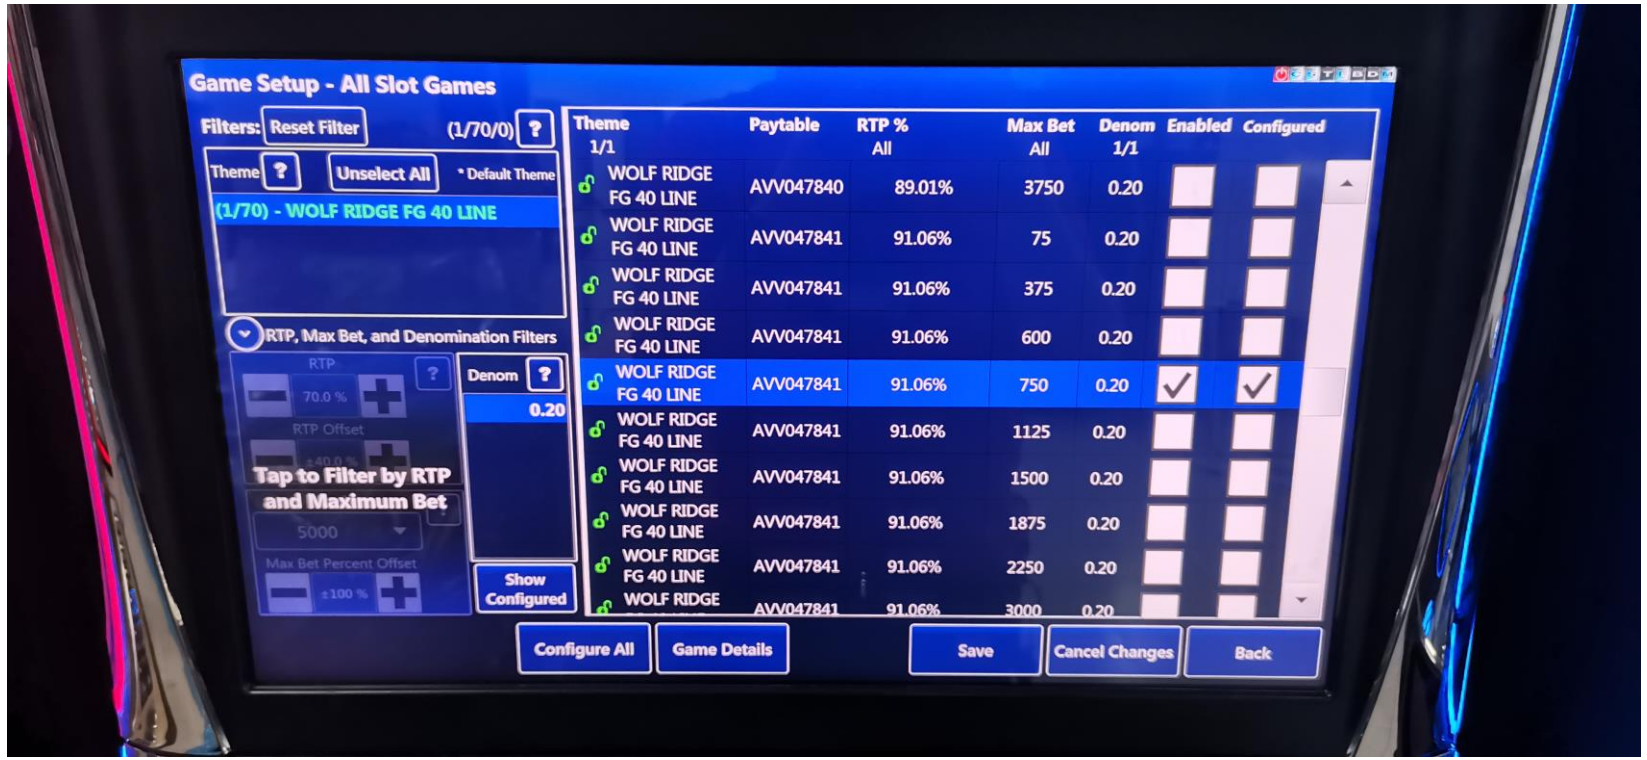

Game Setup – Configured Games

- Select the appropriate RTP MAX and denomination – mark it as per photo
- NOTE: please verify with Slot management for the correct machine RTP% MAX bet and denom before to select any
- Press Save

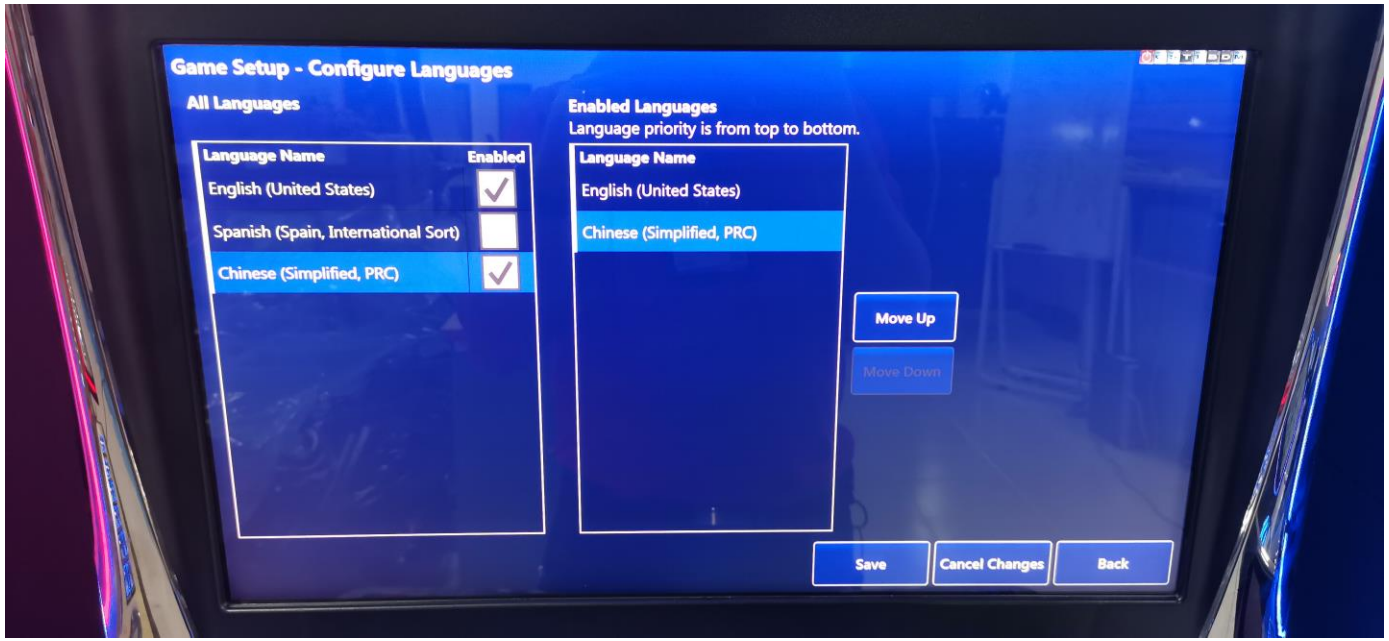


Game Setup – Configure Languages


- Select the Language name
- Press or Tap Save and then Back button
- Press More button to proceed



Certificate Management

- Press MORE

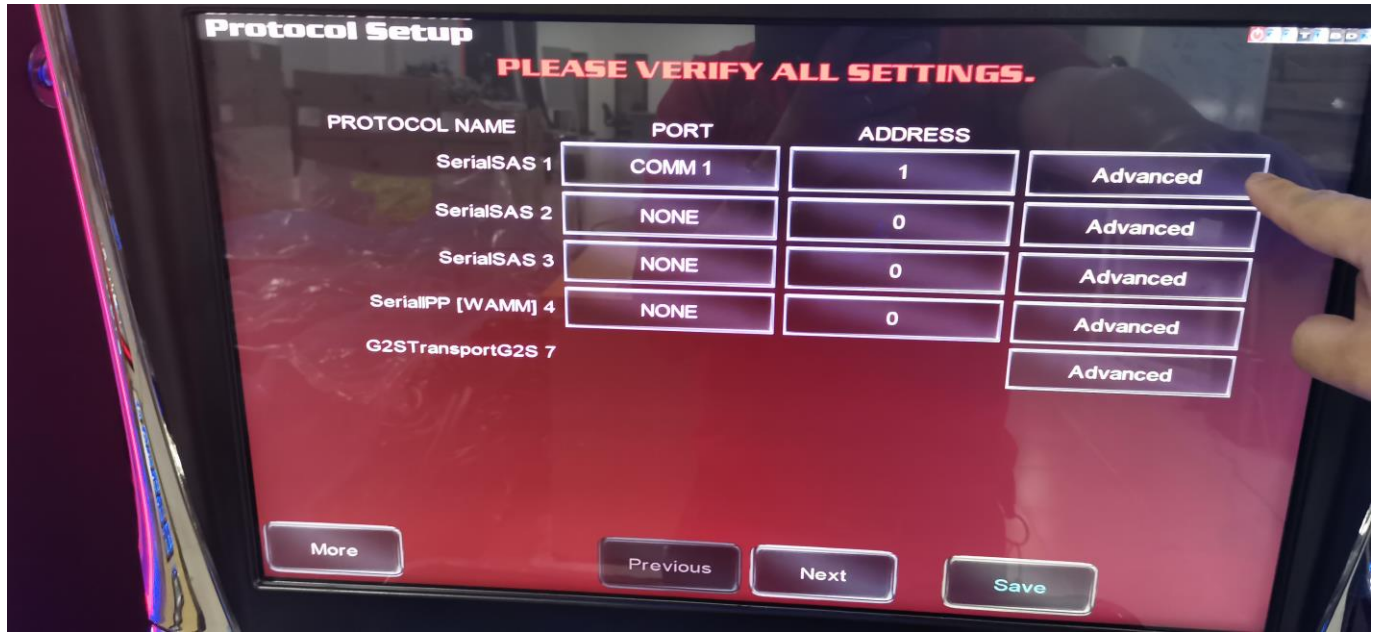

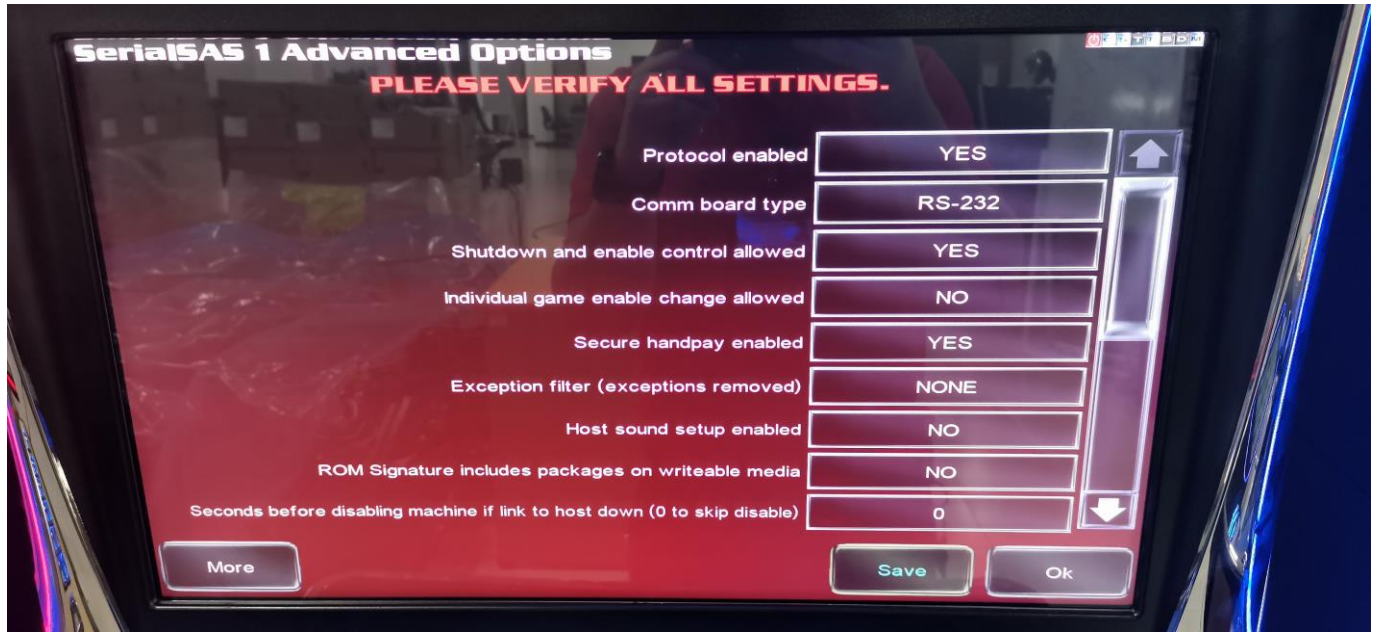



PROTOCOL SETUP

- Auto set by the system or host
- Port = COMM1 on SerialsSAS1
- Address = 1 on SerialsSAS1
- Press Advanced on SerialsSAS1

SERIALSAS1 Advanced Options

- Set as follows

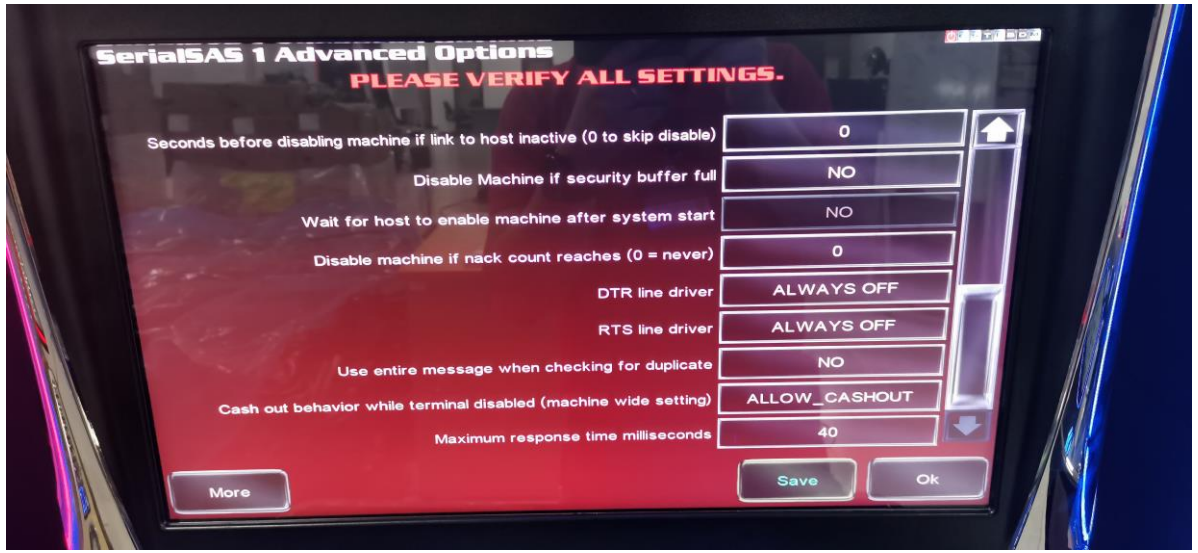

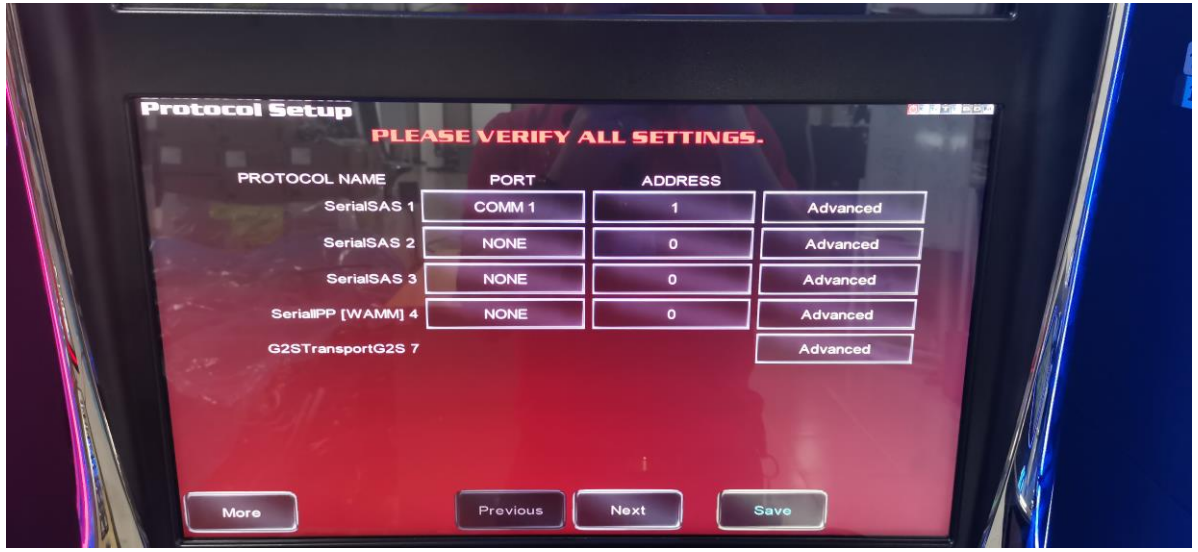

SERIALSAS1 Advanced Options


- Press Save


Press NEXT button





- Set **SerialSAS1** on the following item menus

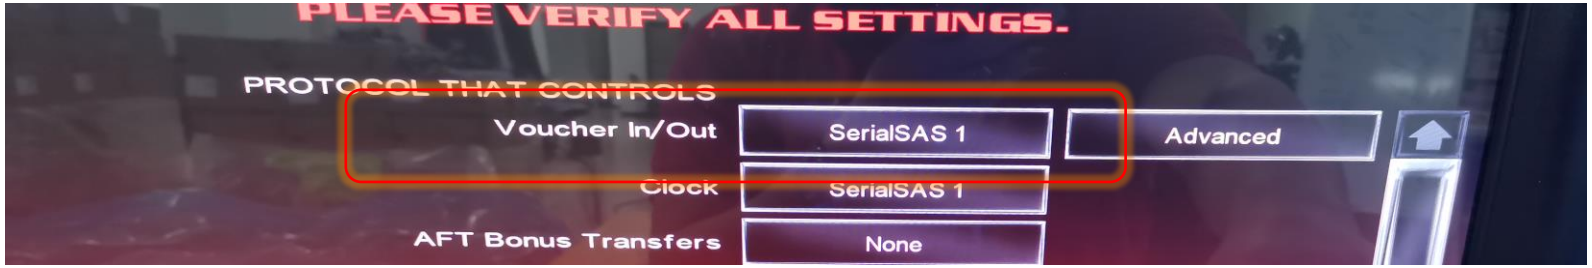


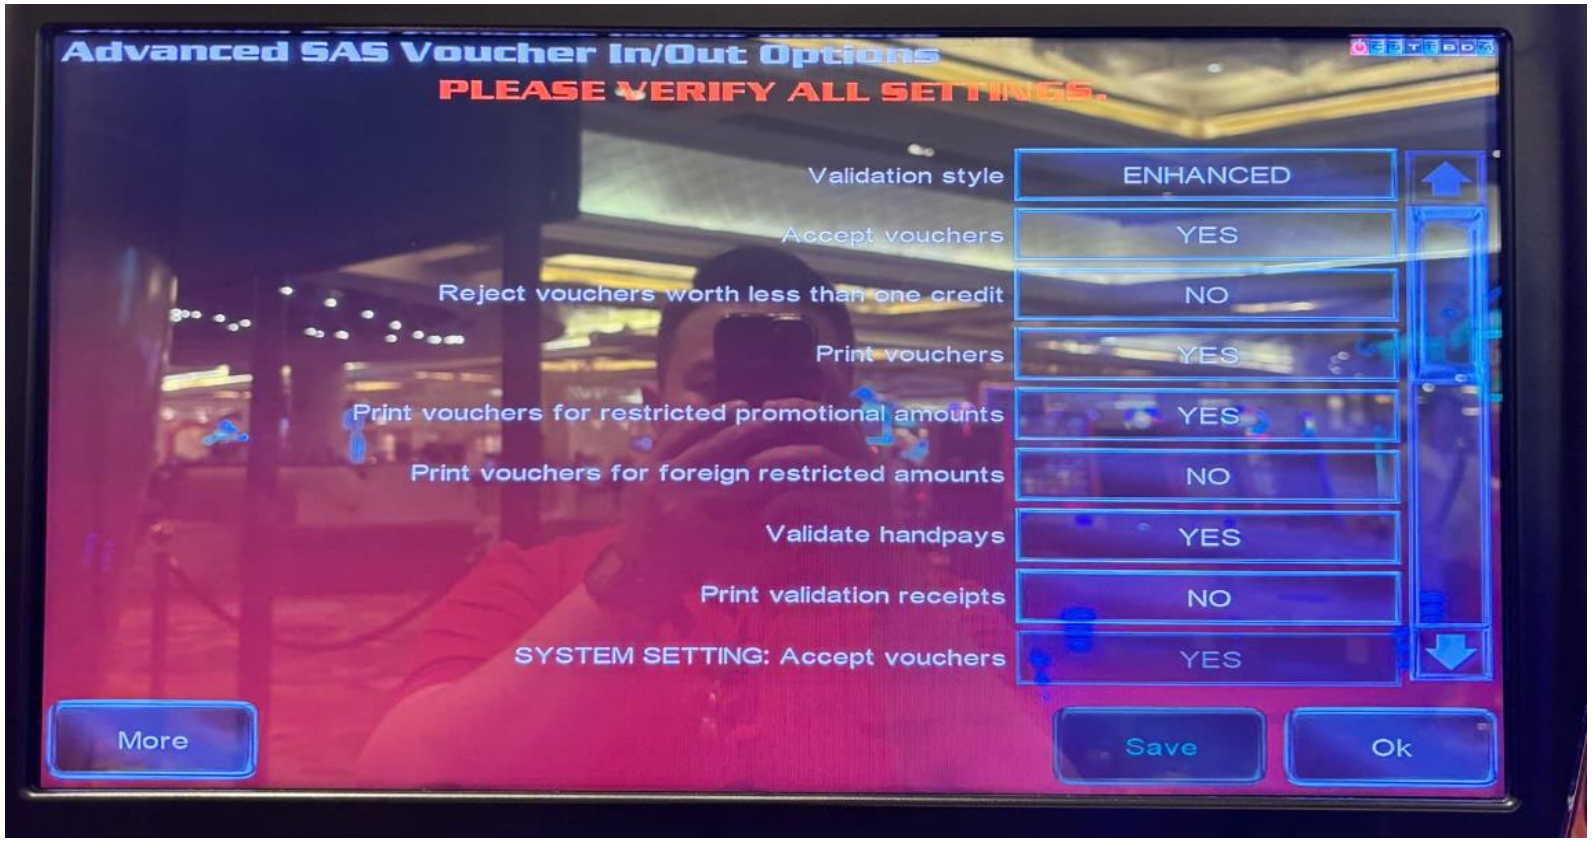

Advanced **SAS IN/OUT** Options

- Press or tap Advanced
- Then Set as follows
- Then Save and Ok




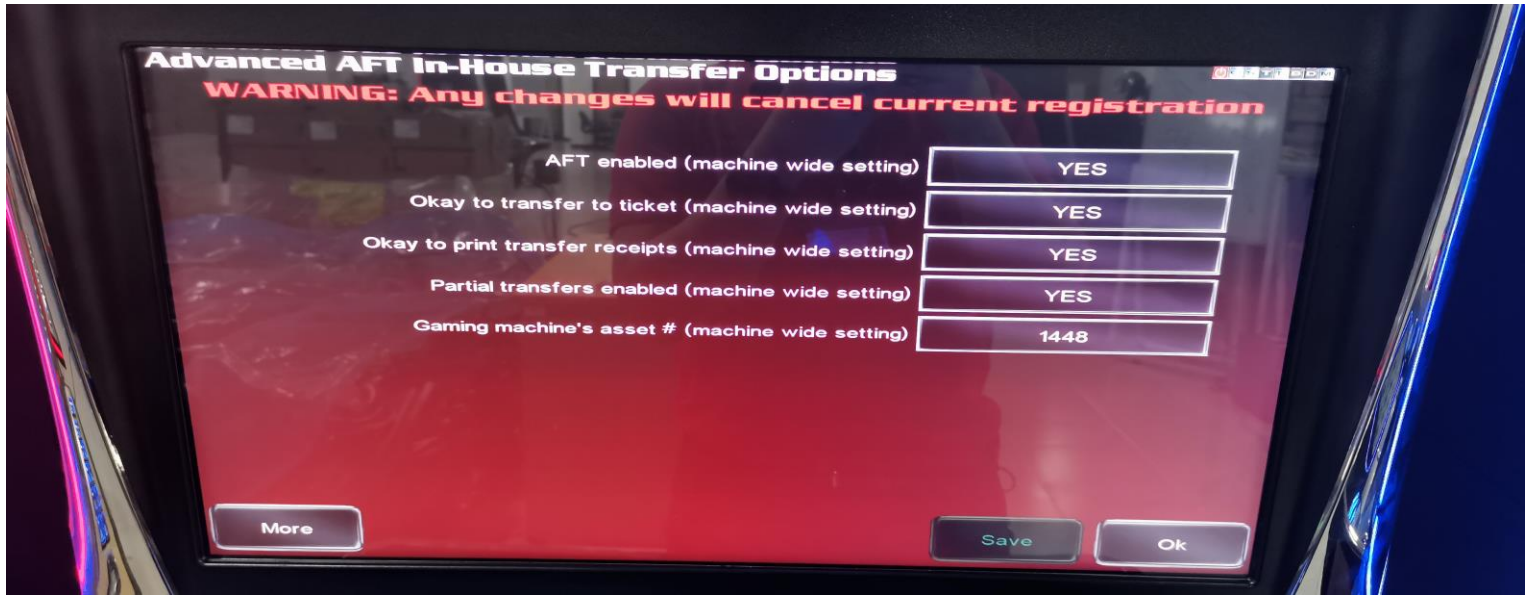

Advanced **AFT in-House Transfer** Options

- Press or tap Advanced
- Then Set as follows
- Then press or tap Save and Ok



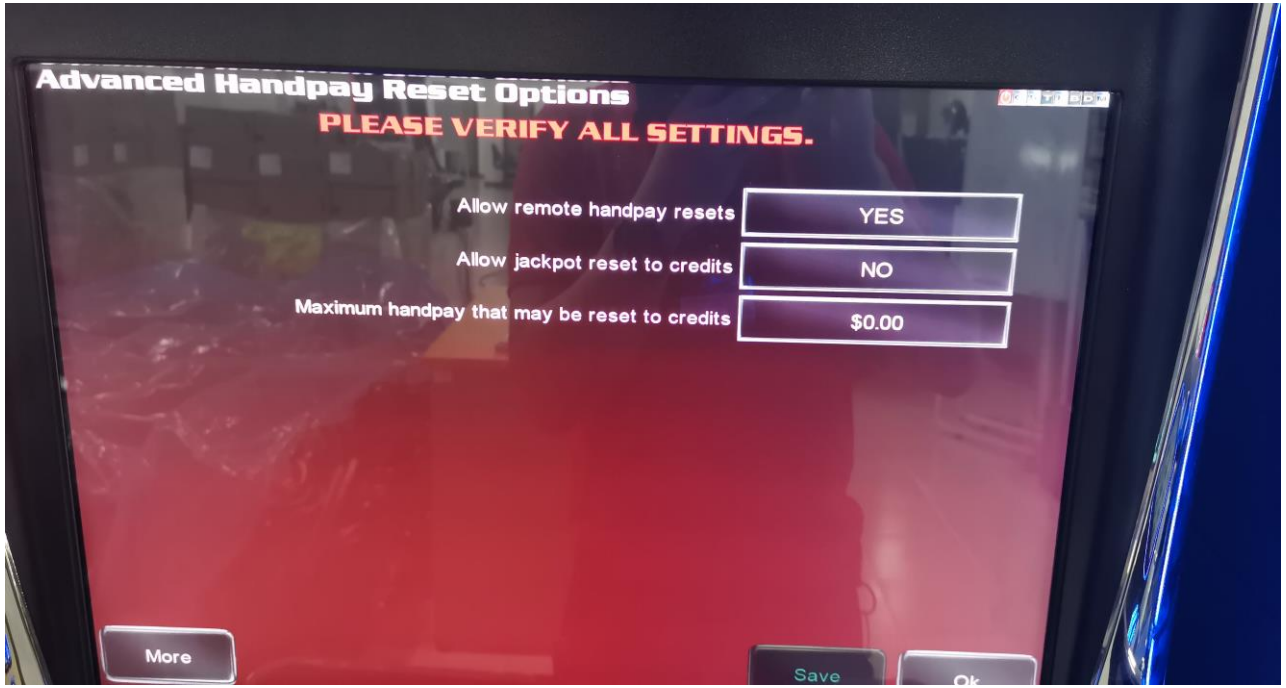


Advanced **Handpay Reset** Options


- Press or tap Advanced
- Then Set as follows
- Then press or tap Save and Ok

Advanced **Handpay Reset** Options

- After Advanced Options has been configured Press More button

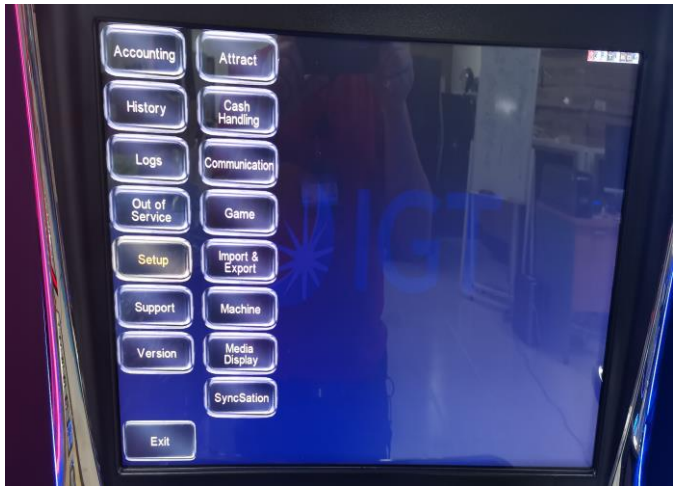



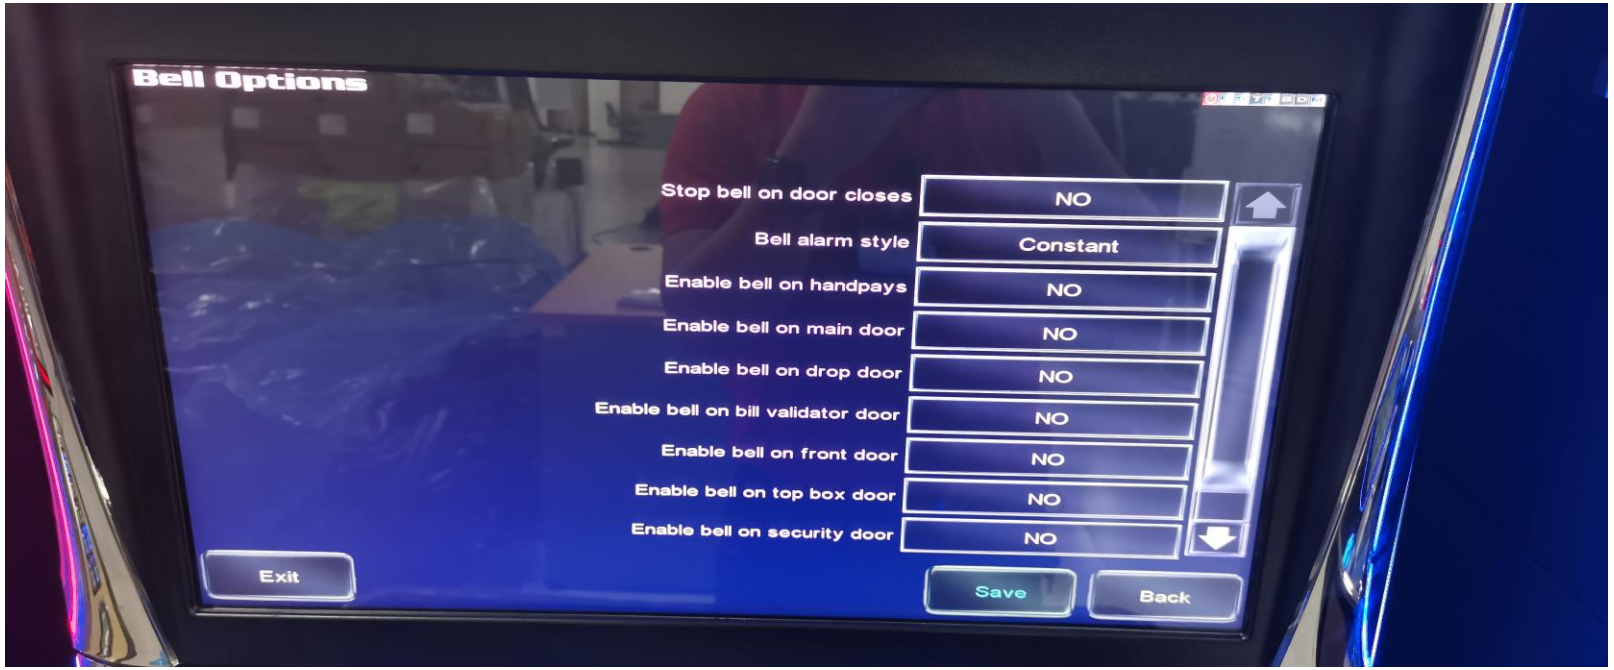

On this menu, click Setup > Machine > **Bell**