RAM Clear PALA5 (Icard):

For iCard(PALA5) ram clear it will clear the memory buffer on the card, the bootloader and iCard firmware will not be cleared by the iCard ram clear action.
In general, iCard ram cleared will not be necessary if the card functions normally.
If you need to perform iCard ram clear to the PALA5 card, you can do that in 2 ways.

- **Via the OneLink WapConfig application.**
    - If the card is communicating normally with the OLS system, you can open the WapConfig application.
    - Go to "Devices", select "Machines", then select which machine(iCard) you want to clear, then select "Ram Clear iCard".
    - You may need to enter the secondary login like to proceed "Commit Changes", this will depend on the setting site by site.
    - After that the iCard will be cleared(memory buffer) and reboot, after that the card should come back as normal.
    - The machine connected with this iCard will lose connection temporarily due to the iCard reboot itself.
- **Also you can ram clear the PALA5(iCard) physically.**
    - To ram clear the iCard physically, please disconnect it from the power source and EGM connection.
    - Place a jumper on Pins 9 & 10 of the pins labelled "JTAG" on the PALA5 card.
    - Power up the PALA5 card.
    - Wait for the LED's on the board to begin flashing.
    - Disconnect the icard from power.
    - Remove the jumper on pins 9 & 10.
    - Connect the card back to the machine and power it back up.
- When the iCard fails to communicate to the system, the physical ram clear is the only way to clear the iCard.

- Việc xóa RAM trên iCard (PALA5) sẽ xóa bộ đệm bộ nhớ (memory buffer) của thẻ; thao tác này không làm ảnh hưởng đến bootloader hay firmware của iCard.
- Thông thường, bạn không cần phải xóa RAM trên iCard nếu thẻ vẫn hoạt động bình thường.
- Nếu cần thực hiện xóa RAM cho thẻ PALA5, bạn có thể chọn một trong hai cách sau:

Thông qua ứng dụng OneLink WapConfig:

- o Nếu thẻ vẫn giao tiếp bình thường với hệ thống OLS, hãy mở ứng dụng WapConfig.
- o Truy cập mục "Devices" (Thiết bị), chọn "Machines" (Máy), sau đó chọn thiết bị (iCard) mà bạn muốn xóa RAM, rồi chọn "Ram Clear iCard".
- o Bạn có thể cần thực hiện đăng nhập lần hai (secondary login) để xác nhận thay đổi ("Commit Changes"); yêu cầu này tùy thuộc vào thiết lập tại từng địa điểm cụ thể.
- o Sau đó, bộ đệm bộ nhớ của iCard sẽ được xóa và thẻ sẽ tự khởi động lại; sau khi khởi động lại, thẻ sẽ trở về trạng thái hoạt động bình thường.
- o Thiết bị kết nối với iCard này sẽ tạm thời mất kết nối do iCard thực hiện khởi động lại.

Thực hiện xóa RAM trên thẻ PALA5 (iCard) theo cách thủ công (trực tiếp trên phần cứng):

- o Để xóa RAM thủ công, hãy ngắt kết nối iCard khỏi nguồn điện và thiết bị EGM.

- o Gắn một đầu nối (jumper) vào các chân số 9 và 10 tại vị trí được đánh dấu "JTAG" trên thẻ PALA5.
- o Cấp nguồn cho thẻ PALA5.
- o Đợi cho đến khi các đèn LED trên bo mạch bắt đầu nhấp nháy.
- o Ngắt nguồn điện khỏi iCard.
- o Tháo đầu nối (jumper) khỏi các chân 9 và 10.
- o Kết nối lại thẻ vào thiết bị và cấp nguồn cho thẻ.
- • Trong trường hợp iCard không thể giao tiếp với hệ thống, xóa RAM thủ công là cách duy nhất để xóa dữ liệu trên iCard.

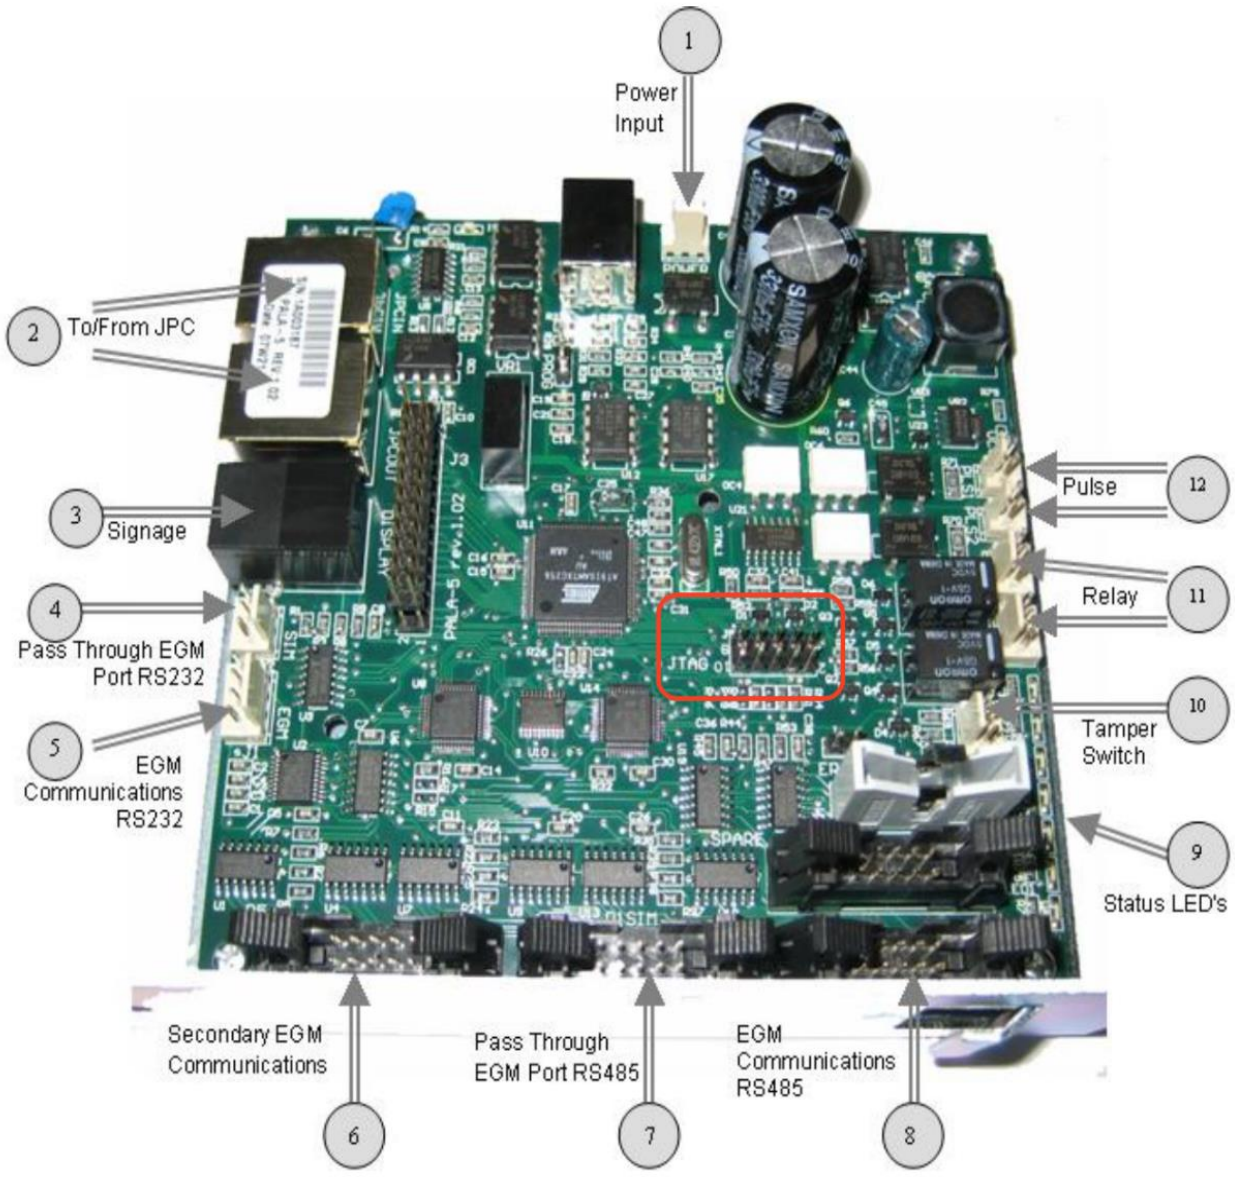


Figure 12 – PALA5 Serial Interface Cards