


# KUKA

Robots

KUKA Deutschland GmbH

## KR QUANTEC extra HA

### Specification

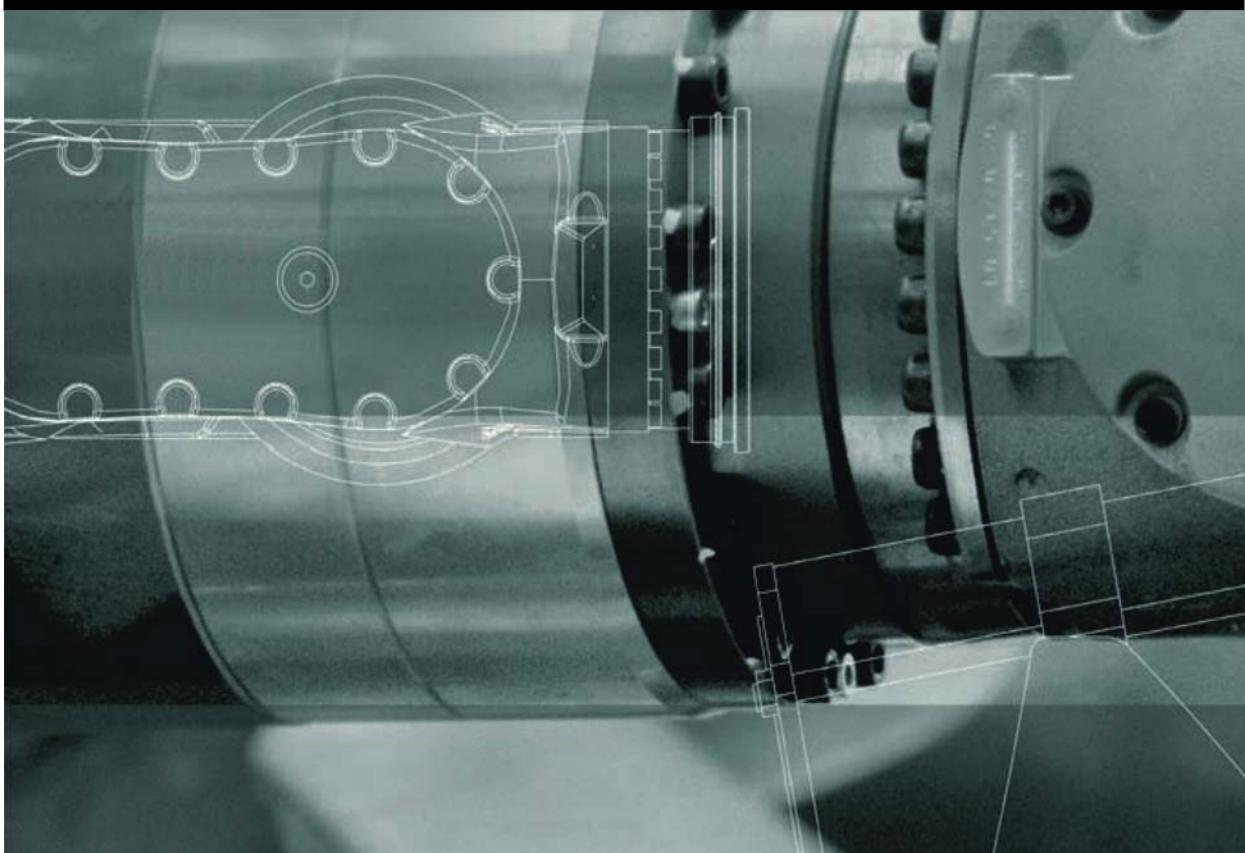

Issued: 17.05.2018

Version: Spez KR QUANTEC extra HA V6



© Copyright 2018

KUKA Deutschland GmbH  
Zugspitzstraße 140  
D-86165 Augsburg  
Germany

This documentation or excerpts therefrom may not be reproduced or disclosed to third parties without the express permission of KUKA Deutschland GmbH.

Other functions not described in this documentation may be operable in the controller. The user has no claims to these functions, however, in the case of a replacement or service work.

We have checked the content of this documentation for conformity with the hardware and software described. Nevertheless, discrepancies cannot be precluded, for which reason we are not able to guarantee total conformity. The information in this documentation is checked on a regular basis, however, and necessary corrections will be incorporated in the subsequent edition.

Subject to technical alterations without an effect on the function.

KIM-PS5-DOC

Translation of the original documentation

Publication:	Pub Spez KR QUANTEC extra HA (PDF) en
Book structure:	Spez KR QUANTEC extra HA V5.1
Version:	Spez KR QUANTEC extra HA V6

## Contents

<b>1</b>	<b>Introduction</b>	5
1.1	Industrial robot documentation	5
1.2	Representation of warnings and notes	5
<b>2</b>	<b>Purpose</b>	7
2.1	Target group	7
2.2	Intended use	7
<b>3</b>	<b>Product description</b>	9
3.1	Overview of the robot system	9
3.2	Description of the manipulator	9
<b>4</b>	<b>Technical data</b>	13
4.1	Technical data, overview	13
4.2	Technical data, KR 120 R2700 extra HA	13
4.2.1	Basic data, KR 120 R2700 extra HA	13
4.2.2	Axis data, KR 120 R2700 extra HA	15
4.2.3	Payloads, KR 120 R2700 extra HA	16
4.2.4	Loads acting on the foundation, KR 120 R2700 extra HA	19
4.3	Technical data, KR 90 R3100 extra HA	20
4.3.1	Basic data, KR 90 R3100 extra HA	20
4.3.2	Axis data, KR 90 R3100 extra HA	21
4.3.3	Payloads, KR 90 R3100 extra HA	23
4.3.4	Loads acting on the foundation, KR 90 R3100 extra HA	26
4.4	Technical data, KR 90 R2900 extra HA	27
4.4.1	Basic data, KR 90 R2900 extra HA	27
4.4.2	Axis data, KR 90 R2900 extra HA	28
4.4.3	Payloads, KR 90 R2900 extra HA	30
4.4.4	Loads acting on the foundation, KR 90 R2900 extra HA	33
4.5	Supplementary load	34
4.6	Plates and labels	35
4.7	REACH duty to communicate information acc. to Art. 33 of Regulation (EC) 1907/2006	38
4.8	Stopping distances and times	38
4.8.1	General information	38
4.8.2	Terms used	39
4.8.3	Stopping distances and times, KR 120 R2700 extra HA	40
4.8.3.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 3	40
4.8.3.2	Stopping distances and stopping times for STOP 1, axis 1	41
4.8.3.3	Stopping distances and stopping times for STOP 1, axis 2	43
4.8.3.4	Stopping distances and stopping times for STOP 1, axis 3	45
4.8.4	Stopping distances and times, KR 90 R2900 extra HA	45
4.8.4.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 3	45
4.8.4.2	Stopping distances and stopping times for STOP 1, axis 1	46
4.8.4.3	Stopping distances and stopping times for STOP 1, axis 2	48
4.8.4.4	Stopping distances and stopping times for STOP 1, axis 3	50
4.8.5	Stopping distances and times, KR 90 R3100 extra HA	50
4.8.5.1	Stopping distances and stopping times for STOP 0, axis 1 to axis 3	50
4.8.5.2	Stopping distances and stopping times for STOP 1, axis 1	51

4.8.5.3	Stopping distances and stopping times for STOP 1, axis 2 .....	53
4.8.5.4	Stopping distances and stopping times for STOP 1, axis 3 .....	55
<b>5</b>	<b>Safety .....</b>	<b>57</b>
5.1	General .....	57
5.1.1	Liability .....	57
5.1.2	Intended use of the industrial robot .....	58
5.1.3	EC declaration of conformity and declaration of incorporation .....	58
5.1.4	Terms used .....	59
5.2	Personnel .....	60
5.3	Workspace, safety zone and danger zone .....	61
5.4	Overview of protective equipment .....	61
5.4.1	Mechanical end stops .....	61
5.4.2	Mechanical axis limitation (optional) .....	61
5.4.3	Options for moving the manipulator without drive energy .....	62
5.4.4	Labeling on the industrial robot .....	62
5.5	Safety measures .....	63
5.5.1	General safety measures .....	63
5.5.2	Transportation .....	64
5.5.3	Start-up and recommissioning .....	64
5.5.4	Manual mode .....	65
5.5.5	Automatic mode .....	66
5.5.6	Maintenance and repair .....	66
5.5.7	Decommissioning, storage and disposal .....	68
5.6	Applied norms and regulations .....	68
<b>6</b>	<b>Planning .....</b>	<b>71</b>
6.1	Information for planning .....	71
6.2	Mounting base with centering .....	71
6.3	Machine frame mounting .....	74
6.4	Connecting cables and interfaces .....	75
<b>7</b>	<b>Transportation .....</b>	<b>77</b>
7.1	Transporting the robot arm .....	77
<b>8</b>	<b>Options .....</b>	<b>81</b>
8.1	Mounting flange, adapter (optional) .....	81
8.2	Control cable for single axis (optional) .....	82
8.3	Release device (optional) .....	82
<b>9</b>	<b>KUKA Service .....</b>	<b>83</b>
9.1	Requesting support .....	83
9.2	KUKA Customer Support .....	83
	<b>Index .....</b>	<b>91</b>

# 1 Introduction

## 1.1 Industrial robot documentation

The industrial robot documentation consists of the following parts:

- Documentation for the manipulator
- Documentation for the robot controller
- Operating and programming instructions for the System Software
- Instructions for options and accessories
- Parts catalog on storage medium

Each of these sets of instructions is a separate document.

## 1.2 Representation of warnings and notes

### Safety

These warnings are relevant to safety and **must** be observed.



These warnings mean that it is certain or highly probable that death or severe injuries **will** occur, if no precautions are taken.



These warnings mean that death or severe injuries **may** occur, if no precautions are taken.



These warnings mean that minor injuries **may** occur, if no precautions are taken.



These warnings mean that damage to property **may** occur, if no precautions are taken.



These warnings contain references to safety-relevant information or general safety measures.

These warnings do not refer to individual hazards or individual precautionary measures.

This warning draws attention to procedures which serve to prevent or remedy emergencies or malfunctions:



The following procedure must be followed exactly!

Procedures marked with this warning **must** be followed exactly.

### Notices

These notices serve to make your work easier or contain references to further information.



Tip to make your work easier or reference to further information.



## 2 Purpose

### 2.1 Target group

This documentation is aimed at users with the following knowledge and skills:

- Advanced knowledge of mechanical engineering
- Advanced knowledge of electrical and electronic systems
- Knowledge of the robot controller system



For optimal use of our products, we recommend that our customers take part in a course of training at KUKA College. Information about the training program can be found at [www.kuka.com](http://www.kuka.com) or can be obtained directly from our subsidiaries.

### 2.2 Intended use

#### Use

The industrial robot is intended for handling tools and fixtures or for processing and transferring components or products. Use is only permitted under the specified environmental conditions.

#### Misuse

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. This includes e.g.:

- Use as a climbing aid
- Operation outside the specified operating parameters
- Operation without the required safety equipment

**NOTICE**

Changing the structure of the robot, e.g. by drilling holes, can result in damage to the components. This is considered improper use and leads to loss of guarantee and liability entitlements.

**NOTICE**

Deviations from the operating conditions specified in the technical data or the use of special functions or applications can lead to premature wear. KUKA Deutschland GmbH must be consulted.



The robot system is an integral part of a complete system and may only be operated in a CE-compliant system.



## 3 Product description


### 3.1 Overview of the robot system

A robot system ([>>> Fig. 3-1](#)) comprises all the assemblies of an industrial robot, including the manipulator (mechanical system and electrical installations), control cabinet, connecting cables, end effector (tool) and other equipment. The KR QUANTEC extra HA product family comprises the types:

- KR 120 R2700 extra HA
- KR 90 R2900 extra HA
- KR 90 R3100 extra HA

An industrial robot of this type comprises the following components:

- Manipulator
- Robot controller
- Connecting cables
- KCP teach pendant (KUKA smartPAD)
- Software
- Options, accessories

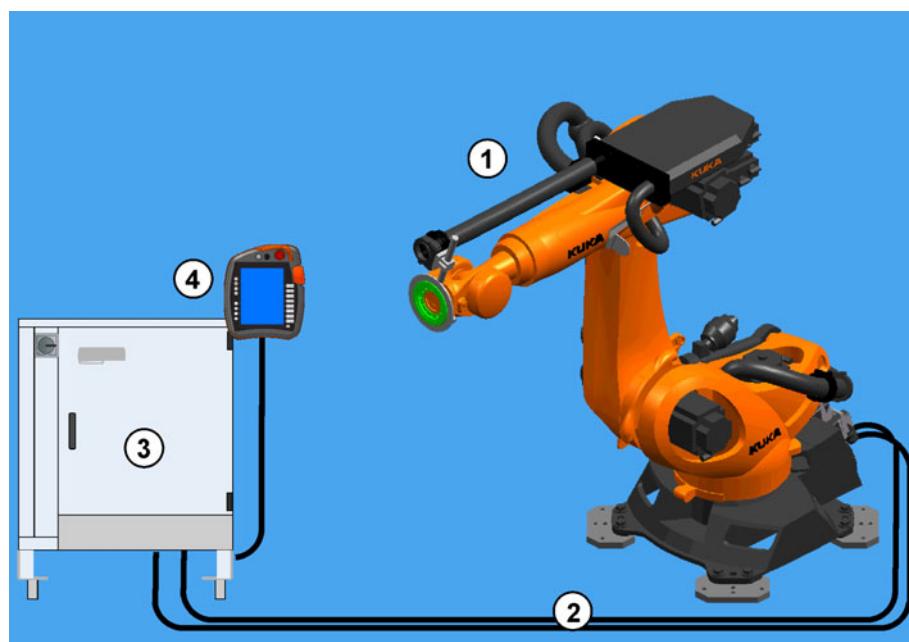

**Fig. 3-1: Example of a robot system**

- |   |                   |   |                                |
|---|-------------------|---|--------------------------------|
| 1 | Manipulator       | 3 | Robot controller               |
| 2 | Connecting cables | 4 | KUKA smartPAD<br>teach pendant |


### 3.2 Description of the manipulator

#### Overview

The manipulators (= robot arm and electrical installations) ([>>> Fig. 3-2](#)) of the variants are designed as 6-axis jointed-arm kinematic systems. They consist of the following principal components:

- In-line wrist
- Arm
- Link arm
- Rotating column

- Base frame
- Counterbalancing system
- Electrical installations

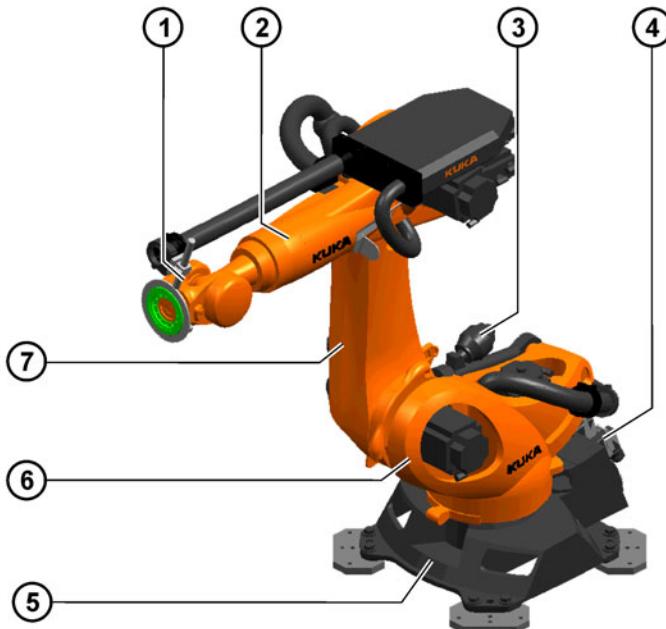

**Fig. 3-2: Main assemblies of the manipulator**

1	In-line wrist	5	Base frame
2	Arm	6	Rotating column
3	Counterbalancing system	7	Link arm
4	Electrical installations		

#### In-line wrist

The robot is fitted with a 3-axis in-line wrist. The in-line wrist contains axes 4, 5 and 6. The motor of axis 6 is located directly on the wrist, inside the arm. It drives the wrist directly, while for axes 4 and 5 the drive comes from the rear of the arm via connecting shafts. For attaching end effectors (tools), the in-line wrist has a mounting flange. The mounting flange conforms, with minimal deviations, to DIN/ISO9409-1-A and meets the requirements of IP65.

#### Arm

The arm is the link between the in-line wrist and the link arm. It houses the motors of wrist axes 4 and 5. The arm is driven by the motor of axis 3. The maximum permissible swivel angle is mechanically limited by a stop for each direction, plus and minus. The associated buffers are attached to the arm. There is an interface on the arm with 4 holes for fastening supplementary loads.

#### Link arm

The link arm is the assembly located between the arm and the rotating column. It consists of the link arm body with the buffers for axis 2. In combination with the arm, there are two different lengths of link arm available to obtain the specified reach. There is an interface on the link arm with 4 holes for fastening supplementary loads.

#### Rotating column

The rotating column houses the motors of axes 1 and 2. The rotational motion of axis 1 is performed by the rotating column. This is screwed to the base frame via the gear unit of axis 1 and is driven by a motor in the rotating column. The link arm is also mounted in the rotating column.

#### Base frame

The base frame is the base of the robot. It is screwed to the mounting base. The flexible tube for the electrical installations is fastened in the base frame.

Also located on the base frame is the interface for the motor and data cable and the energy supply system.

**Counterbalancing system**

The counterbalancing system is installed between the rotating column and the link arm and serves to minimize the moments generated about axis 2 when the robot is in motion and at rest. A closed, hydropneumatic system is used. The system consists of two accumulators, a hydraulic cylinder with associated hoses, a pressure gauge and a bursting disc as a safety element to protect against overload. The accumulators are classified below category I, fluid group 2, of the Pressure Equipment Directive.

**Electrical installations**

The electrical installations include all the motor and data cables for the motors of axes 1 to 6. All connections are implemented as connectors in order to enable the motors to be exchanged quickly and reliably. The electrical installations also include the RDC box and the multi-function housing (MFH). The RDC box is located in the rotating column. The MFH and the connector for the data cables are mounted on the robot base frame. The connecting cables from the robot controller are connected here by means of connectors. The electrical installations also include a protective circuit.

**Options**

The robot can be fitted and operated with various options, such as energy supply systems for axes 1 to 3, energy supply systems for axes 3 to 6, range limitation systems for A1 and A3, a mounting flange (adapter) or a control cable for single axis ([>>> 8 "Options" Page 81](#)). The options are described in separate documentation.



## 4 Technical data

### 4.1 Technical data, overview

The technical data for the individual robot types can be found in the following sections:

Robots	Technical data
KR 120 R2700 extra HA	<ul style="list-style-type: none"> <li>■ Technical data (&gt;&gt;&gt; 4.2 "Technical data, KR 120 R2700 extra HA" Page 13)</li> <li>■ Supplementary loads (&gt;&gt;&gt; 4.5 "Supplementary load" Page 34)</li> <li>■ Plates and labels (&gt;&gt;&gt; 4.6 "Plates and labels" Page 35)</li> <li>■ Stopping distances and times (&gt;&gt;&gt; 4.8.3 "Stopping distances and times, KR 120 R2700 extra HA" Page 40)</li> </ul>
KR 90 R3100 extra HA	<ul style="list-style-type: none"> <li>■ Technical data (&gt;&gt;&gt; 4.3 "Technical data, KR 90 R3100 extra HA" Page 20)</li> <li>■ Supplementary loads (&gt;&gt;&gt; 4.5 "Supplementary load" Page 34)</li> <li>■ Plates and labels (&gt;&gt;&gt; 4.6 "Plates and labels" Page 35)</li> <li>■ Stopping distances and times (&gt;&gt;&gt; 4.8.5 "Stopping distances and times, KR 90 R3100 extra HA" Page 50)</li> </ul>
KR 90 R2900 extra HA	<ul style="list-style-type: none"> <li>■ Technical data (&gt;&gt;&gt; 4.4 "Technical data, KR 90 R2900 extra HA" Page 27)</li> <li>■ Supplementary loads (&gt;&gt;&gt; 4.5 "Supplementary load" Page 34)</li> <li>■ Plates and labels (&gt;&gt;&gt; 4.6 "Plates and labels" Page 35)</li> <li>■ Stopping distances and times (&gt;&gt;&gt; 4.8.4 "Stopping distances and times, KR 90 R2900 extra HA" Page 45)</li> </ul>

### 4.2 Technical data, KR 120 R2700 extra HA

#### 4.2.1 Basic data, KR 120 R2700 extra HA

##### Basic data

	<b>KR 120 R2700 extra HA</b>
Number of axes	6
Number of controlled axes	6
Volume of working envelope	55 m <sup>3</sup>
Pose repeatability (ISO 9283)	± 0.04 mm
Weight	approx. 1104 kg
Rated payload	120 kg
Maximum reach	2696 mm
Protection rating (IEC 60529)	IP65

KR 120 R2700 extra HA	
Protection rating, in-line wrist (IEC 60529)	IP65
Sound level	< 75 dB (A)
Mounting position	Floor
Footprint	830 mm x 830 mm
Hole pattern: mounting surface for kinematic system	S934
Permissible angle of inclination	≤ 5 °
Default color	Base frame: black (RAL 9005); Moving parts: KUKA orange 2567
Controller	KR C4
Transformation name	KR C4: KR120R2700 EXTRA HA C4 FLR

Hollow shaft diameter	
A1	139 mm (partially occupied by motor cables)

**Ambient conditions**

Humidity class (EN 60204)	-
Classification of environmental conditions (EN 60721-3-3)	3K3
Ambient temperature	
During operation	10 °C to 55 °C (283 K to 328 K)
During storage/transportation	-40 °C to 60 °C (233 K to 333 K)



For operation at low temperatures, it may be necessary to warm up the robot.

**Connecting cables**

Cable designation	Connector designation robot controller - robot	Interface with robot
Motor cable	X20 - X30	Harting connectors at both ends
Data cable	X21 - X31	Rectangular connector at both ends
Ground conductor / equipotential bonding 16 mm <sup>2</sup> (can be ordered as an option)		M8 ring cable lug at both ends

Cable lengths	
Standard	7 m, 15 m, 25 m, 35 m, 50 m

Minimum bending radius	5x D
------------------------	------

For detailed specifications of the connecting cables, see "Description of the connecting cables".

#### 4.2.2 Axis data, KR 120 R2700 extra HA

##### Axis data

Motion range	
A1	$\pm 185^\circ$
A2	-140 ° / -5 °
A3	-120 ° / 155 °
A4	$\pm 350^\circ$
A5	$\pm 125^\circ$
A6	$\pm 350^\circ$
Speed with rated payload	
A1	105 °/s
A2	101 °/s
A3	107 °/s
A4	292 °/s
A5	258 °/s
A6	284 °/s

The direction of motion and the arrangement of the individual axes may be noted from the diagram ([>>> Fig. 4-1](#) ).

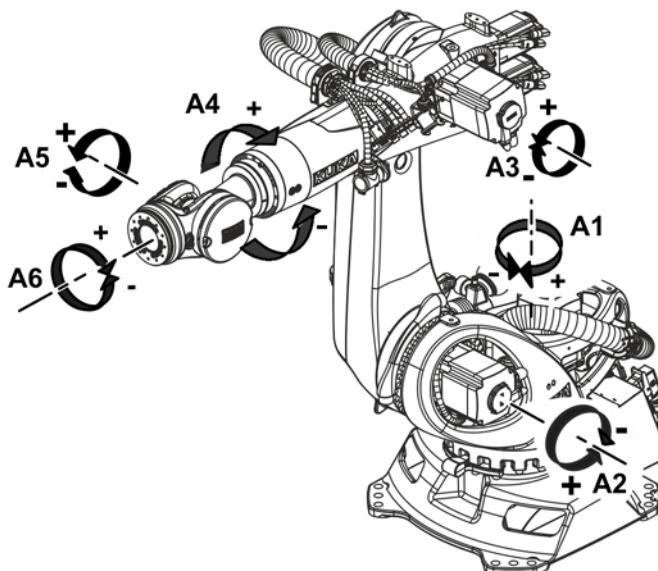


Fig. 4-1: Direction of rotation of the axes

##### Mastering position

Mastering position	
A1	-20 °
A2	-120 °
A3	110 °
A4	0 °
A5	0 °
A6	0 °

##### Working envelope

The following diagrams ([>>> Fig. 4-2](#)) and ([>>> Fig. 4-3](#)) show the load center of gravity, shape and size of the working envelope.

The reference point for the working envelope is the intersection of axis 4 with axis 5.

Dimensions: mm

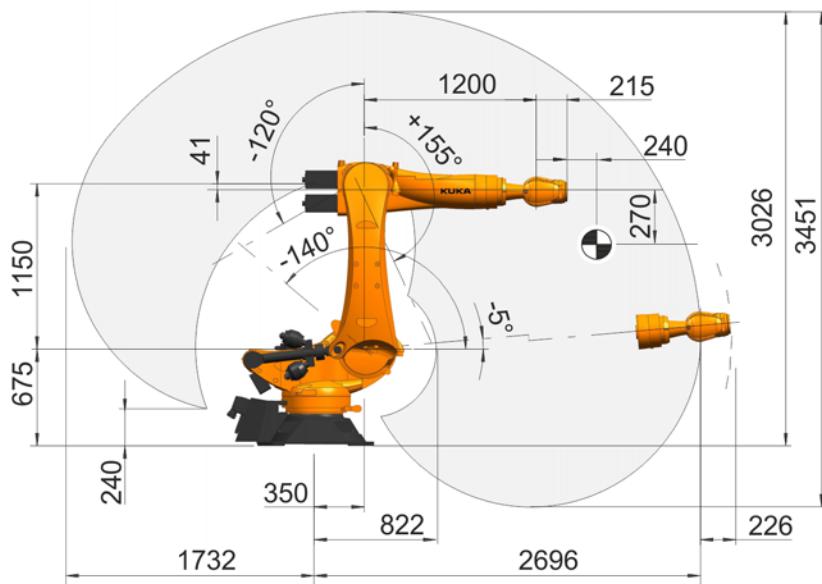


Fig. 4-2: KR 120 R2700 extra HA, working envelope, side view

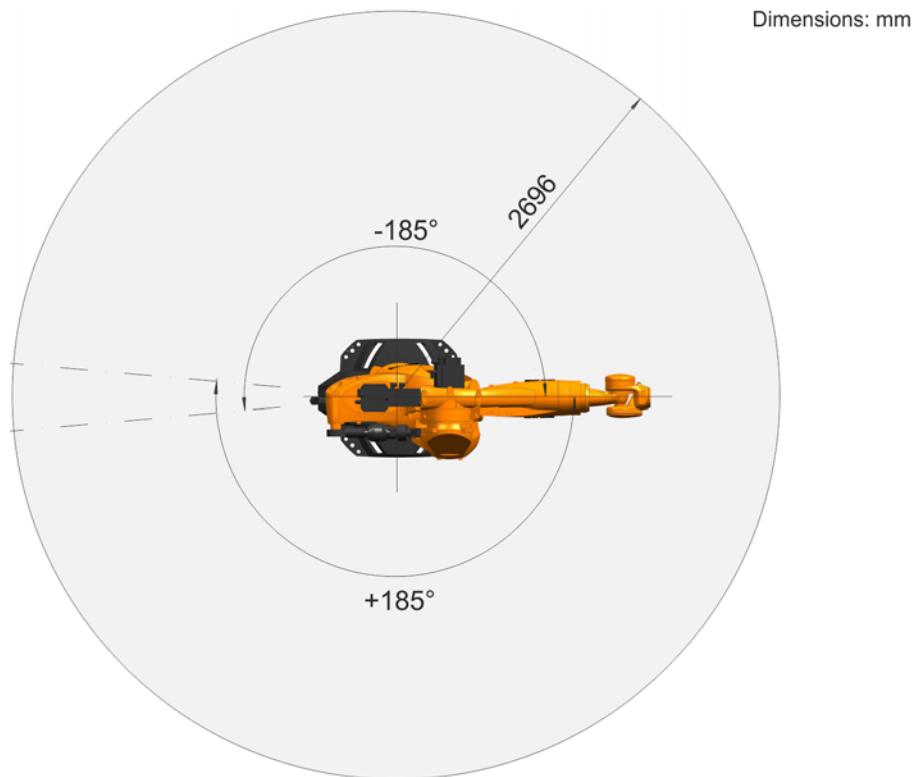


Fig. 4-3: KR 120 R2700 extra HA, working envelope, top view

#### 4.2.3 Payloads, KR 120 R2700 extra HA

##### Payloads

Rated payload	120 kg
Rated mass moment of inertia	60 kgm <sup>2</sup>
Rated total load	170 kg
Rated supplementary load, base frame	0 kg

Maximum supplementary load, base frame	-
Rated supplementary load, rotating column	0 kg
Maximum supplementary load, rotating column	300 kg
Rated supplementary load, link arm	0 kg
Maximum supplementary load, link arm	130 kg
Rated supplementary load, arm	50 kg
Maximum supplementary load, arm	150 kg
Nominal distance to load center of gravity	
L <sub>xy</sub>	270 mm
L <sub>z</sub>	240 mm

**NOTICE**

Exceeding the payloads and supplementary loads will reduce the service life of the robot and overload the motors and the gears. We recommend always testing the specific application with KUKA.Load. In cases where individual values are exceeded, KUKA Deutschland GmbH must be consulted.

**Load center of gravity**

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis 6. Refer to the payload diagram for the nominal distance.

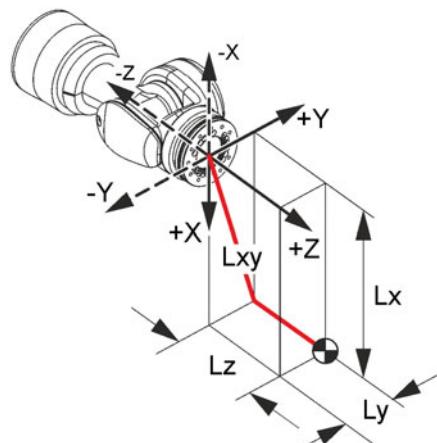
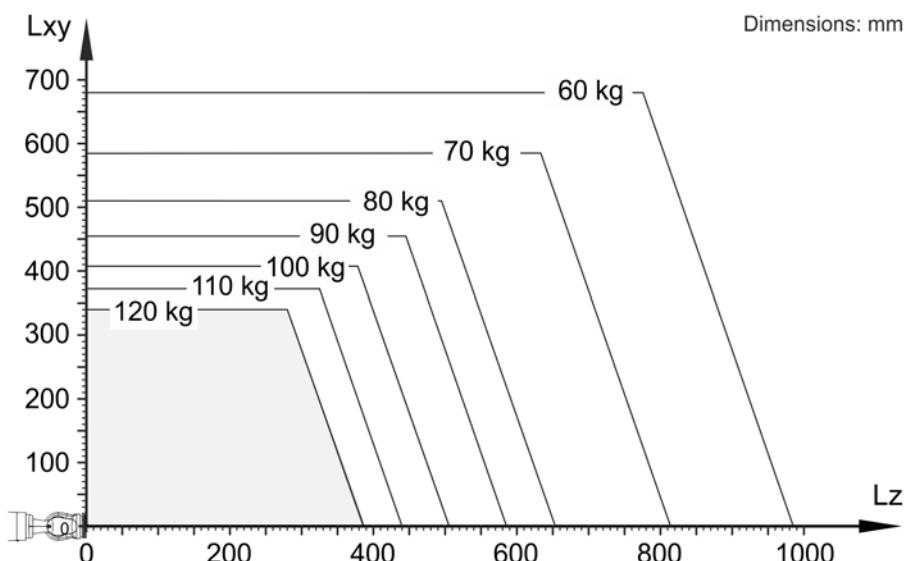


Fig. 4-4: Load center of gravity

**Payload diagram****Fig. 4-5: KR QUANTEC extra payload diagram, payload 120 kg****NOTICE**

This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case KUKA Deutschland GmbH must be consulted beforehand. The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the KUKA System Software. The mass inertia must be verified using KUKA.Load. It is imperative for the load data to be entered in the robot controller!

**In-line wrist**

In-line wrist type	ZH 90/120
Mounting flange	see drawing

**Mounting flange**

Screw grade	10.9
Screw size	M10
Number of fastening screws	11
Clamping length	1.5 x nominal diameter
Depth of engagement	min. 12 mm, max. 16 mm
Locating element	10 H7

The mounting flange is depicted with axis 6 in the zero position ([>>>](#) Fig. 4-6 ) The symbol X<sub>m</sub> indicates the position of the locating element (bushing) in the zero position.

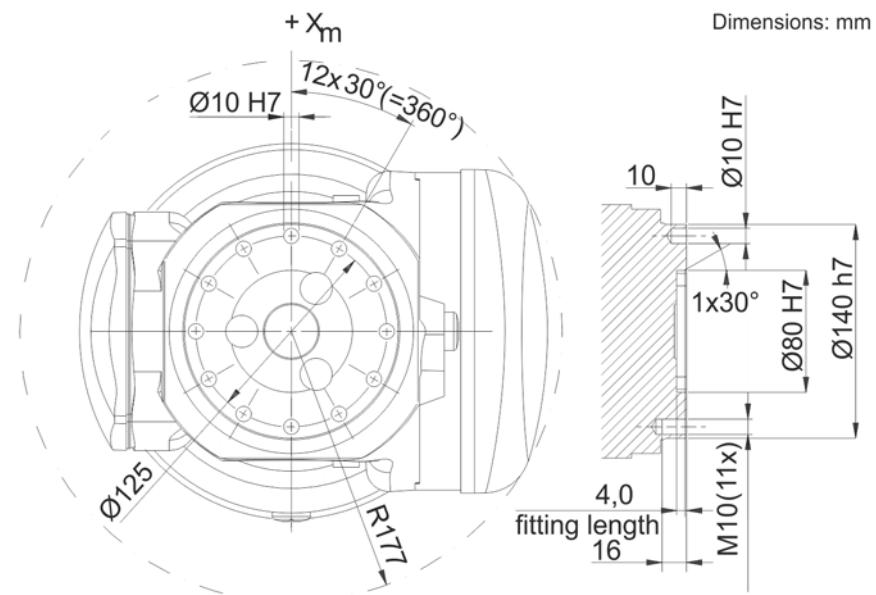


Fig. 4-6: Mounting flange D=125

**NOTICE**

An optional adapter is available for the mounting flange. Further information about this option may be found in the chapter "Options" (>>> 8 "Options" Page 81).

#### 4.2.4 Loads acting on the foundation, KR 120 R2700 extra HA

**Foundation loads** The specified forces and moments already include the payload and the inertia force (weight) of the robot.

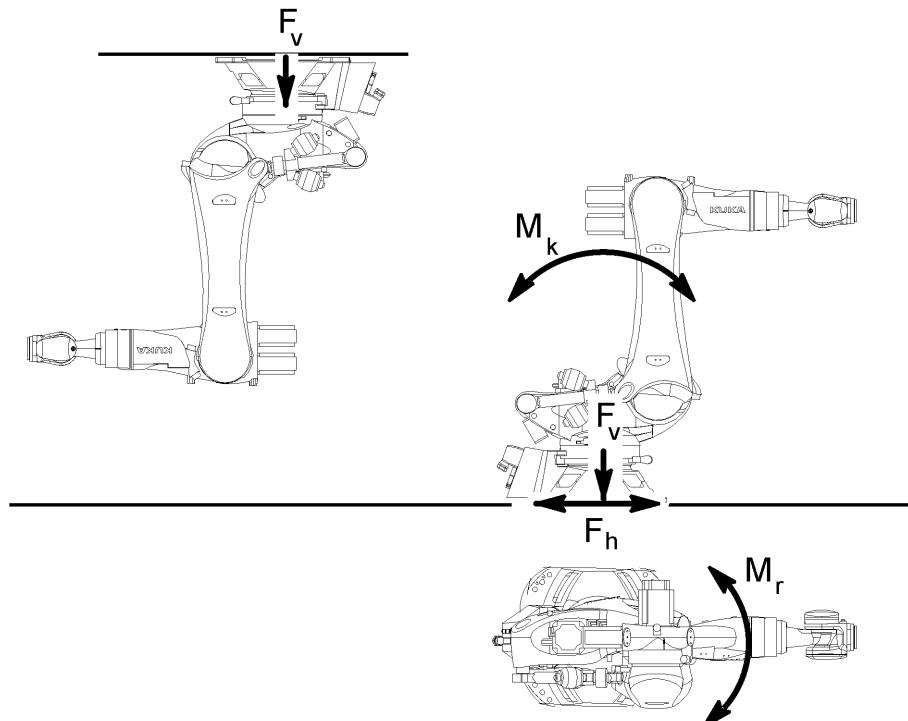


Fig. 4-7: Loads acting on the mounting base

Vertical force $F(v)$
-----------------------

$F(v \text{ normal})$
-----------------------

19100 N
---------

F(v max)	24000 N
Horizontal force F(h)	
F(h normal)	9200 N
F(h max)	16000 N
Tilting moment M(k)	
M(k normal)	24000 Nm
M(k max)	49000 Nm
Torque about axis 1 M(r)	
M(r normal)	10200 Nm
M(r max)	35000 Nm

Vertical force F(v), horizontal force F(h), tilting torque M(k), torque about axis 1 M(r)



**WARNING** Normal loads and maximum loads for the foundations are specified in the table.

The maximum loads must be referred to when dimensioning the foundations and must be adhered to for safety reasons. Failure to observe this can result in personal injury and damage to property.

The normal loads are average expected foundation loads. The actual loads are dependent on the program and on the robot loads and may therefore be greater or less than the normal loads.

The supplementary loads (A1, A2 and A3) are not taken into consideration in the calculation of the foundation load. These supplementary loads must be taken into consideration for F<sub>v</sub>.

## 4.3 Technical data, KR 90 R3100 extra HA

### 4.3.1 Basic data, KR 90 R3100 extra HA

#### Basic data

	KR 90 R3100 extra HA
Number of axes	6
Number of controlled axes	6
Volume of working envelope	84 m <sup>3</sup>
Pose repeatability (ISO 9283)	± 0.04 mm
Weight	approx. 1129 kg
Rated payload	90 kg
Maximum reach	3095 mm
Protection rating (IEC 60529)	IP65
Protection rating, in-line wrist (IEC 60529)	IP65
Sound level	< 75 dB (A)
Mounting position	Floor
Footprint	830 mm x 830 mm
Hole pattern: mounting surface for kinematic system	S934
Permissible angle of inclination	≤ 5 °
Default color	Base frame: black (RAL 9005); Moving parts: KUKA orange 2567
Controller	KR C4
Transformation name	KR C4: KR90R3100 EXTRA HA C4 FLR

Hollow shaft diameter	
A1	139 mm (partially occupied by motor cables)

**Ambient conditions**

Humidity class (EN 60204)	-
Classification of environmental conditions (EN 60721-3-3)	3K3
Ambient temperature	
During operation	10 °C to 55 °C (283 K to 328 K)
During storage/transportation	-40 °C to 60 °C (233 K to 333 K)



For operation at low temperatures, it may be necessary to warm up the robot.

**Connecting cables**

Cable designation	Connector designation robot controller - robot	Interface with robot
Motor cable	X20 - X30	Harting connectors at both ends
Data cable	X21 - X31	Rectangular connector at both ends
Ground conductor / equipotential bonding 16 mm <sup>2</sup> (can be ordered as an option)		M8 ring cable lug at both ends

Cable lengths	
Standard	7 m, 15 m, 25 m, 35 m, 50 m

Minimum bending radius	5x D
------------------------	------


For detailed specifications of the connecting cables, see "Description of the connecting cables".

**4.3.2 Axis data, KR 90 R3100 extra HA****Axis data**

Motion range	
A1	±185 °
A2	-5 ° / -140 °
A3	-120 ° / 155 °
A4	±350 °
A5	±125 °
A6	±350 °
Speed with rated payload	
A1	105 °/s
A2	101 °/s
A3	107 °/s
A4	292 °/s

A5	258 °/s
A6	284 °/s

The direction of motion and the arrangement of the individual axes may be noted from the diagram ([>>> Fig. 4-8](#) ).

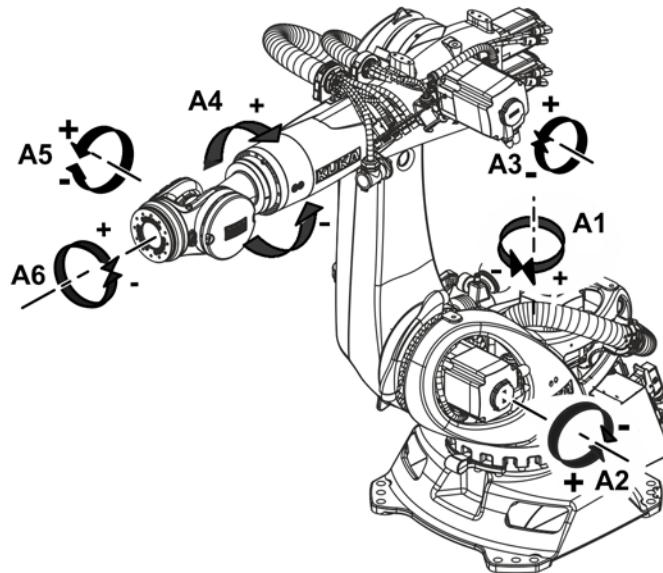

**Fig. 4-8: Direction of rotation of the axes**


**Mastering position**

Mastering position	
A1	-20 °
A2	-120 °
A3	110 °
A4	0 °
A5	0 °
A6	0 °


**Working envelope**

The following diagrams ([>>> Fig. 4-9](#) ) and ([>>> Fig. 4-10](#) ) show the load center of gravity, shape and size of the working envelope.

The reference point for the working envelope is the intersection of axis 4 with axis 5.

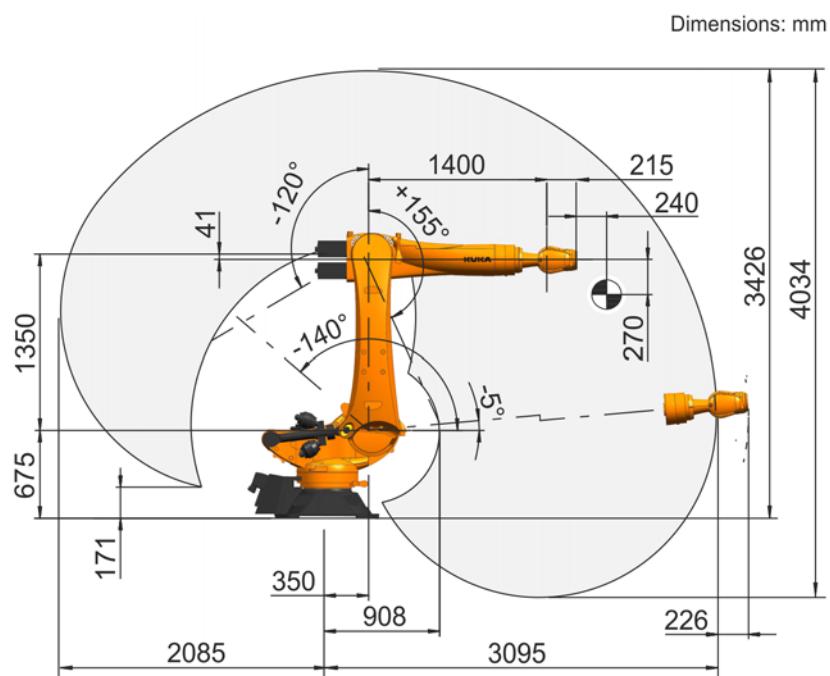

**Fig. 4-9: KR 90 R3100 extra HA, working envelope, side view**

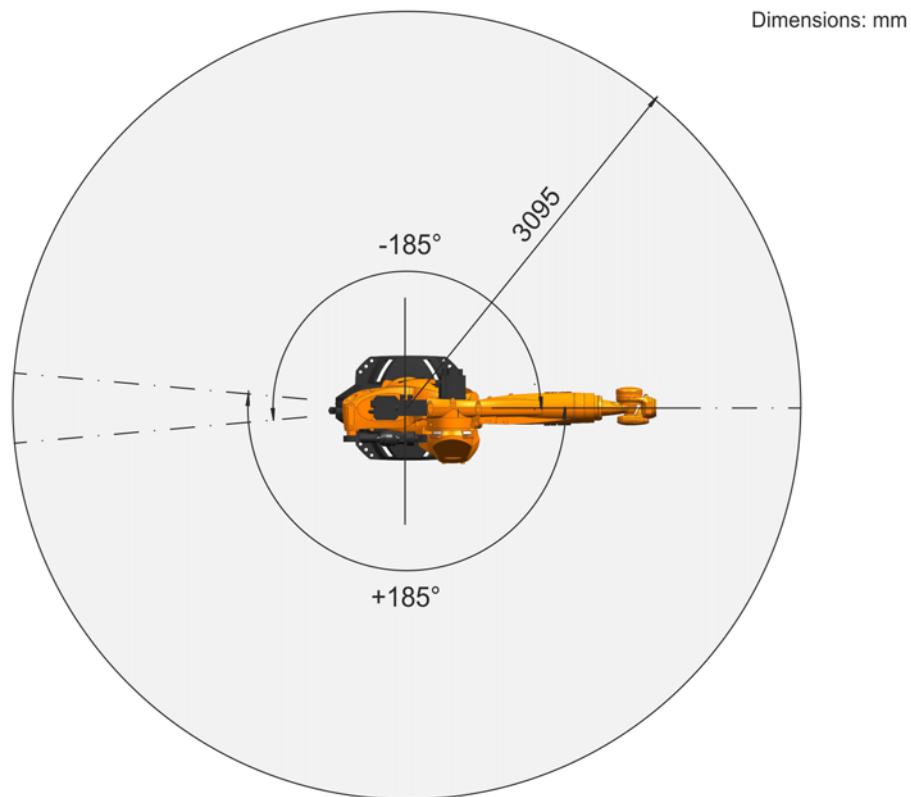

**Fig. 4-10: KR 90 R3100 extra HA, working envelope, top view**

#### 4.3.3 Payloads, KR 90 R3100 extra HA

##### Payloads

Rated payload	90 kg
Rated mass moment of inertia	45 kgm <sup>2</sup>
Rated total load	140 kg

Rated supplementary load, base frame	0 kg
Maximum supplementary load, base frame	-
Rated supplementary load, rotating column	0 kg
Maximum supplementary load, rotating column	300 kg
Rated supplementary load, link arm	0 kg
Maximum supplementary load, link arm	130 kg
Rated supplementary load, arm	50 kg
Maximum supplementary load, arm	150 kg
Nominal distance to load center of gravity	
Lxy	270 mm
Lz	240 mm

**NOTICE**

Exceeding the payloads and supplementary loads will reduce the service life of the robot and overload the motors and the gears. We recommend always testing the specific application with KUKA.Load. In cases where individual values are exceeded, KUKA Deutschland GmbH must be consulted.

**Load center of gravity**

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis 6. Refer to the payload diagram for the nominal distance.

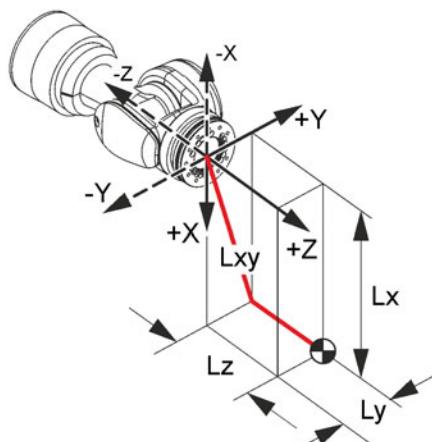
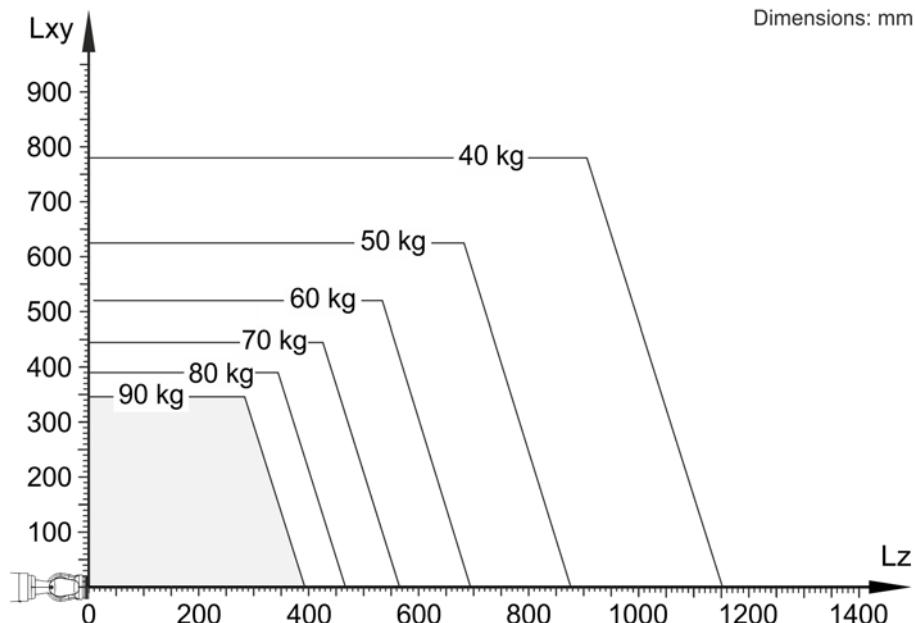


Fig. 4-11: Load center of gravity

**Payload diagram****Fig. 4-12: KR QUANTEC extra payload diagram, payload 90 kg****NOTICE**

This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case KUKA Deutschland GmbH must be consulted beforehand. The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the KUKA System Software. The mass inertia must be verified using KUKA.Load. It is imperative for the load data to be entered in the robot controller!

**In-line wrist**

In-line wrist type	ZH 90/120
Mounting flange	see drawing

**Mounting flange**

Screw grade	10.9
Screw size	M10
Number of fastening screws	11
Clamping length	1.5 x nominal diameter
Depth of engagement	min. 12 mm, max. 16 mm
Locating element	10 H7

The mounting flange is depicted with axis 6 in the zero position ([>>>](#) Fig. 4-13 ) The symbol X<sub>m</sub> indicates the position of the locating element (bushing) in the zero position.

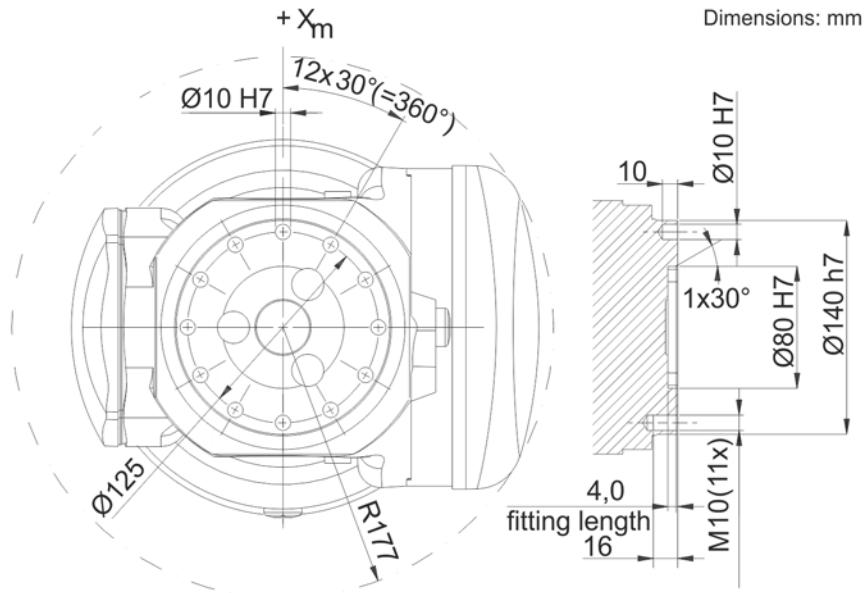


Fig. 4-13: Mounting flange D=125

**NOTICE**

An optional adapter is available for the mounting flange.  
Further information about this option may be found in the chapter "Options" (>>> 8 "Options" Page 81).

#### 4.3.4 Loads acting on the foundation, KR 90 R3100 extra HA

**Foundation loads** The specified forces and moments already include the payload and the inertia force (weight) of the robot.

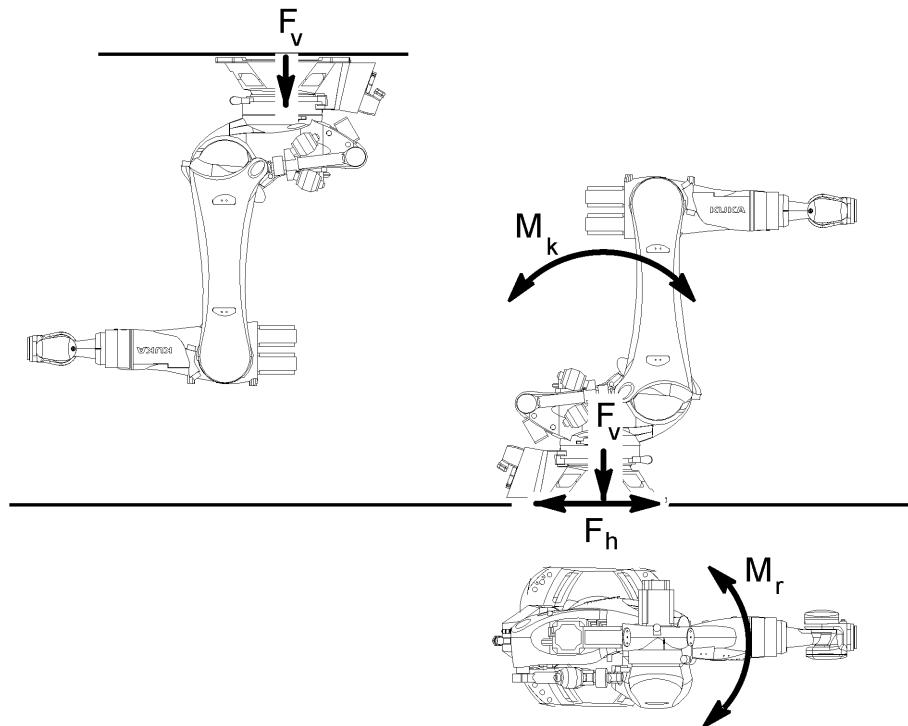


Fig. 4-14: Loads acting on the mounting base

Vertical force F(v)	
F(v normal)	19100 N

F(v max)	24000 N
Horizontal force F(h)	
F(h normal)	9200 N
F(h max)	16000 N
Tilting moment M(k)	
M(k normal)	24000 Nm
M(k max)	49000 Nm
Torque about axis 1 M(r)	
M(r normal)	10200 Nm
M(r max)	35000 Nm

Vertical force F(v), horizontal force F(h), tilting torque M(k), torque about axis 1 M(r)



**WARNING** Normal loads and maximum loads for the foundations are specified in the table.

The maximum loads must be referred to when dimensioning the foundations and must be adhered to for safety reasons. Failure to observe this can result in personal injury and damage to property.

The normal loads are average expected foundation loads. The actual loads are dependent on the program and on the robot loads and may therefore be greater or less than the normal loads.

The supplementary loads (A1, A2 and A3) are not taken into consideration in the calculation of the foundation load. These supplementary loads must be taken into consideration for F<sub>v</sub>.

## 4.4 Technical data, KR 90 R2900 extra HA

### 4.4.1 Basic data, KR 90 R2900 extra HA

#### Basic data

	<b>KR 90 R2900 extra HA</b>
Number of axes	6
Number of controlled axes	6
Volume of working envelope	66 m <sup>3</sup>
Pose repeatability (ISO 9283)	± 0.04 mm
Weight	approx. 1121 kg
Rated payload	90 kg
Maximum reach	2896 mm
Protection rating (IEC 60529)	IP65
Protection rating, in-line wrist (IEC 60529)	IP65
Sound level	< 75 dB (A)
Mounting position	Floor
Footprint	830 mm x 830 mm
Hole pattern: mounting surface for kinematic system	S934
Permissible angle of inclination	≤ 5 °
Default color	Base frame: black (RAL 9005); Moving parts: KUKA orange 2567
Controller	KR C4
Transformation name	KR C4: KR90R2900 EXTRA HA C4 FLR

<b>Hollow shaft diameter</b>	
A1	139 mm (partially occupied by motor cables)

**Ambient conditions**

<b>Humidity class (EN 60204)</b>	-
<b>Classification of environmental conditions (EN 60721-3-3)</b>	3K3
<b>Ambient temperature</b>	
<b>During operation</b>	10 °C to 55 °C (283 K to 328 K)
<b>During storage/transportation</b>	-40 °C to 60 °C (233 K to 333 K)



For operation at low temperatures, it may be necessary to warm up the robot.

**Connecting cables**

<b>Cable designation</b>	<b>Connector designation robot controller - robot</b>	<b>Interface with robot</b>
Motor cable	X20 - X30	Harting connectors at both ends
Data cable	X21 - X31	Rectangular connector at both ends
Ground conductor / equipotential bonding 16 mm <sup>2</sup> (can be ordered as an option)		M8 ring cable lug at both ends

<b>Cable lengths</b>	
Standard	7 m, 15 m, 25 m, 35 m, 50 m

<b>Minimum bending radius</b>	5x D
-------------------------------	------


For detailed specifications of the connecting cables, see "Description of the connecting cables".

**4.4.2 Axis data, KR 90 R2900 extra HA****Axis data**

<b>Motion range</b>	
A1	±185 °
A2	-5 ° / -140 °
A3	-120 ° / 155 °
A4	±350 °
A5	±125 °
A6	±350 °
<b>Speed with rated payload</b>	
A1	105 °/s
A2	101 °/s
A3	107 °/s
A4	292 °/s

A5	258 °/s
A6	284 °/s

The direction of motion and the arrangement of the individual axes may be noted from the diagram ([>>> Fig. 4-15](#) ).

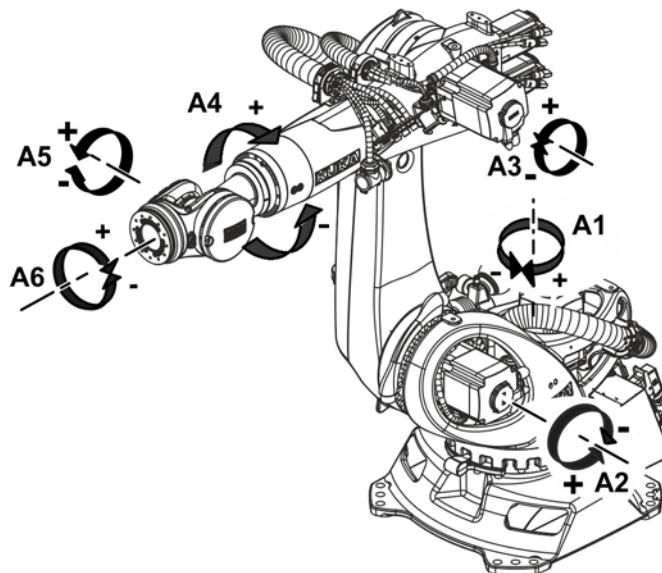

**Fig. 4-15: Direction of rotation of the axes**

**Mastering position**

Mastering position	
A1	-20 °
A2	-120 °
A3	110 °
A4	0 °
A5	0 °
A6	0 °

**Working envelope**

The following diagrams ([>>> Fig. 4-16](#) ) and ([>>> Fig. 4-17](#) ) show the load center of gravity, shape and size of the working envelope.

The reference point for the working envelope is the intersection of axis 4 with axis 5.

Dimensions: mm

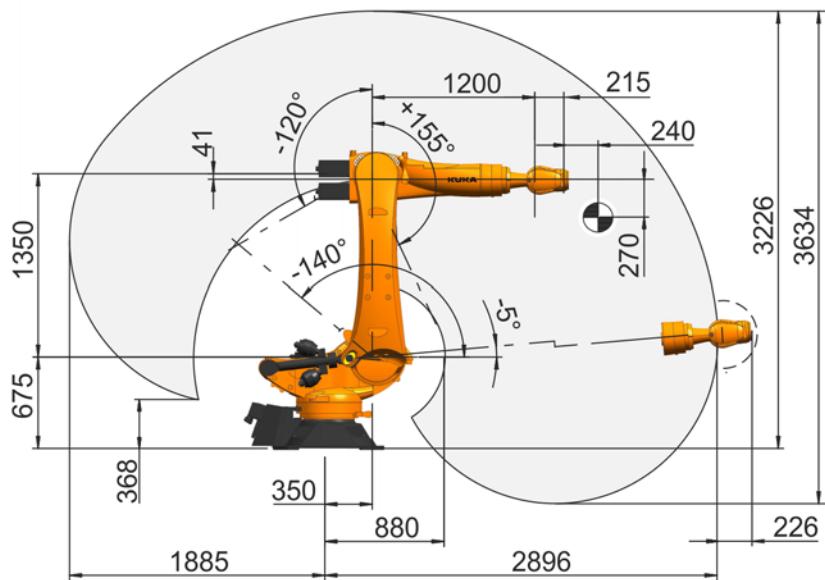


Fig. 4-16: KR 90 R2900 extra HA, working envelope, side view

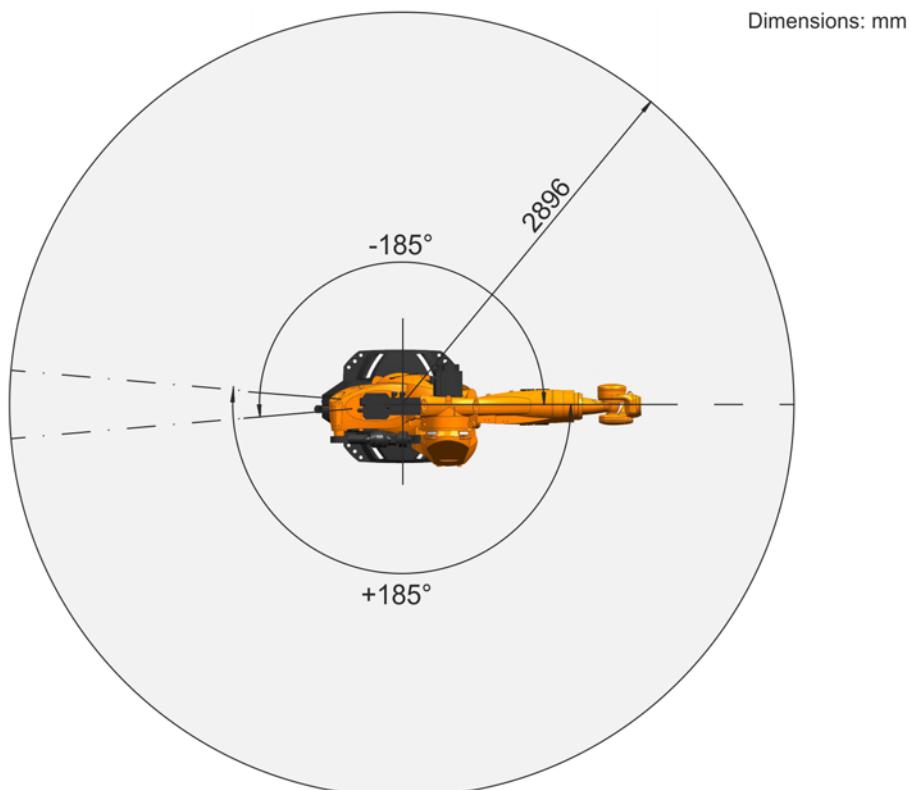


Fig. 4-17: KR 90 R2900 extra HA, working envelope, top view

#### 4.4.3 Payloads, KR 90 R2900 extra HA

##### Payloads

Rated payload	90 kg
Rated mass moment of inertia	45 kgm <sup>2</sup>
Rated total load	140 kg
Rated supplementary load, base frame	0 kg

Maximum supplementary load, base frame	-
Rated supplementary load, rotating column	0 kg
Maximum supplementary load, rotating column	300 kg
Rated supplementary load, link arm	0 kg
Maximum supplementary load, link arm	130 kg
Rated supplementary load, arm	50 kg
Maximum supplementary load, arm	150 kg
Nominal distance to load center of gravity	
L <sub>xy</sub>	270 mm
L <sub>z</sub>	240 mm

**NOTICE**

Exceeding the payloads and supplementary loads will reduce the service life of the robot and overload the motors and the gears. We recommend always testing the specific application with KUKA.Load. In cases where individual values are exceeded, KUKA Deutschland GmbH must be consulted.

**Load center of gravity**

For all payloads, the load center of gravity refers to the distance from the face of the mounting flange on axis 6. Refer to the payload diagram for the nominal distance.

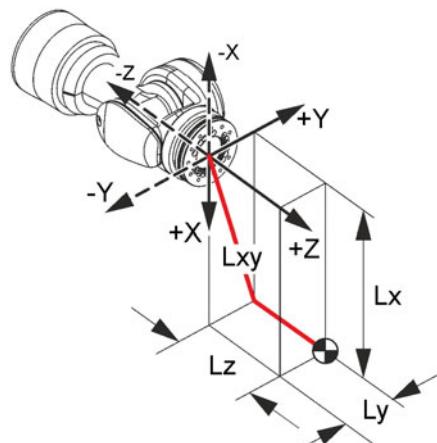
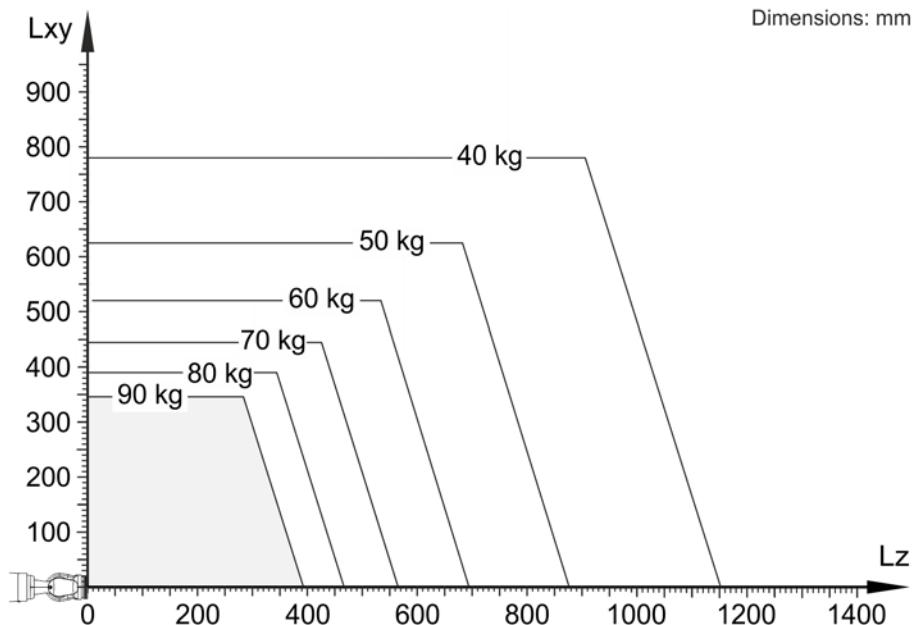


Fig. 4-18: Load center of gravity

**Payload diagram****Fig. 4-19: KR QUANTEC extra payload diagram, payload 90 kg****NOTICE**

This loading curve corresponds to the maximum load capacity. Both values (payload and mass moment of inertia) must be checked in all cases. Exceeding this capacity will reduce the service life of the robot and overload the motors and the gears; in any such case KUKA Deutschland GmbH must be consulted beforehand. The values determined here are necessary for planning the robot application. For commissioning the robot, additional input data are required in accordance with the operating and programming instructions of the KUKA System Software. The mass inertia must be verified using KUKA.Load. It is imperative for the load data to be entered in the robot controller!

**In-line wrist**

In-line wrist type	ZH 90/120
Mounting flange	see drawing

**Mounting flange**

Screw grade	10.9
Screw size	M10
Number of fastening screws	11
Clamping length	1.5 x nominal diameter
Depth of engagement	min. 12 mm, max. 16 mm
Locating element	10 H7

The mounting flange is depicted with axis 6 in the zero position ([>>>](#) Fig. 4-20 ) The symbol X<sub>m</sub> indicates the position of the locating element (bushing) in the zero position.

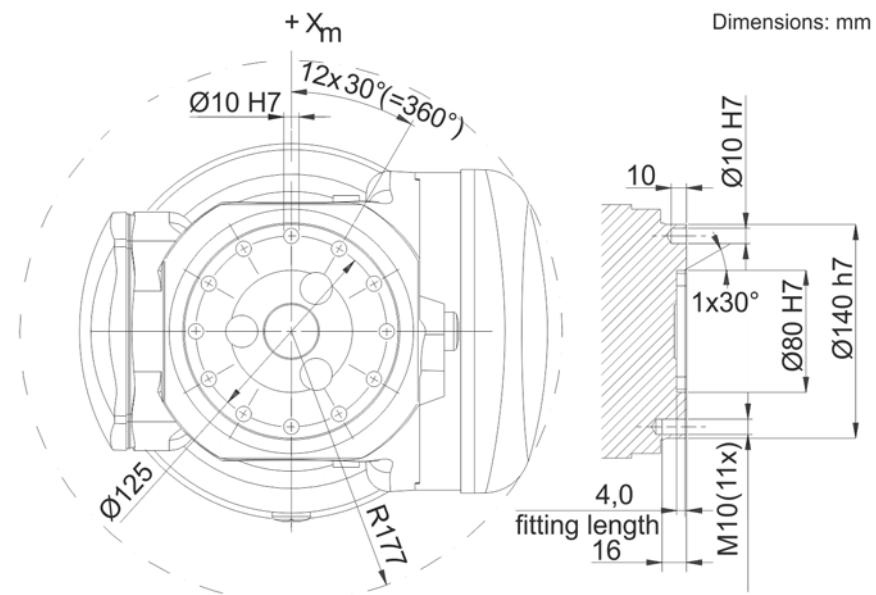


Fig. 4-20: Mounting flange D=125

**NOTICE**

An optional adapter is available for the mounting flange.  
Further information about this option may be found in the chapter "Options" (>>> 8 "Options" Page 81).

#### 4.4.4 Loads acting on the foundation, KR 90 R2900 extra HA

**Foundation loads** The specified forces and moments already include the payload and the inertia force (weight) of the robot.

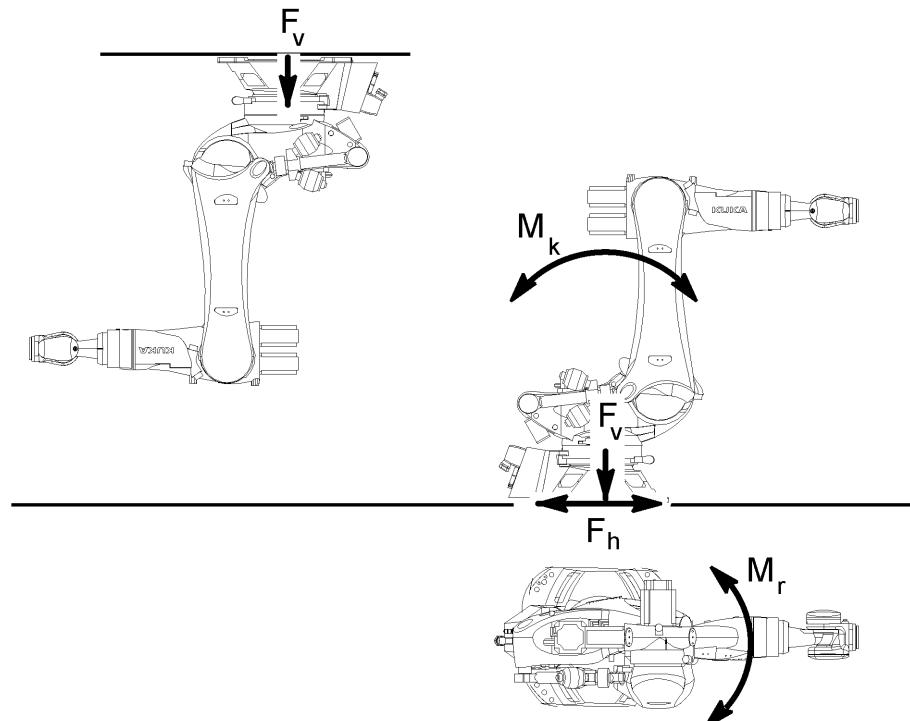


Fig. 4-21: Loads acting on the mounting base

Vertical force F(v)	
F(v normal)	19100 N

F(v max)	24000 N
Horizontal force F(h)	
F(h normal)	9200 N
F(h max)	16000 N
Tilting moment M(k)	
M(k normal)	24000 Nm
M(k max)	49000 Nm
Torque about axis 1 M(r)	
M(r normal)	10200 Nm
M(r max)	35000 Nm

Vertical force F(v), horizontal force F(h), tilting torque M(k), torque about axis 1 M(r)

**⚠ WARNING**

Normal loads and maximum loads for the foundations are specified in the table.

The maximum loads must be referred to when dimensioning the foundations and must be adhered to for safety reasons. Failure to observe this can result in personal injury and damage to property.

The normal loads are average expected foundation loads. The actual loads are dependent on the program and on the robot loads and may therefore be greater or less than the normal loads.

The supplementary loads (A1, A2 and A3) are not taken into consideration in the calculation of the foundation load. These supplementary loads must be taken into consideration for  $F_v$ .

#### 4.5 Supplementary load

##### Description

The robot can carry supplementary loads on the rotating column, link arm and arm. When mounting the supplementary loads, be careful to observe the maximum permissible total load. The dimensions and positions of the installation options can be seen in the following diagram.

Dimensions: mm



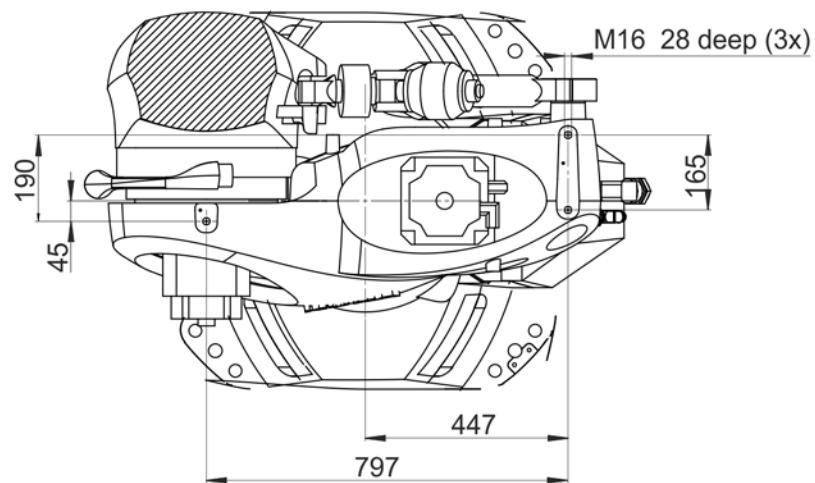


Fig. 4-22: Supplementary load, rotating column

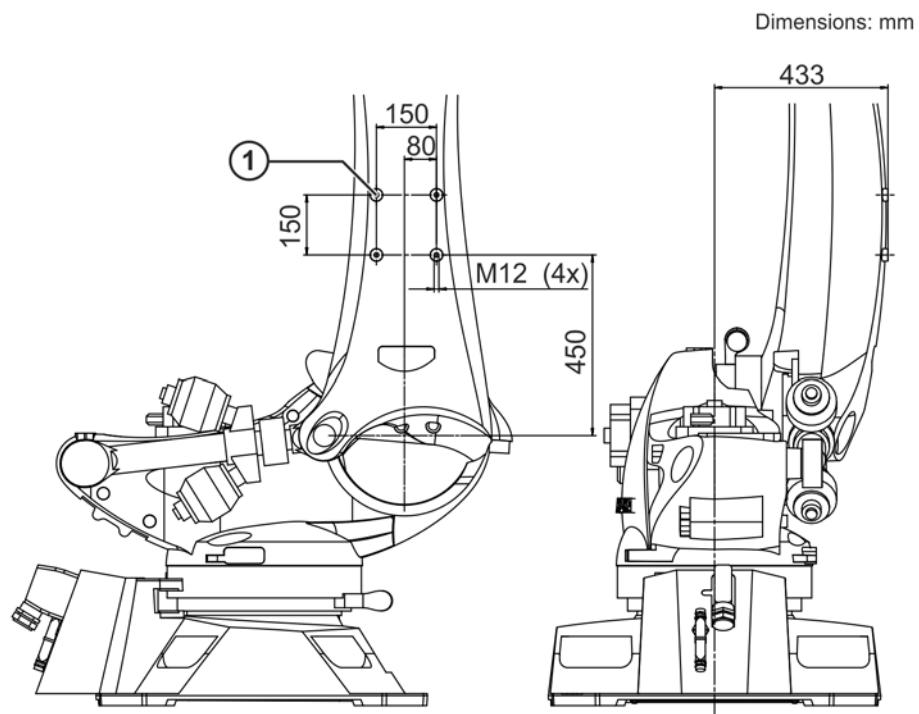

**Fig. 4-23: Supplementary load, link arm**

1 Mounting surface

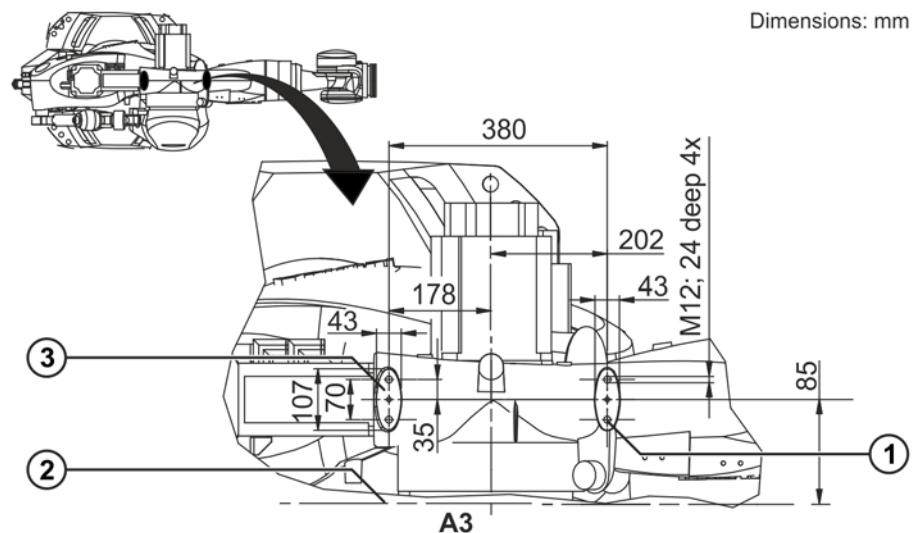

**Fig. 4-24: Supplementary load, arm**


1 Fastening thread

2 Interference contour, arm

3 Mounting surface



## 4.6 Plates and labels



**Plates and labels** The following plates and labels (=> Fig. 4-25 ) are attached to the robot. They must not be removed or rendered illegible. Illegible plates and labels must be replaced.

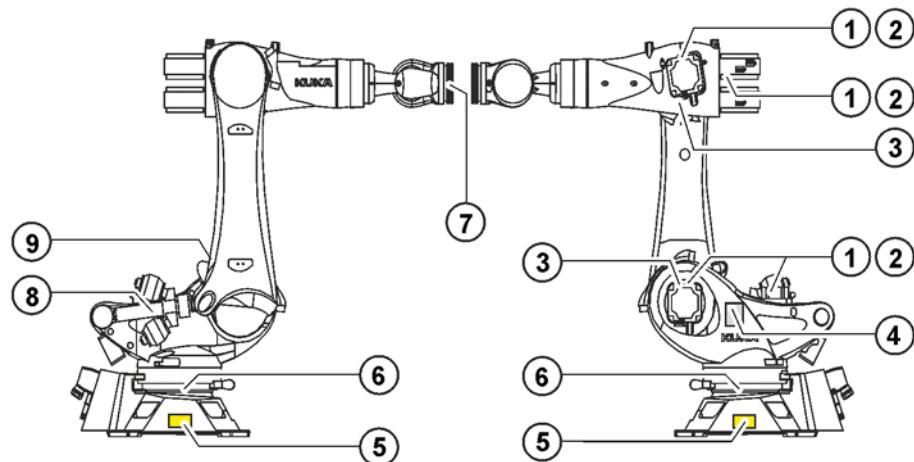

**Fig. 4-25: Location of plates and labels**

Item	Description		
1	<b>Hot surface</b> During operation of the robot, surface temperatures may be reached that could result in burn injuries. Protective gloves must be worn.		
2	<b>High voltage</b> Any improper handling can lead to contact with current-carrying components. Electric shock hazard!		
3	 00-259-732	<b>CAUTION</b> <b>Before removing the motor, secure robot axis to prevent it from turning!</b>	<b>ATTENTION</b> <b>Avant de retirer le moteur, protéger l'axe du robot contre le basculement!</b>
		<b>VORSICHT</b> <b>Vor Entfernen des Motors, Roboterachse gegen Bewegungen sichern!</b>	<b>Secure the axes</b> Before exchanging any motor, secure the corresponding axis through safeguarding by suitable means/devices to protect against possible movement. The axis can move. Risk of crushing!

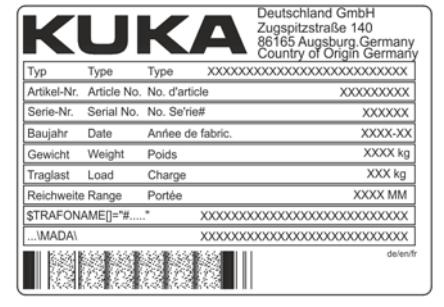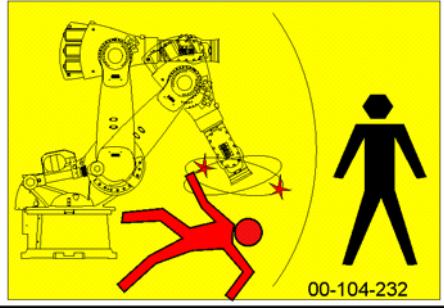4	 <p><b>Identification plate</b> Content according to Machinery Directive.</p>												
5	 <p><b>Danger zone</b> Entering the danger zone of the robot is prohibited if the robot is in operation or ready for operation. Risk of injury!</p>												
6	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center; padding: 10px;">  </td> <td style="text-align: center; padding: 10px;">             00-259-732         </td> <td style="text-align: center; padding: 5px;">           A1 A2 A3 A4 A5 A6            0° -140° +150° 0° -120° 0°         </td> </tr> <tr> <td colspan="2" style="text-align: center; background-color: yellow; padding: 5px;"> <b>CAUTION</b> </td> <td style="text-align: center; padding: 5px;">           Move the robot into its transport position before removing the mounting base!         </td> </tr> <tr> <td colspan="2" style="text-align: center; background-color: yellow; padding: 5px;"> <b>ATTENTION</b> </td> <td style="text-align: center; padding: 5px;">           Amener le robot en position de transport avant de défaire la fixation aux fondations!         </td> </tr> <tr> <td colspan="2" style="text-align: center; background-color: yellow; padding: 5px;"> <b>VORSICHT</b> </td> <td style="text-align: center; padding: 5px;">           Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!         </td> </tr> </table> <p><b>Transport position</b> Before loosening the bolts of the mounting base, the robot must be in the transport position as indicated in the table. Risk of toppling!</p>		 00-259-732	A1 A2 A3 A4 A5 A6 0° -140° +150° 0° -120° 0°	<b>CAUTION</b>		Move the robot into its transport position before removing the mounting base!	<b>ATTENTION</b>		Amener le robot en position de transport avant de défaire la fixation aux fondations!	<b>VORSICHT</b>		Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!
	 00-259-732	A1 A2 A3 A4 A5 A6 0° -140° +150° 0° -120° 0°											
<b>CAUTION</b>		Move the robot into its transport position before removing the mounting base!											
<b>ATTENTION</b>		Amener le robot en position de transport avant de défaire la fixation aux fondations!											
<b>VORSICHT</b>		Roboter vor Lösen der Fundamentbefestigung in Transportstellung bringen!											
7	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <tr> <td style="padding: 5px;"> <b>Schrauben</b>            Einschraubtiefe            Klemmlänge         </td> <td style="padding: 5px;"> <b>M10 Qualitat 10.9</b>            min. 12 max. 16mm            min. 12mm         </td> </tr> <tr> <td style="padding: 5px;"> <b>Fastening screws</b>            Engagement length            Screw grip         </td> <td style="padding: 5px;"> <b>M10 quality 10.9</b>            min. 12 max. 16mm            min. 12mm         </td> </tr> <tr> <td style="padding: 5px;"> <b>Vis</b>            Longueur vissée            Longueur de serrage         </td> <td style="padding: 5px;"> <b>M10 qualite 10.9</b>            min. 12 max. 16mm            min. 12mm            Art.Nr. 00-139-033         </td> </tr> </table> <p><b>Mounting flange on in-line wrist</b> The values specified on this plate apply for the installation of tools on the mounting flange of the wrist and must be observed.</p>	<b>Schrauben</b> Einschraubtiefe Klemmlänge	<b>M10 Qualitat 10.9</b> min. 12 max. 16mm min. 12mm	<b>Fastening screws</b> Engagement length Screw grip	<b>M10 quality 10.9</b> min. 12 max. 16mm min. 12mm	<b>Vis</b> Longueur vissée Longueur de serrage	<b>M10 qualite 10.9</b> min. 12 max. 16mm min. 12mm Art.Nr. 00-139-033						
<b>Schrauben</b> Einschraubtiefe Klemmlänge	<b>M10 Qualitat 10.9</b> min. 12 max. 16mm min. 12mm												
<b>Fastening screws</b> Engagement length Screw grip	<b>M10 quality 10.9</b> min. 12 max. 16mm min. 12mm												
<b>Vis</b> Longueur vissée Longueur de serrage	<b>M10 qualite 10.9</b> min. 12 max. 16mm min. 12mm Art.Nr. 00-139-033												

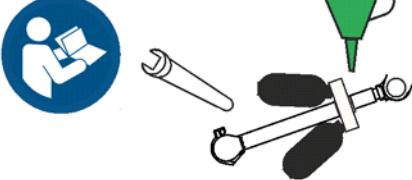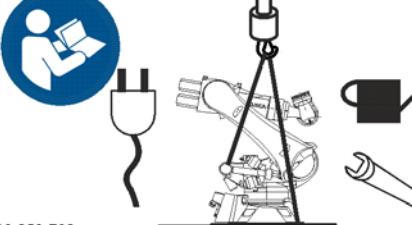8	  <p><b>p &gt; 10 MPa (100 bar)</b></p> <p>00-259-732</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;"><b>⚠ CAUTION</b></td><td style="padding: 5px;">Counterbalancing system pressurized – read and observe safety instructions before beginning work!</td></tr> <tr> <td style="padding: 5px;"><b>⚠ ATTENTION</b></td><td style="padding: 5px;">Le système d'équilibrage est sous pression, lire et respecter les remarques relatives à la sécurité avant d'effectuer des travaux !</td></tr> <tr> <td style="padding: 5px;"><b>⚠ VORSICHT</b></td><td style="padding: 5px;">Gewichtsausgleich unter Druck, vor Arbeiten Sicherheitshinweise lesen und beachten!</td></tr> </table> <p><b>Counterbalancing system</b> The system is pressurized with oil and nitrogen. Read and follow the assembly and operating instructions before commencing work on the counterbalancing system. Risk of injury!</p>	<b>⚠ CAUTION</b>	Counterbalancing system pressurized – read and observe safety instructions before beginning work!	<b>⚠ ATTENTION</b>	Le système d'équilibrage est sous pression, lire et respecter les remarques relatives à la sécurité avant d'effectuer des travaux !	<b>⚠ VORSICHT</b>	Gewichtsausgleich unter Druck, vor Arbeiten Sicherheitshinweise lesen und beachten!
<b>⚠ CAUTION</b>	Counterbalancing system pressurized – read and observe safety instructions before beginning work!						
<b>⚠ ATTENTION</b>	Le système d'équilibrage est sous pression, lire et respecter les remarques relatives à la sécurité avant d'effectuer des travaux !						
<b>⚠ VORSICHT</b>	Gewichtsausgleich unter Druck, vor Arbeiten Sicherheitshinweise lesen und beachten!						
9	  <p>00-259-732</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;"><b>⚠ CAUTION</b></td><td style="padding: 5px;">Secure the system before beginning work on the robot. Read and observe the safety instructions!</td></tr> <tr> <td style="padding: 5px;"><b>⚠ ATTENTION</b></td><td style="padding: 5px;">Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!</td></tr> <tr> <td style="padding: 5px;"><b>⚠ VORSICHT</b></td><td style="padding: 5px;">Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!</td></tr> </table> <p><b>Work on the robot</b> Before start-up, transportation or maintenance, read and follow the assembly and operating instructions.</p>	<b>⚠ CAUTION</b>	Secure the system before beginning work on the robot. Read and observe the safety instructions!	<b>⚠ ATTENTION</b>	Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!	<b>⚠ VORSICHT</b>	Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!
<b>⚠ CAUTION</b>	Secure the system before beginning work on the robot. Read and observe the safety instructions!						
<b>⚠ ATTENTION</b>	Bloquer le système avant d'effectuer des travaux sur le robot. Lire et respecter les remarques relatives à la sécurité!						
<b>⚠ VORSICHT</b>	Vor Arbeiten am Roboter, System sichern. Sicherheitshinweise lesen und beachten!						

#### 4.7 REACH duty to communicate information acc. to Art. 33 of Regulation (EC) 1907/2006

On the basis of the information provided by our suppliers, this product and its components contain no substances included on the "Candidate List" of Substances of Very High Concern (SVHCs) in a concentration exceeding 0.1 percent by mass.

#### 4.8 Stopping distances and times

##### 4.8.1 General information


Information concerning the data:

- The stopping distance is the angle traveled by the robot from the moment the stop signal is triggered until the robot comes to a complete standstill.
- The stopping time is the time that elapses from the moment the stop signal is triggered until the robot comes to a complete standstill.

- The data are given for the main axes A1, A2 and A3. The main axes are the axes with the greatest deflection.
- Superposed axis motions can result in longer stopping distances.
- Stopping distances and stopping times in accordance with DIN EN ISO 10218-1, Annex B.
- Stop categories:
  - Stop category 0 » STOP 0
  - Stop category 1 » STOP 1
 according to IEC 60204-1
- The values specified for Stop 0 are guide values determined by means of tests and simulation. They are average values which conform to the requirements of DIN EN ISO 10218-1. The actual stopping distances and stopping times may differ due to internal and external influences on the braking torque. It is therefore advisable to determine the exact stopping distances and stopping times where necessary under the real conditions of the actual robot application.
- Measuring technique  
The stopping distances were measured using the robot-internal measuring technique.
- The wear on the brakes varies depending on the operating mode, robot application and the number of STOP 0 stops triggered. It is therefore advisable to check the stopping distance at least once a year.

#### 4.8.2 Terms used

Term	Description
m	Mass of the rated load and the supplementary load on the arm.
Phi	Angle of rotation (°) about the corresponding axis. This value can be entered in the controller via the KCP/smartPAD and can be displayed on the KCP/smartPAD.
POV	Program override (%) = velocity of the robot motion. This value can be entered in the controller via the KCP/smartPAD and can be displayed on the KCP/smartPAD.
Extension	Distance (l in %) ( <a href="#">&gt;&gt;&gt; Fig. 4-26</a> ) between axis 1 and the intersection of axes 4 and 5. With parallelogram robots, the distance between axis 1 and the intersection of axis 6 and the mounting flange.
KCP	KUKA Control Panel Teach pendant for the KR C2/KR C2 edition2005 The KCP has all the operator control and display functions required for operating and programming the industrial robot.
smartPAD	Teach pendant for the KR C4 The smartPAD has all the operator control and display functions required for operating and programming the industrial robot.

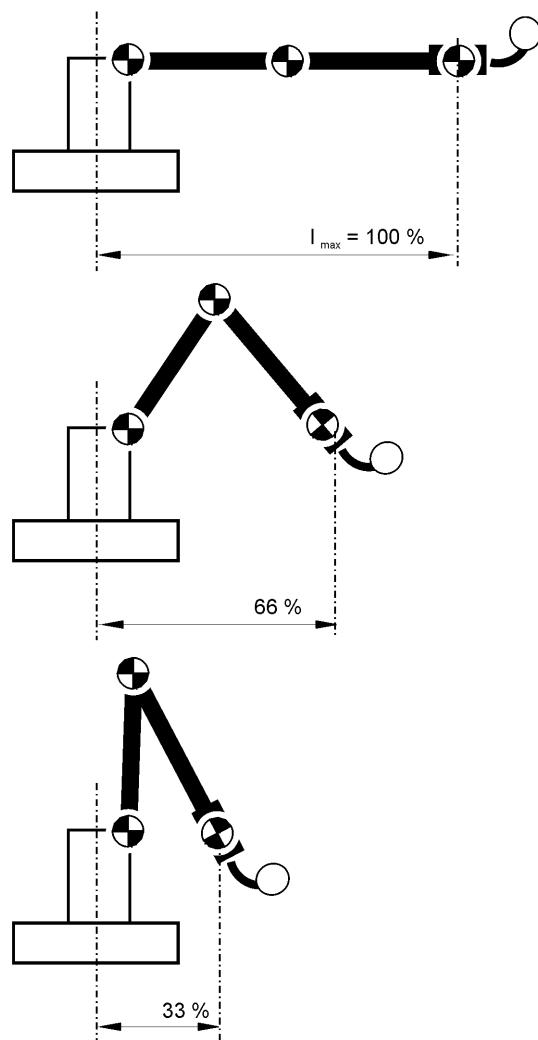

**Fig. 4-26: Extension**

#### 4.8.3 Stopping distances and times, KR 120 R2700 extra HA

##### 4.8.3.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 3

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension  $I = 100\%$
- Program override POV = 100%
- Mass  $m$  = maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	26.1	0.36
Axis 2	18	0.32
Axis 3	13.7	0.20

#### 4.8.3.2 Stopping distances and stopping times for STOP 1, axis 1

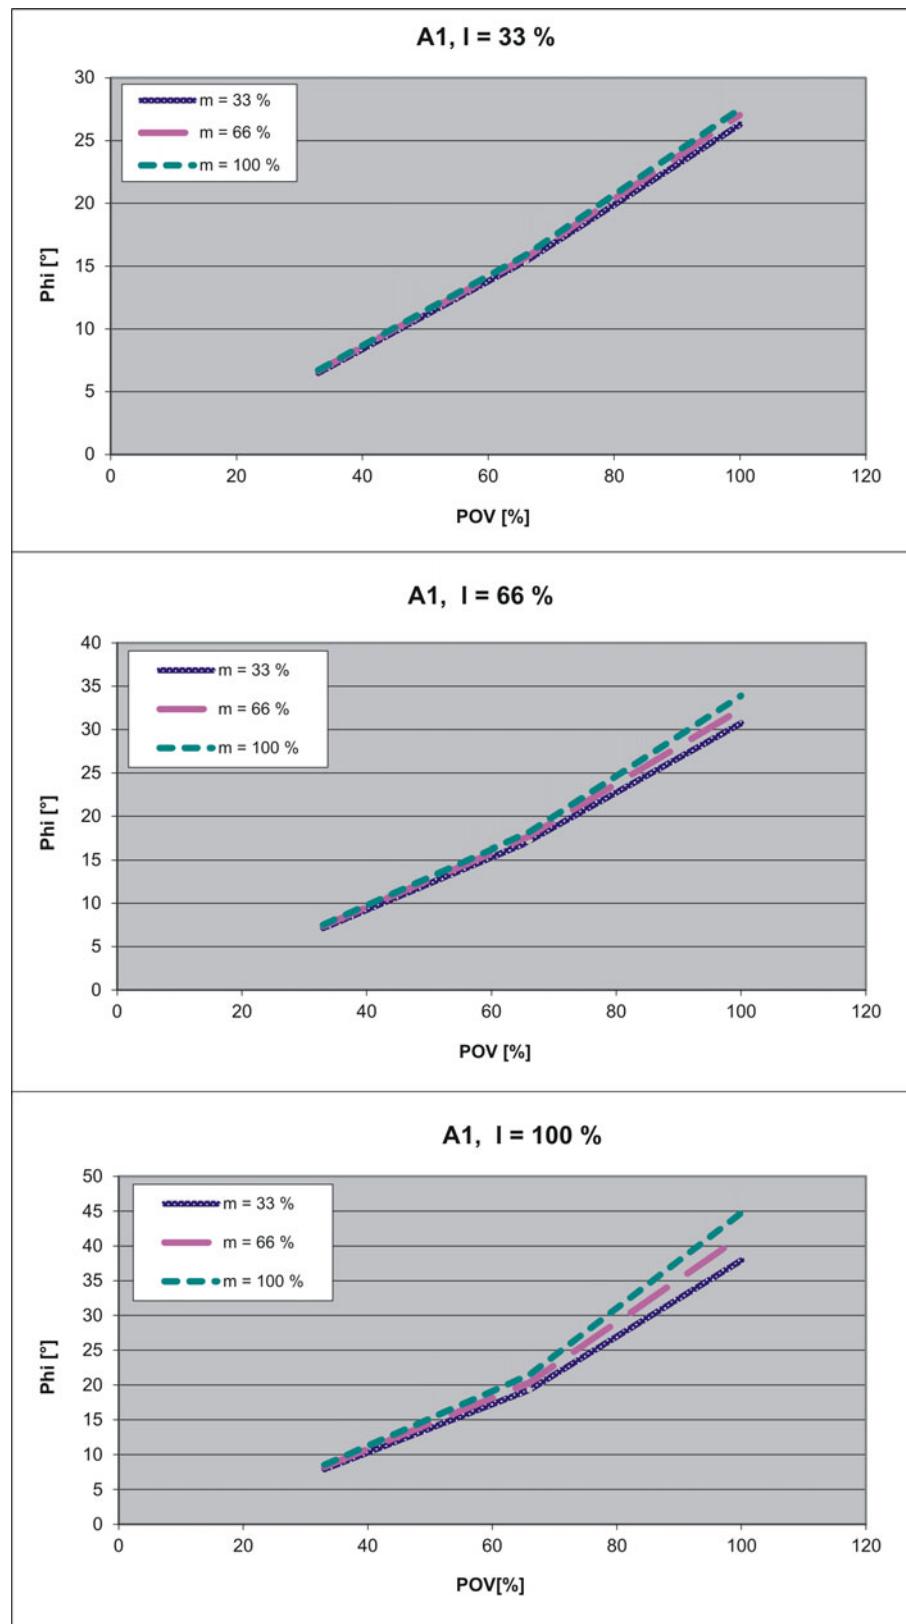


Fig. 4-27: Stopping distances for STOP 1, axis 1



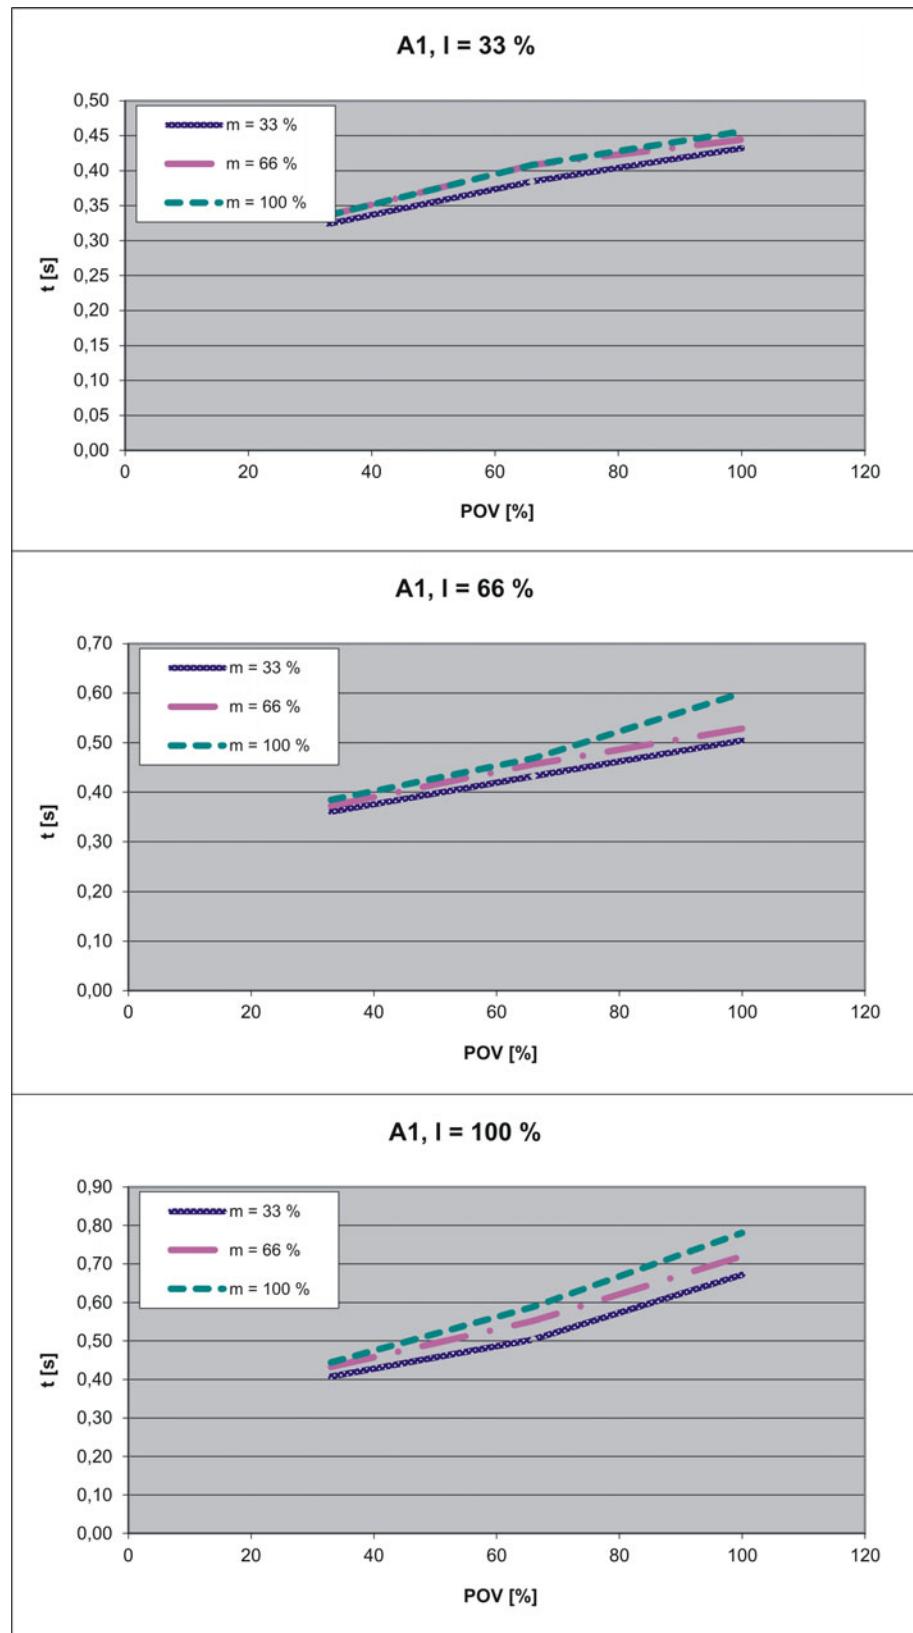


Fig. 4-28: Stopping times for STOP 1, axis 1

**4.8.3.3 Stopping distances and stopping times for STOP 1, axis 2****Fig. 4-29: Stopping distances for STOP 1, axis 2**

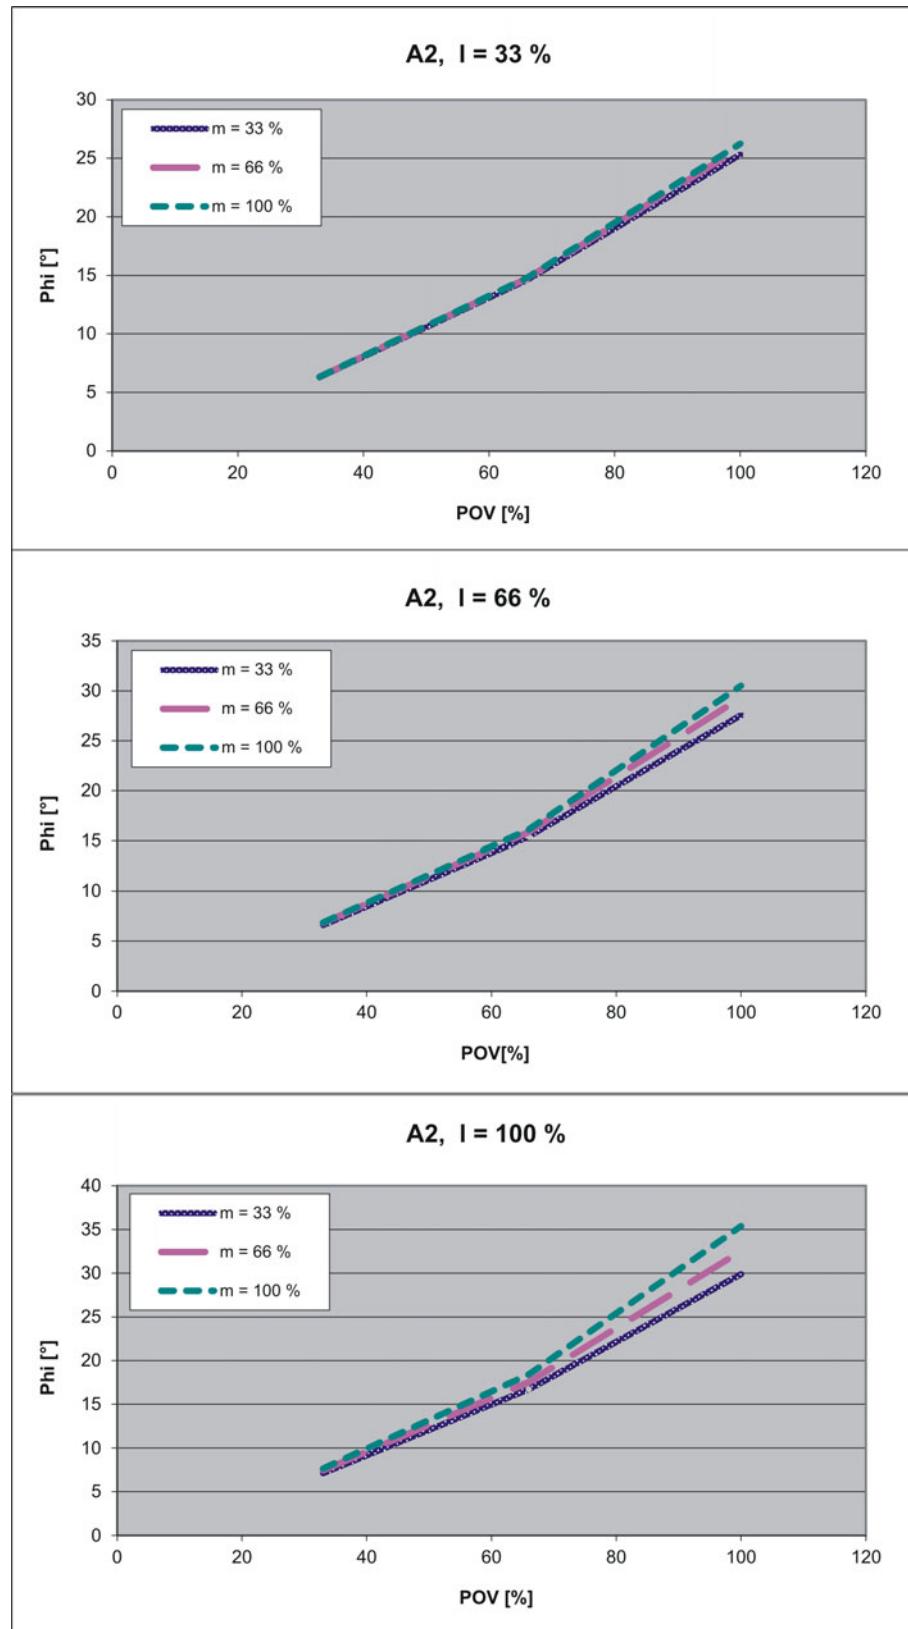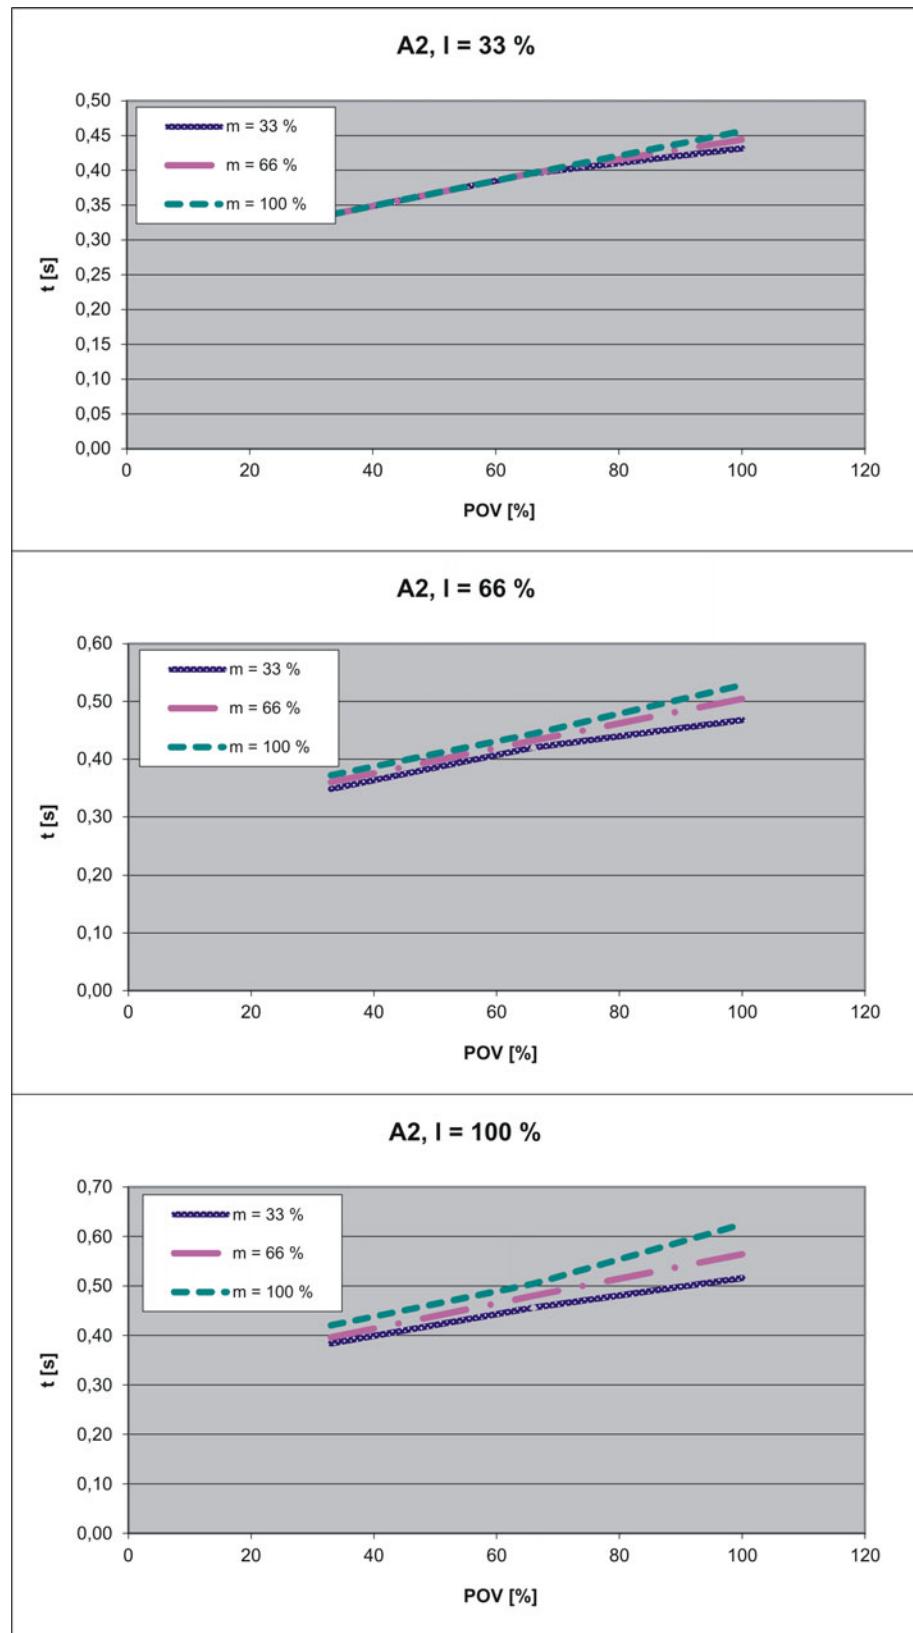

**Fig. 4-30: Stopping times for STOP 1, axis 2**

#### 4.8.3.4 Stopping distances and stopping times for STOP 1, axis 3

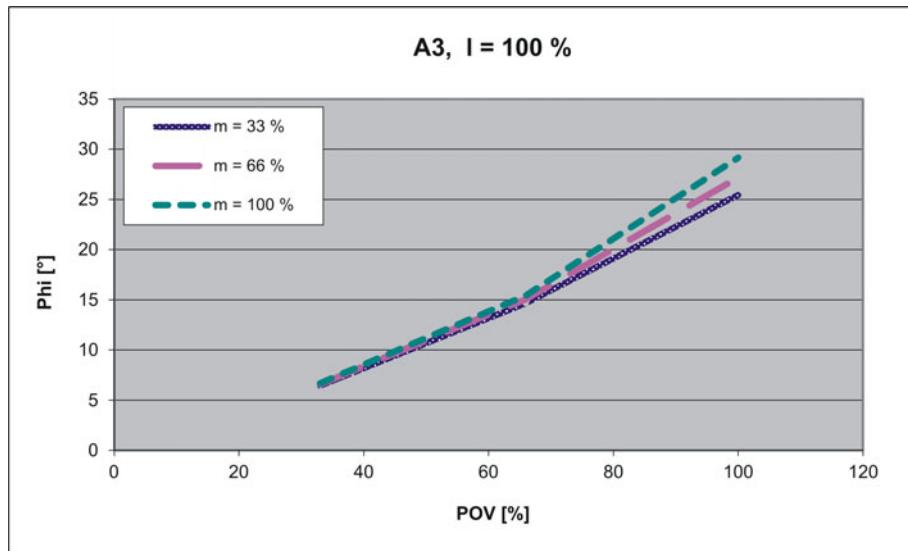


Fig. 4-31: Stopping distances for STOP 1, axis 3

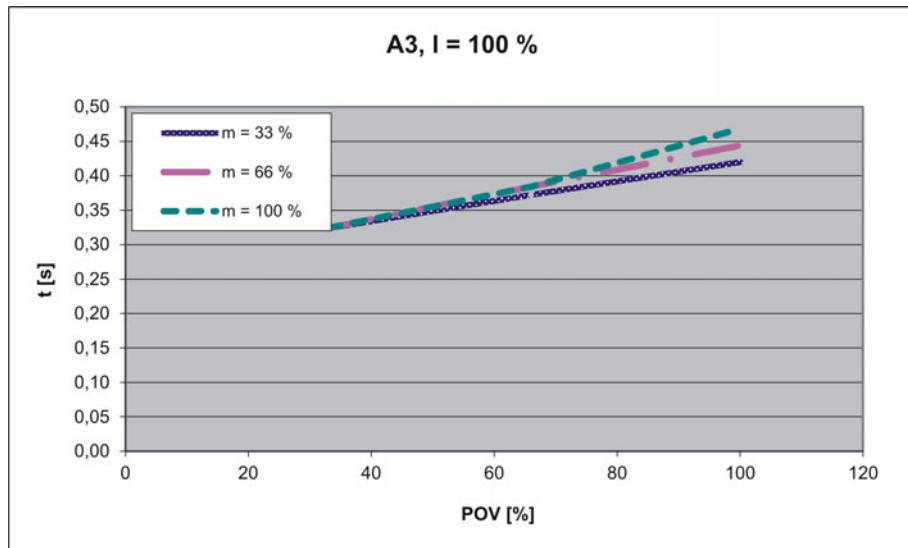


Fig. 4-32: Stopping times for STOP 1, axis 3

#### 4.8.4 Stopping distances and times, KR 90 R2900 extra HA

##### 4.8.4.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 3

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension I = 100%
- Program override POV = 100%
- Mass m = maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	26.1	0.36
Axis 2	18	0.32
Axis 3	13.7	0.20

#### 4.8.4.2 Stopping distances and stopping times for STOP 1, axis 1


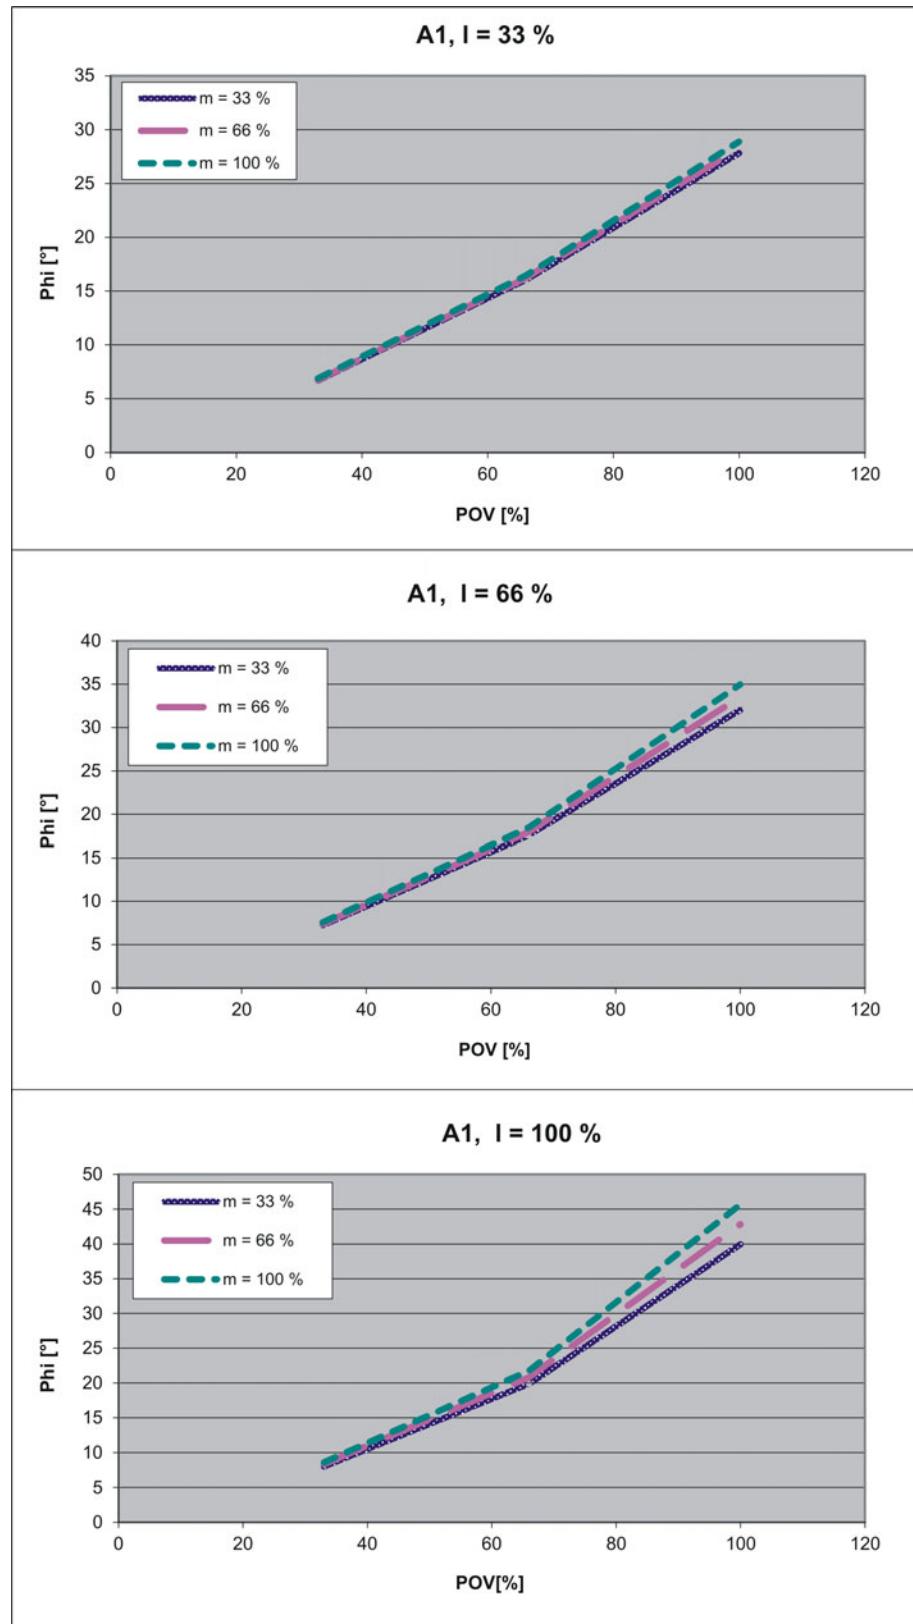


Fig. 4-33: Stopping distances for STOP 1, axis 1

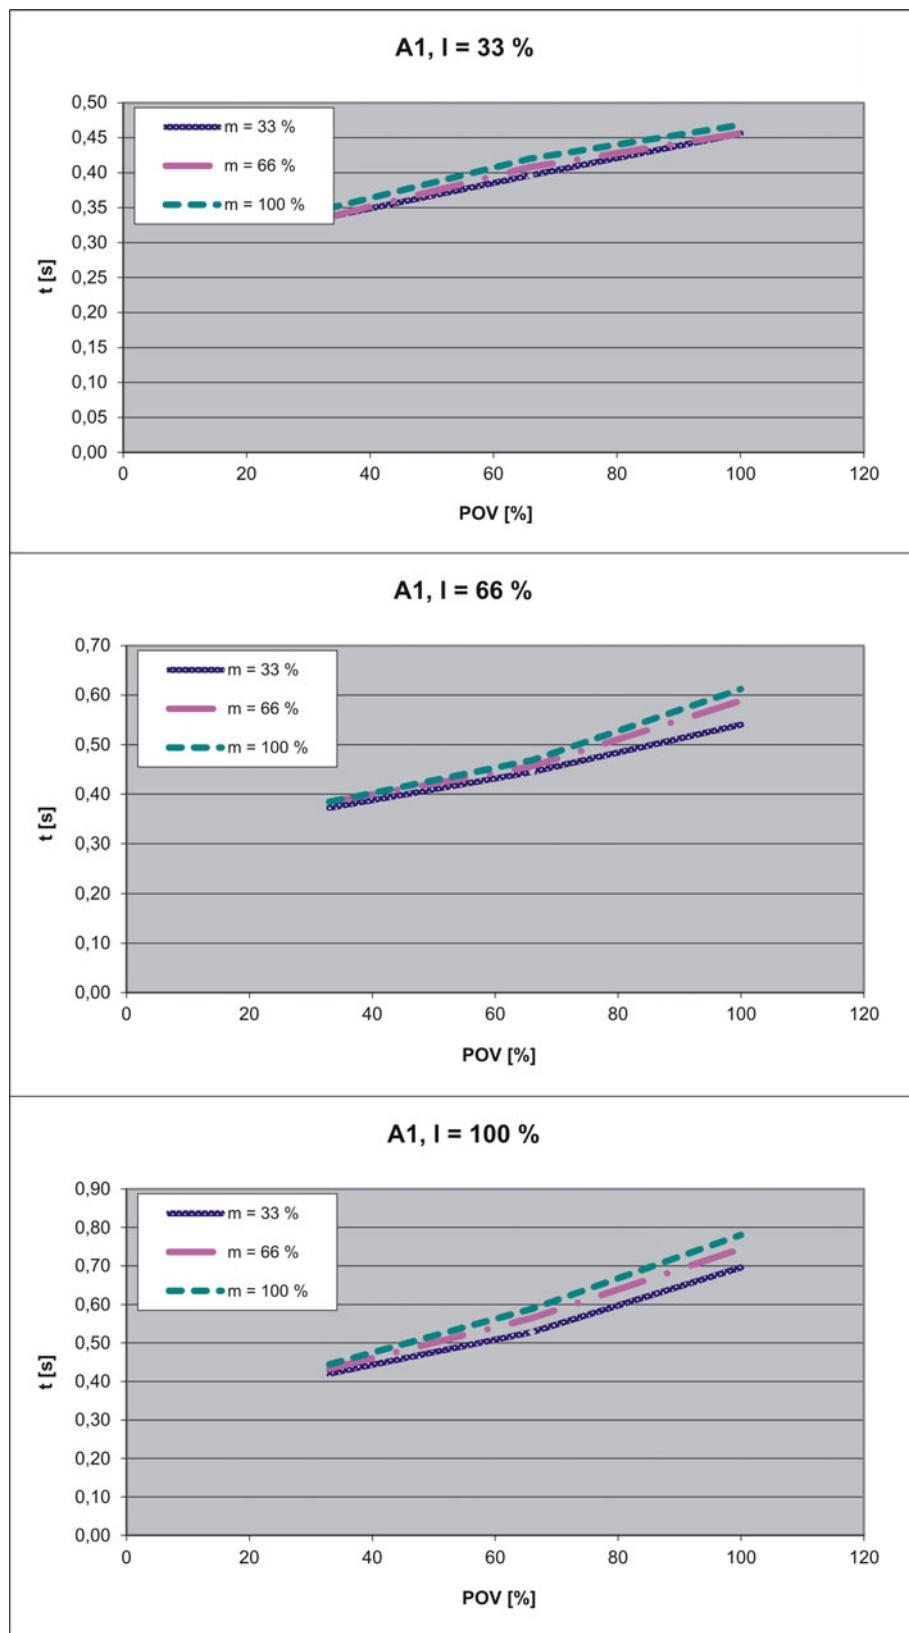

**Fig. 4-34: Stopping times for STOP 1, axis 1**

#### 4.8.4.3 Stopping distances and stopping times for STOP 1, axis 2


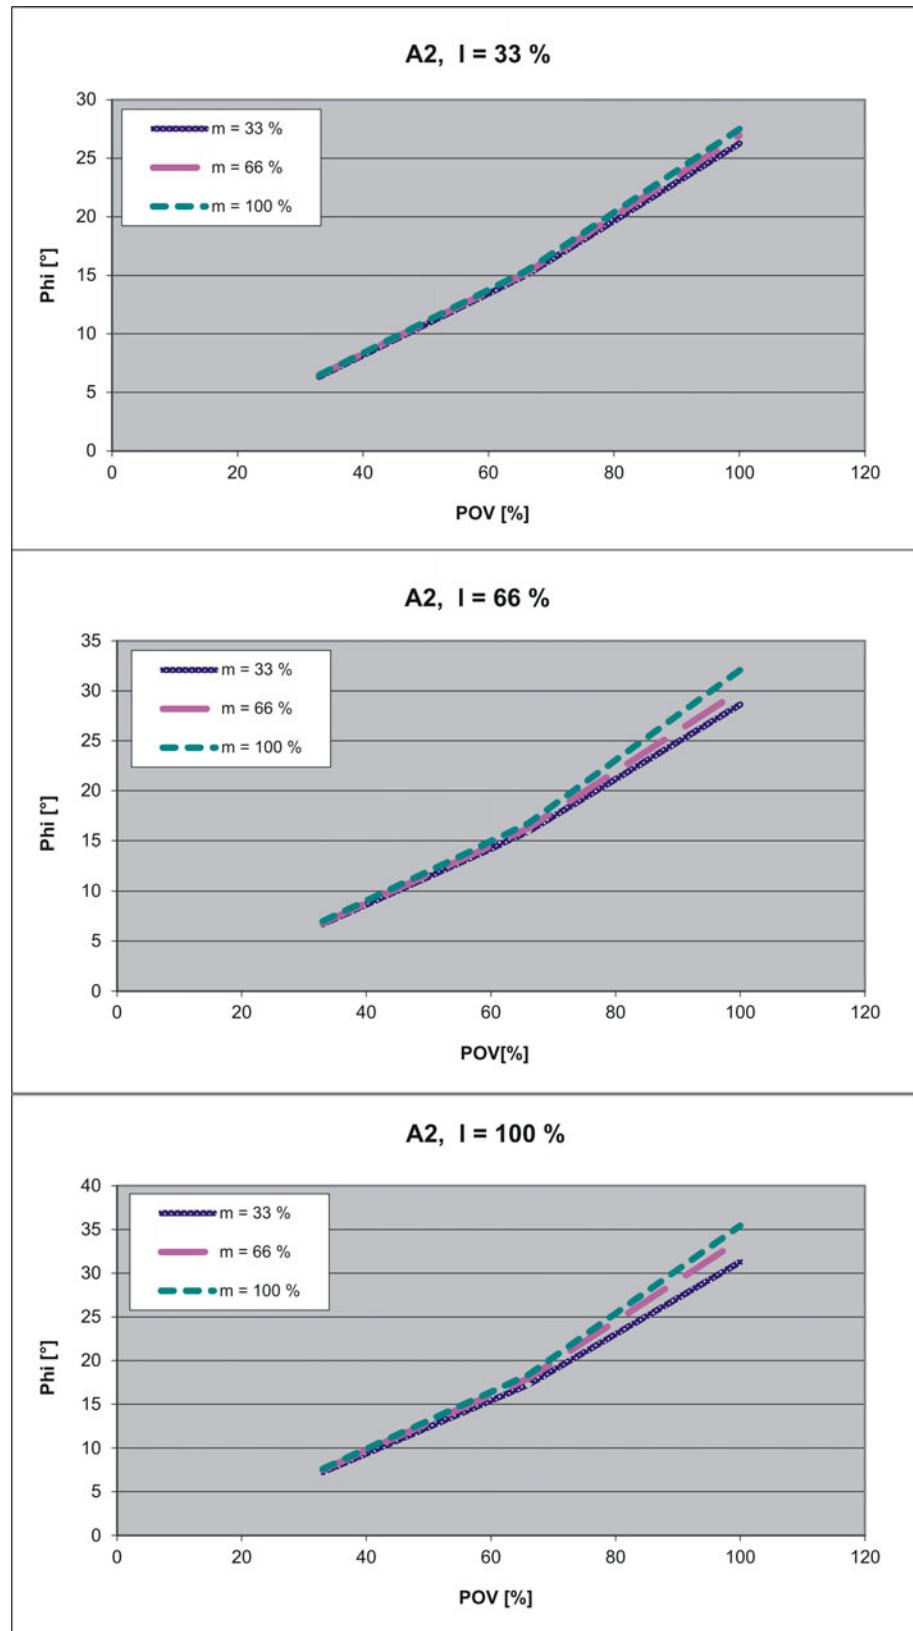


Fig. 4-35: Stopping distances for STOP 1, axis 2

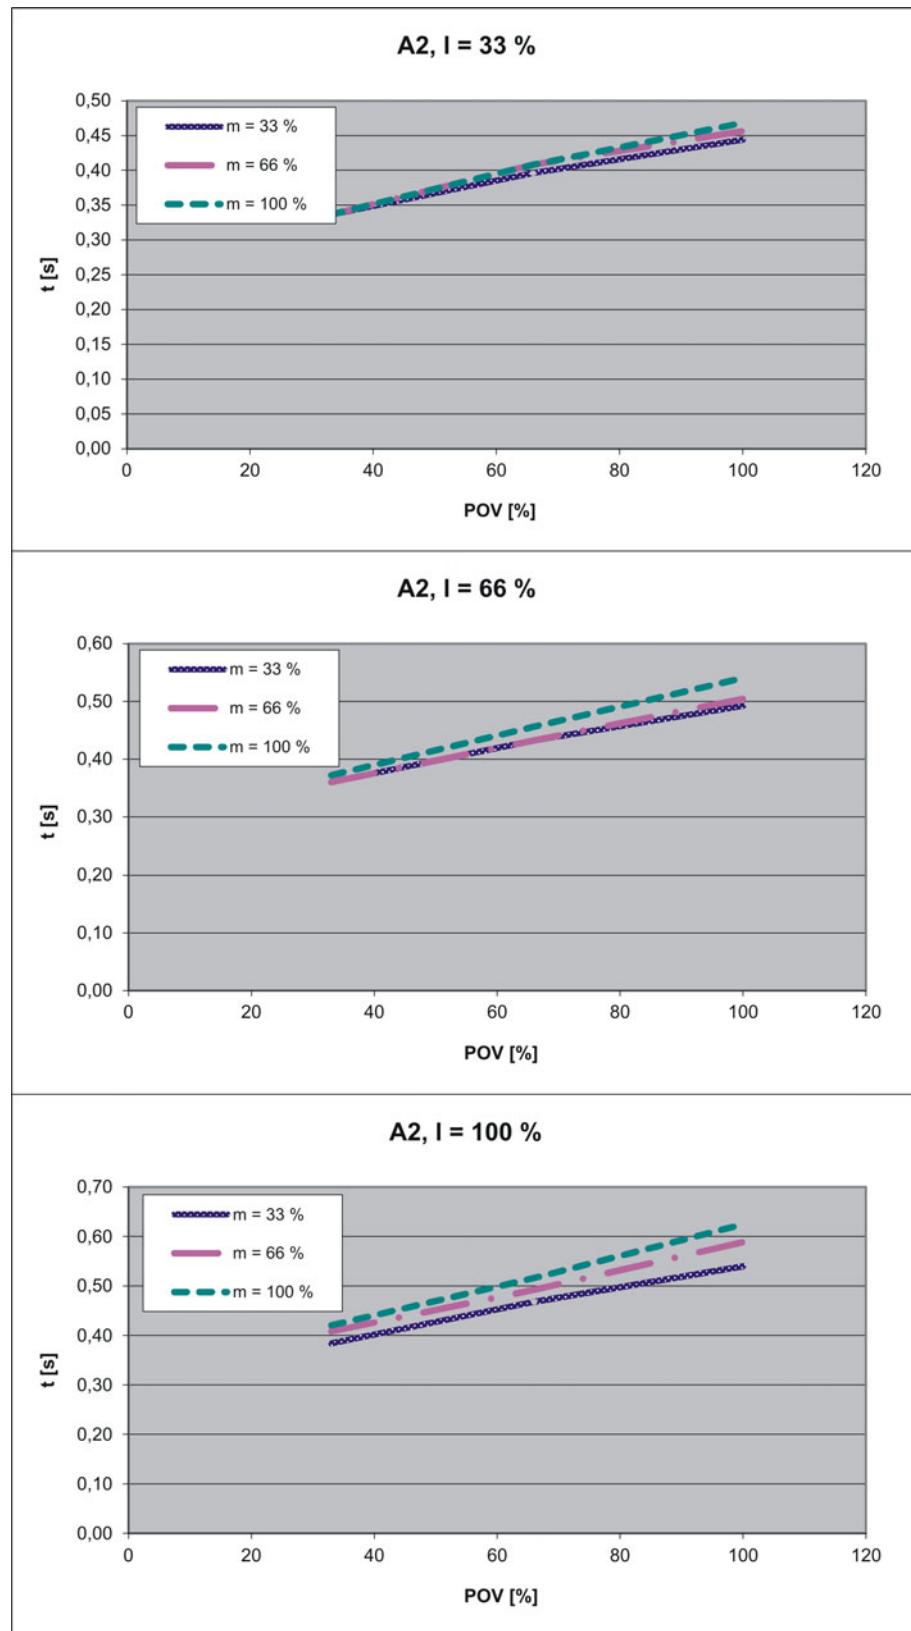

**Fig. 4-36: Stopping times for STOP 1, axis 2**

#### 4.8.4.4 Stopping distances and stopping times for STOP 1, axis 3

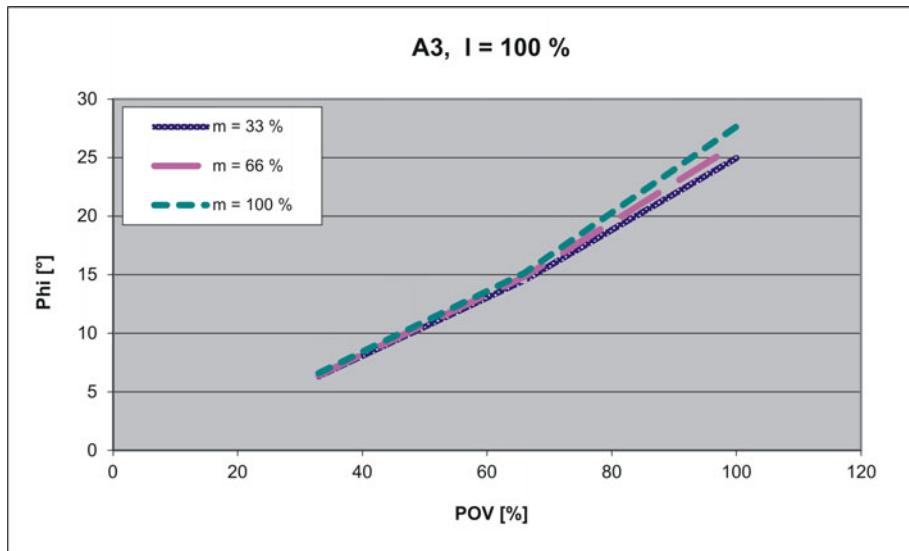


Fig. 4-37: Stopping distances for STOP 1, axis 3

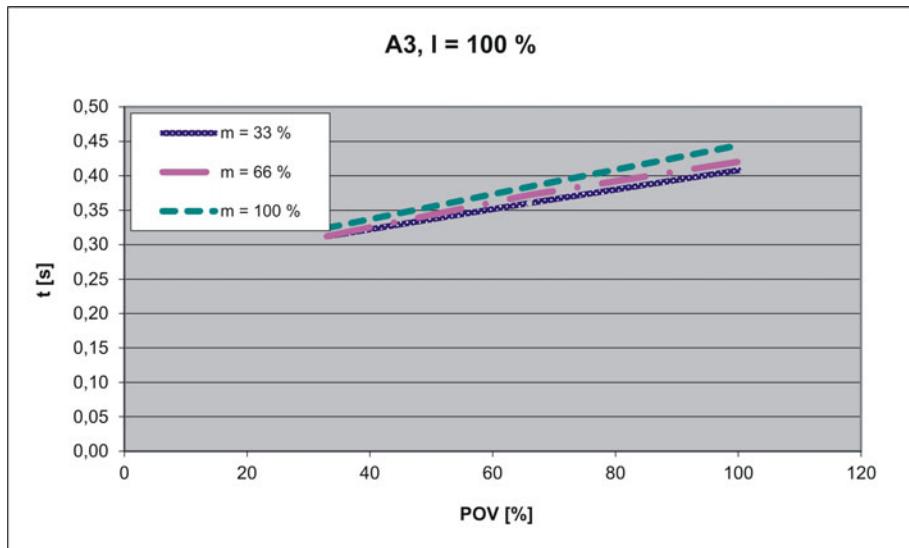


Fig. 4-38: Stopping times for STOP 1, axis 3

#### 4.8.5 Stopping distances and times, KR 90 R3100 extra HA

##### 4.8.5.1 Stopping distances and stopping times for STOP 0, axis 1 to axis 3

The table shows the stopping distances and stopping times after a STOP 0 (category 0 stop) is triggered. The values refer to the following configuration:

- Extension I = 100%
- Program override POV = 100%
- Mass m = maximum load (rated load + supplementary load on arm)

	Stopping distance (°)	Stopping time (s)
Axis 1	26.1	0.36
Axis 2	18	0.32
Axis 3	13.7	0.20

#### 4.8.5.2 Stopping distances and stopping times for STOP 1, axis 1

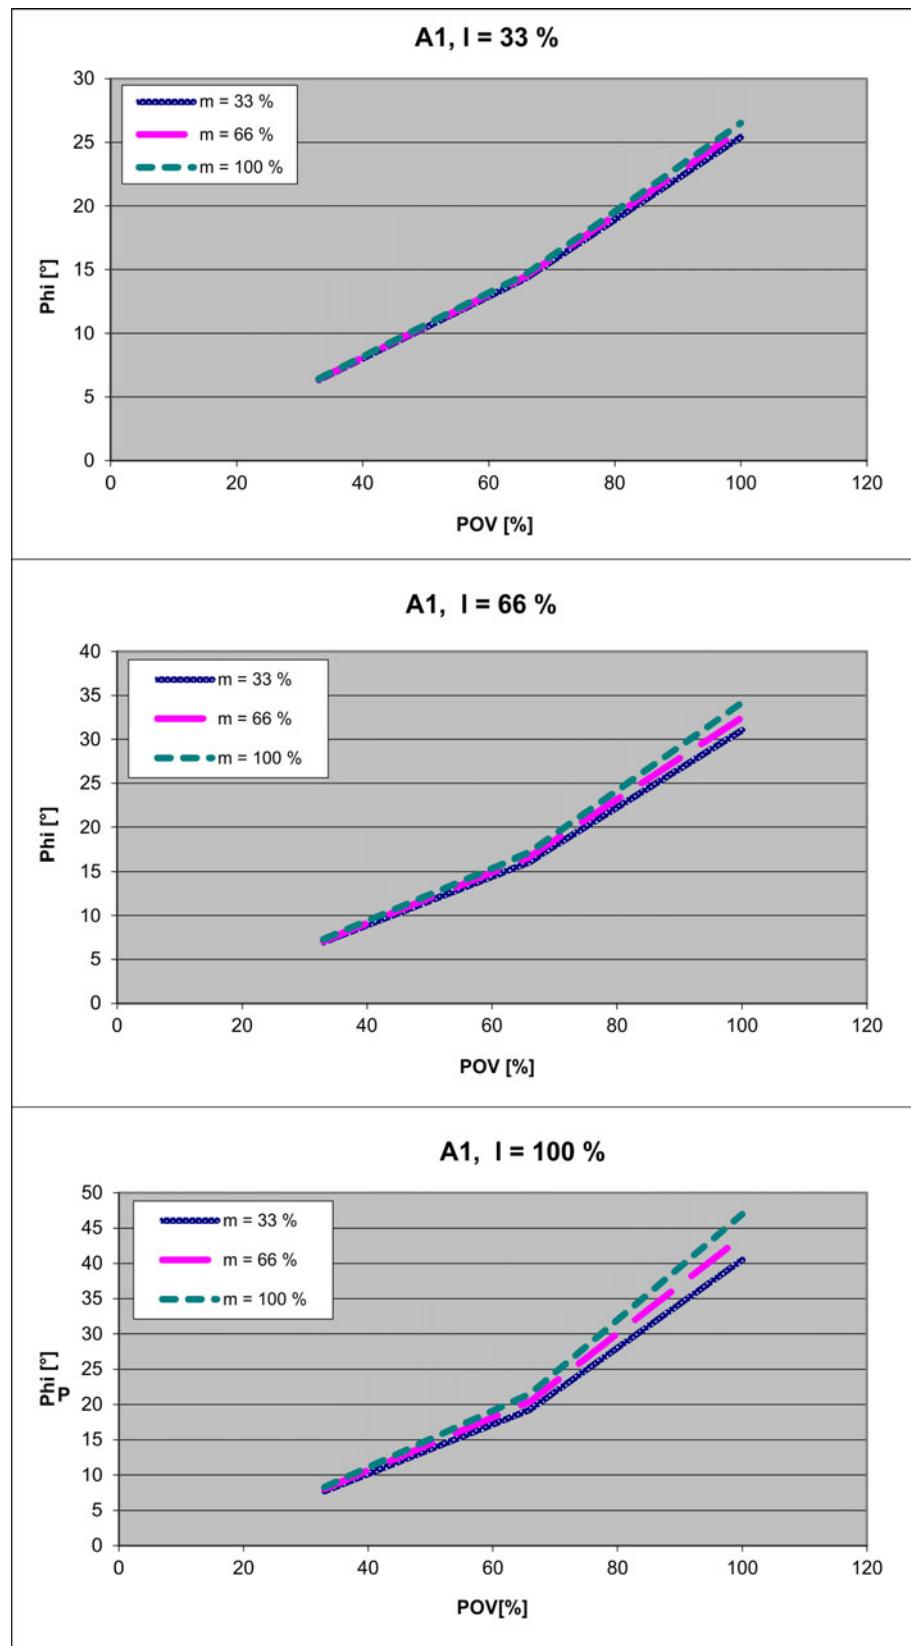


Fig. 4-39: Stopping distances for STOP 1, axis 1

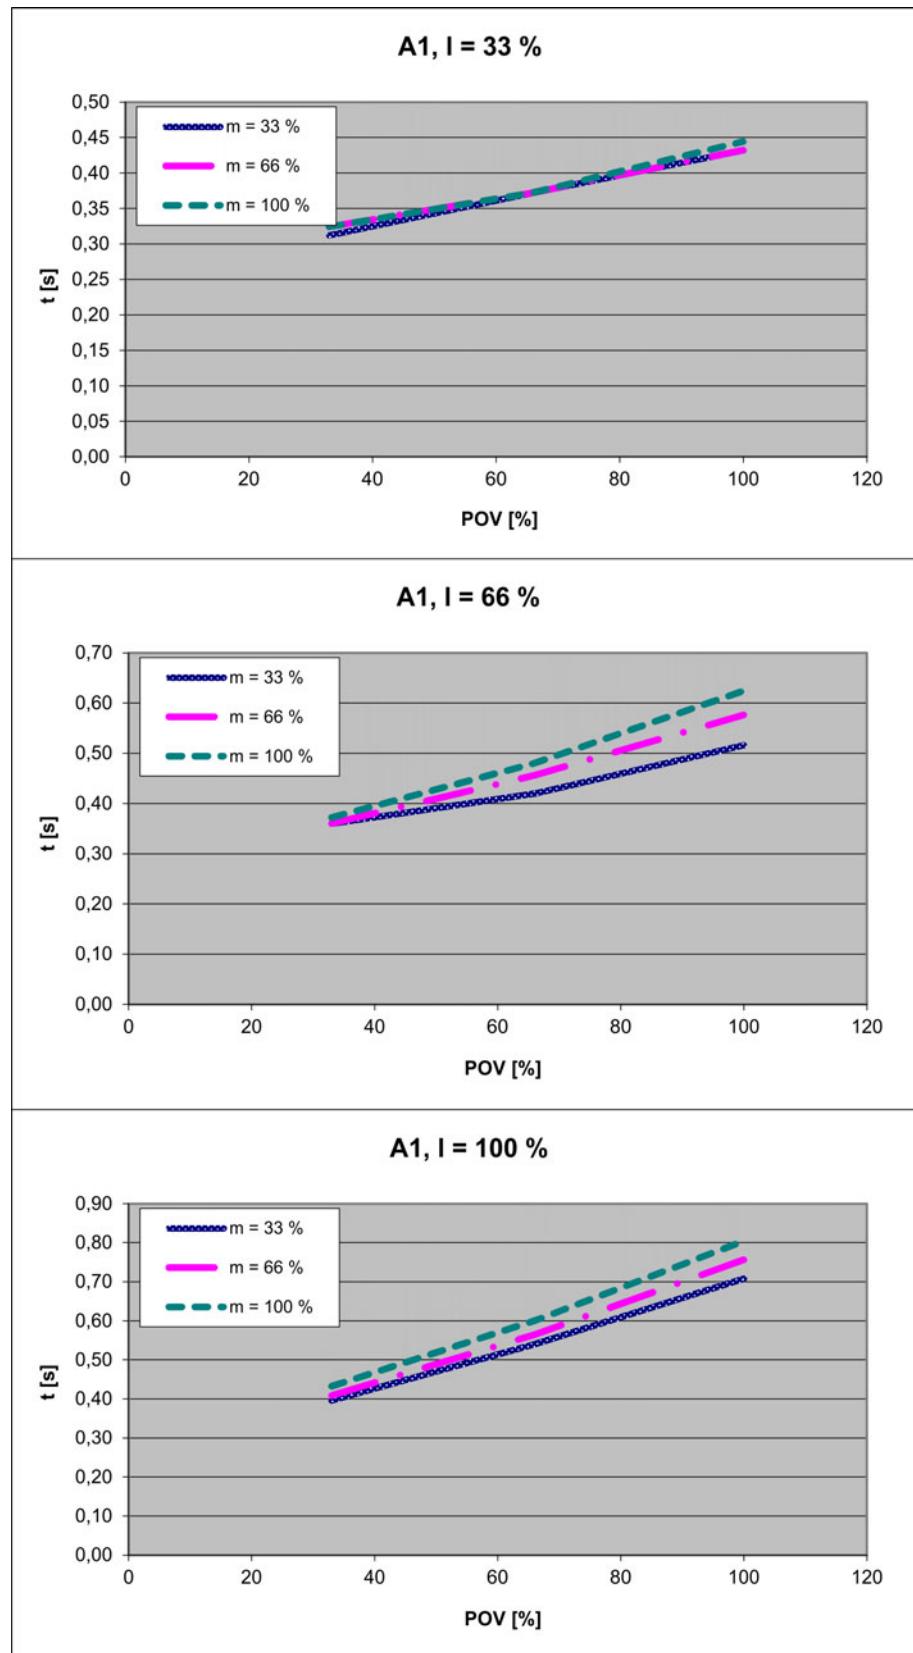


Fig. 4-40: Stopping times for STOP 1, axis 1

#### 4.8.5.3 Stopping distances and stopping times for STOP 1, axis 2

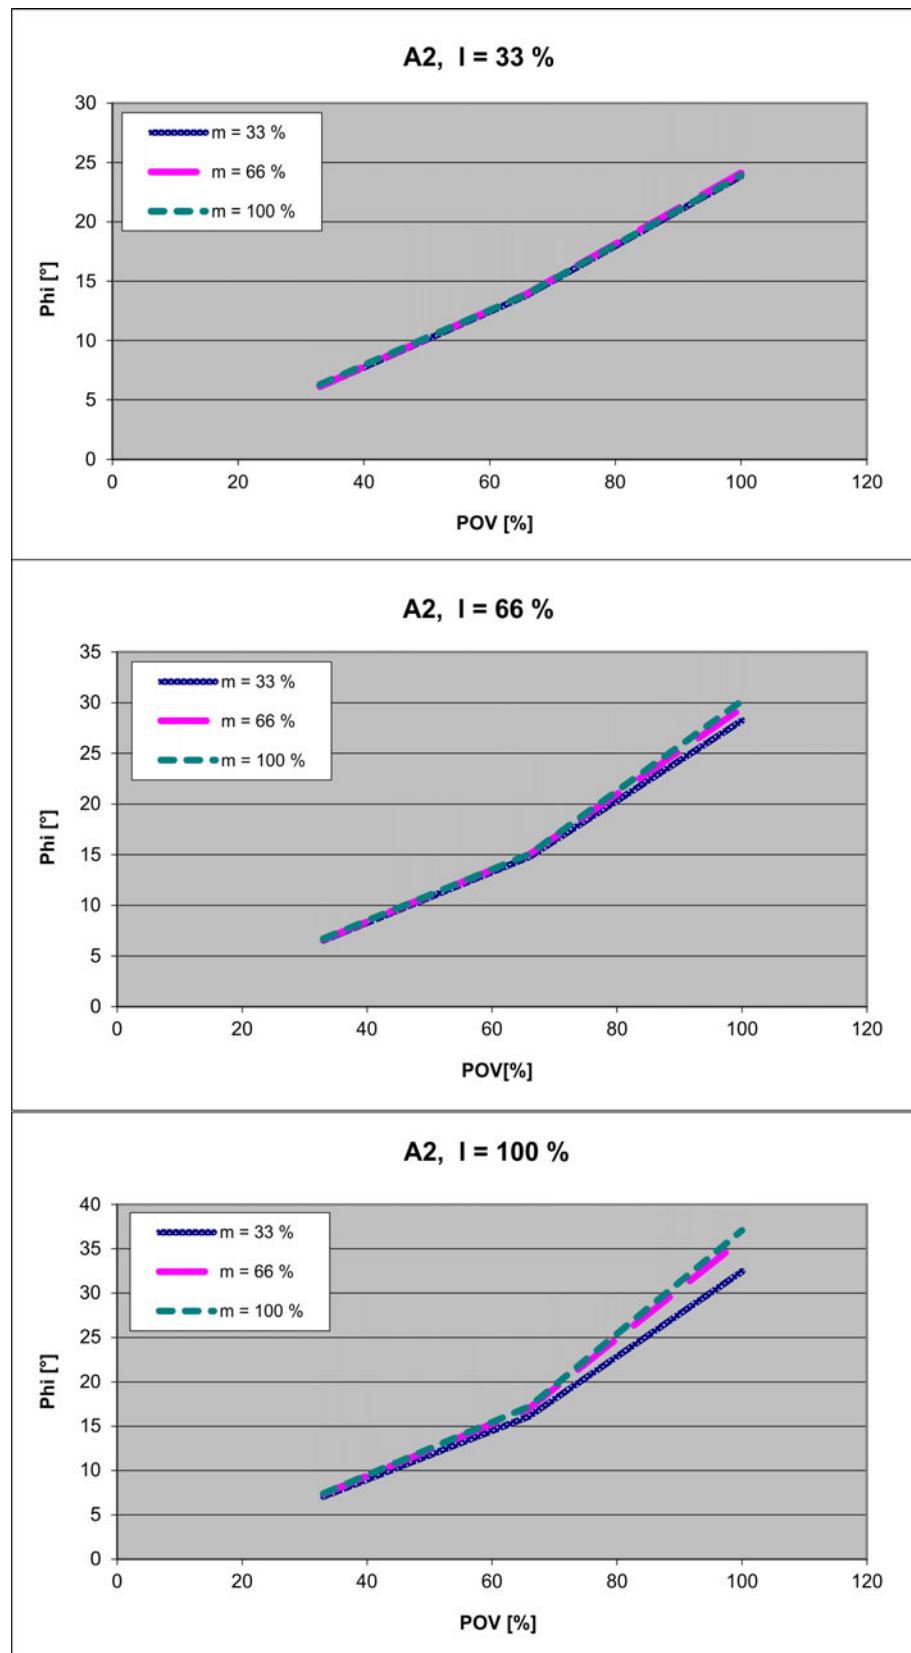


Fig. 4-41: Stopping distances for STOP 1, axis 2



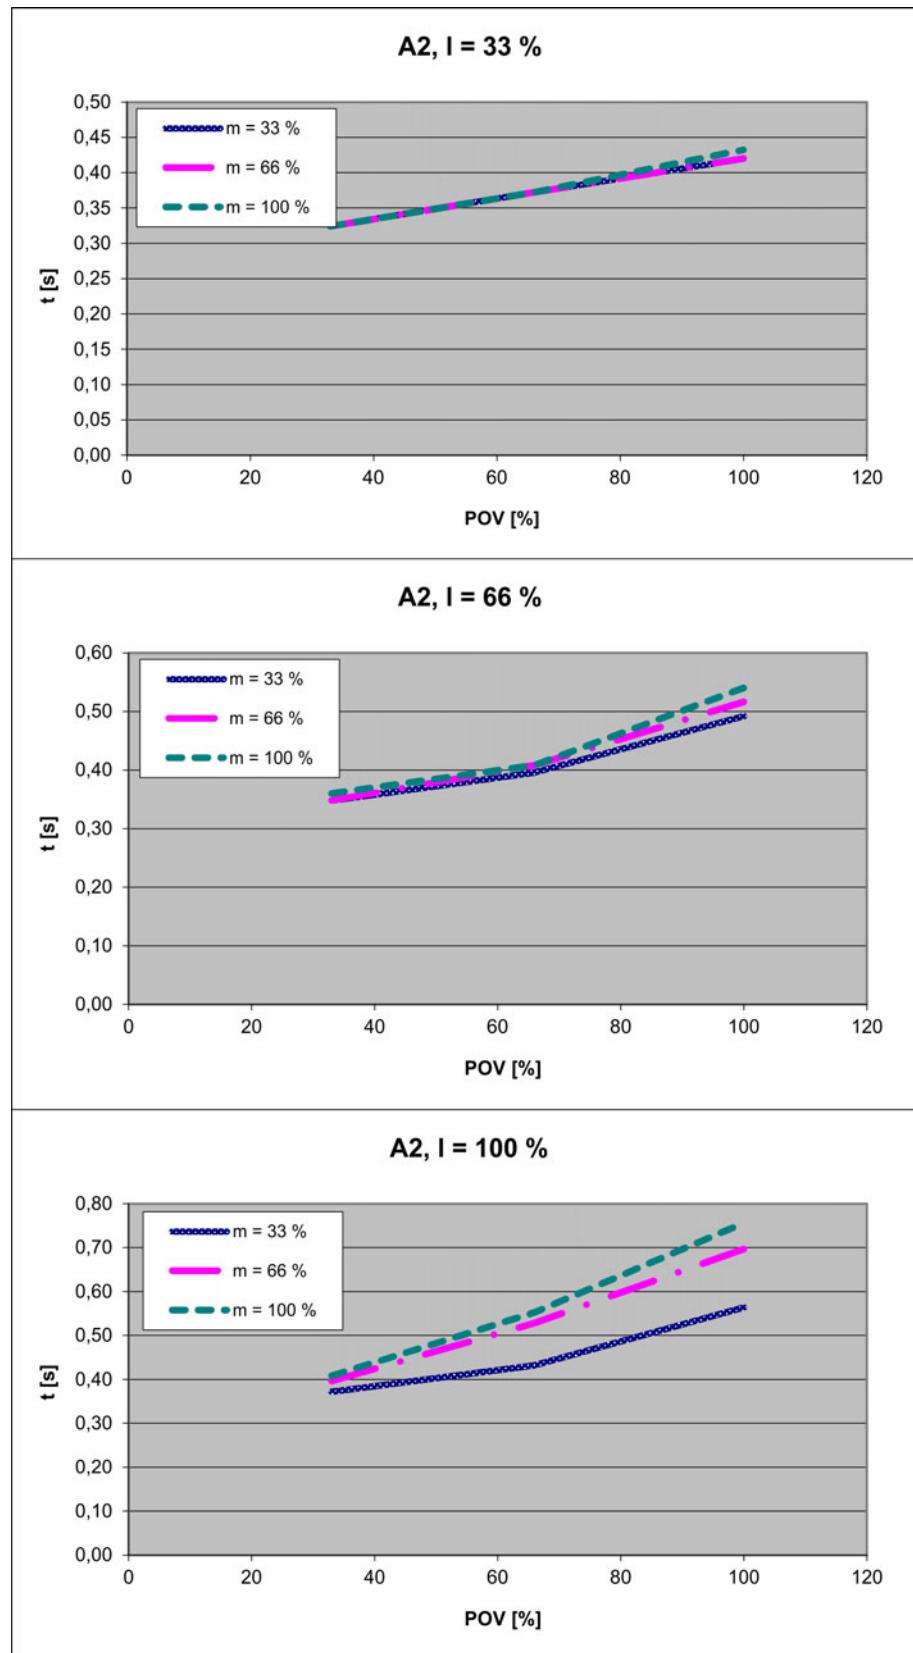


Fig. 4-42: Stopping times for STOP 1, axis 2

**4.8.5.4 Stopping distances and stopping times for STOP 1, axis 3****Fig. 4-43: Stopping distances for STOP 1, axis 3****Fig. 4-44: Stopping times for STOP 1, axis 3**

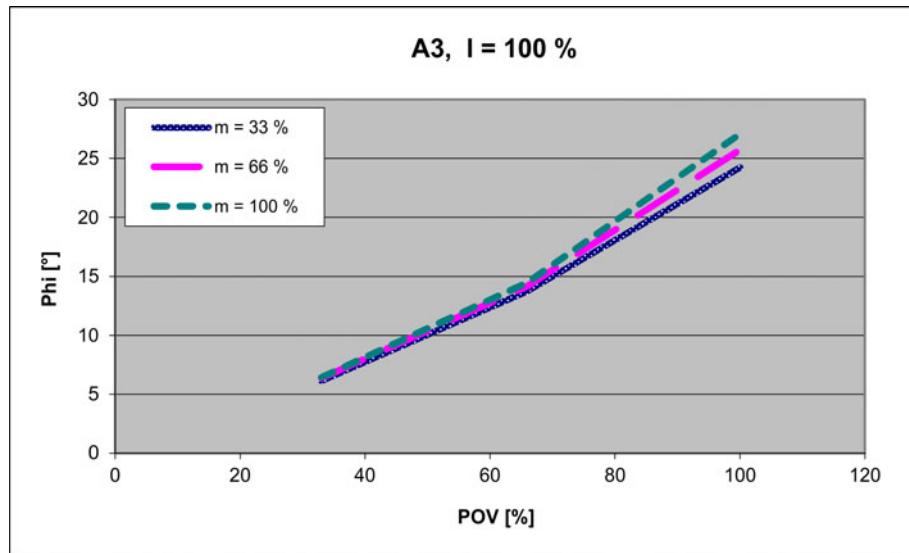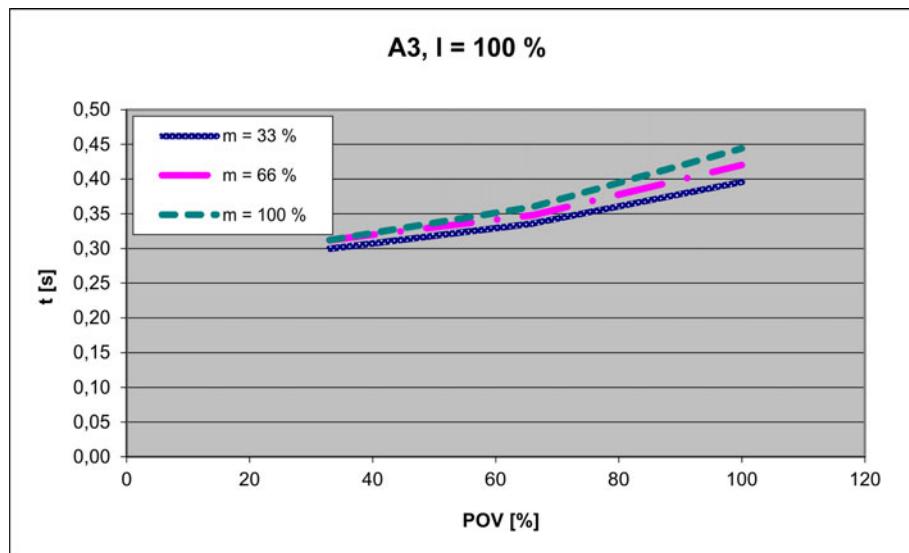

## 5 Safety

### 5.1 General



- This "Safety" chapter refers to a mechanical component of an industrial robot.
- If the mechanical component is used together with a KUKA robot controller, the "Safety" chapter of the operating instructions or assembly instructions of the robot controller must be used!
- This contains all the information provided in this "Safety" chapter. It also contains additional safety information relating to the robot controller which must be observed.
- Where this "Safety" chapter uses the term "industrial robot", this also refers to the individual mechanical component if applicable.

#### 5.1.1 Liability

The device described in this document is either an industrial robot or a component thereof.

Components of the industrial robot:

- Manipulator
- Robot controller
- Teach pendant
- Connecting cables
- External axes (optional)  
e.g. linear unit, turn-tilt table, positioner
- Software
- Options, accessories

The industrial robot is built using state-of-the-art technology and in accordance with the recognized safety rules. Nevertheless, misuse of the industrial robot may constitute a risk to life and limb or cause damage to the industrial robot and to other material property.

The industrial robot may only be used in perfect technical condition in accordance with its designated use and only by safety-conscious persons who are fully aware of the risks involved in its operation. Use of the industrial robot is subject to compliance with this document and with the declaration of incorporation supplied together with the industrial robot. Any functional disorders affecting safety must be rectified immediately.

#### Safety information

Information about safety may not be construed against KUKA Deutschland GmbH. Even if all safety instructions are followed, this is not a guarantee that the industrial robot will not cause personal injuries or material damage.

No modifications may be carried out to the industrial robot without the authorization of KUKA Deutschland GmbH. Additional components (tools, software, etc.), not supplied by KUKA Deutschland GmbH, may be integrated into the industrial robot. The user is liable for any damage these components may cause to the industrial robot or to other material property.

In addition to the Safety chapter, this document contains further safety instructions. These must also be observed.

### 5.1.2 Intended use of the industrial robot

The industrial robot is intended exclusively for the use designated in the "Purpose" chapter of the operating instructions or assembly instructions.

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. The manufacturer is not liable for any damage resulting from such misuse. The risk lies entirely with the user.

Operation of the industrial robot in accordance with its intended use also requires compliance with the operating and assembly instructions for the individual components, with particular reference to the maintenance specifications.

#### Misuse

Any use or application deviating from the intended use is deemed to be misuse and is not allowed. This includes e.g.:

- Use as a climbing aid
- Operation outside the specified operating parameters
- Operation without the required safety equipment

### 5.1.3 EC declaration of conformity and declaration of incorporation

The industrial robot constitutes partly completed machinery as defined by the EC Machinery Directive. The industrial robot may only be put into operation if the following preconditions are met:

- The industrial robot is integrated into a complete system.  
or: The industrial robot, together with other machinery, constitutes a complete system.  
or: All safety functions and safeguards required for operation in the complete machine as defined by the EC Machinery Directive have been added to the industrial robot.
- The complete system complies with the EC Machinery Directive. This has been confirmed by means of a conformity assessment procedure.

#### EC declaration of conformity

The system integrator must issue an EC declaration of conformity for the complete system in accordance with the Machinery Directive. The EC declaration of conformity forms the basis for the CE mark for the system. The industrial robot must always be operated in accordance with the applicable national laws, regulations and standards.

The robot controller has a CE mark in accordance with the EMC Directive and the Low Voltage Directive.

#### Declaration of incorporation

The partly completed machinery is supplied with a declaration of incorporation in accordance with Annex II B of the EC Machinery Directive 2006/42/EC. The assembly instructions and a list of essential requirements complied with in accordance with Annex I are integral parts of this declaration of incorporation.

The declaration of incorporation declares that the start-up of the partly completed machinery is not allowed until the partly completed machinery has been incorporated into machinery, or has been assembled with other parts to form machinery, and this machinery complies with the terms of the EC Machinery Directive, and the EC declaration of conformity is present in accordance with Annex II A.

#### 5.1.4 Terms used

Term	Description
Axis range	Range of each axis, in degrees or millimeters, within which it may move. The axis range must be defined for each axis.
Stopping distance	Stopping distance = reaction distance + braking distance The stopping distance is part of the danger zone.
Workspace	The manipulator is allowed to move within its workspace. The workspace is derived from the individual axis ranges.
Operator (User)	The user of the industrial robot can be the management, employer or delegated person responsible for use of the industrial robot.
Danger zone	The danger zone consists of the workspace and the stopping distances.
Service life	The service life of a safety-relevant component begins at the time of delivery of the component to the customer.  The service life is not affected by whether the component is used in a controller or elsewhere or not, as safety-relevant components are also subject to aging during storage
KCP	KUKA Control Panel  Teach pendant for the KR C2/KR C2 edition2005  The KCP has all the operator control and display functions required for operating and programming the industrial robot.
KUKA smartPAD	see "smartPAD"
Manipulator	The robot arm and the associated electrical installations
Safety zone	The safety zone is situated outside the danger zone.
Safety options	Generic term for options which make it possible to configure additional safe monitoring functions in addition to the standard safety functions.  Example: SafeOperation
smartPAD	Teach pendant for the KR C4  The smartPAD has all the operator control and display functions required for operating and programming the industrial robot.
Stop category 0	The drives are deactivated immediately and the brakes are applied. The manipulator and any external axes (optional) perform path-oriented braking.  <b>Note:</b> This stop category is called STOP 0 in this document.
Stop category 1	The manipulator and any external axes (optional) perform path-maintaining braking. The drives are deactivated after 1 s and the brakes are applied.  <b>Note:</b> This stop category is called STOP 1 in this document.
Stop category 2	The drives are not deactivated and the brakes are not applied. The manipulator and any external axes (optional) are braked with a normal braking ramp.  <b>Note:</b> This stop category is called STOP 2 in this document.
System integrator (plant integrator)	System integrators are people who safely integrate the industrial robot into a complete system and commission it.
T1	Test mode, Manual Reduced Velocity (<= 250 mm/s)
T2	Test mode, Manual High Velocity (> 250 mm/s permissible)
External axis	Axis of motion that does not belong to the manipulator, yet is controlled with the same controller. e.g. KUKA linear unit, turn-tilt table, Posiflex

## 5.2 Personnel

The following persons or groups of persons are defined for the industrial robot:

- User
- Personnel



All persons working with the industrial robot must have read and understood the industrial robot documentation, including the safety chapter.

### User

The user must observe the labor laws and regulations. This includes e.g.:

- The user must comply with his monitoring obligations.
- The user must carry out briefing at defined intervals.

### Personnel

Personnel must be instructed, before any work is commenced, in the type of work involved and what exactly it entails as well as any hazards which may exist. Instruction must be carried out regularly. Instruction is also required after particular incidents or technical modifications.

Personnel includes:

- System integrator
- Operators, subdivided into:
  - Start-up, maintenance and service personnel
  - Operating personnel
  - Cleaning personnel



Installation, exchange, adjustment, operation, maintenance and repair must be performed only as specified in the operating or assembly instructions for the relevant component of the industrial robot and only by personnel specially trained for this purpose.

### System integrator

The industrial robot is safely integrated into a complete system by the system integrator.

The system integrator is responsible for the following tasks:

- Installing the industrial robot
- Connecting the industrial robot
- Performing risk assessment
- Implementing the required safety functions and safeguards
- Issuing the EC declaration of conformity
- Attaching the CE mark
- Creating the operating instructions for the system

### Operators

The operator must meet the following preconditions:

- The operator must be trained for the work to be carried out.
- Work on the system must only be carried out by qualified personnel. These are people who, due to their specialist training, knowledge and experience, and their familiarization with the relevant standards, are able to assess the work to be carried out and detect any potential hazards.



Work on the electrical and mechanical equipment of the industrial robot may only be carried out by specially trained personnel.

## 5.3 Workspace, safety zone and danger zone

Workspaces are to be restricted to the necessary minimum size. A workspace must be safeguarded using appropriate safeguards.

The safeguards (e.g. safety gate) must be situated inside the safety zone. In the case of a stop, the manipulator and external axes (optional) are braked and come to a stop within the danger zone.

The danger zone consists of the workspace and the stopping distances of the manipulator and external axes (optional). It must be safeguarded by means of physical safeguards to prevent danger to persons or the risk of material damage.

## 5.4 Overview of protective equipment

The protective equipment of the mechanical component may include:

- Mechanical end stops
- Mechanical axis limitation (optional)
- Release device (optional)
- Brake release device (optional)
- Labeling of danger areas

Not all equipment is relevant for every mechanical component.

### 5.4.1 Mechanical end stops

Depending on the robot variant, the axis ranges of the main and wrist axes of the manipulator are partially limited by mechanical end stops.

Additional mechanical end stops can be installed on the external axes.



If the manipulator or an external axis hits an obstruction or a mechanical end stop or mechanical axis limitation, the manipulator can no longer be operated safely. The manipulator must be taken out of operation and KUKA Deutschland GmbH must be consulted before it is put back into operation.

### 5.4.2 Mechanical axis limitation (optional)

Some manipulators can be fitted with mechanical axis limitation systems in axes A1 to A3. The axis limitation systems restrict the working range to the required minimum. This increases personal safety and protection of the system.

In the case of manipulators that are not designed to be fitted with mechanical axis limitation, the workspace must be laid out in such a way that there is no danger to persons or material property, even in the absence of mechanical axis limitation.

If this is not possible, the workspace must be limited by means of photoelectric barriers, photoelectric curtains or obstacles on the system side. There must be no shearing or crushing hazards at the loading and transfer areas.



This option is not available for all robot models. Information on specific robot models can be obtained from KUKA Deutschland GmbH.

### 5.4.3 Options for moving the manipulator without drive energy



The system user is responsible for ensuring that the training of personnel with regard to the response to emergencies or exceptional situations also includes how the manipulator can be moved without drive energy.

#### Description

The following options are available for moving the manipulator without drive energy after an accident or malfunction:

- Release device (optional)

The release device can be used for the main axis drive motors and, depending on the robot variant, also for the wrist axis drive motors.

- Brake release device (option)

The brake release device is designed for robot variants whose motors are not freely accessible.

- Moving the wrist axes directly by hand

There is no release device available for the wrist axes of variants in the low payload category. This is not necessary because the wrist axes can be moved directly by hand.



Information about the options available for the various robot models and about how to use them can be found in the assembly and operating instructions for the robot or requested from KUKA Deutschland GmbH.

**NOTICE**

Moving the manipulator without drive energy can damage the motor brakes of the axes concerned. The motor must be replaced if the brake has been damaged. The manipulator may therefore be moved without drive energy only in emergencies, e.g. for rescuing persons.

### 5.4.4 Labeling on the industrial robot

All plates, labels, symbols and marks constitute safety-relevant parts of the industrial robot. They must not be modified or removed.

Labeling on the industrial robot consists of:

- Identification plates
- Warning signs
- Safety symbols
- Designation labels
- Cable markings
- Rating plates



Further information is contained in the technical data of the operating instructions or assembly instructions of the components of the industrial robot.

## 5.5 Safety measures

### 5.5.1 General safety measures

The industrial robot may only be used in perfect technical condition in accordance with its intended use and only by safety-conscious persons. Operator errors can result in personal injury and damage to property.

It is important to be prepared for possible movements of the industrial robot even after the robot controller has been switched off and locked out. Incorrect installation (e.g. overload) or mechanical defects (e.g. brake defect) can cause the manipulator or external axes to sag. If work is to be carried out on a switched-off industrial robot, the manipulator and external axes must first be moved into a position in which they are unable to move on their own, whether the payload is mounted or not. If this is not possible, the manipulator and external axes must be secured by appropriate means.



**DANGER** In the absence of operational safety functions and safeguards, the industrial robot can cause personal injury or material damage. If safety functions or safeguards are dismantled or deactivated, the industrial robot may not be operated.



**DANGER** Standing underneath the robot arm can cause death or injuries. For this reason, standing underneath the robot arm is prohibited!



**CAUTION** The motors reach temperatures during operation which can cause burns to the skin. Contact must be avoided. Appropriate safety precautions must be taken, e.g. protective gloves must be worn.

#### KCP/smartPAD

The user must ensure that the industrial robot is only operated with the KCP/smartPAD by authorized persons.

If more than one KCP/smartPAD is used in the overall system, it must be ensured that each device is unambiguously assigned to the corresponding industrial robot. They must not be interchanged.



**WARNING** The operator must ensure that decoupled KCPs/smart-PADs are immediately removed from the system and stored out of sight and reach of personnel working on the industrial robot. This serves to prevent operational and non-operational EMERGENCY STOP devices from becoming interchanged. Failure to observe this precaution may result in death, severe injuries or considerable damage to property.

#### External keyboard, external mouse

An external keyboard and/or external mouse may only be used if the following conditions are met:

- Start-up or maintenance work is being carried out.
- The drives are switched off.
- There are no persons in the danger zone.

The KCP/smartPAD must not be used as long as an external keyboard and/or external mouse are connected to the control cabinet.

The external keyboard and/or external mouse must be removed from the control cabinet as soon as the start-up or maintenance work is completed or the KCP/smartPAD is connected.

<b>Modifications</b>	<p>After modifications to the industrial robot, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.</p> <p>New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).</p> <p>After modifications to the industrial robot, existing programs must always be tested first in Manual Reduced Velocity mode (T1). This applies to all components of the industrial robot and includes e.g. modifications of the external axes or to the software and configuration settings.</p>
<b>Faults</b>	<p>The following tasks must be carried out in the case of faults in the industrial robot:</p> <ul style="list-style-type: none"><li>■ Switch off the robot controller and secure it (e.g. with a padlock) to prevent unauthorized persons from switching it on again.</li><li>■ Indicate the fault by means of a label with a corresponding warning (tag-out).</li><li>■ Keep a record of the faults.</li><li>■ Eliminate the fault and carry out a function test.</li></ul>

### 5.5.2 Transportation

<b>Manipulator</b>	<p>The prescribed transport position of the manipulator must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot.</p> <p>Avoid vibrations and impacts during transportation in order to prevent damage to the manipulator.</p>
<b>Robot controller</b>	<p>The prescribed transport position of the robot controller must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the robot controller.</p> <p>Avoid vibrations and impacts during transportation in order to prevent damage to the robot controller.</p>
<b>External axis (optional)</b>	<p>The prescribed transport position of the external axis (e.g. KUKA linear unit, turn-tilt table, positioner) must be observed. Transportation must be carried out in accordance with the operating instructions or assembly instructions of the external axis.</p>

### 5.5.3 Start-up and recommissioning

Before starting up systems and devices for the first time, a check must be carried out to ensure that the systems and devices are complete and operational, that they can be operated safely and that any damage is detected.

The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety circuits must also be tested.



The passwords for logging onto the KUKA System Software as "Expert" and "Administrator" must be changed before start-up and must only be communicated to authorized personnel.

**WARNING**

The robot controller is preconfigured for the specific industrial robot. If cables are interchanged, the manipulator and the external axes (optional) may receive incorrect data and can thus cause personal injury or material damage. If a system consists of more than one manipulator, always connect the connecting cables to the manipulators and their corresponding robot controllers.



If additional components (e.g. cables), which are not part of the scope of supply of KUKA Deutschland GmbH, are integrated into the industrial robot, the user is responsible for ensuring that these components do not adversely affect or disable safety functions.

**NOTICE**

If the internal cabinet temperature of the robot controller differs greatly from the ambient temperature, condensation can form, which may cause damage to the electrical components. Do not put the robot controller into operation until the internal temperature of the cabinet has adjusted to the ambient temperature.

**Function test**

The following tests must be carried out before start-up and recommissioning:

It must be ensured that:

- The industrial robot is correctly installed and fastened in accordance with the specifications in the documentation.
- There is no damage to the robot that could be attributed to external forces. Example: Dents or abrasion that could be caused by an impact or collision.

**WARNING**

In the case of such damage, the affected components must be exchanged. In particular, the motor and counterbalancing system must be checked carefully.

External forces can cause non-visible damage. For example, it can lead to a gradual loss of drive power from the motor, resulting in unintended movements of the manipulator. Death, injuries or considerable damage to property may otherwise result.

- There are no foreign bodies or loose parts on the industrial robot.
- All required safety equipment is correctly installed and operational.
- The power supply ratings of the industrial robot correspond to the local supply voltage and mains type.
- The ground conductor and the equipotential bonding cable are sufficiently rated and correctly connected.
- The connecting cables are correctly connected and the connectors are locked.

**5.5.4 Manual mode**

Manual mode is the mode for setup work. Setup work is all the tasks that have to be carried out on the industrial robot to enable automatic operation. Setup work includes:

- Jog mode
- Teaching
- Programming
- Program verification

The following must be taken into consideration in manual mode:

- If the drives are not required, they must be switched off to prevent the manipulator or the external axes (optional) from being moved unintentionally.

- New or modified programs must always be tested first in Manual Reduced Velocity mode (T1).
- The manipulator, tooling or external axes (optional) must never touch or project beyond the safety fence.
- Workpieces, tooling and other objects must not become jammed as a result of the industrial robot motion, nor must they lead to short-circuits or be liable to fall off.
- All setup work must be carried out, where possible, from outside the safeguarded area.

If the setup work has to be carried out inside the safeguarded area, the following must be taken into consideration:

**In Manual Reduced Velocity mode (T1):**

- If it can be avoided, there must be no other persons inside the safeguarded area.
- If it is necessary for there to be several persons inside the safeguarded area, the following must be observed:
- Each person must have an enabling device.
  - All persons must have an unimpeded view of the industrial robot.
  - Eye-contact between all persons must be possible at all times.
- The operator must be so positioned that he can see into the danger area and get out of harm's way.

**In Manual High Velocity mode (T2):**

- This mode may only be used if the application requires a test at a velocity higher than possible in T1 mode.
- Teaching and programming are not permissible in this operating mode.
- Before commencing the test, the operator must ensure that the enabling devices are operational.
- The operator must be positioned outside the danger zone.
- There must be no other persons inside the safeguarded area. It is the responsibility of the operator to ensure this.

### 5.5.5 Automatic mode

Automatic mode is only permissible in compliance with the following safety measures:

- All safety equipment and safeguards are present and operational.
- There are no persons in the system.
- The defined working procedures are adhered to.

If the manipulator or an external axis (optional) comes to a standstill for no apparent reason, the danger zone must not be entered until an EMERGENCY STOP has been triggered.

### 5.5.6 Maintenance and repair

After maintenance and repair work, checks must be carried out to ensure the required safety level. The valid national or regional work safety regulations must be observed for this check. The correct functioning of all safety functions must also be tested.

The purpose of maintenance and repair work is to ensure that the system is kept operational or, in the event of a fault, to return the system to an operational state. Repair work includes troubleshooting in addition to the actual repair itself.

The following safety measures must be carried out when working on the industrial robot:

- Carry out work outside the danger zone. If work inside the danger zone is necessary, the user must define additional safety measures to ensure the safe protection of personnel.
- Switch off the industrial robot and secure it (e.g. with a padlock) to prevent it from being switched on again. If it is necessary to carry out work with the robot controller switched on, the user must define additional safety measures to ensure the safe protection of personnel.
- If it is necessary to carry out work with the robot controller switched on, this may only be done in operating mode T1.
- Label the system with a sign indicating that work is in progress. This sign must remain in place, even during temporary interruptions to the work.
- The EMERGENCY STOP devices must remain active. If safety functions or safeguards are deactivated during maintenance or repair work, they must be reactivated immediately after the work is completed.



**DANGER** Before work is commenced on live parts of the robot system, the main switch must be turned off and secured against being switched on again. The system must then be checked to ensure that it is deenergized.  
It is not sufficient, before commencing work on live parts, to execute an EMERGENCY STOP or a safety stop, or to switch off the drives, as this does not disconnect the robot system from the mains power supply. Parts remain energized. Death or severe injuries may result.

Faulty components must be replaced using new components with the same article numbers or equivalent components approved by KUKA Deutschland GmbH for this purpose.

Cleaning and preventive maintenance work is to be carried out in accordance with the operating instructions.

#### Robot controller

Even when the robot controller is switched off, parts connected to peripheral devices may still carry voltage. The external power sources must therefore be switched off if work is to be carried out on the robot controller.

The ESD regulations must be adhered to when working on components in the robot controller.

Voltages in excess of 50 V (up to 600 V) can be present in various components for several minutes after the robot controller has been switched off! To prevent life-threatening injuries, no work may be carried out on the industrial robot in this time.

Water and dust must be prevented from entering the robot controller.

#### Counterbalancing system

Some robot variants are equipped with a hydropneumatic, spring or gas cylinder counterbalancing system.

The hydropneumatic and gas cylinder counterbalancing systems are pressure equipment and, as such, are subject to obligatory equipment monitoring and the provisions of the Pressure Equipment Directive.

The user must comply with the applicable national laws, regulations and standards pertaining to pressure equipment.

Inspection intervals in Germany in accordance with Industrial Safety Order, Sections 14 and 15. Inspection by the user before commissioning at the installation site.

The following safety measures must be carried out when working on the counterbalancing system:

- The manipulator assemblies supported by the counterbalancing systems must be secured.
- Work on the counterbalancing systems must only be carried out by qualified personnel.

#### Hazardous substances

The following safety measures must be carried out when handling hazardous substances:

- Avoid prolonged and repeated intensive contact with the skin.
- Avoid breathing in oil spray or vapors.
- Clean skin and apply skin cream.



To ensure safe use of our products, we recommend regularly requesting up-to-date safety data sheets for hazardous substances.

#### 5.5.7 Decommissioning, storage and disposal

The industrial robot must be decommissioned, stored and disposed of in accordance with the applicable national laws, regulations and standards.

#### 5.6 Applied norms and regulations

Name/Edition	Definition
<b>2006/42/EU:2006</b>	<b>Machinery Directive:</b> Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast)
<b>2014/68/EU:2014</b>	<b>Pressure Equipment Directive:</b> Directive 2014/68/EU of the European Parliament and of the Council dated 15 May 2014 on the approximation of the laws of the Member States concerning pressure equipment  (Only applicable for robots with hydropneumatic counterbalancing system.)
<b>EN ISO 13850:2015</b>	<b>Safety of machinery:</b> Emergency stop - Principles for design
<b>EN ISO 13849-1:2015</b>	<b>Safety of machinery:</b> Safety-related parts of control systems - Part 1: General principles of design
<b>EN ISO 13849-2:2012</b>	<b>Safety of machinery:</b> Safety-related parts of control systems - Part 2: Validation
<b>EN ISO 12100:2010</b>	<b>Safety of machinery:</b> General principles of design, risk assessment and risk reduction
<b>EN ISO 10218-1:2011</b>	<b>Industrial robots – Safety requirements:</b> Part 1: Robots  <b>Note:</b> Content equivalent to <b>ANSI/RIA R.15.06-2012, Part 1</b>

<b>EN 614-1:2006+A1:2009</b>	<b>Safety of machinery:</b> Ergonomic design principles - Part 1: Terms and general principles
<b>EN 61000-6-2:2005</b>	<b>Electromagnetic compatibility (EMC):</b> Part 6-2: Generic standards; Immunity for industrial environments
<b>EN 61000-6-4:2007 + A1:2011</b>	<b>Electromagnetic compatibility (EMC):</b> Part 6-4: Generic standards; Emission standard for industrial environments
<b>EN 60204-1:2006/A1:2009</b>	<b>Safety of machinery:</b> Electrical equipment of machines - Part 1: General requirements



## 6 Planning

### 6.1 Information for planning

In the planning and design phase, care must be taken regarding the functions or applications to be executed by the kinematic system. The following conditions can lead to premature wear. They necessitate shorter maintenance intervals and/or earlier exchange of components. In addition, the permissible operating parameters specified in the technical data must be taken into account and observed during planning.

- Continuous operation near temperature limits or in abrasive environments
- Continuous operation close to the performance limits, e.g. high rpm of an axis
- High duty cycle of individual axes
- Monotonous motion profiles, e.g. short, frequently recurring axis motions
- Static axis positions, e.g. continuous vertical position of a wrist axis
- External forces (process forces) acting on the robot

If one or more of these conditions are to apply during operation of the kinematic system, KUKA Deutschland GmbH must be consulted.

If the robot reaches its corresponding operation limit or if it is operated near the limit for a period of time, the built-in monitoring functions come into effect and the robot is automatically switched off.

This protective function can limit the availability of the robot system.

### 6.2 Mounting base with centering

#### Description


The mounting base with centering is used when the robot is fastened to the floor, i.e. directly on a concrete foundation.

The mounting base with centering consists of:

- Bedplates
- Resin-bonded anchors (chemical anchors)
- Fastening elements

This mounting variant requires a level and smooth surface on a concrete foundation with adequate load bearing capacity. The concrete foundation must be able to accommodate the forces occurring during operation. There must be no layers of insulation or screed between the bedplates and the concrete foundation.

The minimum dimensions must be observed.

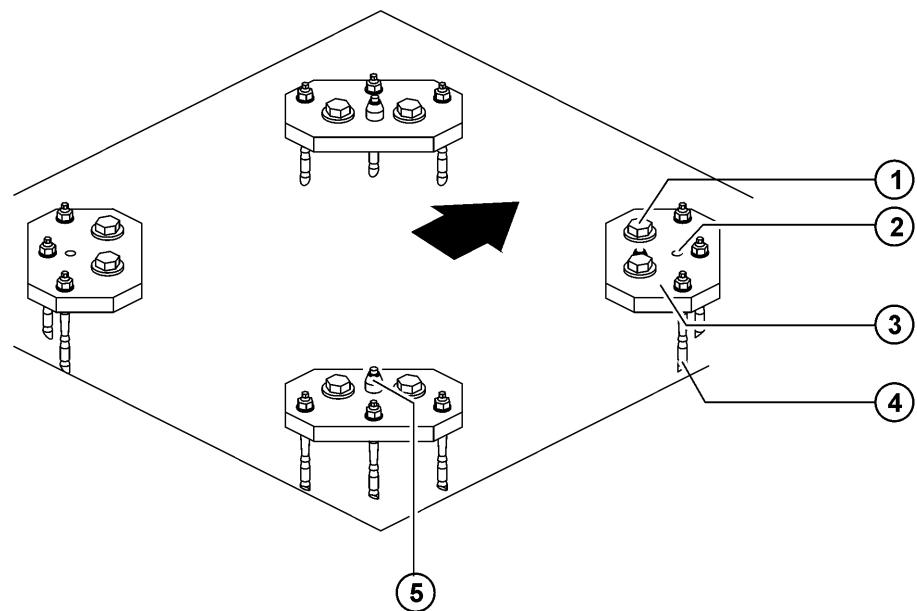

**Fig. 6-1: Mounting base**

- |                                  |                        |
|----------------------------------|------------------------|
| 1 Hexagon bolt                   | 4 Resin-bonded anchor  |
| 2 M20 thread for adjusting screw | 5 Pin with Allen screw |
| 3 Bedplate                       |                        |


**Grade of concrete  
for foundations**

When producing foundations from concrete, observe the load-bearing capacity of the ground and the country-specific construction regulations. There must be no layers of insulation or screed between the bedplates and the concrete foundation. The quality of the concrete must meet the requirements of the following standard:

- C20/25 according to DIN EN 206-1:2001/DIN 1045-2:2008

**Dimensioned  
drawing**

The following illustrations provide all the necessary information on the mounting base, together with the required foundation data. The specified foundation dimensions refer to the safe transmission of the foundation loads into the foundation and not to the stability of the foundation.

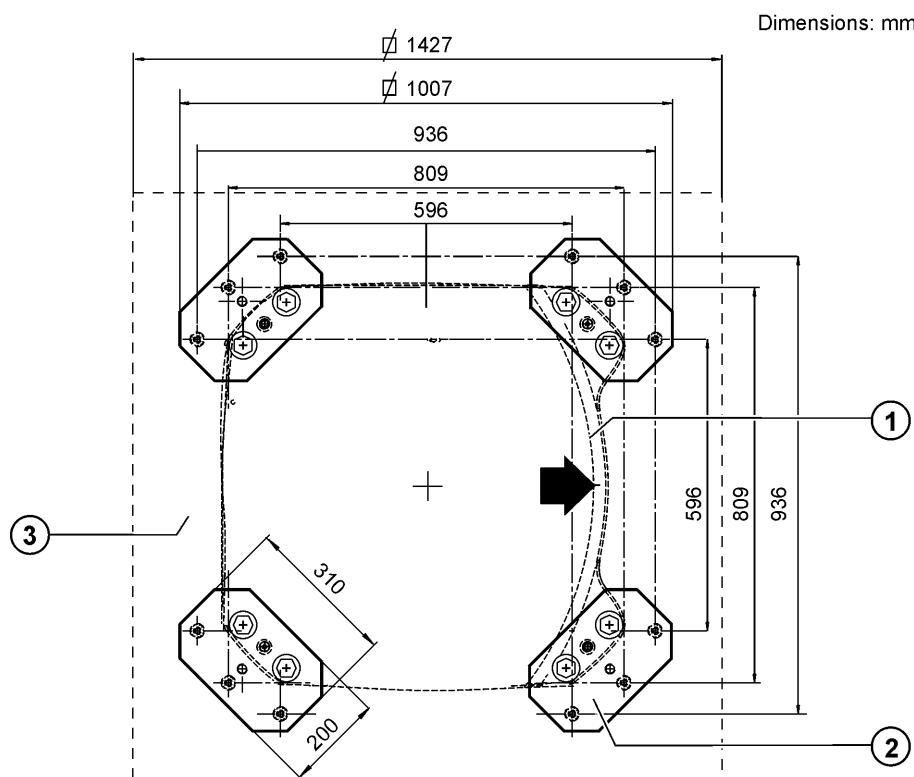


**Fig. 6-2: Mounting base, dimensioned drawing**

- 1 Robot
- 2 Bedplate
- 3 Concrete foundation

To ensure that the anchor forces are safely transmitted to the foundation, observe the dimensions for concrete foundations specified in the following illustration.

**NOTICE** The dimensions specified for the distance to the edge are valid for non-reinforced or normally reinforced concrete without verification of concrete edge failure. For safety against concrete edge failure in accordance with ETAG 001 Annex C, the concrete foundation must be provided with an appropriate edge reinforcement.

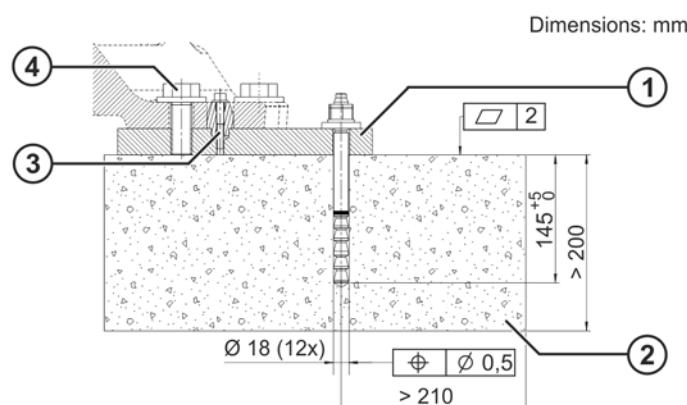

**Fig. 6-3: Cross-section of foundations**

- 1 Bedplate
- 2 Concrete foundation
- 3 Pin
- 4 Hexagon bolt


## 6.3 Machine frame mounting

### Description

The "machine frame mounting" assembly with centering is used when the robot is fastened on a steel structure, a booster frame (pedestal) or a KUKA linear unit. This assembly is also used if the manipulator is installed in an inverted position, i.e. on the ceiling. It must be ensured that the substructure is able to withstand safely the forces occurring during operation (foundation loads). The following diagram contains all the necessary information that must be observed when preparing the mounting surface ([>>> Fig. 6-4](#) ).

The machine frame mounting assembly consists of:

- Pins with fasteners
- Hexagon bolts with conical spring washers

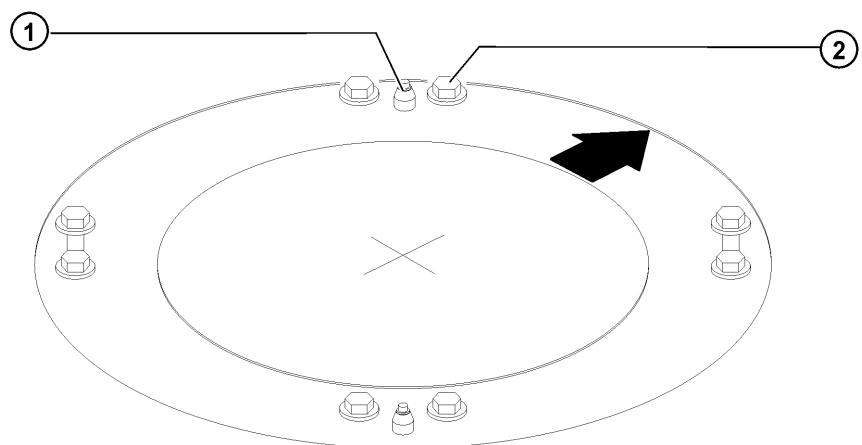


**Fig. 6-4: Machine frame mounting**

- 1 Pin
- 2 Hexagon bolt

### Dimensioned drawing

The following illustration provides all the necessary information on machine frame mounting, together with the required foundation data.

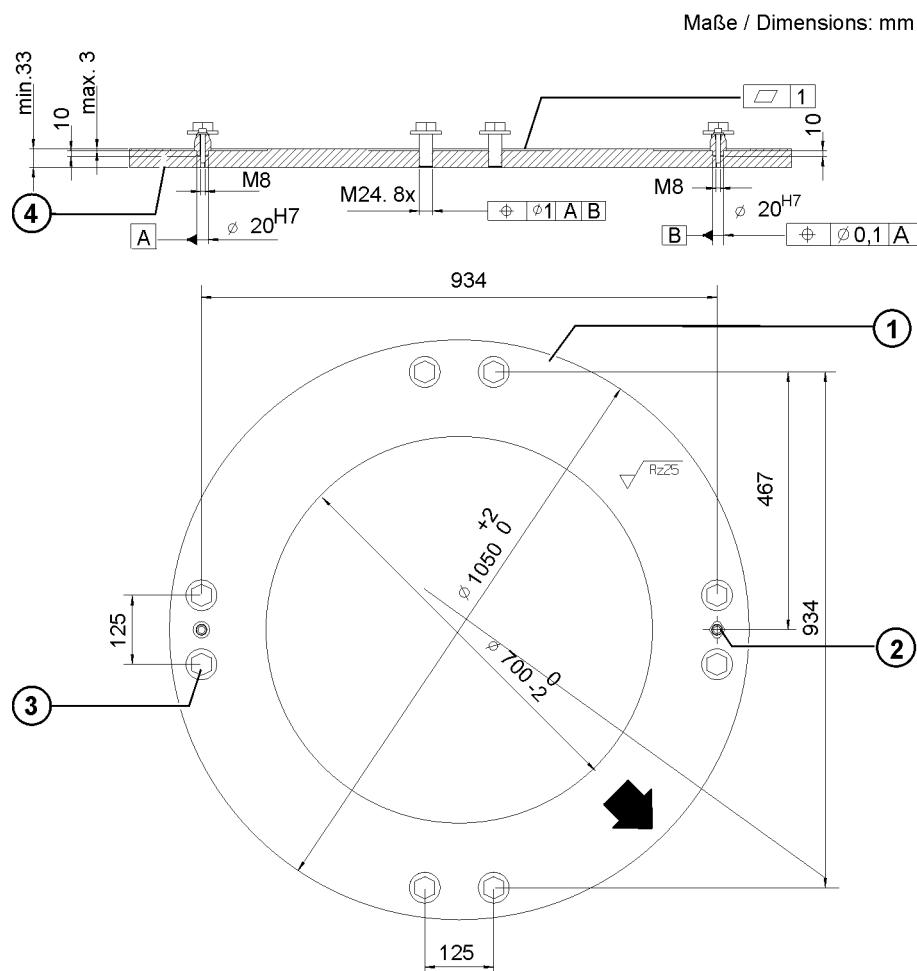

**Fig. 6-5: Machine frame mounting, dimensioned drawing**

- |                    |                     |
|--------------------|---------------------|
| 1 Mounting surface | 3 Hexagon bolt (8x) |
| 2 Pin              | 4 Steel structure   |

## 6.4 Connecting cables and interfaces

### Connecting cables

The connecting cables comprise all the cables for transferring energy and signals between the robot and the robot controller. They are connected to the robot junction boxes with connectors. The set of connecting cables comprises:

- Motor cable, X20 - X30
- Data cable X21 - X31
- Ground conductor (optional)

Depending on the specification of the robot, various connecting cables are used. Cable lengths of 7 m, 15 m, 25 m, 35 m and 50 m are available. The maximum length of the connecting cables must not exceed 50 m. Thus if the robot is operated on a linear unit which has its own energy supply chain these cables must also be taken into account.


For the connecting cables, an additional ground conductor is always required to provide a low-resistance connection between the robot and the control cabinet in accordance with DIN EN 60204. The ground conductors are connected via ring cable lugs. The threaded bolt for connecting the ground conductor is located on the base frame of the robot.

The following points must be observed when planning and routing the connecting cables:

- The bending radius for fixed routing must not be less than 150 mm for motor cables and 60 mm for control cables.
- Protect cables against exposure to mechanical stress.
- Route the cables without mechanical stress – no tensile forces on the connectors
- Cables are only to be installed indoors.
- Observe the permissible temperature range (fixed installation) of 263 K (-10 °C) to 343 K (+70 °C).
- Route the motor cables and the data cables separately in metal ducts; if necessary, additional measures must be taken to ensure electromagnetic compatibility (EMC).

### Interface for energy supply systems

The robot can be equipped with an energy supply system between axis 1 and axis 3 and a second energy supply system between axis 3 and axis 6. The A1 interface required for this is located on the rear of the base frame, the A3 interface is located on the side of the arm and the interface for axis 6 is located on the robot tool. Depending on the application, the interfaces differ in design and scope. They can be equipped e.g. with connections for cables and hoses. Detailed information on the connector pin allocation, threaded unions, etc. is given in separate documentation.

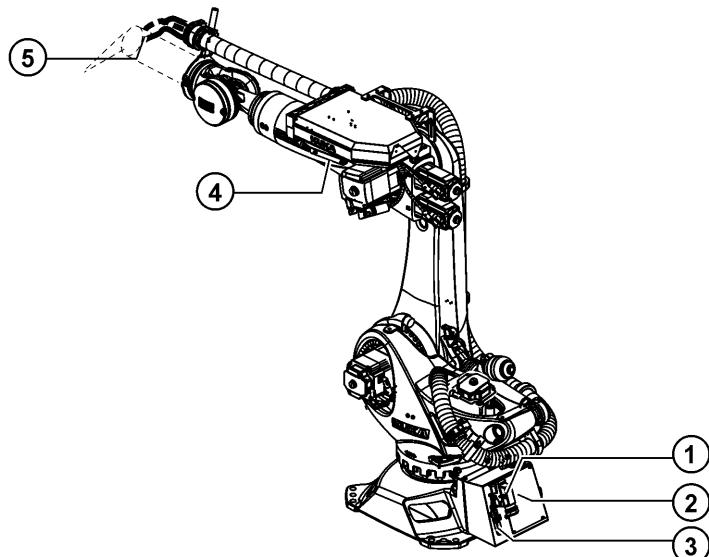

**Fig. 6-6: Interfaces on the robot**

- |                                 |                           |
|---------------------------------|---------------------------|
| 1 Connection, motor cable X30   | 4 Interface, axis 3, arm  |
| 2 Interface, axis 1, base frame | 5 Interface, axis 6, tool |
| 3 Connection, data cable, X31   |                           |

## 7 Transportation


### 7.1 Transporting the robot arm

Before transporting the robot, always move the robot into its transport position. It must be ensured that the robot is stable while it is being transported. The robot must remain in its transport position until it has been fastened in position. Before the robot is lifted, it must be ensured that it is free from obstructions. Remove all transport safeguards, such as nails and screws, in advance. First remove any rust or glue on contact surfaces.

#### Transport position

The robot must be in the transport position ([>>> Fig. 7-1](#)) before it can be transported. The robot is in the transport position when the axes are in the following positions:


Axis	A1	A2	A3	A4	A5	A6
Transport position	0°	-140°	+150°	0°	-120°	0°

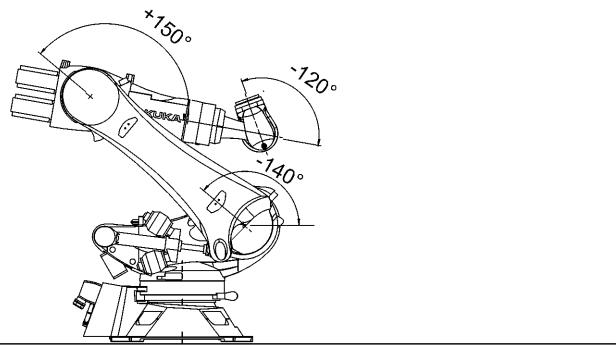

**Fig. 7-1: Transport position**

#### Transport dimensions

The transportation dimensions ([>>> Fig. 7-2](#)) for the robot can be noted from the following diagram. The position of the center of gravity and the weight vary according to the specific configuration and the position of axes 2 and 3. The specified dimensions refer to the robot without equipment.

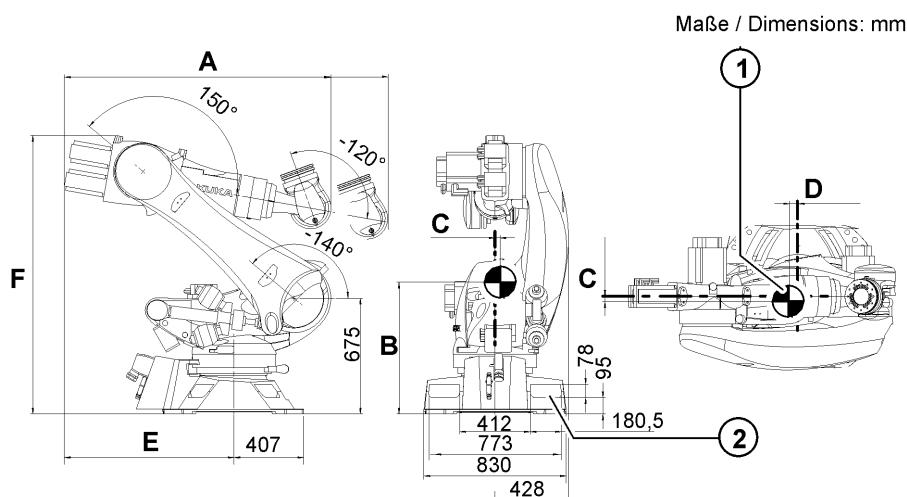

**Fig. 7-2: Transport dimensions**

- 1 Center of gravity
- 2 Fork slots

## Transport dimensions and centers of gravity

Robot with reach	A	B	C	D	E	F
R2700	1747	743	43	31	997	1625
R2900	1747	788	47	81	1150	1754
R3100	1943	789	46	62	1150	1754

**Transportation**

The robot can be transported by fork lift truck or using lifting tackle.



**WARNING** Use of unsuitable handling equipment may result in damage to the robot or injury to persons. Only use authorized handling equipment with a sufficient load-bearing capacity. Only transport the robot in the manner specified here.


**Transportation by fork lift truck**

For transport by fork lift truck ([>>> Fig. 7-3](#)), two fork slots are provided in the base frame. The robot can be picked up by the fork lift truck from the front and rear. The base frame must not be damaged when inserting the forks into the fork slots. The fork lift truck must have a minimum payload capacity of 2.0 t and an adequate fork length.

For installation situations in which the fork slots are not accessible, the “Recovery aid” accessory is available. With this device, the robot can also be transported using the fork lift truck.



**NOTICE** Avoid excessive loading of the fork slots through undue inward or outward movement of hydraulically adjustable forks of the fork lift truck. Failure to do so may result in material damage.

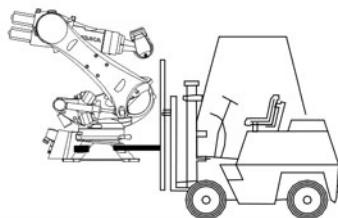

**Fig. 7-3: Transportation by fork lift truck**

**Transportation with lifting tackle**


The robot can also be transported using lifting tackle ([>>> Fig. 7-4](#)). For this, it must be in the transport position. The lifting tackle is attached at 3 points to M16 DIN 580 eyebolts. All the legs must be routed as shown in the following illustration so that the robot is not damaged. Installed tools and items of equipment can cause undesirable shifts in the center of gravity. Items of equipment, especially energy supply systems, must be removed to the extent necessary to avoid them being damaged by the legs of the lifting tackle during transportation.

All the legs are labeled. Leg G3 is provided with an adjustable chain that must be adjusted so that the robot is suspended vertically from the crane. If necessary, the robot must be set down again and the chain readjusted.



**WARNING** The robot may tip during transportation. Risk of personal injury and damage to property.

If the robot is being transported using lifting tackle, special care must be exercised to prevent it from tipping. Additional safeguarding measures must be taken. It is forbidden to pick up the robot in any other way using a crane!

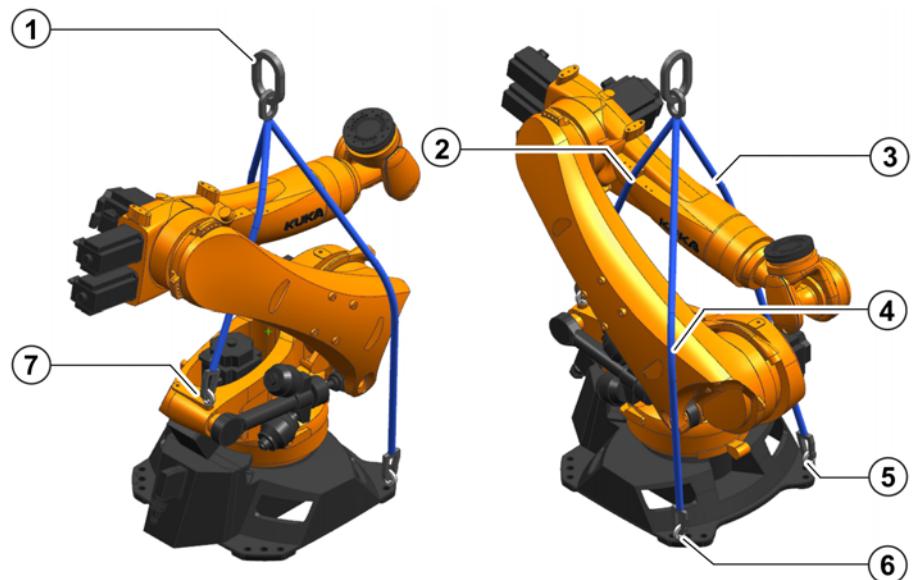

**Fig. 7-4: Transportation using lifting tackle**

- 1 Lifting tackle assembly
- 2 Leg G3
- 3 Leg G1
- 4 Leg G2
- 5 M16 eyebolt, base frame, front, left
- 6 M16 eyebolt, base frame, front, right
- 7 M16 eyebolt, rotating column, rear



## 8 Options

### 8.1 Mounting flange, adapter (optional)


#### Description

This mounting flange (adapter) ([>>> Fig. 8-1](#)) can be fitted on the 150/180/210 kg in-line wrist to convert it to a mounting flange with D=160. This enables e.g. tools to be used which are dimensioned for the in-line wrist with the D=160 mounting flange. The design of the flange also allows mounting of the holder A6 of the energy supply systems A3-A6.

When this adapter is mounted, the distance between the intersection of A4/A5 and the face of the mounting flange is offset forward by 25 mm.

The reference point for the load center of gravity remains unchanged and thus corresponds to the values for the in-line wrist IW 150/180/210. The design of the adapter is similar to DIN/ISO 9409-1-A.

The mounting flange is depicted ([>>> Fig. 8-1](#)) with axes 4 and 6 in the zero position. The symbol  $X_m$  indicates the position of the locating element (bushing) in the zero position.

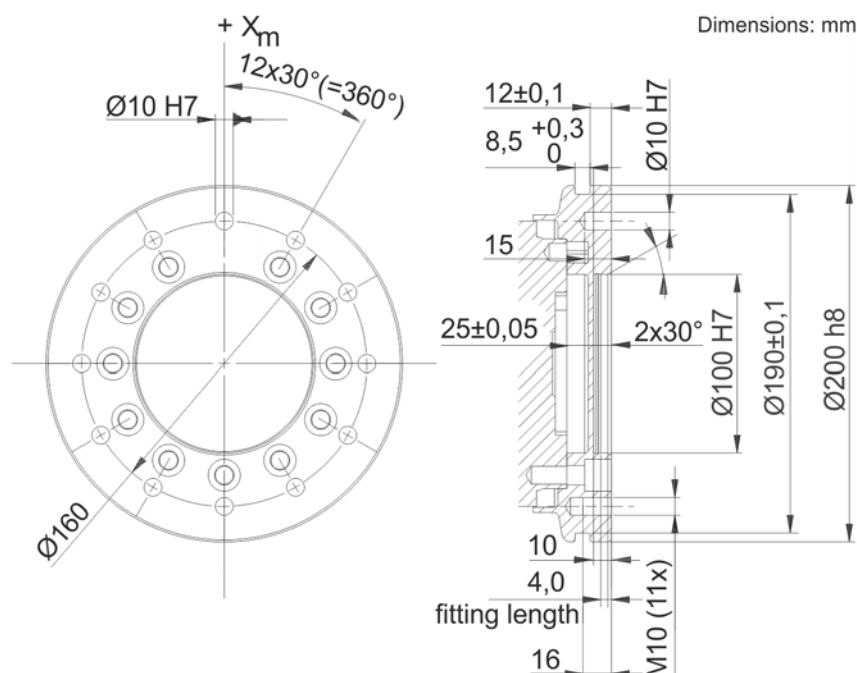

**Fig. 8-1: Mounting flange, adapter**

#### 1 Fitting length

Mounting flange, adapter	IW 150/180/210 to IW 210/240
Hole circle	160 mm
Screw grade	10.9
Screw size	M10
Number of fastening threads	11
Clamping length	1.5 x nominal diameter
Depth of engagement	min. 12 mm, max. 16 mm
Locating element	10 <sup>H7</sup>

## 8.2 Control cable for single axis (optional)

**Description** The control cable for single axis is used when additional axes (e.g. KUKA linear unit or turntables) are controlled via the robot. In this case, the control cable is guided from the RDC box through the hollow shaft of axis 1 to a connector interface on the push-in module.

## 8.3 Release device (optional)

**Description** The release device can be used to move the manipulator manually after an accident or malfunction. The release device can be used for the motors of axes 1 to 5. It cannot be used for axis 6, as this motor is not accessible. It is only for use in exceptional circumstances and emergencies (e.g. for freeing people).

The release device is mounted on the base frame of the manipulator. This assembly also includes a ratchet and a set of plates with one plate for each motor. The plate specifies the direction of rotation for the ratchet and shows the corresponding direction of motion of the manipulator.

## 9 KUKA Service

### 9.1 Requesting support

**Introduction** This documentation provides information on operation and operator control, and provides assistance with troubleshooting. For further assistance, please contact your local KUKA subsidiary.

**Information** **The following information is required for processing a support request:**

- Description of the problem, including information about the duration and frequency of the fault
- As comprehensive information as possible about the hardware and software components of the overall system

The following list gives an indication of the information which is relevant in many cases:

- Model and serial number of the kinematic system, e.g. the manipulator
- Model and serial number of the controller
- Model and serial number of the energy supply system
- Designation and version of the system software
- Designations and versions of other software components or modifications
- Diagnostic package KRCDiag
  - Additionally for KUKA Sunrise: Existing projects including applications
  - For versions of KUKA System Software older than V8: Archive of the software (KRCDiag is not yet available here.)
- Application used
- External axes used

### 9.2 KUKA Customer Support

**Availability** KUKA Customer Support is available in many countries. Please do not hesitate to contact us if you have any questions.

**Argentina** Ruben Costantini S.A. (Agency)  
Luis Angel Huergo 13 20  
Parque Industrial  
2400 San Francisco (CBA)  
Argentina  
Tel. +54 3564 421033  
Fax +54 3564 428877  
[ventas@costantini-sa.com](mailto:ventas@costantini-sa.com)

**Australia** KUKA Robotics Australia Pty Ltd  
45 Fennell Street  
Port Melbourne VIC 3207  
Australia  
Tel. +61 3 9939 9656  
[info@kuka-robotics.com.au](mailto:info@kuka-robotics.com.au)  
[www.kuka-robotics.com.au](http://www.kuka-robotics.com.au)

<b>Belgium</b>	KUKA Automatisering + Robots N.V. Centrum Zuid 1031 3530 Houthalen Belgium Tel. +32 11 516160 Fax +32 11 526794 <a href="mailto:info@kuka.be">info@kuka.be</a> <a href="http://www.kuka.be">www.kuka.be</a>
<b>Brazil</b>	KUKA Roboter do Brasil Ltda. Travessa Claudio Armando, nº 171 Bloco 5 - Galpões 51/52 Bairro Assunção CEP 09861-7630 São Bernardo do Campo - SP Brazil Tel. +55 11 4942-8299 Fax +55 11 2201-7883 <a href="mailto:info@kuka-roboter.com.br">info@kuka-roboter.com.br</a> <a href="http://www.kuka-roboter.com.br">www.kuka-roboter.com.br</a>
<b>Chile</b>	Robotec S.A. (Agency) Santiago de Chile Chile Tel. +56 2 331-5951 Fax +56 2 331-5952 <a href="mailto:robotec@robotec.cl">robotec@robotec.cl</a> <a href="http://www.robotec.cl">www.robotec.cl</a>
<b>China</b>	KUKA Robotics China Co., Ltd. No. 889 Kungang Road Xiaokunshan Town Songjiang District 201614 Shanghai P. R. China Tel. +86 21 5707 2688 Fax +86 21 5707 2603 <a href="mailto:info@kuka-robotics.cn">info@kuka-robotics.cn</a> <a href="http://www.kuka-robotics.com">www.kuka-robotics.com</a>
<b>Germany</b>	KUKA Deutschland GmbH Zugspitzstr. 140 86165 Augsburg Germany Tel. +49 821 797-1926 Fax +49 821 797-41 1926 <a href="mailto:Hotline.robotics.de@kuka.com">Hotline.robotics.de@kuka.com</a> <a href="http://www.kuka.com">www.kuka.com</a>

<b>France</b>	KUKA Automatisme + Robotique SAS Techvallée 6, Avenue du Parc 91140 Villebon S/Yvette France Tel. +33 1 6931660-0 Fax +33 1 6931660-1 <a href="mailto:commercial@kuka.fr">commercial@kuka.fr</a> <a href="http://www.kuka.fr">www.kuka.fr</a>
<b>India</b>	KUKA Robotics India Pvt. Ltd. Office Number-7, German Centre, Level 12, Building No. - 9B DLF Cyber City Phase III 122 002 Gurgaon Haryana India Tel. +91 124 4635774 Fax +91 124 4635773 <a href="mailto:info@kuka.in">info@kuka.in</a> <a href="http://www.kuka.in">www.kuka.in</a>
<b>Italy</b>	KUKA Roboter Italia S.p.A. Via Pavia 9/a - int.6 10098 Rivoli (TO) Italy Tel. +39 011 959-5013 Fax +39 011 959-5141 <a href="mailto:kuka@kuka.it">kuka@kuka.it</a> <a href="http://www.kuka.it">www.kuka.it</a>
<b>Japan</b>	KUKA Japan K.K. YBP Technical Center 134 Godo-cho, Hodogaya-ku Yokohama, Kanagawa 240 0005 Japan Tel. +81 45 744 7531 Fax +81 45 744 7541 <a href="mailto:info@kuka.co.jp">info@kuka.co.jp</a>
<b>Canada</b>	KUKA Robotics Canada Ltd. 6710 Maritz Drive - Unit 4 Mississauga L5W 0A1 Ontario Canada Tel. +1 905 670-8600 Fax +1 905 670-8604 <a href="mailto:info@kukarobotics.com">info@kukarobotics.com</a> <a href="http://www.kuka-robotics.com/canada">www.kuka-robotics.com/canada</a>

<b>Korea</b>	KUKA Robotics Korea Co. Ltd. RIT Center 306, Gyeonggi Technopark 1271-11 Sa 3-dong, Sangnok-gu Ansan City, Gyeonggi Do 426-901 Korea Tel. +82 31 501-1451 Fax +82 31 501-1461 <a href="mailto:info@kukakorea.com">info@kukakorea.com</a>
<b>Malaysia</b>	KUKA Robot Automation (M) Sdn Bhd South East Asia Regional Office No. 7, Jalan TPP 6/6 Taman Perindustrian Puchong 47100 Puchong Selangor Malaysia Tel. +60 (03) 8063-1792 Fax +60 (03) 8060-7386 <a href="mailto:info@kuka.com.my">info@kuka.com.my</a>
<b>Mexico</b>	KUKA de México S. de R.L. de C.V. Progreso #8 Col. Centro Industrial Puente de Vigas Tlalnepantla de Baz 54020 Estado de México Mexico Tel. +52 55 5203-8407 Fax +52 55 5203-8148 <a href="mailto:info@kuka.com.mx">info@kuka.com.mx</a> <a href="http://www.kuka-robotics.com/mexico">www.kuka-robotics.com/mexico</a>
<b>Norway</b>	KUKA Sveiseanlegg + Roboter Sentrumsvegen 5 2867 Hov Norway Tel. +47 61 18 91 30 Fax +47 61 18 62 00 <a href="mailto:info@kuka.no">info@kuka.no</a>
<b>Austria</b>	KUKA Roboter CEE GmbH Gruberstraße 2-4 4020 Linz Austria Tel. +43 7 32 78 47 52 Fax +43 7 32 79 38 80 <a href="mailto:office@kuka-roboter.at">office@kuka-roboter.at</a> <a href="http://www.kuka.at">www.kuka.at</a>

<b>Poland</b>	KUKA Roboter CEE GmbH Poland Spółka z ograniczoną odpowiedzialnością Oddział w Polsce Ul. Porcelanowa 10 40-246 Katowice Poland Tel. +48 327 30 32 13 or -14 Fax +48 327 30 32 26 ServicePL@kuka-roboter.de
<b>Portugal</b>	KUKA Robots IBÉRICA, S.A. Rua do Alto da Guerra n° 50 Armazém 04 2910 011 Setúbal Portugal Tel. +351 265 729 780 Fax +351 265 729 782 info.portugal@kukapt.com www.kuka.com
<b>Russia</b>	KUKA Russia OOO 1-y Nagatinskiy pr-d, 2 117105 Moskau Russia Tel. +7 495 665-6241 support.robotics.ru@kuka.com
<b>Sweden</b>	KUKA Svetsanläggningar + Robotar AB A. Odhnars gata 15 421 30 Västra Frölunda Sweden Tel. +46 31 7266-200 Fax +46 31 7266-201 info@kuka.se
<b>Switzerland</b>	KUKA Roboter Schweiz AG Industriestr. 9 5432 Neuenhof Switzerland Tel. +41 44 74490-90 Fax +41 44 74490-91 info@kuka-roboter.ch www.kuka-roboter.ch
<b>Slovakia</b>	KUKA Roboter CEE GmbH organizačná zložka Bojnická 3 831 04 Bratislava Slovakia Tel. +420 226 212 273 support.robotics.cz@kuka.com

<b>Spain</b>	KUKA Iberia, S.A.U. Pol. Industrial Torrent de la Pastera Carrer del Bages s/n 08800 Vilanova i la Geltrú (Barcelona) Spain Tel. +34 93 8142-353 <a href="mailto:comercial@kukarob.es">comercial@kukarob.es</a>
<b>South Africa</b>	Jendamark Automation LTD (Agency) 76a York Road North End 6000 Port Elizabeth South Africa Tel. +27 41 391 4700 Fax +27 41 373 3869 <a href="http://www.jendamark.co.za">www.jendamark.co.za</a>
<b>Taiwan</b>	KUKA Automation Taiwan Co. Ltd. 1F, No. 298 Yangguang ST., Nei Hu Dist., Taipei City, Taiwan 114 Taiwan Tel. +886 2 8978 1188 Fax +886 2 8797 5118 <a href="mailto:info@kuka.com.tw">info@kuka.com.tw</a>
<b>Thailand</b>	KUKA (Thailand) Co. Ltd. No 22/11-12 H-Cape Biz Sector Onnut Sukhaphiban 2 road, Prawet Bangkok 10250 Thailand Tel. +66 (0) 90-940-8950 <a href="mailto:HelpdeskTH@kuka.com">HelpdeskTH@kuka.com</a>
<b>Czech Republic</b>	KUKA Roboter CEE GmbH organizační složka Pražská 239 25066 Zdiby Czech Republic Tel. +420 226 212 273 <a href="mailto:support.robotics.cz@kuka.com">support.robotics.cz@kuka.com</a>
<b>Hungary</b>	KUKA Robotics Hungaria Kft. Fö út 140 2335 Taksony Hungary Tel. +36 24 501609 Fax +36 24 477031 <a href="mailto:info@kuka-robotics.hu">info@kuka-robotics.hu</a>

**USA**

KUKA Robotics Corporation  
51870 Shelby Parkway  
Shelby Township  
48315-1787  
Michigan  
USA  
Tel. +1 866 873-5852  
Fax +1 866 329-5852  
[info@kukarobotics.com](mailto:info@kukarobotics.com)  
[www.kukarobotics.com](http://www.kukarobotics.com)

**UK**

KUKA Robotics UK Ltd  
Great Western Street  
Wednesbury West Midlands  
WS10 7LL  
UK  
Tel. +44 121 505 9970  
Fax +44 121 505 6589  
[service@kuka-robotics.co.uk](mailto:service@kuka-robotics.co.uk)  
[www.kuka-robotics.co.uk](http://www.kuka-robotics.co.uk)



# Index

## Numbers

2006/42/EU2006 68  
2014/68/EU2014 68  
95/16/EC 68

## A

Accessories 9, 57  
Adapter (option) 81  
Angle of rotation 39  
ANSI/RIA R.15.06-2012 68  
Applied norms and regulations 68  
Arm 9, 10  
Automatic mode 66  
Axis data, KR 120 R2700 extra HA 15  
Axis data, KR 90 R2900 extra HA 28  
Axis data, KR 90 R3100 extra HA 21  
Axis limitation, mechanical 61  
Axis range 59

## B

Base frame 10  
Basic data, KR 120 R2700 extra HA 13  
Basic data, KR 90 R2900 extra HA 27  
Basic data, KR 90 R3100 extra HA 20  
Brake defect 63  
Brake release device 62  
Braking distance 59

## C

CE mark 58  
Center of gravity 77  
Cleaning work 67  
Connecting cables 9, 14, 21, 28, 57, 75  
Connecting cables, cable lengths 14, 21, 28  
Control cable, single axis 82  
Counterbalancing system 10, 11, 67  
Counterbalancing system, hydropneumatic 11

## D

Danger zone 59  
Declaration of conformity 58  
Declaration of incorporation 57, 58  
Decommissioning 68  
Description of the robot system 9  
Dimensions, transportation 77  
DIN/ISO9409-1-A 10  
Disposal 68  
Documentation, industrial robot 5

## E

EC declaration of conformity 58  
Electrical installations 10, 11  
Electromagnetic compatibility (EMC) 69  
EMC Directive 58  
EN 60204-12006/A12009 69  
EN 61000-6-22005 69  
EN 61000-6-42007 + A12011 69  
EN 614-12006+A12009 69

EN ISO 10218-12011 68  
EN ISO 121002010 68  
EN ISO 13849-12015 68  
EN ISO 13849-22012 68  
EN ISO 138502015 68  
Extension 39  
External axes 57, 59

## F

Faults 64  
Fork lift truck 78  
Function test 65

## G

General information 38  
General safety measures 63

## H

Handling equipment 78  
Hazardous substances 68

## I

In-line wrist 9, 10, 18, 25, 32  
Industrial robot 57  
Intended use 58  
Interface, energy supply systems 76  
Interfaces 75  
Introduction 5

## K

KCP 9, 39, 59, 63  
Keyboard, external 63  
KUKA Customer Support 83  
KUKA Service 83  
KUKA smartPAD 9, 59

## L

Labeling 62  
Liability 57  
Lifting tackle 78  
Linear unit 57  
Link arm 9, 10  
Loads acting on the foundation, KR 120 R2700 extra HA 19  
Loads acting on the foundation, KR 90 R2900 extra HA 33  
Loads acting on the foundation, KR 90 R3100 extra HA 26  
Low Voltage Directive 58

## M

Machine frame mounting assembly with centring 74  
Machinery Directive 58, 68  
main axes 39  
Maintenance 66  
Manipulator 9, 57, 59  
Manual mode 65

- Mechanical end stops 61  
Minimum bending radius 14, 21, 28  
Mounting base with centering 71  
Mounting flange 10, 18, 25, 32  
Mounting flange, adapter (optional) 81  
Mouse, external 63
- O**  
Operator 59  
Operators 60  
Options 9, 11, 57, 81  
Overload 63
- P**  
Payload diagram 18, 25, 32  
Payloads, KR 120 R2700 extra HA 16  
Payloads, KR 90 R2900 extra HA 30  
Payloads, KR 90 R3100 extra HA 23  
Personnel 60  
Planning 71  
Plant integrator 59  
Plates and labels 35  
Positioner 57  
Pressure Equipment Directive 11, 67, 68  
Preventive maintenance work 67  
Principal components 9  
Product description 9  
Program override, motion velocity 39  
Protective circuit 11  
Protective equipment, overview 61  
Purpose 7
- R**  
Reaction distance 59  
Recommissioning 64  
Release device 62  
Release device, option 82  
Repair 66  
Robot controller 9, 57  
Robot system 9  
Rotating column 9, 10
- S**  
Safety 57  
Safety instructions 5  
Safety of machinery 68, 69  
Safety options 59  
Safety zone 59, 61  
Safety, general 57  
Service life 59  
Single axis (optional) 82  
smartPAD 39, 59, 63  
Software 9, 57  
Start-up 64  
STOP 0 39, 59  
STOP 1 39, 59  
STOP 2 59  
Stop category 0 59  
Stop category 1 59  
Stop category 2 59  
Stop signal 38
- Stopping distance 38, 59  
Stopping distances 38, 40, 45, 50  
Stopping time 38  
Stopping times 38, 40, 45, 50  
Storage 68  
Supplementary load 34  
Support request 83  
System integrator 58, 59, 60
- T**  
T1 59  
T2 59  
Teach pendant 9, 57  
Technical data 13  
Technical data, KR 120 R2700 extra HA 13  
Technical data, KR 90 R2900 extra HA 27  
Technical data, KR 90 R3100 extra HA 20  
Technical data, overview 13  
Terms used 39  
Terms, safety 59  
Training 7  
Transportation 64, 77  
Transportation by fork lift truck 78  
Transportation with lifting tackle 78  
Turn-tilt table 57
- U**  
Use, contrary to intended use 57  
Use, improper 57  
User 59, 60  
Users 7
- W**  
Warnings 5  
Workspace 59, 61

