
CISCO GLOBAL DEMO ENGINEERING · CUSTOMER PROOF OF CONCEPT

Cisco Intersight Managed Mode

Nutanix AHV or ESX

12 March 2026

Esteban Arguedas

eargueda@cisco.com

Contents

Overview

Environment

Get Started

Scenario 1 - Claim Servers

Scenario 2 - API Key Generation

Scenario 3 - Foundation Central

Scenario 4 - Cluster Deployment

Scenario 5 - Prism Central

Scenario 6 - Cluster Expansion

What's Next

Author: Esteban Arguedas (eargueda@cisco.com) · **Version:** 1.0 · **Last updated:** 12 March 2026

Document status

All printed copies and duplicate soft copies of this document are considered uncontrolled. Please refer to the original, online document link for the current version.

About this CPOC

Cisco Intersight Standalone Mode is an on-premises deployment of Cisco's infrastructure management platform that operates without requiring a connection to the Intersight cloud. When integrated with Nutanix hyperconverged infrastructure (HCI), it allows organizations to manage and monitor their Nutanix environments securely and locally.

In this mode, Intersight provides:

- Visibility into Nutanix clusters (via Prism API)
- Monitoring of VMs, hosts, and cluster health
- Management of Cisco hardware (e.g., UCS servers running Nutanix)
- Single pane of glass for hybrid environments
- Air-gapped and compliance-friendly operations

It's ideal for secure, regulated environments that require local control, while still benefiting from unified infrastructure management across Cisco and Nutanix systems.

Scope

Goals

After completing these scenarios, you will know how to claim, deploy and configure the Nutanix cluster with Cisco Intersight.

What you'll do

Scenario	Description
Scenario 1	Claim Servers and profile creation on Cisco Intersight
Scenario 2	Cisco Intersight API key generation
Scenario 3	Onboard nodes in Foundation Central
Scenario 4	Nutanix Cluster Deployment with AHV or ESX Hypervisor
Scenario 5	Nutanix Prism Central deployment and Cluster registration
Scenario 6	Nutanix Cluster Expansion

See the [Environment](#) page for lab IP addresses, credentials and equipment, and [Get Started](#) to begin.

Disclaimer

Test results are suitable to the specific design, configuration, test procedure, and types of switches deployed in the environment described in this document.

This document is provided "As-Is," without warranty of any kind, express or implied, including without limitation those of merchantability, fitness for a particular purpose, and non-infringement arising from a course of dealing usage or trade practice.

All printed copies and duplicate soft copies are not considered controlled.

Document history

Revision	Date	Author	Description	Version
1	8 May 2025	Arguedas	Intersight – Nutanix IMM use cases	1.0

Environment

IP Table

Host Name	IP Address	Credentials	Model
rtp-cpoc-dng-b16-c240m7-1	198.18.143.1	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-2	198.18.143.2	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-3	198.18.143.3	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-4	198.18.143.4	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m4-1	198.18.143.6	admin/C1sco12345!	UCSC-C240-M4SX
rtp-cpoc-dng-b16-n9336-1	198.18.143.7	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-n9336-2	198.18.143.8	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-fi6536-1	198.18.143.9	admin/C1sco12345!	HCIX-FI-6536
rtp-cpoc-dng-b16-fi6536-2	198.18.143.10	admin/C1sco12345!	HCIX-FI-6536
cpoc-win10-1	198.18.133.36	cpoc/cpoc123	Windows 10
cpoc-win10-2	198.18.133.37	cpoc/cpoc123	Windows 10
Ad1	198.18.133.1	dcloud/administrator/C1sco12345	Windows server
Vcenter 7	198.18.133.30	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Vcenter 8.0.3	198.18.133.31	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Cisco IMM	198.18.128.100	admin / C1sco12345	Cisco IMM Transition
Nutanix-pc.2022.6.0.12	198.18.128.150	admin / C1sco12345!	Nutanix-pc.2022.6.0.12
Intersight Assist	198.18.128.254	admin / C1sco12345	Intersight
Intersight pva	198.18.128.253	admin / C1sco12345	Intersight
Intersight cva	198.18.128.252	admin / C1sco12345	Intersight
VMware-ESXI	198.18.128.250	root / C1sco12345!	ESX 7.0
IMM Prism Element	198.18.136.2	admin / C1sco12345	
IMM Prism Element virtual IP	198.18.136.3	admin / C1sco12345	
IMM Nutanix PC-2024	198.18.136.4	admin / C1sco12345	
IMM Nutanix PC-2024 virtual IP	198.18.136.5	admin / C1sco12345	
IMM IP Pool for cluster	198.18.136.10-100		
Reserved IP Pool Intersight	198.18.136.220-255		


Equipment – CPOC Lab

Note

Be sure to include the Software Version in this table.

Quantity Required	Model	Software Version
1	UCSX-9508	
2	UCS-FI-6536	4.3(5.250004)
2	UCSX-I-9108-100G	4.3(5c)
3	UCSX-210C-M7	5.3(0.240016)

Design and Topology Diagram

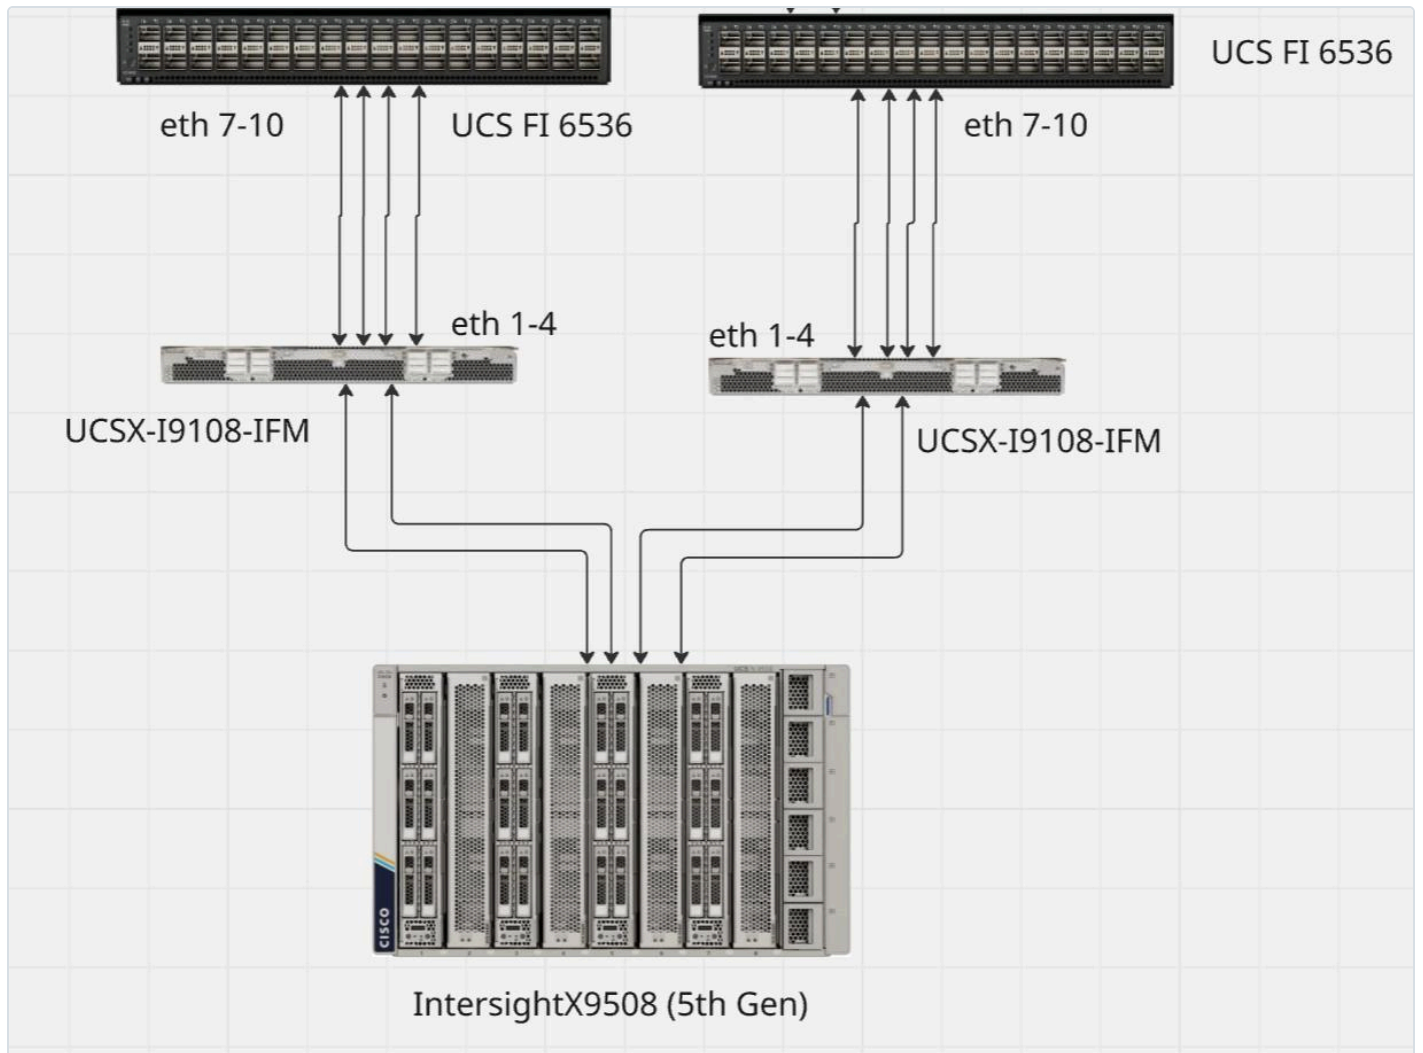

Get Started


1. Initiate your dCloud session. [Show Me How](#)
2. For best performance, connect to the workstation with Cisco Secure Client VPN [Show Me How](#) and the local RDP client on your laptop.
[Show Me How](#)
 - Workstation 1: 198.18.133.36, Username: cpoc, Password: cpoc123

Ready to go? Head to [Scenario 1](#).

Scenario 1 - Claim Servers and Profile Creation on Cisco Intersight

Cisco Intersight Claim Servers is a process used to register or "claim" physical infrastructure devices (like Cisco UCS servers or Nexus switches) to the Cisco Intersight platform. Intersight is a cloud-based infrastructure management tool that provides centralized monitoring, configuration, and lifecycle management for Cisco data center hardware.


1. Click on cpoc-win10-1 on the main topology, on the left side select remote access and then click on web RDP to log in

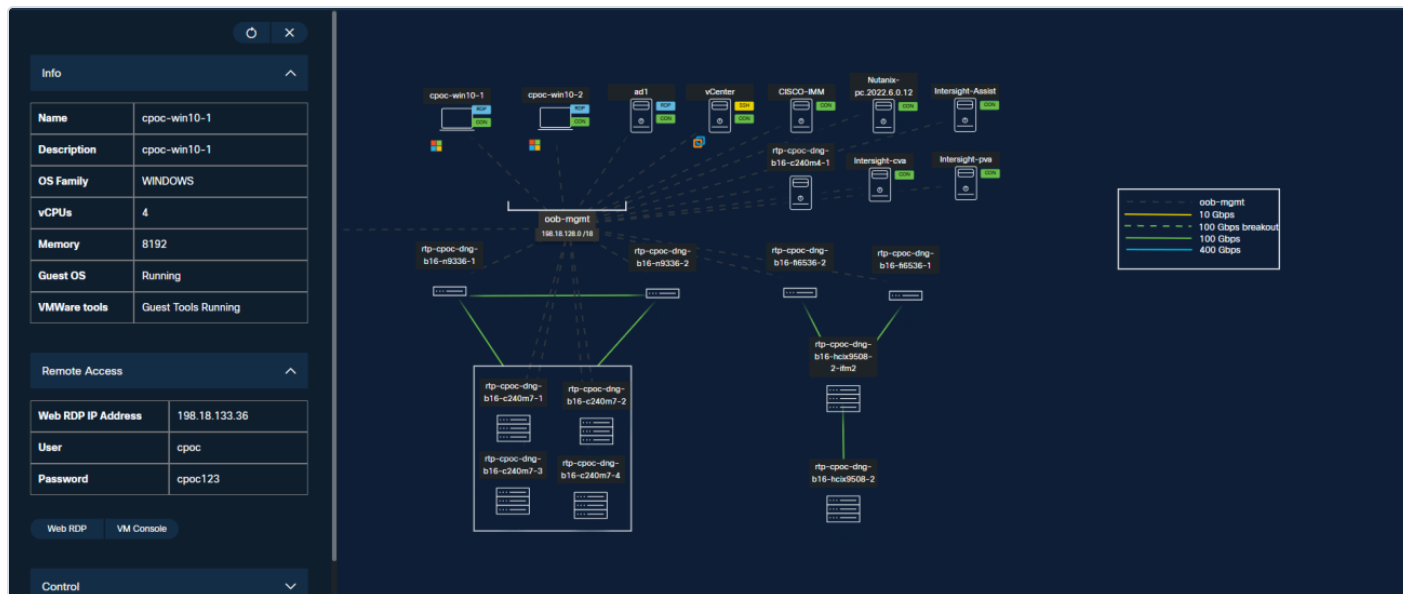


1. Once in the workstation open firefox browser



1. Log in to one Fabric Interconnect's web console via HTTPS with a web browser using the IP address 198.18.135.9 admin / C1sco12345! - Retrieve the Device ID and the Claim Code from the console page by clicking on Device Connector at the top.

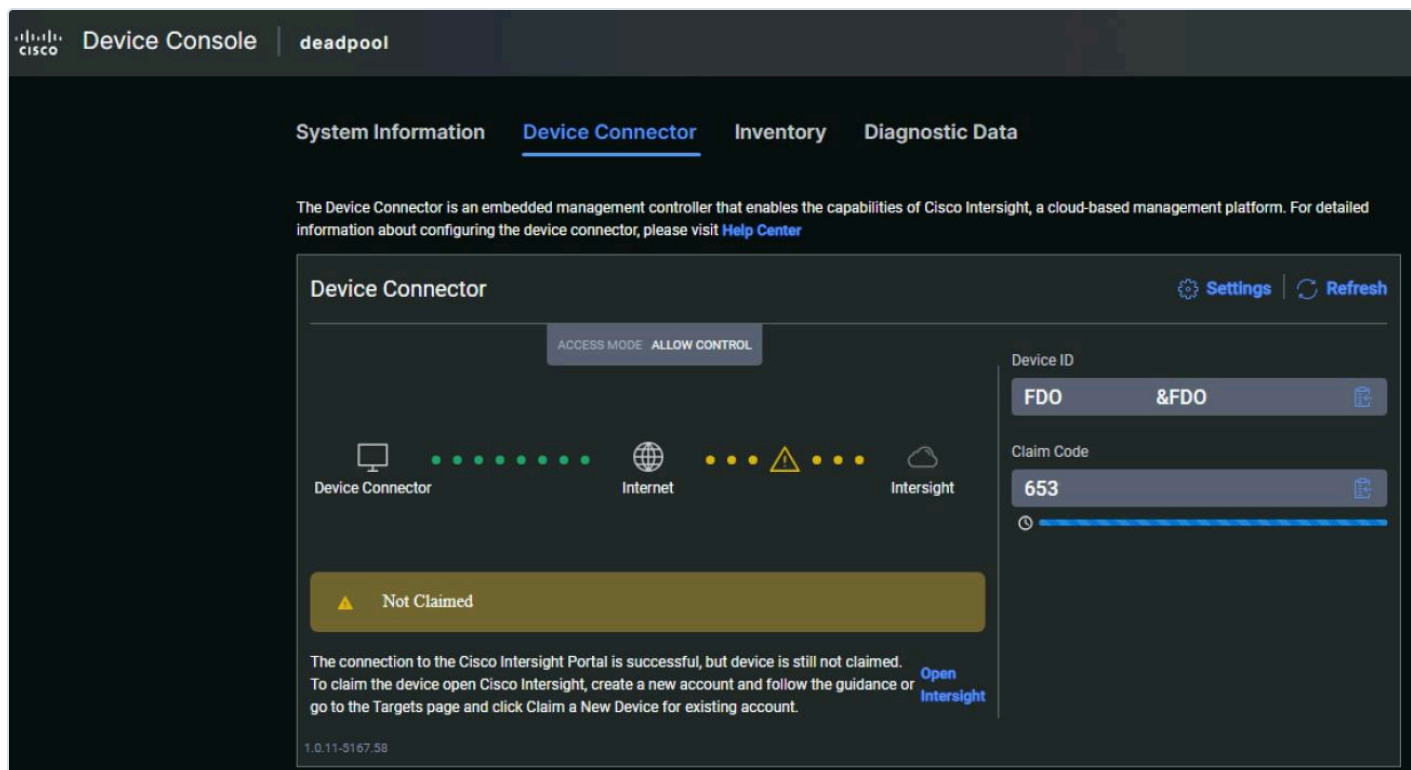

1. In Cisco Intersight, go to the System area, click on Targets, then Claim a New Target

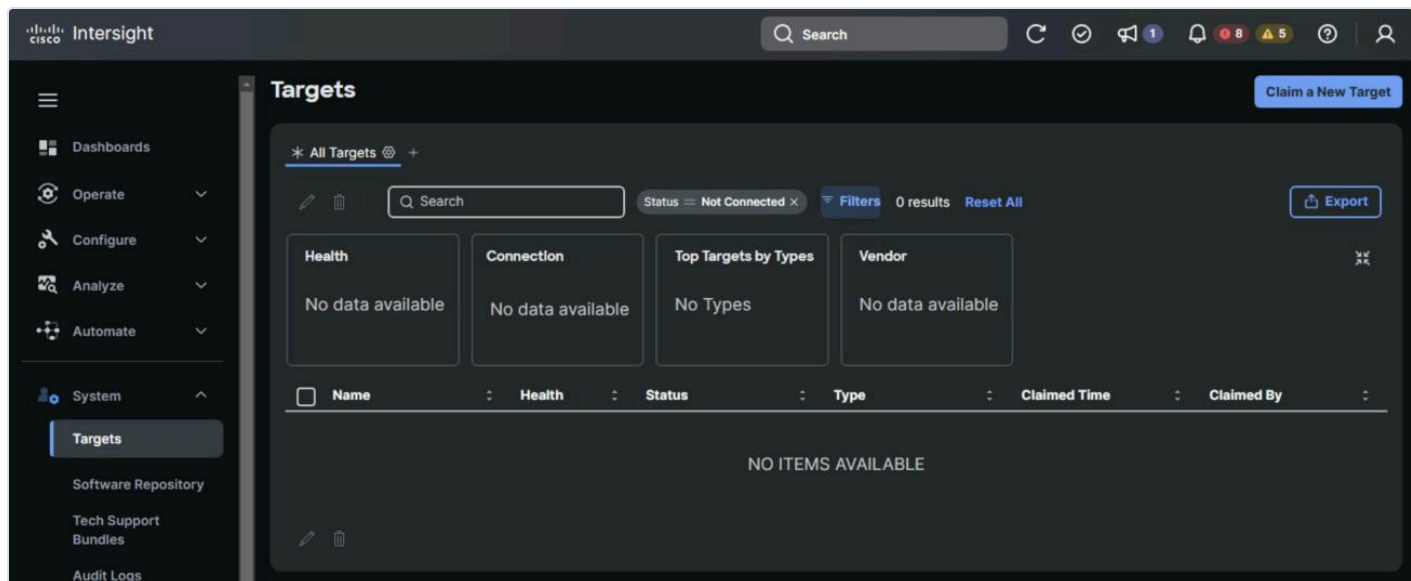

1. Select Cisco UCS Domain (Intersight Managed) then enter the Device ID and Claim Code, then click Claim. Repeat for all the servers to be used in your new cluster

Select Target Type

Filters

☒ Available for Claiming

Categories

- ☒ All
- ☐ Application Performance Monitoring (APM)
- ☐ Application Server
- ☐ Cloud
- ☐ Cloud Native
- ☐ Compute / Fabric
- ☐ Database
- ☐ Hyperconverged
- ☐ Hypervisor
- ☐ Network
- ☐ Orchestrator
- ☐ Platform Services
- ☐ Storage

Compute / Fabric

Cisco UCS Server (Standalone)

Cisco UCS Domain (Intersight Managed)

HPE OneView

Cisco UCS Domain (UCSM Managed)

Cisco UCS C890

Redfish Server

Platform Services

Cisco Intersight Appliance

Cisco Assist

Network

Cisco MDS Switch

Cisco Nexus Switch

Cisco APIC

Cancel
Start

Claim Cisco UCS Server (Standalone) Target

To claim your target, provide the Device ID, Claim Code and select the appropriate Resource Groups.

General

Device ID *

WZP27460GLC

Claim Code *

88AE1D09B9F7

Resource Groups



Select resource groups, if required. This is not mandatory, since by default, the claimed target will be added to "All" type resource groups.

0 items found

10

per page



0 of 0



Name

Usage

Description

NO ITEMS AVAILABLE



0 of 0



Back Cancel

Claim

A Domain Profile must be created and deployed to the Fabric Interconnects. The Domain Profile defines the roles of the ports on the Fabric Interconnects, the VLANs used on the network and several other domain-wide policy settings such as QoS. After the Domain Profile is deployed the rackmount servers and/or modular blades will discover and can then be onboarded in Foundation Central and targeted for a Nutanix cluster deployment. Ensure that the profile and all the associated policies are created in the Organization that also contains the Resource Group for the Fabric Interconnects and servers.

The screenshot shows the Cisco Intersight web interface. The left sidebar contains navigation menus for Dashboards, Operate (Servers, Chassis, Fabric Interconnects, HyperFlex Clusters), Configure (Profiles, Templates, Policies, Pools), Analyze, Optimize, and System (Targets). The main content area is titled 'Profiles' and has tabs for HyperFlex Cluster Profiles, UCS Chassis Profiles, UCS Domain Profiles (selected), and UCS Server Profiles. A 'Create UCS Domain Profile' button is in the top right. Below the tabs, there's a search bar and a table of UCS Domain Profiles. The table has columns for Name, Status, UCS Domain Template, Fabric Interconnects, and Last Update. One profile is listed: 'rtp-cpoc-dng-b16-fi6536-domain' with a status of 'OK'. An 'Export' button is also present.

Name	Status	UCS Domain Template	Fabric Interconnects	Last Update
rtp-cpoc-dng-b16-fi6536-domain	OK		rtp-cpoc-dng-b1... rtp-cpoc-dng-b1...	2 hours ago

Select the appropriate Organization in the Intersight account and give the policy a name. Select the Fabric Interconnect pair the policy will be applied to.

The screenshot shows the 'Edit UCS Domain Profile' form for the profile 'rtp-cpoc-dng-b16-fi6536-domain'. The form has a left sidebar with steps: 1 General (selected), 2 UCS Domain Assignment, 3 VLAN & VSAN Configuration, 4 Ports Configuration, 5 UCS Domain Configuration, and 6 Summary. The main area is titled 'General' and contains fields for Organization (Intersight-Nutanix), Name (rtp-cpoc-dng-b16-fi6536-domain), Set Tags (Enter a tag in the key:value format), and Description (0 / 1024 characters). At the bottom, there are 'Close', 'Back', and 'Next' buttons.

← UCS Domain Profiles

Edit UCS Domain Profile (rtp-cpoc-dng-b16-fi6536-domain)

✓ General

2 UCS Domain Assignment

3 VLAN & VSAN Configuration

4 Ports Configuration

5 UCS Domain Configuration

6 Summary

UCS Domain Assignment

Choose to assign a fabric interconnect pair to the profile now or later.

Assign Now

Assign Later

i

Choose to assign a Fabric Interconnect pair now or later. If you choose Assign Now, select a pair that you want to assign and click Next . If you choose Assign Later, click Next to proceed to policy selection.

Show Assigned

Q Search

Filters

1 results

Domain N...	Model	Fabric Interconnect A		Fabric Interconnect B			
		Serial	Bundle Version	Model	Serial	Bundle Version	
☒	rtp-cpoc-dng-...	UCS-FI-6536	FDO28440769	4.3(5.250004)	UCS-FI-6536	FDO2844077P	4.3(5.250004)

Selected 1 of 1 [Show All](#) [Unselect All](#)

Rows per page

10

 < 1 >

Close

Back

Next

Select the VLAN policy for Fabric Interconnect A, then select to create a new VLAN policy.

← UCS Domain Profiles

Create UCS Domain Profile

✓ General

✓ UCS Domain Assignment

3 VLAN & VSAN Configuration

4 Ports Configuration

5 UCS Domain Configuration

6 Summary

VLAN & VSAN Configuration

Create or select a policy for the Fabric Interconnect pair.

^ Fabric Interconnect A 0 of 2 Policies Configured

VLAN Configuration

Select Policy

VSAN Configuration

Select Policy

^ Fabric Interconnect B 0 of 2 Policies Configured

VLAN Configuration

Select Policy

VSAN Configuration

Select Policy

Close

Back

Next

Cisco © 2025. All Rights Reserved. 11

Select the appropriate organization, enter a name for the VLAN policy for Fabric Interconnects, click Next, then select to add a VLAN

Enter a prefix and the VLAN ID for the new VLAN, then click to select the Multicast policy. Select to create a new Multicast policy. Select the appropriate organization, enter a name for the new Multicast policy and click Next.

UCS Domain Profiles > Create UCS Domain Profile

Create VLAN

Add VLANs

Add VLANs to the policy

 VLANs should have one Multicast policy associated to it

Configuration

Prefix *

VLAN IDs *

☒ Auto Allow On Uplinks☐ Enable VLAN Sharing

Multicast Policy *

[Select Policy](#)[Cancel](#)[Add](#)

UCS Domain Profiles > Create UCS Domain Profile > Create VLAN

Create Multicast Policy

1 General**2** Policy Details

General

Add a name, description, and tag for the policy.

Organization *

Name *

Set Tags

Description

0 / 1024

<

[Cancel](#)[Next](#)

UCS Domain Profiles > Create UCS Domain Profile > Create VLAN

Create Multicast Policy

General

2 Policy Details

Policy Details

Add policy details.

Multicast Policy

☒ Snooping State ⓘ

☐ Querier State ⓘ

☒ Source IP Proxy State ⓘ

< Cancel

Back Create

Leave the default settings for the Multicast policy and click Create. Click Add to create the new VLAN in the VLAN policy.

UCS Domain Profiles > Create UCS Domain Profile

Create VLAN

Add VLANs

Add VLANs to the policy

⚠️ VLANs should have one Multicast policy associated to it

Configuration

Prefix * ⓘ
vlan-mgmt ⓘ

VLAN IDs * ⓘ
10 ⓘ

☒ Auto Allow On Uplinks ⓘ

☐ Enable VLAN Sharing ⓘ

Multicast Policy *

Selected Policy: multicast-policy ⓘ | ⓘ | [Edit Selection](#) | ⓘ

Cancel

Add

UCS Domain Profiles > Create UCS Domain Profile

Create VLAN

General

Policy Details

Policy Details
Add policy details.

VLANs

Add VLANs

☐ Show VLAN ID Ranges

Filters 2 results

☐	VLAN ID	Name	Sharing Type	Primary VLAN ID	Multicast Policy	Auto Allow On Upli...	
☐	1	default	None			Yes	...
☐	10	vlan-mgmt_10	None		multicast-policy	Yes	...

Rows per page 10 < 1 >

☐ Set Native VLAN ID

Cancel Back Create

If any additional VLANs need to communicate via the uplinks from this Fabric Interconnect pair, click Add VLANs and create them as was done for the first VLAN. Click Create to finally finish creating the VLAN policy. Click to select the VLAN policy to apply for Fabric Interconnect B.

← UCS Domain Profiles

Create UCS Domain Profile

General

UCS Domain Assignment

VLAN & VSAN Configuration

Ports Configuration

UCS Domain Configuration

Summary

VLAN & VSAN Configuration
Create or select a policy for the Fabric Interconnect pair.

^ Fabric Interconnect A 1 of 2 Policies Configured

VLAN Configuration

VSAN Configuration [Select Policy](#)

^ Fabric Interconnect B 0 of 2 Policies Configured

VLAN Configuration [Select Policy](#)

VSAN Configuration [Select Policy](#)

Close Back Next

Select the VLAN policy that was just created so that both Fabric Interconnects have the same VLAN policy configured, then click Next.

← UCS Domain Profiles

Create UCS Domain Profile

- General
- UCS Domain Assignment
- VLAN & VSAN Configuration**
- Ports Configuration
- UCS Domain Configuration
- Summary

VLAN & VSAN Configuration

Create or select a policy for the Fabric Interconnect pair.

^ Fabric Interconnect A 1 of 2 Policies Configured

VLAN Configuration

VSAN Configuration

Select Policy

^ Fabric Interconnect B 1 of 2 Policies Configured

VLAN Configuration

VSAN Configuration

Select Policy

Close

Back Next

Click to select the Port policy for Fabric Interconnect A then click Create New.

← UCS Domain Profiles

Create UCS Domain Profile

- General
- UCS Domain Assignment
- VLAN & VSAN Configuration
- Ports Configuration**
- UCS Domain Configuration
- Summary

Ports Configuration

Create or select a port policy for the Fabric Interconnect pair.

Configure ports by creating or selecting a policy.

^ Fabric Interconnect A Not Configured

Ports Configuration

Select Policy

^ Fabric Interconnect B Not Configured

Ports Configuration

Select Policy

Close

Back Next

Select the appropriate organization, enter a name for the Port policy and select the model of Fabric Interconnect matching the hardware in use, then click next. If Fibre Channel ports are required for use by other non-Nutanix modular servers then configure the unified ports, otherwise click Next to continue.

UCS Domain Profiles > Create UCS Domain Profile

Create Port

1 General
2 Unified Port
3 Breakout Options
4 Port Roles

General

Add a name, description, and tag for the policy.

Organization *
default

Name *
port-policy

Fabric Interconnect Model *
UCS-FI-6536

Set Tags
Enter a tag in the key-value format.

Description
Description
0 / 1024

< Cancel Next

UCS Domain Profiles > Create UCS Domain Profile

Create Port

✓ General
2 Unified Port
3 Breakout Options
4 Port Roles

Unified Port

Configure the port modes to carry FC or Ethernet traffic.

Move slider to configure unified ports.

Configuring unified port will result in the deletion of previously configured breakout ports, port roles and port channels roles.

Fibre Channel Ports
No Fibre Channel Ports

FC Ethernet Ports 1-36

< Cancel Back Next

If Breakout ports are required for other non-Nutanix servers then select them and click the Configure button, otherwise click Next to continue.

UCS Domain Profiles > Create UCS Domain Profile

Create Port

General
Unified Port
Breakout Options
Port Roles

Breakout Options

Configure breakout ports on FC or Ethernet.

Ethernet Fibre Channel

Configure

FC Ethernet Port Modes

☐ Port	Type	Speed	Breakout Ports
☐ Port 1	Ethernet	-	-
☐ Port 2	Ethernet	-	-
☐ Port 3	Ethernet	-	-
☐ Port 4	Ethernet	-	-
☐ Port 5	Ethernet	-	-
☐ Port 6	Ethernet	-	-

Cancel Back Next

Select the ports which will be server ports, i.e. ports connected to the blade chassis, then click the Configure button.

UCS Domain Profiles > Create UCS Domain Profile

Create Port

General
Unified Port
Breakout Options
Port Roles

Port Roles

Configure Selected Ports Port 3, Port 4, Port 5, Port 6 Clear Selection

Unconfigured

Export

☐ Name	Type	Role	Connected De...	Device Number	Port Channel	Mode	Auto Negotiation
☐ port 1	Ethernet	Unconfigured			-		
☐ port 2	Ethernet	Unconfigured			-		
☒ port 3	Ethernet	Unconfigured			-		
☒ port 4	Ethernet	Unconfigured			-		
☒ port 5	Ethernet	Unconfigured			-		
☒ port 6	Ethernet	Unconfigured			-		
☐ port 7	Ethernet	Unconfigured			-		

Cancel Back Save

Select Server as the role for the ports connecting to the blade chassis or the rackmount servers then click Save. For rackmount servers it is recommended to enable "Manual Server Numbering" and setting the server number to match their physical order in the rack.

UCS Domain Profiles > Create UCS Domain Profile

Create Port

Role: Server

Info Auto Negotiation is not supported on N9K-C93180YC-FX3 for 100G speed ports. If the port is connected to N9K-C93180YC-FX3, the Auto Negotiation option should be disabled. Learn more at [Help Center](#).

☒ Auto Negotiation ⓘ

☒ Manual Chassis/Server Numbering ⓘ

☐ Auto-Fill Numbering ⓘ

Info If a discovered device's type is different from the configured Connected Device Type or the Device Number conflicts with an existing device's number the discovered device will be auto-numbered according to the actual device type. Device numbering can also be set when recommissioning a decommissioned device

Port	Connected Device Type *	Device Number *
port 3	Rack Server	1
port 4	Rack Server	2
port 5	Rack Server	3

[Cancel](#) [Save](#)

After returning to the previous screen select the ports which will be the Ethernet uplinks from the Fabric Interconnects and click the Configure button. Select Ethernet Uplink as the role then click Save.

UCS Domain Profiles > Create UCS Domain Profile

Create Port

Configure Port

Configuration

Selected Port: Port 9

Role: Ethernet Uplink

Admin Speed ⓘ: Auto

FEC ⓘ: Auto

Ethernet Network Group ⓘ

[Select Policies](#)

Flow Control

[Select Policy](#)

Link Control

[Select Policy](#)

MACsec Policy ⓘ

[Cancel](#) [Save](#)

If necessary, click on Port Channels and add the multiple Ethernet uplink ports to a port channel. After all the server and Ethernet uplink ports and their optional port channels are configured, click Save.

UCS Domain Profiles > Create UCS Domain Profile

Create Port

General

Unified Port

Breakout Options

4 Port Roles

Configure Selected Ports -



Export

☐	Name	Type	Role	Connected De...	Device Number	Port Channel	Mode	Auto Negotiation	
☐	port 1	Ethernet	Unconfigured			-			
☐	port 2	Ethernet	Unconfigured			-			
☐	port 3	Ethernet	Server	Rack Server	1	-		true	
☐	port 4	Ethernet	Server	Rack Server	2	-		true	
☐	port 5	Ethernet	Server	Rack Server	3	-		true	
☐	port 6	Ethernet	Server	Rack Server	4	-		true	
☐	port 7	Ethernet	Unconfigured			-			
☐	port 8	Ethernet	Unconfigured			-			

Cancel Back Save

Click to select a port policy for Fabric Interconnect B, then select the policy just created so both FIs are configured with the same port policies.

UCS Domain Profiles

Create UCS Domain Profile

General

UCS Domain Assignment

VLAN & VSAN Configuration

4 Ports Configuration

5 UCS Domain Configuration

6 Summary

Ports Configuration

Create or select a port policy for the Fabric Interconnect pair.

Configure ports by creating or selecting a policy.

^ Fabric Interconnect A Configured

Ports Configuration Selected Policy port-policy



Port Type Ethernet 36

Port Role Ethernet Uplink 1 Server 4

Close Back Next

Select to create an NTP policy. Select the appropriate organization, enter a name for the policy, then click Next.

← UCS Domain Profiles

Create UCS Domain Profile

✓ General

✓ UCS Domain Assignment

✓ VLAN & VSAN Configuration

✓ Ports Configuration

5 UCS Domain Configuration

6 Summary

UCS Domain Configuration

Select the compute and management policies to be associated with the Fabric Interconnect.

☐ Show Attached Policies (0)

Management 0 of 6 Policies Configured

NTP

Select Policy

Syslog

Select Policy

Network Connectivity

Select Policy

SNMP

Select Policy

LDAP

Select Policy

Certificate Management

Select Policy

Network 0 of 2 Policies Configured

System QoS *

Select Policy

< Close

Back Next

UCS Domain Profiles > Create UCS Domain Profile

Create NTP

1 General

2 Policy Details

General

Add a name, description, and tag for the policy.

Organization *

default

Name *

Ntp-policy

Set Tags

Enter a tag in the key-value format.

Description

Description

0 / 1024

< Cancel

Next

Enable NTP, enter at least one NTP server and select the appropriate timezone then click Create

UCS Domain Profiles > Create UCS Domain Profile

Create NTP

General

Policy Details

Policy Details

Add policy details.

All Platforms | UCS Server (Standalone) | UCS Domain

Enable NTP

NTP Servers *

198.18.128.1

+

Timezone

America/New_York

Cancel

Back

Create

After returning to the previous screen click to select a System QoS Policy. Select the appropriate organization, enter a name for the policy, then click Next.

UCS Domain Profiles > Create UCS Domain Profile

Create System QoS

General

Policy Details

General

Add a name, description, and tag for the policy.

Organization *

default

Name *

QoS-Policy

Set Tags

Enter a tag in the key:value format.

Description

Description

0 / 1024

Cancel

Next

Set the Best Effort QoS class to MTU 9216 then click Create

UCS Domain Profiles > Create UCS Domain Profile

Create System QoS

General

Policy Details

Policy Details
Add policy details.

This policy is applicable only for UCS Domains

Configure Priorities

☐ Platinum
☐ Gold
☐ Silver
☐ Bronze

	CoS ⓘ	Weight ⓘ	Bandwidth Percent ⓘ	Allow Packet Drops ⓘ	MTU ⓘ
☐ Best Effort	Any	5	50	☒	9216
		0 - 10			1500 - 9216
☐ Fibre Channel	3	5	50	☐	2240
	0 - 6	0 - 10			1500 - 9216

Cancel Back Create

After returning to the previous screen click to select a Network Connectivity Policy. Select the appropriate organization, enter a name for the policy then click Next.

UCS Domain Profiles > Create UCS Domain Profile

Create Network Connectivity

General

Policy Details

General
Add a name, description, and tag for the policy.

Organization *

default

Name *

Network-Policy

Set Tags

Enter a tag in the key:value format.

Description

Description

0 / 1024

Cancel Next

Set the preferred primary DNS server address then click Create. Once an NTP policy, Network Connectivity policy and System QoS policy are configured, click Next to move to the domain summary

UCS Domain Profiles > Create UCS Domain Profile

Create Network Connectivity

General

Policy Details

Policy Details

Policy Details

Add policy details.

All Platforms | UCS Server (Standalone) | UCS Domain

Common Properties

IPv4 Properties

Preferred IPv4 DNS Server ⓘ

198.18.133.1 ⓘ

Alternate IPv4 DNS Server ⓘ

0.0.0.0 ⓘ

☐ Enable IPv6 ⓘ

< Cancel Back Create

← UCS Domain Profiles

Create UCS Domain Profile

General

UCS Domain Assignment

VLAN & VSAN Configuration

Ports Configuration

UCS Domain Configuration

Summary

UCS Domain Configuration

Show Attached Policies (3)

Management 2 of 6 Policies Configured

NTP

Syslog

Network Connectivity

SNMP

LDAP

Certificate Management

Ntp-policy

Select Policy

Network-Policy

Select Policy

Select Policy

Select Policy

Select Policy

Network 1 of 2 Policies Configured

System QoS *

Switch Control

QoS-Policy

Select Policy

< Close Back Next

Click Deploy and watch the domain profile progress through Validation and Configuration until the status is OK.

← UCS Domain Profiles

Create UCS Domain Profile

- General
- UCS Domain Assignment
- VLAN & VSAN Configuration
- Ports Configuration
- UCS Domain Configuration
- Summary**

Summary

Review the UCS domain profile details, resolve configuration errors and deploy the profile.

General

Name: **Test** Status: **Not Assigned**

Organization: **default**

Ports Configuration | VLAN & VSAN Configuration | UCS Domain Configuration | Errors/Warnings (0)

▼ Fabric Interconnect A

▼ Fabric Interconnect B

[Close](#) [Back](#) [Deploy](#)

Profiles

HyperFlex Cluster Profiles | UCS Chassis Profiles | **UCS Domain Profiles** | UCS Server Profiles

[Create UCS Domain Profile](#)

* All UCS Domain Profiles +

Search Filters 1 results [Export](#)

Name	Status	UCS Domain Template	Fabric Interconnect A	Fabric Interconnect B	Last Update	
rtp-cpoc-dng-b16-fi6536-domain	OK		rtp-cpoc-dng-b1...	rtp-cpoc-dng-b1...	2 hours ago	

Rows per page 10 < 1 >

After the Domain profile is deployed, all modular chassis, the blades in the chassis and the rackmount servers will be discovered. Once all the chassis, blades and rackmounts have finished discovery the next steps can be completed.

Servers

* All Servers +

Search Filters 7 results [Export](#)

Health

Power

HCL Status

Bundle Version

Utility Storage

Firmware Version

Models

Contract Status

Name	Health	Model	CPU Capaci...	Memory Capaci...	UCS Domain	Server Profile	Bundle Version	
C240-WZP283891L1	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)	
C240-WZP283891LX	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)	
C240-WZP28400HKB	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)	
C240-WZP28400HKH	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)	
rtp-cpoc-dng-b16-fi6536-1-1	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-fi...		5.3(0.240016)	
rtp-cpoc-dng-b16-fi6536-1-2	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-fi...		5.3(0.240016)	
rtp-cpoc-dng-b16-fi6536-1-3	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-fi...		5.3(0.240016)	

Rows per page 100 < 1 >

Scenario 2 · Cisco Intersight API Key Generation


1. On the Desktop click the Active.html icon to access the Intersight login, on the next page click on the Hyperlink “Click here to login”





1. In the resulting window click Go to intersight, this will do the auto-login

Note


If require accessing Intersight from the cpoc-win10-2, copy the URL and paste on the second windows virtual machine, then click Go to Intersight

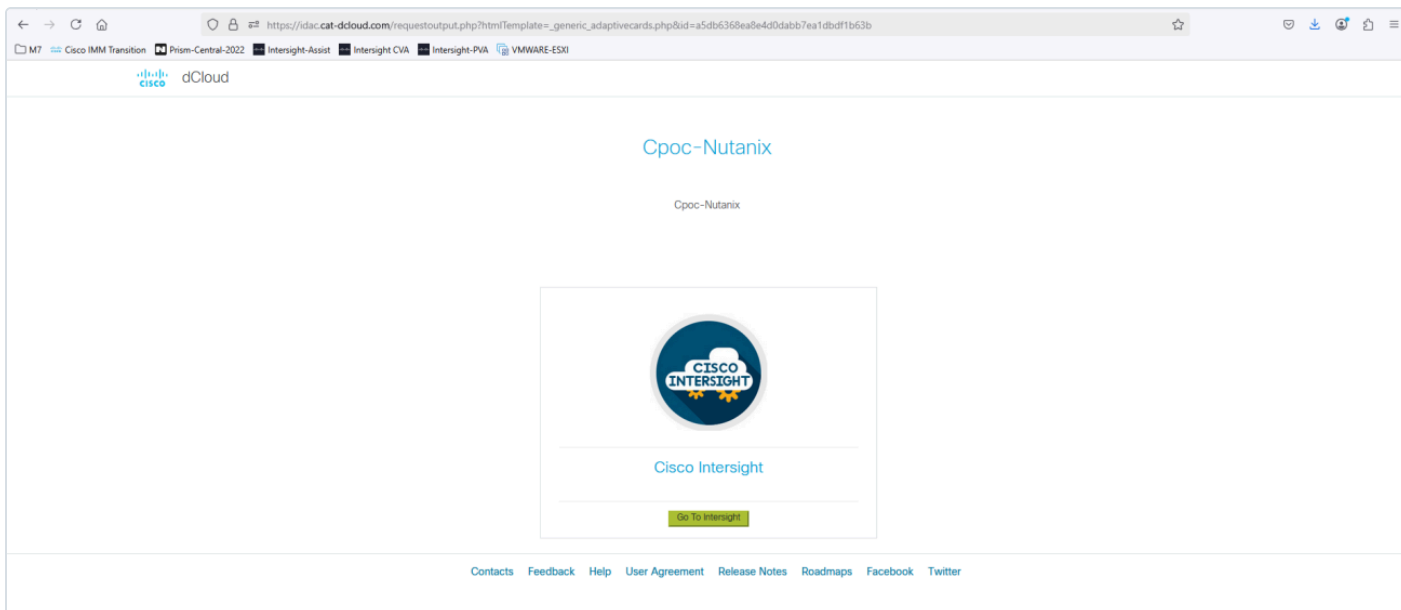

1. On the left page of Intersight, under Settings, click Keys
2. Click “Generate API key” using schema version 3 for use by Nutanix Foundation Central. Be sure to save the Secret Key to a file. It will only be shown once

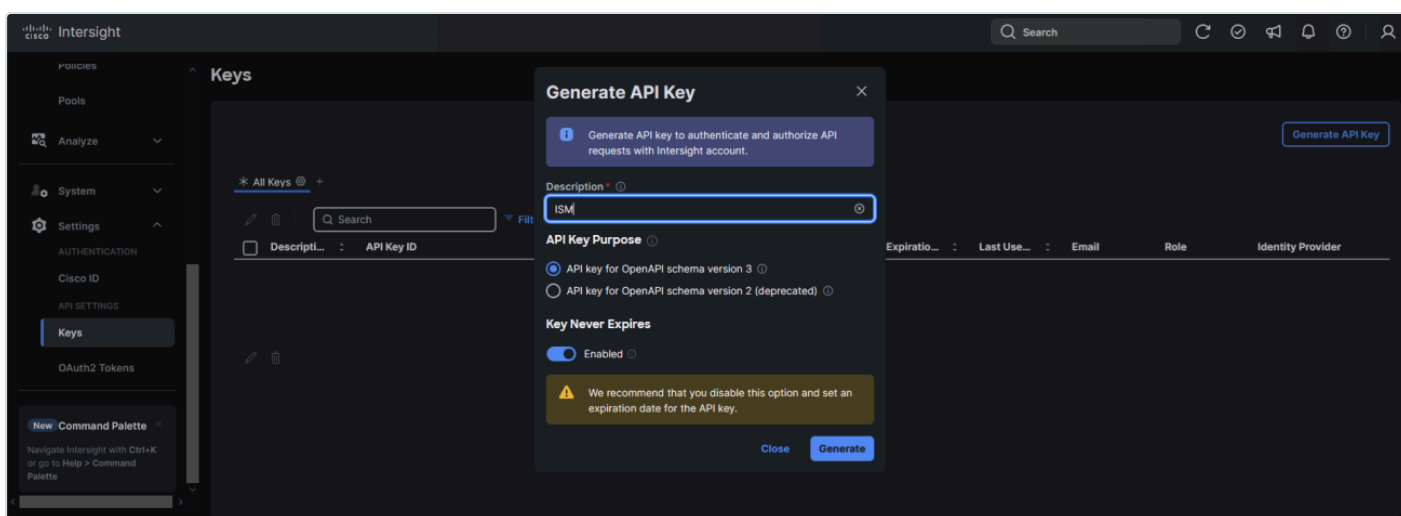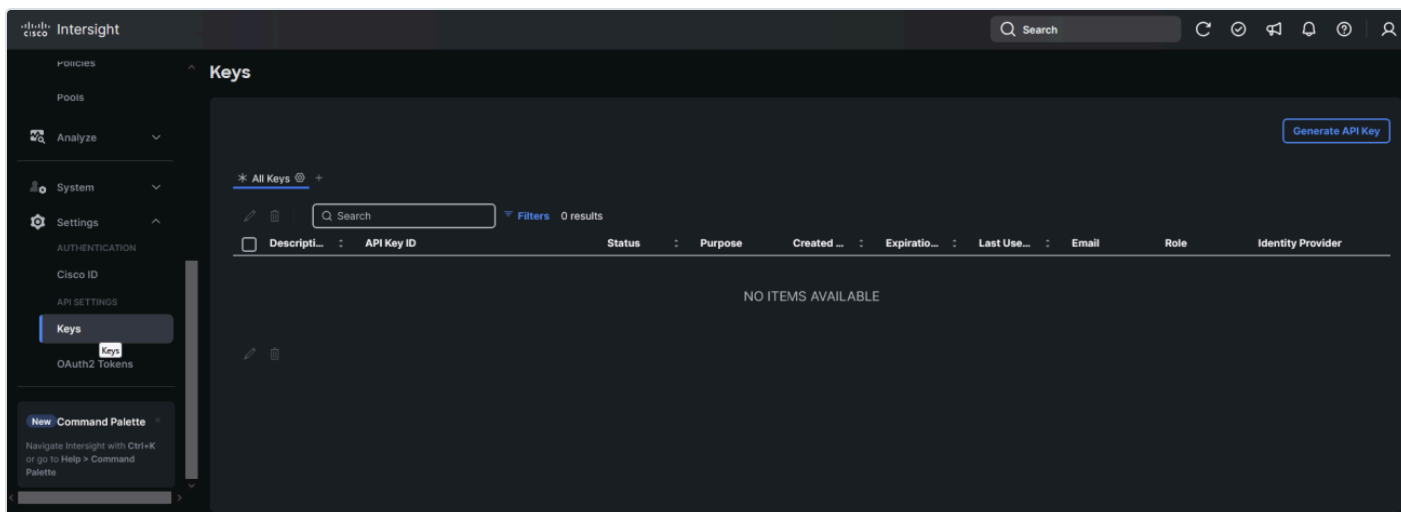

1. Save the API Key ID and Secret Key in the Desktop
2. Ensure your Cisco ID is granted access to download software from CCO. If not, click the Activate link and enter your CCO login credentials. This step is not required for an air-gapped Cisco Intersight private Virtual Appliance (PVA).

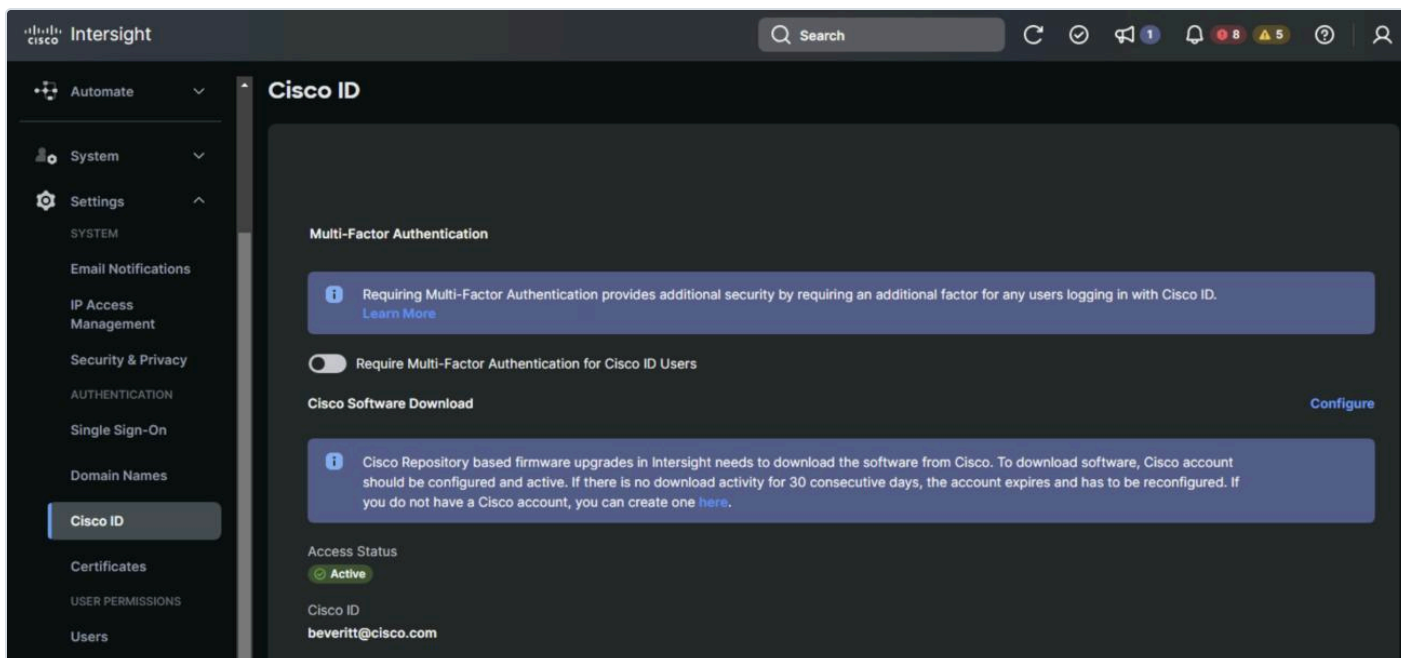

Scenario 3 - Onboard Nodes in Foundation Central

1. On Firefox browser bookmarks click over Prism-Central-2022, the credentials are admin / C1sco12345!


M7 Cisco IMM Transition Prism-Central-2022 Intersight-Assist Intersight CVA Intersight-PVA VMWARE-ESXI

1. On this lab we're using the Nutanix Prism 2022.6.0.12 with Foundation Central 1.7.1


2. Make sure the DNS, NTP, Virtual IP and Domain Name are set.

The screenshot displays the Prism Central Management web interface. On the left is a dark sidebar with a menu. The main area is titled 'Prism Central Management' and is split into two panels. The left panel, 'Settings', lists various configuration categories. The right panel, 'Manage Prism Central', shows the configuration for a specific node named 'Unnamed'. It lists key parameters: Virtual IP (198.18.135.1), Domain Name (prism.d...sco.com), Version (pc.2022.6.0.12), and Id (da42b...58ef9). Below this, a 'Prism Central Capacity' section shows that there are 0 Managed VMs and 0 Managed clusters.


1. Once all the parameters are confirmed, go to Foundation Central Settings to connect Prism Central with Intersight account, click "Connect Hardware Provider"

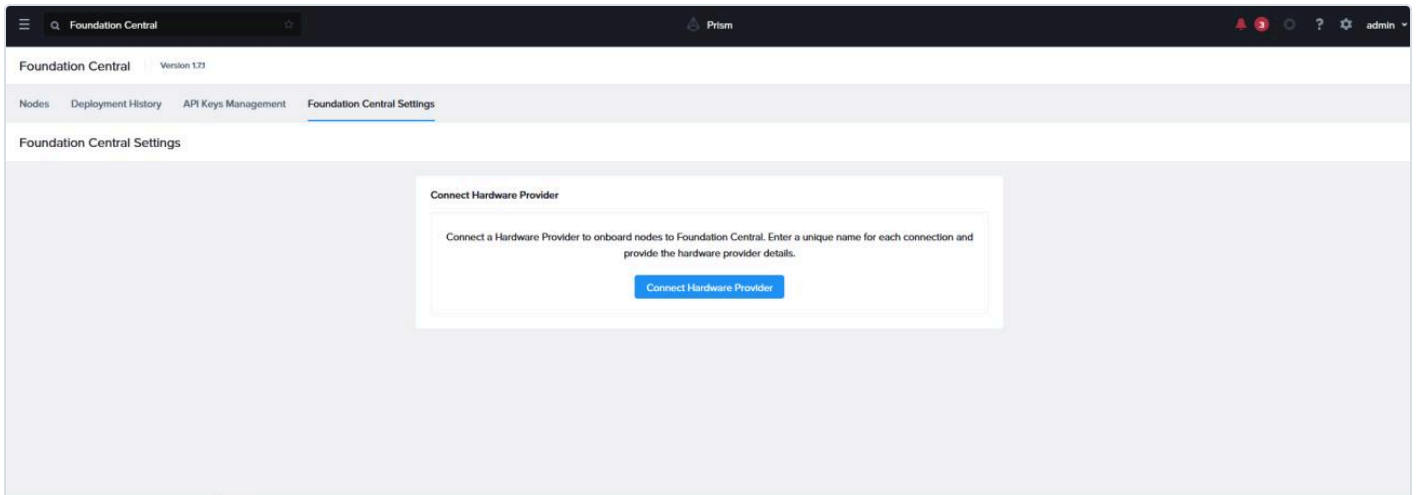


1. Fill in the required information
2. Connection name= Intersight
3. Hardware Provider = Cisco Intersight
4. Intersight Deployment Type = SaaS
5. Intersight Region & URL = North America
6. Intersight API Key =
7. Secret Key=

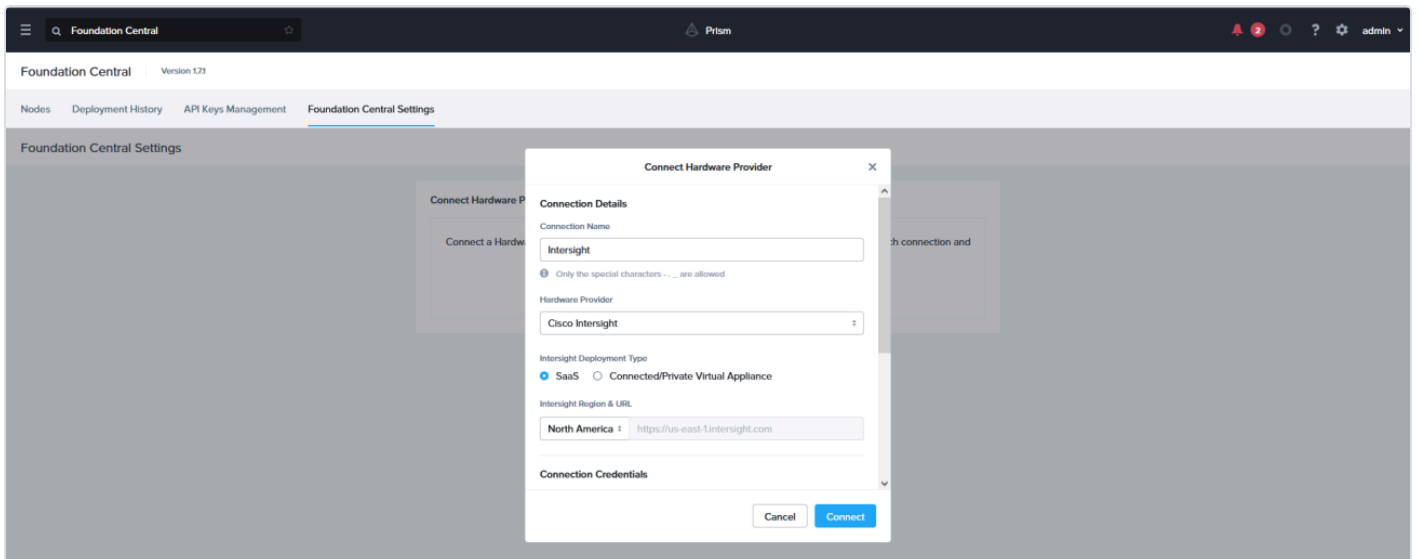


1. Prism Central will display a pop-up of "Connection has been saved"

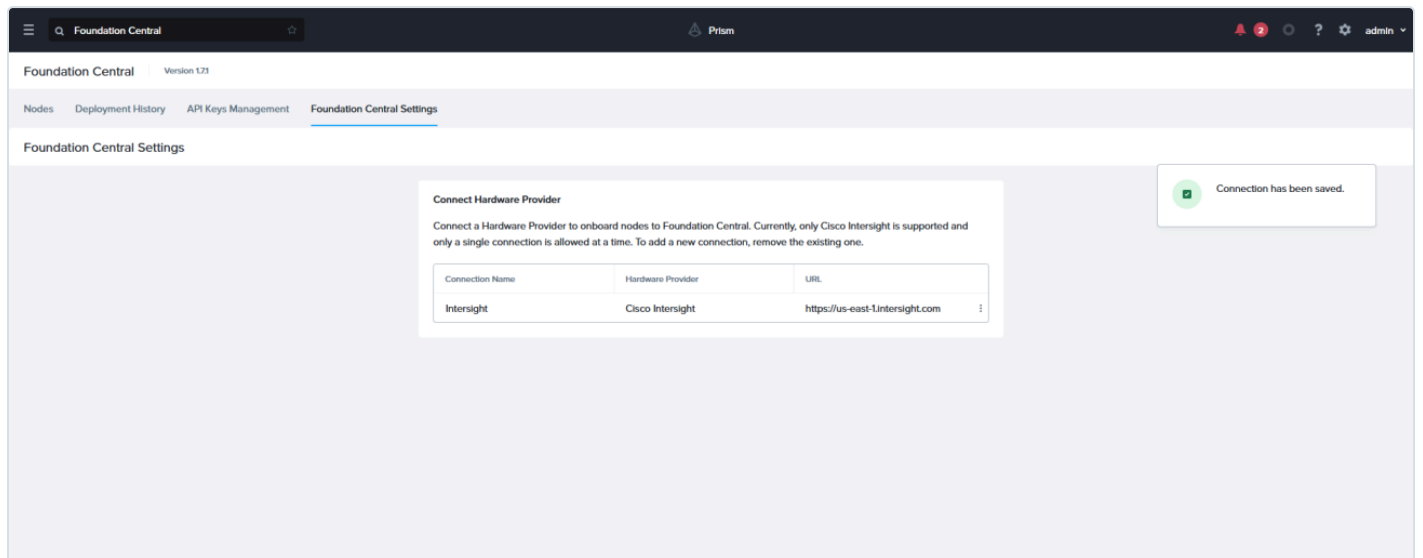

1. Then click on Nodes > Manually Onboarded and click Onboard Nodes

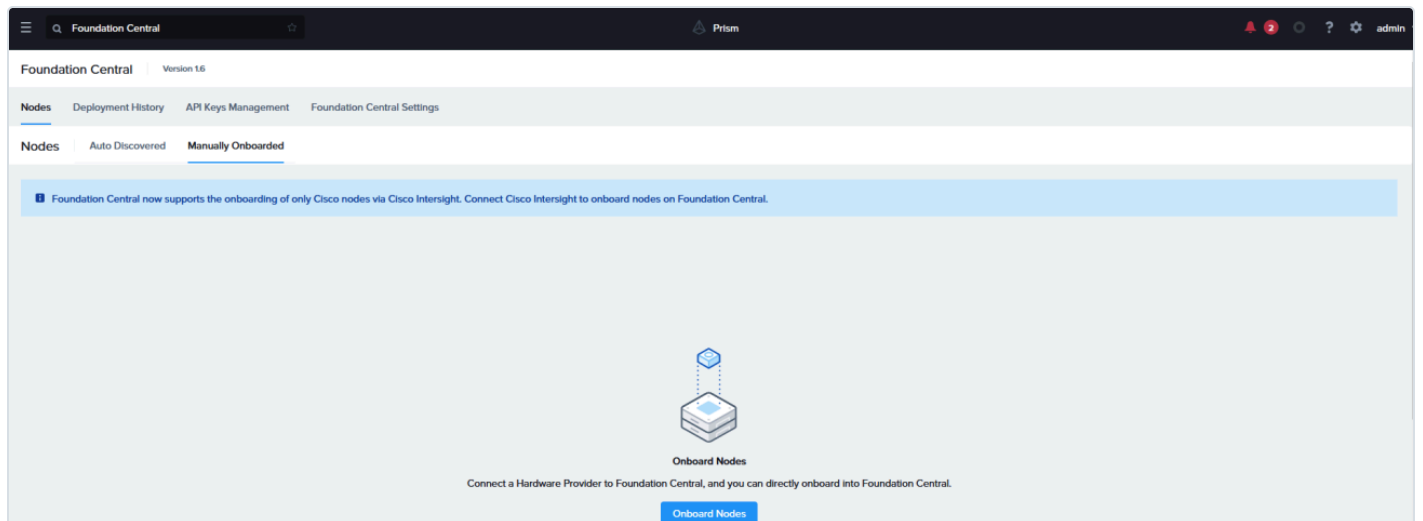

1. For node management mode, choose Intersight Managed Mode then click Next

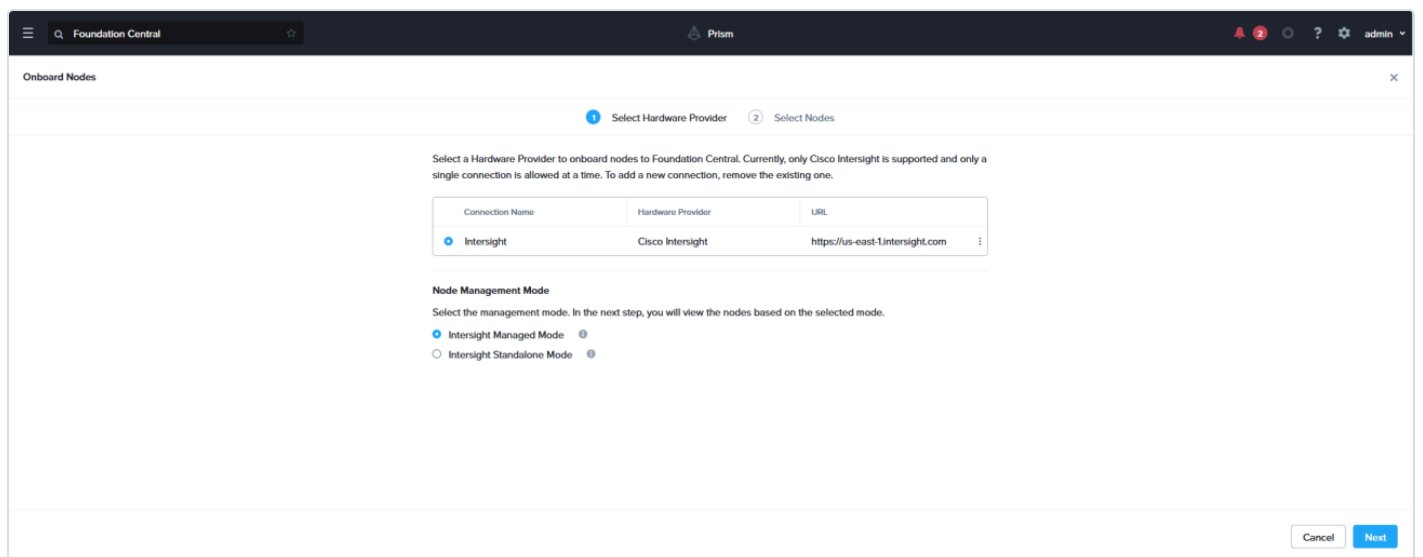

1. Select all Nodes you can to onboard and then click Onboard

Foundation Central

Prism

2

?

admin

Onboard Nodes

Select Hardware Provider

Select Nodes

Connection Name: **Intersight** Management Mode: **Intersight Managed Mode**

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click [Refresh](#).

Type in a query

▼ Modify Filters

3 selected out of 3 Cisco Nodes

1 - 3 of 3 20 rows

☒ Node Serial ↑	Name ↓	Model ↓	Block Serial ↓	Domain ↓	Classification ↓	Intersight Organizations ↓	Intersight Tags ↓	Memory (GB) ↓	CPU (Core) ↓
☒ FCH2852777V	rtp-cpoc-dng-b16-46536-11	UCSX-210C-M7	FOX2907P2ZC	rtp-cpoc-dng-b16-46536	Nutanix	, Intersight-Nutanix	-	256	32
☒ FCH285277CF	rtp-cpoc-dng-b16-46536-13	UCSX-210C-M7	FOX2907P2ZC	rtp-cpoc-dng-b16-46536	Nutanix	, Intersight-Nutanix	-	256	32
☒ FCH285277DG	rtp-cpoc-dng-b16-46536-12	UCSX-210C-M7	FOX2907P2ZC	rtp-cpoc-dng-b16-46536	Nutanix	, Intersight-Nutanix	-	256	32


← Back

Cancel


Onboard

Scenario 4 · Nutanix Cluster Deployment with AHV or ESX Hypervisor

1. In Foundation Central under Nodes > Manually Onboarded, select the 3 nodes would like to use for the cluster deployment and click on Create Cluster

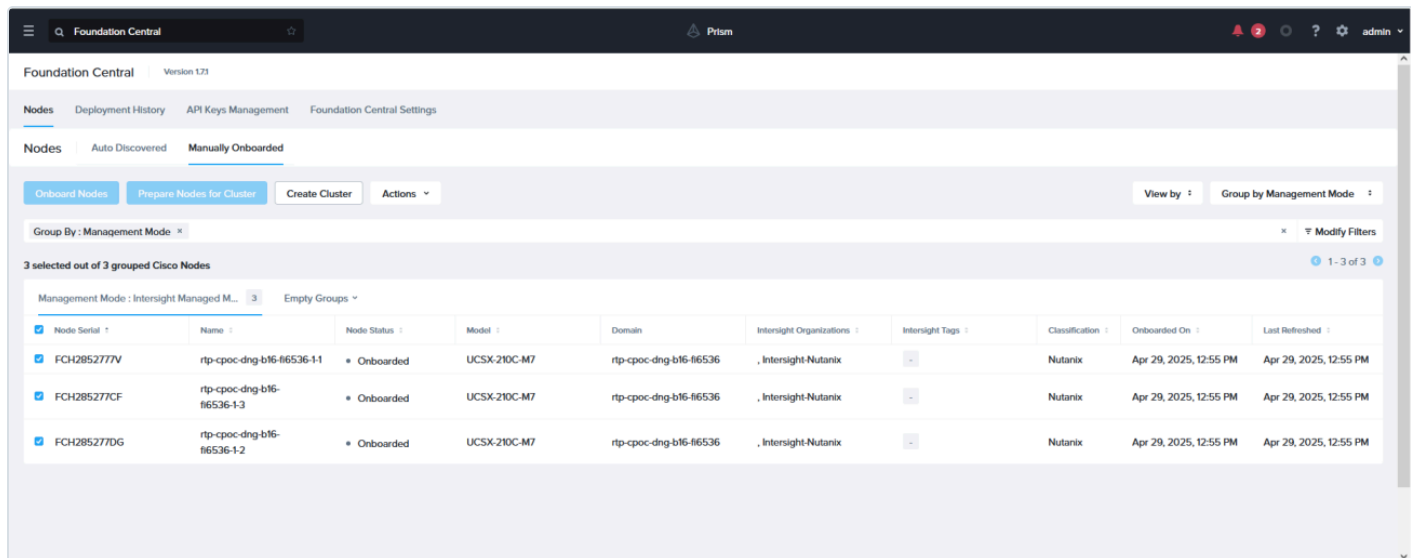


1. Enter the required information and click Next
2. Name = IMM
3. Intersight Organization= Intersight-Nutanix

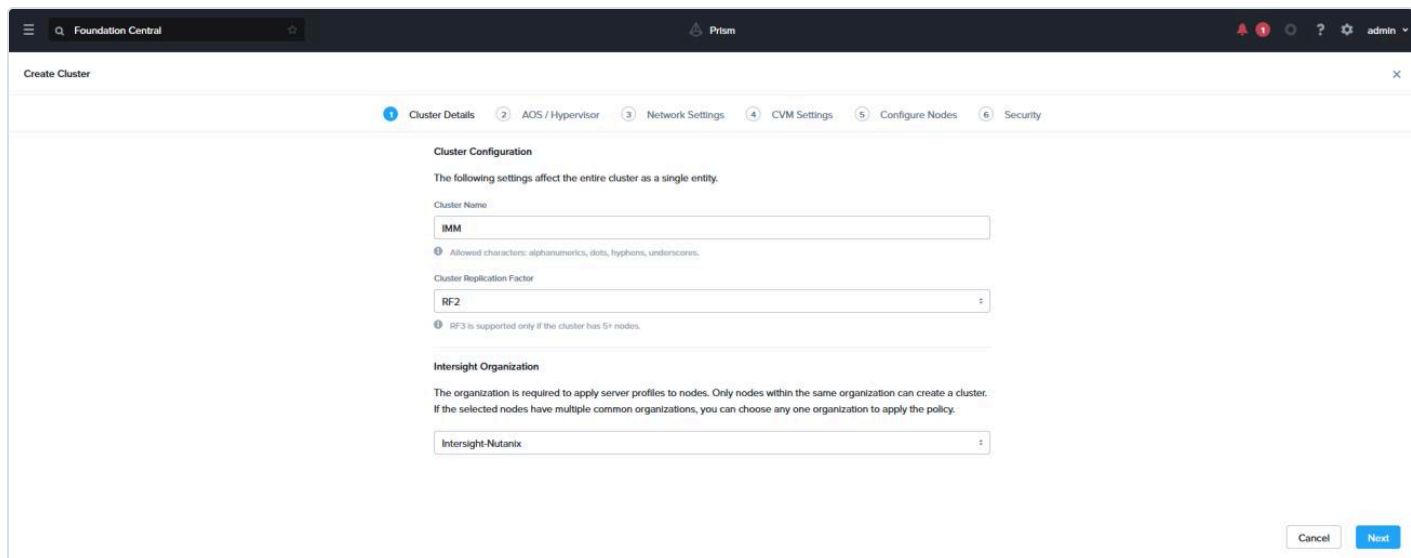

1. Login into Cisco IMM Transition tool, the access is located on the bookmark, In the Application click in Software Repository, you will see some folders for different versions, for this deployment, we offer the option to select one of the Nutanix AOS and the hypervisor which is supported by the servers, check the versions and select the one you like to deploy using AOS with AHV hypervisor or check below the options of VMware ESXi

Note

Check the versions here <https://portal.nutanix.com/page/compatibility-interoperability-matrix>

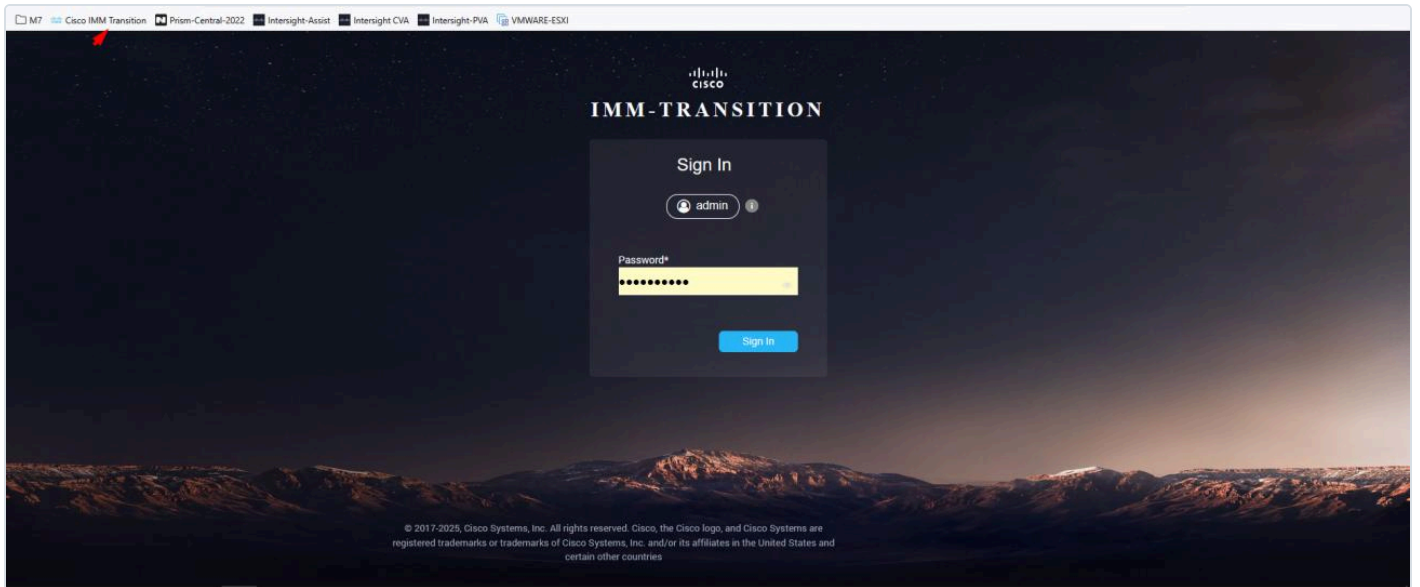

All Versions		
Hardware Model	AOS Version	Recommended Hypervisor Version
Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	6.8.1	AHV-20230302.101026

Hardware Model	AOS Version	Recommended Hypervisor Version
Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	6.10	AHV-20230302.102001

Hardware Model	AOS Version	Recommended Hypervisor Version
Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	7.0	AHV-10.0

Hardware Model	AOS Version	Recommended Hypervisor Version
Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	7.0.0.5	AHV-10.0.0.1

Hardware Model	AOS Version	Recommended Hypervisor Version
Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	7.0.1.5	AHV-10.0.1

All Versions		
Hardware Model	AOS Version	Recommended Hypervisor Version
Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	6.8.1	ESXi 8.0 U2 Vendor
HCIX210C-M7SN/UCSX-210C-M7	6.8.1	ESXi 7.0 U3o Vendor
HCIX210C-M7SN/UCSX-210C-M7	6.8.1	ESXi 7.0 U3s
HCIX210C-M7SN/UCSX-210C-M7	6.8.1	ESXi 8.0 U2d


Hardware Model ▾	AOS Version ▴	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	6.10	ESXi 8.0 U2 Vendor
HCIX210C-M7SN/UCSX-210C-M7	6.10	ESXi 7.0 U3o Vendor
HCIX210C-M7SN/UCSX-210C-M7	6.10	ESXi 8.0 U3 Vendor
HCIX210C-M7SN/UCSX-210C-M7	6.10	ESXi 8.0 U3d
HCIX210C-M7SN/UCSX-210C-M7	6.10	ESXi 8.0 U2d
HCIX210C-M7SN/UCSX-210C-M7	6.10	ESXi 7.0 U3s

Hardware Model ▾	AOS Version ▴	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	7.0	ESXi 8.0 U2 Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0	ESXi 7.0 U3o Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0	ESXi 8.0 U3 Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0	ESXi 8.0 U3d
HCIX210C-M7SN/UCSX-210C-M7	7.0	ESXi 8.0 U2d
HCIX210C-M7SN/UCSX-210C-M7	7.0	ESXi 7.0 U3s


Hardware Model ▾	AOS Version ▴	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	7.0.0.5	ESXi 8.0 U2 Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0.0.5	ESXi 7.0 U3o Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0.0.5	ESXi 8.0 U3 Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0.0.5	ESXi 8.0 U3d
HCIX210C-M7SN/UCSX-210C-M7	7.0.0.5	ESXi 8.0 U2d
HCIX210C-M7SN/UCSX-210C-M7	7.0.0.5	ESXi 7.0 U3s

Hardware Model ▾	AOS Version ▴	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIX210C-M7SN/UCSX-210C-M7	7.0.1.5	ESXi 8.0 U3 Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0.1.5	ESXi 8.0 U2 Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0.1.5	ESXi 7.0 U3o Vendor
HCIX210C-M7SN/UCSX-210C-M7	7.0.1.5	ESXi 8.0 U3d
HCIX210C-M7SN/UCSX-210C-M7	7.0.1.5	ESXi 8.0 U2d
HCIX210C-M7SN/UCSX-210C-M7	7.0.1.5	ESXi 7.0 U3s


1. Choose one of the options to deploy the new cluster, access the desired folder and copy the AOS link, click the Ellipsis at the right side, then select share link

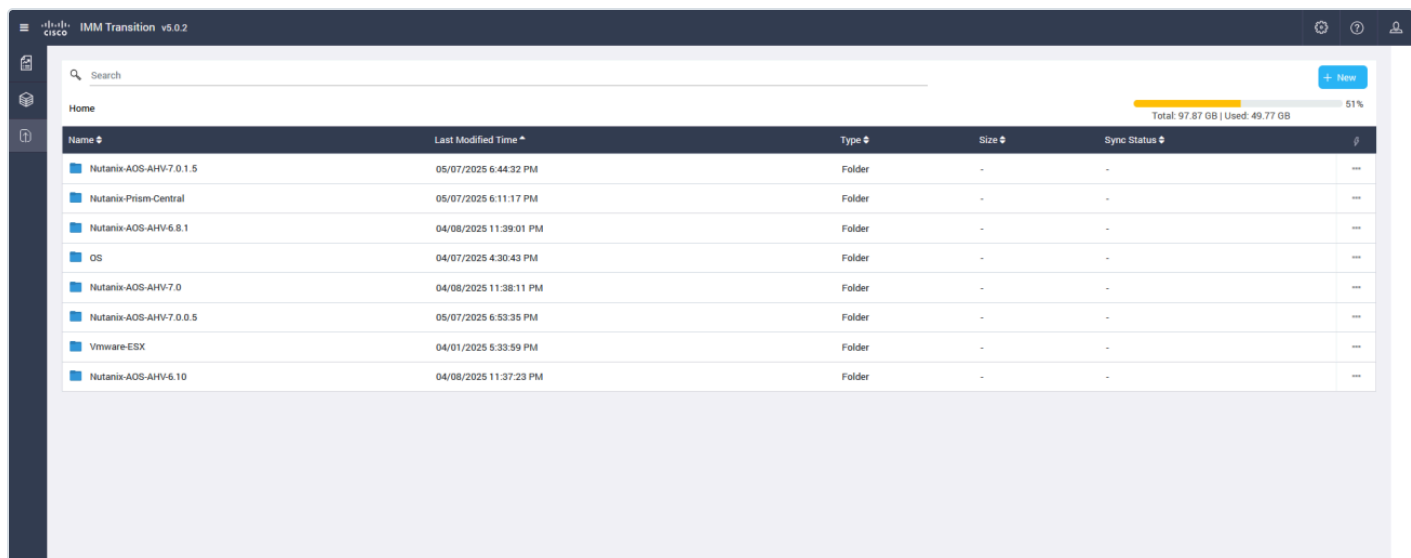

1. Return to Prism Central and paste the copied link into the AOS URL, then from the hypervisor option click on it and select AHV, then return to Cisco IMM to copy the link of AHV, select the ISO and click Next

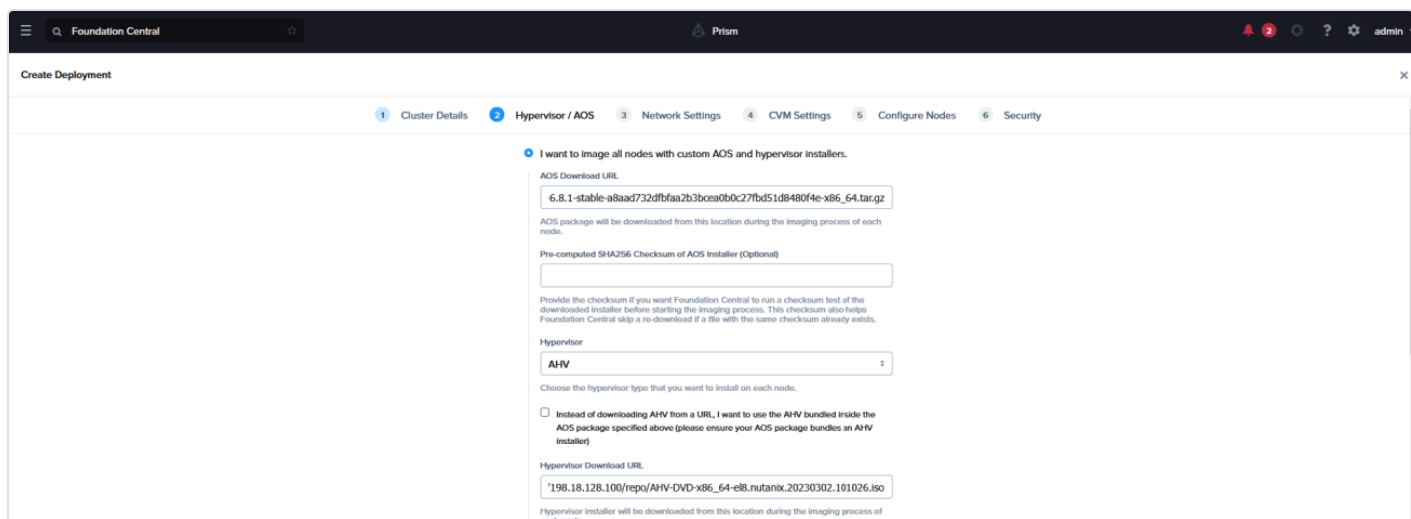

1. Fill in the networking information a. Gateway = 198.18.128.1 b. Netmask = 255.255.192.0 / 18 c. Cluster Virtual IP = 198.18.136.2 d. Host CVM VLAN = 10

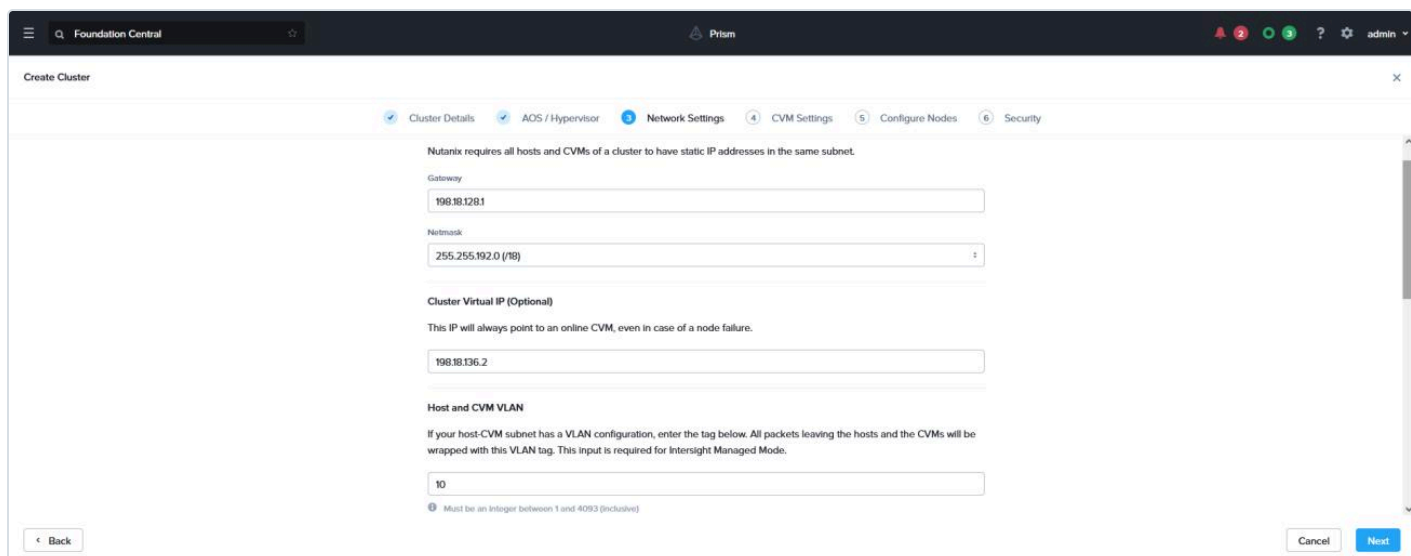

e. Mac Pool = click the bar and select the existing f. IMC Access Configuration

- IMC Access Type = Out-of-Band
- Out-of-Band IP Pool = choose the one from the dropdown menu g. Click next to continue

The screenshot shows the 'Create Cluster' wizard in Foundation Central, specifically the 'Network Settings' step. The wizard has six steps: Cluster Details, AOS / Hypervisor, Network Settings (current), CVM Settings, Configure Nodes, and Security. The 'Network Settings' section includes a 'MAC Pool' dropdown set to 'ntp-cpoc-dng-b16-f16536-mac-pool (64 available)' and an 'IMC Access Configuration' section. The 'IMC Access Type' is set to 'Out-of-Band' and the 'Out-of-Band IP Pool' is set to 'ntp-cpoc-dng-b16-f16536-IP-Pool (25 IPv4 available)'. A note states: 'Out-of-Band only supports IPv4, not IPv6.' The 'Next' button is highlighted in blue.

1. CVM Settings use the following information:

2. Timezone= America/New_York

3. NTP=198.18.128.1

4. DNS= 198.18.133.1

5. Click Next

The screenshot shows the 'Create Deployment' wizard in Foundation Central, specifically the 'Time Configuration' step. The wizard has two steps: Time Configuration (current) and DNS Settings. The 'Time Configuration' section includes a 'Timezone' dropdown set to 'America/New_York' and an 'NTP Servers (Optional)' text box containing '198.18.128.1'. The 'DNS Settings' section includes a 'DNS Servers (Optional)' text box containing '198.18.133.1'. The 'Next' button is highlighted in blue.

1. To complete the cluster Host IP, CVM IP and Host name use the image below as an example, you can use any IP address from 198.18.136.10 up to 198.18.136.100

Foundation Central Prism admin

Create Cluster

Cluster Details AOS / Hypervisor Network Settings CVM Settings **Configure Nodes** Security

UUID Pool (Optional)

It is a collection of UUID items that can be allocated to server profiles. Select a pool from the UUID pools created in Cisco Intersight.

UUID Pool (Optional) Refresh

Select UUID Pool

3 Nodes

Node Serial	Name	Hypervisor IP Set Range	CVM IP Set Range	
FCH285277CF	rtp-cpoc-dng-b16-f6536-1-3	198.18.136.10	198.18.136.13	210c-node-1
FCH285277V	rtp-cpoc-dng-b16-f6536-1-1	198.18.136.11	198.18.136.14	210c-node-2
FCH285277DG	rtp-cpoc-dng-b16-f6536-1-2	198.18.136.12	198.18.136.15	210c-node-3

Set up an incremental Hypervisor Hostname for the entire column in the input below.

210c-node-1

Clear

Back Cancel Next

1. For the Foundation Central API Key, click the “+ Generate API key”, add a name, select the new API from the drop-down menu and click Submit

1 Cluster Details 2 Hypervisor / AOS 3 Network Settings 4 CVM Settings 5 Configure Nodes **6 Security**

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key + Generate API Key

Intersight

Back Submit

1. The cluster deployment begins and takes approximately 1h15m to complete

Foundation Central

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 2 deployments Show Only Non-archived

IMM Deployment in progress Start Date and Time: 5/7/2025, 04:45 PM

Phase 1A: Node Preparation 9% 3 nodes in progress Phase 1B: Node Imaging 0% Not started Phase 2: Cluster Formation 0% Waiting for Phase 1 to finish

Cluster Details

Redundancy Factor 2	Host/CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://198.18.128.100/repo/Nutanix-AOS-AH-V-7.0/nutanix_installer_package-release-ganges-7.0-stable-2b780c6331a28149692d8d46297b7827617d906-x86_64.tar.gz
Cluster External IP 198.18.136.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL https://198.18.128.100/repo/Nutanix-AOS-AH-V-7.0/AH-V-DVD-x86_64-10.0-808.iso
Host/CVM VLAN ID 10	Deployment UUID 754e08fa-76e1-48c4-46be-b7daBabc4447	LACP No	IMC Out-of-Band IP Pool rtp-cpoc-dng-b16-f6536-IP-Pool
MAC Pool rtp-cpoc-dng-b16-f6536-mac-pool	VLAN ID for vNICs 10	UUID Pool Not provided	

3 Nodes In This Deployment

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
FCH2852777V	FOX2907P22C	A	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.136.11	198.18.136.14	AH-V	210c-node-2
FCH285277DG	FOX2907P22C	B	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.136.12	198.18.136.15	AH-V	210c-node-3
FCH285277CF	FOX2907P22C	C	2%	[Node:Configuration] Turning on the node	198.18.136.10	198.18.136.13	AH-V	210c-node-1

[View Original Configuration](#)

1. Return to Intersight, under Operate select Servers to check the Server Profile provisioning progress.

Intersight

Servers

* All Servers 7 results

Health 7 Healthy 7 Power On 7 HCL Status Not Evaluated 7 Bundle Version 7 4.3(5.240021) 4 5.3(0.240016) 3 Utility Storage No 3 Yes 4 Firmware Version 7 4.3(5.240021) 4 5.3(0.240016) 3 Models 7 C240 M7SN 4 UCSX 210C-M7 3 Contract St Not Cove

Name	Health	Model	CPU Capacity	Memory Capacity	UCS Domain	Server Profile	Bundle Version
C240-WZP28389...	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)
C240-WZP28389...	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)
C240-WZP28400...	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)
C240-WZP28400...	Healthy	UCSC-C240-M7SN	115.2	512.0			4.3(5.240021)
rtp-cpoc-dng-b16-f6536-1-1	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-f6536-1-1	ntnx_FCH2852777...	5.3(0.240016)
rtp-cpoc-dng-b16-f6536-1-2	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-f6536-1-2	ntnx_FCH285277D...	5.3(0.240016)
rtp-cpoc-dng-b16-f6536-1-3	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-f6536-1-3	ntnx_FCH285277C...	5.3(0.240016)

Rows per page 10 < 1 >

1. Let's explore Intersight, under Configure select Profiles > UCS Server Profiles. Note the profiles are being created/configured under Activating status.

Intersight

Profiles

HyperFlex Cluster Profiles UCS Chassis Profiles UCS Domain Profiles UCS Server Profiles

Create UCS Server Profile

* All UCS Server Profiles 3 results

Status Validating 3 Inconsistency Reason No data available Template Sync Status No data available Target Platform FI-Attached 3

Name	Status	Target Platform	UCS Server Template	Template Sync Status	Server	Last Update
ntnx_FCH2852777V_d918...	Validating	UCS Server (FI-Attached)		-	rtp-cpoc-dng-b16-f6536-1-1	4 hours ago
ntnx_FCH285277DG_d918...	Validating	UCS Server (FI-Attached)		-	rtp-cpoc-dng-b16-f6536-1-2	4 hours ago
ntnx_FCH285277CF_d918...	Validating	UCS Server (FI-Attached)		-	rtp-cpoc-dng-b16-f6536-1-3	4 hours ago

Rows per page 21 < 1 >


1. In Configure > Policies, note all the UCS Server policies created as part of the automated process between Foundation Central and Intersight.

Name	Platform Type	Type	Usage	Last Update
ntnx_m2-raid_FCH2852777V_d9184...	UCS Server	Boot Order	Used	4 hours ago
ntnx_kvm_IMM_d9184d35-e374-41f...	UCS Server	Virtual KVM	Used	4 hours ago
ntnx_lol_IMM_d9184d35-e374-41f9...	UCS Server	IPMI Over LAN	Used	4 hours ago
ntnx_m2-storage_FCH2852777V_d91...	UCS Server	Storage	Used	4 hours ago
ntnx_lmc-access_IMM_d9184d35-e3...	UCS Server, UCS Chassis	IMC Access	Used	4 hours ago
ntnx_firmware_FCH2852777V_d9184...	UCS Server	Firmware	Used	4 hours ago
ntnx_sol_IMM_d9184d35-e374-41f9...	UCS Server	Serial Over LAN	Used	4 hours ago
ntnx_nvme-bios_IMM_d9184d35-e37...	UCS Server	BIOS	Used	4 hours ago
ntnx_lcp-cisco_FCH2852777V_d918...	UCS Server	LAN Connectivity	Used	4 hours ago
ntnx_m2-raid_FCH285277DQ_d9184...	UCS Server	Boot Order	Used	4 hours ago


1. In the top right of the screen, click the Requests icon to monitor the undergoing tasks.

Name	Status	Initiator	Target Type	Target Name	Start Time	Duration	ID	Execute
Server Profile Act...	In Progress 3%	intuser-25793@c...	Blade Server	rtp-cpoc-dng-b1...	4 hours ago	4 h 0 m 48 s	681a3827696f6e...	Execute
Deploy Server Pr...	In Progress 42%	intuser-25793@c...	Blade Server	rtp-cpoc-dng-b1...	4 hours ago	4 h 6 m 45 s	681a36c1696f6e...	Execute
Deploy Server Pr...	In Progress 42%	intuser-25793@c...	Blade Server	rtp-cpoc-dng-b1...	4 hours ago	4 h 6 m 46 s	681a36c0696f6e...	Execute


1. Click on any of the tasks to check the progress of the server configuration

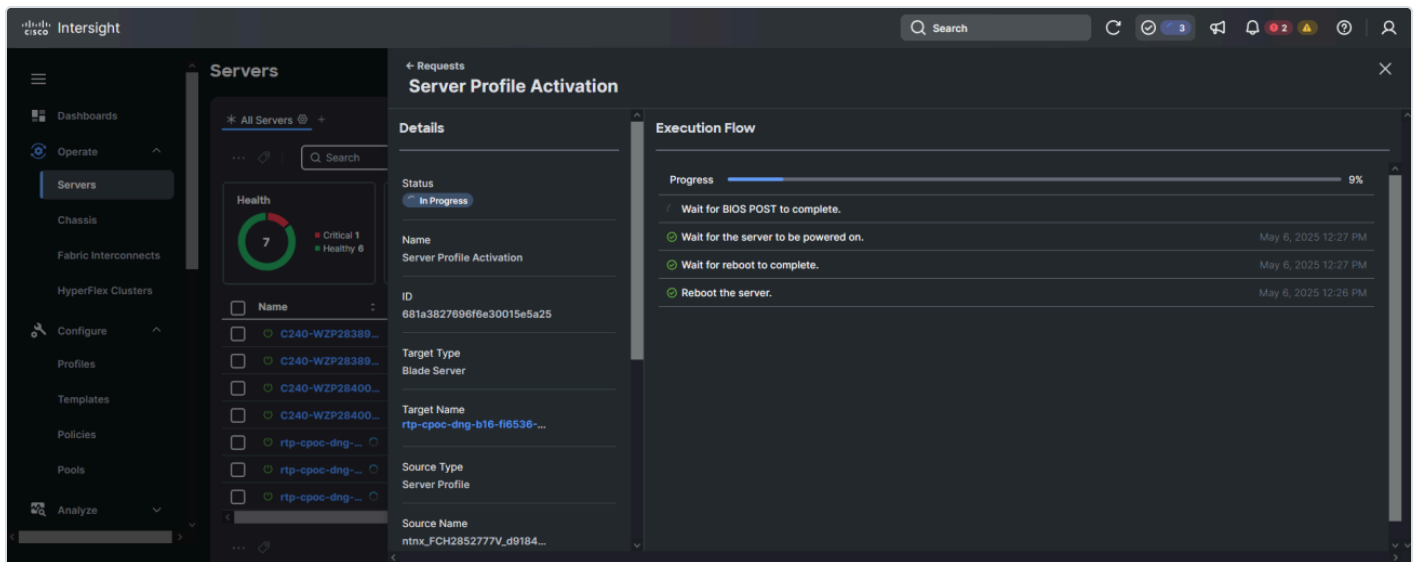


1. Return to Prism Central to monitor the cluster deployment progress.
2. Once the cluster deployment is completed, click "Open Prism Element"

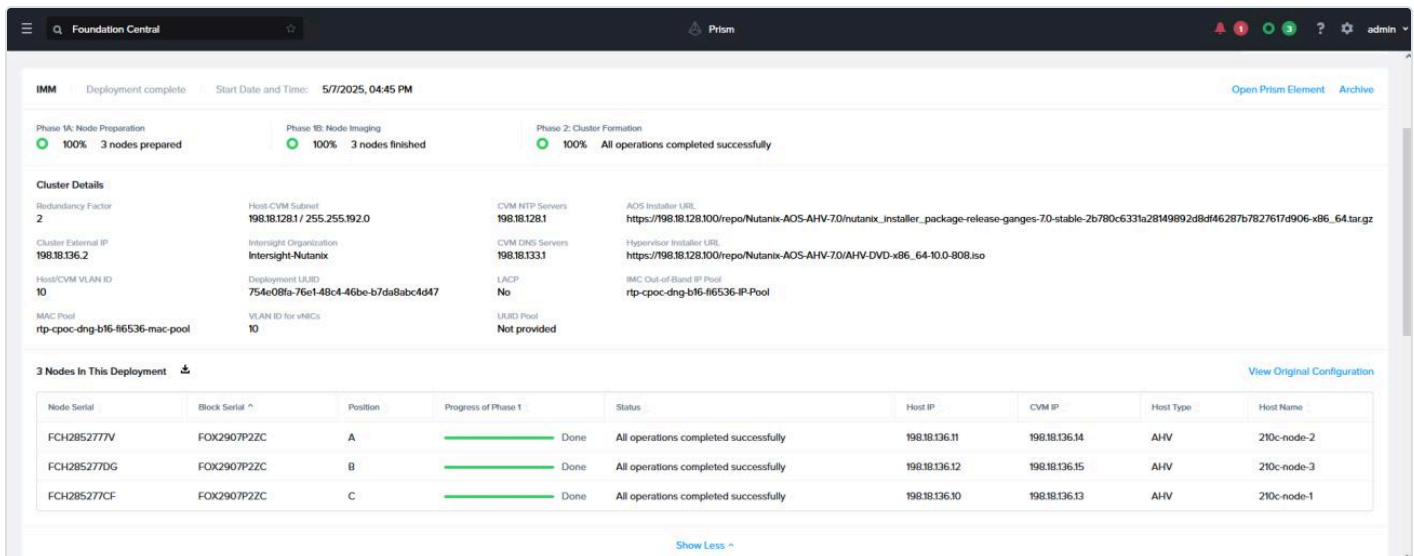


1. On Prism Element UI, login with user "admin" (password: Nutanix/4u) and change the password to C1sco12345!

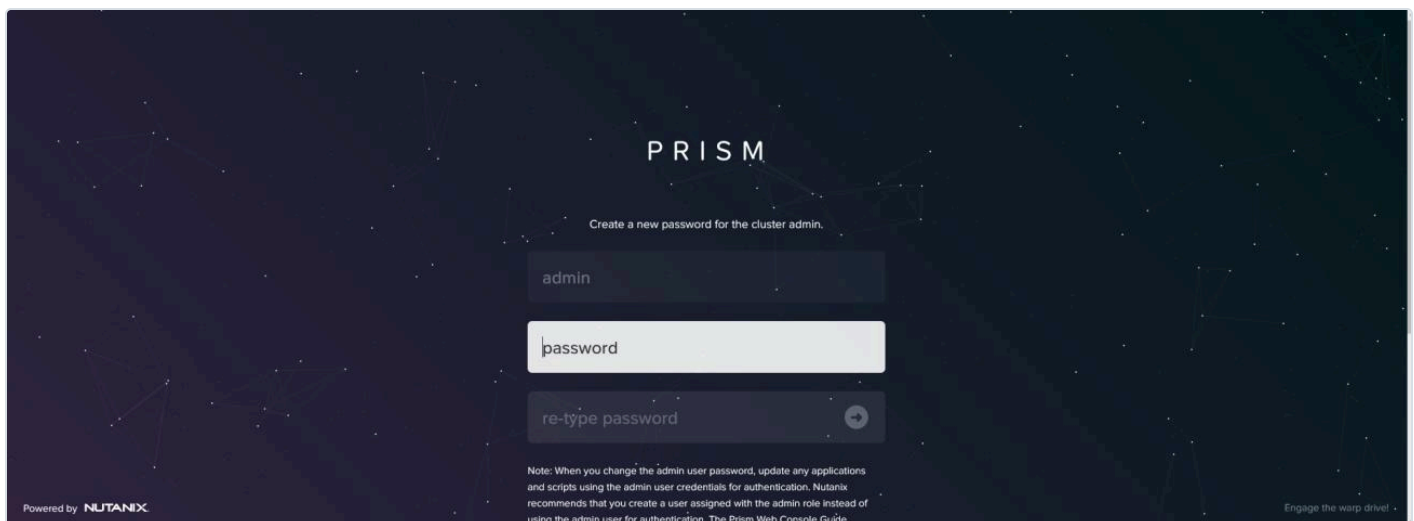


1. After the password has been successfully changed, login with user admin and password C1sco12345!

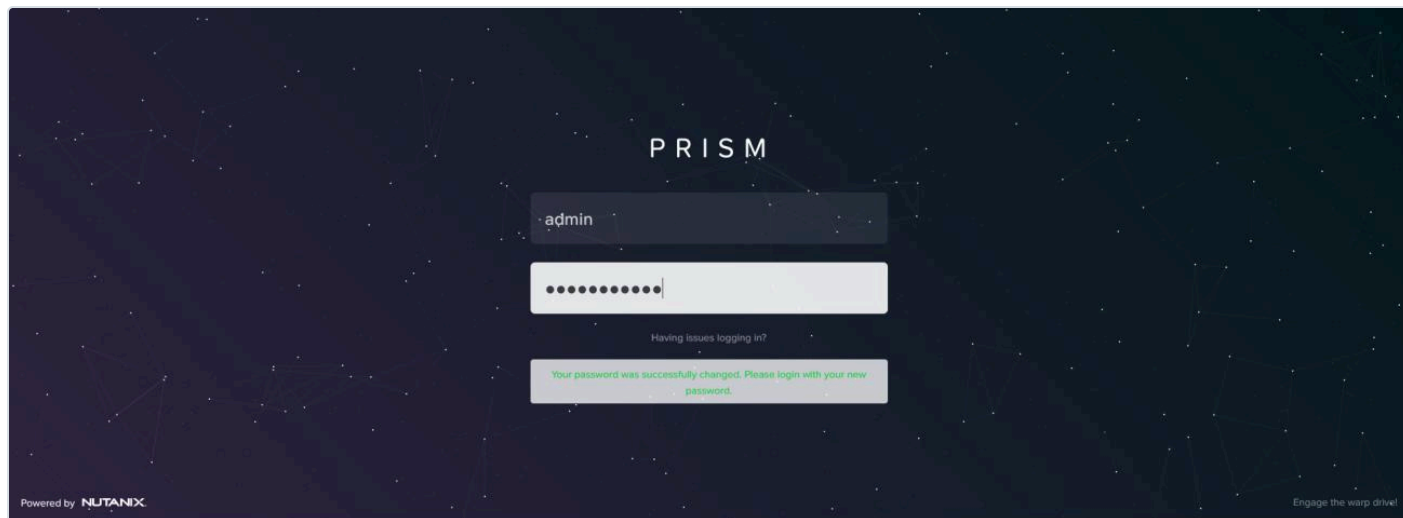


1. Complete the Nutanix EULA,
2. Name = Cpoc
3. Company = Cisco
4. Job title = IMM
5. Check the box and click accept and continue

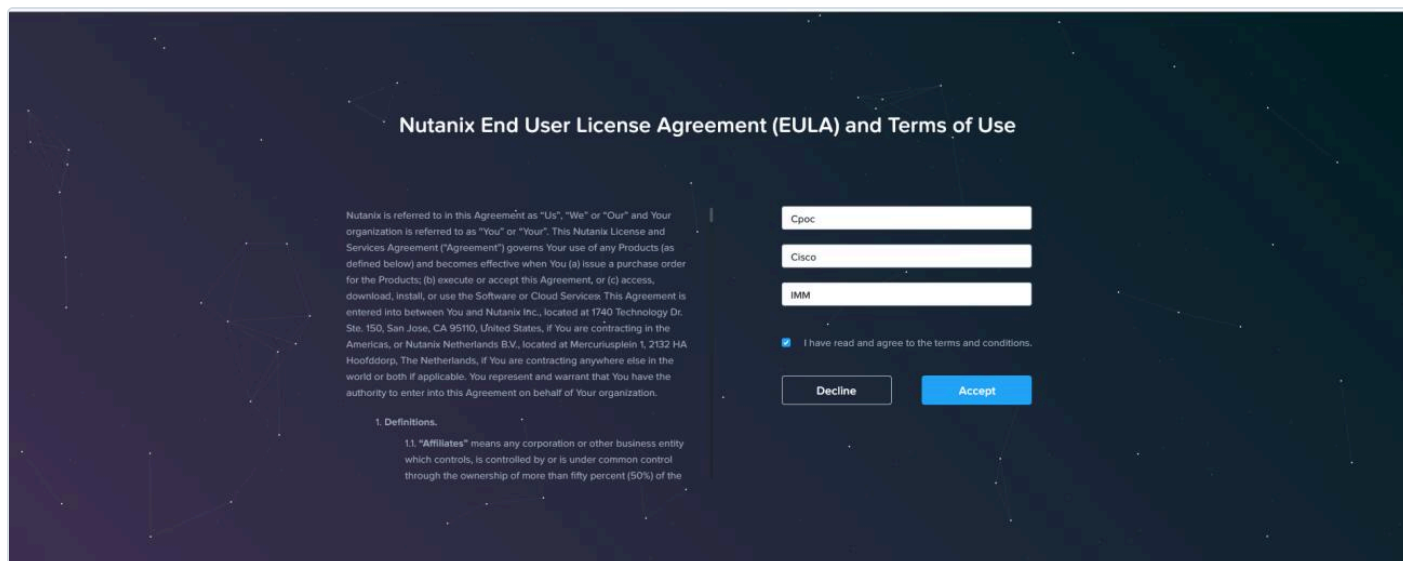


1. Keep the Pulse option by default, click Continue

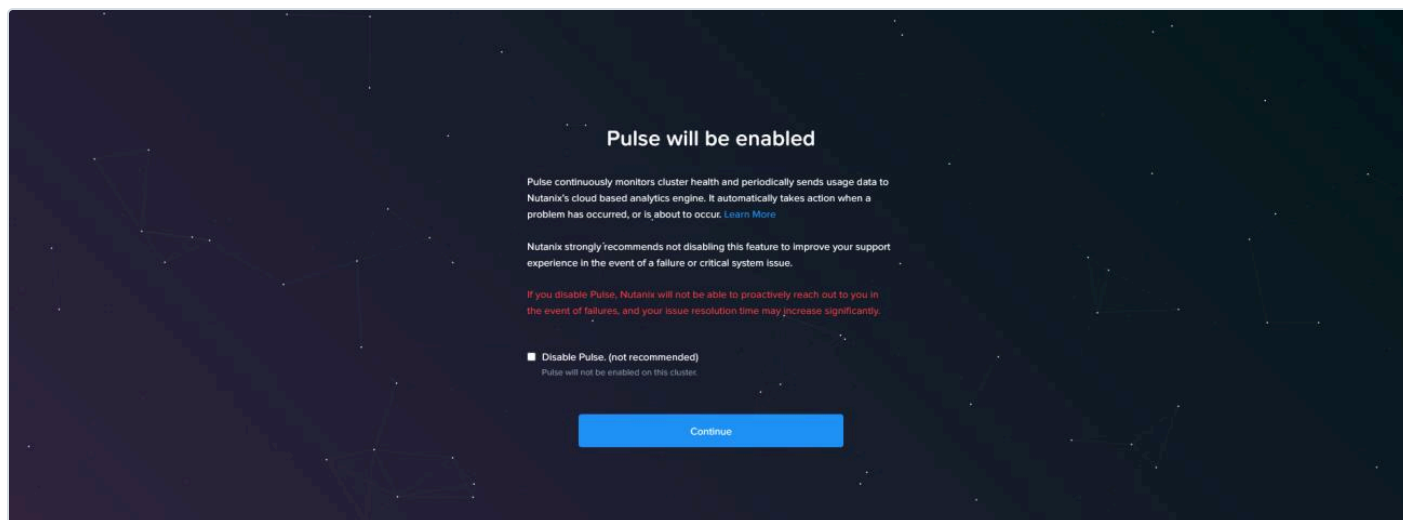


1. You should be taken to the main dashboard

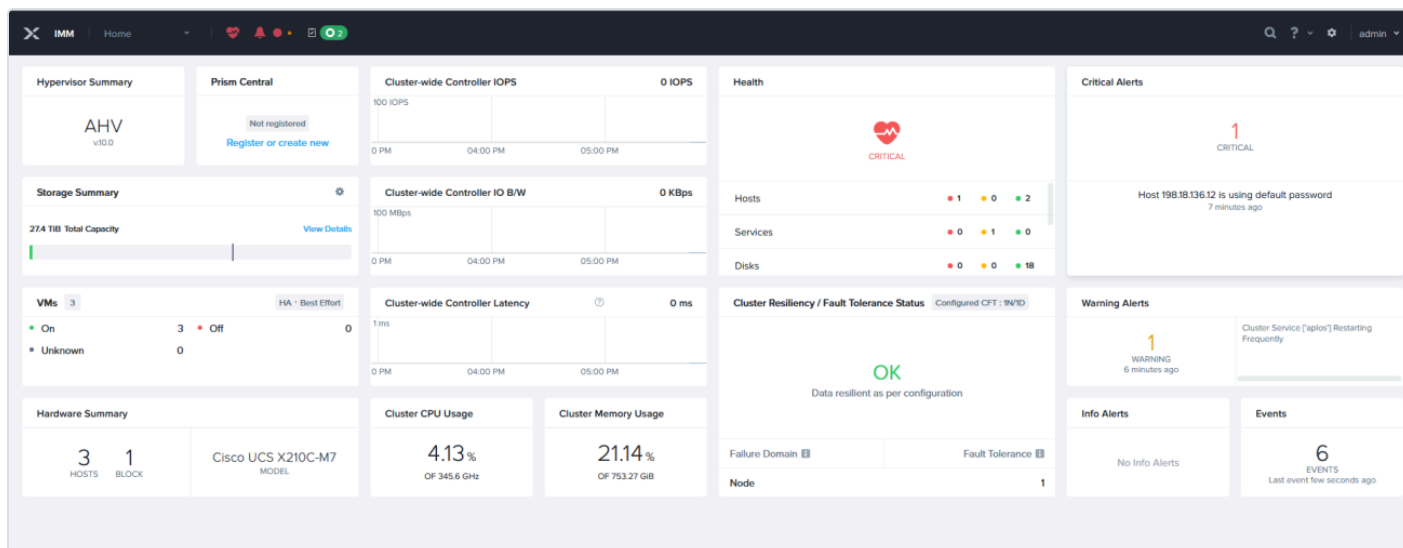


1. Click the cluster name on the top left ("IMM") next to the X icon, add 198.18.136.3 in the Data Service IP field and click Save

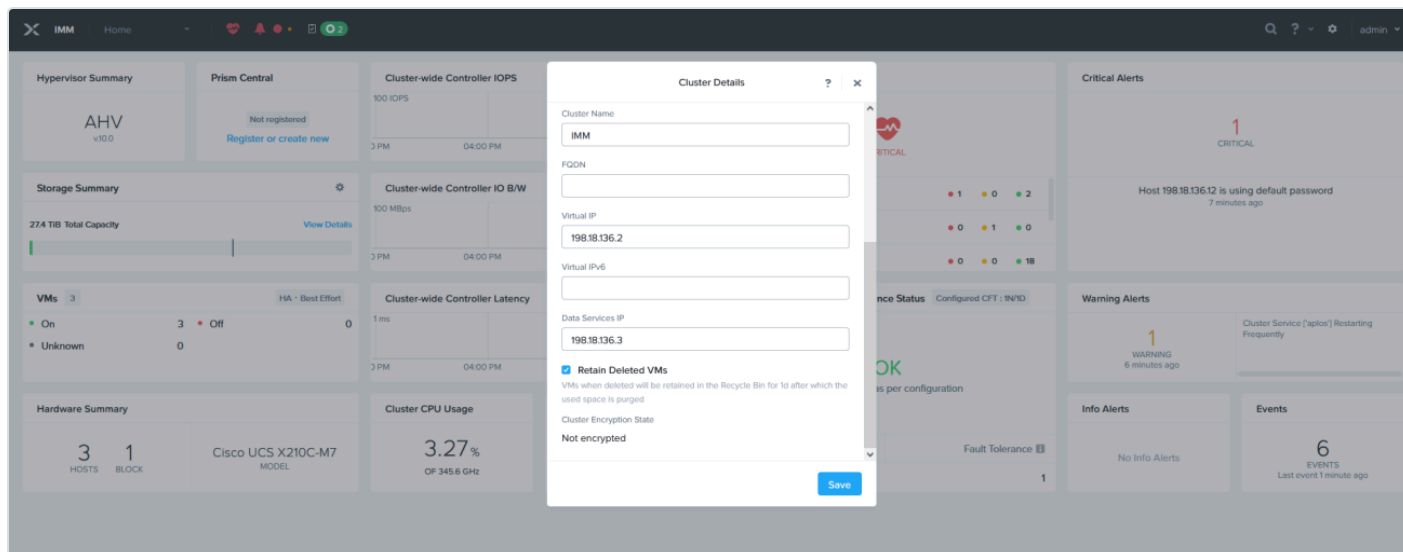


1. Let's start with some basic configuration, click Home at the top and select Settings then Network Configuration and click "Create Subnet"

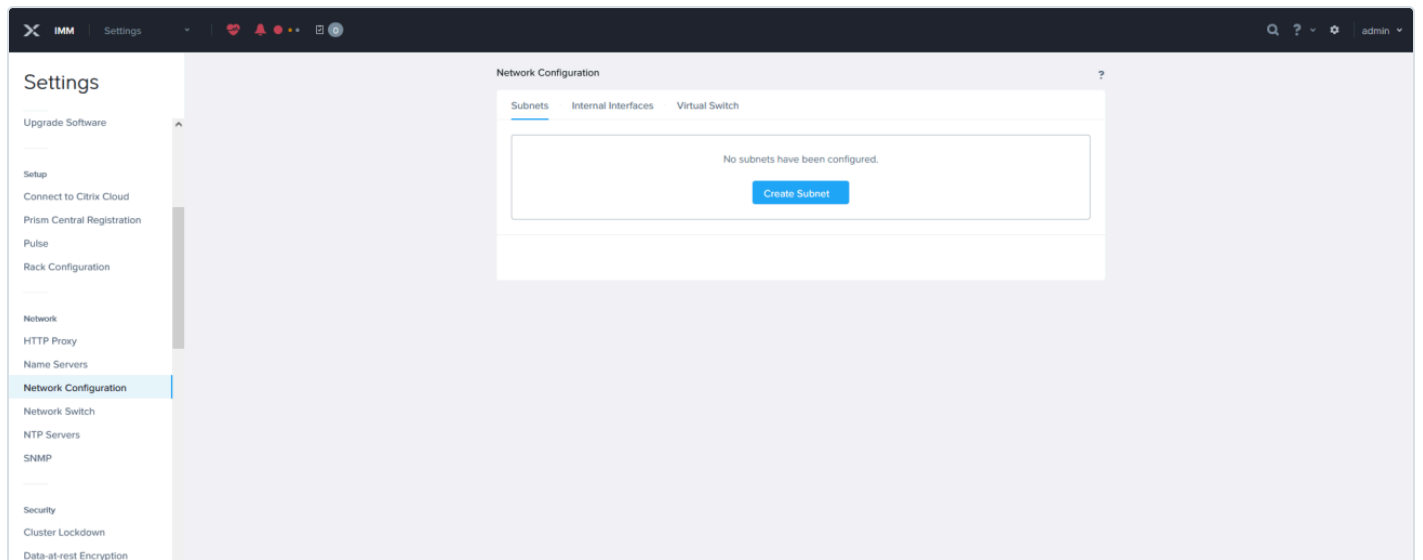


1. On “Create Subnet” use the following information
2. Subnet Name = VMNetwork
3. Virtual Switch= vs0(default)
4. VLAN ID = 10
5. Click Save

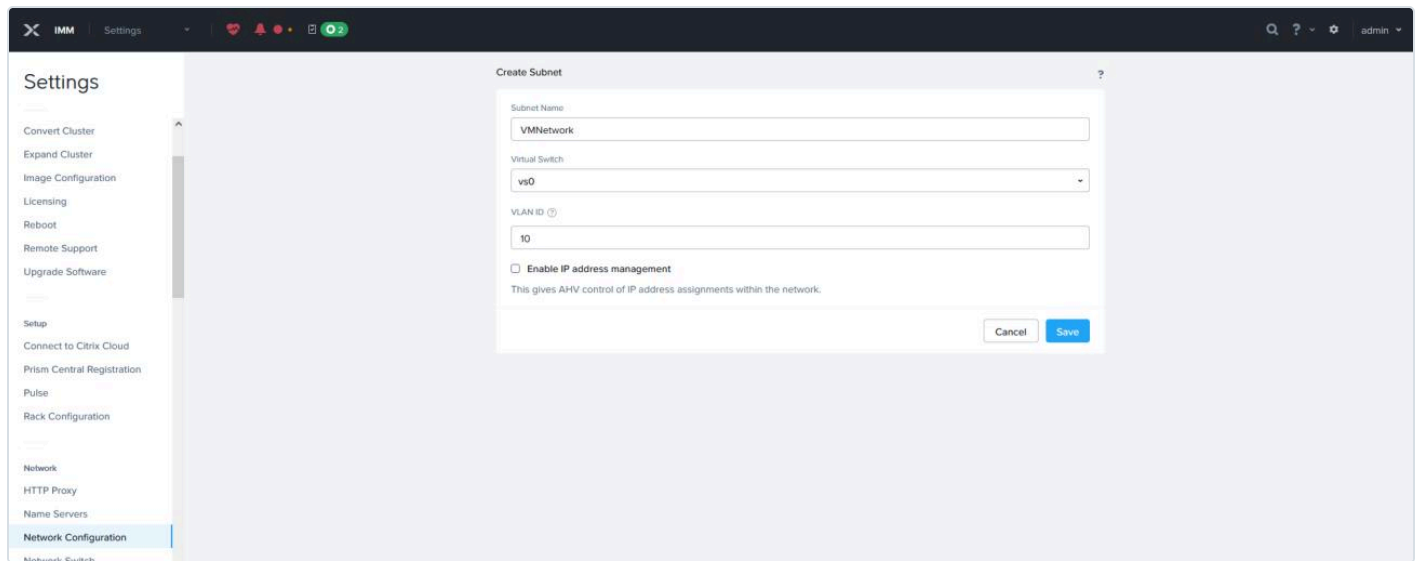


1. Then scroll up and select “Image configuration” and click “+ Upload image”.

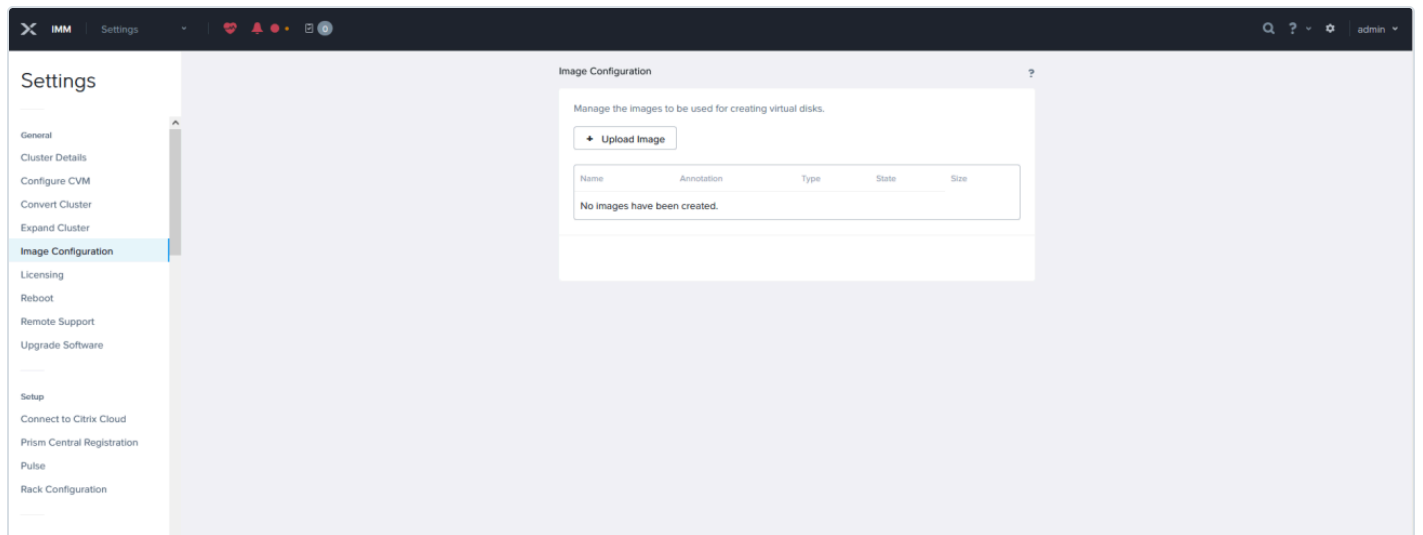

1. In this case we are going to use Ubuntu as an example
2. Name = Ubuntu ISO
3. Image Type = ISO
4. Storage Container = SelfServiceContainer
5. Image Source
 - Upload File > Click “Browse...”, from the Downloads folder select Ubuntu ISO
6. Click Save

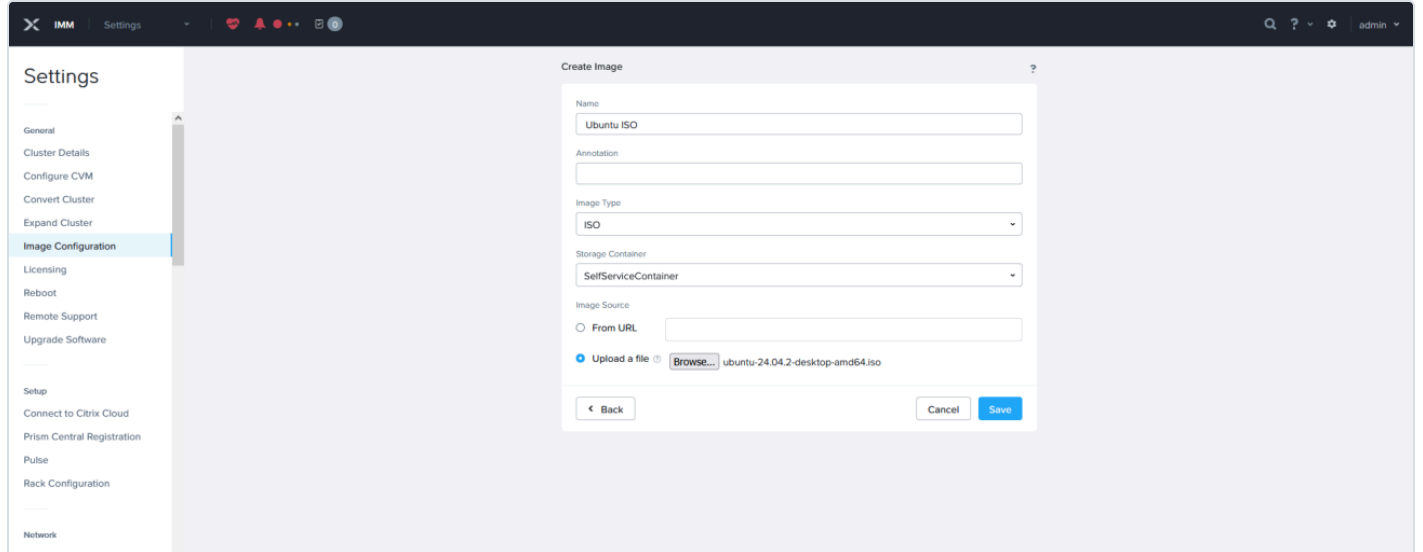


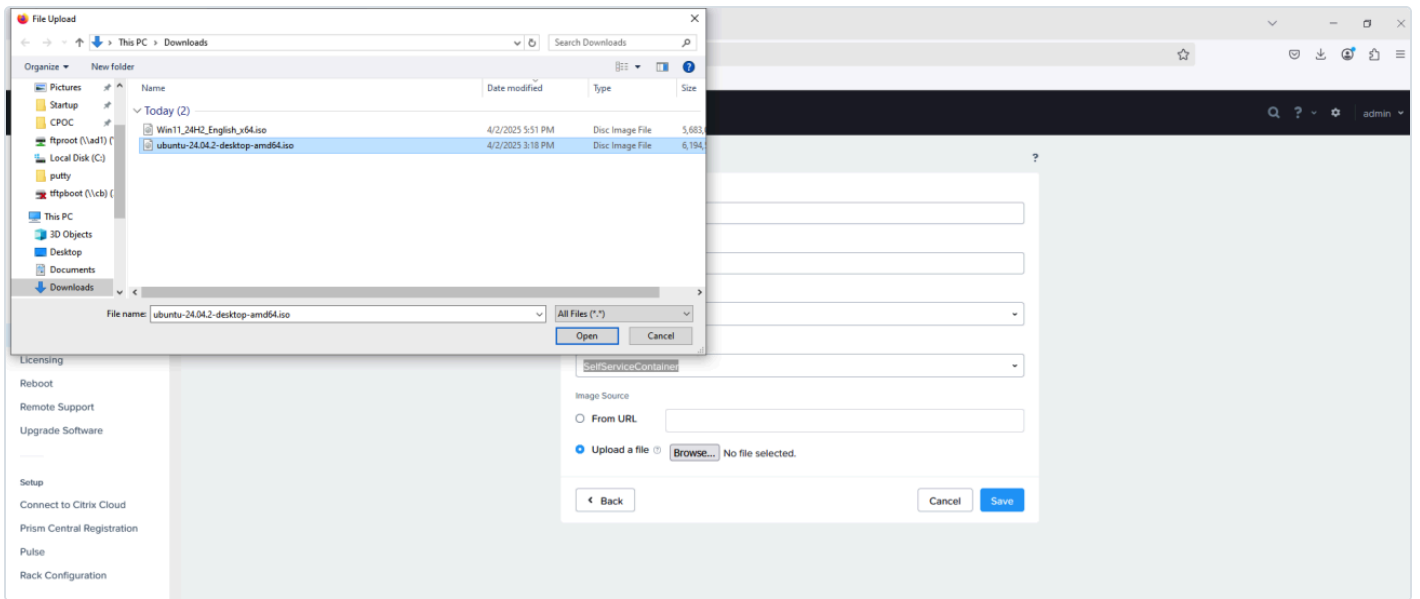


Note

The ISO upload should take a few minutes to complete.


1. Then click the drop-down menu on the top left and select "VM"

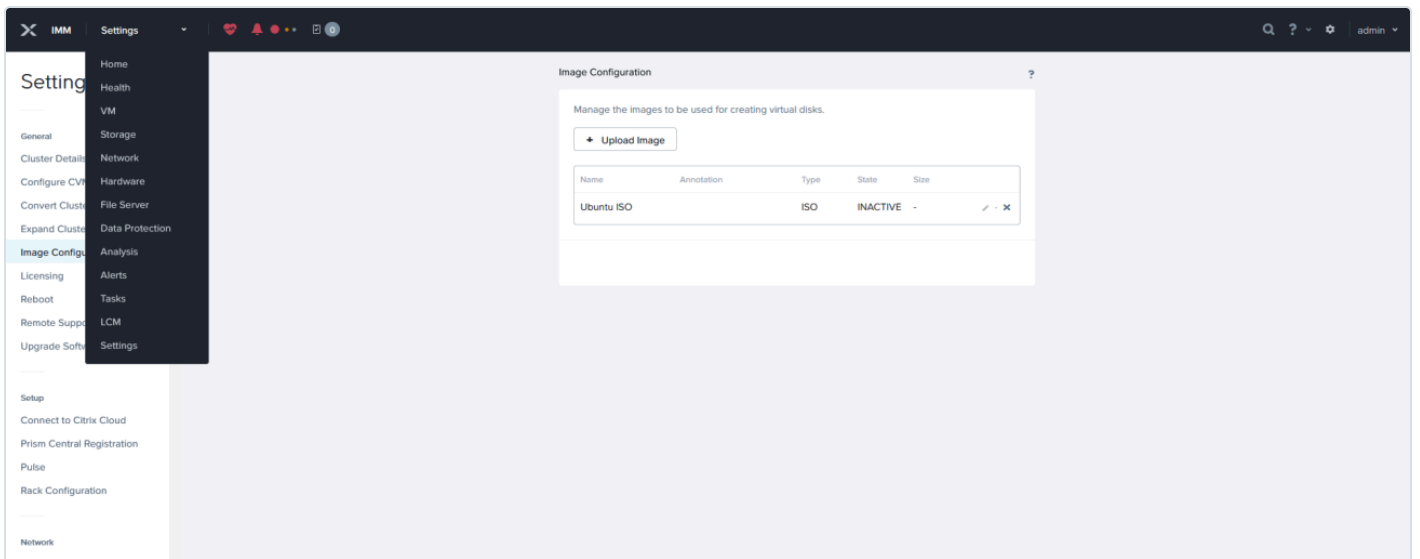

1. In the VM dashboard click "+ Create VM" on the top right

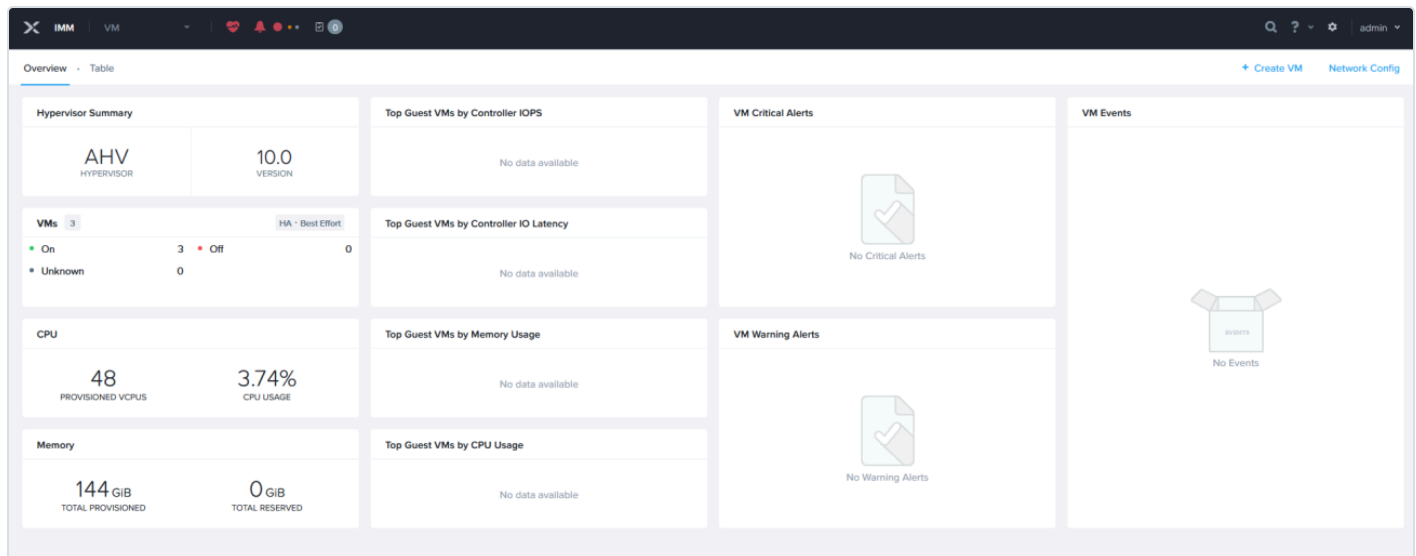

1. Let's fill in the new VM information
2. Name = Ubuntu VM
3. vCPU(s)= 2
4. Memory = 4
5. Disk 1. + Add a New Disk 2. Logical size = 20 3. Click Add 4. Click the pencil of CD-ROM 5. Operation = Clone from Image Service 6. Image = select Ubuntu from the drop down 7. Click Update
6. Network Adapters (NIC) 1. + Add New NIC 2. Subnet Name = VMNetwork 3. Click Add
7. Click Save
8. Then Click Table at the top left, next to overview

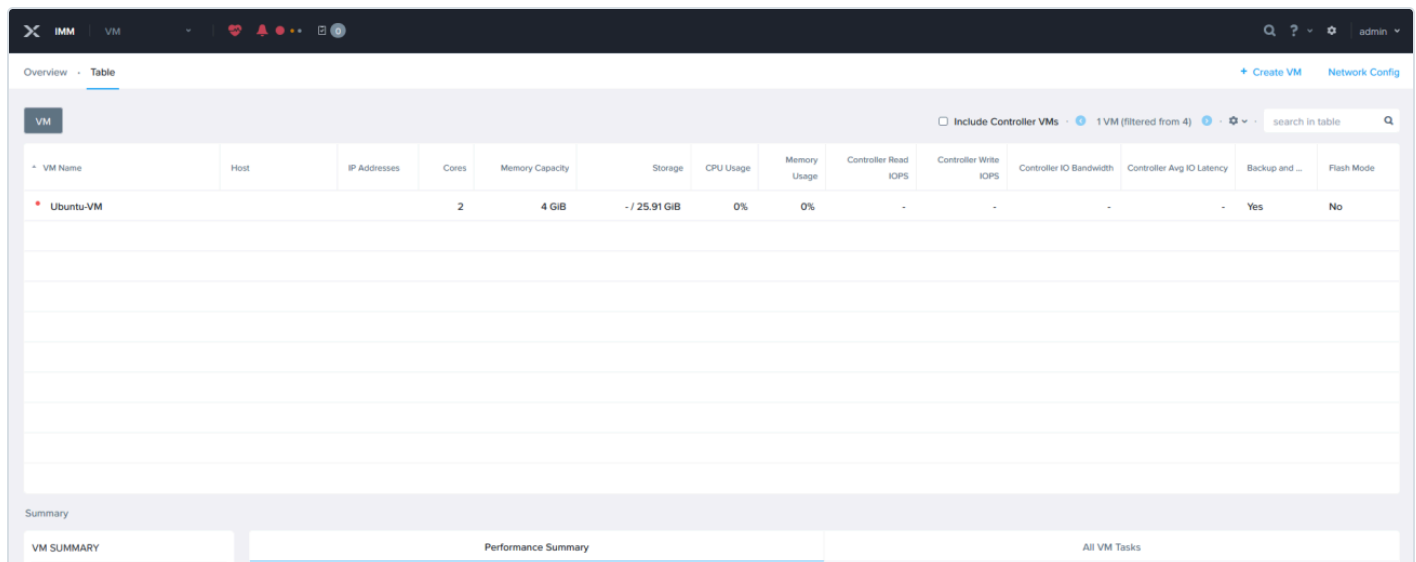

Note

Note the new VM recently created

1. Right-click the Ubuntu VM and select Power On

Overview - Table

VM

Include Controller VMs 1 VM (filtered from 4)

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu-VM			2	4 GiB	5.91 GiB / 25.91 GiB	0%	0%	-	-	-	-	Yes	No

Summary > Ubuntu-VM

VM DETAILS VM Performance Virtual Disks VM NICs VM Snapshots VM Tasks I/O Metrics Console

1. Right-click the VM again and select Launch Console

Overview - Table

VM

Include Controller VMs 1 VM (filtered from 4)

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu-VM	210c-node-2/AHV		2	4 GiB	5.91 GiB / 25.91 GiB	35.42%	-	-	-	-	-	Yes	No

Summary > Ubuntu-VM

VM DETAILS VM Performance Virtual Disks VM NICs VM Snapshots VM Tasks I/O Metrics Console

1. On the VM console, close the Installation window and open a Firefox browser and point to "cisco.com" to test VM usability and connectivity to the Internet.


The screenshot displays the Cisco Immersion Manager (IMM) interface. On the left, a sidebar shows the 'Overview' and 'Table' tabs, with 'VM' selected. Below this, a list of VMs includes 'Ubuntu-VM'. The main area shows a 'Connected to: Ubuntu-VM' console window. Inside the console, a web browser is open to 'https://www.cisco.com', displaying the 'CISCO Live!' logo. The browser's address bar shows the URL 'https://198.18.135.5:9440/console/lib/nc/vnc-new/vnc.html?path=vnc/vm/2bfff8b17-cea1-4a2f-912d-4bf3ed0632c/proxy&title=Ubuntu-VM&vncid=...'. The console window has a title bar 'Ubuntu-VM - Mozilla Firefox' and a status bar 'May 7 17:34'. Below the console, there are buttons for 'Mount ISO', 'Unmount ISO', and 'Power Off'. On the right, a 'Cisco IMM Transition' window is open, showing a table of VMs. The table has columns for 'Controller Write IOPS', 'Controller IO Bandwidth', 'Controller Avg IO Latency', 'Backup and ...', and 'Flash Mode'. The first row shows values: 0, 4 KBps, 0.96 ms, Yes, and No. Below the table, there are buttons for 'Console', 'Power Off Actions', 'Take Snapshot', 'Migrate', 'Clone', 'Update', and 'Delete'. At the bottom, there are tabs for 'VM Tasks', 'I/O Metrics', and 'Console'.

Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
0	4 KBps	0.96 ms	Yes	No


1. This concludes this scenario; you can close the Ubuntu console to continue with the next scenario

Scenario 5 · Nutanix Prism Central Deployment and Cluster Registration

1. In the main dashboard on the Prism Central click in Register or create new

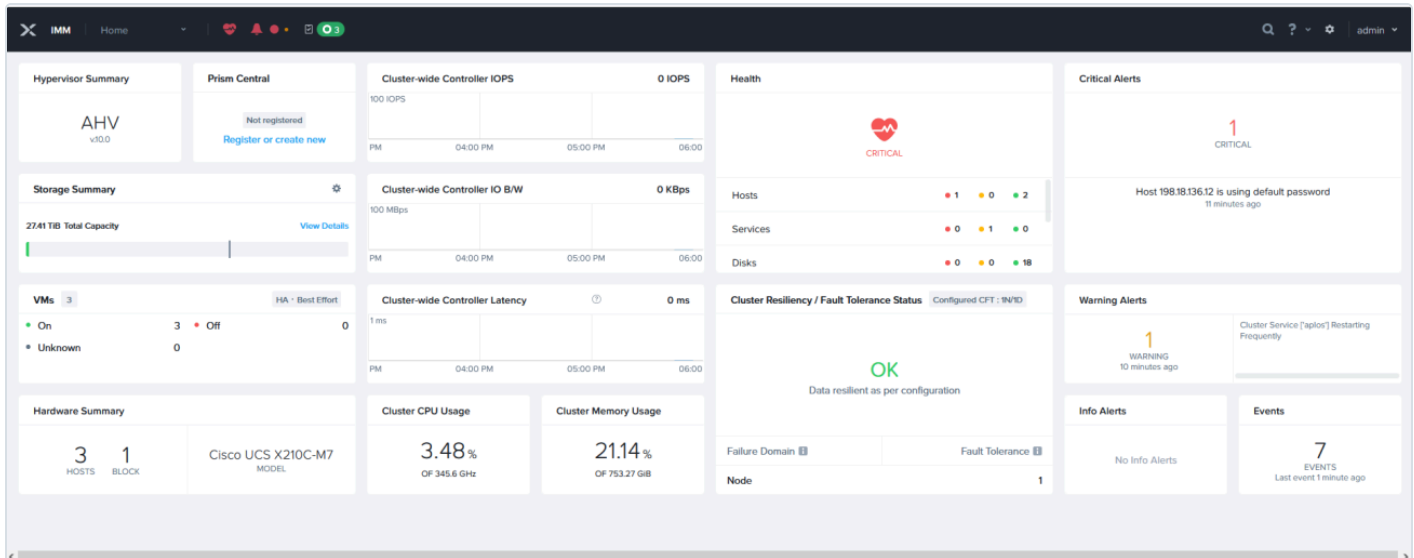

1. Select the first option, I want to deploy a new Prism Central Instance

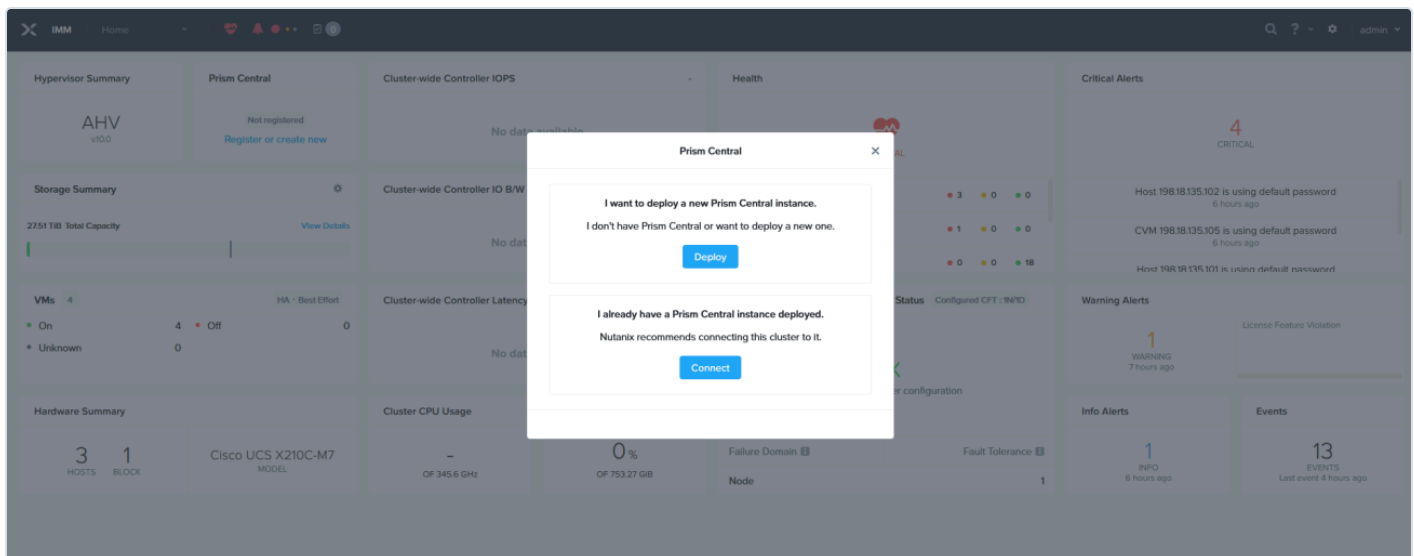

1. Under Installation Image section, select "pc.2024.3.1" and click Next

Prism Central (PC) Deployment

1 PC Version 2 PC Size and Scale 3 Configuration 4 Microservices

Installation Image
Provide the Prism Central image you'd like to install. You can download the latest version from the internet or upload an installation binary from your local machine.
[Learn more about PC Versions.](#)

Available versions
☒ Only show compatible versions [Upload Installation Binary](#)

Version Number	Version Type
☐ pc.2024.3.01	Public version
☐ pc.2024.3.0.2	Public version
☒ pc.2024.3.1	Public version
☐ pc.2024.3.11	Public version

Cancel Next

1. Select "Small" and click next

Note

NOTE: Do NOT select X-Small, this option does not support cluster expansion

Prism Central (PC) Deployment

1 PC Version 2 PC Size and Scale 3 Configuration 4 Microservices

Select Prism Central (PC) Size and Scale
Each size supports given number of VMs and can be used with the minimum number of resources provided below.
[Learn more about PC sizes](#)

X-Small New ☐

Supports up to 500 VMs | 5 Clusters | 50 hosts

4 vCPU 18 GB Memory 100 GB Disk

Start with the smallest size to explore basic Prism Central capabilities.

Small (S) ☒

Supports up to 2500 VMs | 10 Clusters | 200 hosts

6 vCPU 28 GB Memory 500 GB Disk

☐ Scale-Out PC

Large (L) ☐

Supports up to 12500 VMs | 25 Clusters | 500 hosts

10 vCPU 46 GB Memory 2500 GB Disk

1. Add Network information:

2. Network = select existing DataNetwork

3. Subnet Mask = 255.255.192.0

4. Gateway IP = 198.18.128.1

5. DNS = 198.18.133.1

6. NTP = 198.18.128.1

7. Container = SelfServiceContainer

8. Under General Details

9. VM Name= PC-2024-3-IMM (Suggestion)

10. IP Address= 198.18.136.4

11. Click Next

Prism Central (PC) Deployment

Networking Details

Network: VMNetwork

Subnet Mask: 255.255.192.0 Gateway IP: 198.18.128.1

DNS Address(es): 198.18.133.1

NTP Address(es): 198.18.128.1

Container: SelfServiceContainer

General Details

VM Name: 6 vCPUs, 28 GB RAM

PC-2024-3-IMM

IP Address: 198.18.136.4

Back Cancel Next

- Prism Central Service Domain Name = prism-central.cluster.local
- Internal Network = Private Network[Default]
- Click Deploy

Prism Central (PC) Deployment

PC Version PC Size and Scale Configuration **Microservices**

Please enter the Prism Central domain name, select a network and provide the required inputs to enable the Microservices Infrastructure.

Prism Central Service Domain Name: prism-central.cluster.local

Internal Network: Private Network (default)

☒ Use default settings (recommended)

Subnet Mask: 255.255.255.0


Gateway IP Address: 192.168.5.1

IP Address Range (5 IPs needed): 192.168.5.2 ~ 192.168.5.64


Please ensure that the entered IP address range does not conflict with any reserved IPs (e.g. DHCP IP Pool) in your network.

Back Cancel Deploy


1. After the deployment begins it will take you back to the main dashboard and under the Prism Central widget you will see the deployment activity.

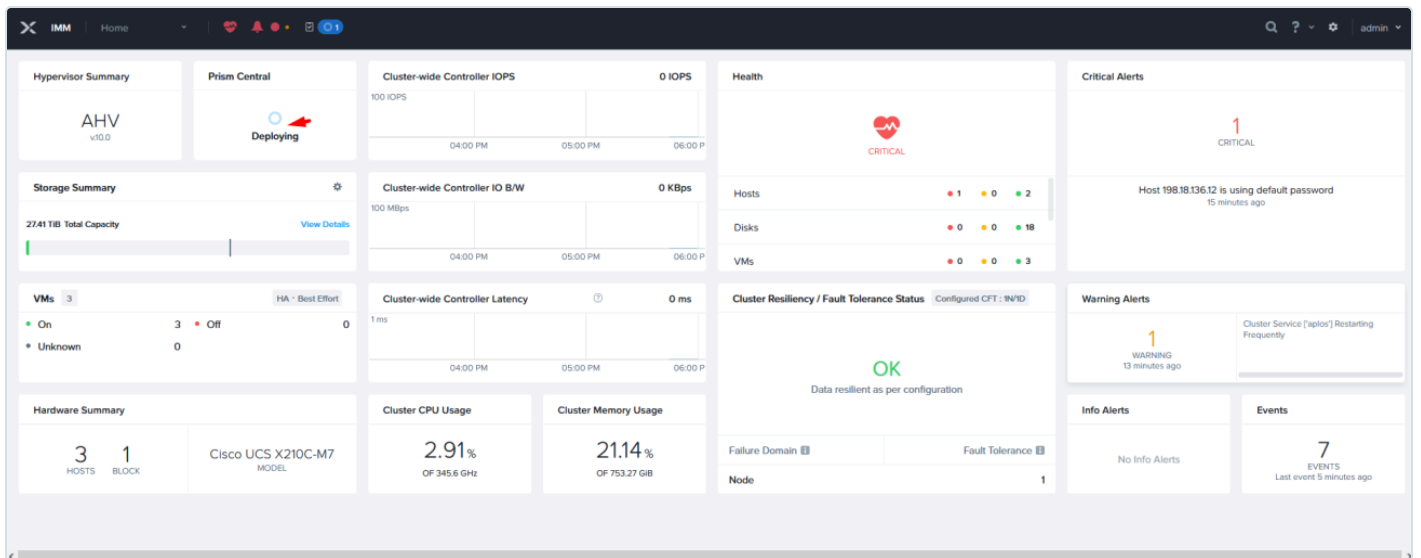


- Once Prism Central deployment is completed, use a web browser to connect to the virtual IP assigned (198.18.136.4) and change the default
- First time logging in the credentials are:
 - Username = admin
 - Password = Nutanix/4u

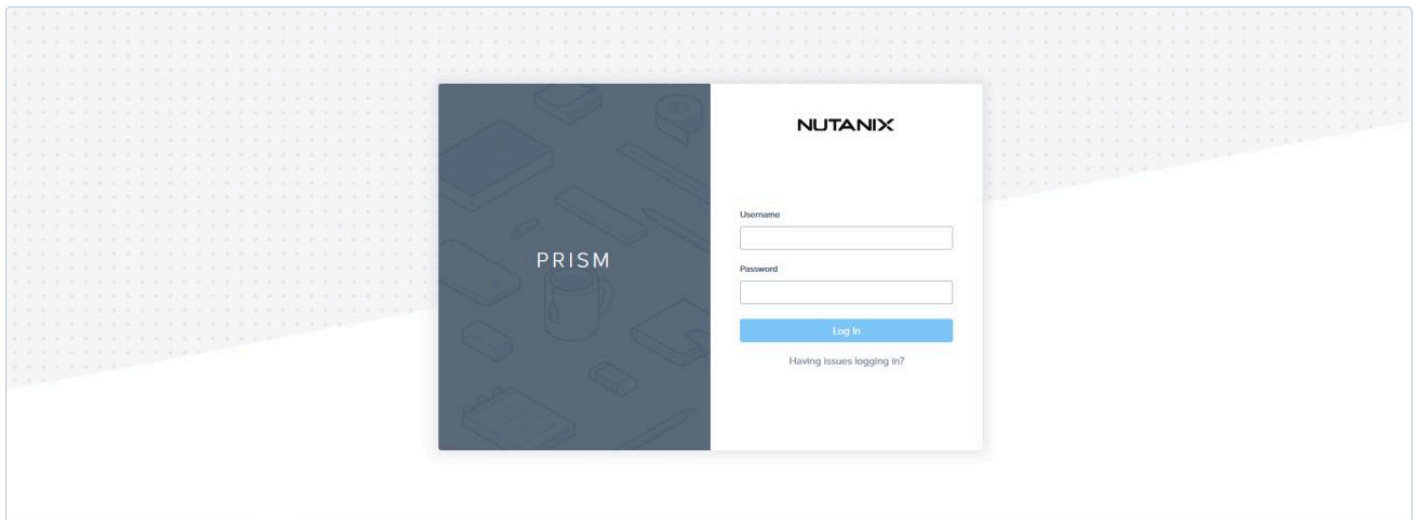

- New password C1sco12345!

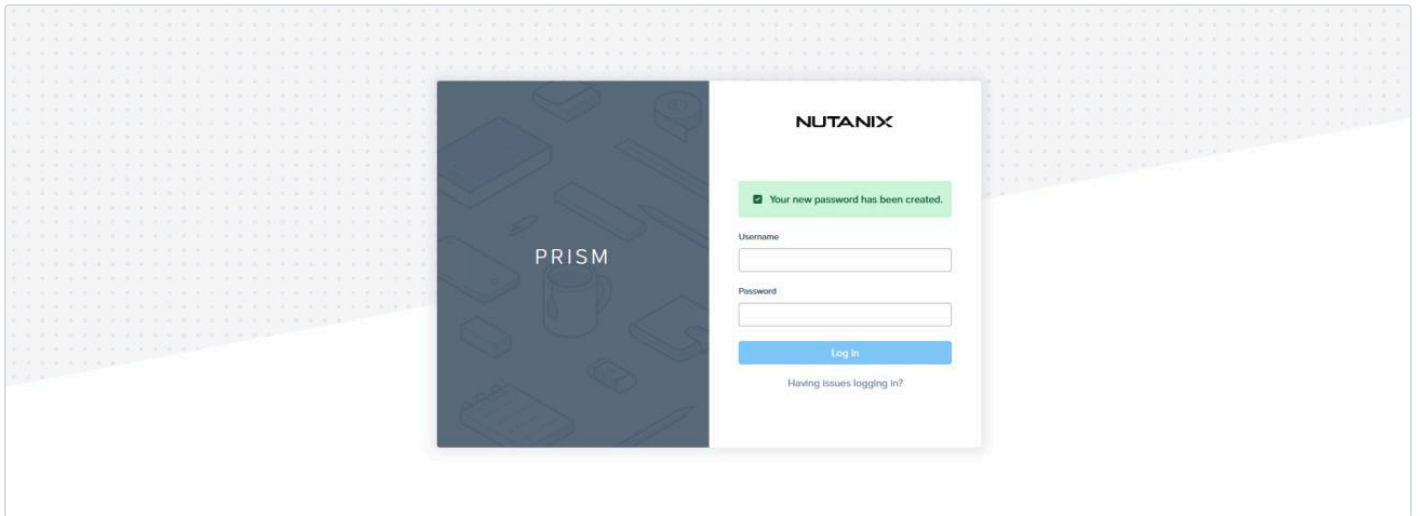


The image shows the Nutanix Prism login interface. On the left, a dark blue sidebar features the word "PRISM" in white, surrounded by faint icons of various computing devices. The main white area on the right displays the "NUTANIX" logo at the top. Below it, a green success message states "Your new password has been created." followed by a checkbox. The login form includes fields for "Username" and "Password", a blue "Log In" button, and a link for "Having issues logging in?".

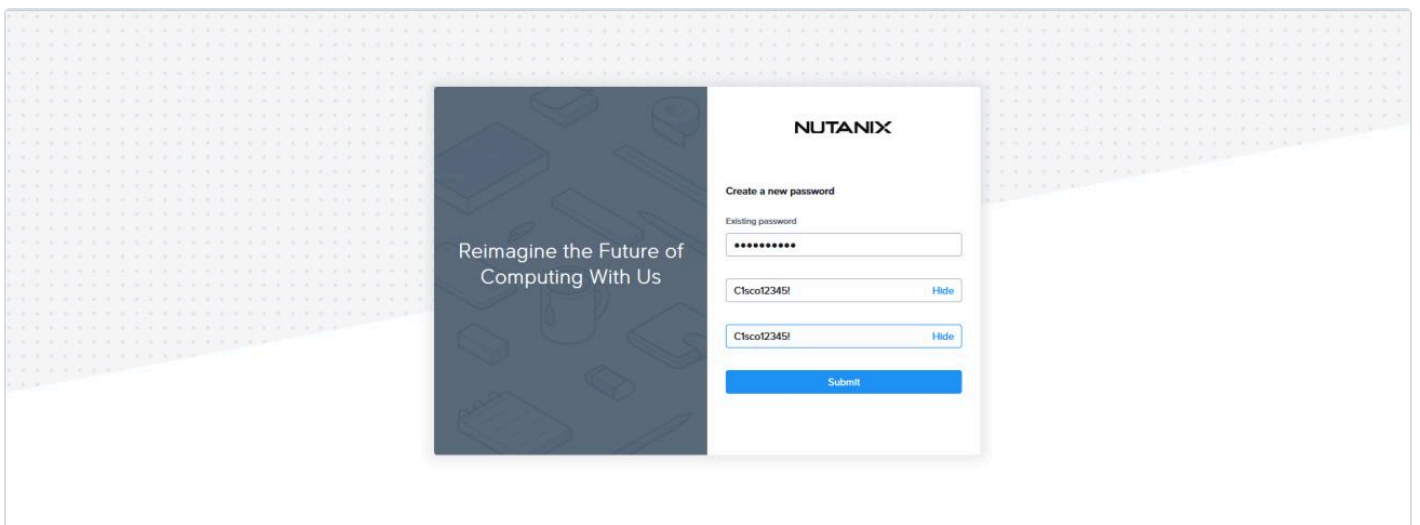


The image shows the Nutanix password creation interface. The left sidebar is identical to the previous screen, with "PRISM" and device icons. The main white area features the "NUTANIX" logo and the heading "Create a new password". The form includes an "Existing password" field with masked characters, two "New password" fields (each containing "C1sco!2345!" and a "Hide" link), and a blue "Submit" button at the bottom.

1. After the password is changed continue with the EULA

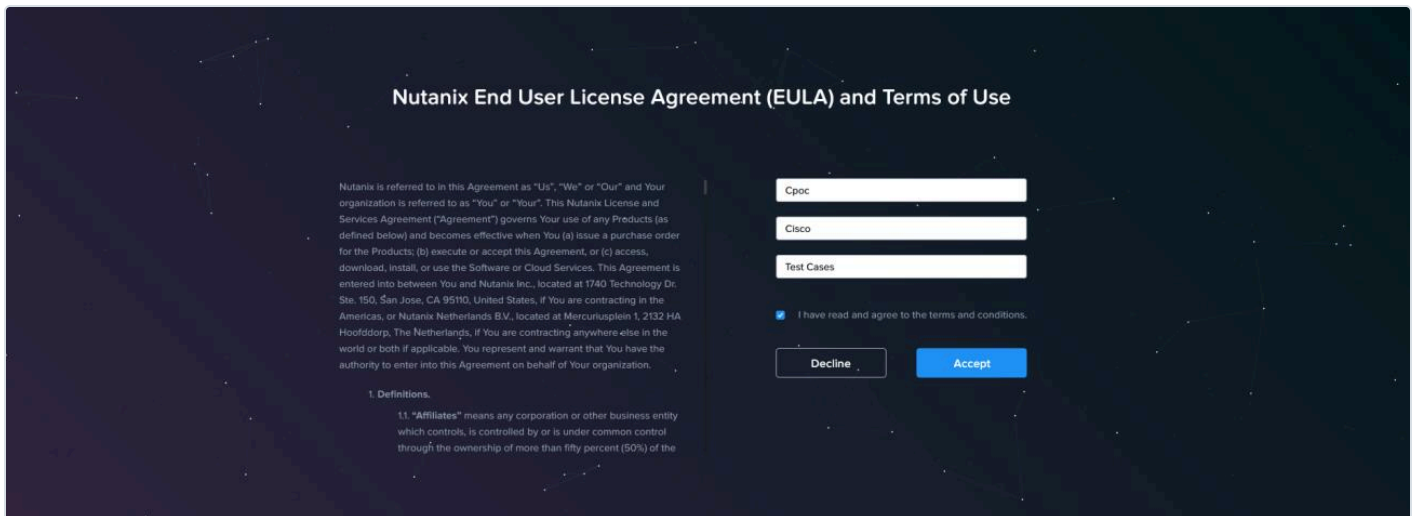


The image shows the "Nutanix End User License Agreement (EULA) and Terms of Use" screen. The background is dark blue with a subtle pattern. The title is centered at the top. On the left, the legal text of the agreement is displayed. On the right, there are three input fields for "Cpoc", "Cisco", and "Test Cases". Below these fields is a checkbox labeled "I have read and agree to the terms and conditions.", which is currently checked. At the bottom right, there are two buttons: "Decline" and "Accept".


1. Keep Pulse by default and click Continue

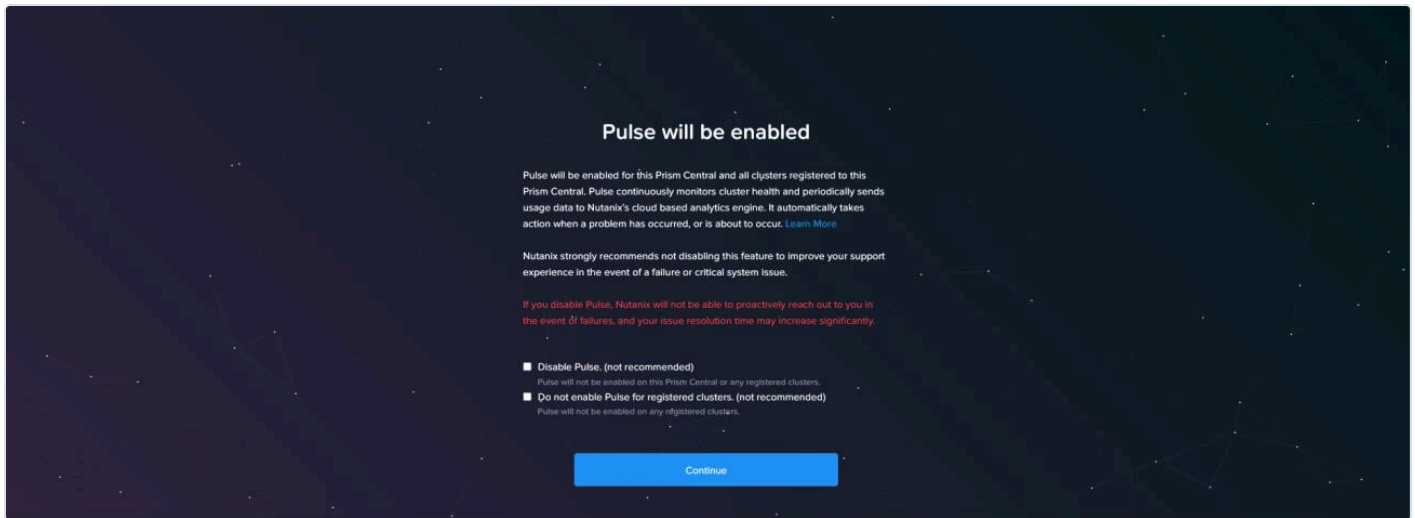


1. At the top select Infrastructure from the drop-down, then click on Prism Central Settings, select Prism Central Management and click edit
2. Cluster name = PC-VIP-IMM
3. Virtual IP = 198.18.136.5
4. Click Update

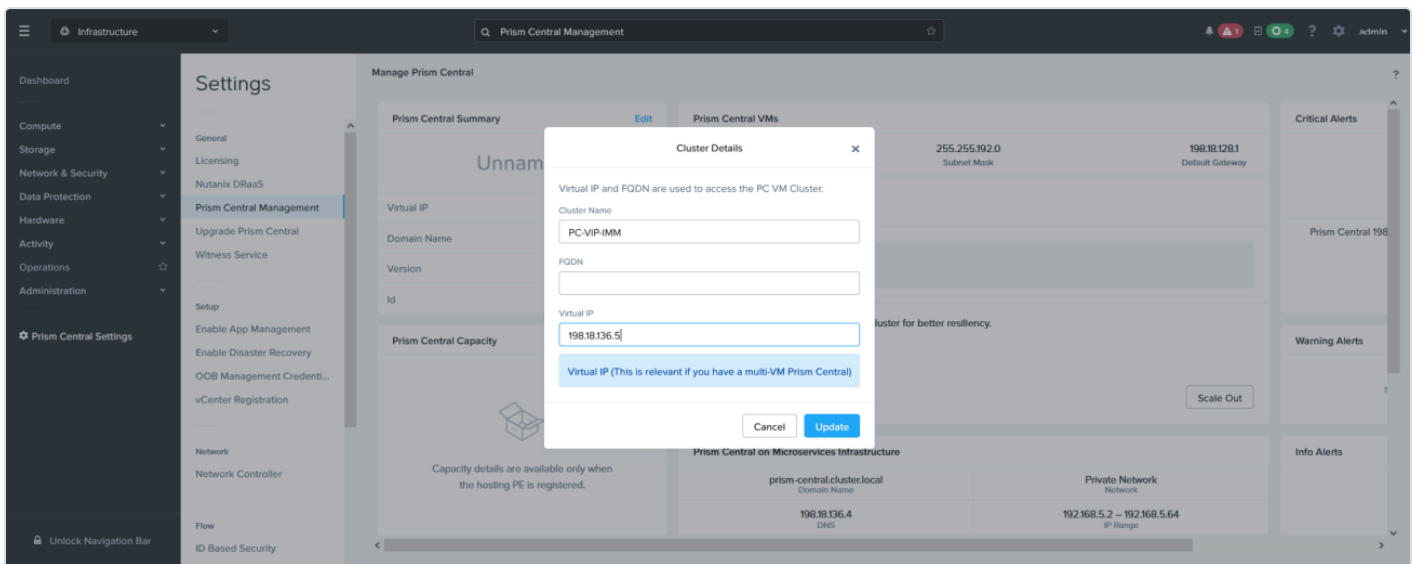


1. From the drop-down menu select Admin Center then click Marketplace and click Enable Marketplace

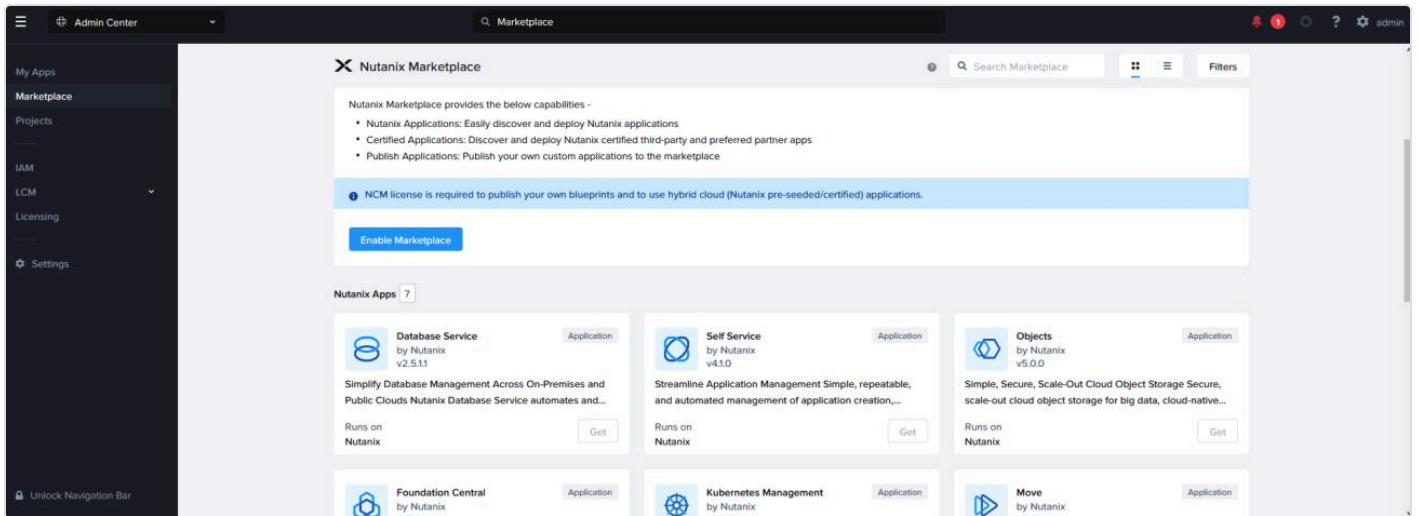


1. Once the Marketplace has been enabled, Click “Get” on Foundation Central then click Deploy

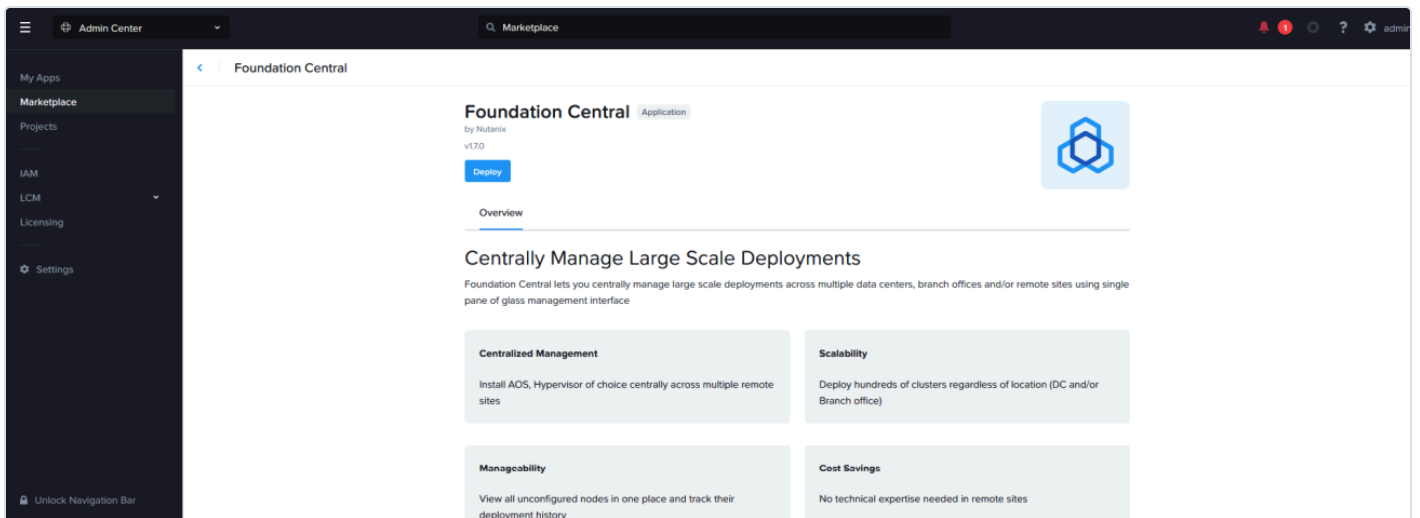


1. While the Foundation Central app is being deployed on Prism Central, return to the Prism Element main dashboard, and confirm then click “Register or create a new”

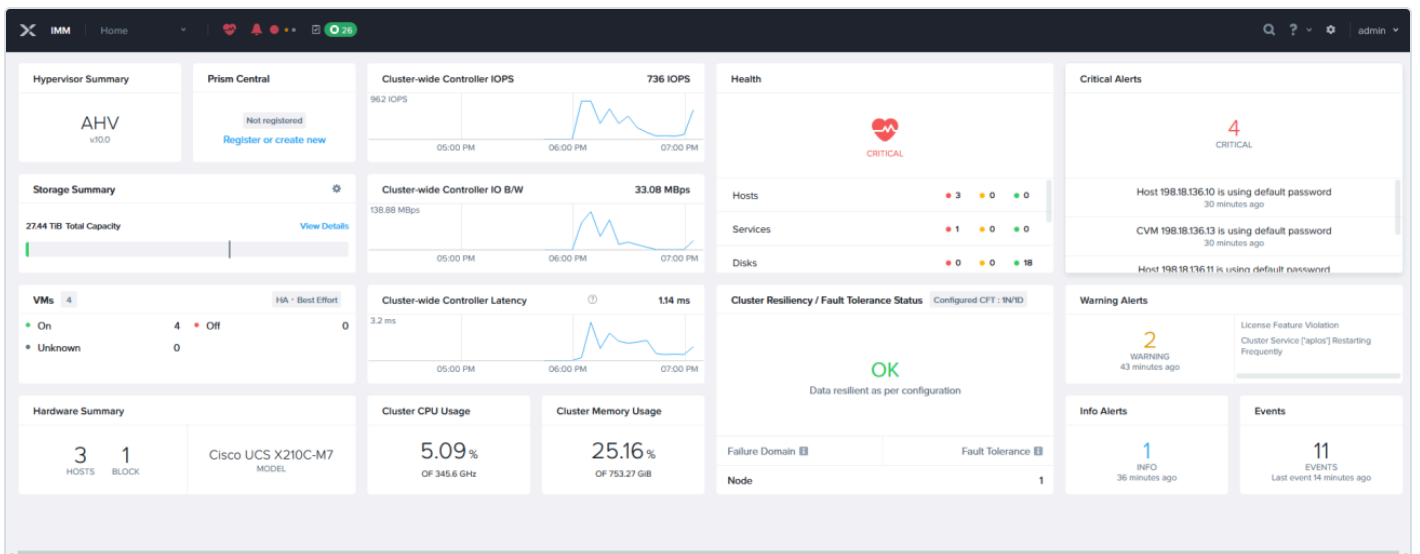


1. Now click connect and hit next

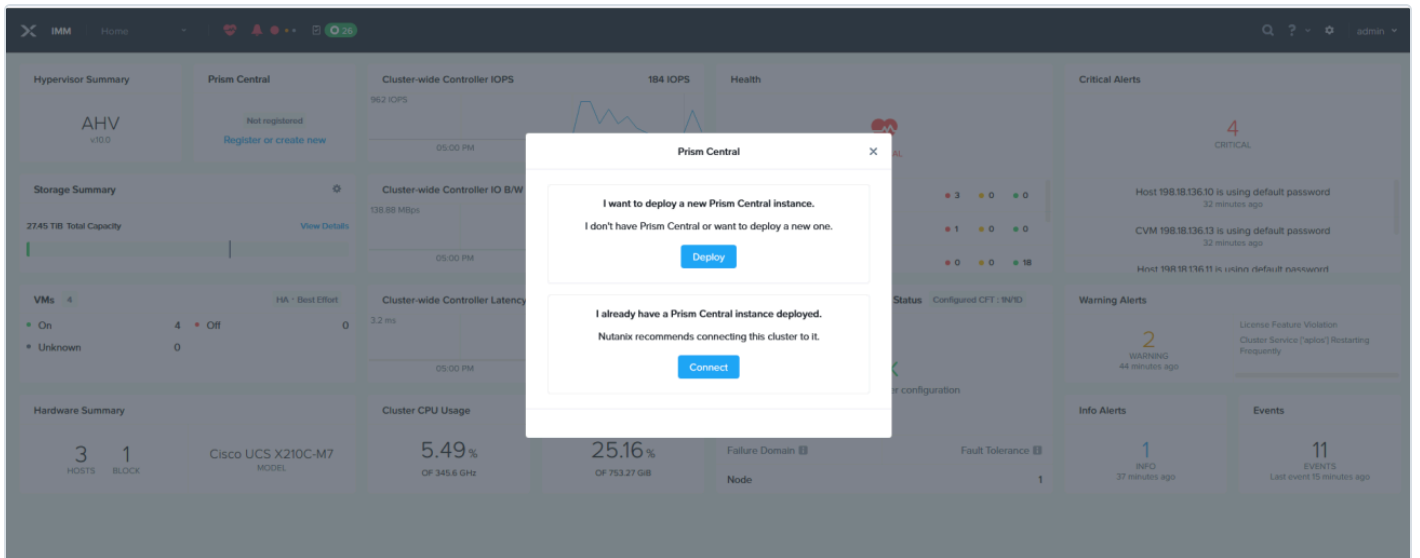

1. On the Prism Central configuration add
2. Prism Central IP/FQDN = 198.18.136.5
3. Username = admin
4. Password = C1sco12345!
5. Click Connect

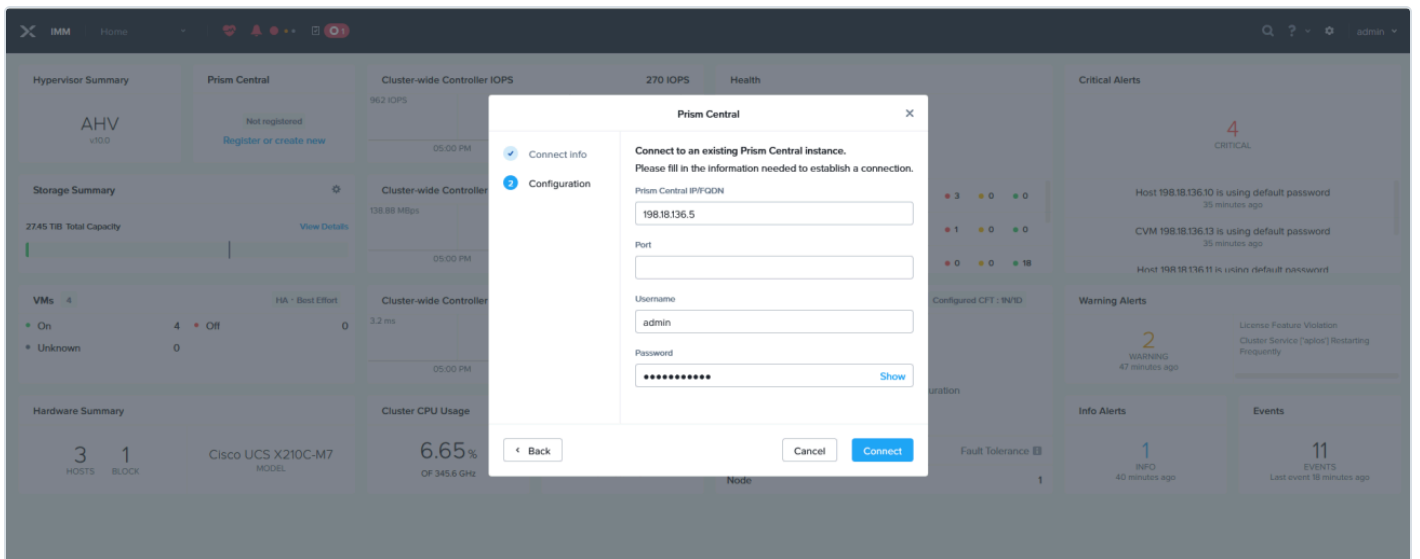

1. The IMM cluster is now registered with and connected to the new Prism Central (PC 2024.3.1)


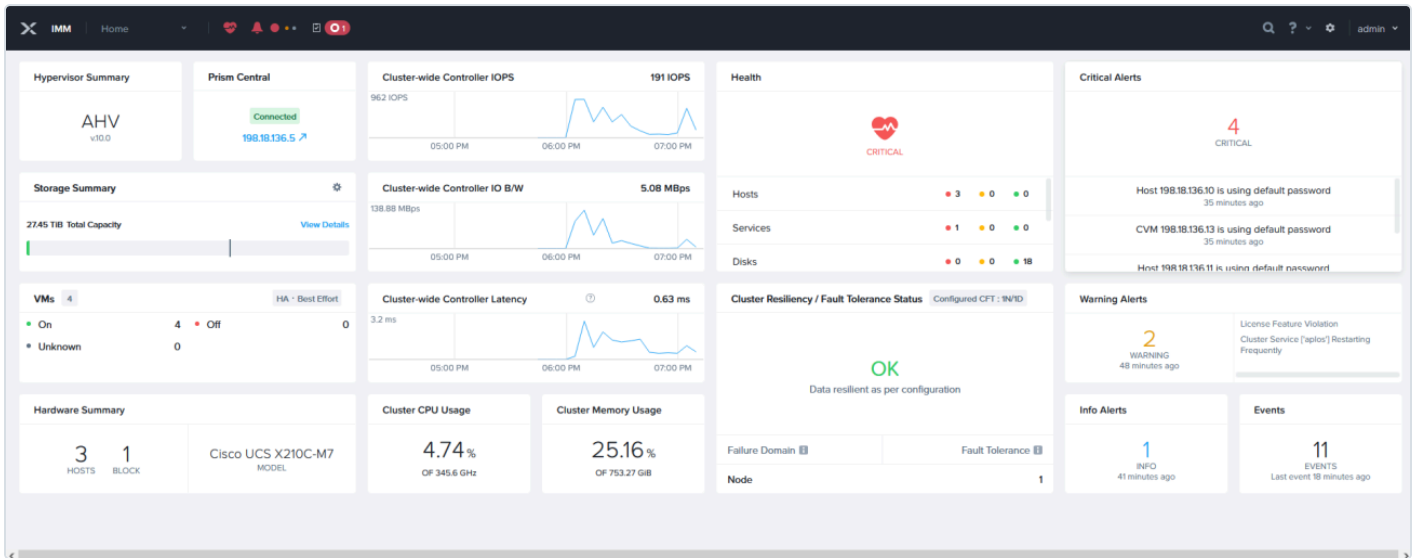


Scenario 6 · Nutanix Cluster Expansion


Note

THIS SCENARIO IS JUST AN EXAMPLE OF HOW TO CREATE A CLUSTER EXPANSION, IF REQUIRED TO DO A CLUSTER EXPANSION WILL NEED TO REQUEST AN EXTRA BLADE THE IMAGES MIGHT NOT BE ACCURATE FOR IMM CLUSTER


1. Return to the new Prism Central (add IP info here to make sure users will go to PC 2024 and not PC 2022) and click on View in my Apps

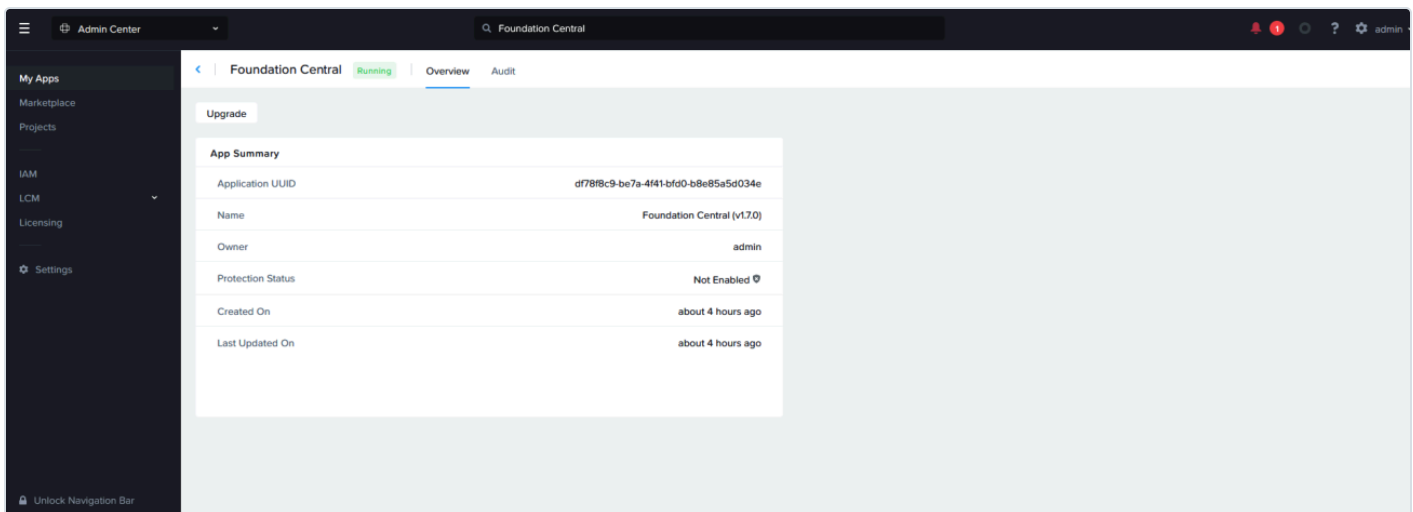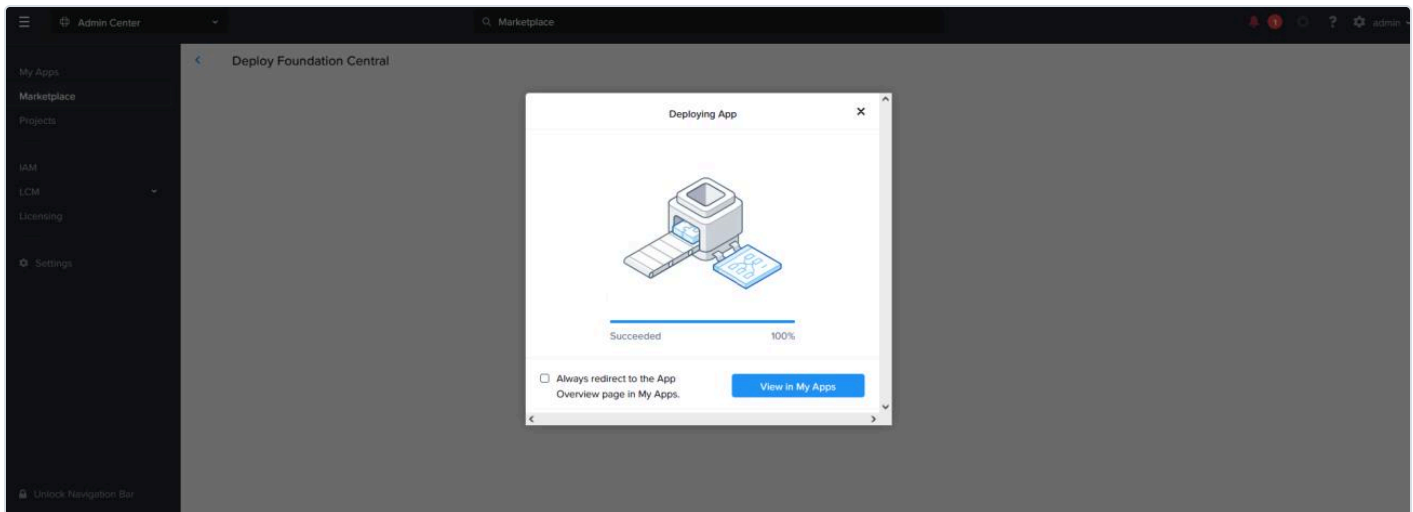


1. Once the App is on running state from Admin Center > LCM > Prism Central Cluster

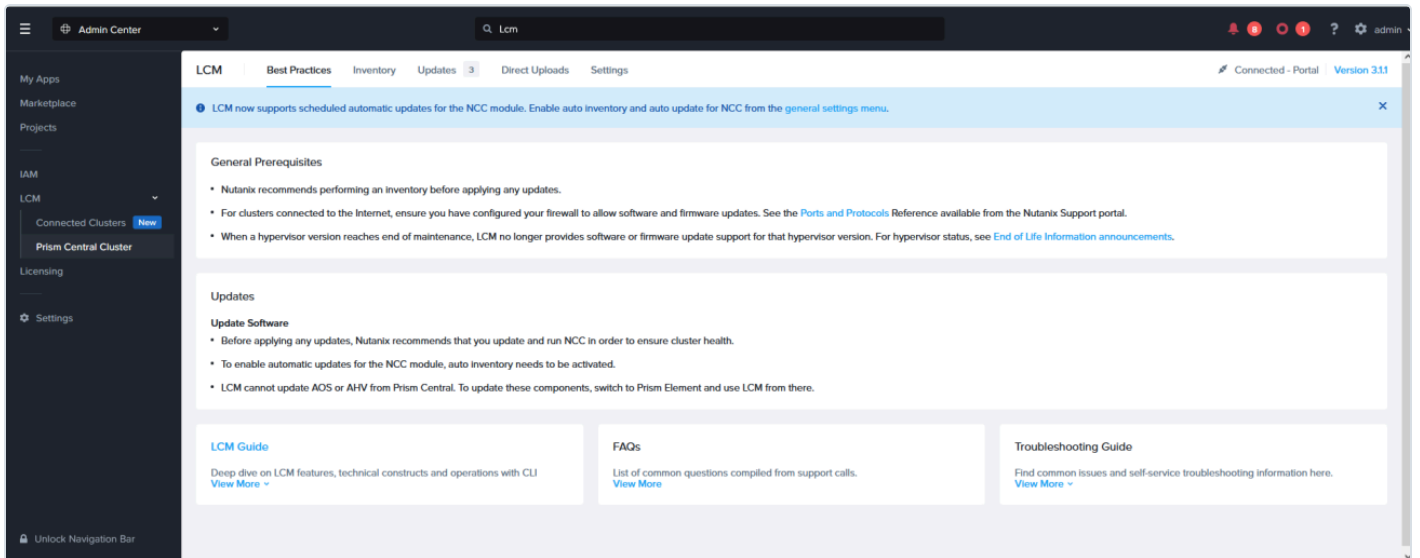

1. Click inventory and click Perform Inventory > Proceed

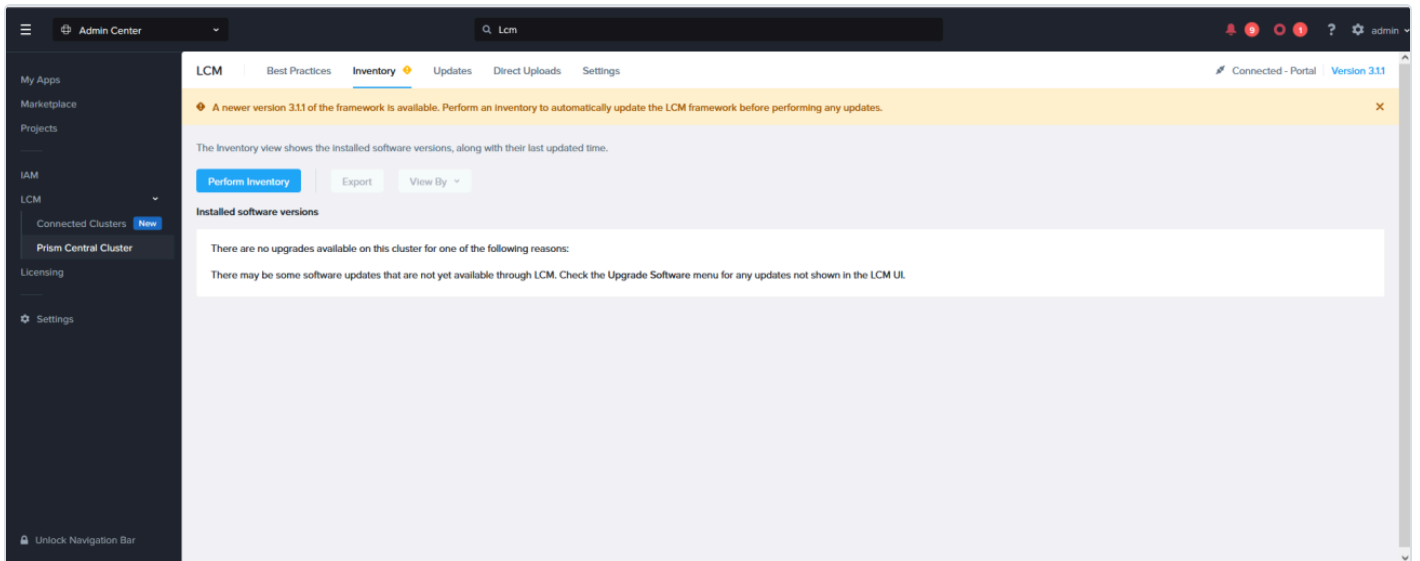

1. Wait until the Inventory is complete, then press Return to Inventory

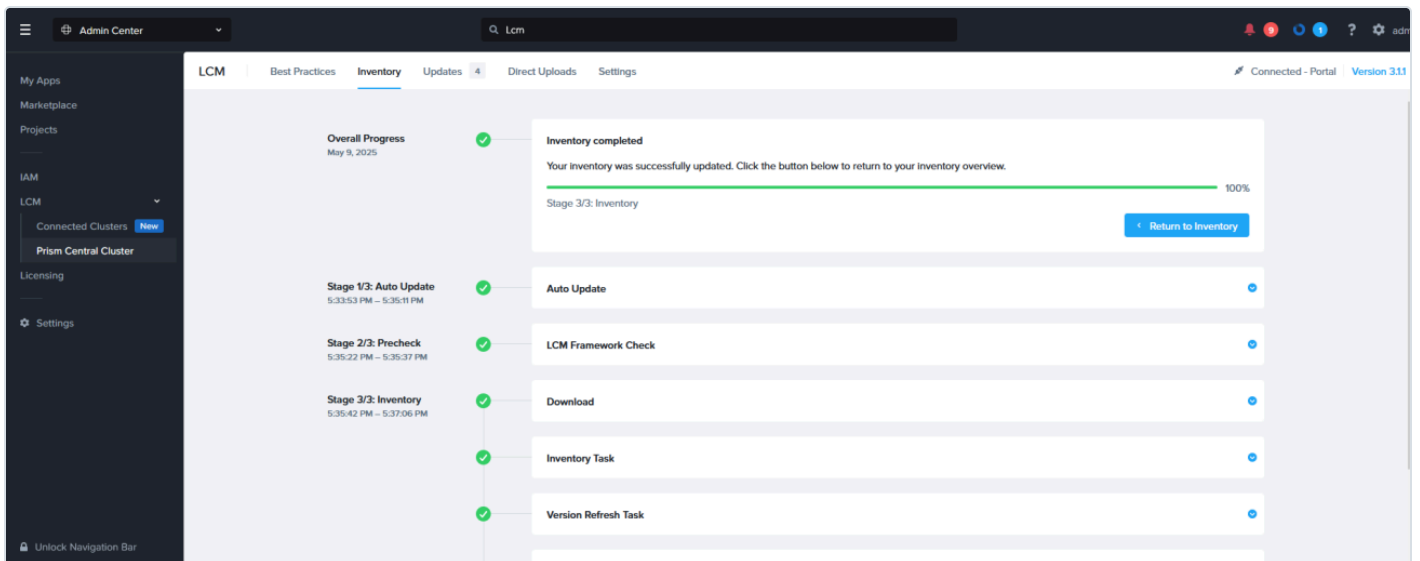

1. Click Updates, check the box of Foundation Central then click View Upgrade Plan

The screenshot shows the Cisco LCM Admin Center interface. The 'Updates' tab is selected, and the 'View Upgrade Plan' button is highlighted. A table titled 'Viewing all 4 Software Updates' lists the following updates:

Software	Available Version	Current Version	Last Updated	Release Notes
☒ Foundation Central	1.7.1 1 version update	1.7		View Release Notes
☐ MSP	2.6.1.1 1 version update	2.6.1.0		
☐ PC	pc.2024.3.1.1 Release Date: April 23, 2025 1 version update	pc.2024.3.1		View Release Notes
☐ Security Dashboard CVE Data	2025.04.1 9 version updates	2024.03.1		Security Dashboard CVE data for April 2025

1. Click Apply 1 Update and wait until the Foundation Central update is complete

The screenshot shows the 'Review Upgrade Plan' dialog in the Cisco LCM Admin Center. It contains a warning message: 'Genesis service will be restarted on the cluster. User workloads will not be disrupted. Refer to KB 6945 for more details.' Below this, it asks 'Do you want to apply the selected updates?' and shows a table of software updates:

Cluster	Foundation Central
Prism Central	1.7.1 Installed: 1.7

At the bottom right, there are 'Cancel' and 'Apply 1 Updates' buttons.

The screenshot shows the 'Update successful' message in the Cisco LCM Admin Center. It states: 'All updates have been implemented successfully. To see all available remaining updates, please return to the update list.' A progress bar shows 'Stage 2/2: Install Update' at 100%. Below this, a list of update stages is shown with green checkmarks:



- Overall Progress: May 9, 2025
- Stage 1/2: Precheck: 5:40:00 PM - 5:40:25 PM
 - LCM Framework Check
 - Module Check
- Stage 2/2: Install Update: 5:40:27 PM - 5:42:00 PM
 - Download
 - Update Foundation Central
 - Bundle Compatibility Check
 - Module Compatibility Check

A 'Return to Updates' button is visible at the bottom right.


1. Once the Foundation Central upgrade is complete, from the drop-down menu select Foundation Central

Note


If Foundation Central does not load, just Clear the cookies and site data

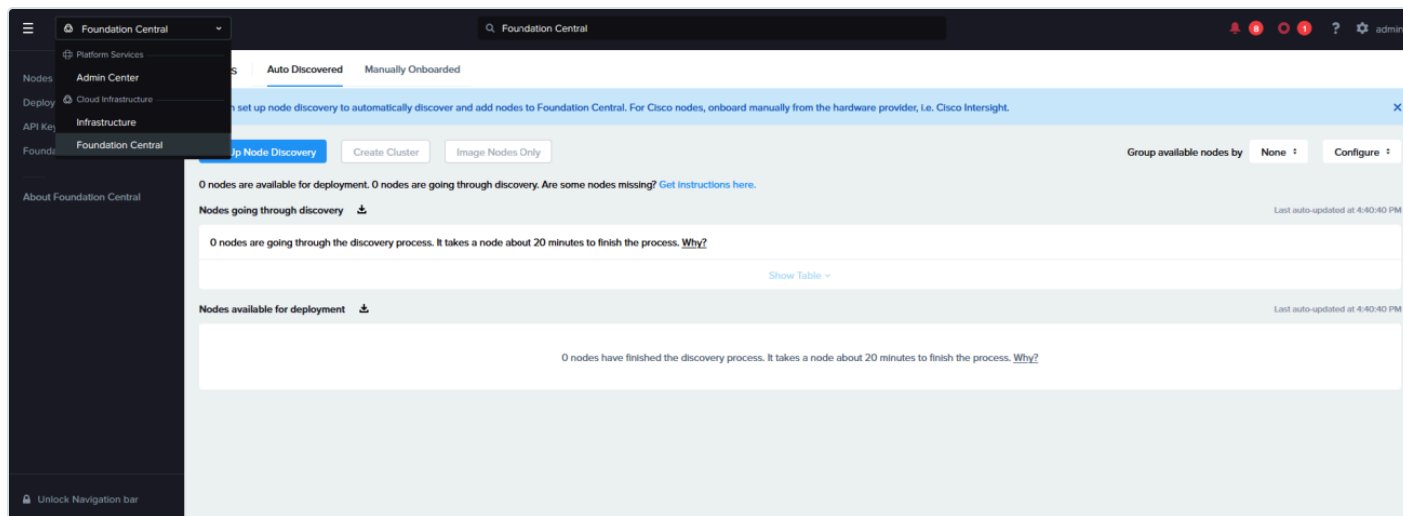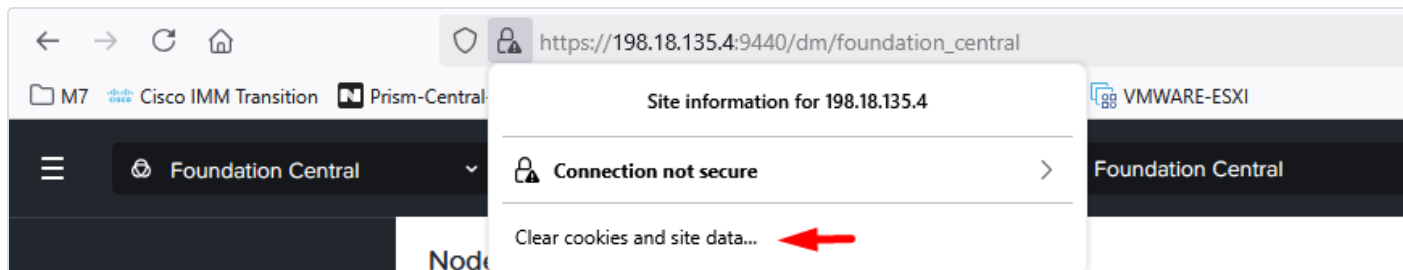


1. Confirm the Foundation Central by clicking on the left side About Foundation Central

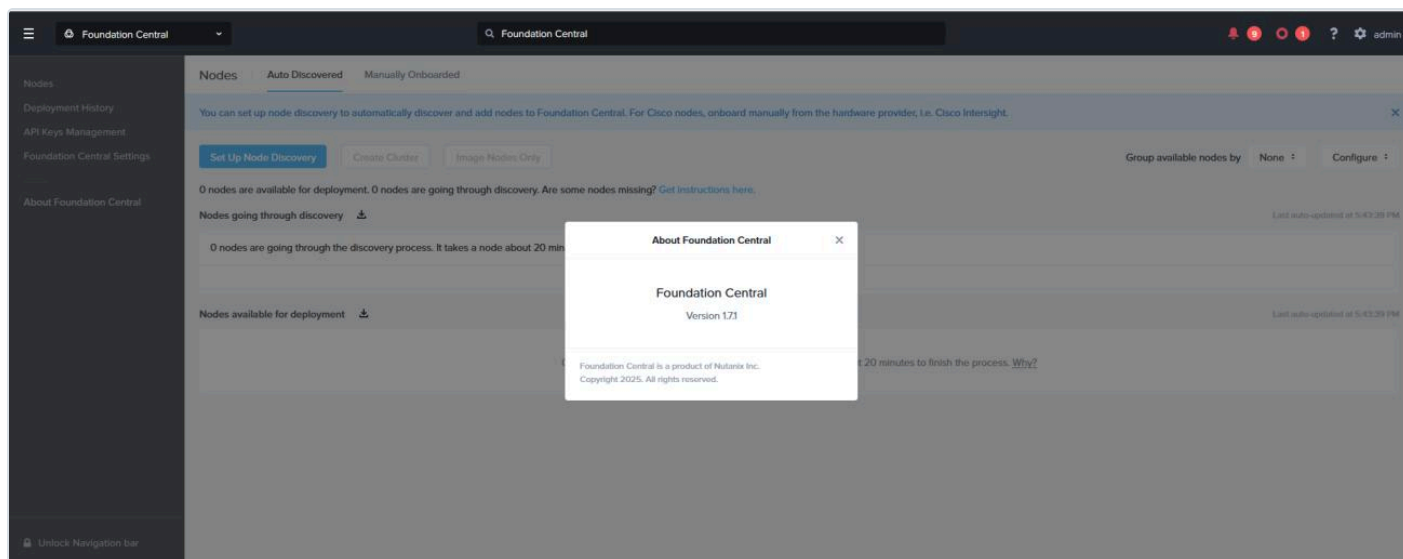

1. Then under Manually Onboarded, click Onboard Nodes

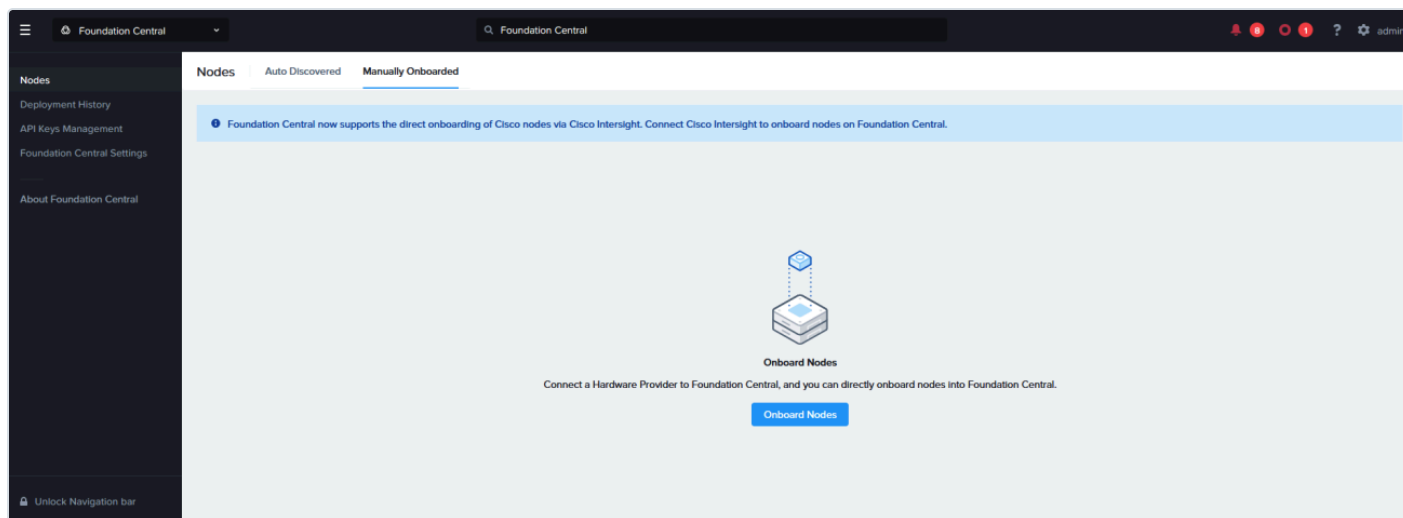

1. Connect Hardware Provider
2. Fill in the required information
3. Connection name= Intersight
4. Hardware Provider = Cisco Intersight
5. Intersight Deployment Type = SaaS
6. Intersight Region & URL = North America
7. Intersight API Key =
8. Secret Key=

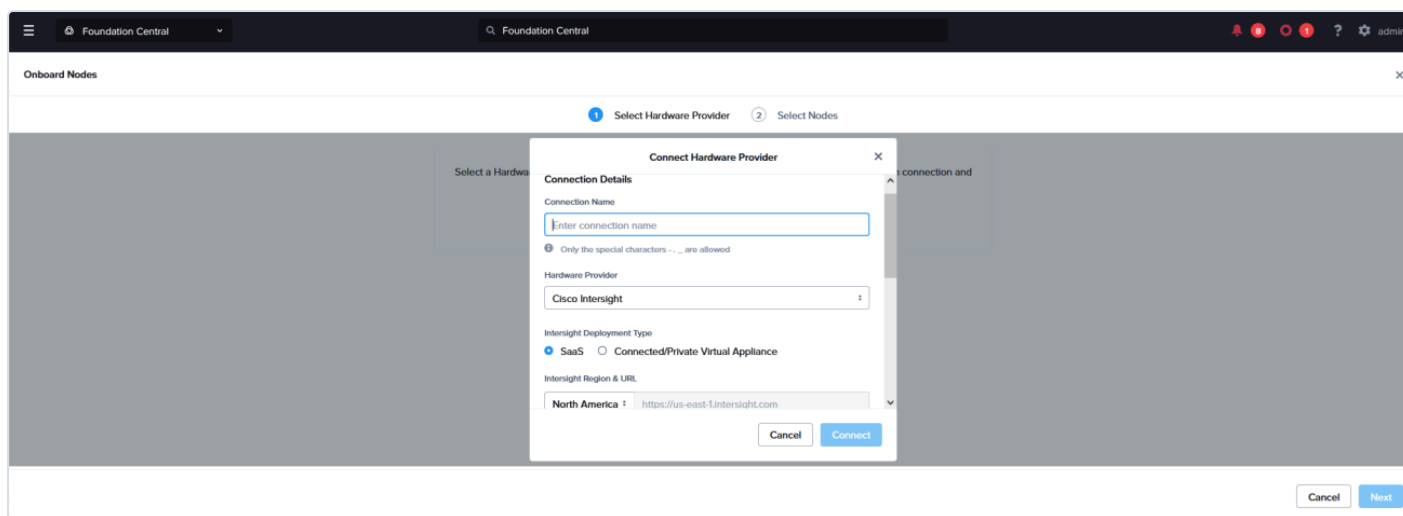

1. Select Intersight Standalone Mode and click Next

Onboard Nodes

1 Select Hardware Provider 2 Select Nodes

Select a Hardware Provider to onboard nodes to Foundation Central. Currently, only Cisco Intersight is supported and only a single connection is allowed at a time. To add a new connection, remove the existing one.

Connection Name	Hardware Provider	URL
intersight	Cisco Intersight	https://us-east-lintersight.com

Node Management Mode

Select the management mode. In the next step, you will view the nodes based on the selected mode

☐ Intersight Managed Mode
☒ Intersight Standalone Mode

Cancel Next

1. Select the node and click Onboard

Onboard Nodes

1 Select Hardware Provider 2 Select Nodes

Connection Name: **intersight** Management Mode: **Intersight Standalone Mode**

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click Refresh.

Type in a query Modify Filters

1 selected out of 1 Cisco Node 1-1 of 1 20 rows

Node Serial	Name	Model	Block Serial	Domain	Classification	Intersight Organizations	Intersight Tags	Memory (GB)	CPU (Core)
WZP283891L1	C240-WZP283891L1	UCSC-C240-M7SN	WZP283891L1	-	Nutanix	ISM	-	512	32

Back Cancel Onboard

1. Click "Prepare Nodes for Cluster"

Nodes Auto Discovered Manually Onboarded

Onboard Nodes Prepare Nodes for Cluster Create Cluster Actions

View by Group by Management Mode

Group By: Management Mode Modify Filters

Viewing 1 grouped out of 1 Cisco Node 1-1 of 1

Management Mode: Intersight Standalone 1 Empty Groups

Node Serial	Name	Node Status	Model	Domain	Intersight Organizations	Intersight Tags	Classification	Onboarded On	Last Refreshed
WZP283891L1	C240-WZP283891L1	Onboarded	UCSC-C240-M7SN	-	ISM	-	Nutanix	Apr 10, 2025, 01:26 PM	Apr 10, 2025, 01:26 PM

Unlock Navigation bar

1. Select the existing ISM cluster and click Next

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

You are viewing the clusters registered with Prism Central. Please select the cluster for which you want to prepare nodes.

Viewing 1 cluster

Cluster Name	AOS Version	Hypervisor	Node Count
ISM	70.0.5	AHV 10.0.0.1	3

Cancel Next

1. Select the node that will be added to the cluster and click Next

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Cluster: ISM

The following list shows the eligible nodes for the cluster. Please select nodes to prepare with the selected cluster.

Type in a query

1 selected out of 1 Cisco Node

Node Serial	Name	Model	block_serial	Intersight Tags	Classification	Memory (GB)	Onboarded On
WZP283891LX	C240-WZP283891LX	UCSC-C240-M7SN	WZP283891LX	-	Nutanix	512	May 7, 2025, 07:23 PM

Back Cancel Next

1. Return to Cisco IMM tool and copy the AOS and AHV URLs

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Provide the URL to download AOS and metadata from during imaging. The URLs must be accessible to Foundation Central.

AOS Download URL

https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/nutanix_installer_package-release-ganges-70.0.5.iso

AOS Metadata URL

https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/generated-nutanix_installer_package-release-ganges-70.0.5.iso

Hypervisor

☐ Hypervisor AHV 10.0.0.1 is included in the AOS 70.0.5 package. I have verified and want to use it.

If you won't use the included hypervisor, provide the URL below to download the hypervisor from during imaging. The URLs must be accessible to Foundation Central. The checksum will be used to avoid re-downloading an already downloaded installer.

Hypervisor Download URL


https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/AHV-DVD-x86_64-10.0.0.1-1.iso

Pre-computed SHA256 Checksum of Hypervisor Installer


7f6b213ef5766e8692627384a85032bdb37cbb53ae185757ac6de9e6be5e522d

Back Cancel Next

1. For the AHV checksum, the Cisco IMM tool can be used to generate the SHA256 checksum.

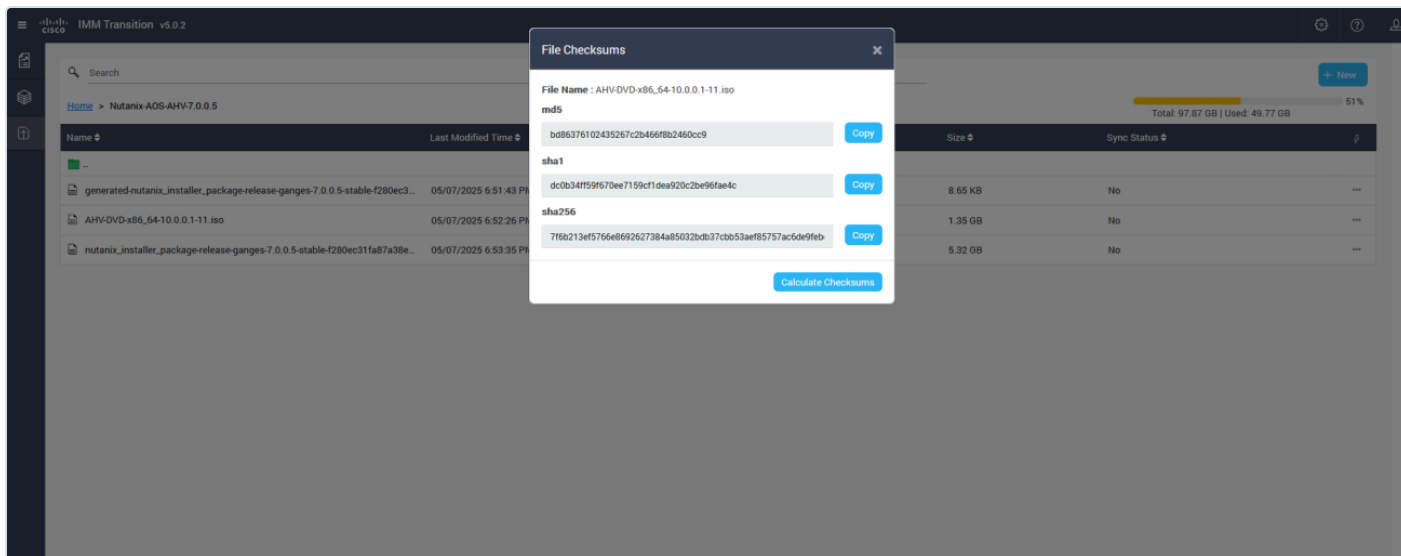

1. Host and CVM Network
2. Gateway= 198.18.128.1
3. Netmask= 255.255.192.0 /18
4. Host and CVM VLAN = 10
5. Click Next

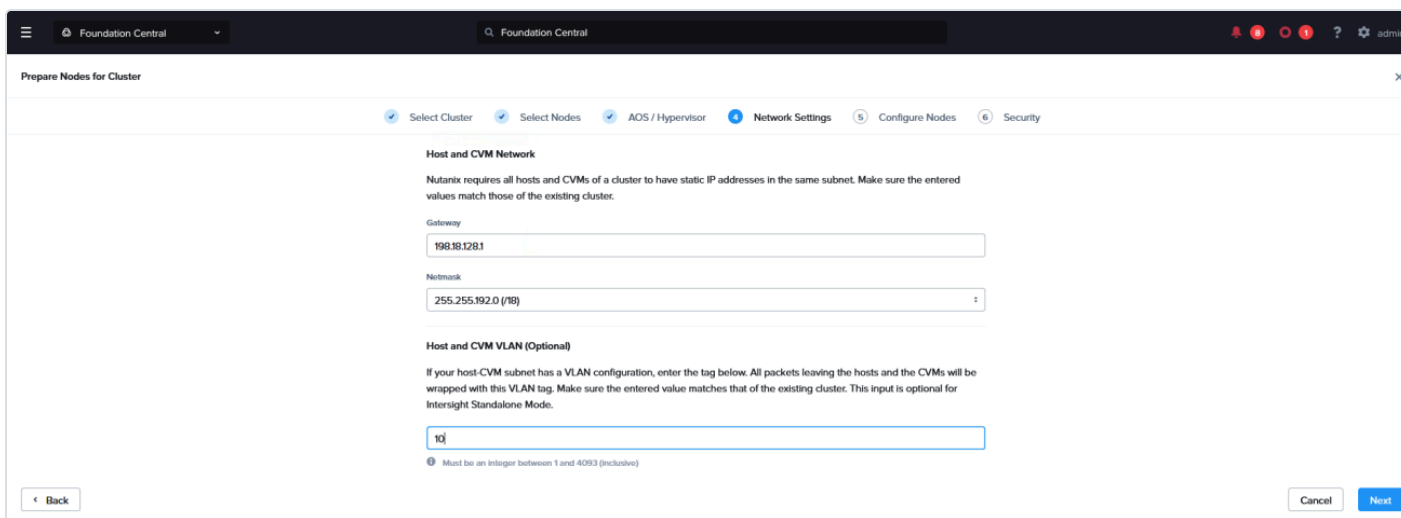

1. Fill in the IP range for the hypervisor and CVM

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** Security

1 Nodes

Node Serial	Name	Hypervisor IP Set Range	CVM IP Set Range	Hypervisor Hostname Set Range
WZP283891L1	C240-WZP283891L1	198.18.135.23	198.18.135.27	c240-node-4

Back Cancel Next

1. Generate a Foundation Central API key by clicking the “+ Generate New Key”. Provide an alias and click Done. From the drop-down menu select the alias and click Submit

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** **Security**

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key [+ Generate New Key](#)

ISM

API key was generated successfully.

Back Cancel Submit

1. The node preparation process begins

Foundation Central

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

Node Preparation for Cluster "ISM" Deployment in progress Start Date and Time: 5/9/2025, 05:50 PM

Phase 1A: Node Preparation 6% 1 node in progress Phase 1B: Node Imaging 0% Not started

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/nutanix_installer_package-release-ganges-70.0.5-stable-1280ec31fa97a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/AH-V-DVD-x86_64-10.0.01-11.iso
Host CVM VLAN ID 10	Deployment UUID dfc88d67-f927-48e3-7614-735621dc97e2	LACP No	

1 Node In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891L1	WZP283891L1	A	2%	[NodeConfiguration] Performing node specific configuration in Intersight	198.18.135.23	198.18.135.27	AH-V	c240-node-4

Show Less

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment [Show Only Non-archived](#)

Node Preparation for Cluster "ISM" Deployment complete Start Date and Time: 5/9/2025, 05:50 PM [Go to Cluster Page](#) [Archive](#)

Phase 1A: Node Preparation 100% 1 node prepared Phase 1B: Node Imaging 100% 1 node finished

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-11.iso
Host CVM VLAN ID 10	Deployment UUID d1c89d57-f927-48e3-76f4-73562f4c97e2	LACP No	

1 Node In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891L1	WZP283891L1	A	Done	All operations completed successfully	198.18.135.23	198.18.135.27	AHV	c240-node-4

[Show Less](#)

1. Once the node preparation is completed, click at the top drop-down menu and select infrastructure

Infrastructure

Dashboard

Cluster Quick Access

Cluster Storage

Cluster Latency

Cluster Memory Usage

Cluster CPU Usage

Controller IOPS

Power Usage

1. On the left menu, select Hardware > Clusters

Infrastructure

Clusters List

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

View by Group by

Modify Filters

1 selected out of 1 Cluster

Name	AOS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	7.0.0.5	Succeeded	AHV	3	4	-	-

1. Check the ISM box and click on actions then select Expand Cluster

Cluster Management Actions:

- Launch Prism Element
- Upgrade Software
- Rack Configuration
- Manage Categories
- Enable Efficiency Measurement
- Disable Efficiency Measurement
- Enable Anomaly Detection
- Disable Anomaly Detection
- Run Playbook
- Manage & Backup Keys
- Enable Data-at-Rest Encryption
- Manage KMS Type
- Enable Data-In-Transit Encryption
- Disable Data-In-Transit Encryption
- Manage Rebuild Capacity
- Manage Recycle Bin
- Manage Cluster Fault Tolerance
- Maintenance Resiliency
- Expand Cluster
- Destroy Cluster

Events	Metrics	Profiles	1 Total Clusters				
View by: Group by: Modify Filters Export 1-1 of 1 20 rows							
	ADS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
	70.0.5	Succeeded	AHV	3	4	-	-

1. Check the box of the discovered node and click next

Expand Cluster-ISM

1 Select Host 2 Choose Host Type 3 Configure Host 4 Networking 5 Software Check 6 Review

Select the hosts you want to add and configure their networks. Hosts must be connected to the same subnet as the cluster. New hosts require licenses.

1 Host selected out of 1 [+ Discover Hosts Manually](#)

☒ Model	Serial Number	Available Hosts
☒ Cisco UCS C240-M7SN	WZP283891L1	1

[Back](#) [Cancel](#) [Next](#)

1. On the next page select HCI from the drop-down menu and click next

Expand Cluster-ISM

1 Select Host 2 Choose Host Type 3 Configure Host 4 Networking 5 Software Check 6 Review

A host can be used for different purposes. Nutanix allows you to add a host as one of the following types.

HCI Host A host is added as a standard host in the cluster.

Storage Only Host This host is optimized for storage use. It allows you to seamlessly expand the storage capacity of your cluster.

Compute Host This host is optimized for computing purposes (CPU and Memory)

1 Selected Hosts

Model/Serial	Host Position	Host Type
Cisco UCS C240-M7SN WZP283891L1	A	HCI

[Back](#) [Cancel](#) [Next](#)

1. Add a name c240-node-4 and then click next

Expand Cluster-ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ **Configure Host**
☐ Networking
 ☐ Software Check
 ☐ Review

Host name is required for all Hyper-V clusters, but can be skipped for AHV and ESXi clusters.
You can change a Host Name or IP by clicking on its table cell.

1 Selected Hosts

Model/Serial	Host Position	Name	CVM IPv4	CVM IPv6	Hypervisor IPv4	Hypervisor IPv6	IPMI IPv4	IPMI IPv6
Cisco UCS C240-M7SN WZP2B389L1	A		198.18.135.27		198.18.135.23		198.18.143.2	

1. On the networking step click on skip Networking

Expand Cluster-ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ **Networking**
☐ Software Check
 ☐ Review

Select the appropriate active and backup uplinks for the hosts.

1 Selected Hosts

Model/Serial	Host Position	Active Uplink	Backup Uplink
Cisco UCS C240-M7SN WZP2B389L1	A	Expand row to configure switches.	Expand row to configure switches. ☒

1. For the software check, let's wait for some time and then click next

Expand Cluster-ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ **Software Check**
☐ Review

AOS and Hypervisor version on new hosts need to be the same as the cluster.
If AOS version is lower than that of the cluster's then a reimage is not required and an upgrade will happen instead.

1 Selected Hosts

Model/Serial	Host Position	Host Type	Hypervisor	AOS Version	Compatibility
Cisco UCS C240-M7SN WZP2B389L1	A	HCI	AHV	7.0.0.5	✓ Compatible

1. Under review step, click Run Prechecks, wait until it completes

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

Prechecks

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

60 %

1. Once the precheck is completed, click on Expand Cluster

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

Prechecks

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

✓ Prechecks passed. Continue to expand the cluster. 100 %

Infrastructure

Clusters • List

1 Total Clusters

Create Cluster Actions

☆ Type text to filter by

1 selected out of 1 Cluster

Export 1-1 of 1 20 rows

Name	ADIS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	70.0.5	Succeeded	AI-V	3	4	-	-

Unlock Navigation Bar

1. To review the progress of the cluster expansion, click task at the top right and click view all task

Infrastructure Clusters * List

Dashboard

Compute

Storage

Network & Security

Data Protection

Hardware

Clusters

Hosts

Disks

GPUs

Activity

Operations

Administration

Prism Central Settings

Unlock Navigation Bar

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

Type text to filter by

1 selected out of 1 Cluster

Name	AOS Version	Upgrade Status	Hypervisors
ISM	70.0.5	Succeeded	AHV

Recent Tasks

Clean Up 1 Total Clusters

Expand Cluster: ISM 24%

Expand Cluster: ISM 100%

Hypervisor Image Upload Check: ISM 100%

Fetching cluster networks and uplinks: ISM 100%

Discover Unconfigured Nodes: ISM 100%

Security STIG scan 100%

View All Tasks

Group by

Modify Filters

of 1 20 rows

Inefficient VMs

Infrastructure Tasks

Dashboard

Compute

Storage

Network & Security

Data Protection

Hardware

Clusters

Hosts

Disks

GPUs

Activity

Operations

Administration

Prism Central Settings

Unlock Navigation Bar

Overview

A new and improved version for Tasks experience is available. To use that, you need to upgrade all the connected clusters to AOS 7.0 or above. You can find more information [here](#).

Type text to filter by

Modify Filters

Viewing all 54 Tasks

Export 1 - 20 of 54 20 per page

Task	Entity Affected	Cluster	Progress	Status	Created On	Duration	Sub-Tasks
Node preparation for expand ...	-	ISM	86%	Running	Apr 14, 2025, 10:5...	1 minute 7 seconds	5
Expand Cluster	ISM	-	86%	Running	Apr 14, 2025, 10:5...	2 minutes 9 seco...	1
Expand Cluster	ISM	-	100%	Succeeded	Apr 14, 2025, 10:5...	1 minute 15 seconds	1
Hypervisor Image Upload Che...	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:5...	24 seconds	1
Fetching cluster networks and...	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:5...	16 seconds	1
Discover Unconfigured Nodes	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:4...	23 seconds	1
Successfully finished STIG run ...	-	ISM	100%	Succeeded	Apr 13, 2025, 12:2...	Under 1 second	-
Running refresh scan	-	-	100%	Succeeded	Apr 13, 2025, 12:2...	1 minute 53 secon...	4

1. To confirm the new host has been added to the existing cluster, select Clusters on the left side

Infrastructure Clusters * List

Dashboard

Compute

Storage

Network & Security

Data Protection

Hardware

Clusters

Hosts

Disks

GPUs

Activity

Operations

Administration

Prism Central Settings

Unlock Navigation Bar

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

Type text to filter by

1 Total Clusters

View by Group by


Modify Filters

Viewing 1 Cluster


Export 1 - 1 of 1 20 rows

Name	AOS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	70.0.5	Succeeded	AHV	4	5	-	-


1. Return to Prism Element to review on the cluster main dashboard the Node count

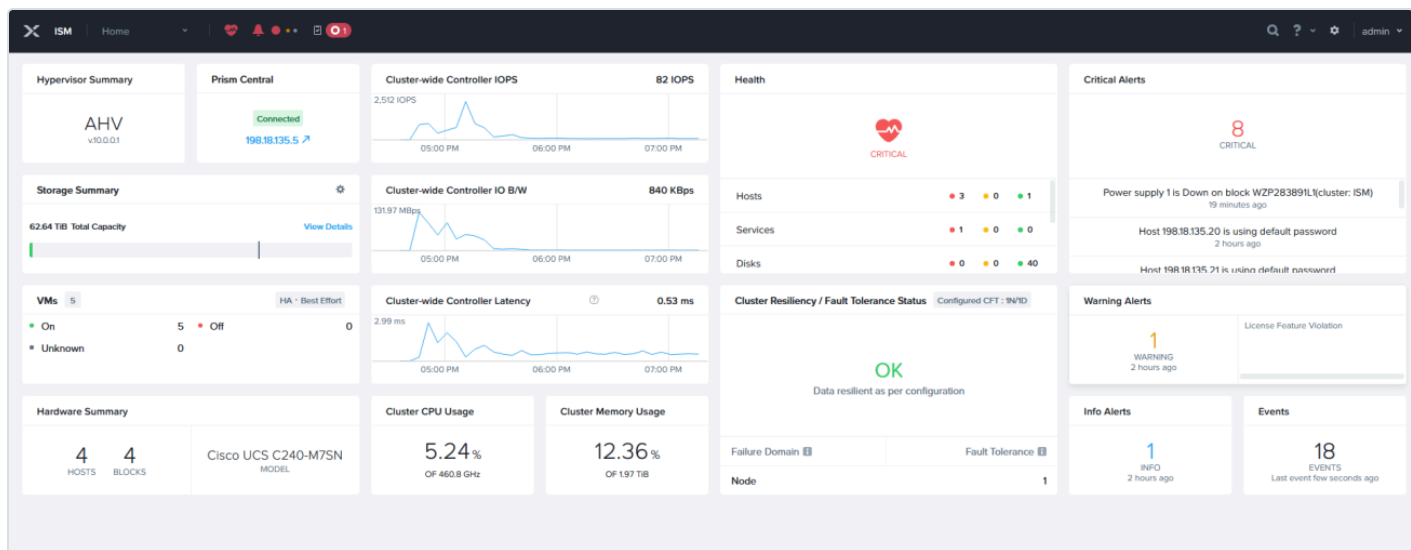


1. Click Home at the top and from the drop-down menu select LCM

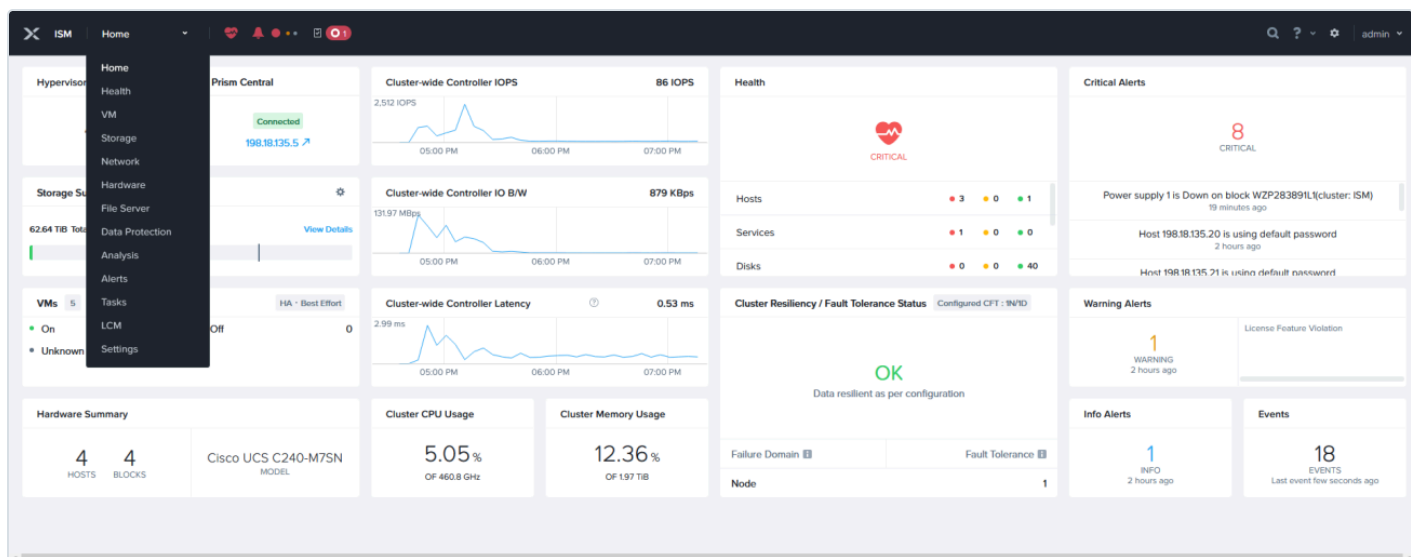


1. Select inventory and click Perform inventory

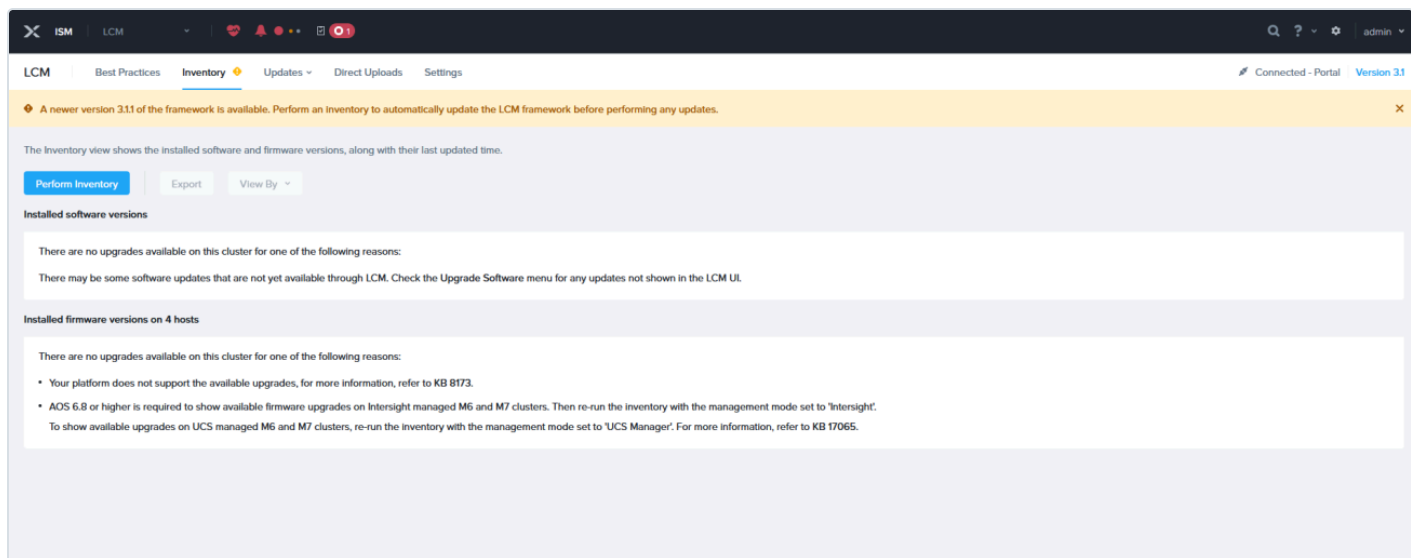


1. Click Proceed

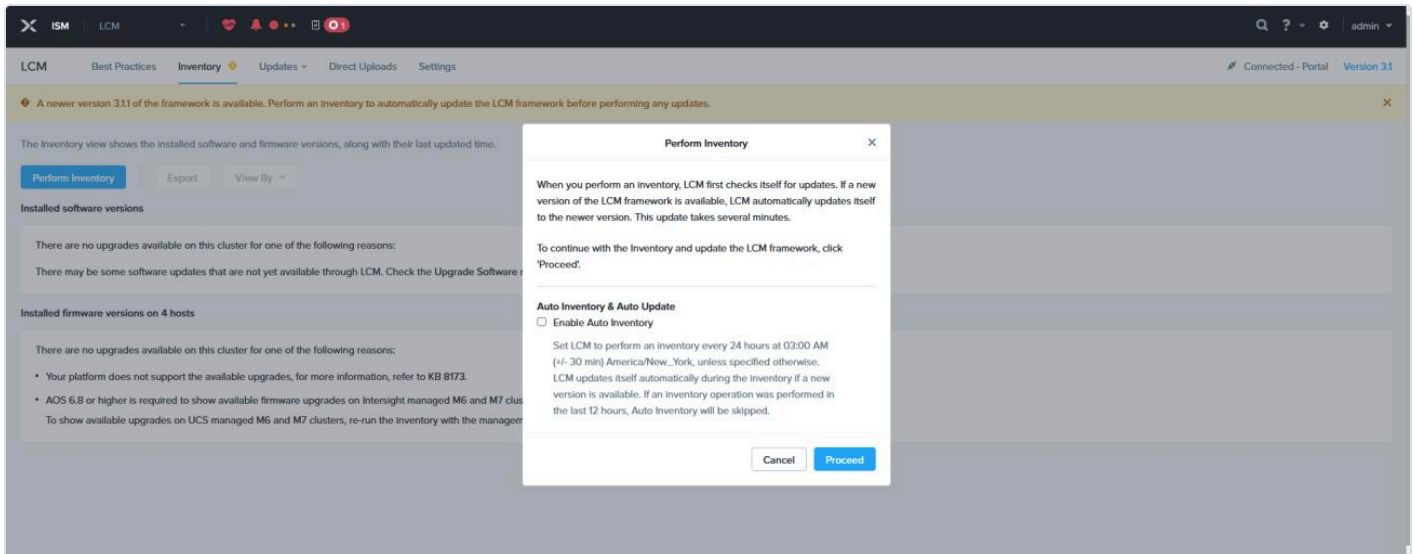

1. From the drop down select standalone Cisco IMC and click continue

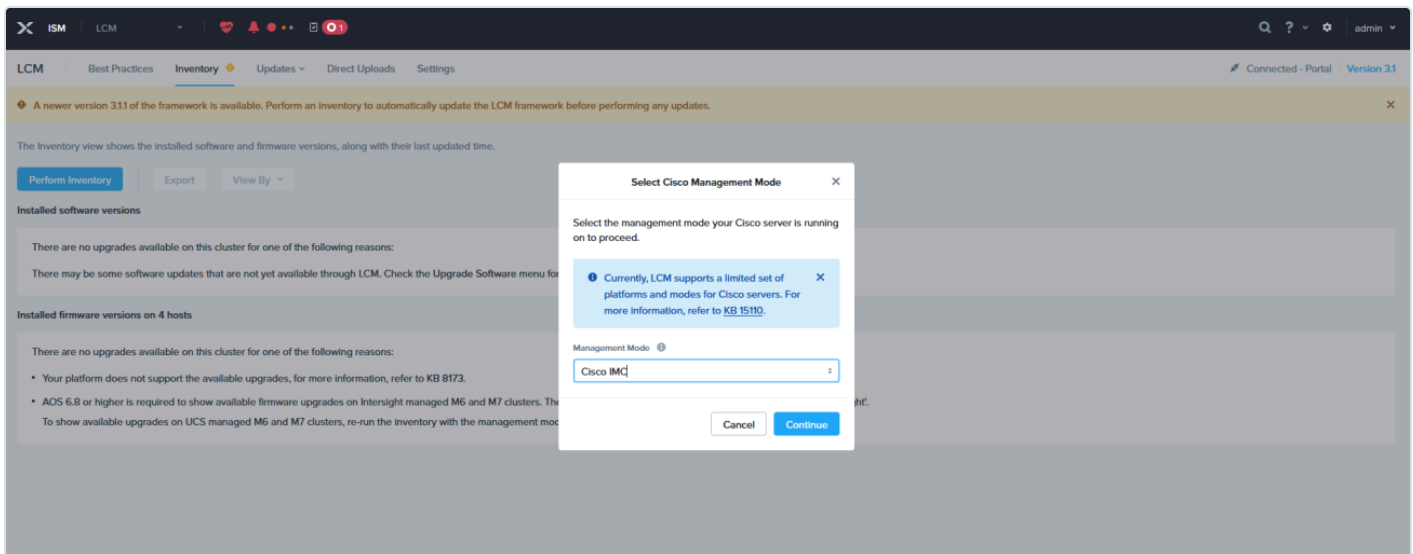

1. Wait until the Inventory completes

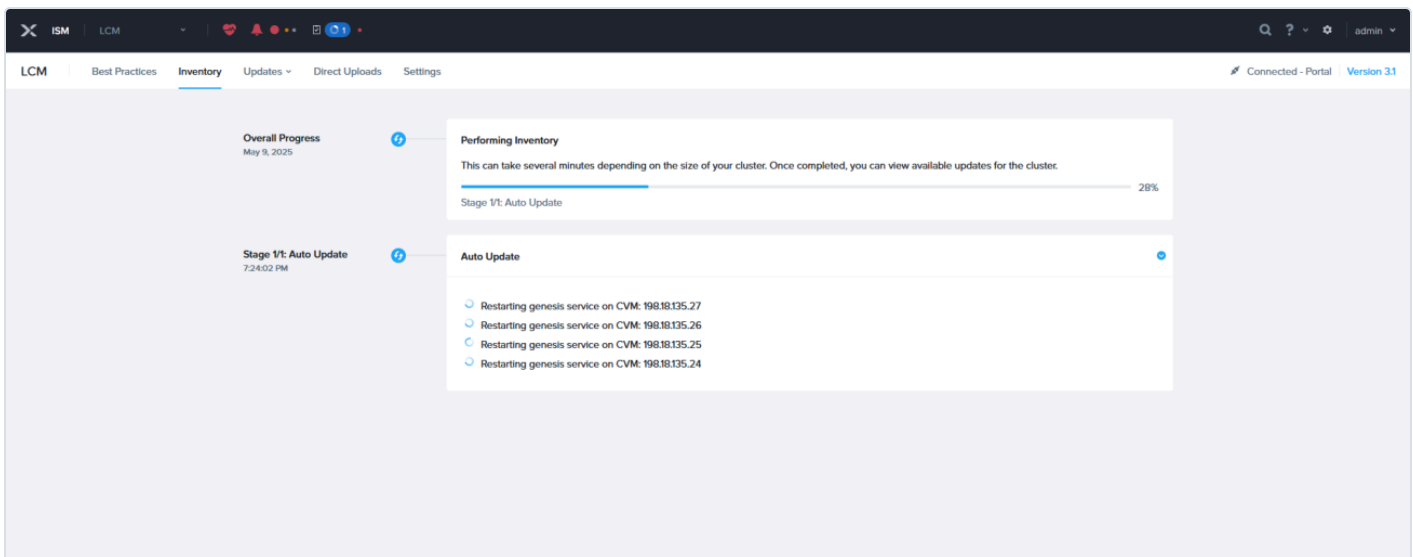

1. Once it's completed return to inventory

Overall Progress
April 14, 2025

Inventory completed
Your inventory was successfully updated. Click the button below to return to your inventory overview.

Stage 3/3: Inventory

[Return to Inventory](#)

Stage 1/3: Auto Update
11:12:35 AM – 11:14:57 AM

Auto Update

Stage 2/3: Precheck
11:15:14 AM – 11:15:27 AM

LCM Framework Check

Stage 3/3: Inventory
11:15:29 AM – 11:16:21 AM

Download

Inventory Task

1. Click updates and select software to review all available updates

Updates

The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu.

[View Upgrade Plan](#) [Pre-Upgrade](#) [Filter](#)

Viewing all 8 Software Updates

Software	Available Version	Current Version	Last Updated	Release Notes
☐ AHV hypervisor	10.01 1 version update	10.0.01 4 entities		View Release Notes
☐ AOS	7.01 Release Date: March 19, 2025 1 version update	70.0.5		View Release Notes
☐ FSM	5.11 3 version updates	5.0.01		
☐ Foundation	5.71 1 version update	5.7		View Release Notes
☐ NCC	5.11 1 version update	5.1.0		View Release Notes

1. This is optional if you would like to apply the updates available or keep the cluster with the current version.

What's Next

Reference	Description