
CISCO GLOBAL DEMO ENGINEERING · CUSTOMER PROOF OF CONCEPT

Cisco Intersight Standalone Mode

Nutanix AHV or ESX

12 March 2026

Esteban Arguedas

eargueda@cisco.com

Contents

Overview

Environment

Get Started

Scenario 1 - Claim Servers

Scenario 2 - Foundation Central

Scenario 3 - Cluster Deployment

Scenario 4 - Prism Central

Scenario 5 - Cluster Expansion

Scenario 6 - Prism Central 2022

What's Next

Author: Esteban Arguedas (eargueda@cisco.com) · **Version:** 1.0 · **Last updated:** 12 March 2026

Document status

All printed copies and duplicate soft copies of this document are considered uncontrolled. Please refer to the original, online document link for the current version.

About this CPOC

Cisco Intersight Standalone Mode is an on-premises deployment of Cisco's infrastructure management platform that operates without requiring a connection to the Intersight cloud. When integrated with Nutanix hyperconverged infrastructure (HCI), it allows organizations to manage and monitor their Nutanix environments securely and locally.

In this mode, Intersight provides:

- Visibility into Nutanix clusters (via Prism API)
- Monitoring of VMs, hosts, and cluster health
- Management of Cisco hardware (e.g., UCS servers running Nutanix)
- Single pane of glass for hybrid environments
- Air-gapped and compliance-friendly operations

It's ideal for secure, regulated environments that require local control, while still benefiting from unified infrastructure management across Cisco and Nutanix systems.

Scope

Goals

After completing these scenarios, you will know how to claim, deploy and configure the Nutanix cluster with Cisco Intersight.

What you'll do

Scenario	Description
Scenario 1	Claim Servers in Cisco Intersight
Scenario 2	Onboard nodes in Foundation Central
Scenario 3	Nutanix Cluster Deployment with AHV or ESX Hypervisor
Scenario 4	Nutanix Prism Central deployment and Cluster registration
Scenario 5	Nutanix Cluster Expansion
Scenario 6	Nutanix Prism Central 2022 installation (Optional)

See the [Environment](#) page for lab IP addresses, credentials and equipment, and [Get Started](#) to begin.

Disclaimer

Test results are suitable to the specific design, configuration, test procedure, and types of switches deployed in the environment described in this document.

This document is provided "As-Is," without warranty of any kind, express or implied, including without limitation those of merchantability, fitness for a particular purpose, and non-infringement arising from a course of dealing usage or trade practice.

All printed copies and duplicate soft copies are not considered controlled; therefore, please refer to the original online version for the latest version.

Document history

Revision	Date	Author	Description	Version
1	12 March 2026	Arguedas	Intersight – Nutanix ISM use cases	1.0

Environment

IP Table

Host Name	IP Address	Credentials	Model
rtp-cpoc-dng-b16-c240m7-1	198.18.143.1	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-2	198.18.143.2	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-3	198.18.143.3	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-4	198.18.143.4	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m4-1	198.18.143.6	admin/C1sco12345!	UCSC-C240-M4SX
rtp-cpoc-dng-b16-n9336-1	198.18.143.7	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-n9336-2	198.18.143.8	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-fi6536-1	198.18.143.9	admin/C1sco12345!	HCIX-FI-6536
rtp-cpoc-dng-b16-fi6536-2	198.18.143.10	admin/C1sco12345!	HCIX-FI-6536
cpoc-win10-1	198.18.133.36	cpoc/cpoc123	Windows 10
cpoc-win10-2	198.18.133.37	cpoc/cpoc123	Windows 10
Ad1	198.18.133.1	dcloud/administrator/C1sco12345	Windows server
Vcenter 7	198.18.133.30	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Vcenter 8.0.3	198.18.133.31	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Cisco IMM	198.18.128.100	admin / C1sco12345	Cisco IMM Transition
Nutanix-pc.2022.6.0.12	198.18.128.150	admin / C1sco12345!	Nutanix-pc.2022.6.0.12
Intersight Assist	198.18.128.254	admin / C1sco12345	Intersight
Intersight pva	198.18.128.253	admin / C1sco12345	Intersight
Intersight cva	198.18.128.252	admin / C1sco12345	Intersight
VMware-ESXI	198.18.128.250	root / C1sco12345!	ESX 7.0
ISM Prism Element	198.18.135.2	admin / C1sco12345	
ISM Prism Element virtual IP	198.18.135.3	admin / C1sco12345	
ISM Nutanix PC-2024	198.18.135.4	admin / C1sco12345	
ISM Nutanix PC-2024 virtual IP	198.18.135.5	admin / C1sco12345	
ISM IP Pool for cluster	198.18.135.10-100		


Equipment – CPOC Lab


Note

Be sure to include the Software Version in this table.

Quantity Required	Model	Software Version
4	UCSC-C240-M7SN	4.3(5.240021)
2	N9K-C9336C-FX2	nxos10.4

Design and Topology Diagram

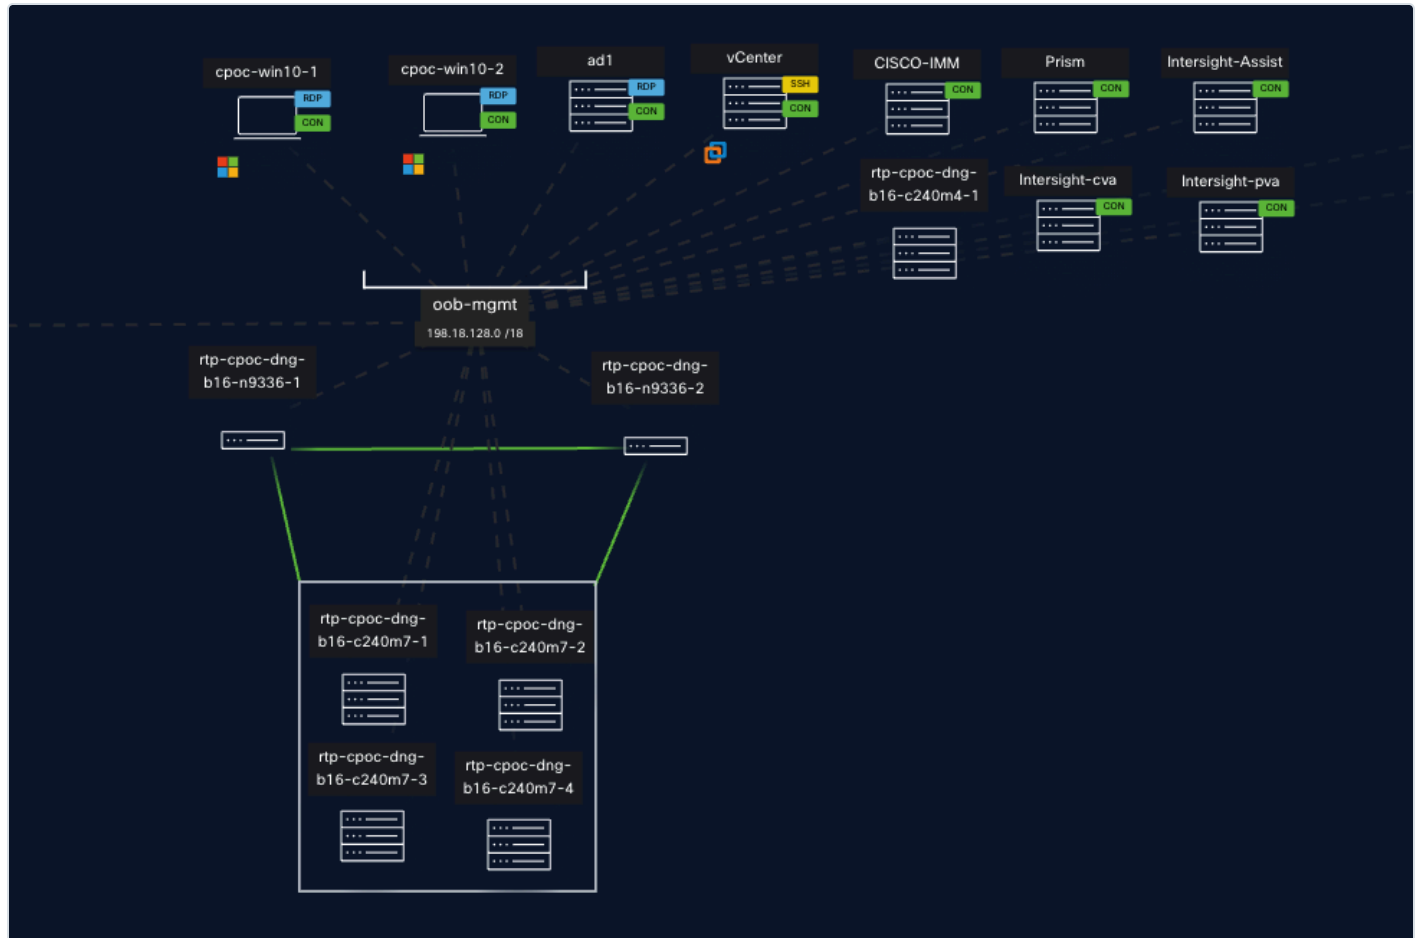

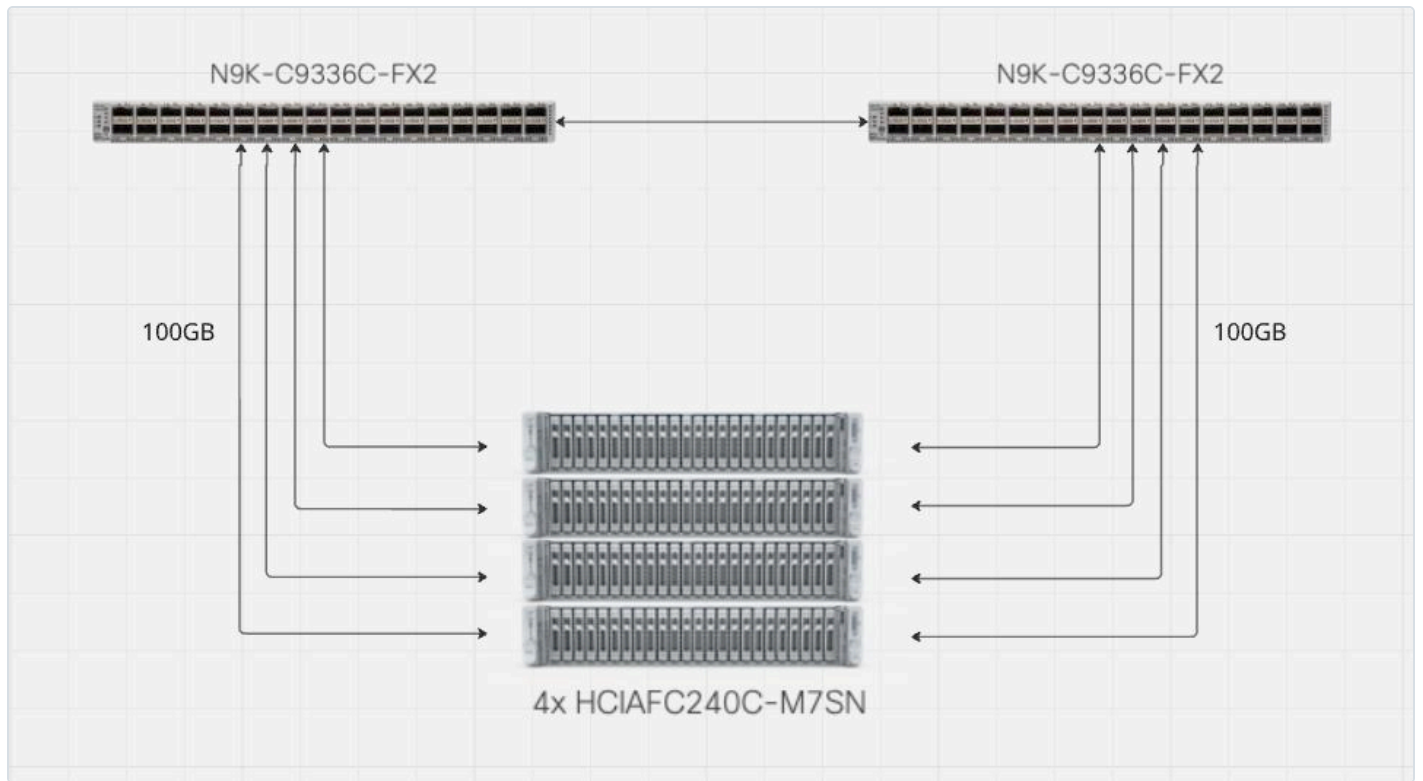

Get Started

1. Initiate your dCloud session. [Show Me How](#)
2. For best performance, connect to the workstation with Cisco Secure Client VPN [Show Me How](#) and the local RDP client on your laptop.
[Show Me How](#)
 - Workstation 1: 198.18.133.36, Username: cpoc, Password: cpoc123

Ready to go? Head to [Scenario 1](#).

Scenario 1 - Claim Servers in Cisco Intersight

Cisco Intersight Claim Servers is a process used to register or "claim" physical infrastructure devices (like Cisco UCS servers or Nexus switches) to the Cisco Intersight platform. Intersight is a cloud-based infrastructure management tool that provides centralized monitoring, configuration, and lifecycle management for Cisco data center hardware.

1. Click on cpoc-win10-1 on the main topology, on the left side select remote access and then click on web RDP to log in

Name	cpoc-win10-1
Description	cpoc-win10-1
OS Family	WINDOWS
vCPUs	4
Memory	8192
Guest OS	Running
VMWare tools	Guest Tools Running

Remote Access

Web RDP IP Address	198.18.133.36
User	cpoc
Password	cpoc123

Web RDP VM Console

Control

IP Address


1. Once in the workstation open firefox browser

Host Name:	CPOC-WIN10-1
IP Address:	198.18.133.36 fe80::5b0b:e096:c0f5:61f1
Default Gateway:	198.18.128.1
MAC Address:	00:50:56:86:80:33
PortID:	
SwitchName:	
Image:	win10-1-dcloud-5.3-24


Note

NOTE: Steps from 3 to 5 have already been performed, so these are just read and view steps.

1. Log in to the CIMC interface with a web browser using the IP address you set. Retrieve the Device ID and the Claim Code from the CIMC web UI, under Admin > Device Connector

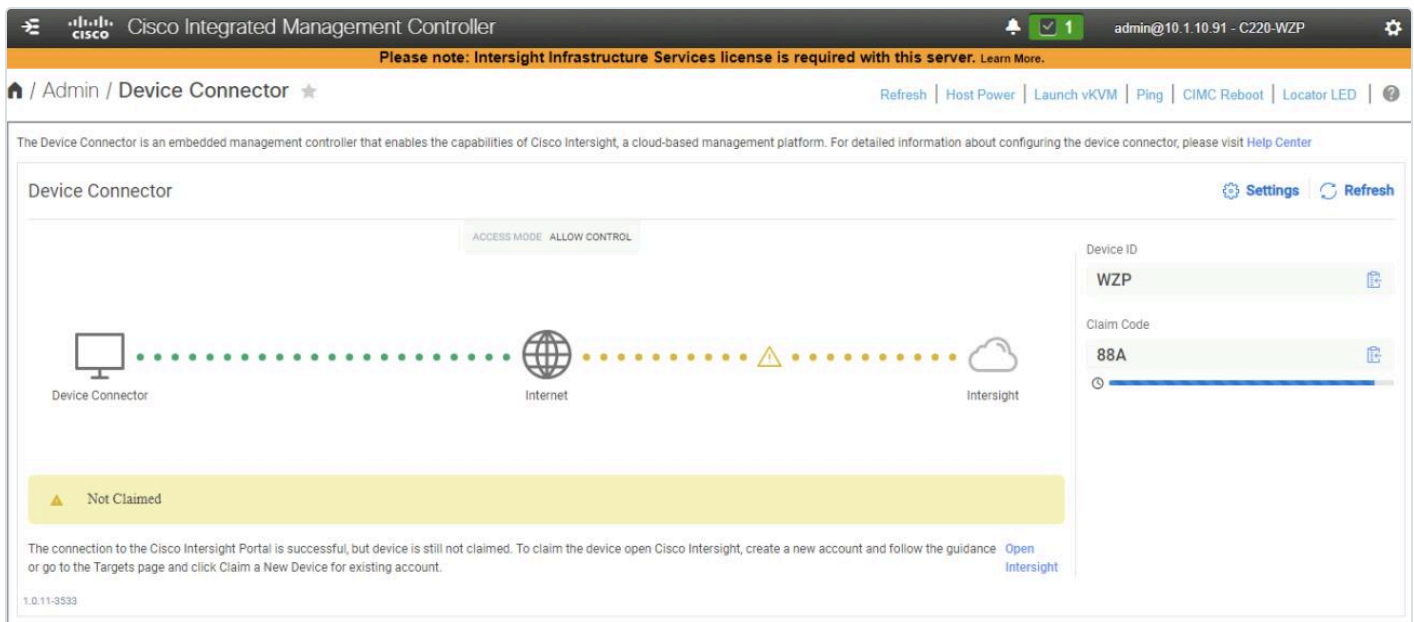

1. In Cisco Intersight, go to the System area, click on Targets, then Claim a New Target

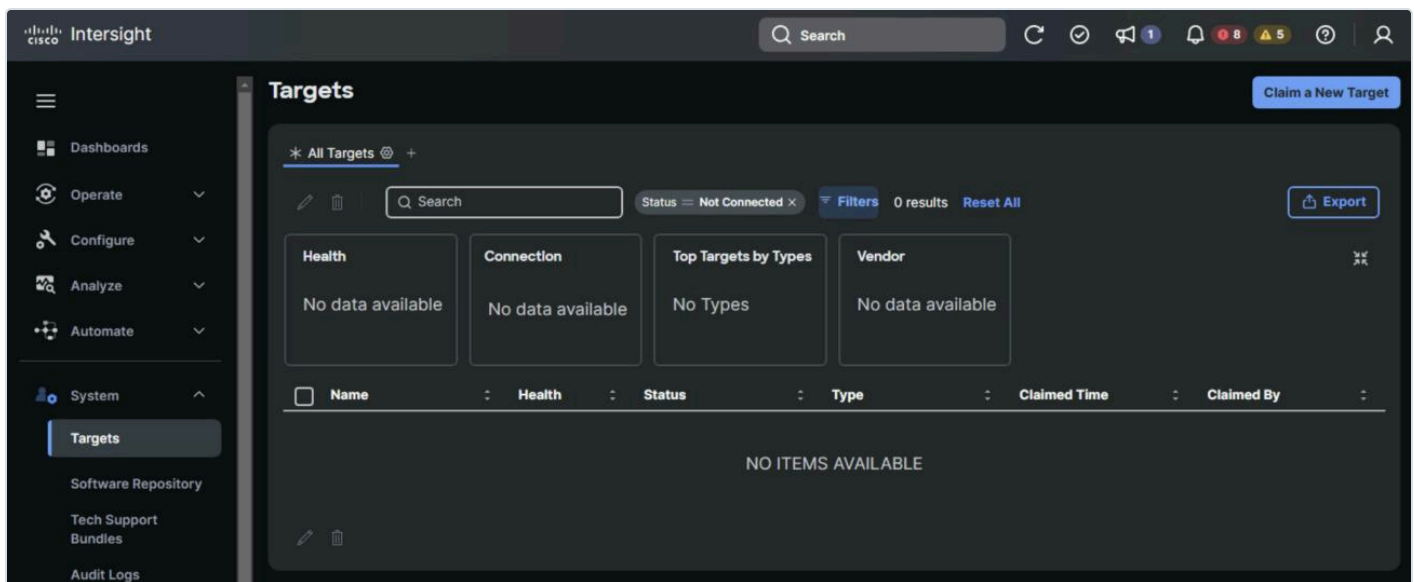

1. Select Cisco UCS Server (Standalone), then enter the Device ID and Claim Code, then click Claim. Repeat for all the servers to be used in your new cluster

Select Target Type

Filters

☒ Available for Claiming

Categories

- ☒ All
- ☐ Cloud
- ☐ Compute / Fabric
- ☐ Hyperconverged
- ☐ Network
- ☐ Orchestrator
- ☐ Platform Services
- ☐ Security

Search

Compute / Fabric

☒ Cisco UCS Server (Standalone)

Cisco UCS Domain (Intersight Managed)

Cisco UCS Domain (UCSM Managed)

Cisco UCS C890

Redfish Server

Platform Services

Cisco Intersight Appliance

Cisco Assist

Network

Cisco MDS Switch

Cisco Nexus Switch

Cisco Catalyst Center

Start

Claim Cisco UCS Server (Standalone) Target

To claim your target, provide the Device ID, Claim Code and select the appropriate Resource Groups.

General

Device ID * ⓘ

WZP27460GLC

Claim Code * ⓘ

88AE1D09B9F7

Resource Groups



Select resource groups, if required. This is not mandatory, since by default, the claimed target will be added to "All" type resource groups.

0 items found

10

per page << < 0 of 0 > >>



Name

Usage

Description

NO ITEMS AVAILABLE

<< < 0 of 0 > >>

Back Cancel

Claim

Note

NOTE: When using the Cisco Intersight Virtual Appliance, the servers' CIMC IP addresses and their usernames and passwords are used to claim the servers instead of the Device IDs and Claim Codes.


1. On the Desktop click the Active.html icon to access the Intersight login, on the next page click on the Hyperlink "Click here to login"





1. In the resulting window click Go to intersight, this will do the auto-login

Note


If requires accessing Intersight from the cpoc-win10-2, copy the URL and paste on the second windows virtual machine, then click Go to Intersight

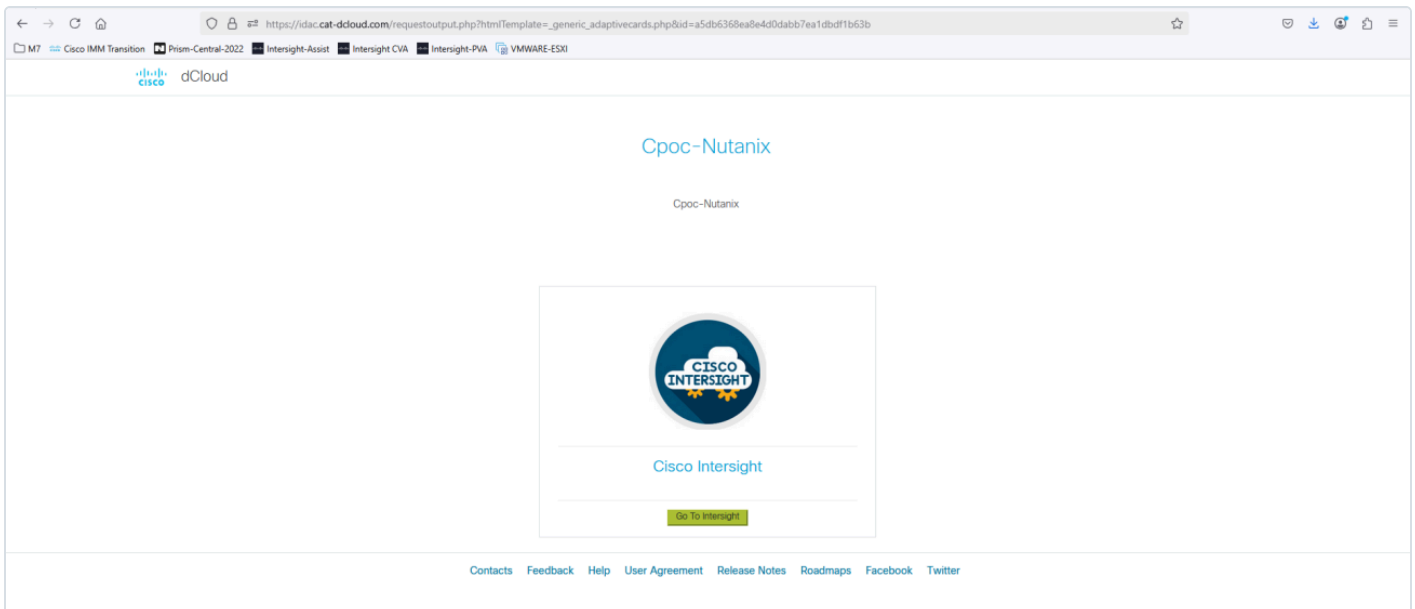

1. On the left page of Intersight, under Settings, click Keys
2. Click "Generate API key" using schema version 3 for use by Nutanix Foundation Central. Be sure to save the Secret Key to a file. It will only be shown once

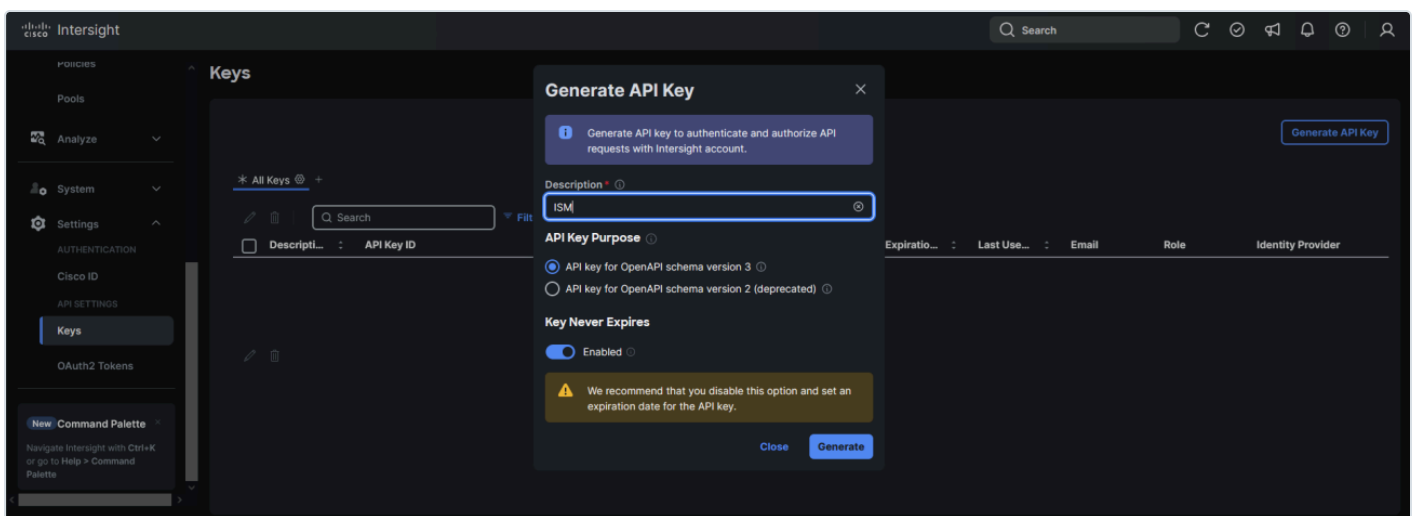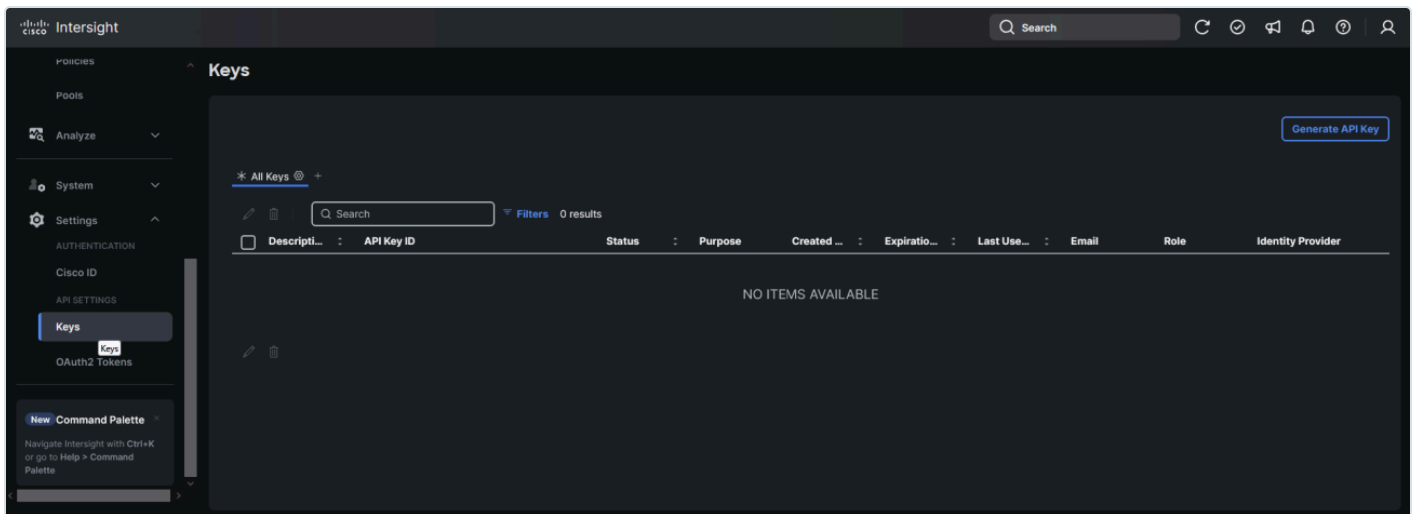


1. Save the API Key ID and Secret Key in the Desktop
2. Ensure your Cisco ID is granted access to download software from CCO. If not, click the Activate link and enter your CCO login credentials. This step is not required for an air-gapped Cisco Intersight private Virtual Appliance (PVA).

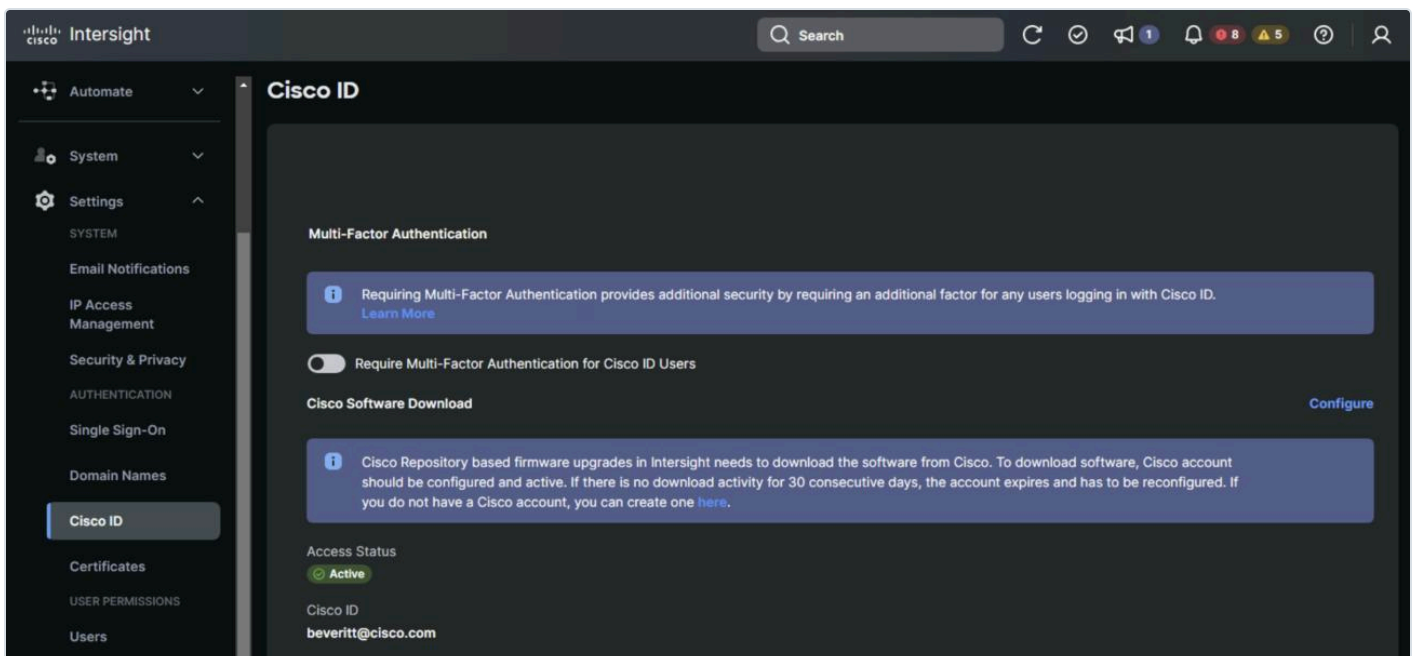


Scenario 2 · Onboard Nodes in Foundation Central


1. On Firefox browser bookmarks click over Prism-Central-2022, the credentials are admin / C1sco12345!




1. On this lab we're using the Nutanix Prism 2022.6.0.12 with Foundation Central 1.7.1
2. Make sure the DNS, NTP, Virtual IP and Domain Name are set.

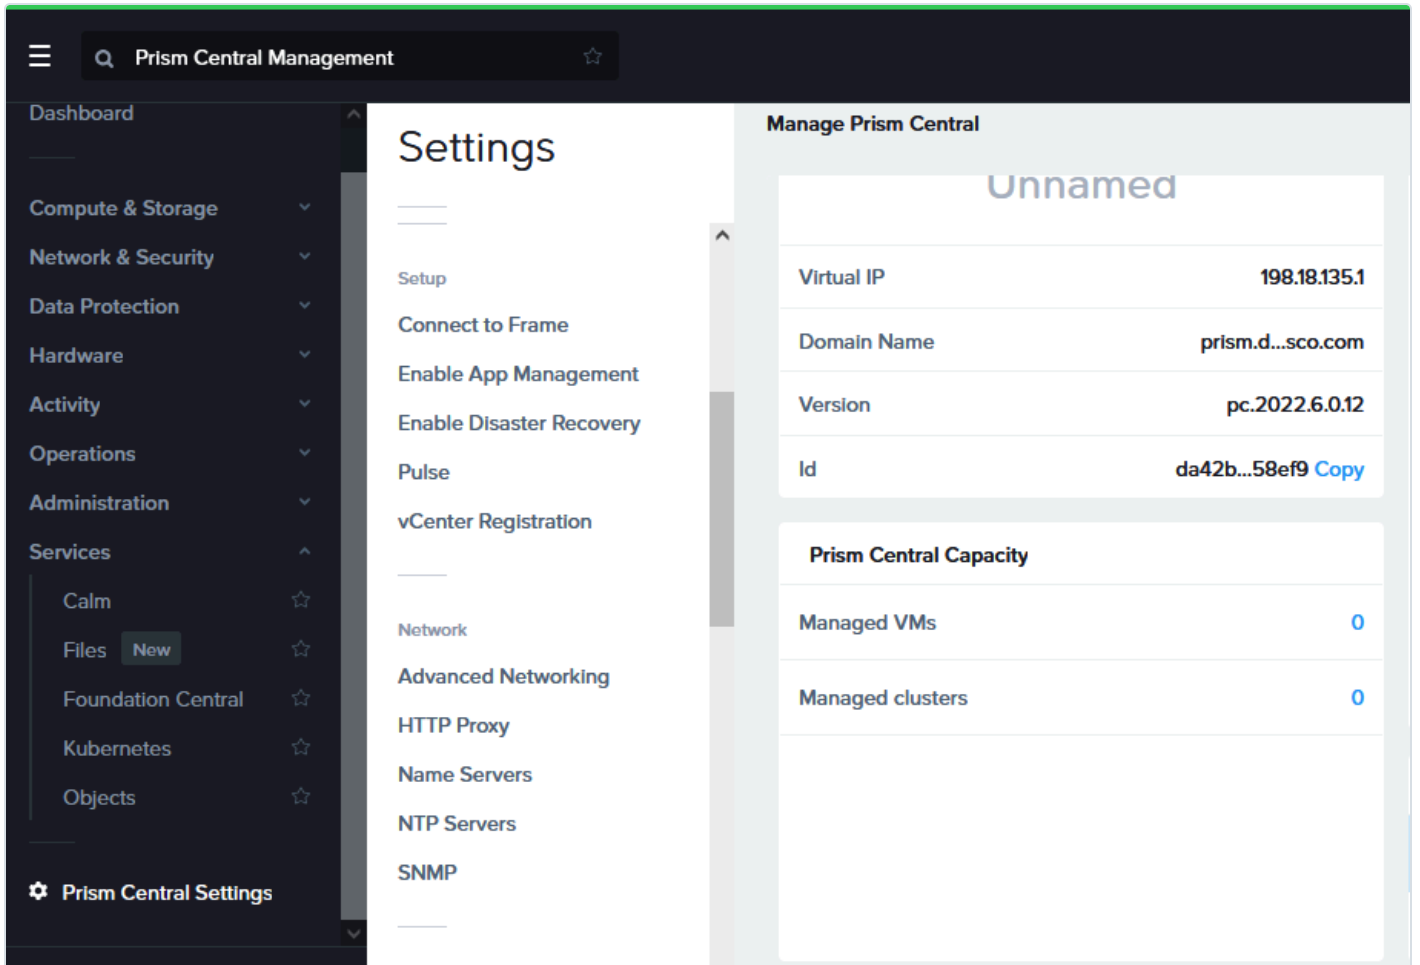


1. Once all the parameters are confirmed, go to Foundation Central Settings to connect Prism Central with Intersight account, click "Connect Hardware Provider"

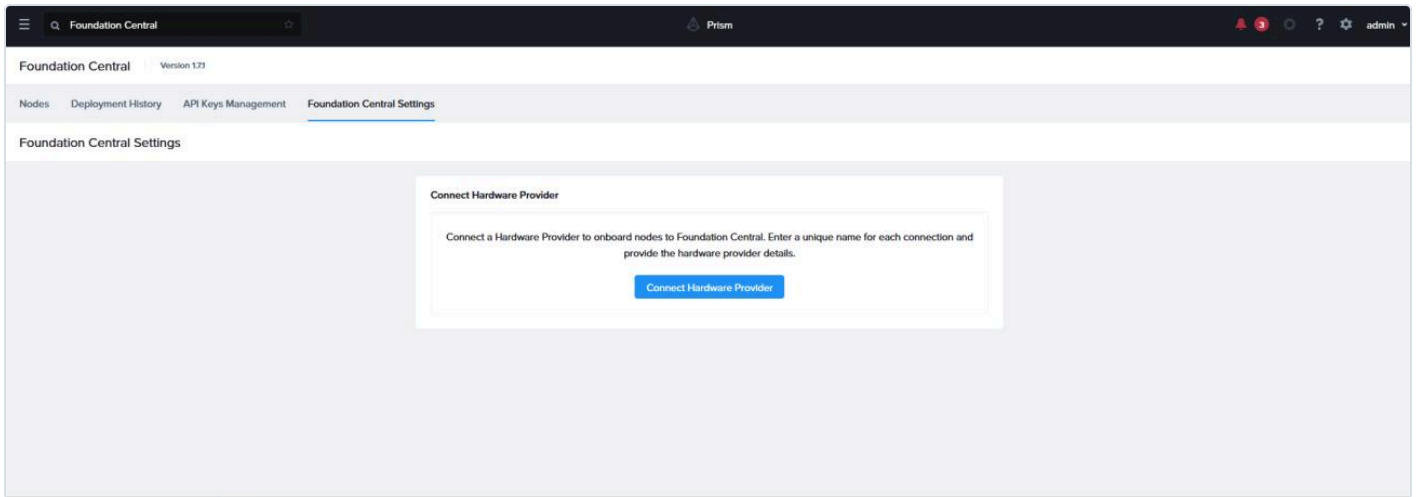


1. Fill in the required information
2. Connection name= Intersight
3. Hardware Provider = Cisco Intersight
4. Intersight Deployment Type = SaaS
5. Intersight Region & URL = North America
6. Intersight API Key =
7. Secret Key=

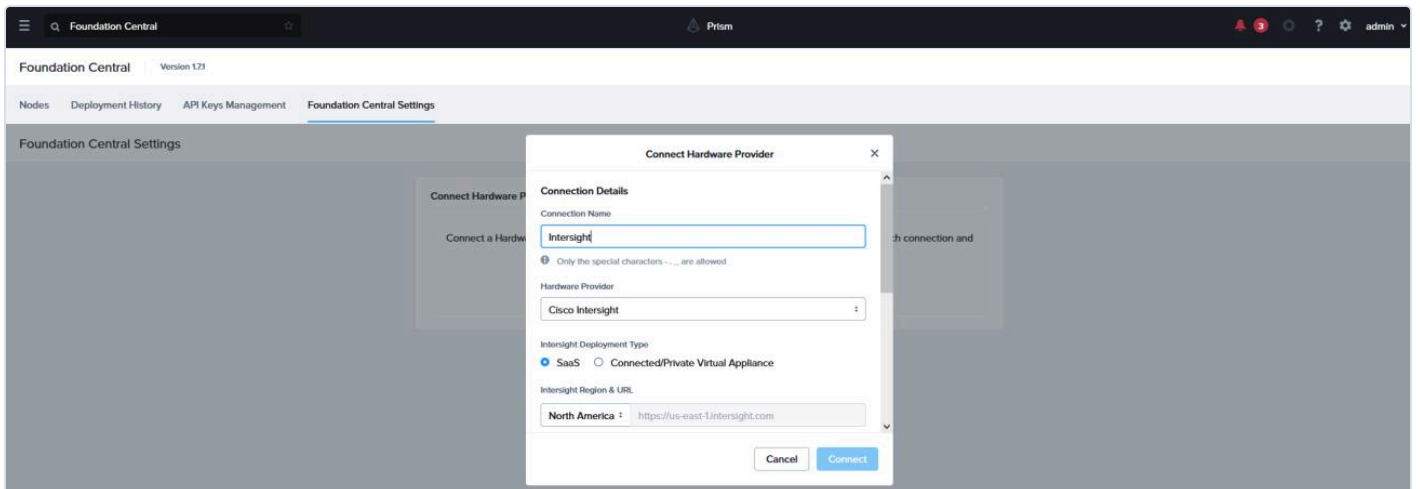


1. Prism Central will display a pop-up of "Connection has been saved"

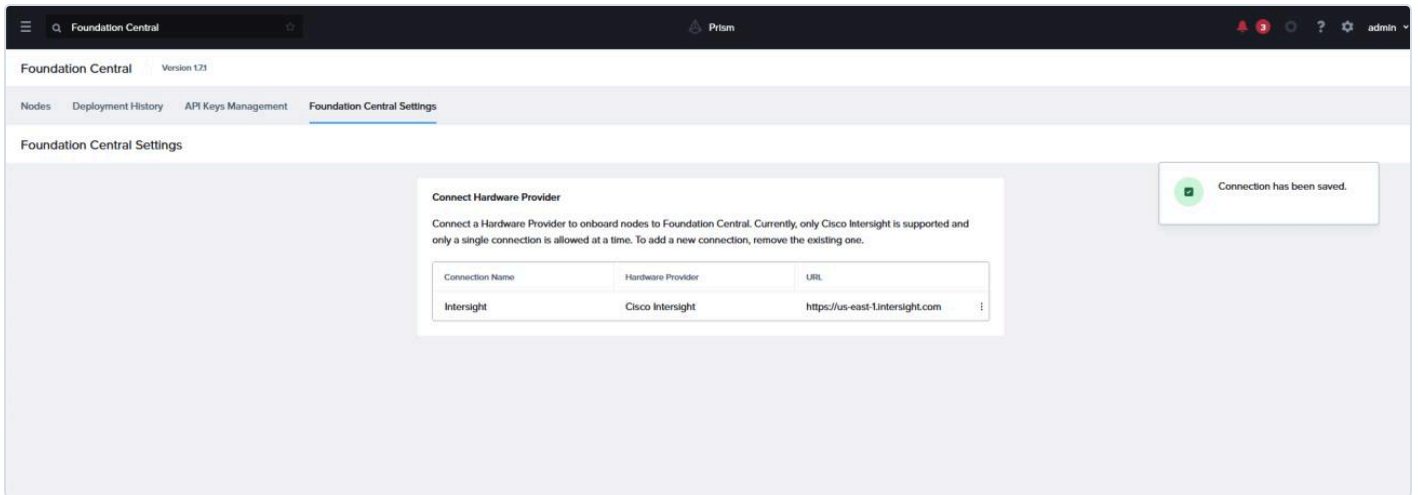

1. Then click on Nodes > Manually Onboarded and click Onboard Nodes

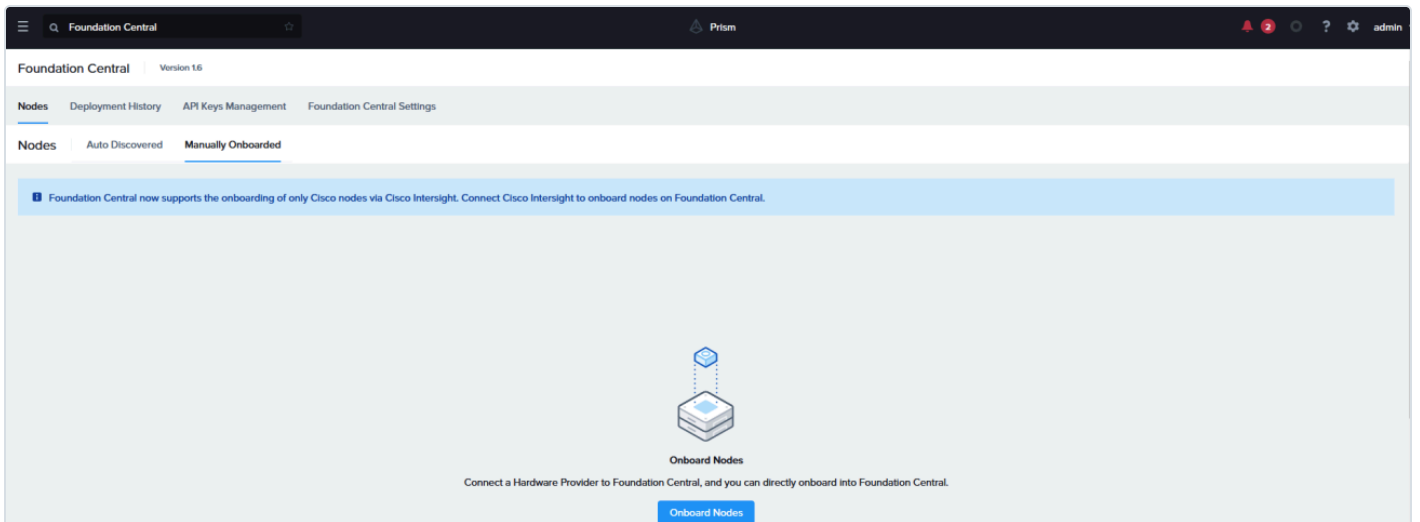

1. For node management mode, choose Intersight Standalone Mode then click Next

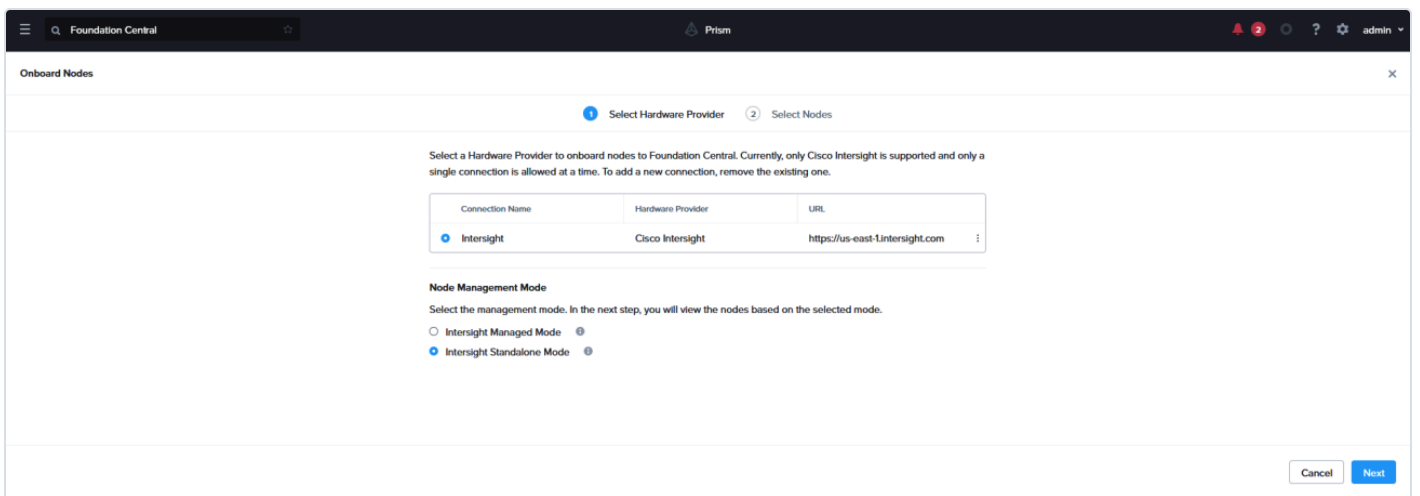

1. Select all Nodes you can to onboard and then click Onboard

Foundation Central

Prism

2

?

admin

Onboard Nodes

Select Hardware Provider

Select Nodes

You are currently viewing the nodes connected to Cisco Intersight for the connection name 'intersight' and there are no server profiles attached. To update the node list, please click on [Refresh](#).

Type in a query

Modify Filters

4 selected out of 4 Cisco Nodes

1 - 4 of 420 rows

☒ Node Serial	Name	Classification	Model	Organizations	Tags	Memory (GB)	CPU (Core)
☒ WZP28389L1	C240-WZP28389L1	Nutanix	UCSC-C240-M7SN	default	-	512	32
☒ WZP28389LX	C240-WZP28389LX	Nutanix	UCSC-C240-M7SN	default	-	512	32
☒ WZP28400HKB	C240-WZP28400HKB	Nutanix	UCSC-C240-M7SN	default	-	512	32
☒ WZP28400HKH	C240-WZP28400HKH	Nutanix	UCSC-C240-M7SN	default	-	512	32

Back

CancelOnboard

Scenario 3 · Nutanix Cluster Deployment with AHV or ESX Hypervisor

Note

Note In this scenario we're deploying a cluster of 3 nodes, but if want to deploy the cluster with 4 nodes it can be done, but will have to skip the scenario 4 cluster expansion

1. In Foundation Central under Nodes > Manually Onboarded, select the first 3 nodes would like to use for the cluster deployment and click on Create Cluster

The screenshot shows the 'Manually Onboarded' tab in the Foundation Central interface. Three nodes are selected for cluster creation. The table below represents the data shown in the interface:

Node Serial	Name	Node Status	Model	Domain	Intersight Organizations	Intersight Tags	Classification	Onboarded On	Last Refreshed
☒ WZP28400HKB	C240-WZP28400HKB	Onboarded	UCSC-C240-M7SN	-	Intersight-Nutanix	-	Nutanix	May 7, 2025, 04:24 PM	May 7, 2025, 04:24 PM
☒ WZP28400HGH	C240-WZP28400HGH	Onboarded	UCSC-C240-M7SN	-	Intersight-Nutanix	-	Nutanix	May 7, 2025, 04:24 PM	May 7, 2025, 04:24 PM
☒ WZP283891L1	C240-WZP283891L1	Onboarded	UCSC-C240-M7SN	-	Intersight-Nutanix	-	Nutanix	May 7, 2025, 04:24 PM	May 7, 2025, 04:24 PM
☐ WZP283891LX	C240-WZP283891LX	Onboarded	UCSC-C240-M7SN	-	Intersight-Nutanix	-	Nutanix	May 7, 2025, 04:24 PM	May 7, 2025, 04:24 PM

1. Enter the required information and click Next
2. Name = ISM
3. Intersight Organization= Intersight-Nutanix

The screenshot shows the 'Create Deployment' wizard, Step 1: Cluster Details. The following settings are configured:


- Cluster Name:** ISM
- Cluster Replication Factor:** RF2
- Intersight Organization:** Intersight-Nutanix

The 'Next' button is visible at the bottom right of the configuration area.

1. Login into Cisco IMM Transition tool, the access is located on the bookmark, In the Application click in Software Repository, you will see some folders for different versions, for this deployment, we offer the option to select one of the Nutanix AOS and the hypervisor which is supported by the servers, check the versions and select the one you like to deploy using AOS with AHV hypervisor or check below the options of VMware ESXi

Note

Check the versions here <https://portal.nutanix.com/page/compatibility-interoperability-matrix>

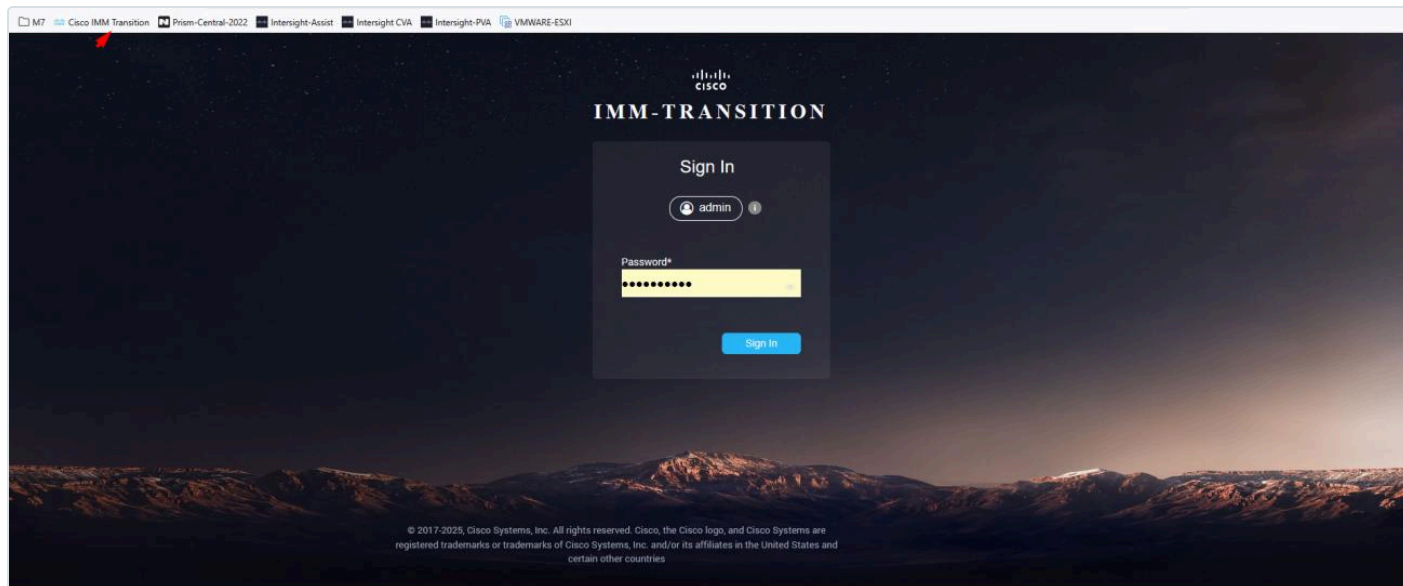

Hardware Model ▴	AOS Version ▴	Recommended Hypervisor Version ▴
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	AHV-20230302.101026

Hardware Model ▴	AOS Version ▴	Recommended Hypervisor Version ▴
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	AHV-20230302.102001

Hardware Model ▴	AOS Version ▴	Recommended Hypervisor Version ▴
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	AHV-10.0

All Versions		
Hardware Model ▴	AOS Version ▴	Recommended Hypervisor Version ▴
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	AHV-10.0.0.1

All Versions		
Hardware Model ▴	AOS Version ▴	Recommended Hypervisor Version ▴
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	AHV-10.0.1

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	● 6.8.1	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	● 6.8.1	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	● 6.8.1	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	● 6.8.1	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	● 6.8.1	ESXi 7.0 U3s
HCIAF240C-M7SN/UCSC-C240-M7SN	● 6.8.1	ESXi 8.0 U2d

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U3 Vendor

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3s

All Versions		
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3s

All Versions		
Hardware Model	AOS Version	Recommended Hypervisor Version
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3s

1. Choose one of the options to deploy the new cluster, access the desired folder and copy the AOS link, click the Ellipsis at the right side, then select share link

Home					
Total: 97.87 GB Used: 49.77 GB 51%					
Name	Last Modified Time	Type	Size	Sync Status	
Nutanix-AOS-AHV-7.0.1.5	05/07/2025 6:44:32 PM	Folder	-	-	...
Nutanix-Prism-Central	05/07/2025 6:11:17 PM	Folder	-	-	...
Nutanix-AOS-AHV-6.8.1	04/08/2025 11:39:01 PM	Folder	-	-	...
OS	04/07/2025 4:30:43 PM	Folder	-	-	...
Nutanix-AOS-AHV-7.0	04/08/2025 11:38:11 PM	Folder	-	-	...
Nutanix-AOS-AHV-7.0.0.5	05/07/2025 6:53:35 PM	Folder	-	-	...
Vmware-ESX	04/01/2025 5:33:59 PM	Folder	-	-	...
Nutanix-AOS-AHV-6.10	04/08/2025 11:37:23 PM	Folder	-	-	...

1. Return to Prism Central and paste the copied link into the AOS URL, then from the hypervisor option click on it and select AHV, then return to Cisco IMM to copy the link of AHV, select the ISO and click Next

Foundation Central
Prism
admin

Create Deployment

1 Cluster Details
2 Hypervisor / AOS
3 Network Settings
4 CVM Settings
5 Configure Nodes
6 Security

☒ I want to image all nodes with custom AOS and hypervisor installers.

AOS Download URL

AOS package will be downloaded from this location during the imaging process of each node.

Pre-computed SHA256 Checksum of AOS Installer (Optional)

Provide the checksum if you want Foundation Central to run a checksum test of the downloaded installer before starting the imaging process. This checksum also helps Foundation Central skip a re-download if a file with the same checksum already exists.

Hypervisor

Choose the hypervisor type that you want to install on each node.

☐ Instead of downloading AHV from a URL, I want to use the AHV bundled inside the AOS package specified above (please ensure your AOS package bundles an AHV installer)

Hypervisor Download URL

Hypervisor installer will be downloaded from this location during the imaging process of each node.

Pre-computed SHA256 Checksum of Hypervisor Installer (Optional)

1. Fill in the networking information a. Gateway = 198.18.128.1 b. Netmask = 255.255.192.0 c. Cluster Virtual IP = 198.18.135.2 d. Host and CVM VLAN = 10 e. Click Next

Create Deployment

Nutanix requires all hosts and CVMs of a cluster to have static IP addresses in the same subnet.

Gateway of Every Host and CVM [Reuse Existing](#)

Netmask of Every Host and CVM

Cluster Virtual IP (Optional)

This IP will always point to an online node, even in case of a node failure. Must be in the host-CVM subnet. Your subnet range is: 198.18.128.0 - 198.18.191.255

! If you plan to deploy Nutanix Objects, click here to learn about important network requirements.

Host and CVM VLAN

If your host-CVM subnet has a VLAN configuration, enter the tag below. All packets leaving the hosts and the CVMs will be wrapped with this VLAN tag.

VLAN Tag of Every Host and CVM (Optional)

Minimum 1, maximum 4094. If left blank, VLAN 0 will be used.

Hypervisor LACP Configuration
☐ Enable LACP

1. CVM Settings uses the following information:
2. Timezone= America/New_York
3. NTP=198.18.128.1
4. DNS= 198.18.133.1
5. Click Next

Create Deployment

Time Configuration

Time settings apply to every CVM, and also apply to hosts depending on the hypervisor you chose.

Timezone

Only available when you choose to form a cluster, because of technical reasons. Nutanix concluded AHV and ESX don't properly support host timezones.

NTP Servers (Optional)

Enter a comma-separated list of IPs or domain names. Applies to the host too if the host is AHV. For ESX, Nutanix concluded it is best to configure host NTP servers in vCenter.

DNS Settings

DNS settings apply to every CVM, and also apply to hosts depending on the hypervisor you chose.

DNS Servers (Optional)

Enter a comma-separated list of IPs. Required if any NTP server above is a domain name, or if AOS/hypervisor package downloaded URLs are using domain names. For ESX, Nutanix concluded it is best to configure host DNS servers in vCenter.

1. To complete the cluster Host IP, CVM IP and Host name use the image below as an example, you can choose any IP address from 198.18.135.10 up to 198.18.135.100

Note

When adding the Host IP, skip one IP address between Host IP and CVM IP

Foundation Central Prism admin

Create Deployment

1 Cluster Details 2 Hypervisor / AOS 3 Network Settings 4 CVM Settings 5 **Configure Nodes** 6 Security

Enter the IP/Hostnames you want each node to have. [Reuse Existing](#) [Reorder](#) [Clear](#)

Node Serial	Node Name	Host IP Set Range	CVM IP Set Range	Hostname of Host Set Range
WZP28400HKH	C240-WZP28400HKH	198.18.135.20	198.18.135.24	c240-node-1
WZP28400HKB	C240-WZP28400HKB	198.18.135.21	198.18.135.25	c240-node-2
WZP28389ILX	C240-WZP28389ILX	198.18.135.22	198.18.135.26	c240-node-3

[Back](#) [Next](#)

1. For the Foundation Central API Key, click the “+ Generate API key”, add a name, select the new API from the drop-down menu and click Submit

1 Cluster Details 2 Hypervisor / AOS 3 Network Settings 4 CVM Settings 5 Configure Nodes 6 **Security**

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key [+ Generate API Key](#)

Intersight

[Back](#) [Submit](#)

1. The cluster deployment begins and takes approximately 1h15m to complete

Foundation Central Prism

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

ISM Deployment in progress Start Date and Time: 5/9/2025, 08:09 PM [About](#)

Phase 1A: Node Preparation 11% 3 nodes in progress Phase 1B: Node Imaging 0% Not started Phase 2: Cluster Formation 0% Waiting for Phase 1 to finish

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/nutanix_installer_package-release-ganges-70.0.5-stable-f280ec31fa87a38eb0e07d70e4878b518d7e72ae-x86_64.lar.gz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.123.1	Hypervisor Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/AHV-DVD-x86_64-10.0.0.11.iso
Cluster VLAN ID 10	Deployment UUID 738f3815-214e-4c16-7a7c-0073e47952e4	LACP No	

3 Nodes In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891LX	WZP283891LX	A	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.135.20	198.18.135.24	AHV	c240-node-1
WZP28400HKB	WZP28400HKB	A	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.135.21	198.18.135.25	AHV	c240-node-2
WZP28400HKH	WZP28400HKH	A	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.135.22	198.18.135.26	AHV	c240-node-3

1. Return to Intersight, under Operate select Servers to check the Server Profile provisioning progress.

Intersight

Servers

All Servers 7 results Export

Health 7 Healthy 7 Power On 7 HCL Status Not Evaluated 7 Bundle Version 4.3(5.240021) 4 5.3(0.240016) 3 Utility Storage No 3 Yes 4 Firmware Version 4.3(5.240021) 4 5.3(0.240016) 3 Models 7 C240 M7SN 4 UCSX 210C-M7 3 Contract SI Not Covered

Name	Health	Model	CPU Capacity	Memory Capacity	UCS Domain	Server Profile	Bundle Version
C240-WZP283891LX	Healthy	UCSC-C240-M7SN	115.2	512.0		ntnx_WZP283891LX	4.3(5.240021)
C240-WZP28400HKB	Healthy	UCSC-C240-M7SN	115.2	512.0		ntnx_WZP28400HKB	4.3(5.240021)
C240-WZP28400HKH	Healthy	UCSC-C240-M7SN	115.2	512.0		ntnx_WZP28400HKH	4.3(5.240021)
rtp-cpoc-dng-b16...	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-f65...	ntnx_FCH2852777C	5.3(0.240016)
rtp-cpoc-dng-b16...	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-f65...	ntnx_FCH2852777D	5.3(0.240016)
rtp-cpoc-dng-b16...	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-f65...	ntnx_FCH2852777E	5.3(0.240016)

Rows per page 10 < 1 >

1. Let's explore Intersight, under Configure select Profiles > UCS Server Profiles. Note the profiles are being created/configured under Activating status.

Intersight

Profiles

HyperFlex Cluster Profiles UCS Chassis Profiles UCS Domain Profiles UCS Server Profiles Create UCS Server Profile

All UCS Server Profiles 3 results Export

Status Activating 3 Inconsistency Reason No data available Target Platform Standalone 3

Name	Status	Target Platform	UCS Server Template	Server	Last Update
ntnx_WZP28400HKH_bd237b0...	Activating	UCS Server (Standalone)		C240-WZP28400HKH	in a few seconds
ntnx_WZP28400HKB_bd237b0...	Activating	UCS Server (Standalone)		C240-WZP28400HKB	in a few seconds
ntnx_WZP283891LX_bd237b08...	Activating	UCS Server (Standalone)		C240-WZP283891LX	in a few seconds

Rows per page 23 < 1 >

1. In Configure > Policies, note all the UCS Server policies created as part of the automated process between Foundation Central and Intersight.

Policies

* All Policies +

Search Filters 28 results Export

Platform Type: UCS Server 28

Usage: 28 (Used 22, Indirect 6)

Name	Platform Type	Type	Usage	Last Update
ntnx_nvme-bios_JSM_bd237b08-09d...	UCS Server	BIOS	Used - 3	4 minutes ago
ntnx_m2-raid_WZP28400HKH_bd23...	UCS Server	Boot Order	Used - 1	4 minutes ago
ntnx_kvm_JSM_bd237b08-09dd-43e...	UCS Server	Virtual KVM	Used - 3	4 minutes ago
ntnx_lol_JSM_bd237b08-09dd-43e...	UCS Server	IPMI Over LAN	Used - 3	4 minutes ago
ntnx_ac-cisco_WZP28400HKH_bd23...	UCS Server	Adapter Configuration	Used - 1	4 minutes ago
ntnx_scp-cisco_WZP28400HKH_bd2...	UCS Server	SAN Connectivity	Used - 1	4 minutes ago
ntnx_firmware_WZP28400HKH_bd2...	UCS Server	Firmware	Used - 1	4 minutes ago
ntnx_m2-storage_WZP28400HKH_bd...	UCS Server	Storage	Used - 1	4 minutes ago
ntnx_lcp-cisco_WZP28400HKH_bd2...	UCS Server	LAN Connectivity	Used - 1	4 minutes ago
ntnx_sol_JSM_bd237b08-09dd-43e...	UCS Server	Serial Over LAN	Used - 3	4 minutes ago

1. In the top right of the screen, click the Requests icon to monitor the undergoing tasks.

Requests

* All Requests +


Search Status = In Progress x Filters 3 results Reset All Export

Status: In Progress 3 Execution Type: Execute 3


Name	Status	Initiator	Target Type	Target Name	Start Time	Duration	ID	Execution Type
Server Profile A...	In Progress 9%	eargueda@cisc...	Rack Server	C240-WZP2840...	4 minutes ago	4 m 0 s	67eb2850696f6...	Execute
Server Profile A...	In Progress 9%	eargueda@cisc...	Rack Server	C240-WZP2838...	4 minutes ago	4 m 4 s	67eb284c696f6...	Execute
Server Profile A...	In Progress 9%	eargueda@cisc...	Rack Server	C240-WZP2840...	4 minutes ago	4 m 7 s	67eb2848696f6...	Execute

Rows per page: 21 < 1 >


1. Click on any of the tasks to check the progress of the server configuration

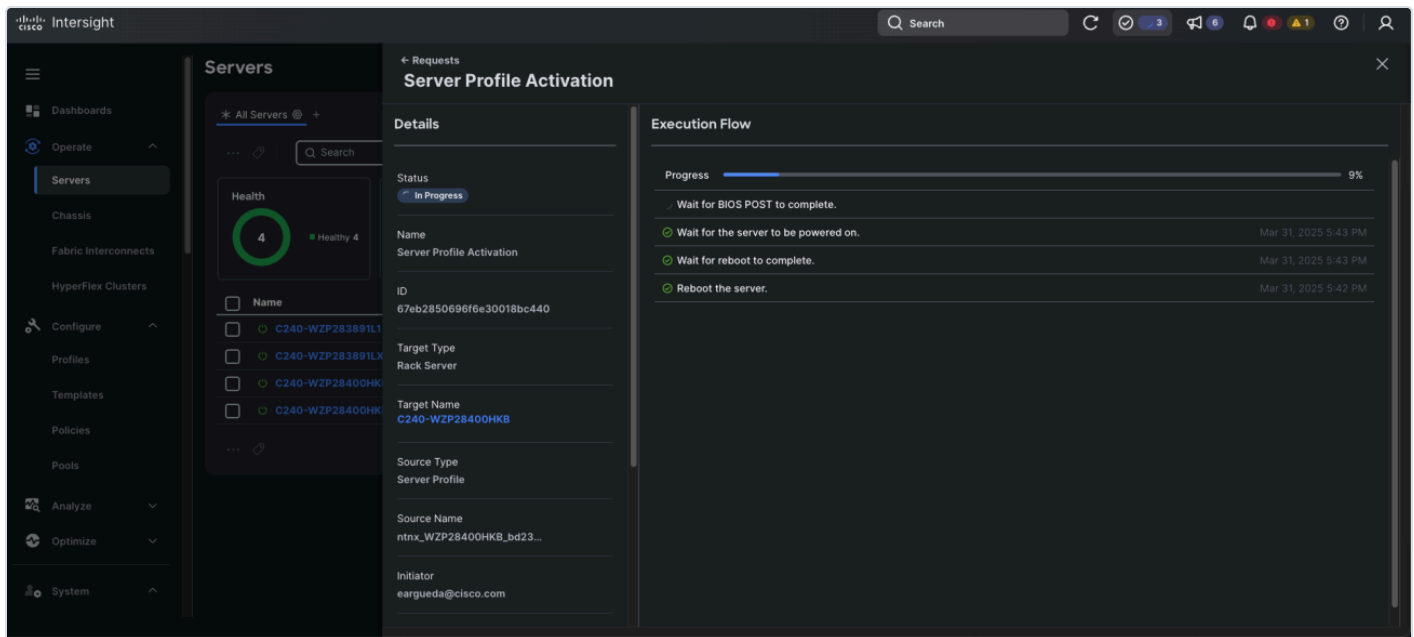

1. Return to Prism Central to monitor the cluster deployment progress.
2. Once the cluster deployment is completed, click “Open Prism Element”

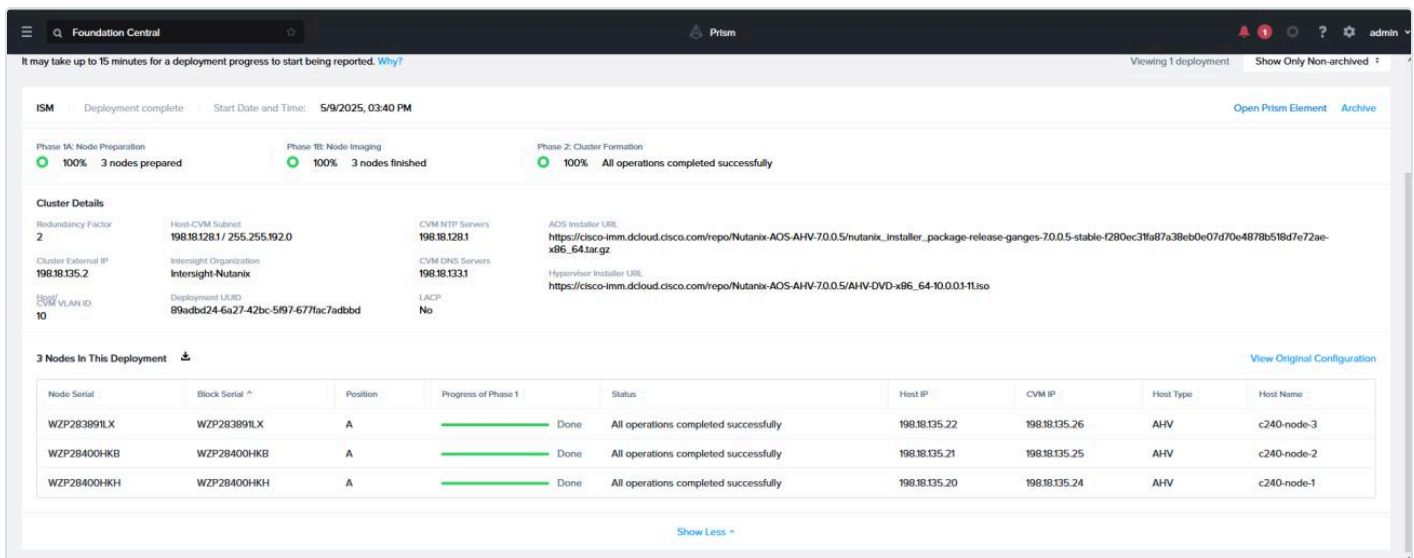

1. On Prism Element UI, login with user “admin” (password: Nutanix/4u) and change the password to C1sco12345!

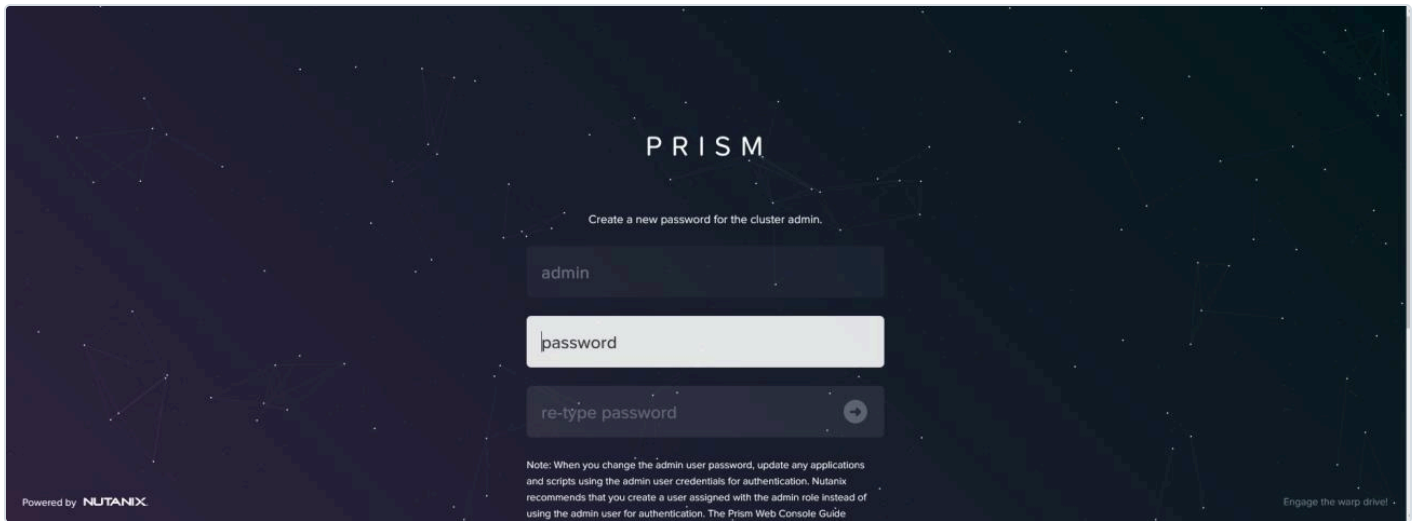

The image shows the PRISM web console interface for changing the cluster admin password. The background is dark blue with a network diagram pattern. The word "PRISM" is at the top center. Below it, the text "Create a new password for the cluster admin." is displayed. There are three input fields: "admin" (username), "password" (new password), and "re-type password" (confirm password). A "re-type password" button with a circular arrow icon is to the right of the third field. Below the fields, a note states: "Note: When you change the admin user password, update any applications and scripts using the admin user credentials for authentication. Nutanix recommends that you create a user assigned with the admin role instead of using the admin user for authentication. The Prism Web Console Guide". At the bottom left, it says "Powered by NUTANIX". At the bottom right, it says "Engage the warp drive!".

PRISM

Create a new password for the cluster admin.

admin

password


re-type password

Note: When you change the admin user password, update any applications and scripts using the admin user credentials for authentication. Nutanix recommends that you create a user assigned with the admin role instead of using the admin user for authentication. The Prism Web Console Guide

Powered by NUTANIX

Engage the warp drive!

1. After the password has been successfully changed, login with user admin and password C1sco12345!

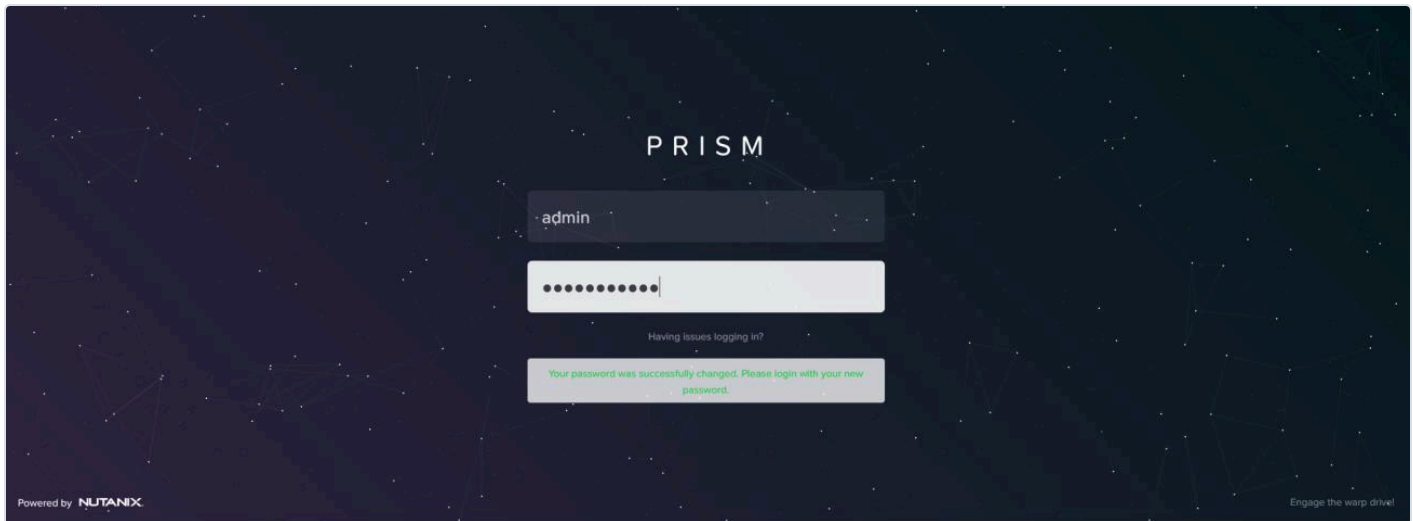

The image shows the PRISM web console login screen. The background is dark blue with a network diagram pattern. The word "PRISM" is at the top center. Below it, there are two input fields: "admin" (username) and a password field with masked characters. Below the password field, the text "Having issues logging in?" is displayed. A green message box states: "Your password was successfully changed. Please login with your new password." At the bottom left, it says "Powered by NUTANIX". At the bottom right, it says "Engage the warp drive!".

PRISM

admin

.....

Having issues logging in?

Your password was successfully changed. Please login with your new password.

Powered by NUTANIX

Engage the warp drive!

1. Complete the Nutanix EULA,
2. Name = Cpoc
3. Company = Cisco
4. Job title = ISM
5. Check the box and click accept and continue

Nutanix End User License Agreement (EULA) and Terms of Use

Nutanix is referred to in this Agreement as "Us", "We" or "Our" and Your organization is referred to as "You" or "Your". This Nutanix License and Services Agreement ("Agreement") governs Your use of any Products (as defined below) and becomes effective when You (a) issue a purchase order for the Products; (b) execute or accept this Agreement, or (c) access, download, install, or use the Software or Cloud Services. This Agreement is entered into between You and Nutanix Inc., located at 1740 Technology Dr. Ste. 150, San Jose, CA 95110, United States, if You are contracting in the Americas, or Nutanix Netherlands B.V., located at Mercursplein 1, 2132 HA Hoofddorp, The Netherlands, if You are contracting anywhere else in the world or both if applicable. You represent and warrant that You have the authority to enter into this Agreement on behalf of Your organization.

1. Definitions.

1.1 "Affiliates" means any corporation or other business entity which controls, is controlled by or is under common control through the ownership of more than fifty percent (50%) of the

CPOC

Cisco

ISM

☒ I have read and agree to the terms and conditions.

Decline

Accept

1. Keep the Pulse option by default, click Continue

Pulse will be enabled

Pulse continuously monitors cluster health and periodically sends usage data to Nutanix's cloud based analytics engine. It automatically takes action when a problem has occurred, or is about to occur. [Learn More](#)


Nutanix strongly recommends not disabling this feature to improve your support experience in the event of a failure or critical system issue.

If you disable Pulse, Nutanix will not be able to proactively reach out to you in the event of failures, and your issue resolution time may increase significantly.


☒ **Disable Pulse. (not recommended)**
Pulse will not be enabled on this cluster.

Continue


1. You should be taken to the main dashboard

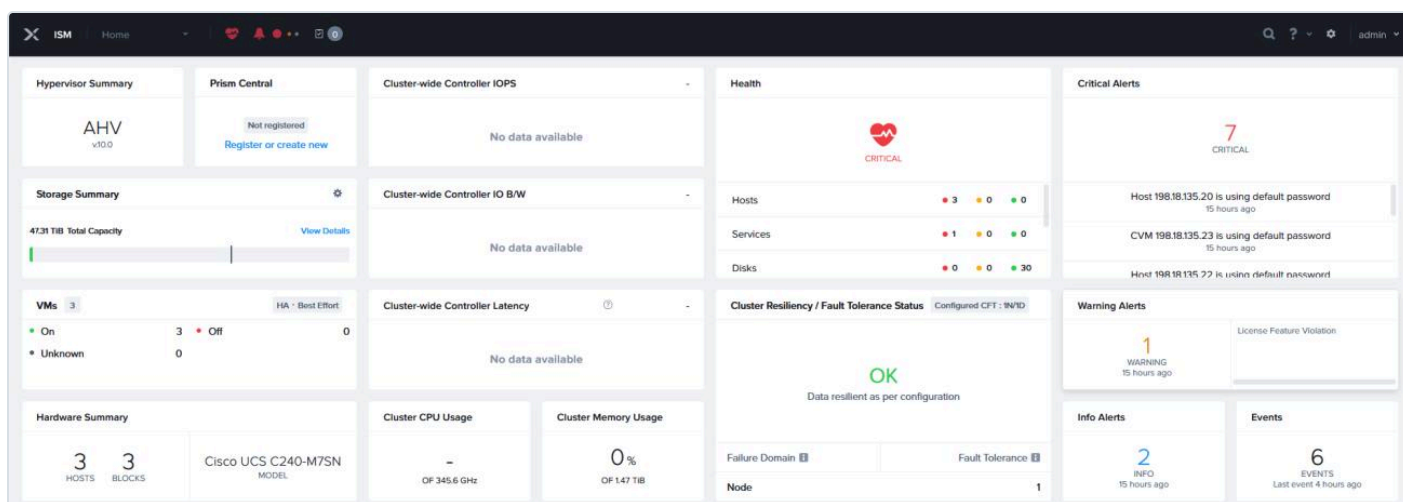


1. Click the cluster name on the top left ("ISM") next to the X icon, add 198.18.135.3 in the Data Service IP field and click Save

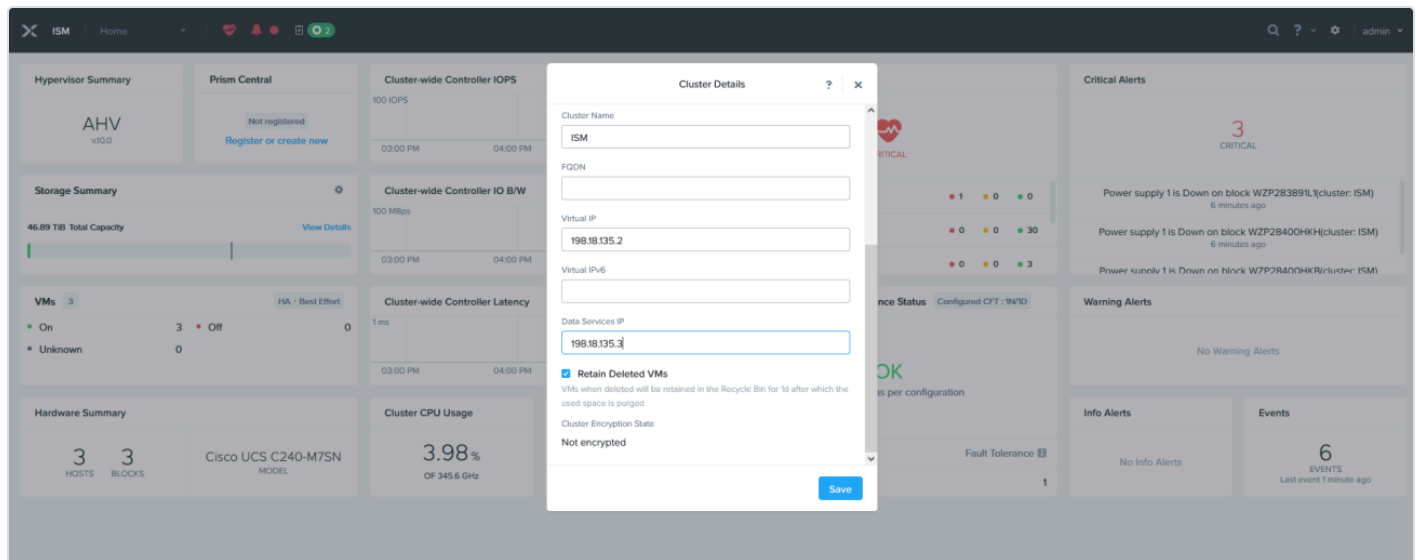


1. Let's start with some basic configuration, click Home at the top and select Settings then Network Configuration and click "Create Subnet"

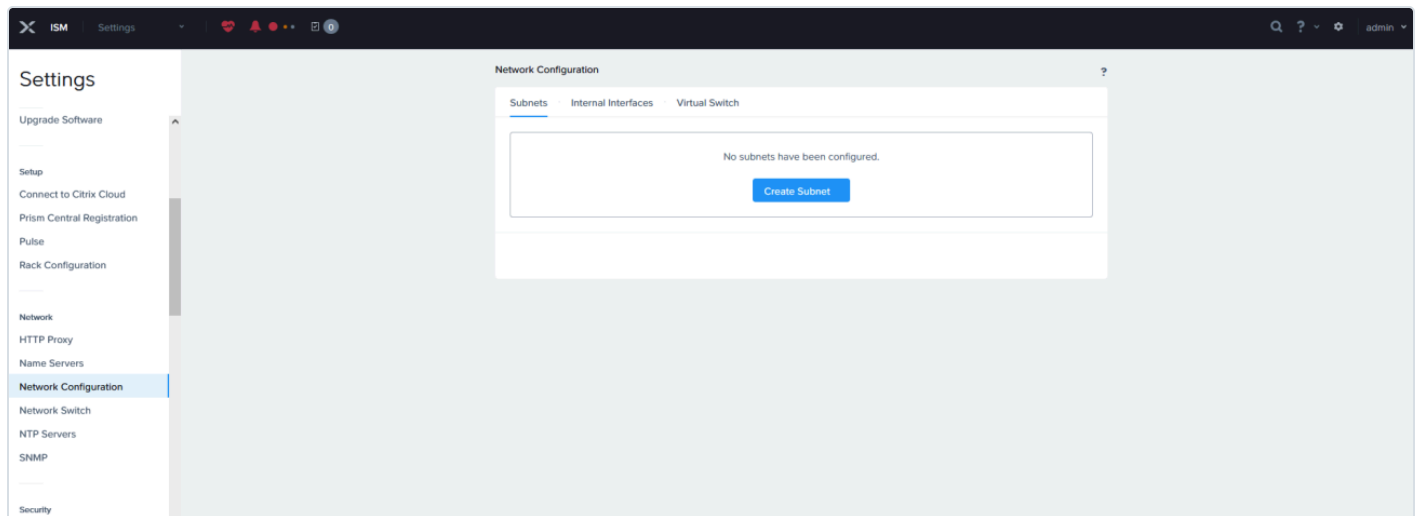



1. On "Create Subnet" use the following information
2. Subnet Name = VMNetwork
3. Virtual Switch= vs0(default)
4. VLAN ID = 10
5. Click Save

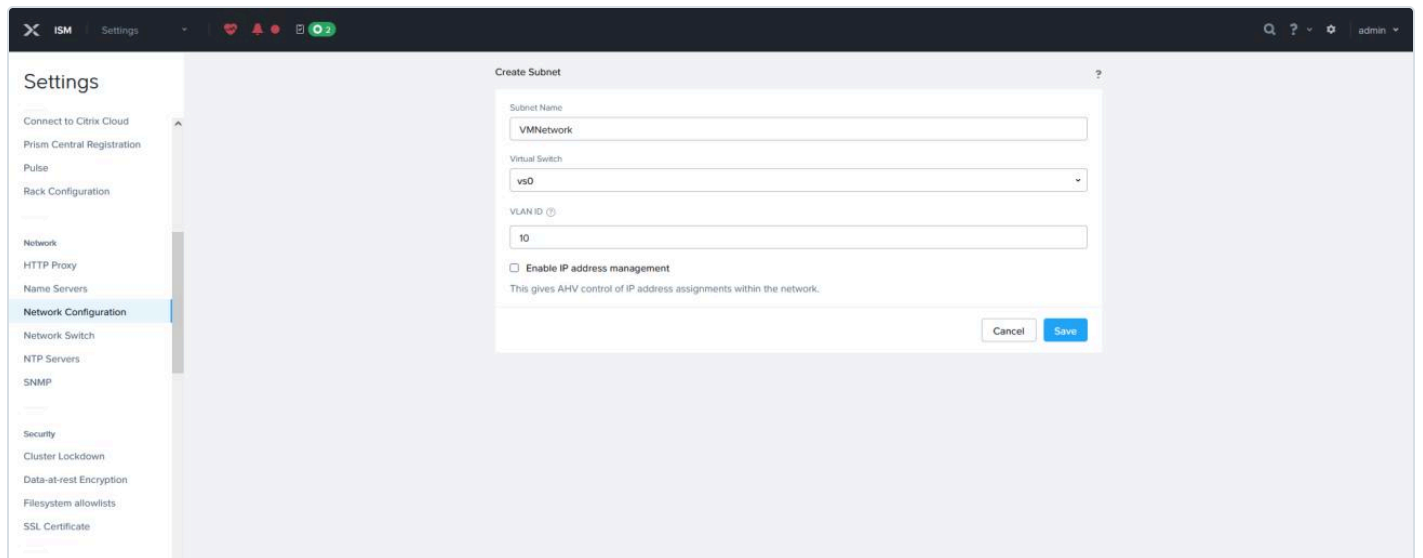

1. Then scroll up and select “Image configuration” and click “+ Upload image”.

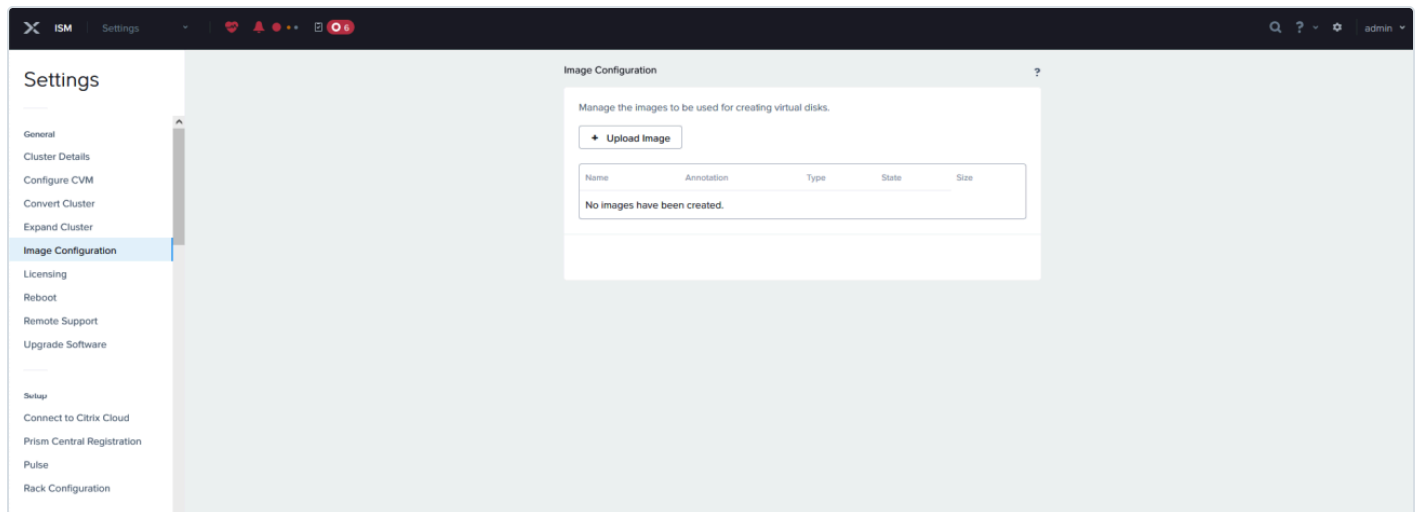


1. In this case we are going to use Ubuntu as an example
2. Name = Ubuntu ISO
3. Image Type = ISO
4. Storage Container = SelfServiceContainer
5. Image Source
 - Upload File > Click “Browse...”, from the Downloads folder select Ubuntu ISO
6. Click Save

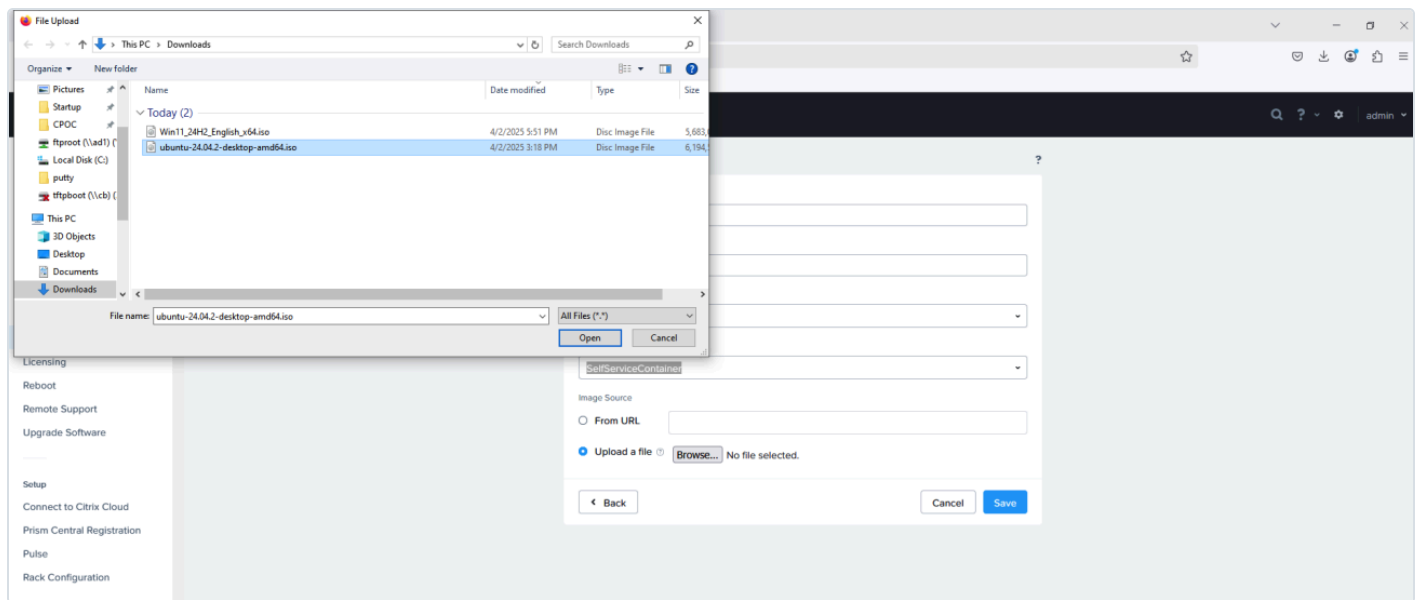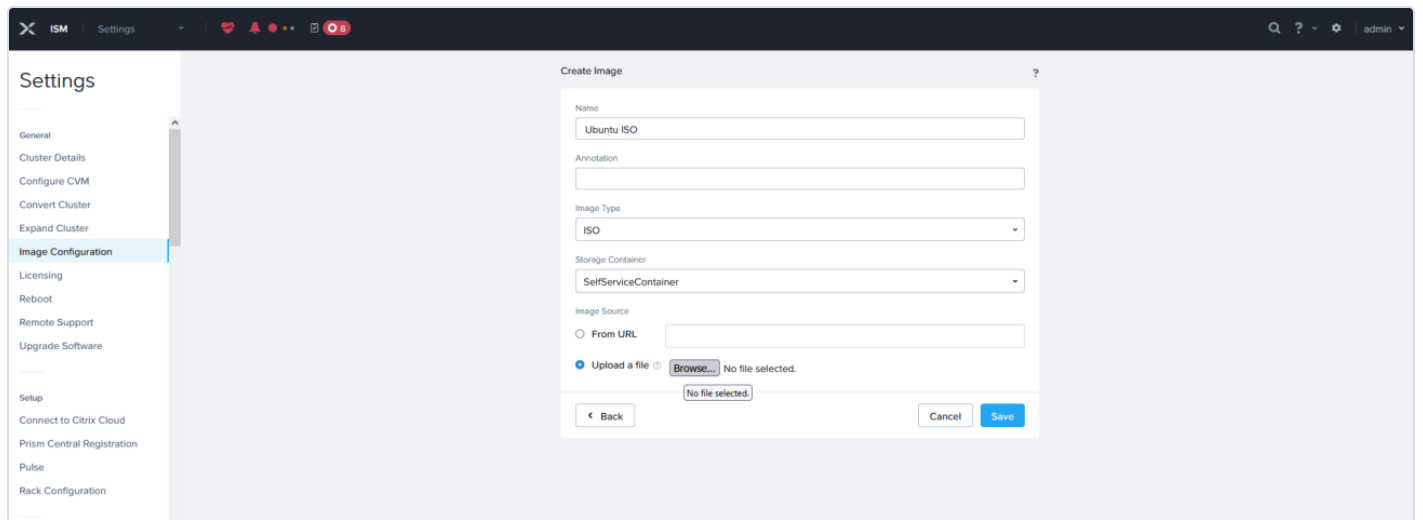


Note

The ISO upload should take a few minutes to complete.

1. Then click the drop-down menu on the top left and select "VM"

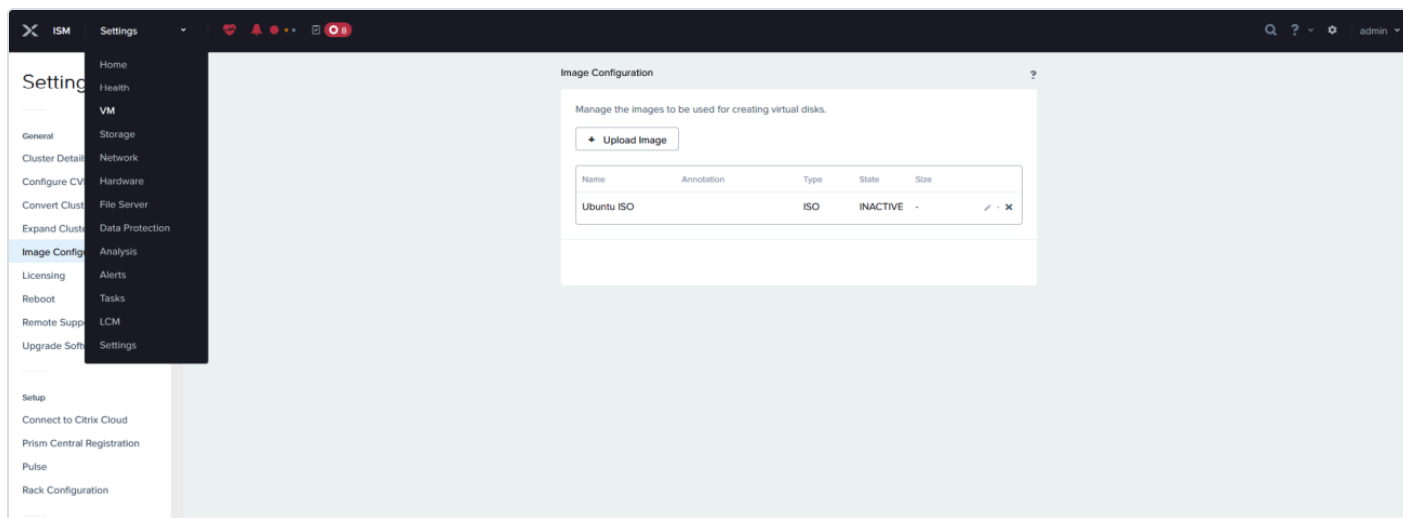

1. In the VM dashboard click “+ Create VM” on the top right

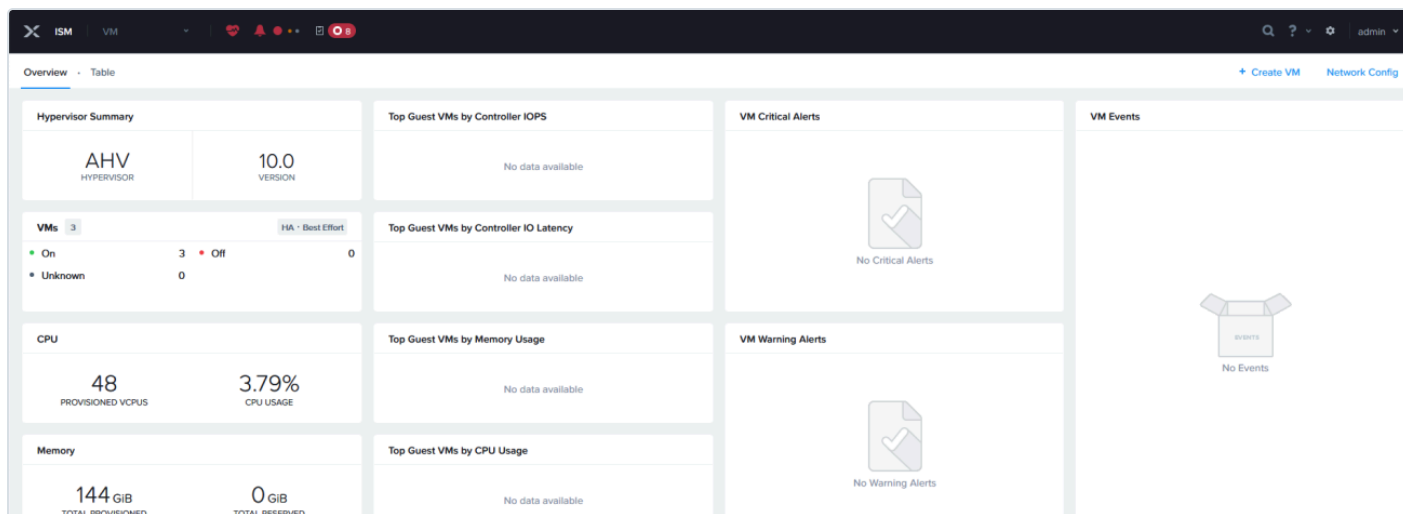

1. Let's fill in the new VM information

2. Name = Ubuntu VM

3. vCPU(s)= 2

4. Memory = 4

5. Disk 1. + Add a New Disk 2. Logical size = 20 3. Click Add 4. Click the pencil of CD-ROM 5. Operation = Clone from Image Service 6. Image = select Ubuntu from the drop down 7. Click Update

6. Network Adapters (NIC) 1. + Add New NIC 2. Subnet Name = VMNetwork 3. Click Add

7. Click Save

8. Then Click Table at the top left, next to overview

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM			2	4 GiB	- / 25.91 GiB	0%	0%	-	-	-	-	Yes	No

Note

Note the new VM recently created


1. Right-click the Ubuntu VM and select Power On

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM			2	4 GiB	5.91 GiB / 25.91 GiB	0%	0%	-	-	-	-	Yes	No

1. Right-click the VM again and select Launch Console

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM	c240-node-2/AHV	198.18.128.1...	2	4 GiB	5.91 GiB / 25.91 GiB	65.97%	38.98%	201	0	11.58 MBps	0.42 ms	Yes	No


1. On the VM console, close the Installation window and open a Firefox browser and point to “cisco.com” to test VM usability and connectivity to the Internet.

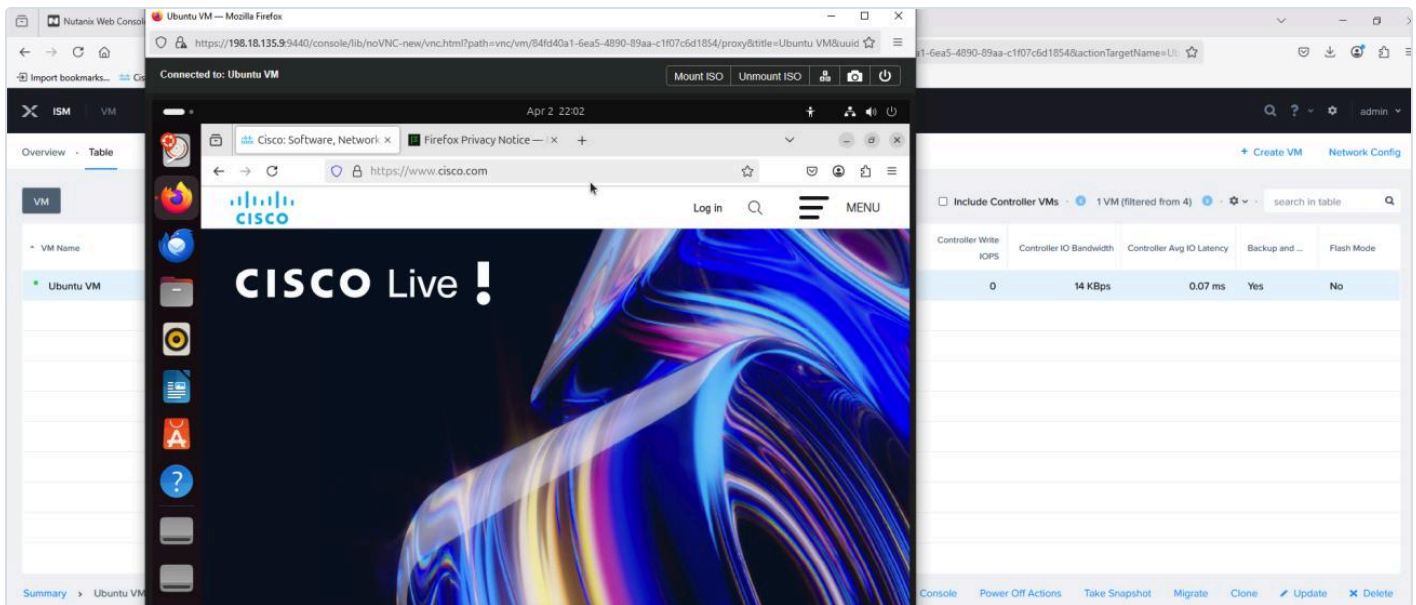


1. This concludes this scenario; you can close the Ubuntu console to continue with the next scenario

Scenario 4 · Nutanix Prism Central Deployment and Cluster Registration

1. In the main dashboard on the Prism Central click in Register or create new

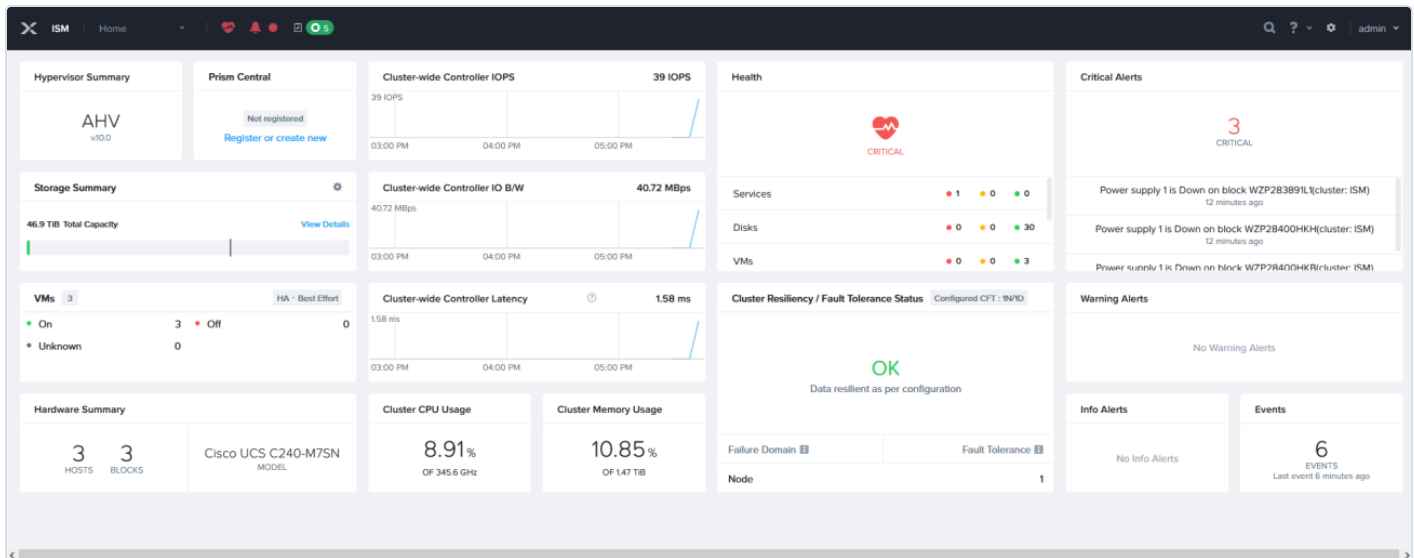

1. Select the first option, I want to deploy a new Prism Central Instance

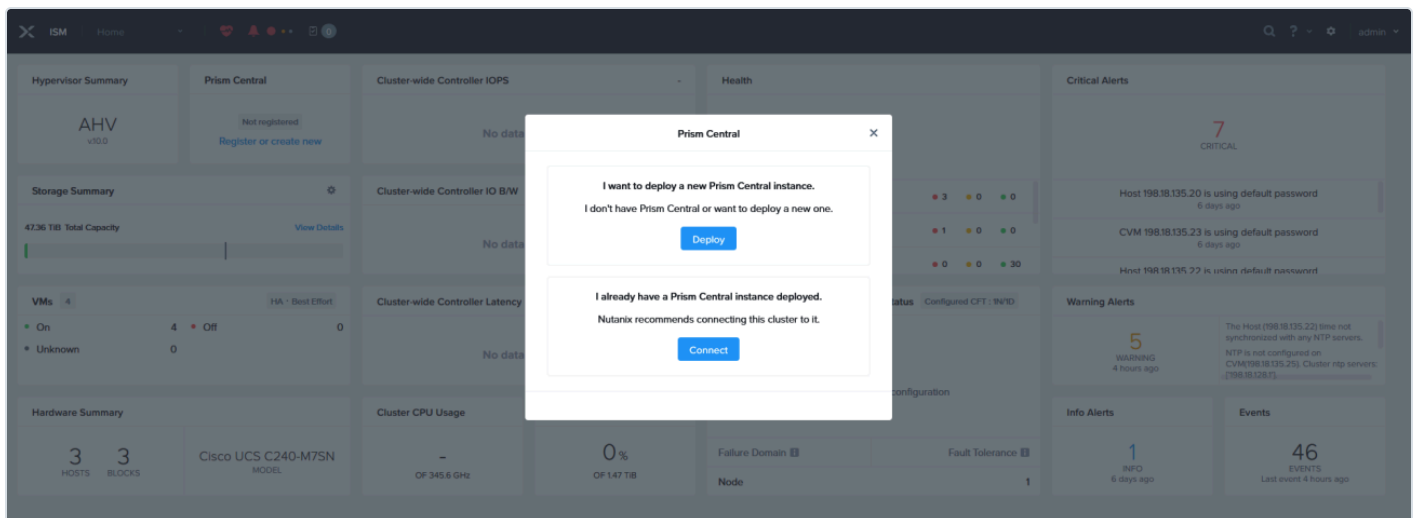

1. Under Installation Image section, select "pc.2024.3.1" and click Next

Prism Central (PC) Deployment

1 PC Version 2 PC Size and Scale 3 Configuration 4 Microservices

Installation Image
Provide the Prism Central image you'd like to install. You can download the latest version from the internet or upload an installation binary from your local machine.
[Learn more about PC Versions.](#)

Available versions
☒ Only show compatible versions [Upload Installation Binary](#)

Version Number	Version Type
☐ pc.2024.3.0.1	Public version
☐ pc.2024.3.0.2	Public version
☒ pc.2024.3.1	Public version

Cancel Next

1. Select "Small" and click next

Note

NOTE: Do NOT select X-Small, this option does not support cluster expansion

Prism Central (PC) Deployment

1 PC Version 2 PC Size and Scale 3 Configuration 4 Microservices

Select Prism Central (PC) Size and Scale
Each size supports given number of VMs and can be used with the minimum number of resources provided below.
[Learn more about PC sizes](#)

X-Small New ☐

Supports up to 500 VMs | 5 Clusters | 50 hosts

4 vCPU 18 GB Memory 100 GiB Disk

Start with the smallest size to explore basic Prism Central capabilities.

Small (S) ☒

Supports up to 2500 VMs | 10 Clusters | 200 hosts

6 vCPU 28 GB Memory 500 GiB Disk

☐ Scale-Out PC

Large (L) ☐

Supports up to 12500 VMs | 25 Clusters | 500 hosts

10 vCPU 46 GB Memory 2500 GiB Disk

1. Add Network information:

2. Network = select existing VMNetwork

3. Subnet Mask = 255.255.192.0

4. Gateway IP = 198.18.128.1

5. DNS = 198.18.133.1

6. NTP = 198.18.128.1

7. Container = SelfServiceContainer

8. Under General Details

9. VM Name= PC-2024-3-ISM (Suggestion)

10. IP Address= 198.18.135.4

11. Click Next

Prism Central (PC) Deployment

Networking Details

Network

VMNetwork

Subnet Mask: 255.255.192.0 Gateway IP: 198.18.128.1

DNS Address(es)

198.18.133.1

NTP Address(es)

198.18.128.1

Container: SelfServiceContainer

General Details

VM Name: PC-2024-3-ISM 6 vCPUs, 28 GB RAM

IP Address: 198.18.135.4

[< Back](#) [Cancel](#) [Next](#)

- Prism Central Service Domain Name = prism-central.cluster.local
- Internal Network = Private Network [Default]
- Click Deploy

Prism Central (PC) Deployment

☒ PC Version
 ☒ PC Size and Scale
 ☒ Configuration
 ☒ **Microservices**

Please enter the Prism Central domain name, select a network and provide the required inputs to enable the Microservices Infrastructure.

Prism Central Service Domain Name

prism-central.cluster.local

Internal Network

Private Network (default)

☒ Use default settings (recommended)

Subnet Mask: 255.255.255.0


Gateway IP Address: 192.168.5.1

IP Address Range (5 IPs needed): 192.168.5.2 - 192.168.5.64


Please ensure that the entered IP address range does not conflict with any reserved IPs (e.g. DHCP IP Pool) in your network.

[< Back](#) [Cancel](#) [Deploy](#)


1. After the deployment begins it will take you back to the main dashboard and under the Prism Central widget you will see the deployment activity.

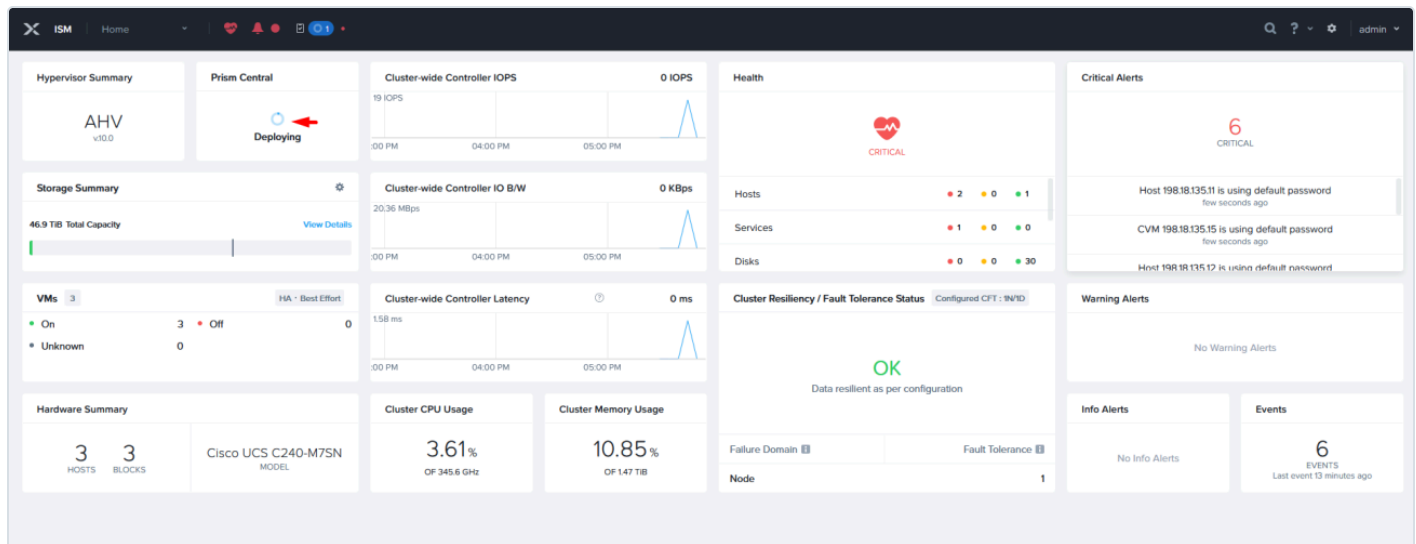


- Once Prism Central deployment is completed, use a web browser to connect to the virtual IP assigned (198.18.135.4) and change the default
- First time logging in the credentials are:
 - Username = admin
 - Password = Nutanix/4u

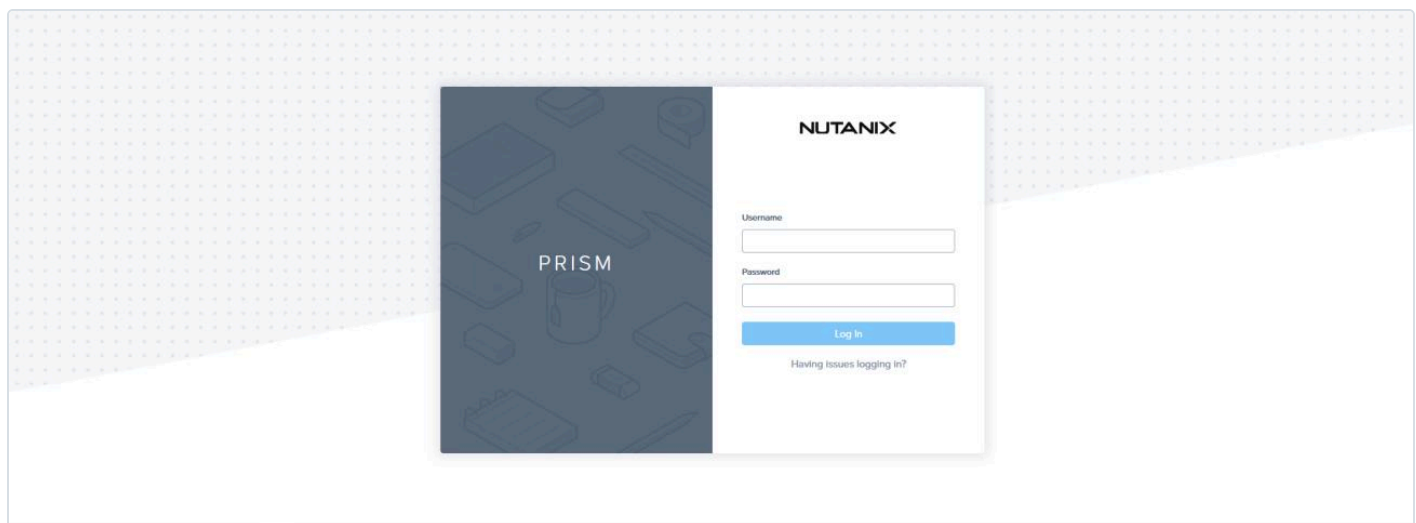

- New password C1sco12345!

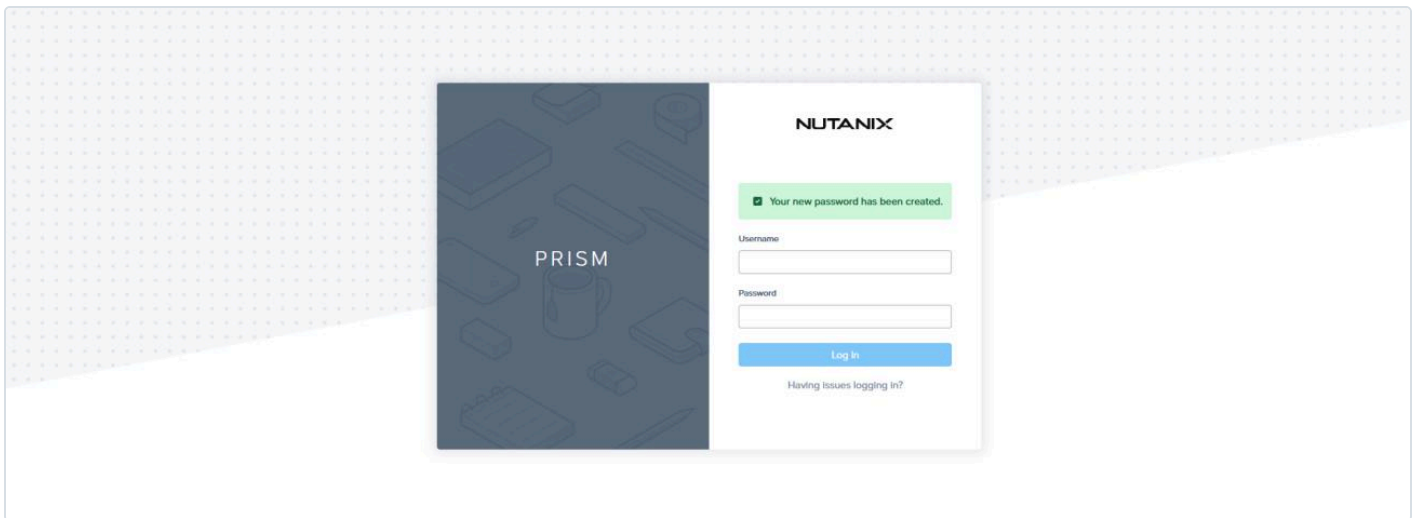


The image shows the Nutanix Prism login interface. On the left, a dark blue sidebar features the word "PRISM" in white, surrounded by faint icons of various computing devices. The main white area on the right displays the "NUTANIX" logo at the top. Below the logo, a green success message states "Your new password has been created." followed by a checkmark icon. There are input fields for "Username" and "Password", a blue "Log In" button, and a link that says "Having issues logging in?"

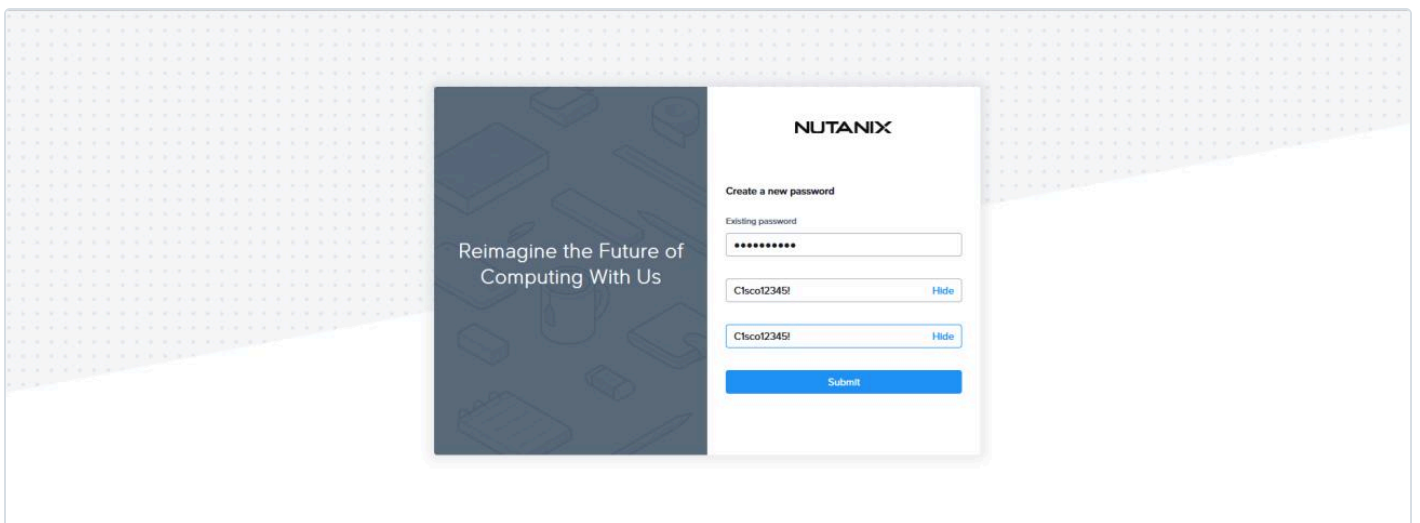


The image shows the Nutanix password creation interface. The left sidebar is identical to the previous screen, with "PRISM" and device icons. The main white area features the "NUTANIX" logo and the heading "Create a new password". Below this, there is a field for "Existing password" with masked characters. Two new password fields are shown, each containing "C1sco!2345!" and a "Hide" link. A blue "Submit" button is at the bottom.

1. After the password is changed continue with the EULA

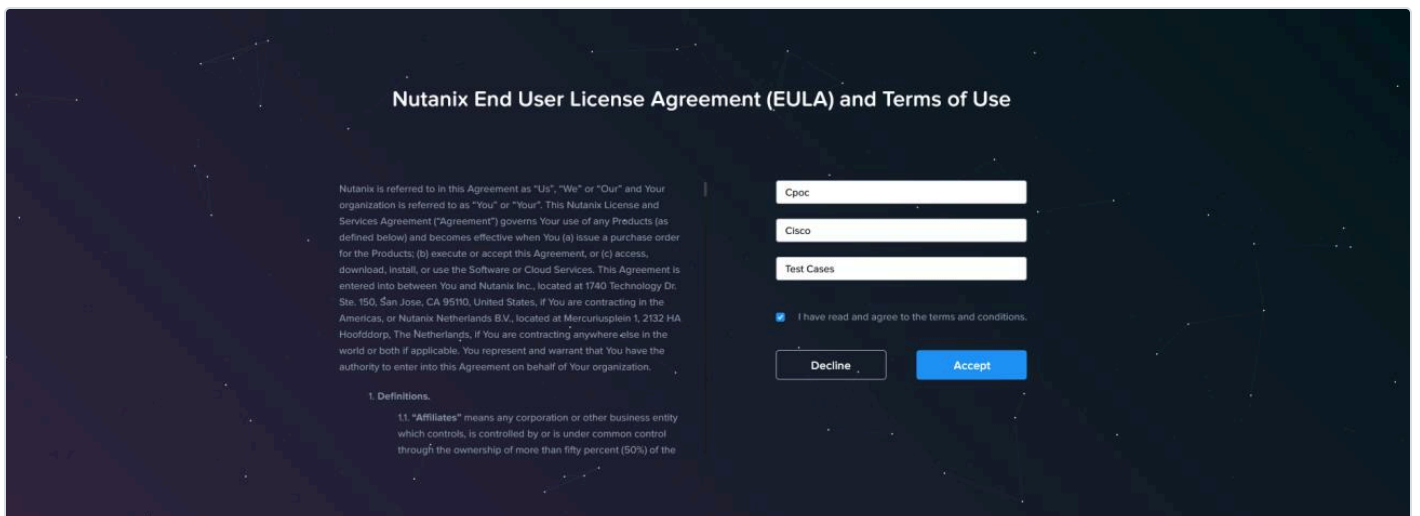


The image shows the "Nutanix End User License Agreement (EULA) and Terms of Use" screen. The background is dark blue with a subtle pattern. The title is centered at the top. On the left, there is a block of legal text defining "Us", "We", "Our", and "Your", and providing details about the agreement between the user and Nutanix Inc. or Nutanix Netherlands B.V. Below this text is a section titled "1. Definitions." with a sub-point "1.1. 'Affiliates' means any corporation or other business entity which controls, is controlled by or is under common control through the ownership of more than fifty percent (50%) of the". On the right, there are three input fields labeled "Cpoc", "Cisco", and "Test Cases". Below these fields is a checkbox labeled "I have read and agree to the terms and conditions." which is checked. At the bottom right, there are two buttons: "Decline" and "Accept".


1. Keep Pulse by default and click Continue

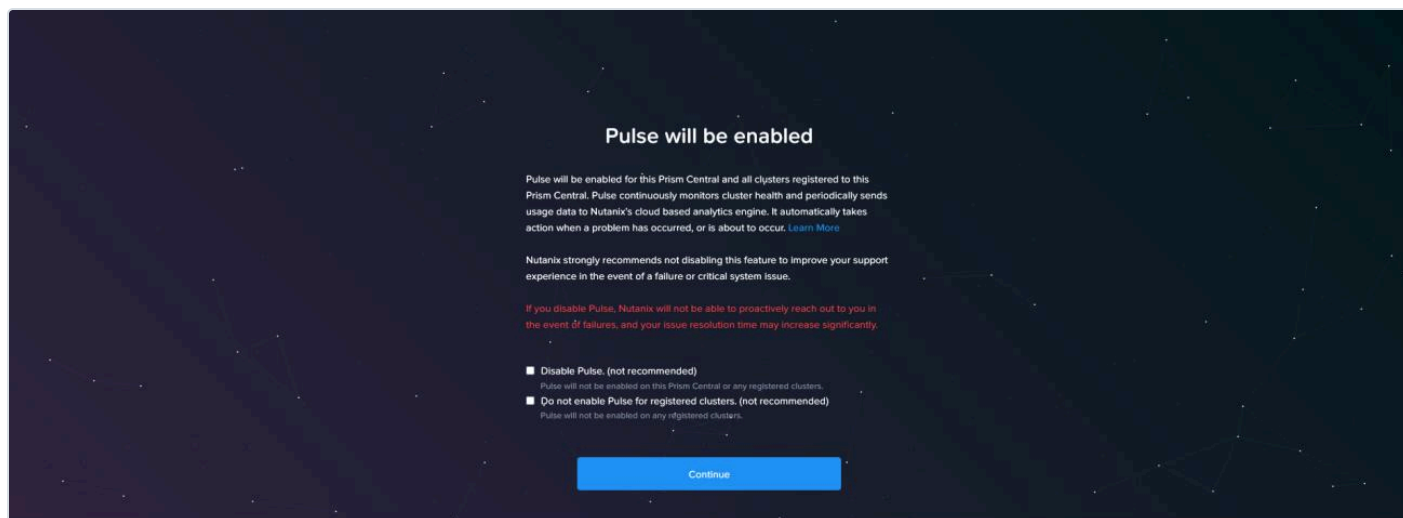


1. At the top select Infrastructure from the drop-down, then click on Prism Central Settings, select Prism Central Management and click edit
2. Cluster name = PC-VIP-ISM
3. Virtual IP = 198.18.135.5
4. Click Update

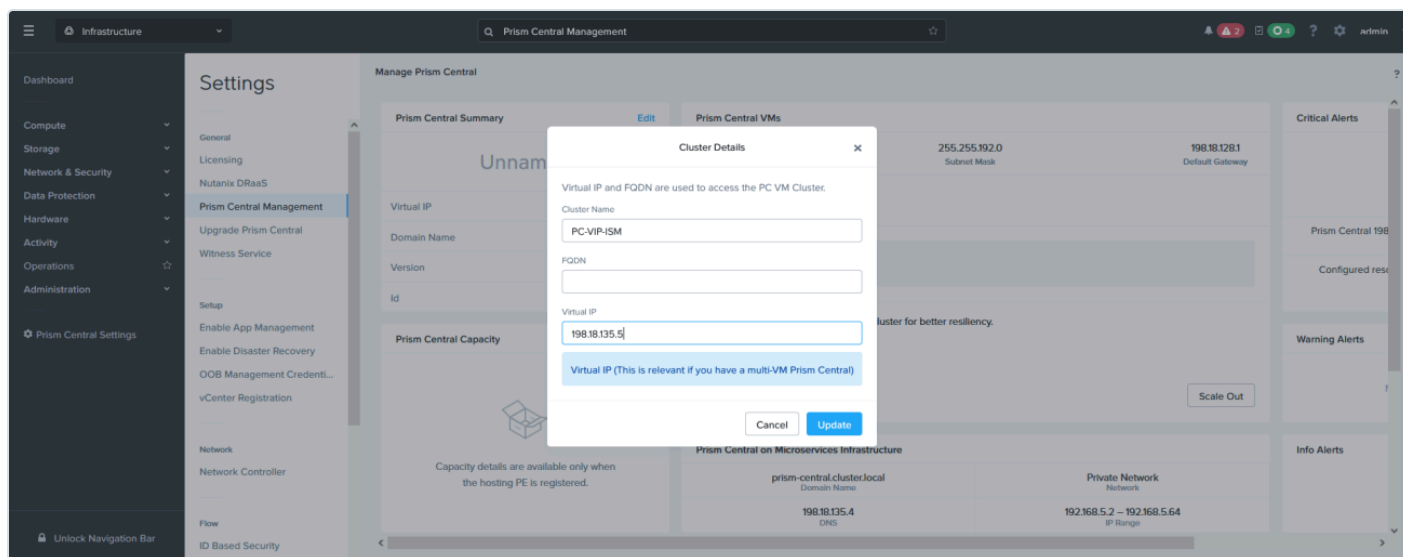


1. From the drop-down menu select Admin Center then click Marketplace and click Enable Marketplace

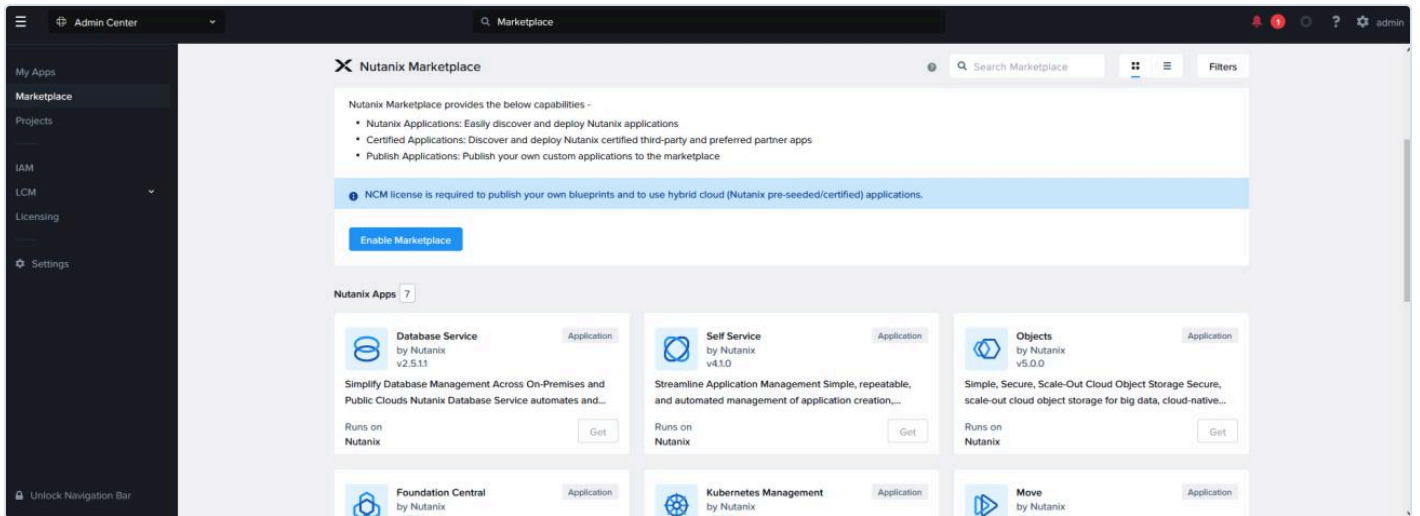


1. Once the Marketplace has been enabled, click “Get” on Foundation Central then click Deploy

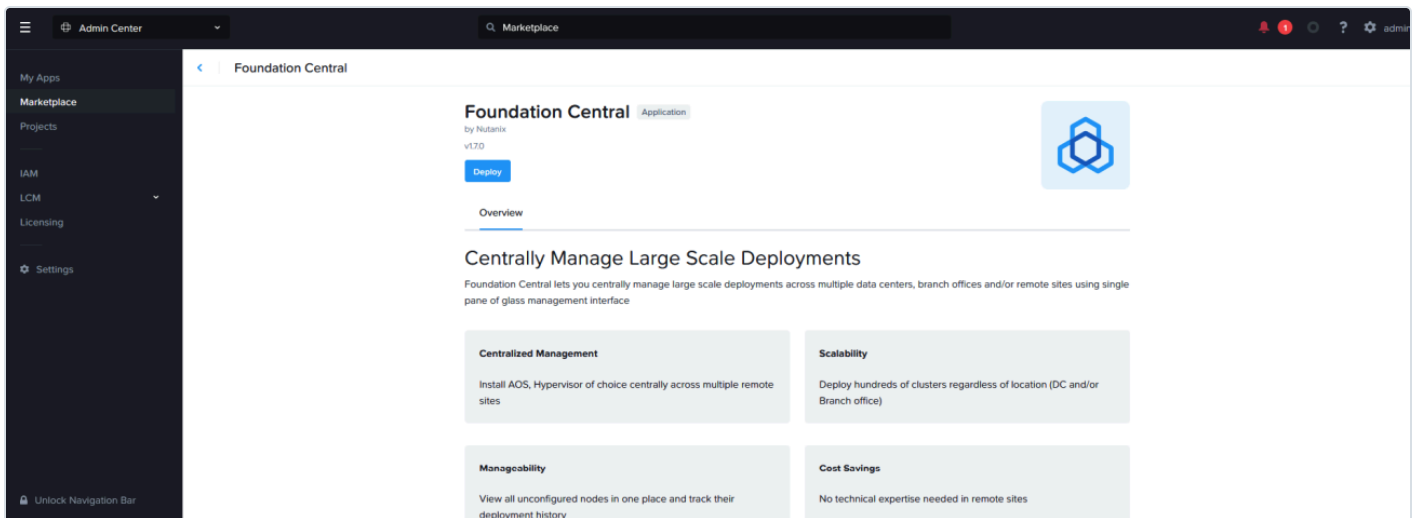


1. While the Foundation Central app is being deployed on Prism Central, return to the Prism Element main dashboard, and confirm then click “Register or create a new “

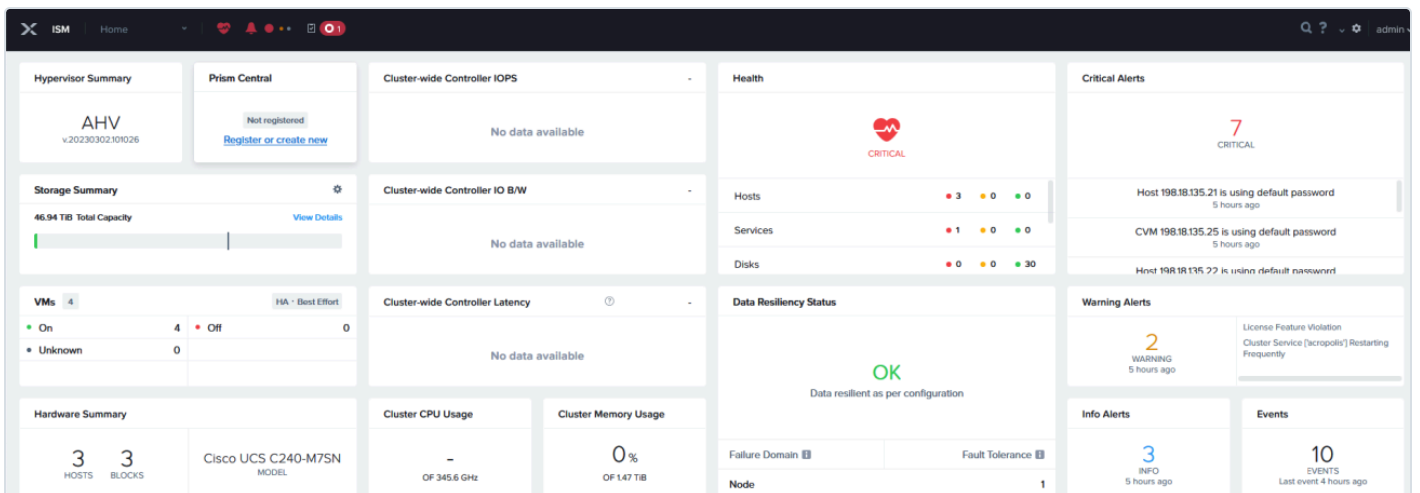


1. Now click connect and hit next

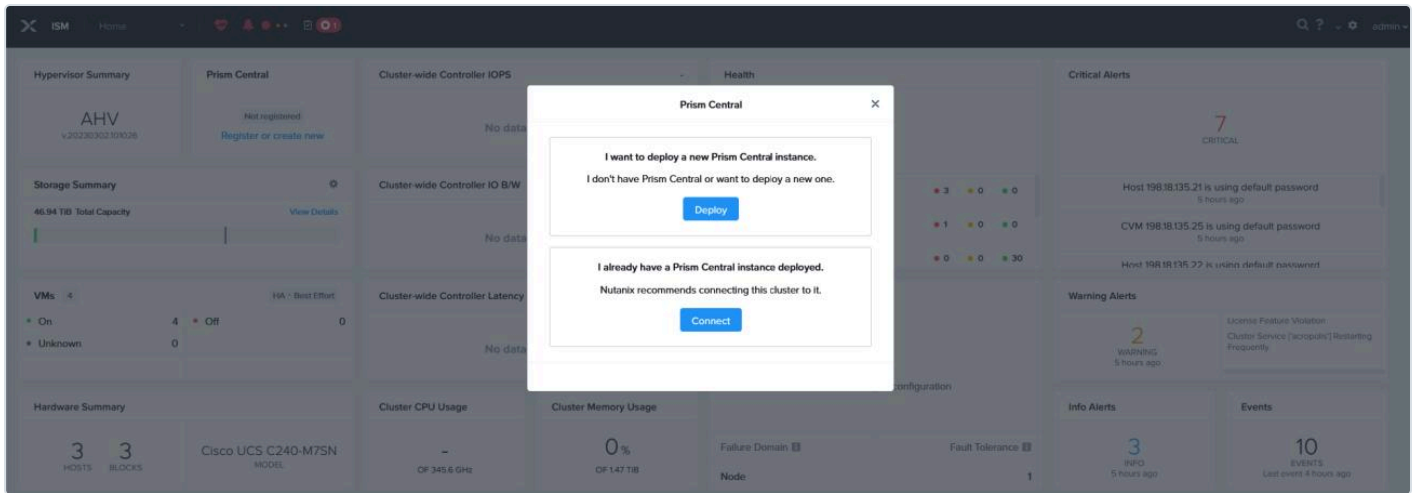

1. On the Prism Central configuration add
2. Prism Central IP/QDN = 198.18.135.5
3. Username = admin
4. Password = C1sco12345!
5. Click Connect


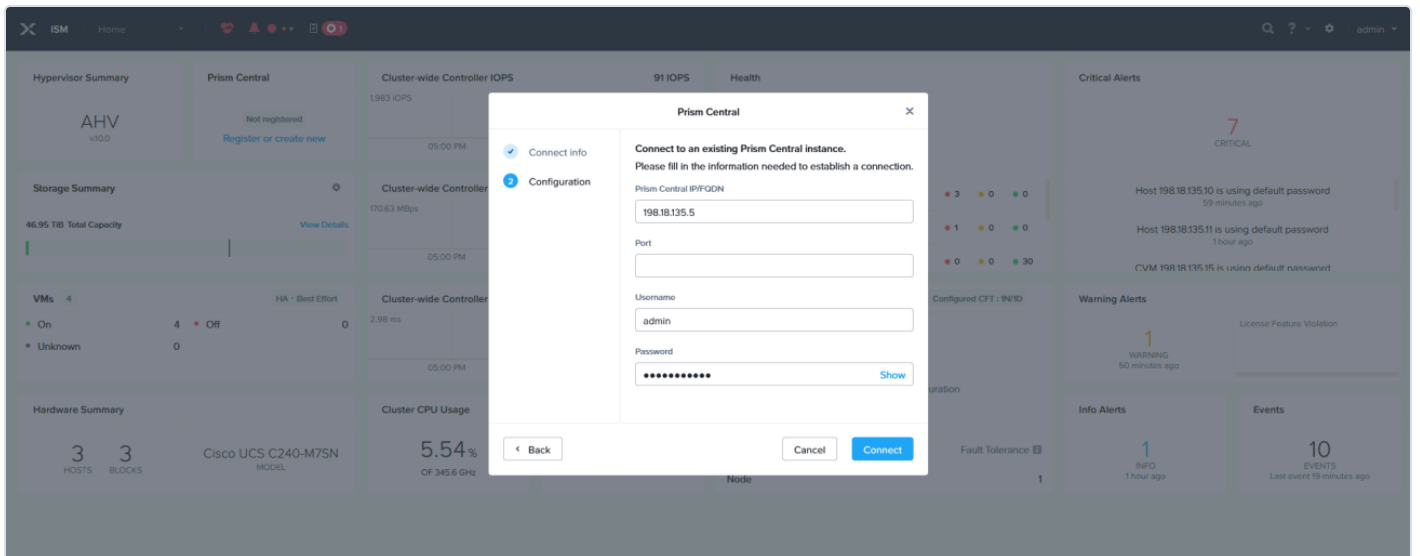


1. The ISM cluster is now registered with and connected to the new Prism Central (PC 2024.3.1)

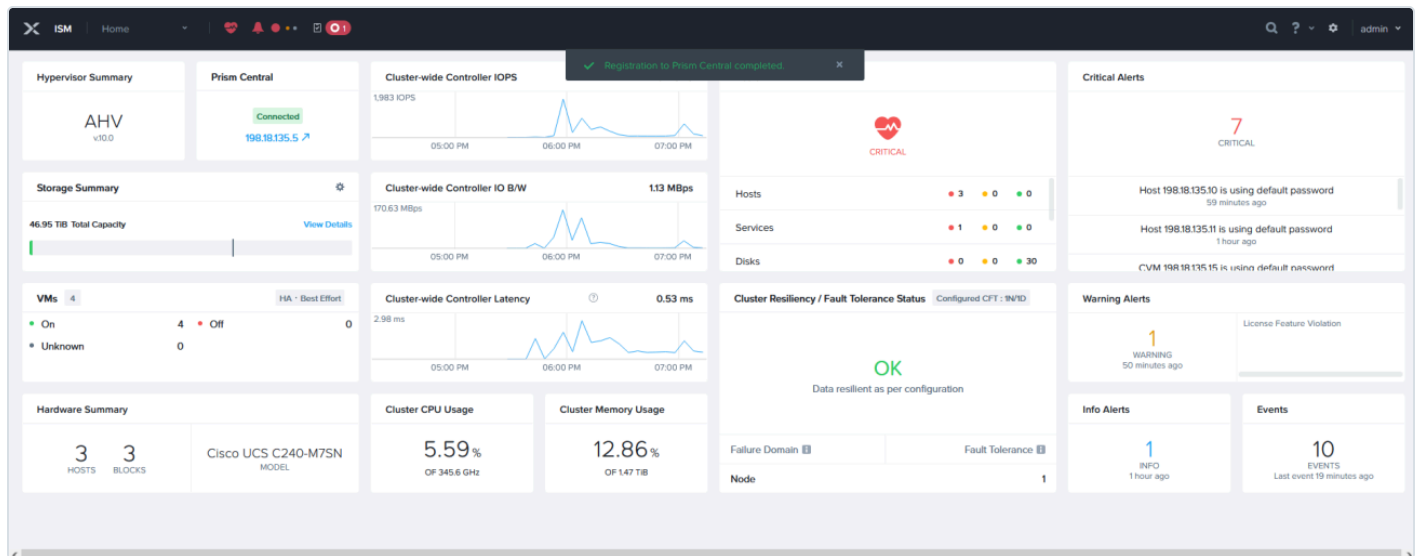


Scenario 5 · Nutanix Cluster Expansion


1. Return to the new Prism Central (add IP info here to make sure users will go to PC 2024 and not PC 2022) and click on View in my Apps

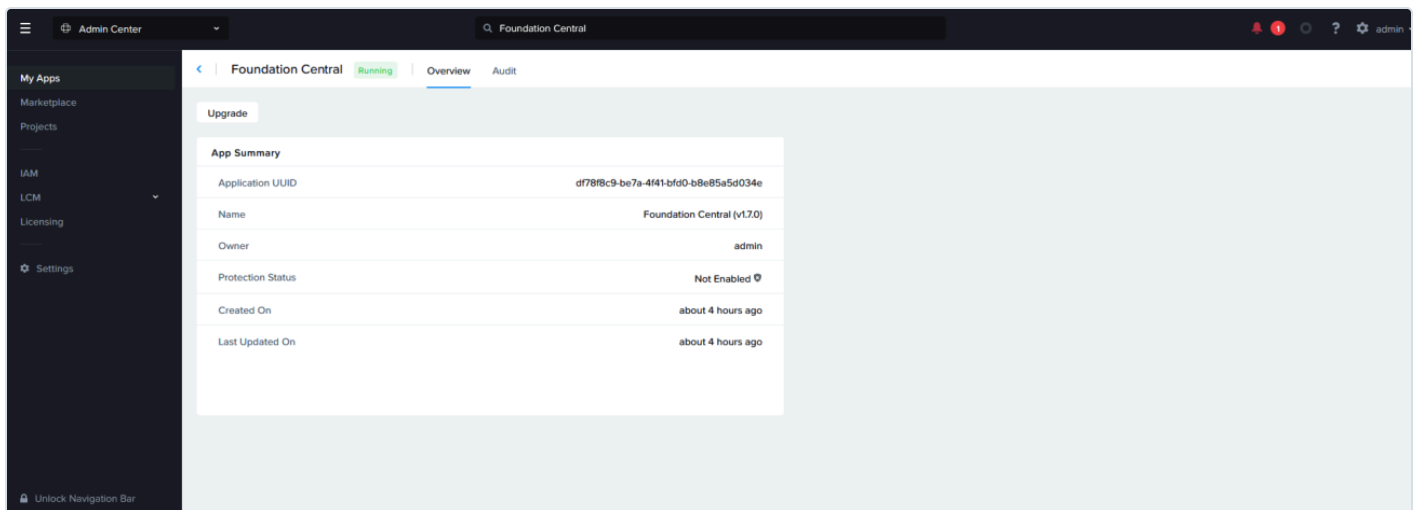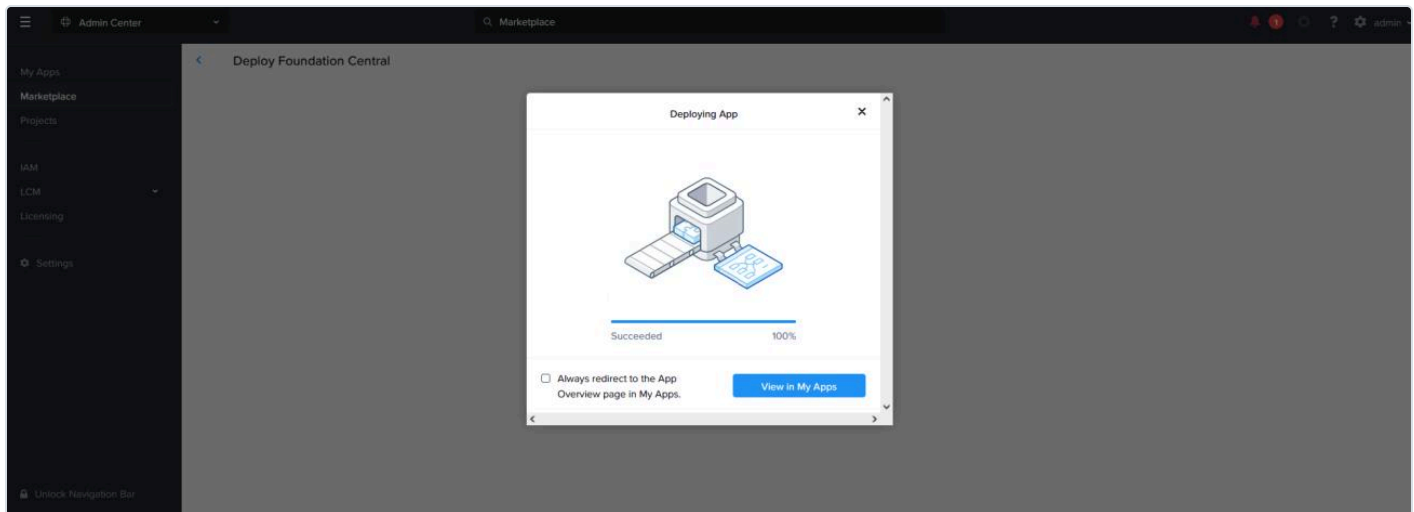


1. Once the App is on running state from Admin Center > LCM > Prism Central Cluster

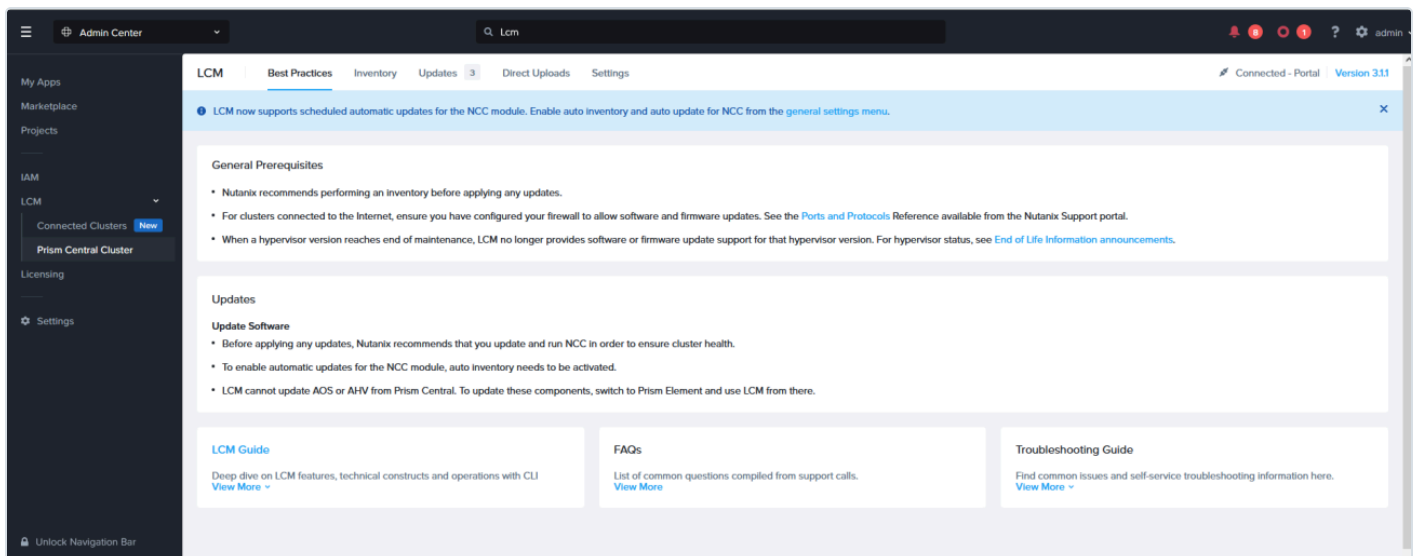

1. Click inventory and click Perform Inventory > Proceed

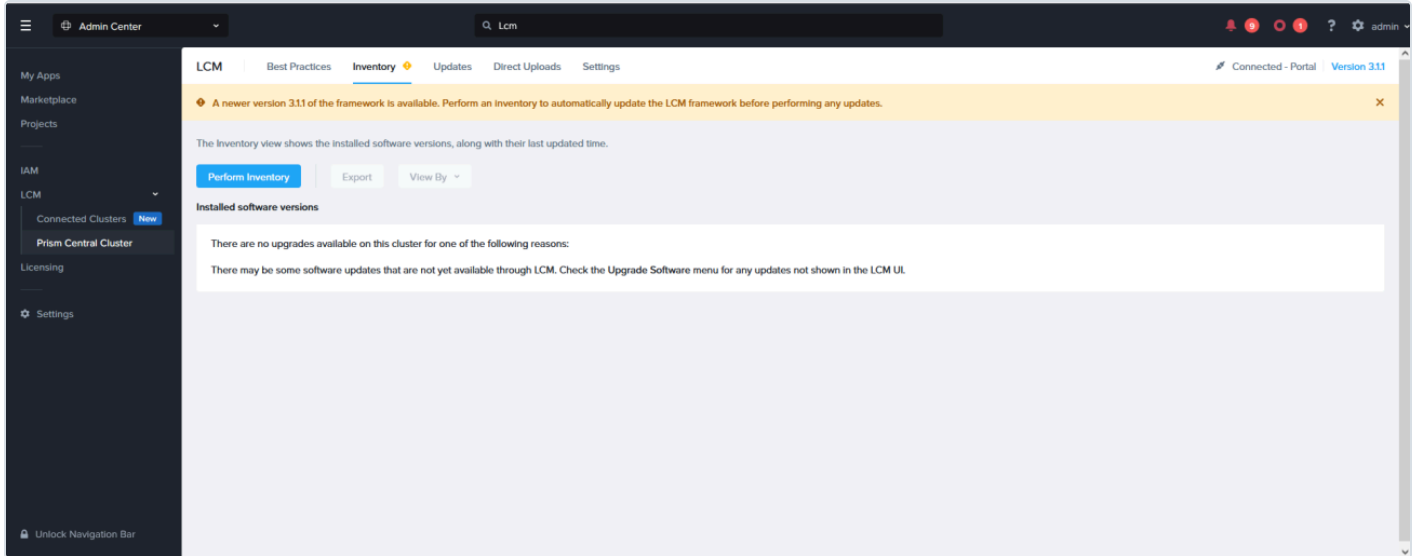

1. Wait until the Inventory is complete, then press Return to Inventory

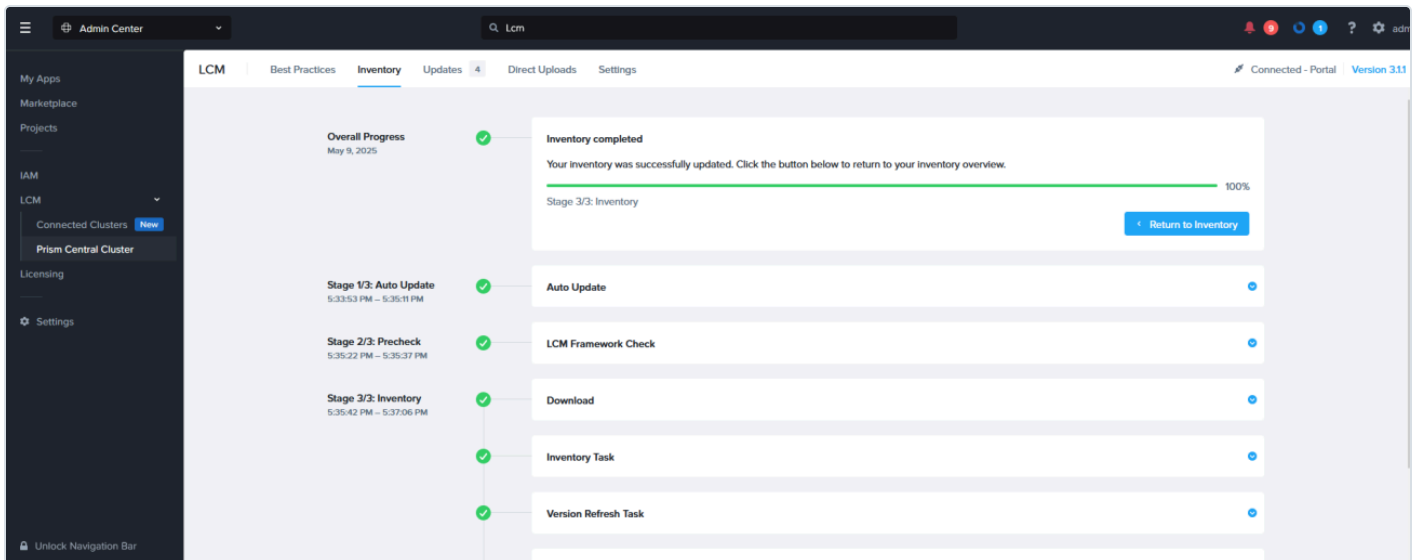

1. Click Updates, check the box of Foundation Central then click View Upgrade Plan

The screenshot shows the Cisco LCM Admin Center interface. The left sidebar contains navigation links: My Apps, Marketplace, Projects, IAM, LCM (selected), Connected Clusters (with a 'New' button), Prism Central Cluster, Licensing, and Settings. The main content area is titled 'LCM' and has tabs for Best Practices, Inventory, Updates (selected), Direct Uploads, and Settings. A notification banner at the top states: 'The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. LCM cannot update AOS or AHV from Prism Central. To update these components, switch to Prism Element and use LCM from there. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu.' Below the banner, there are buttons for 'View Upgrade Plan' and 'Pre-Upgrade', and a 'Filter' button. The main section is titled 'Viewing all 4 Software Updates' and contains a table:

Software	Available Version	Current Version	Last Updated	Release Notes
☒ Foundation Central	1.7.1 1 version update	1.7		View Release Notes
☐ MSP	2.6.1.1 1 version update	2.6.1.0		
☐ PC	pc-2024.3.11 Release Date: April 23, 2025 1 version update	pc-2024.3.1		View Release Notes
☐ Security Dashboard CVE Data	2025.04.1 9 version updates	2024.03.1		Security Dashboard CVE data for April 2025

1. Click Apply 1 Update and wait until the Foundation Central update is complete

The screenshot shows the 'Review Upgrade Plan' dialog box. It contains a blue information banner: 'Genesis service will be restarted on the cluster. User workloads will not be disrupted. Refer to KB 6945 for more details.' Below this, text explains that stopping the update is possible at any point via the 'Stop Update' button, and that LCM will choose the safest time to stop. A question asks: 'Do you want to apply the selected updates?'. Under 'Software Updates', a table shows the selected update:

Cluster	Foundation Central
Prism Central	1.7.1 Installed: 1.7

At the bottom right of the dialog are 'Cancel' and 'Apply 1 Updates' buttons.



The screenshot shows the Cisco LCM Admin Center interface after the update. The 'Updates' tab is selected, and the 'Overall Progress' section shows a green checkmark and the date 'May 9, 2025'. A progress bar indicates 100% completion. A message states: 'Update successful! All updates have been implemented successfully. To see all available remaining updates, please return to the update list.' Below this, a list of update steps is shown, each with a green checkmark and a 'Return to Updates' button:

- Stage 1/2: Precheck (5:40:00 PM - 5:40:25 PM)
 - LCM Framework Check
 - Module Check
- Stage 2/2: Install Update (5:40:27 PM - 5:42:00 PM)
 - Download
 - Update Foundation Central
 - Bundle Compatibility Check
 - Module Compatibility Check


1. Once the Foundation Central upgrade is complete, from the drop-down menu select Foundation Central

Note


If Foundation Central does not load, just Clear the cookies and site data

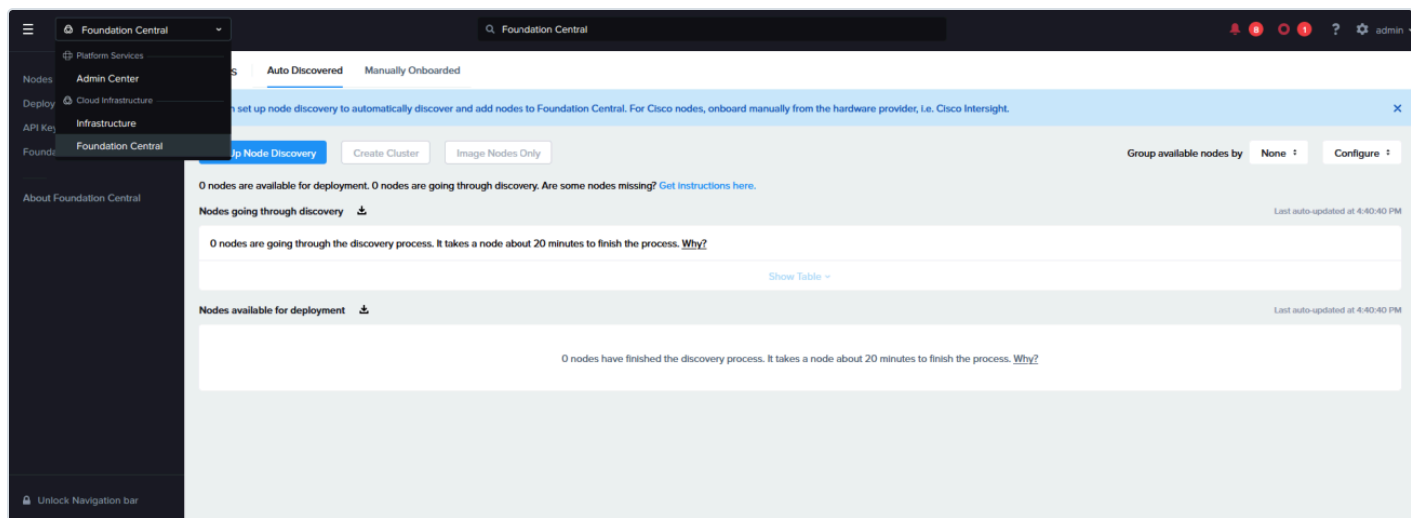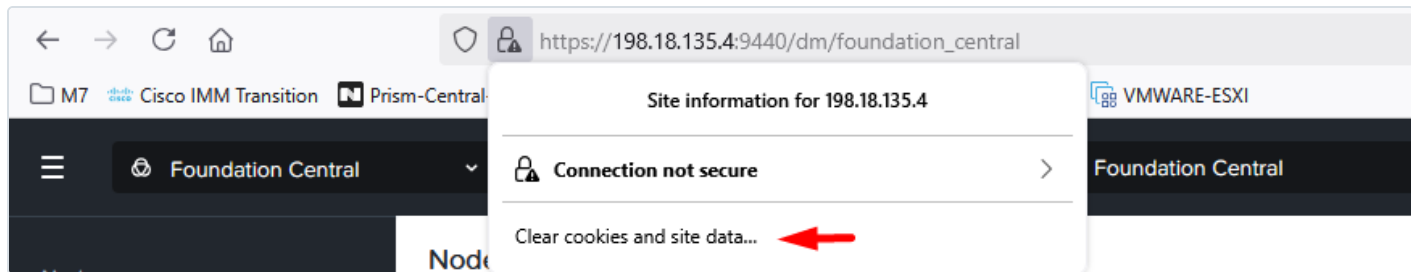


1. Confirm the Foundation Central by clicking on the left side About Foundation Central

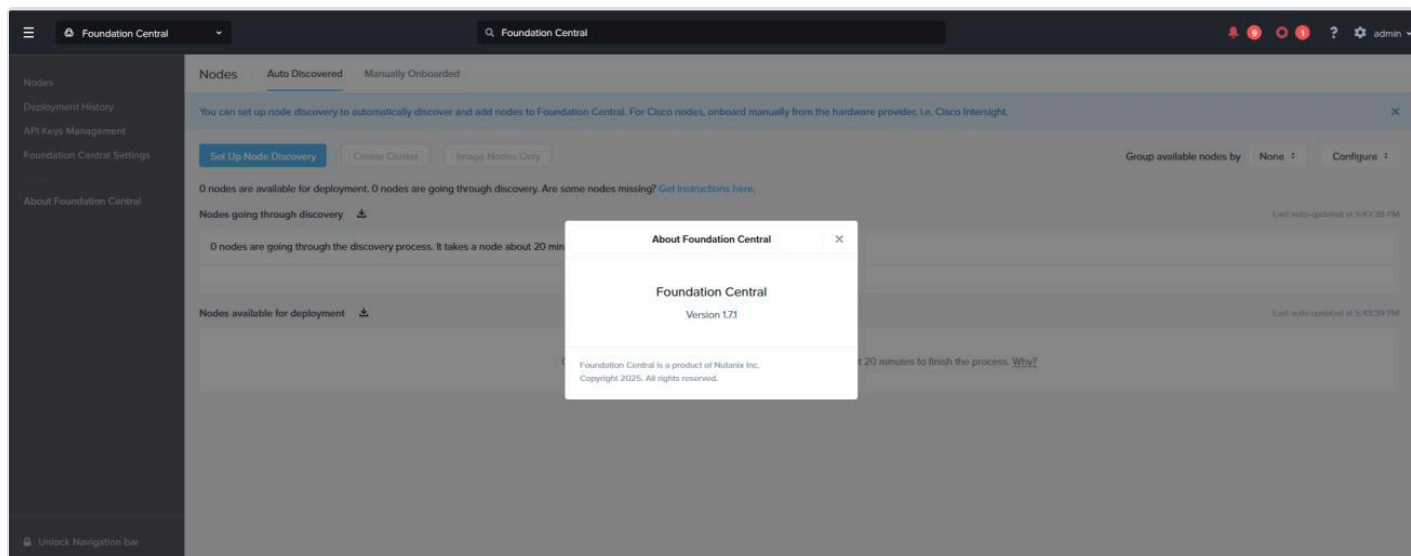

1. Then under Manually Onboarded, click Onboard Nodes

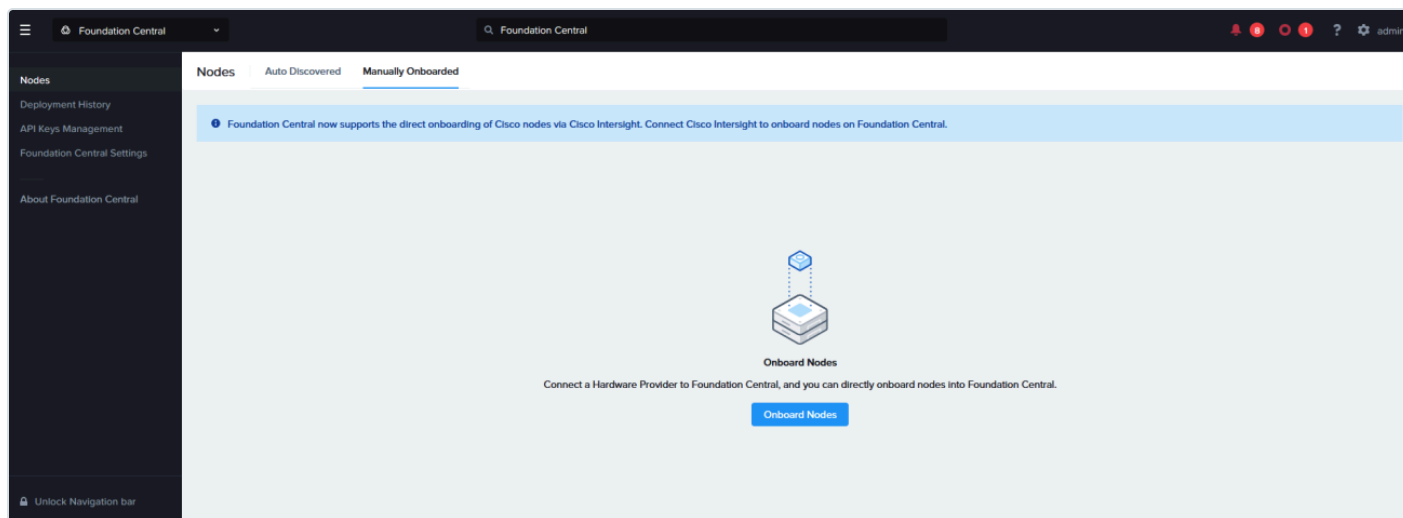

1. Connect Hardware Provider
2. Fill in the required information
3. Connection name= Intersight
4. Hardware Provider = Cisco Intersight
5. Intersight Deployment Type = SaaS
6. Intersight Region & URL = North America
7. Intersight API Key =
8. Secret Key=

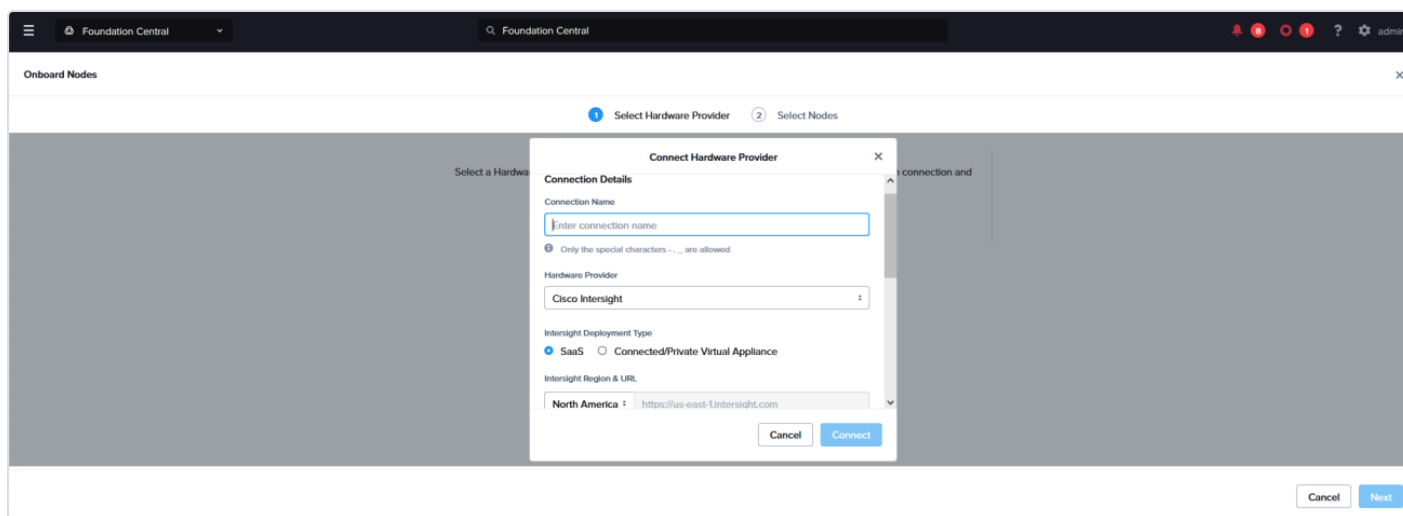

1. Select Intersight Standalone Mode and click Next

Onboard Nodes

1 Select Hardware Provider 2 Select Nodes

Select a Hardware Provider to onboard nodes to Foundation Central. Currently, only Cisco Intersight is supported and only a single connection is allowed at a time. To add a new connection, remove the existing one.

Connection Name	Hardware Provider	URL
intersight	Cisco Intersight	https://us-east-lintersight.com

Connection has been saved.

Node Management Mode
Select the management mode. In the next step, you will view the nodes based on the selected mode

☐ Intersight Managed Mode
☒ Intersight Standalone Mode

Cancel Next

1. Select the node and click Onboard

Onboard Nodes

1 Select Hardware Provider 2 Select Nodes

Connection Name: **intersight** Management Mode: **Intersight Standalone Mode**

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click Refresh.

Type in a query Modify Filters

1 selected out of 1 Cisco Node 1-1 of 1 20 rows

Node Serial	Name	Model	Block Serial	Domain	Classification	Intersight Organizations	Intersight Tags	Memory (GB)	CPU (Core)
WZP283891L1	C240-WZP283891L1	UCSC-C240-M7SN	WZP283891L1	-	Nutanix	ISM	-	512	32

Back Cancel Onboard

1. Click "Prepare Nodes for Cluster"

Nodes Auto Discovered Manually Onboarded

Onboard Nodes Prepare Nodes for Cluster Create Cluster Actions

View by Group by Management Mode

Group By: Management Mode Modify Filters

Viewing 1 grouped out of 1 Cisco Node 1-1 of 1

Management Mode: Intersight Standalone 1 Empty Groups

Node Serial	Name	Node Status	Model	Domain	Intersight Organizations	Intersight Tags	Classification	Onboarded On	Last Refreshed
WZP283891L1	C240-WZP283891L1	Onboarded	UCSC-C240-M7SN	-	ISM	-	Nutanix	Apr 10, 2025, 01:26 PM	Apr 10, 2025, 01:26 PM

Unlock Navigation bar

1. Select the existing ISM cluster and click Next

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

You are viewing the clusters registered with Prism Central. Please select the cluster for which you want to prepare nodes.

Viewing 1 cluster

Cluster Name	AOS Version	Hypervisor	Node Count
ISM	70.0.5	AHV 10.0.0.1	3

Cancel Next

1. Select the node that will be added to the cluster and click Next

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Cluster: ISM

The following list shows the eligible nodes for the cluster. Please select nodes to prepare with the selected cluster.

Type in a query

1 selected out of 1 Cisco Node

Node Serial	Name	Model	block_serial	Intersight Tags	Classification	Memory (GB)	Onboarded On
WZP283891LX	C240-WZP283891LX	UCSC-C240-M7SN	WZP283891LX	-	Nutanix	512	May 7, 2025, 07:23 PM

Back Cancel Next

1. Return to Cisco IMM tool and copy the AOS and AHV URLs

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Provide the URL to download AOS and metadata from during imaging. The URLs must be accessible to Foundation Central.

AOS Download URL

https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/nutanix_installer_package-release-ganges-70.0.5

AOS Metadata URL

https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/generated-nutanix_installer_package-release-ganges-70.0.5

Hypervisor

☐ Hypervisor AHV 10.0.0.1 is included in the AOS 70.0.5 package. I have verified and want to use it.

If you won't use the included hypervisor, provide the URL below to download the hypervisor from during imaging. The URLs must be accessible to Foundation Central. The checksum will be used to avoid re-downloading an already downloaded installer.

Hypervisor Download URL


https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/AHV-DVD-x86_64-10.0.0.1-1.iso

Pre-computed SHA256 Checksum of Hypervisor Installer


7f6b213ef5766e8692627384a85032bdb37cbb53aef85757ac6de9e6be5e522d

Back Cancel Next

1. For the AHV checksum, the Cisco IMM tool can be used to generate the SHA256 checksum.

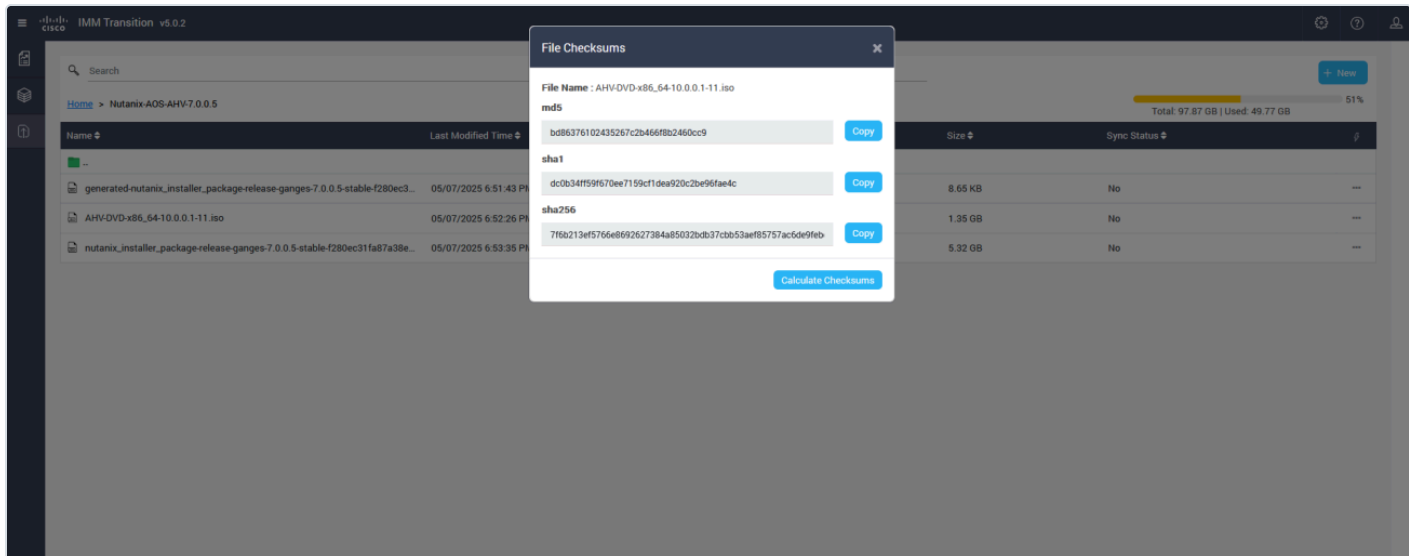

1. Host and CVM Network
2. Gateway= 198.18.128.1
3. Netmask= 255.255.192.0 /18
4. Host and CVM VLAN = 10
5. Click Next

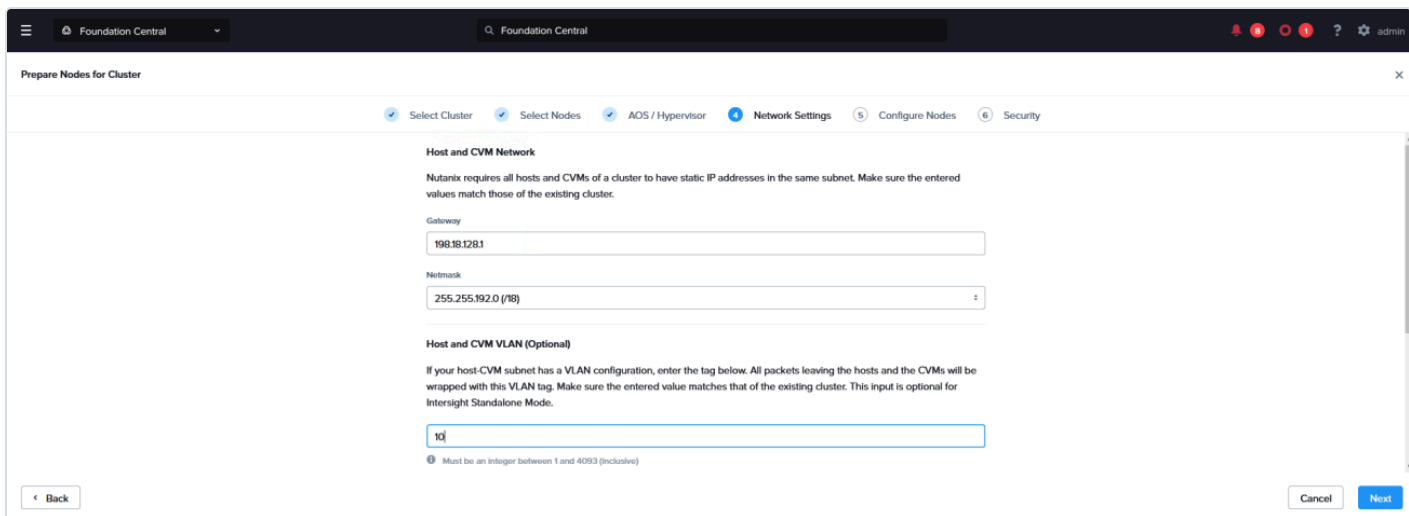

1. Fill in the IP range for the hypervisor and CVM

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** Security

1 Nodes

Node Serial	Name	Hypervisor IP Set Range	CVM IP Set Range	Hypervisor Hostname Set Range
WZP283891L1	C240-WZP283891L1	198.18.135.23	198.18.135.27	c240-node-4

Back Cancel Next

1. Generate a Foundation Central API key by clicking the “+ Generate New Key”. Provide an alias and click Done. From the drop-down menu select the alias and click Submit

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** **Security**

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key [+ Generate New Key](#)

ISM

API key was generated successfully.

Back Cancel Submit

1. The node preparation process begins

Foundation Central

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

Node Preparation for Cluster "ISM" Deployment in progress Start Date and Time: 5/9/2025, 05:50 PM

Phase 1A: Node Preparation 6% 1 node in progress Phase 1B: Node Imaging 0% Not started

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/nutanix_installer_package-release-ganges-70.0.5-stable-1280ec31fa97a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/AH-V-DVD-x86_64-10.0.01-11.iso
Host CVM VLAN ID 10	Deployment UUID dfc88d67-f927-48e3-7614-735621dc97e2	LACP No	

1 Node In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891L1	WZP283891L1	A	2%	[NodeConfiguration] Performing node specific configuration in Intersight	198.18.135.23	198.18.135.27	AH-V	c240-node-4

Show Less

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment [Show Only Non-archived](#)

Node Preparation for Cluster "ISM" Deployment complete Start Date and Time: 5/9/2025, 05:50 PM [Go to Cluster Page](#) [Archive](#)

Phase 1A: Node Preparation 100% 1 node prepared Phase 1B: Node Imaging 100% 1 node finished

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b519d7e72ae-x86_64.tar.gz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-11.iso
Host CVM VLAN ID 10	Deployment UUID d1c88d67-f927-48e3-76f4-73562fcd97e2	LACP No	

1 Node In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891L1	WZP283891L1	A	Done	All operations completed successfully	198.18.135.23	198.18.135.27	AHV	c240-node-4

[Show Less](#)

1. Once the node preparation is completed, click at the top drop-down menu and select infrastructure

Infrastructure

Dashboard

Intelligent Operations widgets like VM Efficiency, Playbooks, and more are now available in [Operations Dashboard](#) in Intelligent Operations.

Cluster Quick Access

ISM

Cluster Storage

Cluster	Usage	Data Resiliency
ISM	OK	

Cluster Latency

Cluster	Latency
ISM	0.52 ms

Cluster Memory Usage

Cluster	Usage
ISM	12.84%

Cluster CPU Usage

Cluster	Usage
ISM	4.04%

Controller IOPS

Cluster	IOPS
ISM	157

Power Usage

This service is supported in Large PC and above only.

1. On the left menu, select Hardware > Clusters

Infrastructure

Clusters List

1 Total Clusters

[Create Cluster](#) [Actions](#)

View by: Group by: Modify Filters

1 selected out of 1 Cluster

Name	AOS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	7.0.0.5	Succeeded	AHV	3	4	-	-

1. Check the ISM box and click on actions then select Expand Cluster

Cluster Management Actions:

- Launch Prism Element
- Upgrade Software
- Rack Configuration
- Manage Categories
- Enable Efficiency Measurement
- Disable Efficiency Measurement
- Enable Anomaly Detection
- Disable Anomaly Detection
- Run Playbook
- Manage & Backup Keys
- Enable Data-at-Rest Encryption
- Manage KMS Type
- Enable Data-In-Transit Encryption
- Disable Data-In-Transit Encryption
- Manage Rebuild Capacity
- Manage Recycle Bin
- Manage Cluster Fault Tolerance
- Maintenance Resiliency
- Expand Cluster
- Destroy Cluster

Events	Metrics	Profiles	1 Total Clusters			
View by: Group by: Modify Filters Export 1-1 of 1 20 rows						
ADS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
70.0.5	Succeeded	AHV	3	4	-	-

1. Check the box of the discovered node and click next

Expand Cluster-ISM

1 Select Host 2 Choose Host Type 3 Configure Host 4 Networking 5 Software Check 6 Review

Select the hosts you want to add and configure their networks. Hosts must be connected to the same subnet as the cluster. New hosts require licenses.

1 Host selected out of 1 [+ Discover Hosts Manually](#)

Model	Serial Number	Available Hosts
☒ Cisco UCS C240-M7SN	WZP283891L1	1

[Back](#) [Cancel](#) [Next](#)

1. On the next page select HCI from the drop-down menu and click next

Expand Cluster-ISM

1 Select Host 2 Choose Host Type 3 Configure Host 4 Networking 5 Software Check 6 Review

A host can be used for different purposes. Nutanix allows you to add a host as one of the following types.

HCI Host A host is added as a standard host in the cluster.

Storage Only Host This host is optimized for storage use. It allows you to seamlessly expand the storage capacity of your cluster.

Compute Host This host is optimized for computing purposes (CPU and Memory)

1 Selected Hosts

Model/Serial	Host Position	Host Type
Cisco UCS C240-M7SN WZP283891L1	A	HCI

[Back](#) [Cancel](#) [Next](#)

1. Add a name c240-node-4 and then click next

Expand Cluster-ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ **Configure Host**
☐ Networking
 ☐ Software Check
 ☐ Review

Host name is required for all Hyper-V clusters, but can be skipped for AHV and ESXi clusters.
You can change a Host Name or IP by clicking on its table cell.

1 Selected Hosts

Model/Serial	Host Position	Name	CVM IPv4	CVM IPv6	Hypervisor IPv4	Hypervisor IPv6	IPMI IPv4	IPMI IPv6
Cisco UCS C240-M7SN WZP2B389L1	A		198.18.135.27		198.18.135.23		198.18.143.2	

1. On the networking step click on skip Networking

Expand Cluster-ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ **Networking**
☐ Software Check
 ☐ Review

Select the appropriate active and backup uplinks for the hosts.

1 Selected Hosts

Model/Serial	Host Position	Active Uplink	Backup Uplink
Cisco UCS C240-M7SN WZP2B389L1	A	Expand row to configure switches.	Expand row to configure switches. ☒

1. For the software check, let's wait for some time and then click next

Expand Cluster-ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ **Software Check**
☐ Review

AOS and Hypervisor version on new hosts need to be the same as the cluster.
If AOS version is lower than that of the cluster's then a reimage is not required and an upgrade will happen instead.

1 Selected Hosts

Model/Serial	Host Position	Host Type	Hypervisor	AOS Version	Compatibility
Cisco UCS C240-M7SN WZP2B389L1	A	HCI	AHV	7.0.0.5	✓ Compatible

1. Under review step, click Run Prechecks, wait until it completes

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

Prechecks

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

60 %

1. Once the precheck is completed, click on Expand Cluster

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

Prechecks

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

✓ Prechecks passed. Continue to expand the cluster.

100 %

Infrastructure

Clusters • List

1 Total Clusters

Create Cluster Actions

☆ Type text to filter by

1 selected out of 1 Cluster

Export 1-1 of 1 20 rows

Name	ADIS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	70.0.5	Succeeded	AI-V	3	4	-	-

Unlock Navigation Bar

1. To review the progress of the cluster expansion, click task at the top right and click view all task

Infrastructure Clusters * List

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

☆ Type text to filter by

1 selected out of 1 Cluster

Name	AOS Version	Upgrade Status	Hypervisors
ISM	70.0.5	Succeeded	AHV

Recent Tasks

- Expand Cluster: ISM 24%
- Expand Cluster: ISM 100%
- Hypervisor Image Upload Check: ISM 100%
- Fetching cluster networks and uplinks: ISM 100%
- Discover Unconfigured Nodes: ISM 100%
- Security STIG scan 100%

View All Tasks

1 Total Clusters

Group by

Modify Filters

of 1 20 rows

Inefficient VMs

Infrastructure Tasks

Overview

A new and improved version for Tasks experience is available. To use that, you need to upgrade all the connected clusters to AOS 7.0 or above. You can find more information [here](#).

Type text to filter by

Modify Filters

Viewing all 54 Tasks

Export 1 - 20 of 54 20 per page

Task	Entity Affected	Cluster	Progress	Status	Created On	Duration	Sub-Tasks
Node preparation for expand ...	-	ISM	86%	Running	Apr 14, 2025, 10:5...	1 minute 7 seconds	5
Expand Cluster	ISM	-	86%	Running	Apr 14, 2025, 10:5...	2 minutes 9 seco...	1
Expand Cluster	ISM	-	100%	Succeeded	Apr 14, 2025, 10:5...	1 minute 15 seconds	1
Hypervisor Image Upload Che...	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:5...	24 seconds	1
Fetching cluster networks and...	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:5...	16 seconds	1
Discover Unconfigured Nodes	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:4...	23 seconds	1
Successfully finished STIG run ...	-	ISM	100%	Succeeded	Apr 13, 2025, 12:2...	Under 1 second	-
Running refresh scan	-	-	100%	Succeeded	Apr 13, 2025, 12:2...	1 minute 53 secon...	4

1. To confirm the new host has been added to the existing cluster, select Clusters on the left side

Infrastructure Clusters * List

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

☆ Type text to filter by

View by Group by


Modify Filters

Viewing 1 Cluster


Export 1 - 1 of 1 20 rows

Name	AOS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	70.0.5	Succeeded	AHV	4	5	-	-


1. Return to Prism Element to review on the cluster main dashboard the Node count

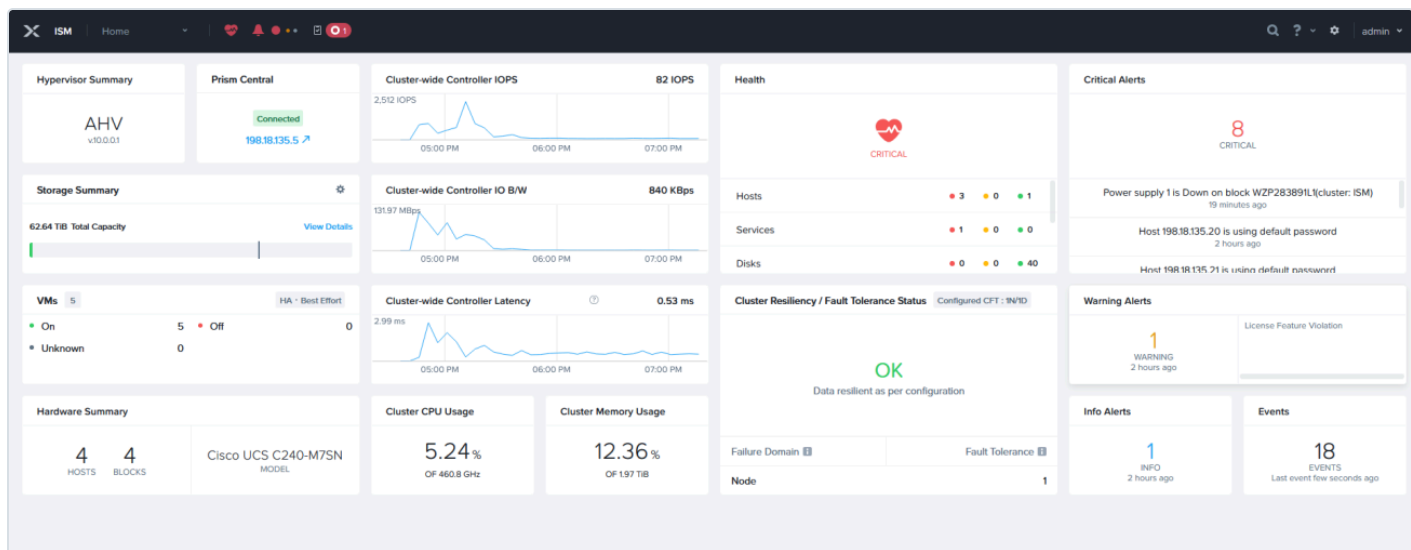


1. Click Home at the top and from the drop-down menu select LCM

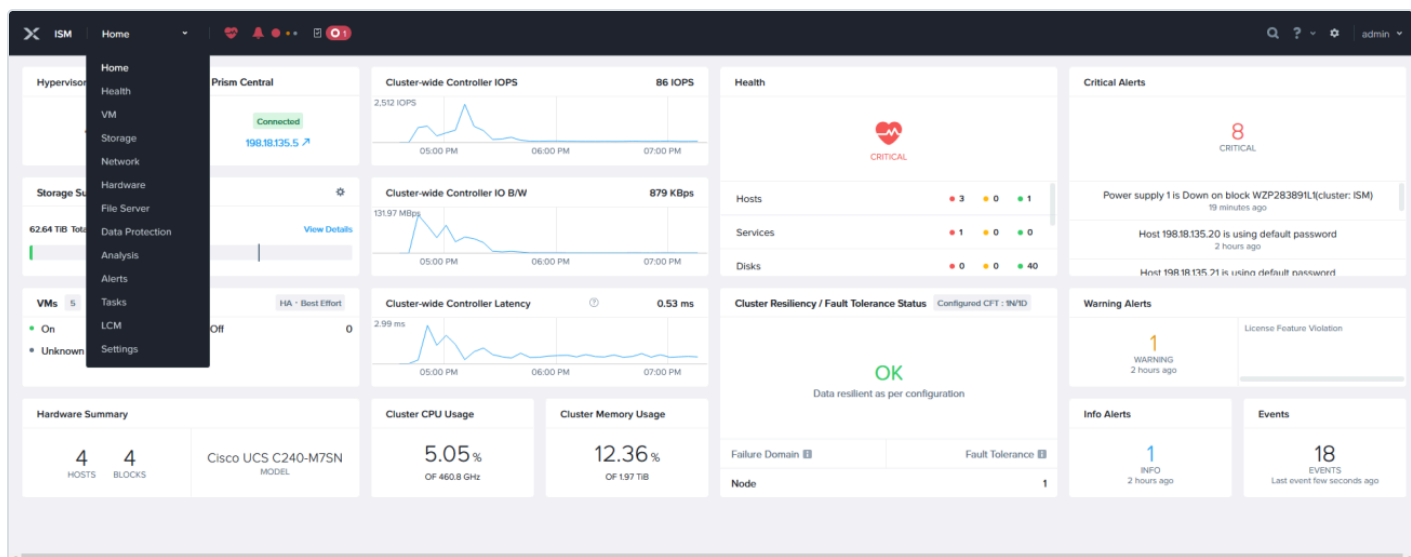


1. Select inventory and click Perform inventory

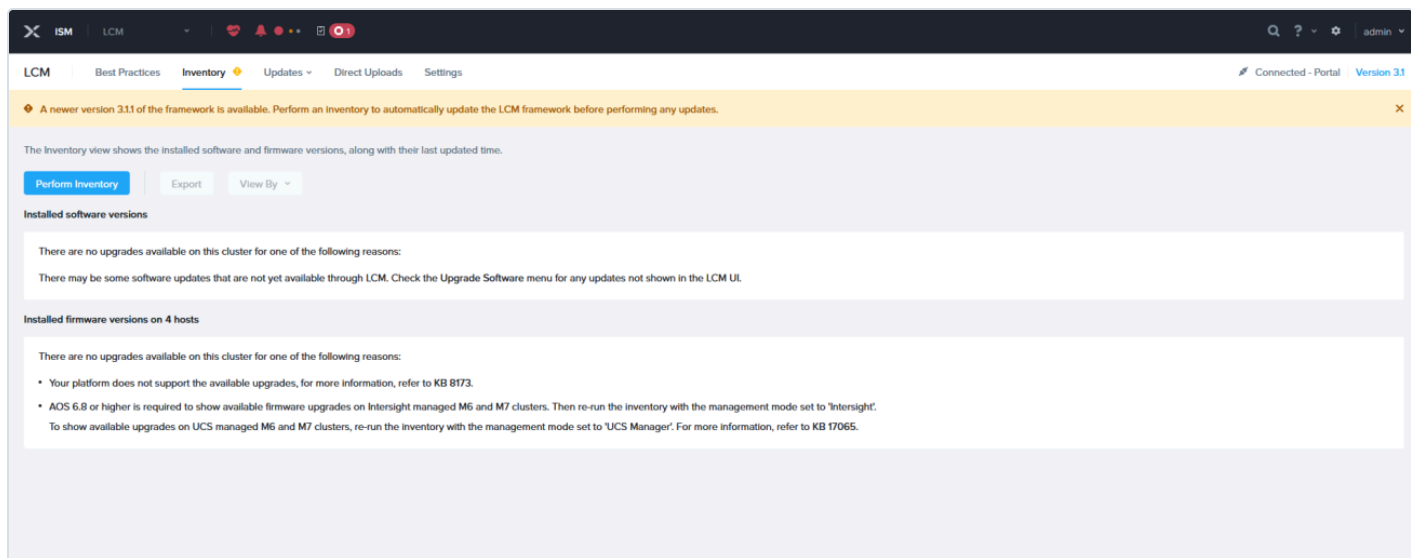


1. Click Proceed

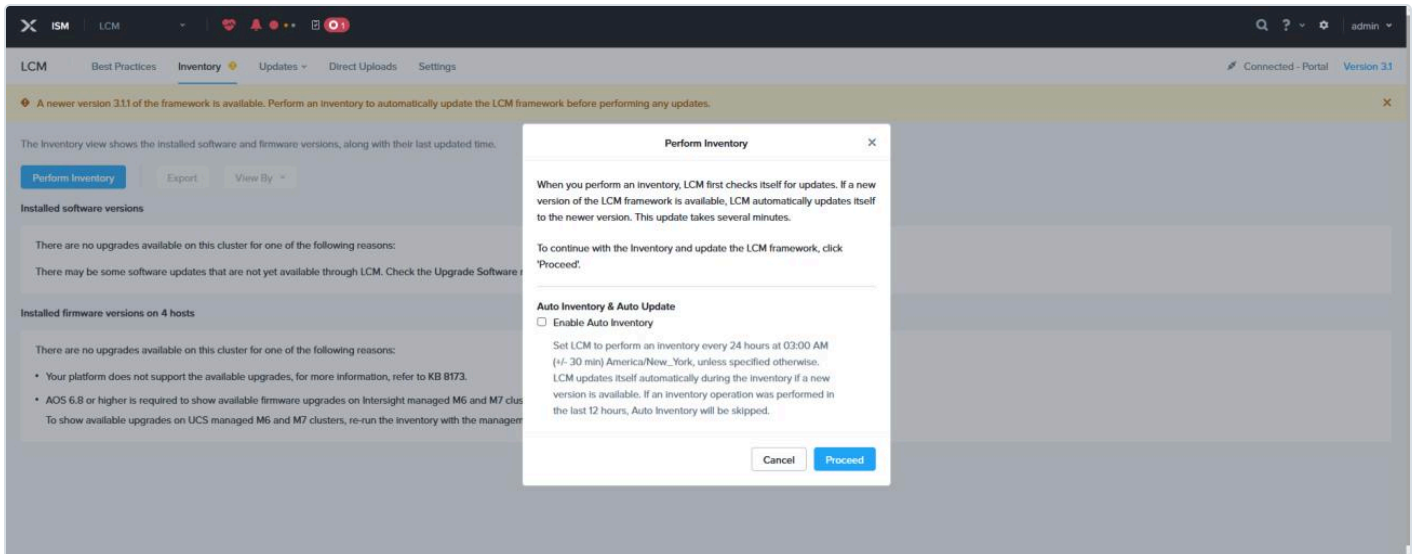

1. From the drop down select standalone Cisco IMC and click continue

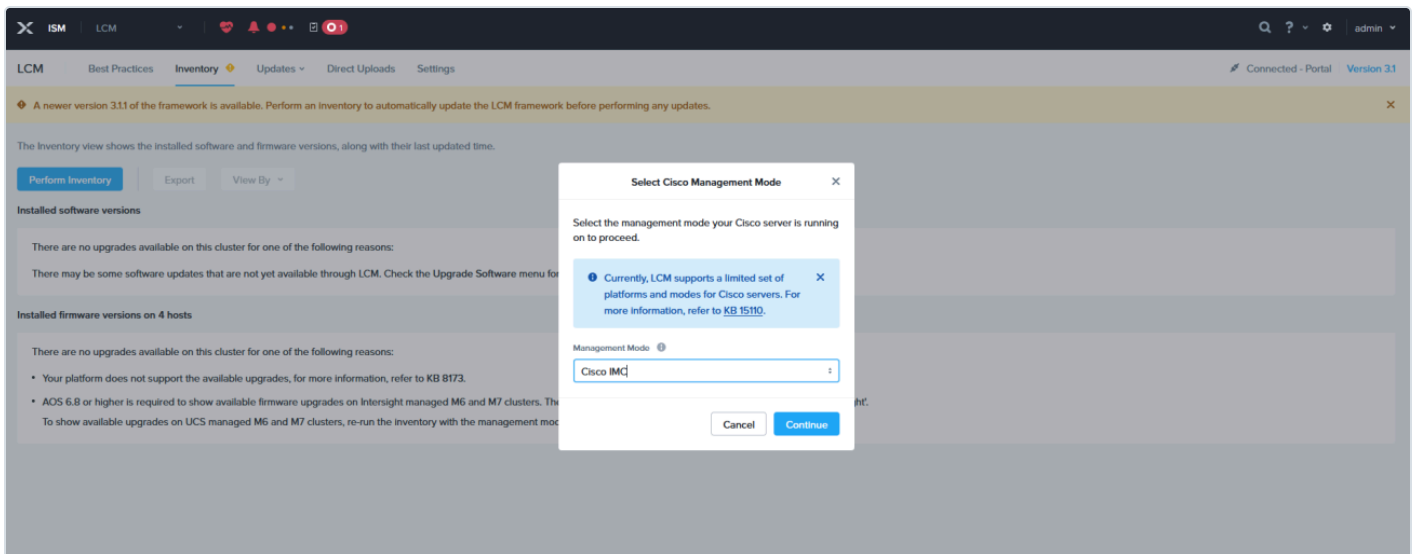

1. Wait until the Inventory completes

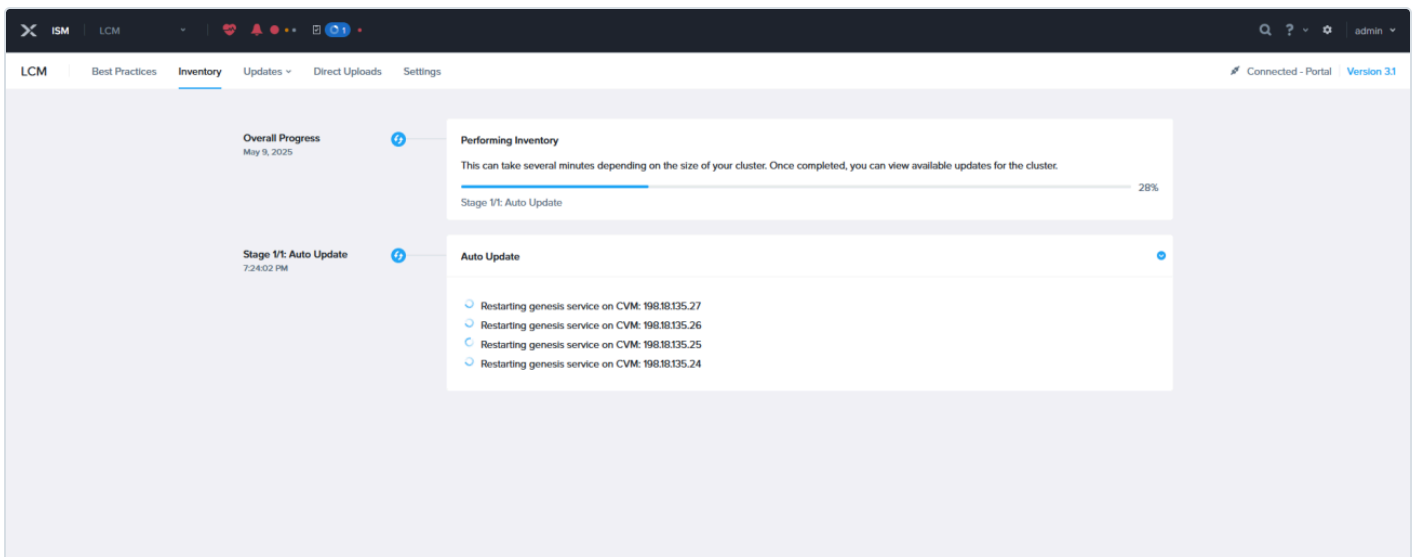

1. Once it's completed return to inventory

Overall Progress
April 14, 2025

Inventory completed
Your inventory was successfully updated. Click the button below to return to your inventory overview.

Stage 3/3: Inventory

[Return to Inventory](#)

Stage 1/3: Auto Update
11:12:35 AM – 11:14:57 AM

Auto Update

Stage 2/3: Precheck
11:15:14 AM – 11:15:27 AM

LCM Framework Check

Stage 3/3: Inventory
11:15:29 AM – 11:16:21 AM

Download

Inventory Task

1. Click updates and select software to review all available updates

Updates

The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu.

[View Upgrade Plan](#) [Pre-Upgrade](#) [Filter](#)


Viewing all 8 Software Updates

Software	Available Version	Current Version	Last Updated	Release Notes
☐ AHV hypervisor	10.01 1 version update	10.0.01 4 entities		View Release Notes
☐ AOS	7.01 Release Date: March 19, 2025 1 version update	70.0.5		View Release Notes
☐ FSM	5.11 3 version updates	5.0.01		
☐ Foundation	5.71 1 version update	5.7		View Release Notes
☐ NCC	5.11 1 version update	5.1.0		View Release Notes


1. This is optional if you would like to apply the updates available or keep the cluster with the current version.

Scenario 6 · Nutanix Prism Central 2022 Installation (Optional)


1. From Cisco IMM Transition, can get the PC.2022.6.0.12.ova to deploy it from zero
2. Login to Cisco IMM Transition and go to the folder Nutanix-Prism-Central and download the PC.2022.6.0.12.ova and the lcm_foundation-central_1.7.1 to the desktop

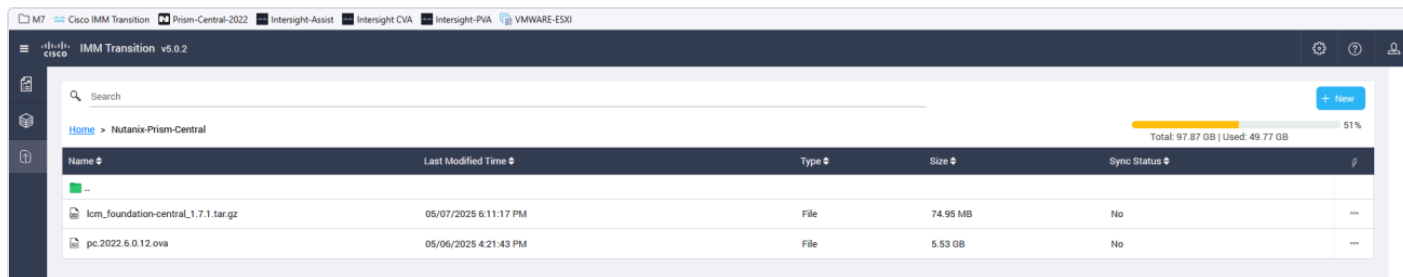

1. Open a new tab and from the bookmark click the VMWARE-ESXI and click Login.


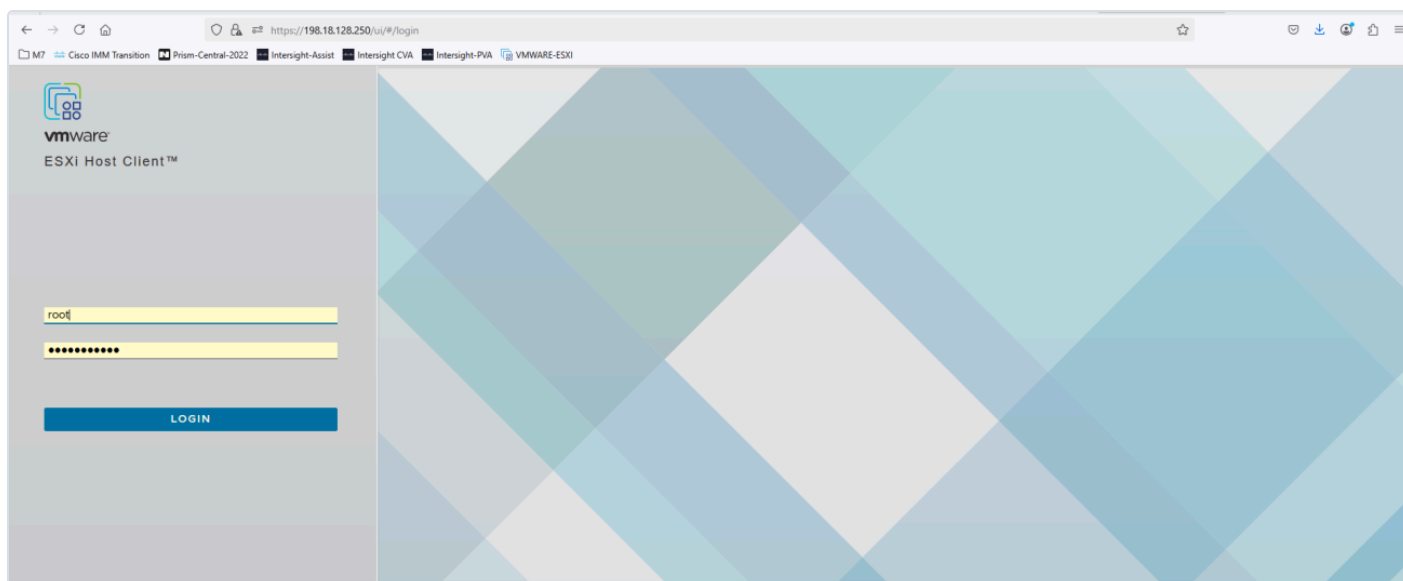


1. On the ESXi virtual Machines option, do right click and select Create/Register VM

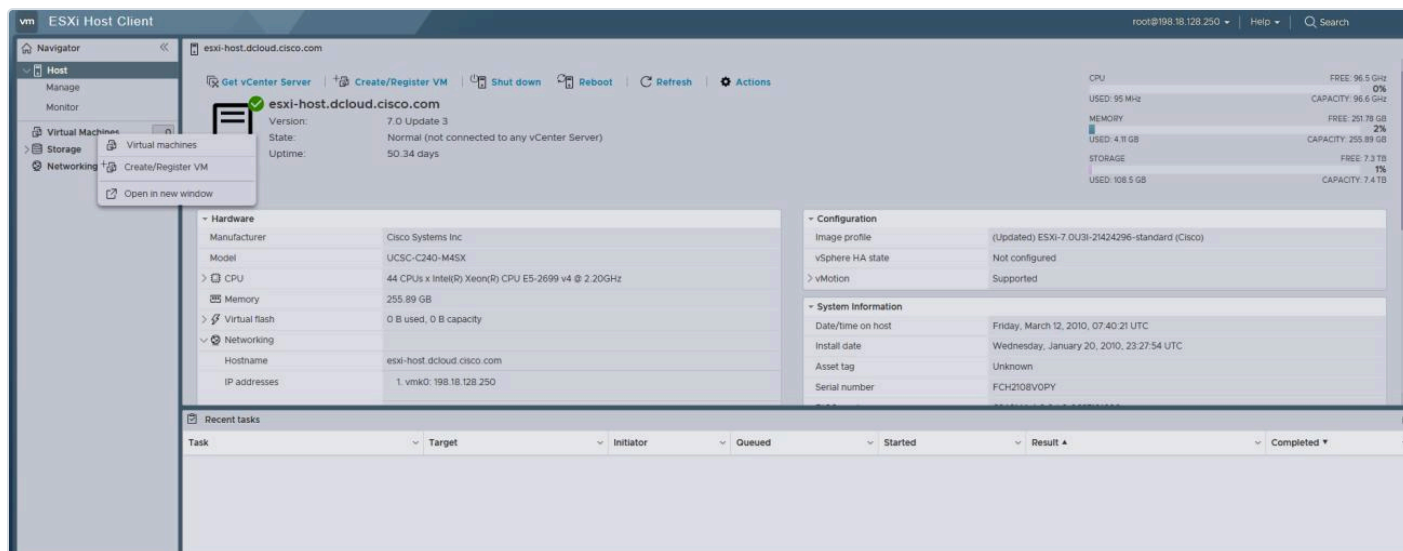


1. Then click Deploy a virtual machine from an OVF or OVA file and click Next


- Click to select the file and go to Downloads folder to find the pc.2022.6.0.12.ova, select and click open, then add a name to the new virtual machine and click Next

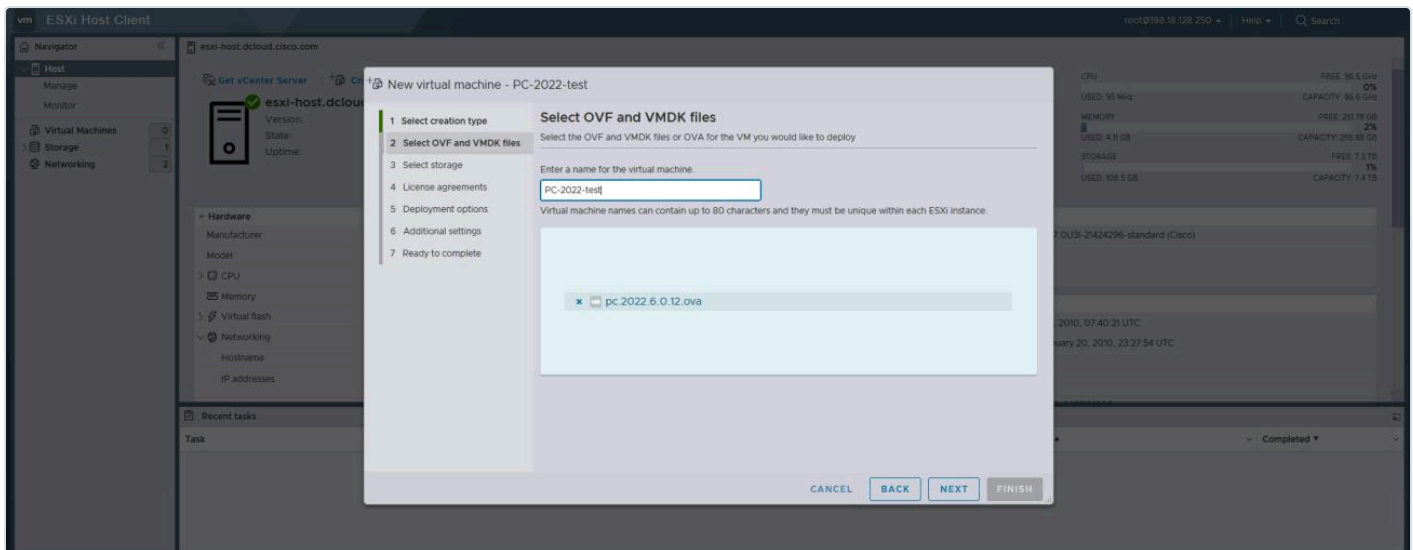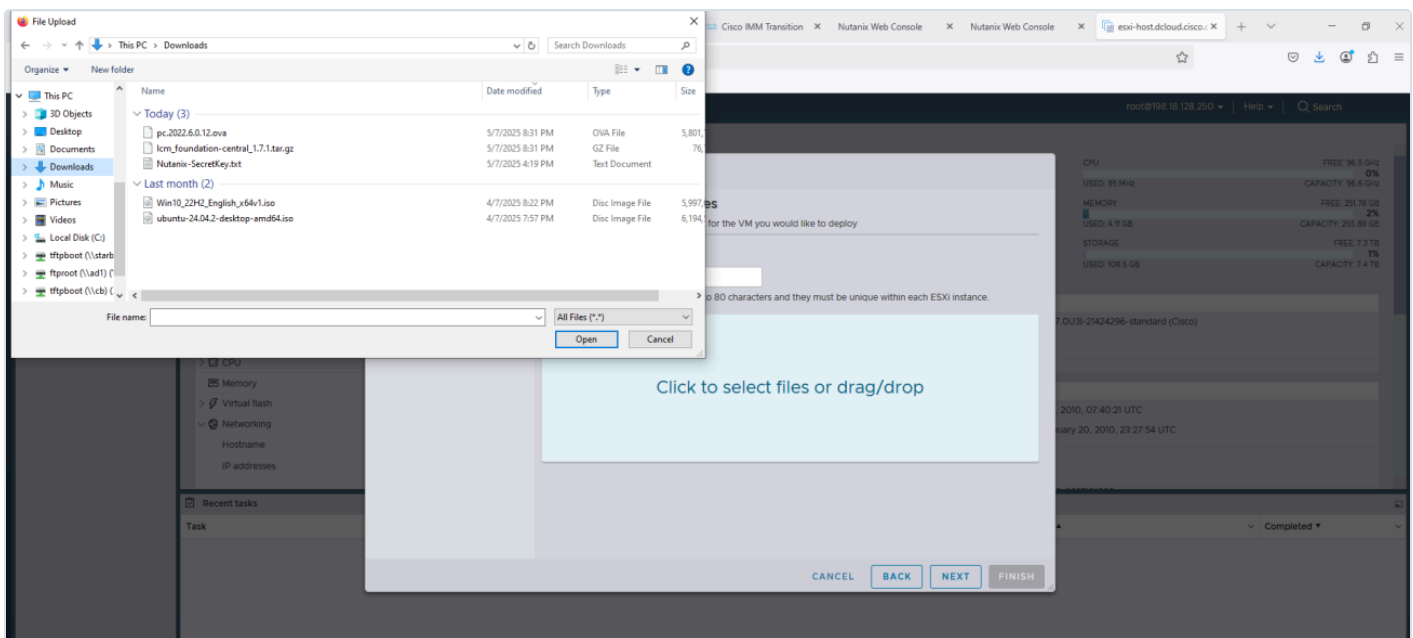


- Select storage just click Next
- On the Deployment options for VM Network from the drop-down menu select vmNetwork2 and click Next

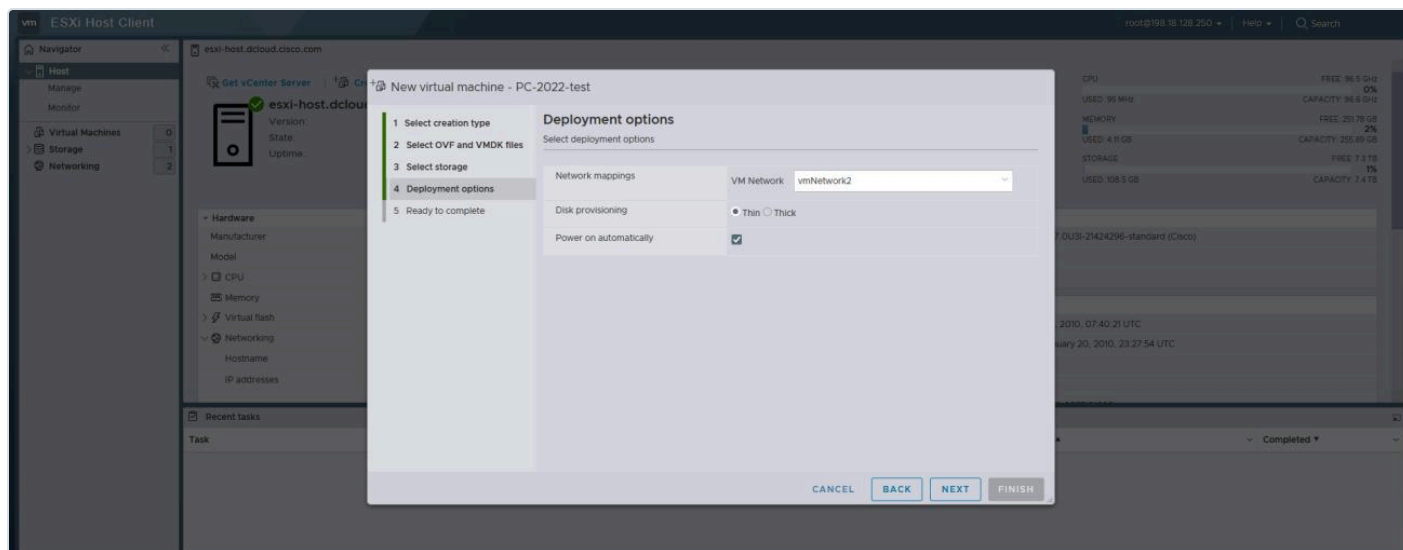


1. Then click Finish

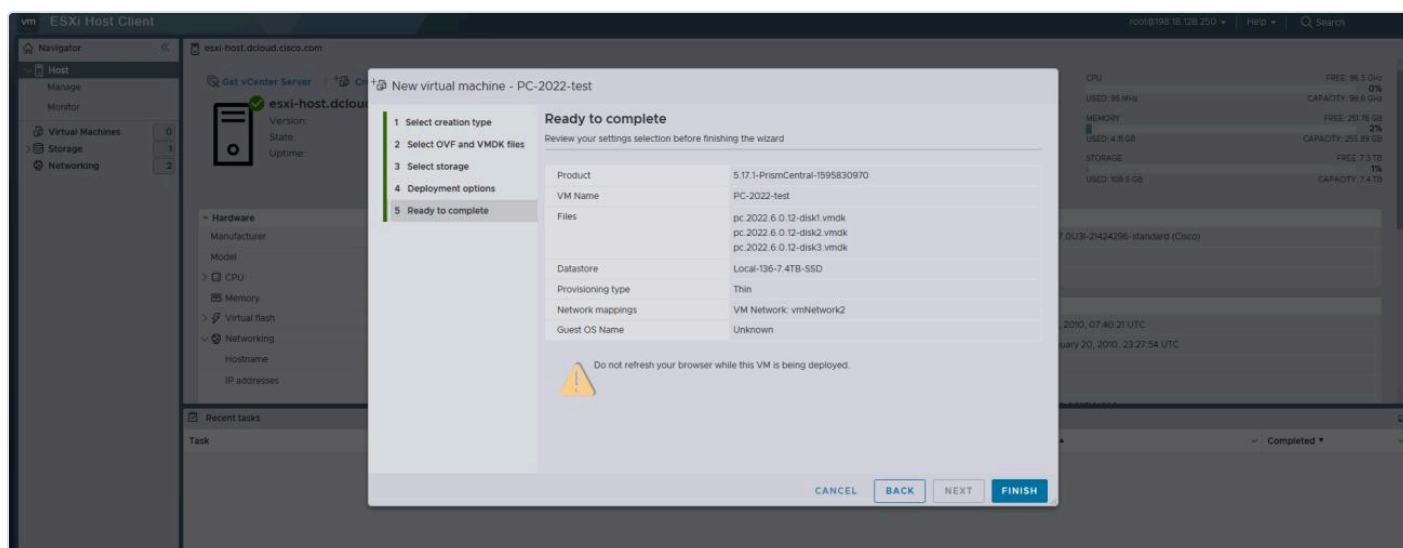


1. Power on the VM then open the local vSphere console. Let the VM run through its initial configuration steps for roughly 15 minutes, the VM will reboot multiple times.

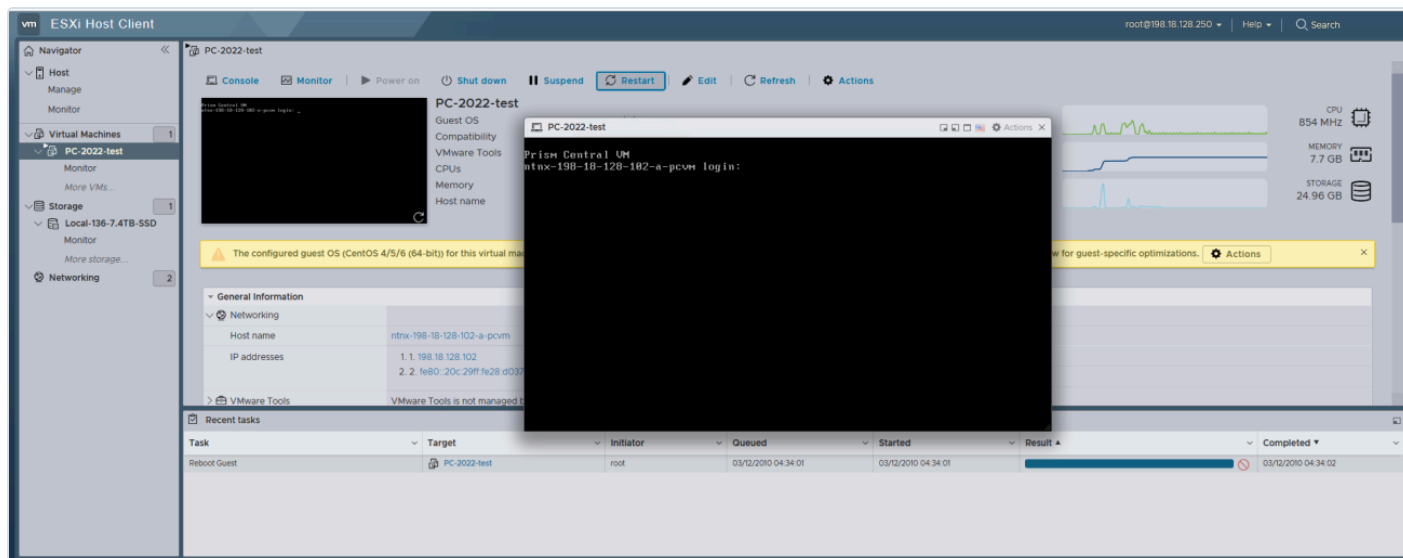


1. Log on as user: nutanix password: nutanix/4u
2. Edit the network interface with a static IP address: `$ sudo vi /etc/sysconfig/network-scripts/ifcfg-eth0` Add or edit the NETMASK, IPADDR and GATEWAY lines, change BOOTPROTO to none, then save the changes= :wq! NETMASK=255.255.192.0 IPADDR=198.18.128.160 BOOTPROTO=none GATEWAY=198.18.128.1

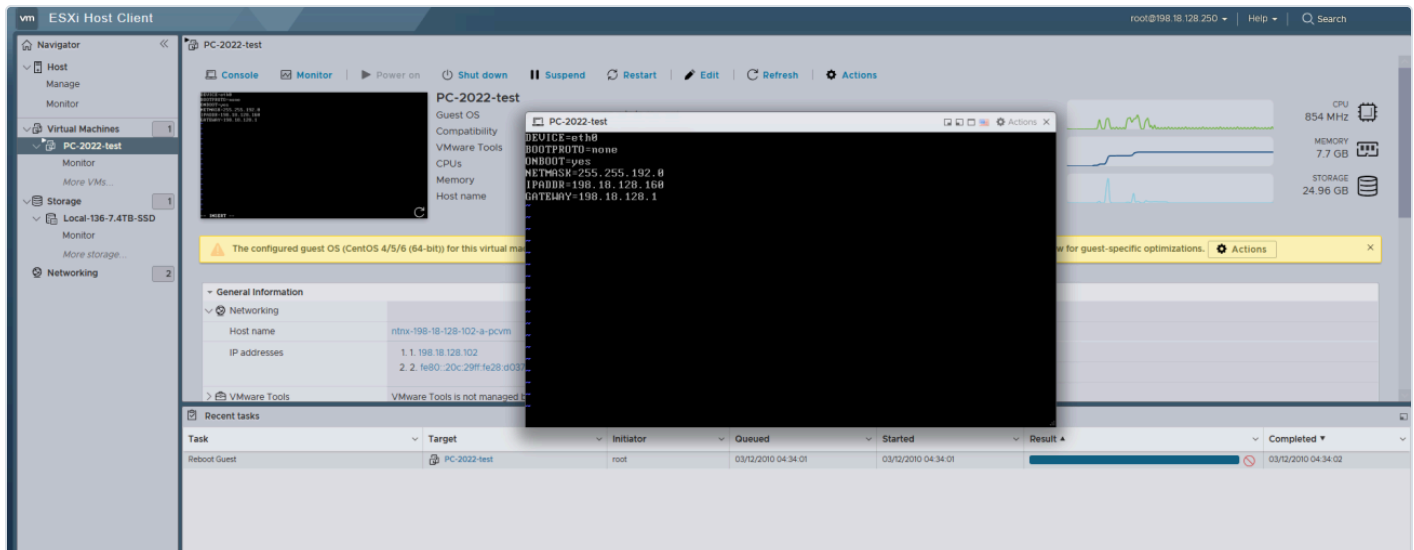


1. Edit the /etc/hosts file to remove all lines containing any entry like "127.0.0.1 NTN-10- 3-190-99-ACVM" then save the changes and reboot:
`$ sudo vi /etc/hosts $ sudo reboot`

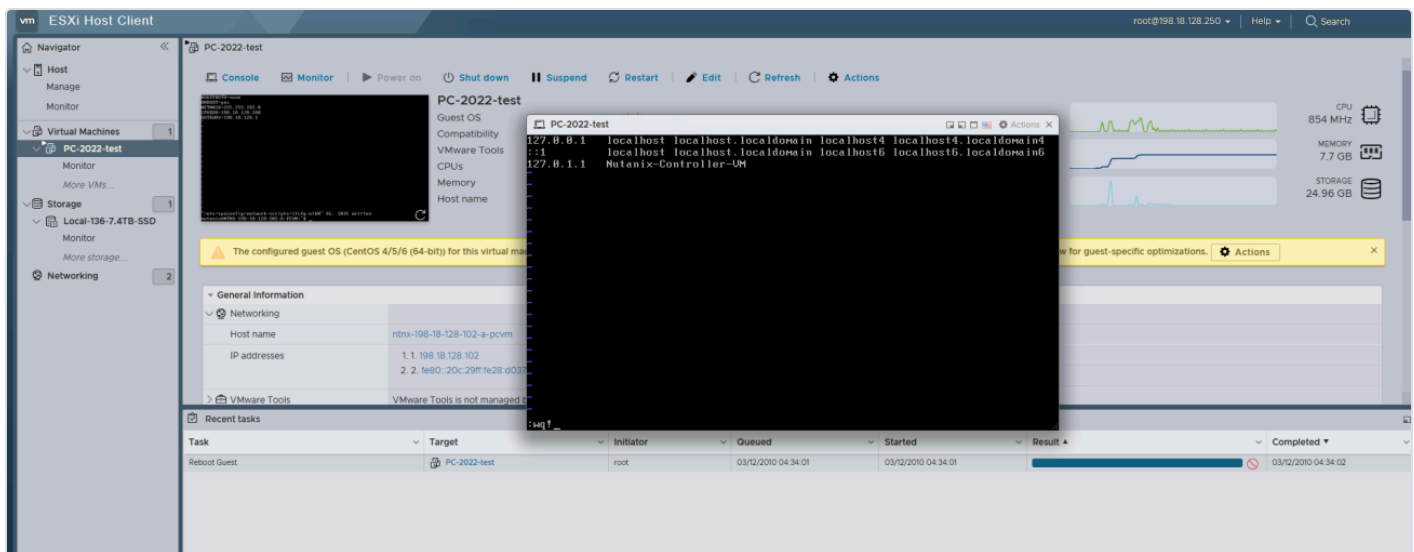


1. Log in to the Prism Central VM via SSH as user: nutanix password: nutanix/4u

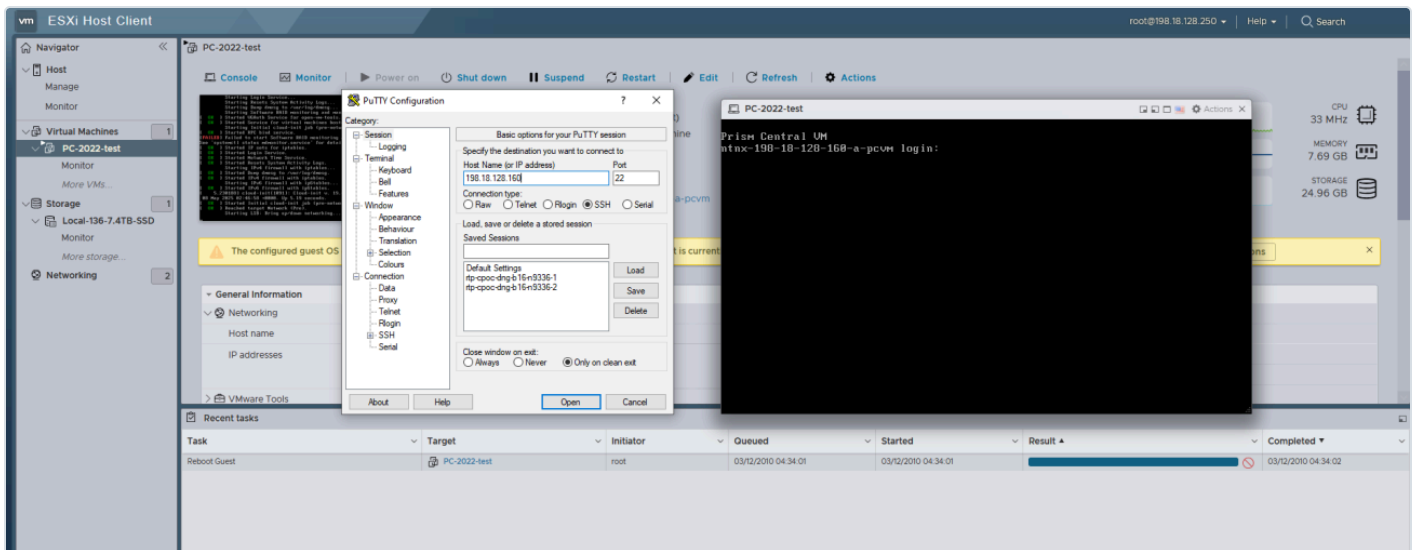


1. Run the command to create the Prism Central cluster: `$ cluster --cluster_function_list "multiclust" -s 198.18.128.160 -dns_servers "198.18.133.1" --ntp_servers "198.18.128.1" create`

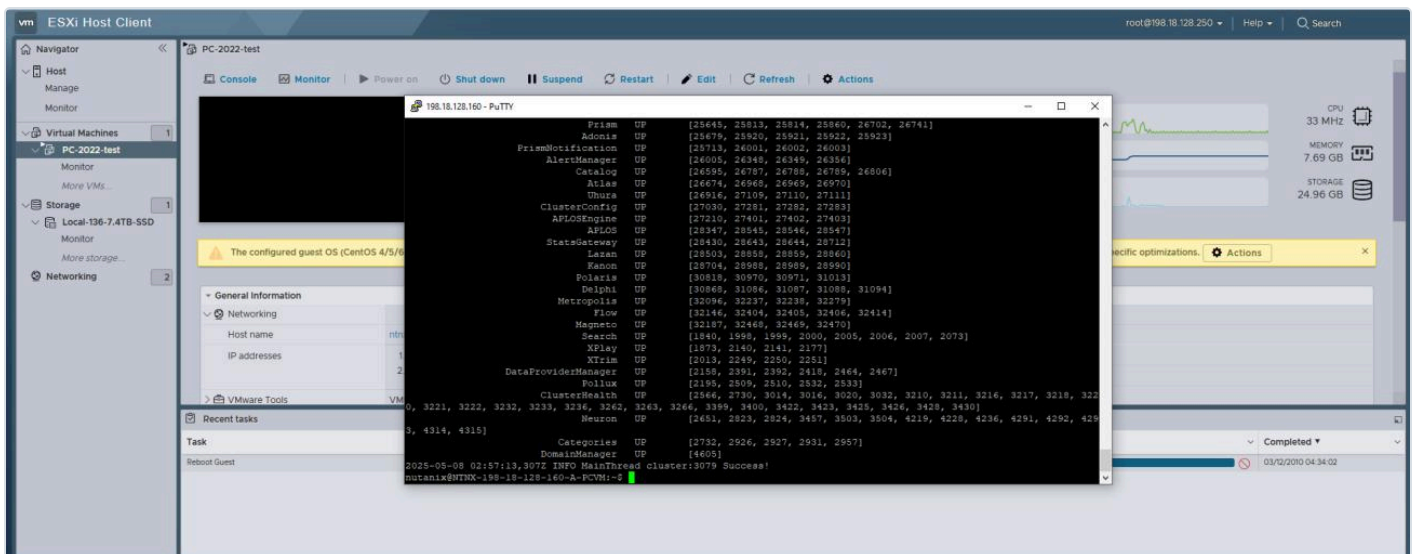


1. Log in to the Prism Central VM GUI with a web browser at <https://198.18.128.160:9440> as user: admin password: nutanix/4u
2. Add a new password C1sco12345! and then log in with the new password
3. After the password has been successfully changed, login with user admin and password C1sco12345!

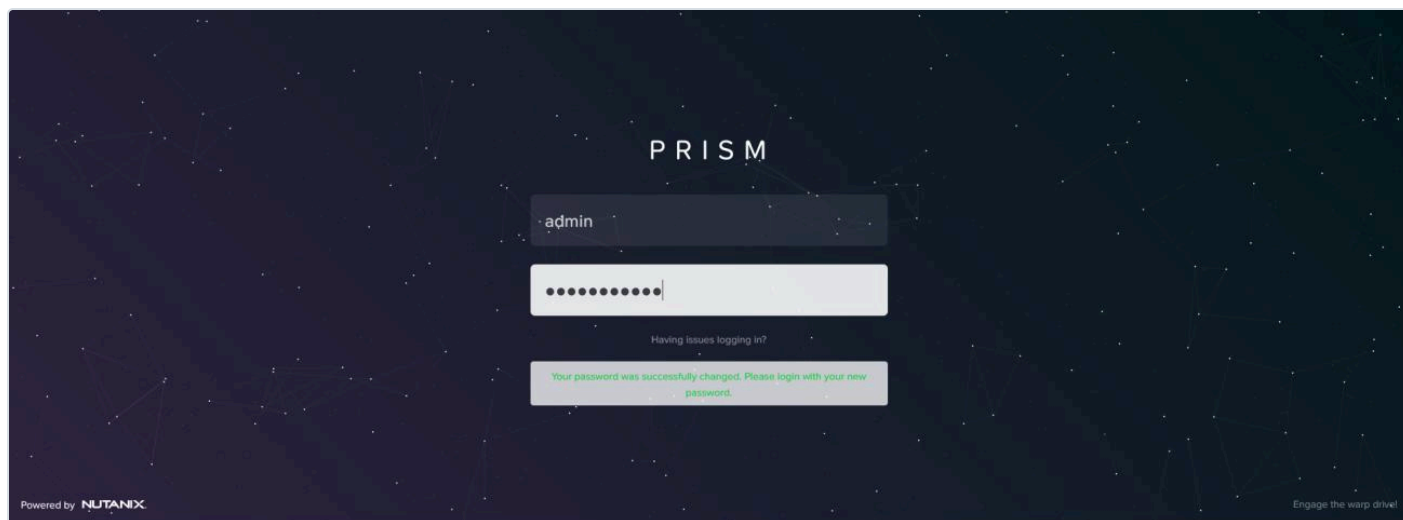


1. Complete the Nutanix EULA,
2. Name = Cpoc
3. Company = Cisco
4. Job title = PC-2022
5. Check the box and click accept and continue

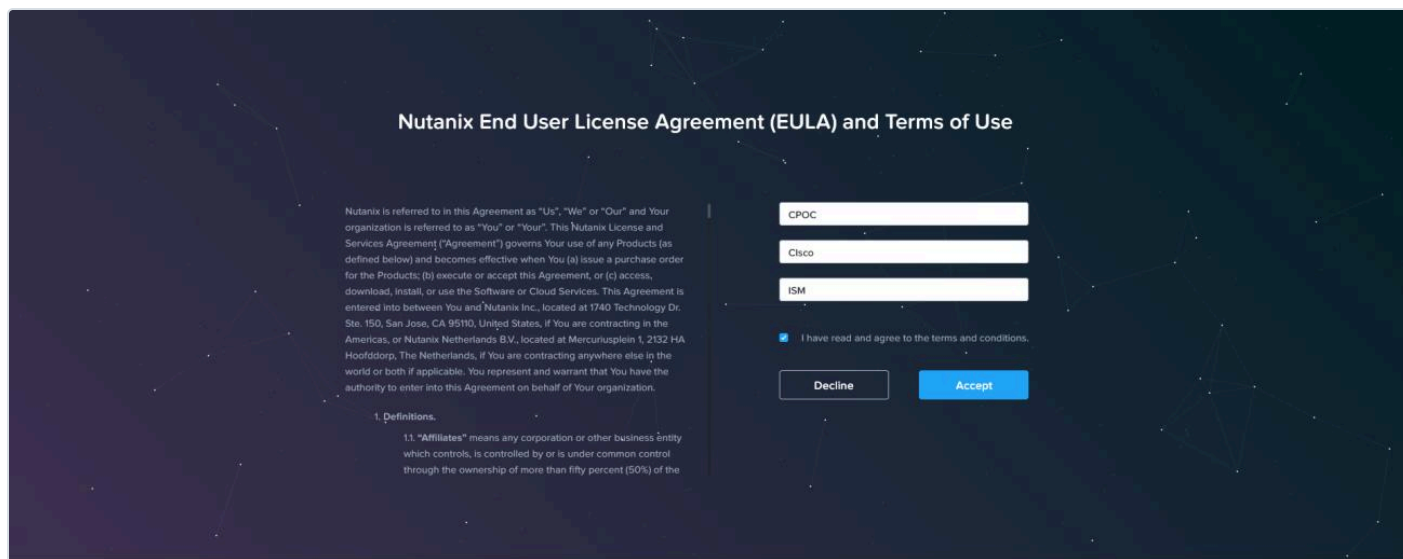


1. Keep the Pulse option by default, click Continue

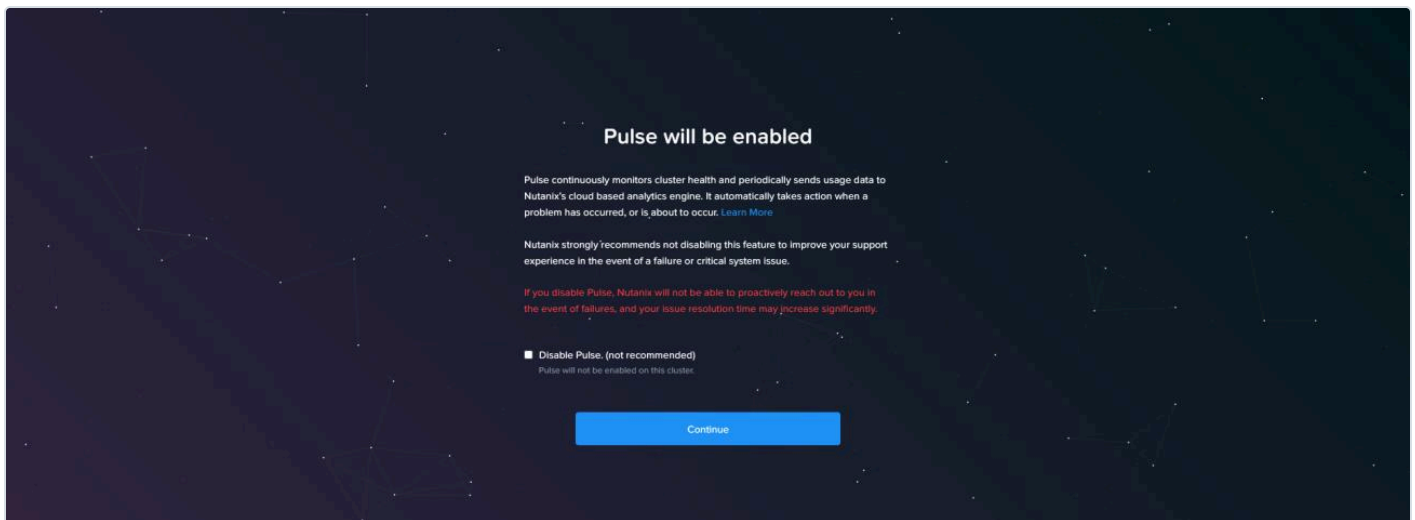

1. You should be taken to the main dashboard

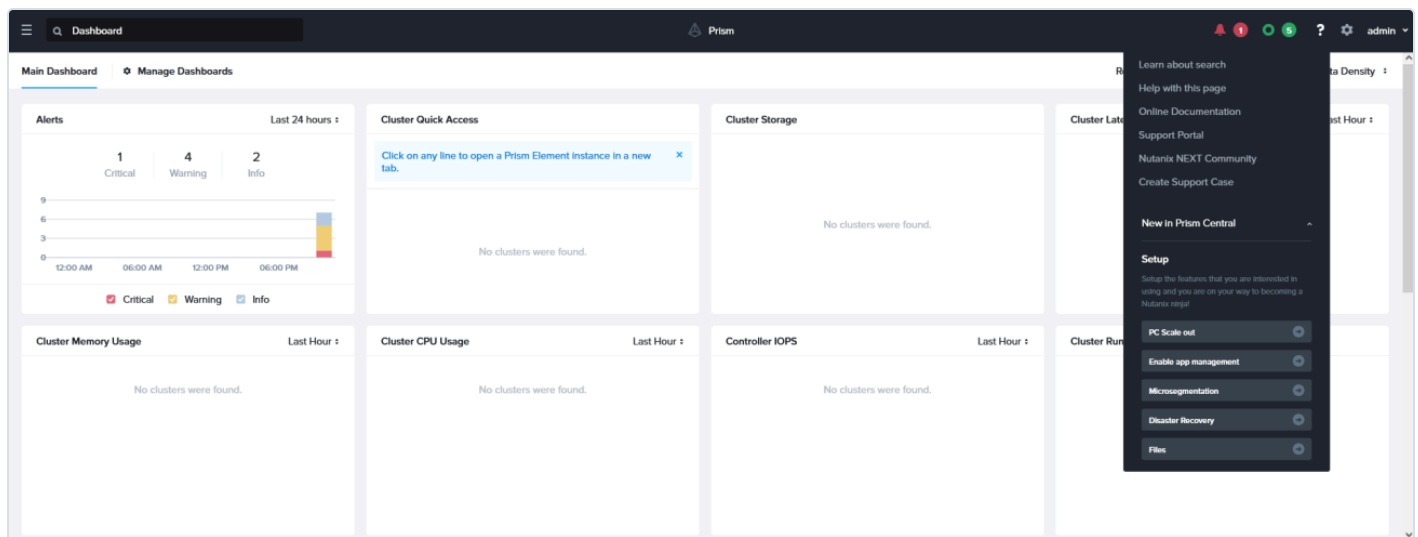


1. Click the ellipsis at the top left and select Prism Central Settings then Prism Central Management and click on Edit of the Prism Central Summary

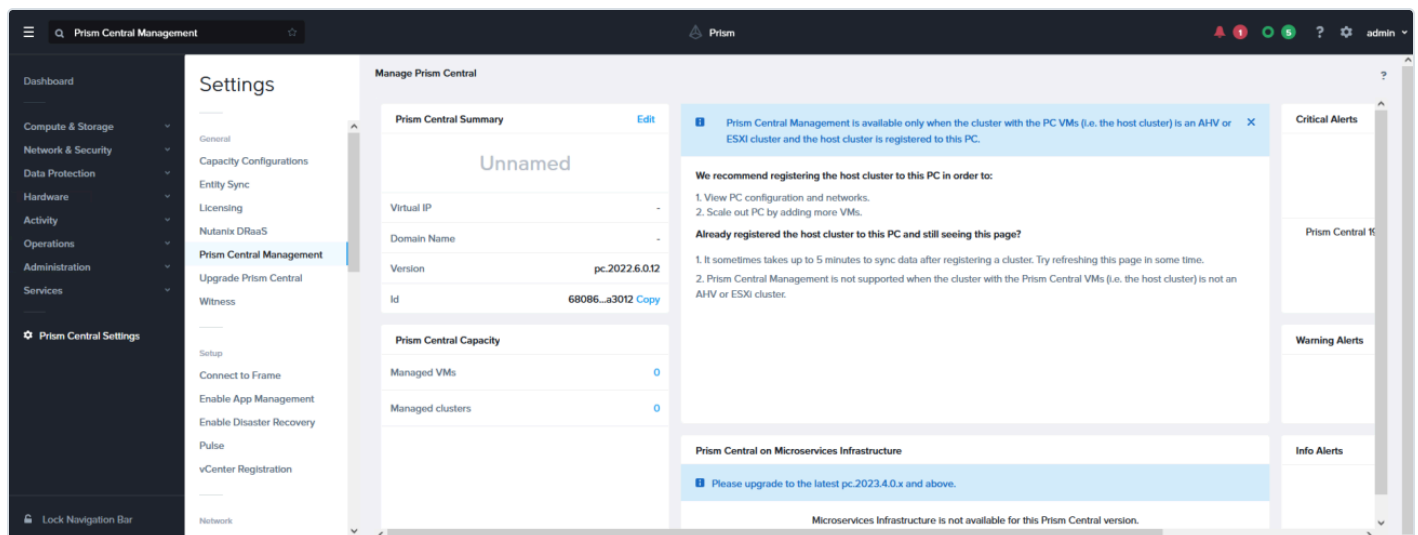


1. Add the FQDN and the virtual IP


2. FQDN = prism2022.dcloud.cisco.com
3. Virtual IP = 198.18.128.161
4. Click Update

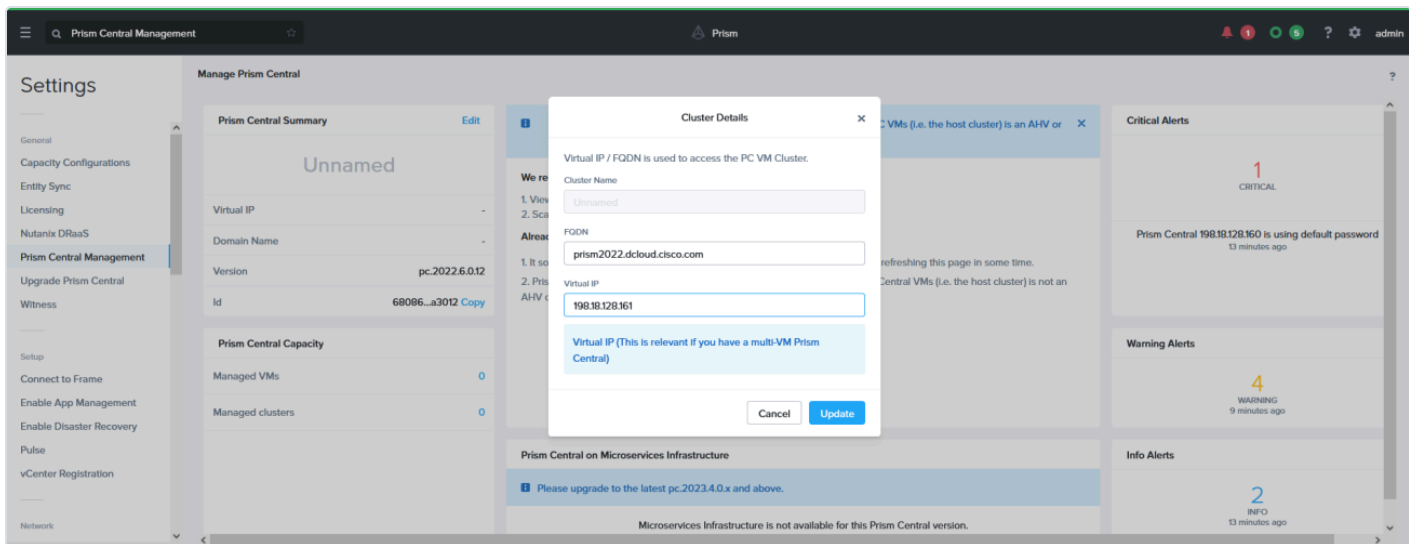


1. Confirm the Name servers and NTP Servers are set

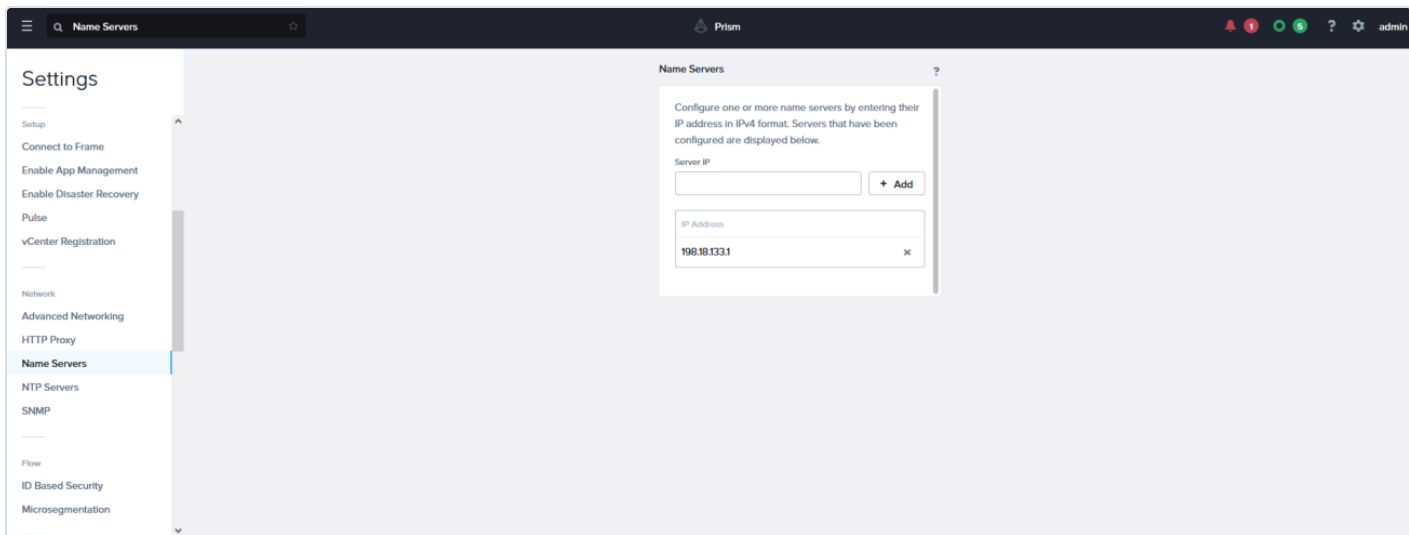


1. The Foundation Central requires an upgrade so in this case from the start menu of Windows look for WinSCP

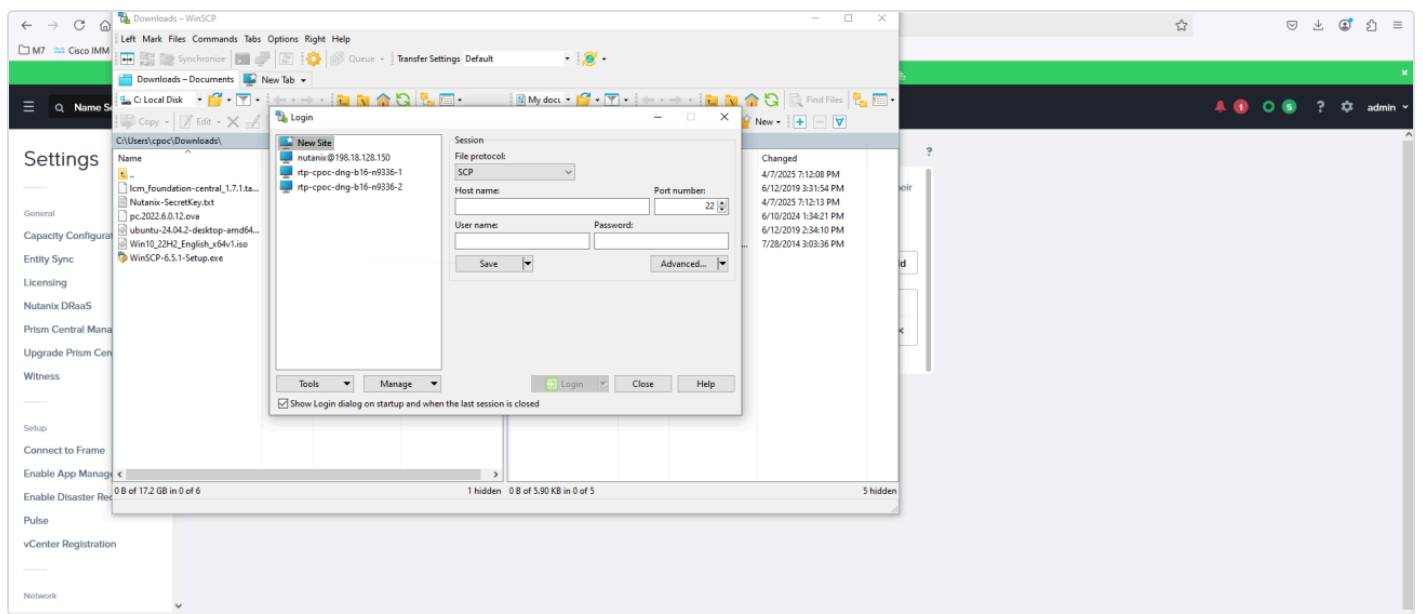


1. Click on New Site
2. File Protocol = SCP
3. Host name = 198.18.128.160
4. User name = nutanix
5. Password = Nutanix/4u
6. Click login and then accept

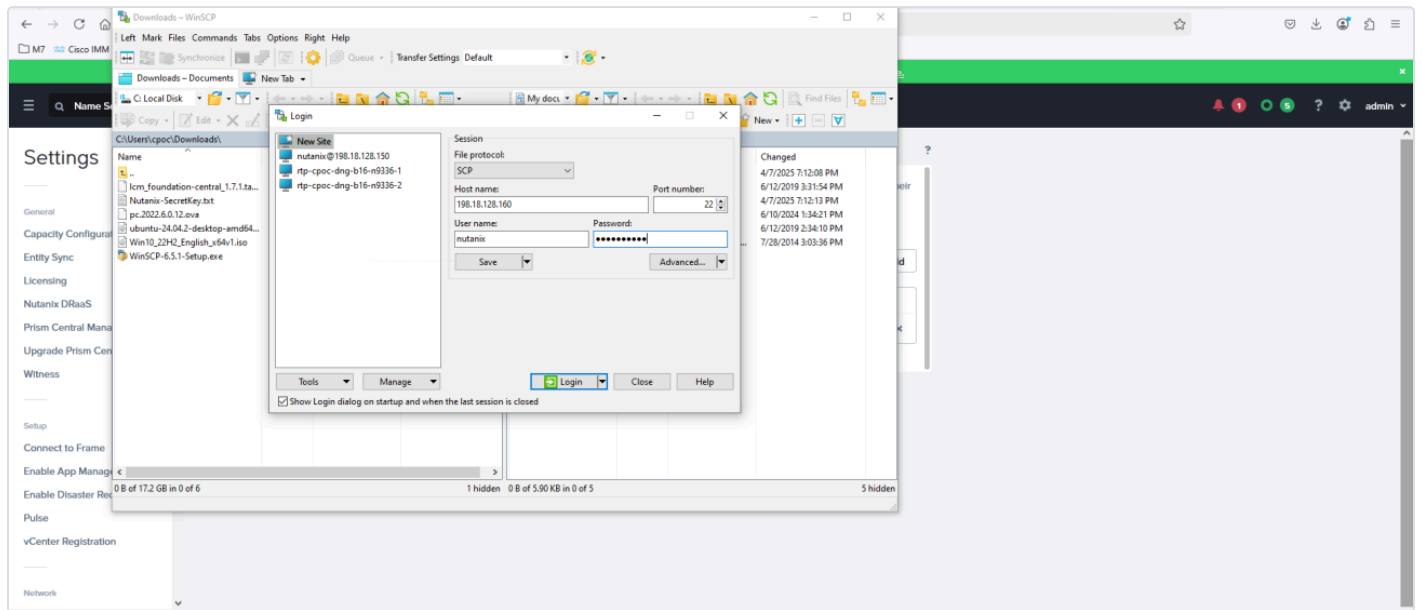


1. Drag and drop the lcm_foundation-central_1.7.1.tar.gz file from the Downloads folder to the /home/Nutanix/

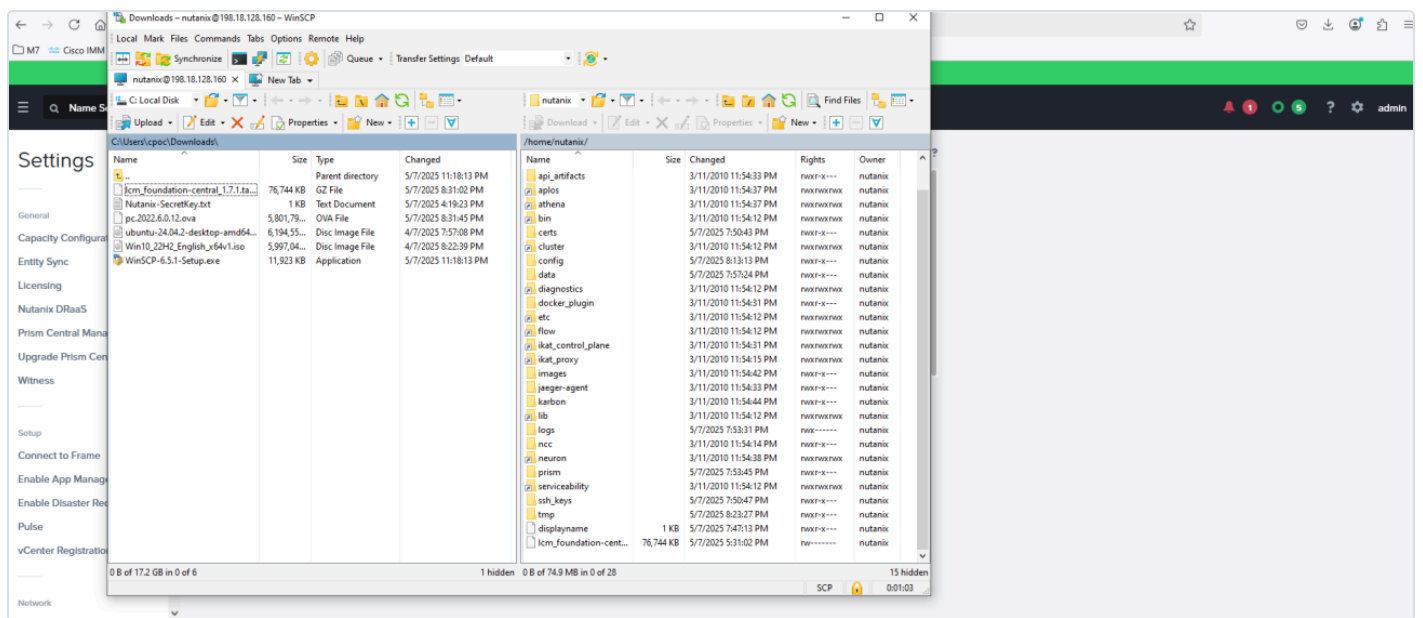


1. Then return to the Putty session and run the following commands
`$ mkdir /home/nutanix/fc_installer $ tar -xf /home/nutanix/lcm_foundation-central_1.7.1.tar.gz -C /home/nutanix/fc_installer/ $ genesis stop foundation_central $ sudo rm -rf /home/docker/foundation_central/ $ sudo tar -xJf /home/nutanix/fc_installer/builds/foundation-central-builds/1.7.1/foundation-central-installer.tar.xz -C /home/docker/foundation_central/ $ sudo chown -R nutanix:nutanix /home/docker/foundation_central/ $ cluster start`

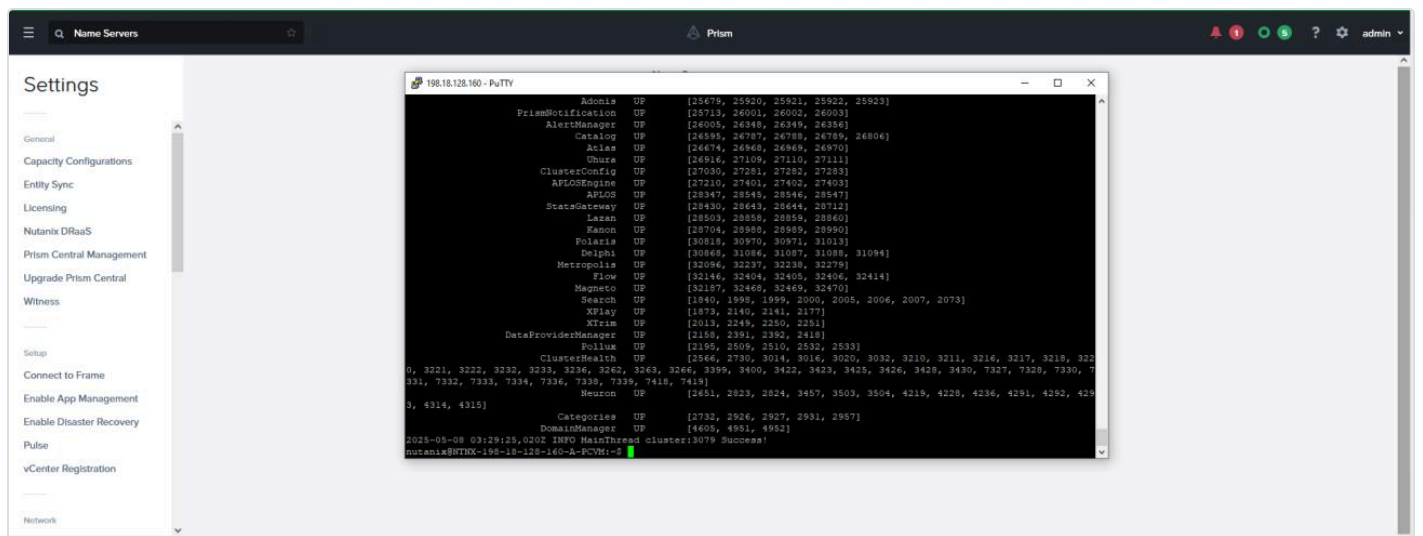

1. Return to Prism Central click the Ellipsis and select Services > Foundation Central and Click Enable Foundation Central

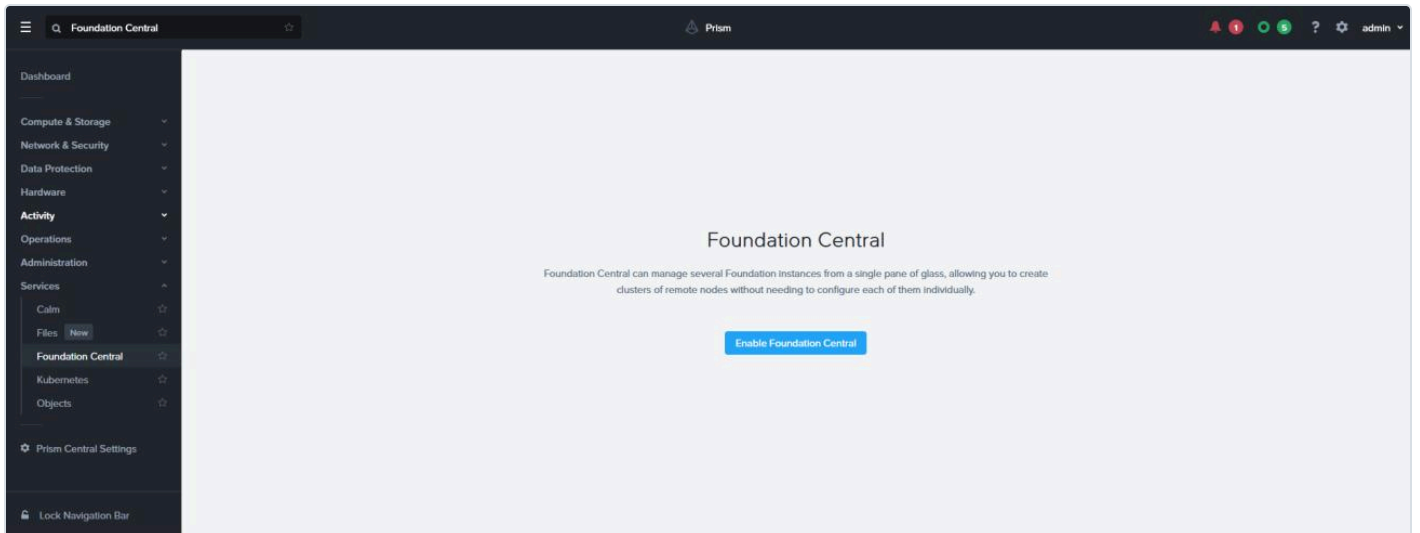

1. Then Foundation Central 1.7.1 will become available

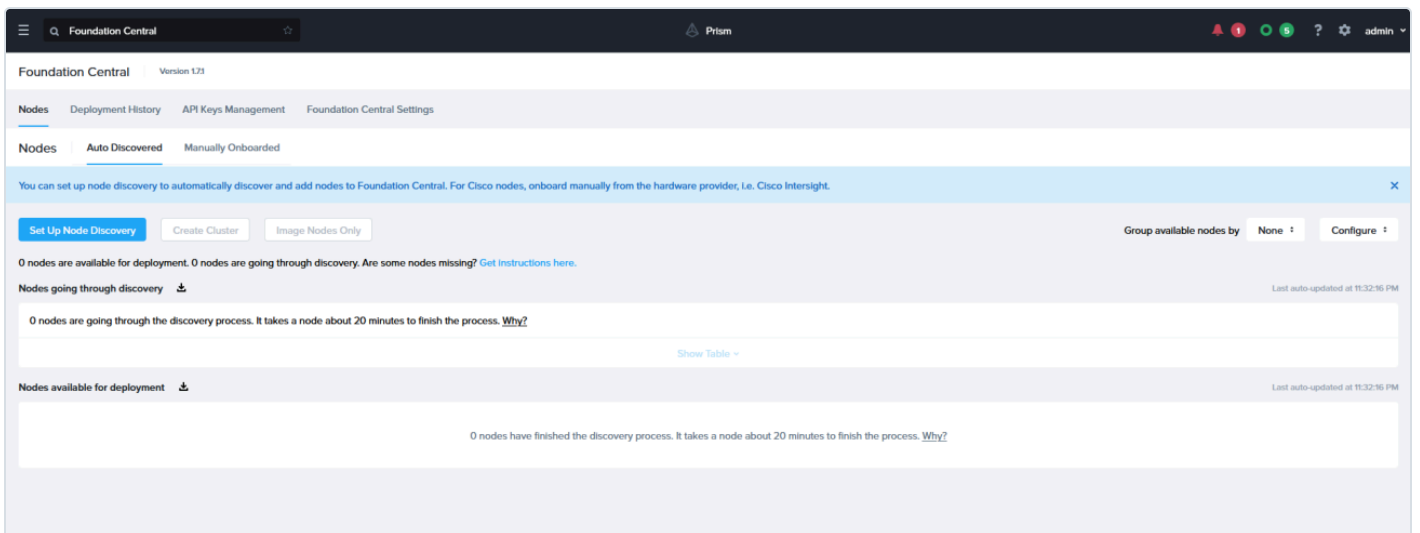

1. From here you can return to Scenario 2 and continue with the steps using your new Prism Central.

What's Next

Reference	Description