

---

CISCO GLOBAL DEMO ENGINEERING · CUSTOMER PROOF OF CONCEPT

# Cisco Intersight Standalone Mode

Nutanix AHV or ESX

12 March 2026

**Esteban Arguedas**

[eargueda@cisco.com](mailto:eargueda@cisco.com)

# Contents

---

Overview

---

Environment

---

Get Started

---

Scenario 1 - Claim Servers

---

Scenario 2 - Foundation Central

---

Scenario 3 - Cluster Deployment

---

Scenario 4 - Prism Central

---

Scenario 5 - Cluster Expansion

---

What's Next

---

**Author:** Esteban Arguedas (eargueda@cisco.com) · **Version:** 2.0 · **Last updated:** 1 October 2026

### Document status

All printed copies and duplicate soft copies of this document are considered uncontrolled. Please refer to the original, online document link for the current version.

## About this CPOC

Cisco Intersight Standalone Mode is an on-premises deployment of Cisco's infrastructure management platform that operates without requiring a connection to the Intersight cloud. When integrated with Nutanix hyperconverged infrastructure (HCI), it allows organizations to manage and monitor their Nutanix environments securely and locally.

In this mode, Intersight provides:

- Visibility into Nutanix clusters (via Prism API)
- Monitoring of VMs, hosts, and cluster health
- Management of Cisco hardware (e.g., UCS servers running Nutanix)
- Single pane of glass for hybrid environments
- Air-gapped and compliance-friendly operations

It's ideal for secure, regulated environments that require local control, while still benefiting from unified infrastructure management across Cisco and Nutanix systems.

## Scope

### Goals

After completing these scenarios, you will know how to claim, deploy and configure the Nutanix cluster with Cisco Intersight.

## What you'll do

| Scenario                   | Description                                               |
|----------------------------|-----------------------------------------------------------|
| <a href="#">Scenario 1</a> | Claim Servers in Cisco Intersight                         |
| <a href="#">Scenario 2</a> | Onboard nodes in Foundation Central                       |
| <a href="#">Scenario 3</a> | Nutanix Cluster Deployment with AHV or ESX Hypervisor     |
| <a href="#">Scenario 4</a> | Nutanix Prism Central deployment and Cluster registration |
| <a href="#">Scenario 5</a> | Nutanix Cluster Expansion                                 |

See the [Environment](#) page for lab IP addresses, credentials and equipment, and [Get Started](#) to begin.

## Disclaimer

Test results are suitable to the specific design, configuration, test procedure, and types of switches deployed in the environment described in this document.

This document is provided "As-Is," without warranty of any kind, express or implied, including without limitation those of merchantability, fitness for a particular purpose, and non-infringement arising from a course of dealing usage or trade practice.

All printed copies and duplicate soft copies are not considered controlled; therefore, please refer to the original online version for the latest version.

### Document history

| Revision | Date           | Author   | Description                        | Version |
|----------|----------------|----------|------------------------------------|---------|
| 1        | 12 March 2026  | Arguedas | Intersight – Nutanix ISM use cases | 1.0     |
| 2        | 1 october 2026 | Arguedas | Intersight – Nutanix ISM use cases | 2.0     |

## Environment

### IP Table


| Host Name                       | IP Address        | Credentials                               | Model                |
|---------------------------------|-------------------|-------------------------------------------|----------------------|
| rtp-cpoc-dng-b16-c240m7-1       | 198.18.143.1      | admin/C1sco12345!                         | HCIAF240C-M7SN       |
| rtp-cpoc-dng-b16-c240m7-2       | 198.18.143.2      | admin/C1sco12345!                         | HCIAF240C-M7SN       |
| rtp-cpoc-dng-b16-c240m7-3       | 198.18.143.3      | admin/C1sco12345!                         | HCIAF240C-M7SN       |
| rtp-cpoc-dng-b16-c240m7-4       | 198.18.143.4      | admin/C1sco12345!                         | HCIAF240C-M7SN       |
| rtp-cpoc-dng-b16-c240m4-1       | 198.18.143.6      | admin/C1sco12345!                         | UCSC-C240-M4SX       |
| rtp-cpoc-dng-b16-n9336-1        | 198.18.143.7      | admin/C1sco12345!                         | N9K-C9336C-FX2       |
| rtp-cpoc-dng-b16-n9336-2        | 198.18.143.8      | admin/C1sco12345!                         | N9K-C9336C-FX2       |
| rtp-cpoc-dng-b16-fi6536-1       | 198.18.143.9      | admin/C1sco12345!                         | HCIX-FI-6536         |
| rtp-cpoc-dng-b16-fi6536-2       | 198.18.143.10     | admin/C1sco12345!                         | HCIX-FI-6536         |
| rtp-cpoc-dng-b17-xe9305-1       | 198.18.143.11     | admin/C1sco12345!                         | UCS XE9305           |
| cpoc-win10-1                    | 198.18.133.36     | cpoc/cpoc123                              | Windows 10           |
| cpoc-win10-2                    | 198.18.133.37     | cpoc/cpoc123                              | Windows 10           |
| Ad1                             | 198.18.133.1      | dcloud/administrator/C1sco12345           | Windows server       |
| Vcenter 7                       | 198.18.133.30     | administrator@vsphere.local / C1sco12345! | VMWare Vsphere       |
| Vcenter 8.0.3                   | 198.18.133.31     | administrator@vsphere.local / C1sco12345! | VMWare Vsphere       |
| Cisco IMM                       | 198.18.128.100    | admin / C1sco12345                        | Cisco IMM Transition |
| Nutanix Foundation Central 1.10 | 198.18.128.176    | admin / C1sco12345!                       | 1.10                 |
| Nutanix Foundation Central 2.2  | 198.18.128.181    | admin / C1sco12345!                       | 2.2                  |
| Intersight Assist               | 198.18.128.254    | admin / C1sco12345                        | Intersight           |
| Intersight pva                  | 198.18.128.253    | admin / C1sco12345                        | Intersight           |
| Intersight cva                  | 198.18.128.252    | admin / C1sco12345                        | Intersight           |
| VMware-ESXI                     | 198.18.128.250    | root / C1sco12345!                        | ESX 7.0              |
| ISM Prism Element               | 198.18.135.2      | admin / C1sco12345                        |                      |
| ISM Prism Element virtual IP    | 198.18.135.3      | admin / C1sco12345                        |                      |
| ISM Nutanix PC-2024             | 198.18.135.4      | admin / C1sco12345                        |                      |
| ISM Nutanix PC-2024 virtual IP  | 198.18.135.5      | admin / C1sco12345                        |                      |
| ISM IP Pool for cluster         | 198.18.135.10-100 |                                           |                      |


### Equipment – CPOC Lab

**Note**

Be sure to include the Software Version in this table.

| Quantity Required | Model          | Software Version |
|-------------------|----------------|------------------|
| 4                 | UCSC-C240-M7SN | 4.3(5.240021)    |
| 2                 | N9K-C9336C-FX2 | nxos10.4         |

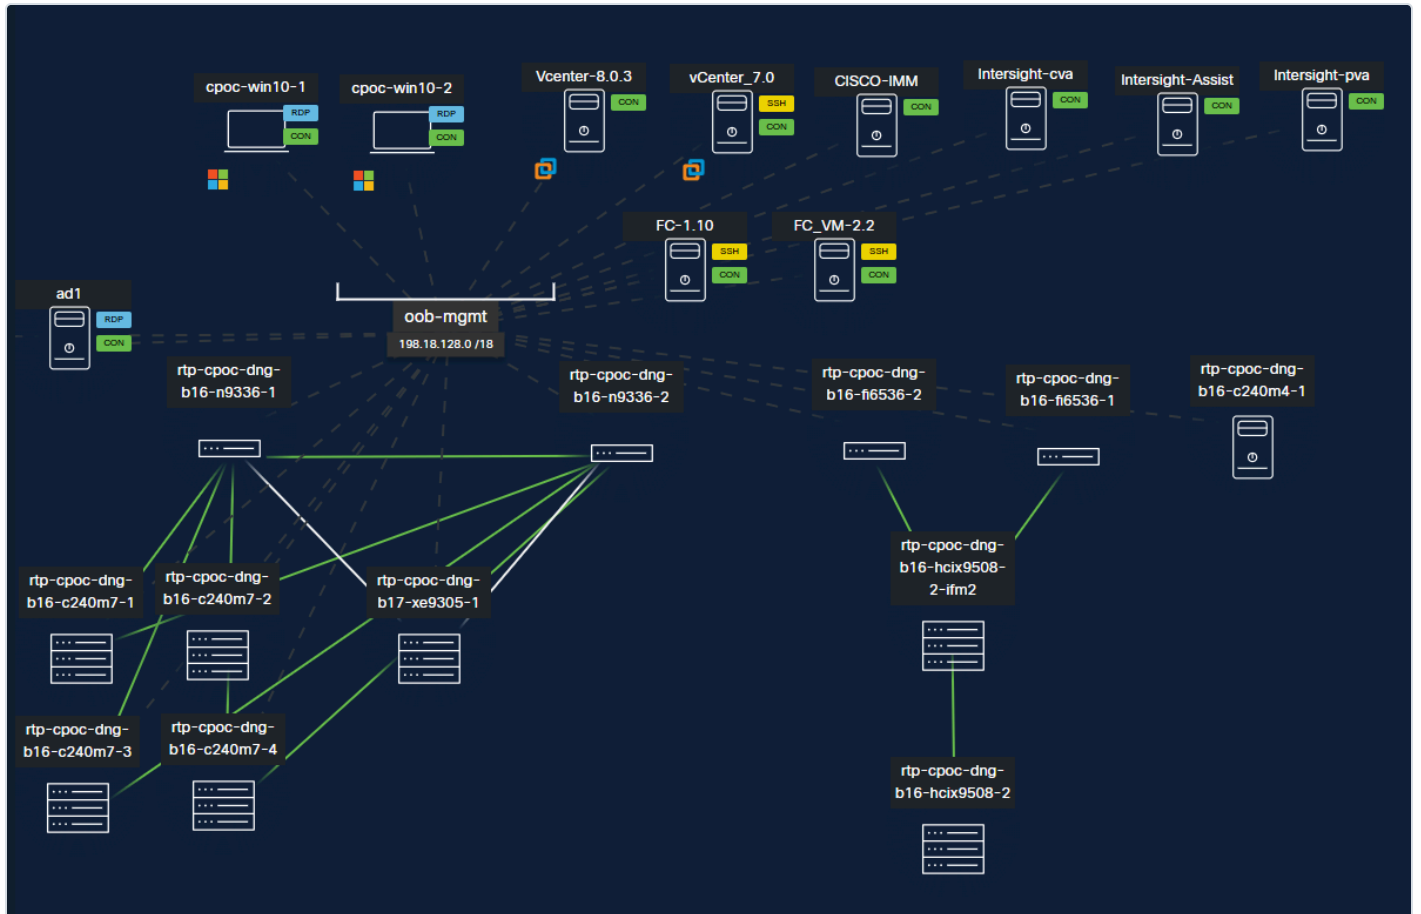**Design and Topology Diagram**

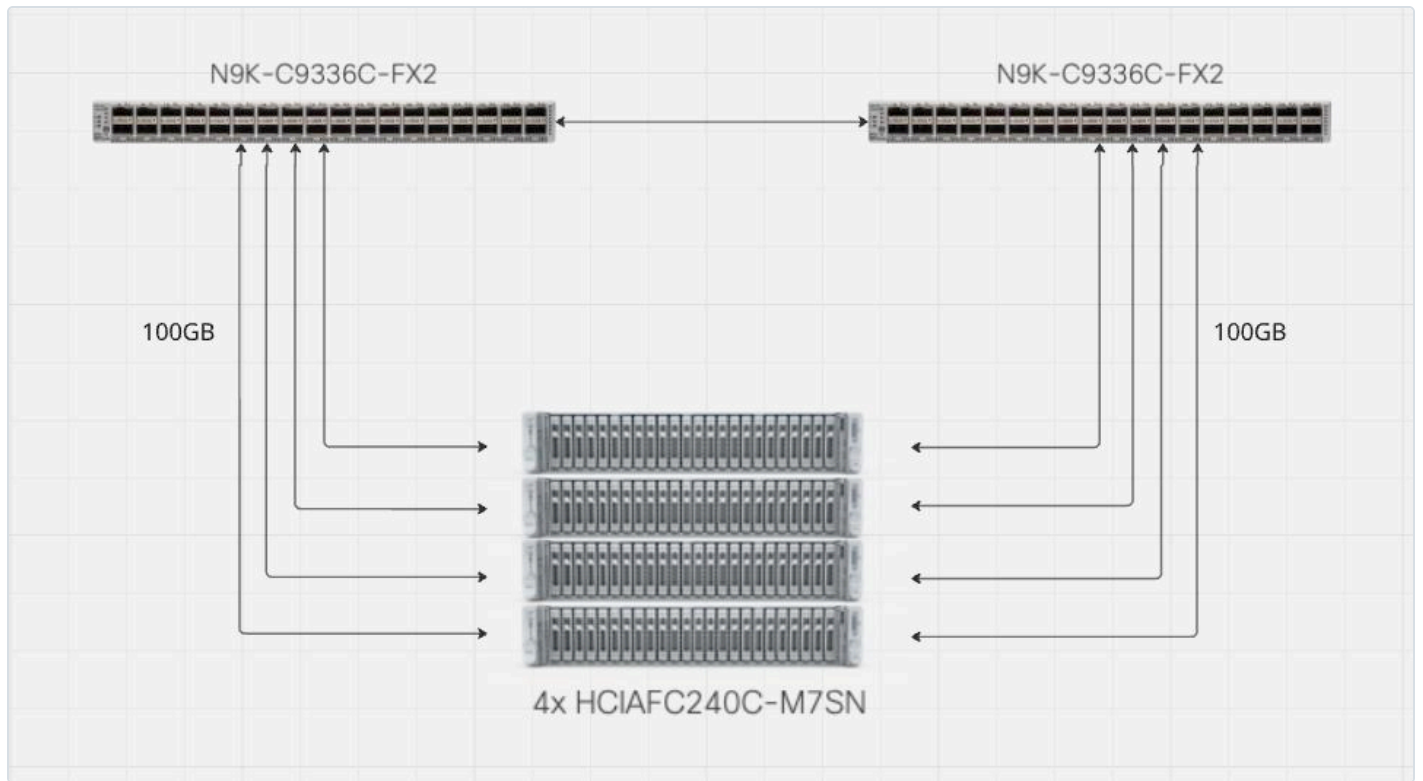

## Get Started

---


1. Initiate your dCloud session. [Show Me How](#)
2. For best performance, connect to the workstation with Cisco Secure Client VPN [Show Me How](#) and the local RDP client on your laptop.  
[Show Me How](#)
  - Workstation 1: 198.18.133.36, Username: cpoc, Password: cpoc123

Ready to go? Head to [Scenario 1](#).

## Scenario 1 · Claim Servers in Cisco Intersight

Cisco Intersight Claim Servers is a process used to register or "claim" physical infrastructure devices (like Cisco UCS servers or Nexus switches) to the Cisco Intersight platform. Intersight is a cloud-based infrastructure management tool that provides centralized monitoring, configuration, and lifecycle management for Cisco data center hardware.

1. Click on cpoc-win10-1 on the main topology, on the left side select remote access and then click on web RDP to log in

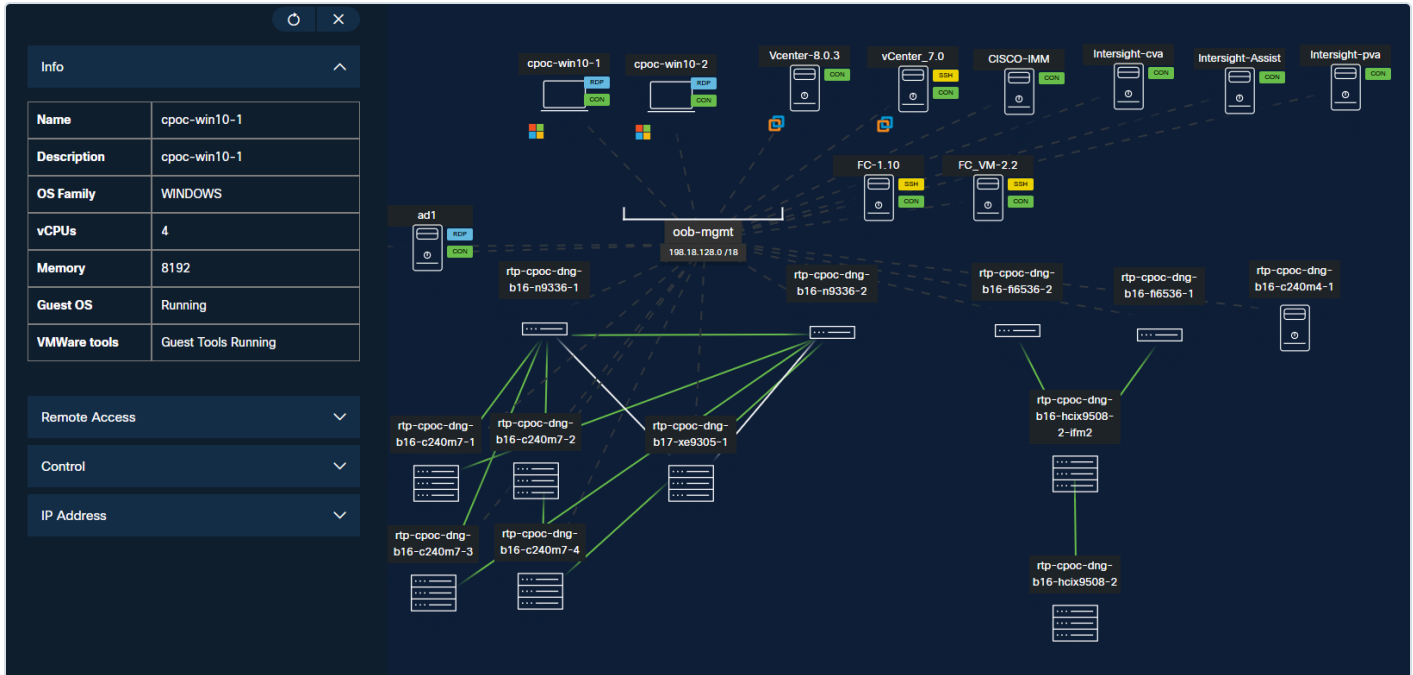


1. Once in the workstation open firefox browser




### Note

NOTE: Steps from 3 to 5 have already been performed, so these are just read and view steps.

1. Log in to the CIMC interface with a web browser using the IP address you set. Retrieve the Device ID and the Claim Code from the CIMC web UI, under Admin > Device Connector

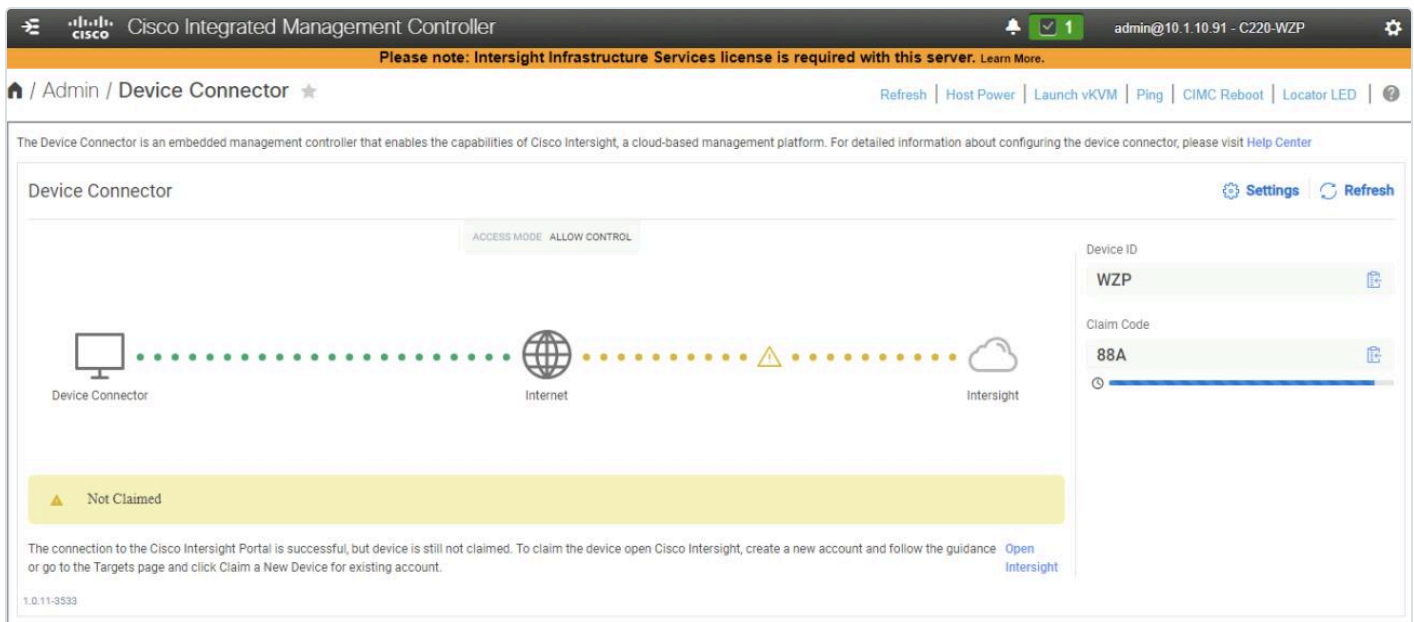

1. In Cisco Intersight, go to the System area, click on Targets, then Claim a New Target

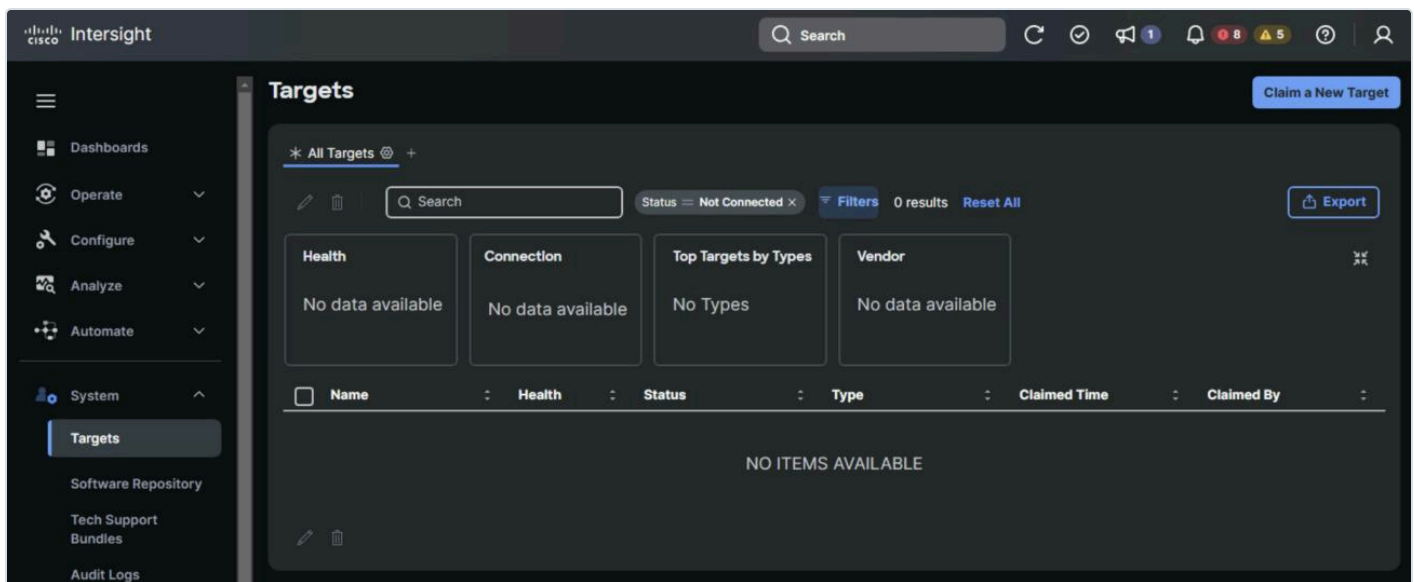

1. Select Cisco UCS Server (Standalone), then enter the Device ID and Claim Code, then click Claim. Repeat for all the servers to be used in your new cluster

## Select Target Type

### Filters

☒ Available for Claiming

### Categories

- ☒ All
- ☐ Cloud
- ☐ Compute / Fabric
- ☐ Hyperconverged
- ☐ Network
- ☐ Orchestrator
- ☐ Platform Services
- ☐ Security

Search

### Compute / Fabric

☒ Cisco UCS Server (Standalone)

Cisco UCS Domain (Intersight Managed)

Cisco UCS Domain (UCSM Managed)

Cisco UCS C890

Redfish Server

### Platform Services

Cisco Intersight Appliance

Cisco Assist

### Network

Cisco MDS Switch

Cisco Nexus Switch

Cisco Catalyst Center

Start

## Claim Cisco UCS Server (Standalone) Target

To claim your target, provide the Device ID, Claim Code and select the appropriate Resource Groups.

### General

Device ID \*

WZP27460GLC

Claim Code \*

88AE1D09B9F7

### Resource Groups



Select resource groups, if required. This is not mandatory, since by default, the claimed target will be added to "All" type resource groups.

0 items found

10

per page << < 0 of 0 > >>



Name

Usage

Description

NO ITEMS AVAILABLE

<< < 0 of 0 > >>

Back Cancel

Claim

**Note**

NOTE: When using the Cisco Intersight Virtual Appliance, the servers' CIMC IP addresses and their usernames and passwords are used to claim the servers instead of the Device IDs and Claim Codes.


1. On the Desktop click the Active.html icon to access the Intersight login, on the next page click on the Hyperlink "Click here to login"





1. In the resulting window click Go to intersight, this will do the auto-login

**Note**


If requires accessing Intersight from the cpoc-win10-2, copy the URL and paste on the second windows virtual machine, then click Go to Intersight

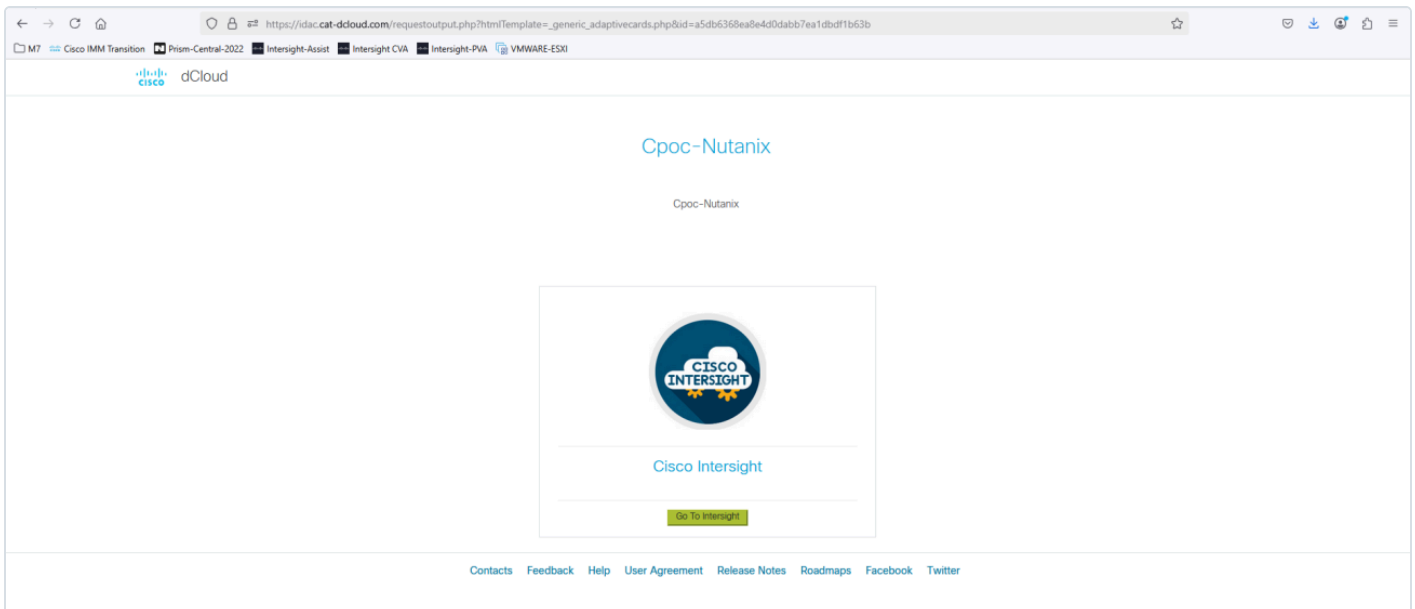

1. On the left page of Intersight, under Settings, click Keys
2. Click "Generate API key" using schema version 3 for use by Nutanix Foundation Central. Be sure to save the Secret Key to a file. It will only be shown once

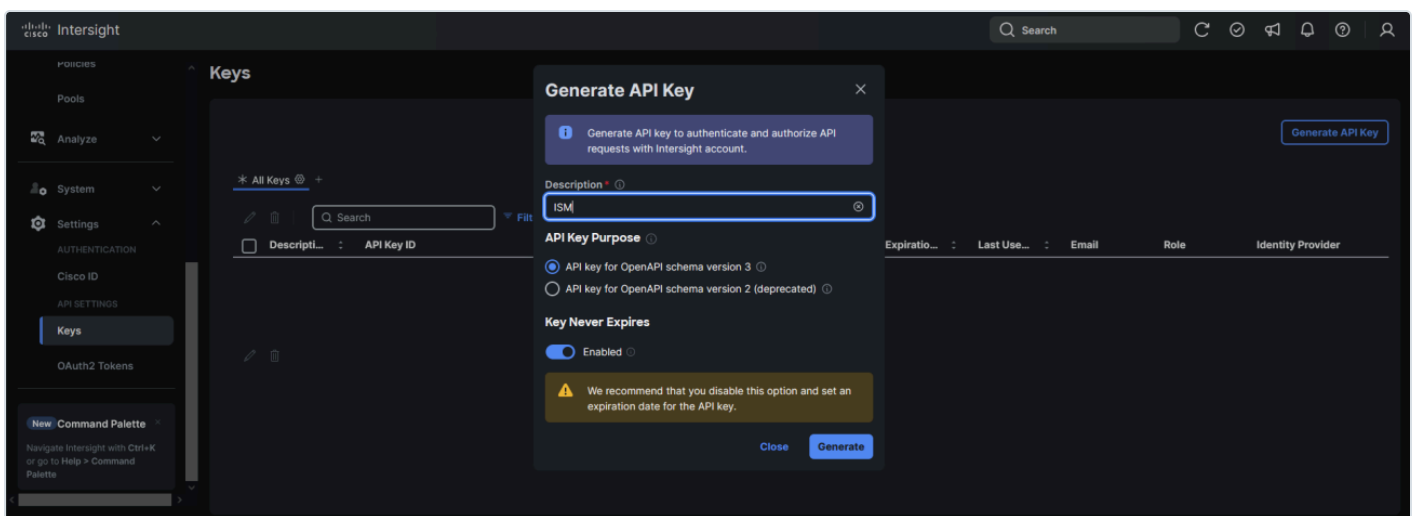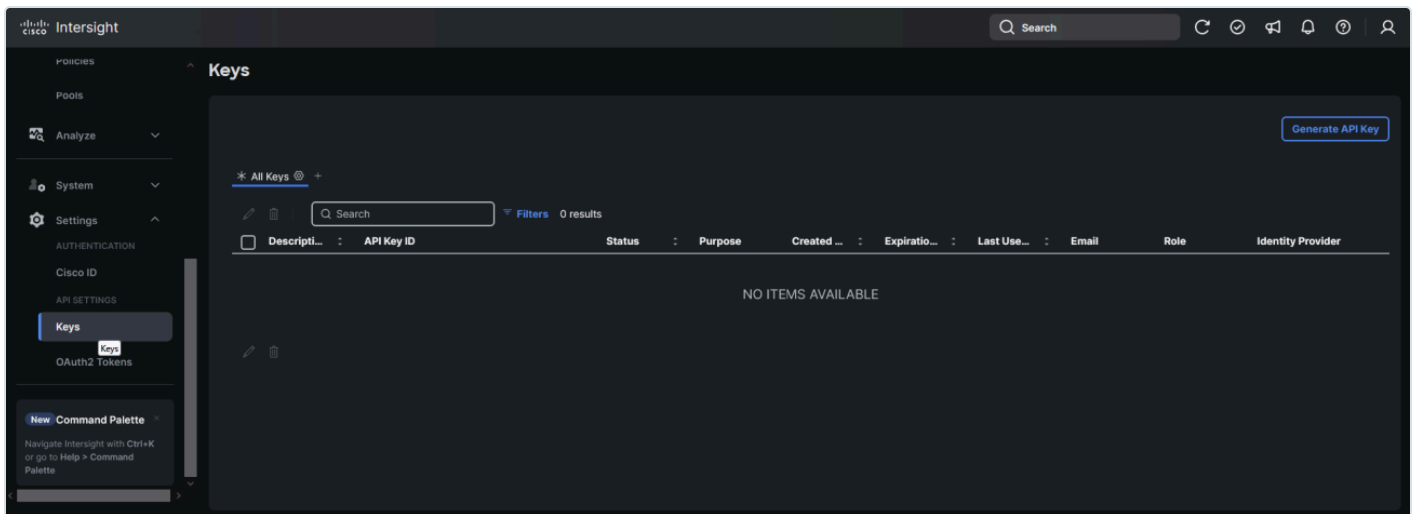


1. Save the API Key ID and Secret Key in the Desktop
2. Ensure your Cisco ID is granted access to download software from CCO. If not, click the Activate link and enter your CCO login credentials. This step is not required for an air-gapped Cisco Intersight private Virtual Appliance (PVA).

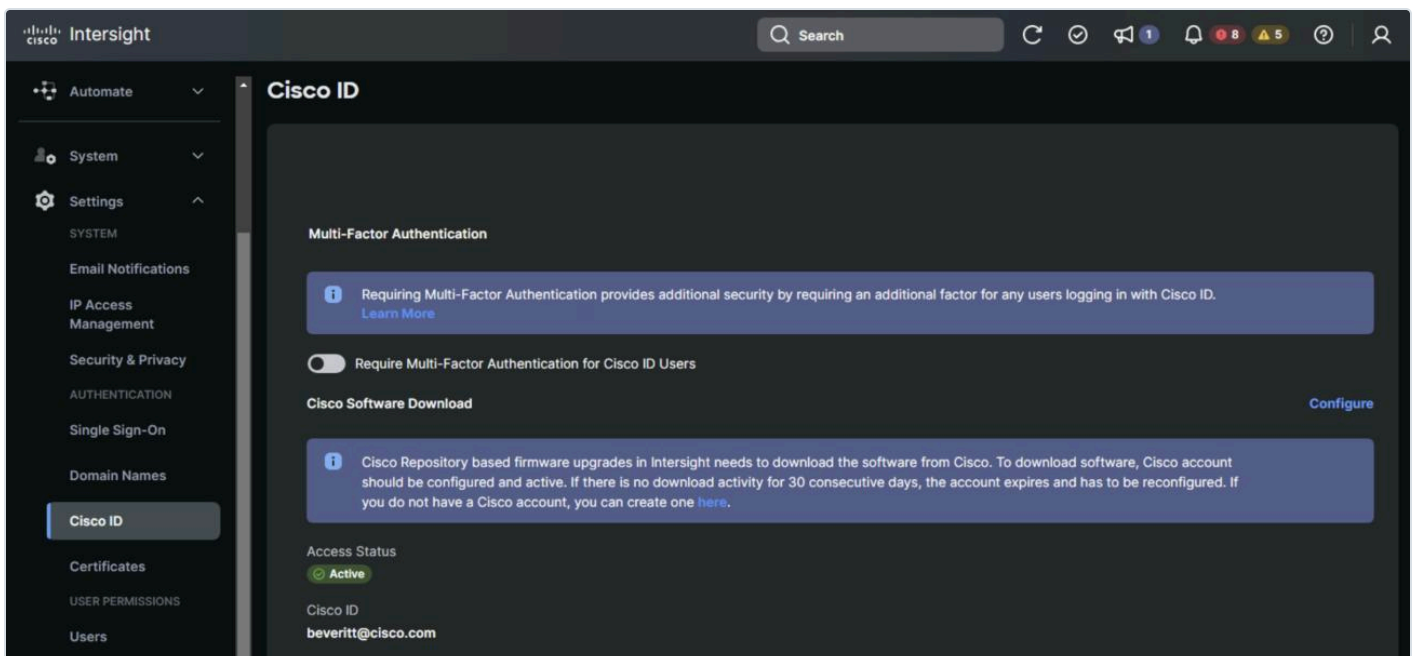


## Scenario 2 · Onboard Nodes in Foundation Central

On Firefox browser bookmarks click over Foundation-Central-1.10, the credentials are admin / C1sco12345!




On this lab we're using the Foundation Central 1.10 Go to Settings and click on Connect Hardware Provider

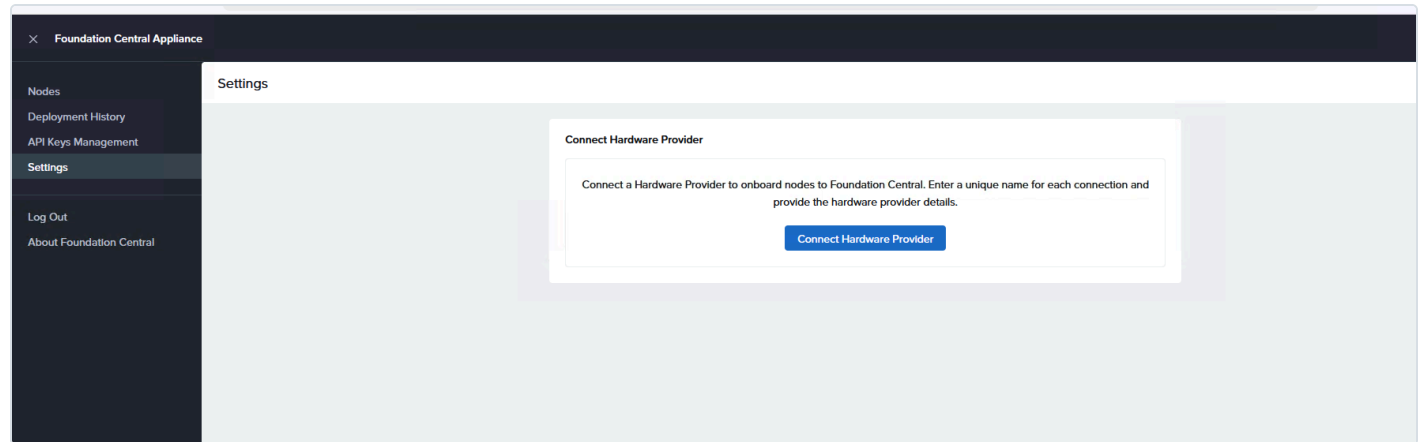


Fill in the required information


- Connection name= Intersight
- Hardware Provider = Cisco Intersight
- Intersight Deployment Type = SaaS
- Intersight Region & URL = North America
- Intersight API Key =
- Secret Key=

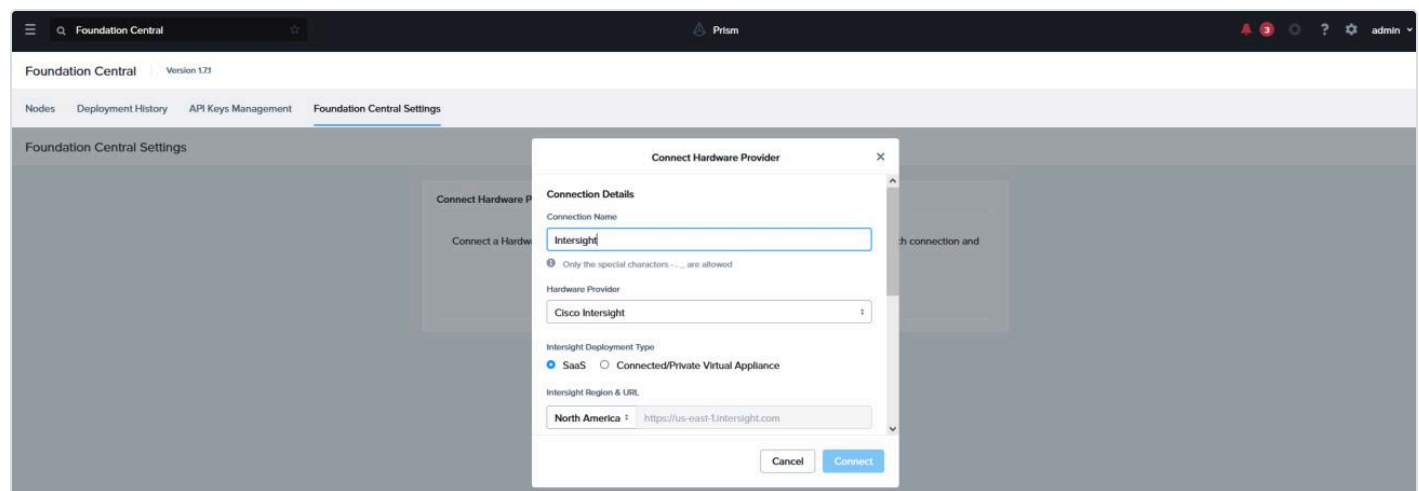


Prism Central will display a pop-up of "Connection has been saved"

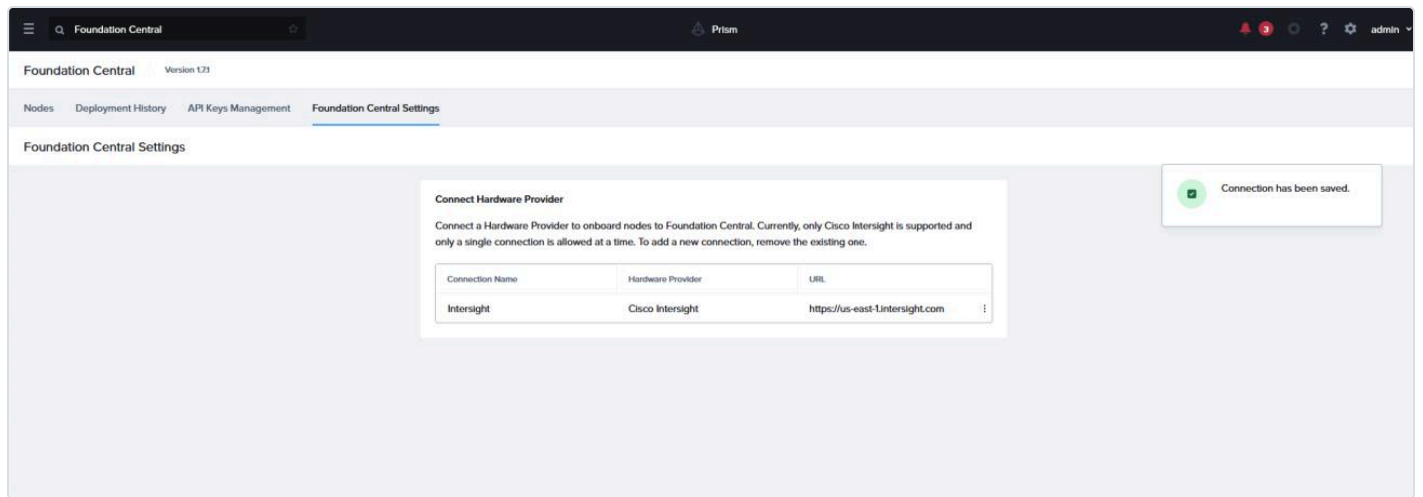

Then click on Nodes > Manually Onboarded and click Onboard Nodes

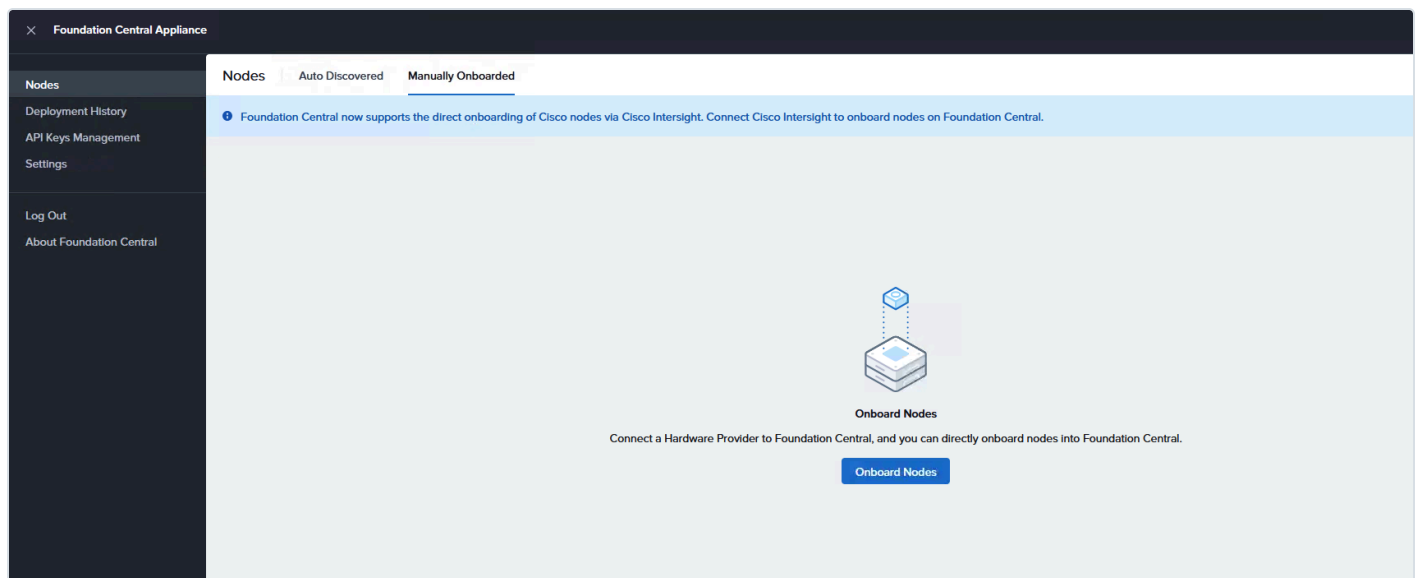

For node management mode, choose Intersight Standalone Mode then click Next

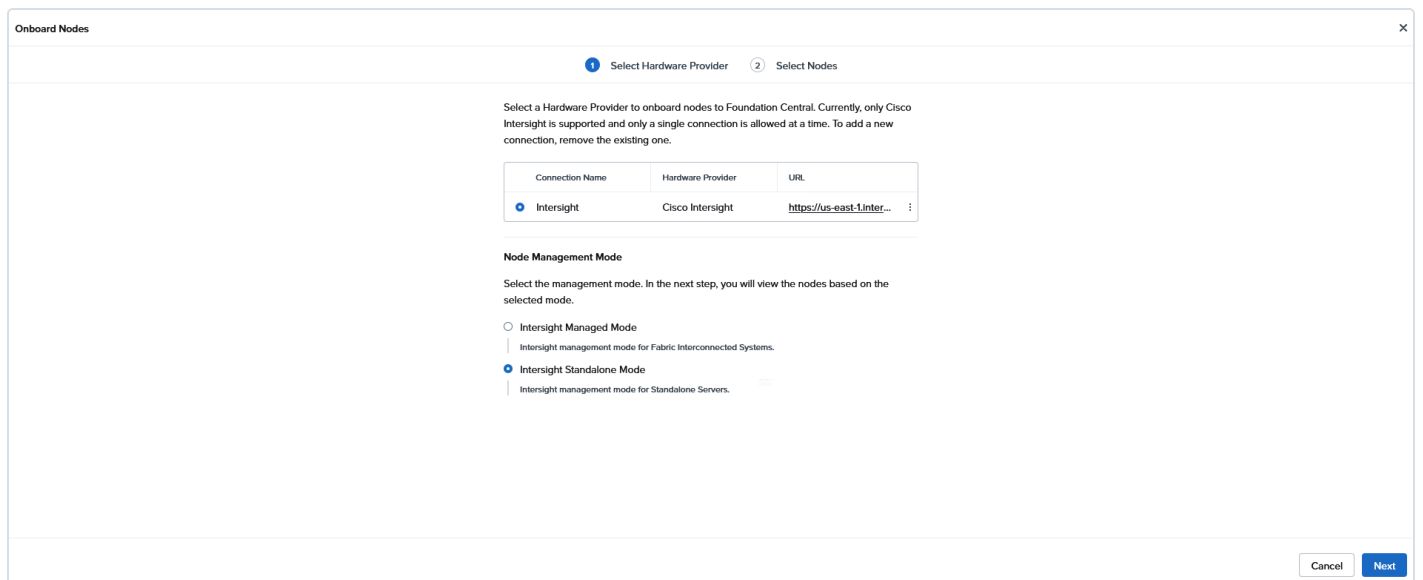

Select all Nodes and then click Onboard

Onboard Nodes

Select Hardware Provider

Select Nodes

Connection Name: Intersight

Management Mode: Intersight Standalone Mode

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click Refresh.

Type in a query

Modify Filters

4 selected out of 4 Cisco Nodes

1 - 4 of 4

Show: 20 rows

| <input checked="" type="checkbox"/> Node Serial | Name             | Model          | Block Serial | Domain | Classification | Intersight Organizations    | Intersight Tags | Memory (GB) | CPU (Core) |
|-------------------------------------------------|------------------|----------------|--------------|--------|----------------|-----------------------------|-----------------|-------------|------------|
| <input checked="" type="checkbox"/> WZP283891L1 | C240-WZP283891L1 | UCSC-C240-M75N | WZP283891L1  | -      | Nutanix        | default, Intersight-Nutanix | -               | 512         | 32         |
| <input checked="" type="checkbox"/> WZP283891LX | C240-WZP283891LX | UCSC-C240-M75N | WZP283891LX  | -      | Nutanix        | Intersight-Nutanix, default | -               | 512         | 32         |
| <input checked="" type="checkbox"/> WZP28400HKB | C240-WZP28400HKB | UCSC-C240-M75N | WZP28400HKB  | -      | Nutanix        | default, Intersight-Nutanix | -               | 512         | 32         |
| <input checked="" type="checkbox"/> WZP28400HKH | C240-WZP28400HKH | UCSC-C240-M75N | WZP28400HKH  | -      | Nutanix        | default, Intersight-Nutanix | -               | 512         | 32         |

Back

Cancel

Onboard Nodes

## Scenario 3 · Nutanix Cluster Deployment with AHV or ESX Hypervisor

### Note

Note In this scenario we're deploying a cluster of 3 nodes, but if want to deploy the cluster with 4 nodes it can be done, but will have to skip the scenario 4 cluster expansion

In Foundation Central under Nodes > Manually Onboarded, select the first 3 nodes would like to use for the cluster deployment and click on Create Cluster

The screenshot shows the 'Foundation Central Appliance' interface. On the left is a sidebar with navigation options: Nodes, Deployment History, API Keys Management, Settings, Log Out, and About Foundation Central. The main panel is titled 'Nodes' and has tabs for 'Auto Discovered' and 'Manually Onboarded'. The 'Manually Onboarded' tab is active, displaying a message: 'Foundation Central now supports the direct onboarding of Cisco nodes via Cisco Intersight. Connect Cisco Intersight to onboard nodes on Foundation Central.' Below this are buttons: 'Onboard Nodes', 'Prepare Nodes for Cluster', 'Create Cluster', and 'Delete Nodes'. A 'Group by Management Mode' dropdown is set to 'Management Mode'. A search bar contains 'Type in a query'. Below the search bar, it says '3 selected out of 4 grouped Cisco Nodes'. A table lists the nodes:

| Node Serial                                     | Name            | Node Status | Model          | Domain | Intersight Organizations | Intersight Tags | VIC Count | Classification | Onboarded On          | Last Refreshed    |
|-------------------------------------------------|-----------------|-------------|----------------|--------|--------------------------|-----------------|-----------|----------------|-----------------------|-------------------|
| <input checked="" type="checkbox"/> WZP28400HKH | C240-WZP2840... | Onboarded   | UCSC-C240-M7SN | -      | default, Intersight...   | -               | 1         | Nutanix        | Oct 1, 2026, 05:47 PM | Oct 1, 2026, 05:4 |
| <input checked="" type="checkbox"/> WZP283891LX | C240-WZP2838... | Onboarded   | UCSC-C240-M7SN | -      | Intersight-Nutani...     | -               | 1         | Nutanix        | Oct 1, 2026, 05:47 PM | Oct 1, 2026, 05:4 |
| <input checked="" type="checkbox"/> WZP28400HKB | C240-WZP2840... | Onboarded   | UCSC-C240-M7SN | -      | default, Intersight...   | -               | 1         | Nutanix        | Oct 1, 2026, 05:47 PM | Oct 1, 2026, 05:4 |
| <input type="checkbox"/> WZP283891L1            | C240-WZP2838... | Onboarded   | UCSC-C240-M7SN | -      | default, Intersight...   | -               | 1         | Nutanix        | Oct 1, 2026, 05:47 PM | Oct 1, 2026, 05:4 |

Enter the required information and click Next

- Name = ISM
- Intersight Organization= Intersight-Nutanix

The screenshot shows the 'Create Deployment' wizard with the following steps: 1 Cluster Details, 2 Network Settings, 3 Configure Nodes, 4 AOS / Hypervisor, 5 CVM Settings, 6 Security. The 'Cluster Details' step is active. It contains the following fields and options:

- Cluster Name:** ISM (Allowed characters: alphanumeric, dots, hyphens, underscores).
- Cluster Type:**
  - ☒ **Hyperconverged cluster**: All selected nodes can be used as hyperconverged, or as storage, or a mix of both. You will specify the role of each node in the Configure Nodes step.
  - ☐ **Compute cluster**: All selected nodes will be used as compute. Choose this option if you want to create a cluster that will have external storage.
- Cluster Replication Factor:**
  - Replication Factor: RF2 (RF3 is supported only if the cluster has 5+ nodes).
- Intersight Organization:** The organization is required to apply server profiles to nodes. Only nodes within the same organization can create a cluster. If the selected nodes have multiple common

At the bottom right are 'Cancel' and 'Next' buttons.

Fill in the networking information a. Gateway = 198.18.128.1 b. Netmask = 255.255.192.0 c. Cluster Virtual IP = 198.18.135.2 d. Host and CVM VLAN = 10 e. Click Next

Create Deployment

Cluster Details **2** Network Settings 3 Configure Nodes 4 AOS / Hypervisor 5 CVM Settings 6 Security

**Host and CVM Network**  
Nutanix requires all hosts and CVMs of a cluster to have static IP addresses in the same subnet.

Gateway of Every Host and CVM  
198.18.128.1

Netmask of Every Host and CVM  
255.255.192.0 (/18)

**Cluster Virtual IP (Optional)**  
This IP will always point to an online CVM, even in case of a node failure.

Cluster Virtual IP (Optional)  
198.18.135.2

**Host and CVM VLAN (Optional)**  
This input is optional for Intersight Standalone Mode.

⚠ If you will choose on Step 4 later to skip re-imaging the nodes, please ensure that the existing hypervisor is AHV 10.0 or above, or a hypervisor other than AHV. AHV only supports VLAN re-configuration with versions 10.0 or above.

Back Cancel Next

To complete the cluster Host IP, CVM IP and Host name use the image below as an example, you can choose any IP address from 198.18.135.10 up to 198.18.135.100

### Note

When adding the Host IP, skip one IP address between Host IP and CVM IP

Foundation Central Prism

Create Deployment

1 Cluster Details 2 Hypervisor / AOS 3 Network Settings 4 CVM Settings **5** Configure Nodes 6 Security

Enter the IP/Hostnames you want each node to have. [Reuse Existing](#) [Reorder](#) [Clear](#)


| Node Serial | Node Name        | Host IP<br><a href="#">Set Range</a> | CVM IP<br><a href="#">Set Range</a> | Hostname of Host<br><a href="#">Set Range</a> |
|-------------|------------------|--------------------------------------|-------------------------------------|-----------------------------------------------|
| WZP28400HKG | C240-WZP28400HKG | 198.18.135.20                        | 198.18.135.24                       | c240-node-1                                   |
| WZP28400HKB | C240-WZP28400HKB | 198.18.135.21                        | 198.18.135.25                       | c240-node-2                                   |
| WZP28389LX  | C240-WZP28389LX  | 198.18.135.22                        | 198.18.135.26                       | c240-node-3                                   |

Back Next

Login into Cisco IMM Transition tool, the access is located on the bookmark, In the Application click in Software Repository, you will see some folders for different versions, for this deployment, we offer the option to select one of the Nutanix AOS and the hypervisor which is supported by the servers, check the versions and select the one you like to deploy using AOS with AHV hypervisor or check below the options of VMware ESXi

### Note

Check the versions here <https://portal.nutanix.com/page/compatibility-interoperability-matrix>

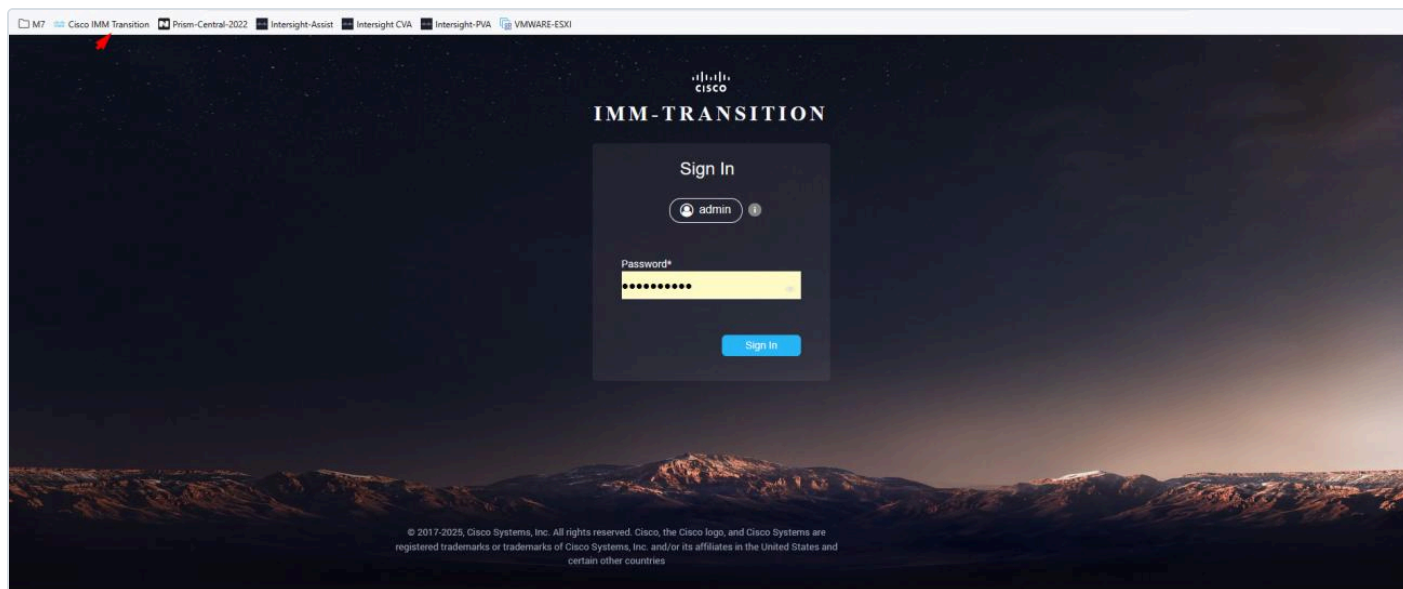

| Hardware Model ▾              | AOS Version ▾ | Recommended Hypervisor Version ▾ |
|-------------------------------|---------------|----------------------------------|
| 🔍 Type to filter...           |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.8.1         | AHV-20230302.101026              |

| Hardware Model ▾              | AOS Version ▾ | Recommended Hypervisor Version ▾ |
|-------------------------------|---------------|----------------------------------|
| 🔍 Type to filter...           |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.10          | AHV-20230302.102001              |

| Hardware Model ▾              | AOS Version ▾ | Recommended Hypervisor Version ▾ |
|-------------------------------|---------------|----------------------------------|
| 🔍 Type to filter...           |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 7.0           | AHV-10.0                         |

| All Versions                  |               |                                  |
|-------------------------------|---------------|----------------------------------|
| Hardware Model ▾              | AOS Version ▾ | Recommended Hypervisor Version ▾ |
| 🔍 Type to filter...           |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 7.0.0.5       | AHV-10.0.0.1                     |

| All Versions                  |               |                                  |
|-------------------------------|---------------|----------------------------------|
| Hardware Model ▾              | AOS Version ▾ | Recommended Hypervisor Version ▾ |
| 🔍 Type to filter...           |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 7.0.1.5       | AHV-10.0.1                       |

| Hardware Model ▾              | AOS Version ▾ | Recommended Hypervisor Version ▾ |
|-------------------------------|---------------|----------------------------------|
| 🔍 Type to filter...           |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.8.1         | ESXi 7.0 U3i Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.8.1         | ESXi 8.0 U2 Vendor               |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.8.1         | ESXi 7.0 U3o Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.8.1         | ESXi 8.0 U1a Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.8.1         | ESXi 7.0 U3s                     |
| HCIAF240C-M7SN/UCSC-C240-M7SN | 6.8.1         | ESXi 8.0 U2d                     |


| Hardware Model ▾                       | AOS Version ▾ | Recommended Hypervisor Version ▾ |
|----------------------------------------|---------------|----------------------------------|
| <input type="text"/> Type to filter... |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 6.10          | ESXi 8.0 U2 Vendor               |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 6.10          | ESXi 8.0 U1a Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 6.10          | ESXi 7.0 U3o Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 6.10          | ESXi 7.0 U3i Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 6.10          | ESXi 8.0 U3 Vendor               |

| Hardware Model ▾                       | AOS Version ▾ | Recommended Hypervisor Version |
|----------------------------------------|---------------|--------------------------------|
| <input type="text"/> Type to filter... |               |                                |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 8.0 U2 Vendor             |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 7.0 U3o Vendor            |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 8.0 U1a Vendor            |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 8.0 U3 Vendor             |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 7.0 U3i Vendor            |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 8.0 U3d                   |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 8.0 U2d                   |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0           | ESXi 7.0 U3s                   |

| All Versions                           |               |                                  |
|----------------------------------------|---------------|----------------------------------|
| Hardware Model ▾                       | AOS Version ▾ | Recommended Hypervisor Version ▾ |
| <input type="text"/> Type to filter... |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 8.0 U2 Vendor               |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 7.0 U3o Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 8.0 U3 Vendor               |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 8.0 U1a Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 7.0 U3i Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 8.0 U3d                     |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 8.0 U2d                     |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.0.5       | ESXi 7.0 U3s                     |

| All Versions                           |               |                                  |
|----------------------------------------|---------------|----------------------------------|
| Hardware Model ▾                       | AOS Version ▾ | Recommended Hypervisor Version ▾ |
| <input type="text"/> Type to filter... |               |                                  |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 8.0 U3 Vendor               |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 8.0 U2 Vendor               |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 7.0 U3o Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 8.0 U1a Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 7.0 U3i Vendor              |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 8.0 U3d                     |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 8.0 U2d                     |
| HCIAF240C-M7SN/UCSC-C240-M7SN          | 7.0.1.5       | ESXi 7.0 U3s                     |

Choose one of the options to deploy the new cluster, access the desired folder and copy the AOS link, click the Ellipsis at the right side, then select share link

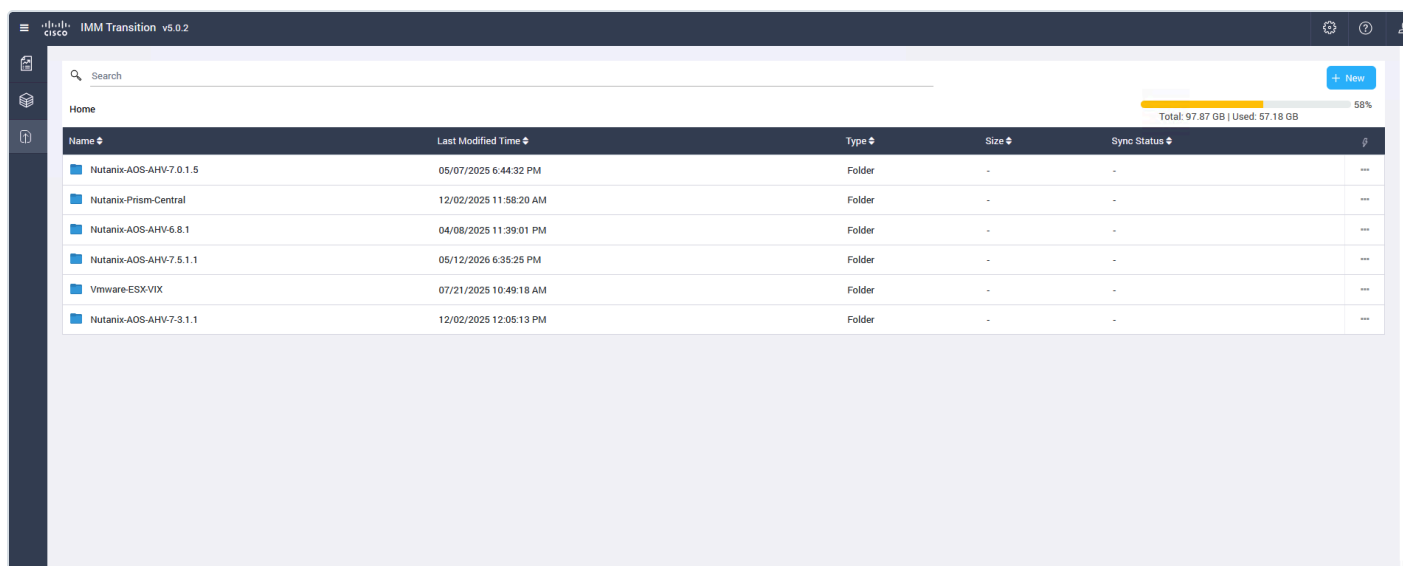

Return to Prism Central and paste the copied link into the AOS URL, then from the hypervisor option click on it and select AHV, then return to Cisco IMM to copy the link of AHV, select the ISO and click Next

**Create Deployment**

Cluster Details Network Settings Configure Nodes **AOS / Hypervisor** CVM Settings Security

AOS Metadata URL (Optional)  
[https://198.18.128.100/repo/Nutanix-AOS-AHV-7.5.1.1/generated-nutanix\\_installer\\_packa...](https://198.18.128.100/repo/Nutanix-AOS-AHV-7.5.1.1/generated-nutanix_installer_packa...)

**Hypervisor**  
 Hypervisor  
 AHV  
 Choose the hypervisor that you want to install on each node.

**AHV Download Details**  
☐ AHV is included in the above AOS package. I have verified and want to use it.  
 If you won't use the included hypervisor, provide the URL to download the hypervisor from, during imaging. The URL must be accessible to Foundation Central. Download hypervisor image from [Nutanix Portal](#). Foundation Central will verify the checksum of the existing file to avoid re-downloading.  
 Hypervisor Download URL  
[https://198.18.128.100/repo/Nutanix-AOS-AHV-7.5.1.1/AHV-DVD-x86\\_64-11.0.1.144.iso](https://198.18.128.100/repo/Nutanix-AOS-AHV-7.5.1.1/AHV-DVD-x86_64-11.0.1.144.iso)  
 Pre-computed SHA256 Checksum of Hypervisor Installer (Optional)  
 805a2757c89db764e77536120eeac2f445463e37d703546a385c78ccd8761f76

Back Cancel Next

CVM Settings uses the following information:

- Timezone= America/New\_York
- NTP=198.18.128.1
- DNS= 198.18.133.1
- Click Next

Create Deployment

Cluster Details Network Settings Configure Nodes AOS / Hypervisor **CVM Settings** Security

**CVM Timezone**

Doesn't apply to AHV and ESX hosts. Nutanix concluded these hypervisors don't support host timezone. The UTC offset numbers in the dropdown don't account for daylight saving. The numbers are only meant to help with visual navigation within the dropdown. Only the location name, not the offset number, of the timezone will be sent to the cluster formation process.

Timezone

America/New\_York

**NTP Servers of CVM and AHV (Optional)**

NTP servers will apply to host too only if AHV. For ESX, configure NTP servers in vCenter.

Nutanix recommends using at least 5 low-stratum NTP servers. Also, Windows-based servers or pool.ntp.org servers should be used with caution.

[View full documentation for more details](#)

NTP Servers of CVM and AHV (Optional)

198.18.128.1

**DNS Servers of CVM and AHV (Optional)**

DNS servers will apply to host too only if AHV. For ESX, configure DNS servers in vCenter.

DNS Servers of CVM and AHV (Optional)

198.18.133.1

Back Cancel Next

For the Foundation Central API Key, click the "+ Generate API key", add a name, select the new API from the drop-down menu and click Submit

1 Cluster Details 2 Hypervisor / AOS 3 Network Settings 4 CVM Settings 5 Configure Nodes **6 Security**

**Foundation Central API Key**

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key + Generate API Key

Intersight

Back Submit

The cluster deployment begins and takes approximately 1h15m to complete

Foundation Central Prism

### Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

ISM Deployment in progress Start Date and Time: 5/9/2025, 08:09 PM [About](#)

Phase 1A: Node Preparation 11% 3 nodes in progress Phase 1B: Node Imaging 0% Not started Phase 2: Cluster Formation 0% Waiting for Phase 1 to finish

#### Cluster Details

|                                     |                                                         |                                 |                                                                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------------|---------------------------------------------------------|---------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Redundancy Factor<br>2              | Host CVM Subnet<br>198.18.128.1 / 255.255.192.0         | CVM NTP Servers<br>198.18.128.1 | AOS Installer URL:<br><a href="https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b5f8d7e72ae-x86_64.largz">https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b5f8d7e72ae-x86_64.largz</a> |
| Cluster External IP<br>198.18.135.2 | Intersight Organization<br>Intersight-Nutanix           | CVM DNS Servers<br>198.18.133.1 | Hypervisor Installer URL:<br><a href="https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-1.iso">https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-1.iso</a>                                                                                                                                                          |
| Cluster VLAN ID<br>10               | Deployment UUID<br>738f3815-214e-4c16-7a7c-0073e47952e4 | LACP<br>No                      |                                                                                                                                                                                                                                                                                                                                                                                                 |

#### 3 Nodes In This Deployment

[View Original Configuration](#)

| Node Serial | Block Serial | Position | Progress of Phase 1 | Status                                                                | Host IP       | CVM IP        | Host Type | Host Name   |
|-------------|--------------|----------|---------------------|-----------------------------------------------------------------------|---------------|---------------|-----------|-------------|
| WZP283891LX | WZP283891LX  | A        | 4%                  | [Node:Configuration] Deploying and activating the profile of the Node | 198.18.135.20 | 198.18.135.24 | AHV       | c240-node-1 |
| WZP28400HKB | WZP28400HKB  | A        | 4%                  | [Node:Configuration] Deploying and activating the profile of the Node | 198.18.135.21 | 198.18.135.25 | AHV       | c240-node-2 |
| WZP28400HKH | WZP28400HKH  | A        | 4%                  | [Node:Configuration] Deploying and activating the profile of the Node | 198.18.135.22 | 198.18.135.26 | AHV       | c240-node-3 |

Return to Intersight, under Operate select Servers to check the Server Profile provisioning progress.

Cloud Control CPOC-Nutanix Home Intersight

### Servers

\* All Servers 16 results Export

Health: 16 Healthy 16 Power: Off 9 On 7 HCL Status: Incomplete 4 Not Evaluated 12 Custom HCL Conformance: Non Conforming 5... 16 Bundle Version: 6.0(1.252114) 4 6.0(1.250192) 4 6.0(2.260042) 4 5.4(0.280001) 3 6.0(1.250122) 1 Utility Storage: No 12 Yes 4 Firmware Version: 6.0(1.252114) 4 6.0(1.250192) 4 6.0(2.260042) 4 5.4(0.280001) 3 6.0(1.250122) 1 Models: 16

| Name                        | Health  | Model            | CPU Capac... | Memory Capac... | UCS Domain              | Server Profile   | Bun             |
|-----------------------------|---------|------------------|--------------|-----------------|-------------------------|------------------|-----------------|
| C240-WZP283891L1            | Healthy | UCSC-C240-M7SN   | 115.2        | 512.0           |                         | 6.0(1.252114) 4  | ...             |
| C240-WZP283891LX            | Healthy | UCSC-C240-M7SN   | 115.2        | 512.0           |                         | ntnx_WZP28389... | 6.0(1.252114) 4 |
| C240-WZP28400HKB            | Healthy | UCSC-C240-M7SN   | 115.2        | 512.0           |                         | ntnx_WZP2840...  | 6.0(1.250192) 4 |
| C240-WZP28400HKH            | Healthy | UCSC-C240-M7SN   | 115.2        | 512.0           |                         | ntnx_WZP2840...  | 6.0(1.250192) 4 |
| rtp-cpoc-dng-b16-fi6536-1-1 | Healthy | UCSX-210C-M7     | 115.2        | 256.0           | rtp-cpoc-dng-b16-fi6536 | 5.4(0.280001) 3  | ...             |
| rtp-cpoc-dng-b16-fi6536-1-2 | Healthy | UCSX-210C-M7     | 115.2        | 256.0           | rtp-cpoc-dng-b16-fi6536 | 6.0(1.250122) 1  | ...             |
| rtp-cpoc-dng-b16-fi6536-1-3 | Healthy | UCSX-210C-M7     | 115.2        | 256.0           | rtp-cpoc-dng-b16-fi6536 | 5.4(0.280001) 3  | ...             |
| rtp-cpoc-dng-b16-fi6536-1-4 | Healthy | UCSX-215C-M8     | 350.4        | 768.0           | rtp-cpoc-dng-b16-fi6536 | 6.0(1.250122) 1  | ...             |
| rtp-cpoc-dng-b16-fi6536-1-5 | Healthy | UCSX-215C-M8     | 350.4        | 768.0           | rtp-cpoc-dng-b16-fi6536 | 6.0(1.250122) 1  | ...             |
| rtp-cpoc-dng-b16-fi6536-1-6 | Healthy | UCSX-215C-M8     | 350.4        | 768.0           | rtp-cpoc-dng-b16-fi6536 | 6.0(1.250122) 1  | ...             |
| rtp-cpoc-dng-b16-fi6536-1-7 | Healthy | UCSX-210C-M7     | 115.2        | 256.0           | rtp-cpoc-dng-b16-fi6536 | 6.0(1.250122) 1  | ...             |
| rtp-cpoc-dng-b16-fi6536-1-8 | Healthy | UCSX-215C-M8     | 350.4        | 768.0           | rtp-cpoc-dng-b16-fi6536 | 6.0(1.250122) 1  | ...             |
| rtp-cpoc-dng-b17-xe9305-1-1 | Healthy | UCSXE-130C-M8-32 | 64.0         | 256.0           |                         | 6.0(1.250122) 1  | ...             |

Let's explore Intersight, under Configure select Profiles > UCS Server Profiles. Note the profiles are being created/configured under Activating status.

The screenshot shows the 'Profiles' section in Cisco UCS Manager, specifically the 'UCS Server Profiles' tab. The interface includes a sidebar with navigation options like Dashboards, Operate, Servers, Chassis, Fabric Interconnects, HyperFlex Clusters, Configure, Profiles, Templates, Policies, and Pools. The main content area displays a list of UCS Server Profiles. A summary card shows 'Activating 3' profiles. The table below lists the profiles with columns for Name, Status, Target Platform, UCS Server Template, Server, and Last Update.

| Name                         | Status     | Target Platform         | UCS Server Template | Server           | Last Update      |
|------------------------------|------------|-------------------------|---------------------|------------------|------------------|
| ntnx_WZP28400HKH_bd237b0...  | Activating | UCS Server (Standalone) |                     | C240-WZP28400HKH | in a few seconds |
| ntnx_WZP28400HKH_bd237b0...  | Activating | UCS Server (Standalone) |                     | C240-WZP28400HKH | in a few seconds |
| ntnx_WZP283891LX_bd237b08... | Activating | UCS Server (Standalone) |                     | C240-WZP283891LX | in a few seconds |

In Configure > Policies, note all the UCS Server policies created as part of the automated process between Foundation Central and Intersight.

The screenshot shows the 'Policies' section in Cisco Intersight. The interface includes a sidebar with navigation options like Dashboards, Operate, Servers, Chassis, Unified Edge, Fabric Interconnects, Virtualization, Integrated Systems, Configure, Policies, Templates, Pools, Alarm Rules, Power Groups, and Workloads. The main content area displays a list of policies for 'UCS-Domain'. A summary card shows '44' policies, with 'Used 33' and 'Indirect 11'. The table below lists the policies with columns for Name, Platform Type, Type, Usage, and Last Update.

| Name                                 | Platform Type | Type                  | Usage    | Last Update         |
|--------------------------------------|---------------|-----------------------|----------|---------------------|
| ntnx_iol_JSM_f54d17f3-cbf5-44e0-6... | UCS Server    | IPMI Over LAN         | Used - 3 | Oct 2, 2026 9:16 AM |
| ntnx_nvme-bios_JSM_f54d17f3-cbf5...  | UCS Server    | BIOS                  | Used - 3 | Oct 2, 2026 9:16 AM |
| ntnx_ac-cisco_WZP283891LX_f54d1...   | UCS Server    | Adapter Configuration | Used - 1 | Oct 2, 2026 9:16 AM |
| ntnx_m2-raid_WZP283891LX_f54d17...   | UCS Server    | Boot Order            | Used - 1 | Oct 2, 2026 9:16 AM |
| ntnx_scp-cisco_WZP283891LX_f54d...   | UCS Server    | SAN Connectivity      | Used - 1 | Oct 2, 2026 9:16 AM |
| ntnx_kvm_JSM_f54d17f3-cbf5-44e0-...  | UCS Server    | Virtual KVM           | Used - 3 | Oct 2, 2026 9:16 AM |
| ntnx_firmware_WZP283891LX_f54d1...   | UCS Server    | Firmware              | Used - 1 | Oct 2, 2026 9:16 AM |
| ntnx_sol_JSM_f54d17f3-cbf5-44e0-6... | UCS Server    | Serial Over LAN       | Used - 3 | Oct 2, 2026 9:16 AM |
| ntnx_m2-slot1_JSM_f54d17f3-cbf5-4... | UCS Server    | Storage               | Used - 3 | Oct 2, 2026 9:16 AM |
| ntnx_jop-cisco_WZP283891LX_f54d1...  | UCS Server    | LAN Connectivity      | Used - 1 | Oct 2, 2026 9:16 AM |
| ntnx_ac-cisco_WZP28400HKH_f54d...    | UCS Server    | Adapter Configuration | Used - 1 | Oct 2, 2026 9:16 AM |

At the top right of the screen, click the Requests icon to monitor the undergoing tasks.

The screenshot shows the 'Requests' section in Cisco Intersight. The interface includes a sidebar with navigation options like Dashboards, Operate, Servers, Chassis, Unified Edge, Fabric Interconnects, Virtualization, Integrated Systems, Configure, Profiles, Policies, Templates, Pools, Alarm Rules, Power Groups, and Workloads. The main content area displays a list of requests. A summary card shows '3' requests, with 'In Progress 3' and 'Execute 3'. The table below lists the requests with columns for Name, Status, Initiator, Target Type, Target Name, Start Time, Duration, ID, and Execution.

| Name              | Status          | Initiator                    | Target Type | Target Name    | Start Time     | Duration  | ID               | Execution |
|-------------------|-----------------|------------------------------|-------------|----------------|----------------|-----------|------------------|-----------|
| Deploy Server ... | In Progress 50% | intuser-60811@cat-dcloud.com | Rack Server | C240-WZP283... | 14 minutes ago | 13 m 40 s | 6abfcb06896f...  | Execute   |
| Deploy Server ... | In Progress 50% | intuser-60811@cat-dcloud.com | Rack Server | C240-WZP284... | 14 minutes ago | 13 m 50 s | 6abfcafc696f6... | Execute   |
| Deploy Server ... | In Progress 50% | intuser-60811@cat-dcloud.com | Rack Server | C240-WZP284... | 14 minutes ago | 13 m 50 s | 6abfcafc696f6... | Execute   |

Click on any of the tasks to check the progress of the server configuration


The screenshot shows the Cisco Cloud Control interface. On the left is a navigation menu with options like Dashboards, Operate, Servers, Chassis, Unified Edge, Fabric Interconnects, Virtualization, Integrated Systems, Configure, Profiles, Templates, Policies, Pools, Alarm Rules, Power Groups, and Workloads. The main area is titled 'Servers' and shows a 'Health' status of 16 Healthy. A 'Deploy Server Profile' task is highlighted, showing details such as Name, ID, Target Type, Target Name, Source Type, Source Name, Initiator, and Start Time. An 'Execution Flow' pane on the right shows a progress bar at 59% and a list of tasks including 'Deploy Firmware Policy', 'Deploy Storage Policy', 'Deploy Boot Order Policy', 'Deploy SAN Connectivity Policy', 'Deploy LAN Connectivity Policy', 'Deploy Adapter Configuration Policy', 'Deploy BIOS Policy', 'Deploy IPMI Over LAN Policy', 'Deploy Virtual KVM Policy', 'Deploy Serial Over LAN Policy', 'Validate Storage Policy', 'Validate BIOS Policy', 'Validate Serial Over LAN Policy', and 'Validate SAN Connectivity Policy'.

Return to Foundation Central to monitor the cluster deployment progress. Once the cluster deployment is completed, click “Open Prism Element”

The screenshot shows the Foundation Central interface. At the top, it says 'It may take up to 15 minutes for a deployment progress to start being reported. Why?'. Below this, there's a summary of the deployment: 'Phase 1A: Node Preparation' (100% complete, 3 nodes prepared), 'Phase 1B: Node Imaging' (100% complete, 3 nodes finished), and 'Phase 2: Cluster Formation' (100% complete, All operations completed successfully). A 'Cluster Details' section provides information about the cluster, including Redundancy Factor, Host CVM Subnet, CVM NTP Servers, AOS Installer URL, Cluster External IP, Intersight Organization, CVM DNS Servers, Deployment UUID, Hypervisor ID, and LACP. A table titled '3 Nodes In This Deployment' shows the progress of each node. The table has columns for Node Serial, Block Serial, Position, Progress of Phase 1, Status, Host IP, CVM IP, Host Type, and Host Name.

| Node Serial | Block Serial | Position | Progress of Phase 1 | Status                                | Host IP       | CVM IP        | Host Type | Host Name   |
|-------------|--------------|----------|---------------------|---------------------------------------|---------------|---------------|-----------|-------------|
| WZP283891LX | WZP283891LX  | A        | Done                | All operations completed successfully | 198.18.135.22 | 198.18.135.26 | AHV       | c240-node-3 |
| WZP28400HKB | WZP28400HKB  | A        | Done                | All operations completed successfully | 198.18.135.21 | 198.18.135.25 | AHV       | c240-node-2 |
| WZP28400KH  | WZP28400KH   | A        | Done                | All operations completed successfully | 198.18.135.20 | 198.18.135.24 | AHV       | c240-node-1 |

On Prism Element UI, login with user “admin” (password: Nutanix/4u) and change the password to C1sco12345!

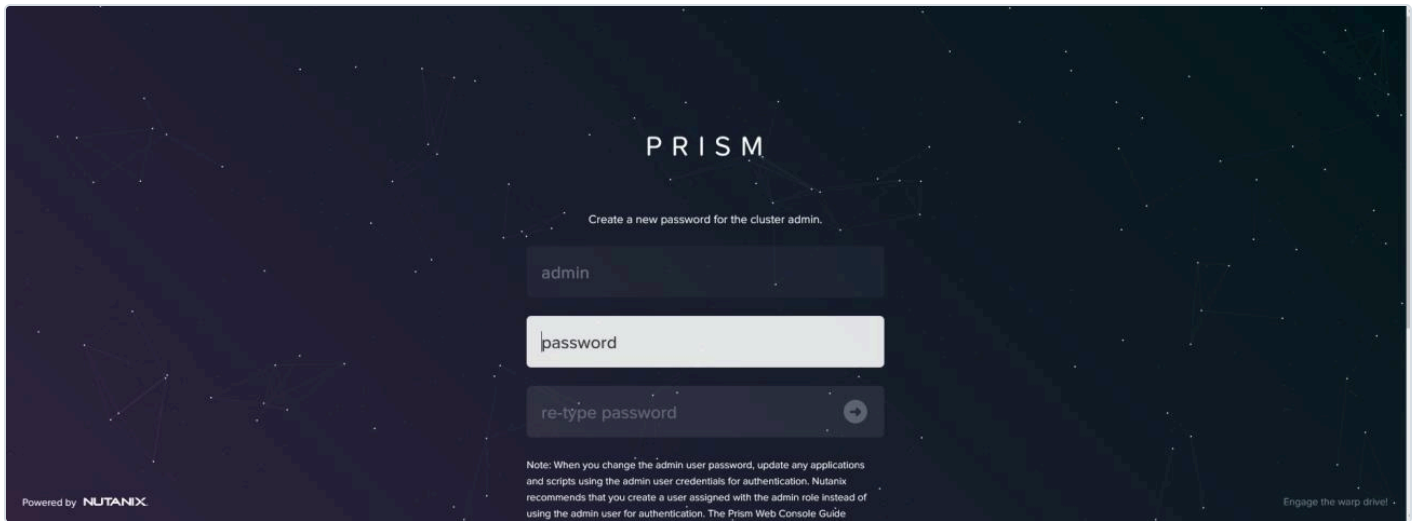

The image shows the PRISM web interface for changing the cluster admin password. The background is dark blue with a network diagram pattern. The word "PRISM" is at the top center. Below it, the text "Create a new password for the cluster admin." is displayed. There are three input fields: "admin" (username), "password" (new password), and "re-type password" (confirm password). A "Next" button with a right arrow is to the right of the re-type password field. Below the fields, a note states: "Note: When you change the admin user password, update any applications and scripts using the admin user credentials for authentication. Nutanix recommends that you create a user assigned with the admin role instead of using the admin user for authentication. The Prism Web Console Guide". At the bottom left, it says "Powered by NUTANIX". At the bottom right, it says "Engage the warp drive!" with a right arrow.

PRISM

Create a new password for the cluster admin.

admin

password


re-type password

Note: When you change the admin user password, update any applications and scripts using the admin user credentials for authentication. Nutanix recommends that you create a user assigned with the admin role instead of using the admin user for authentication. The Prism Web Console Guide

Powered by NUTANIX

Engage the warp drive!

After the password has been successfully changed, login with user admin and password C1sco12345!

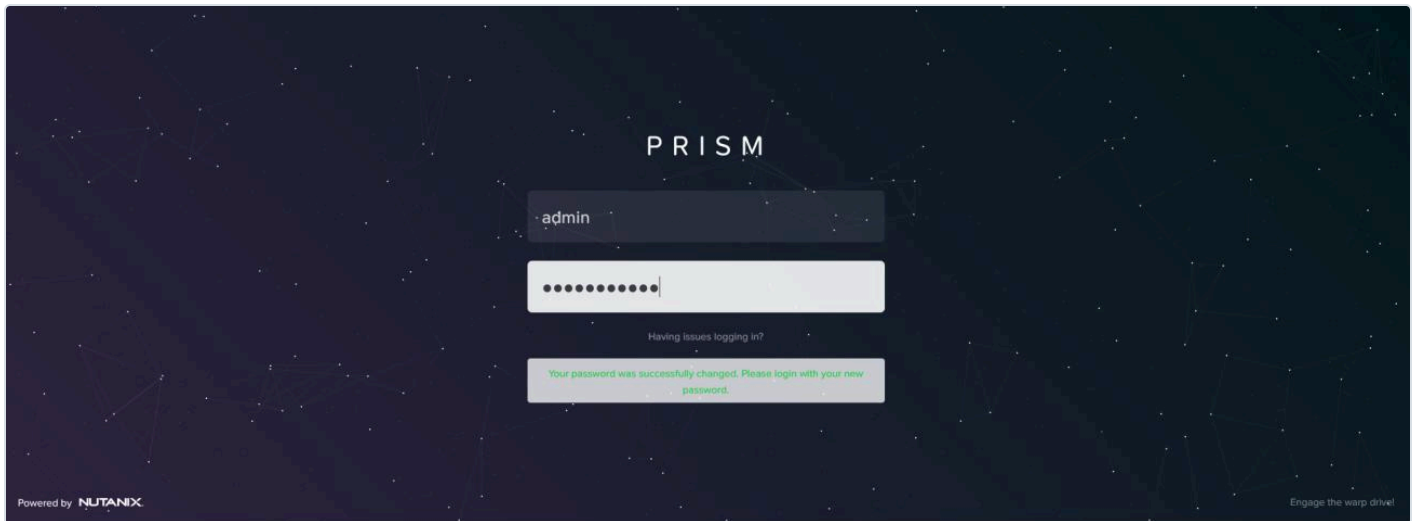

The image shows the PRISM web interface for logging in. The background is dark blue with a network diagram pattern. The word "PRISM" is at the top center. Below it, there are two input fields: "admin" (username) and a password field with masked characters. A "Login" button is to the right of the password field. Below the fields, the text "Having issues logging in?" is displayed. A green message box states: "Your password was successfully changed. Please login with your new password." At the bottom left, it says "Powered by NUTANIX". At the bottom right, it says "Engage the warp drive!" with a right arrow.

PRISM

admin

.....

Having issues logging in?

Your password was successfully changed. Please login with your new password.

Powered by NUTANIX

Engage the warp drive!

Complete the Nutanix EULA,

- Name = Cpoc
- Company = Cisco
- Job title = ISM
- Check the box and click accept and continue

## Nutanix End User License Agreement (EULA) and Terms of Use

Nutanix is referred to in this Agreement as "Us", "We" or "Our" and Your organization is referred to as "You" or "Your". This Nutanix License and Services Agreement ("Agreement") governs Your use of any Products (as defined below) and becomes effective when You (a) issue a purchase order for the Products; (b) execute or accept this Agreement, or (c) access, download, install, or use the Software or Cloud Services. This Agreement is entered into between You and Nutanix Inc., located at 1740 Technology Dr. Ste. 150, San Jose, CA 95110, United States, if You are contracting in the Americas, or Nutanix Netherlands B.V., located at Mercuriusplein 1, 2132 HA Hoofddorp, The Netherlands, if You are contracting anywhere else in the world or both if applicable. You represent and warrant that You have the authority to enter into this Agreement on behalf of Your organization.

**1. Definitions.**

1.1 "Affiliates" means any corporation or other business entity which controls, is controlled by or is under common control through the ownership of more than fifty percent (50%) of the

CPOC

Chico

ISM

☒ I have read and agree to the terms and conditions.

Decline Accept

Keep the Pulse option by default, click Continue

## Pulse will be enabled

Pulse continuously monitors cluster health and periodically sends usage data to Nutanix's cloud based analytics engine. It automatically takes action when a problem has occurred, or is about to occur. [Learn More](#)


Nutanix strongly recommends not disabling this feature to improve your support experience in the event of a failure or critical system issue.

If you disable Pulse, Nutanix will not be able to proactively reach out to you in the event of failures, and your issue resolution time may increase significantly.


☒ **Disable Pulse. (not recommended)**  
Pulse will not be enabled on this cluster.

Continue


You should be taken to the main dashboard

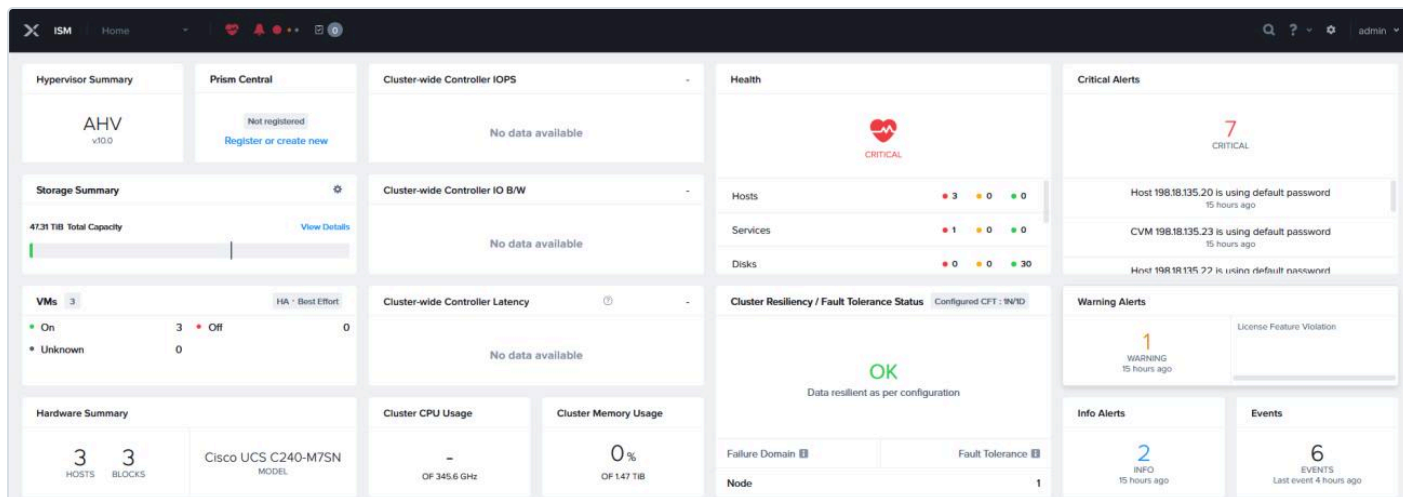

Click the cluster name on the top left ("ISM") next to the X icon, add 198.18.135.3 in the Data Service IP field and click Save

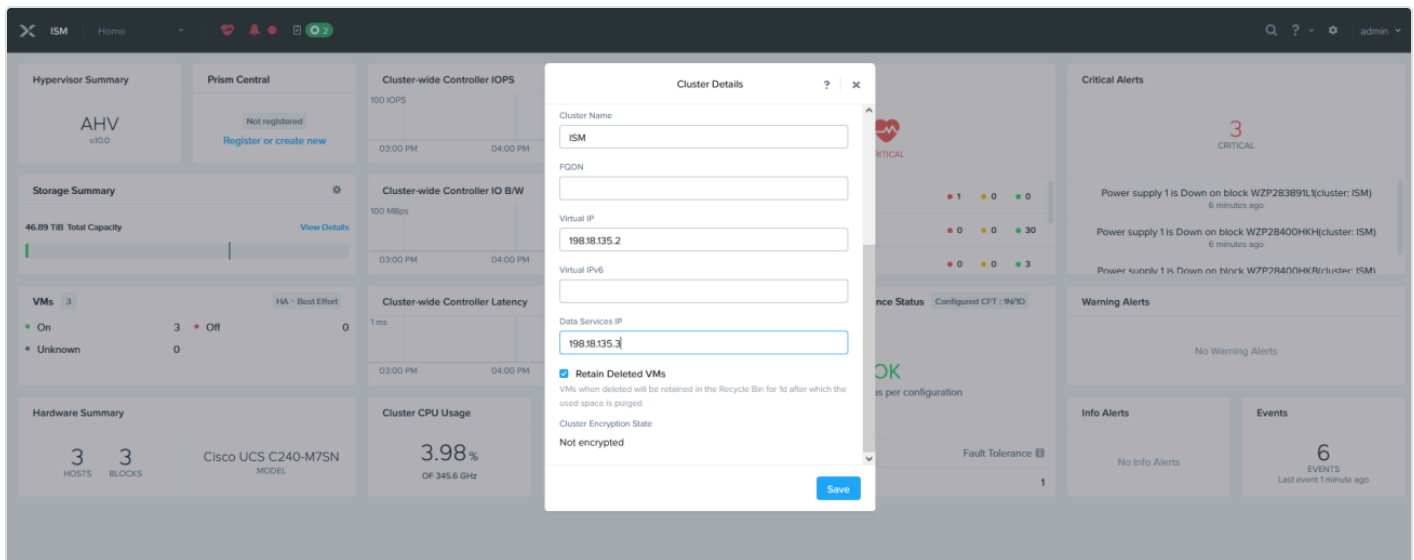


Let's start with some basic configuration, click Home at the top and select Settings then Network Configuration and click "Create Subnet"

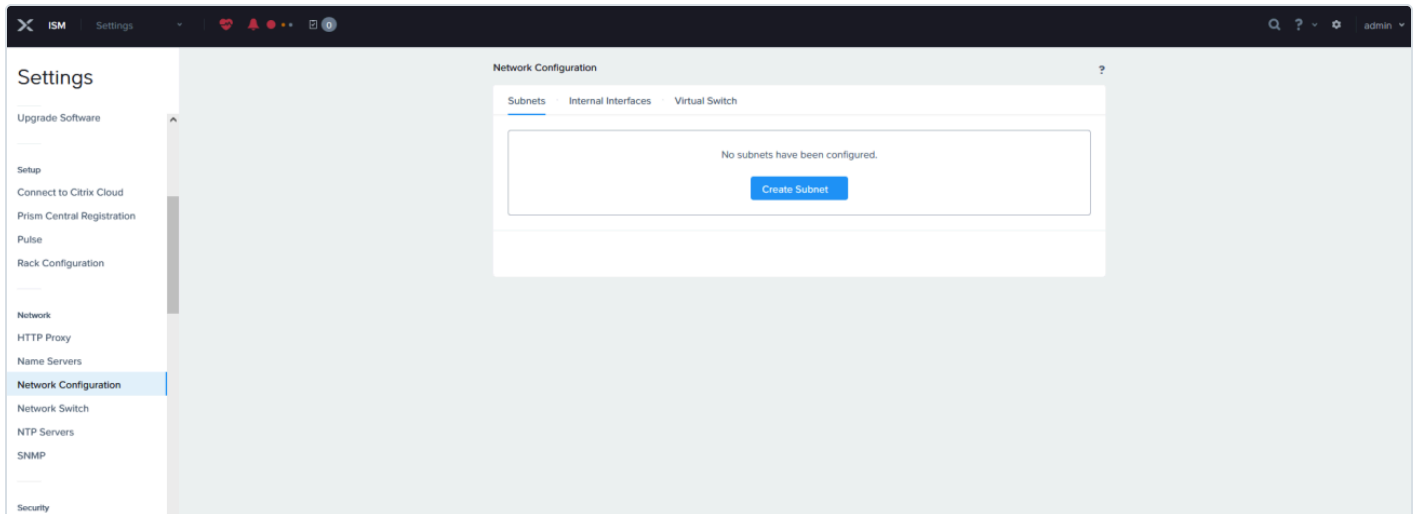


On "Create Subnet" use the following information

- Subnet Name = VMNetwork
- Virtual Switch= vs0(default)
- VLAN ID = 10
- Click Save

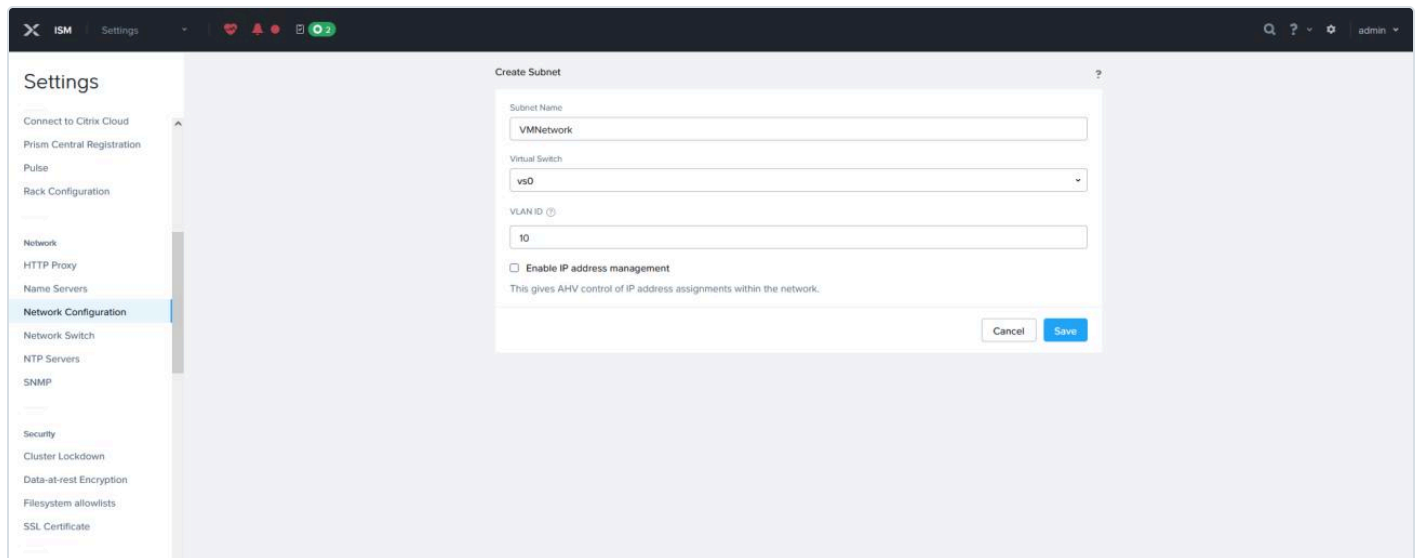

Then scroll up and select “Image configuration” and click “+ Upload image”.

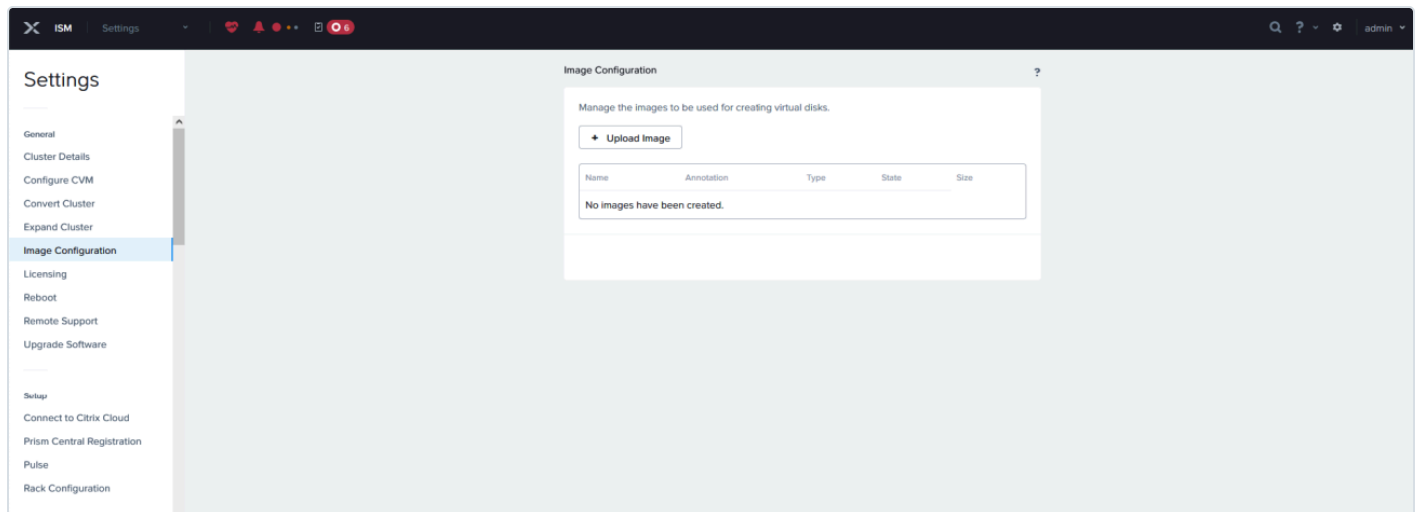

In this case we are going to use Ubuntu as an example

- Name = Ubuntu ISO
- Image Type = ISO
- Storage Container = SelfServiceContainer
- Image Source
  - Upload File > Click “Browse...”, from the Downloads folder select Ubuntu ISO
- Click Save

The screenshot shows the 'Create Image' form in the ISM Settings page. The form has the following fields and options:

- Name:** Text input field containing 'Ubuntu ISO'.
- Annotation:** Text input field.
- Image Type:** Dropdown menu set to 'ISO'.
- Storage Container:** Dropdown menu set to 'SelfServiceContainer'.
- Image Source:** Radio buttons for 'From URL' and 'Upload a file'. 'Upload a file' is selected.
- Upload a file:** Includes a 'Browse...' button and the text 'No file selected.'.
- Buttons:** 'Back', 'Cancel', and 'Save' buttons at the bottom.

The left sidebar shows the 'Settings' menu with 'Image Configuration' highlighted.

This screenshot shows a 'File Upload' dialog box overlaid on the 'Create Image' form. The dialog box displays the 'Downloads' folder with the following files:


| Name                             | Date modified    | Type            | Size  |
|----------------------------------|------------------|-----------------|-------|
| Today (2)                        |                  |                 |       |
| Win11_24H2_English_x64.iso       | 4/2/2025 5:51 PM | Disc Image File | 5,683 |
| ubuntu-24.04.2-desktop-amd64.iso | 4/2/2025 3:18 PM | Disc Image File | 6,194 |

The 'File name' field at the bottom contains 'ubuntu-24.04.2-desktop-amd64.iso'. The 'All Files (\*.\*)' filter is selected. The 'Open' button is highlighted.


### Note

The ISO upload should take a few minutes to complete.

Then click the drop-down menu on the top left and select "VM"

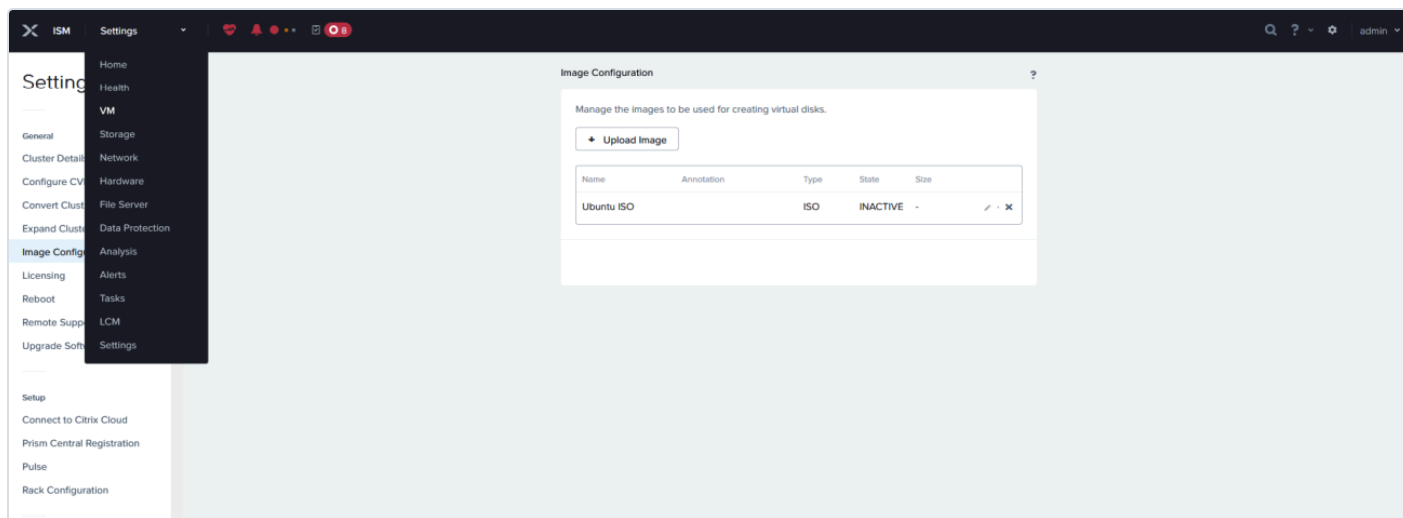


In the VM dashboard click “+ Create VM” on the top right

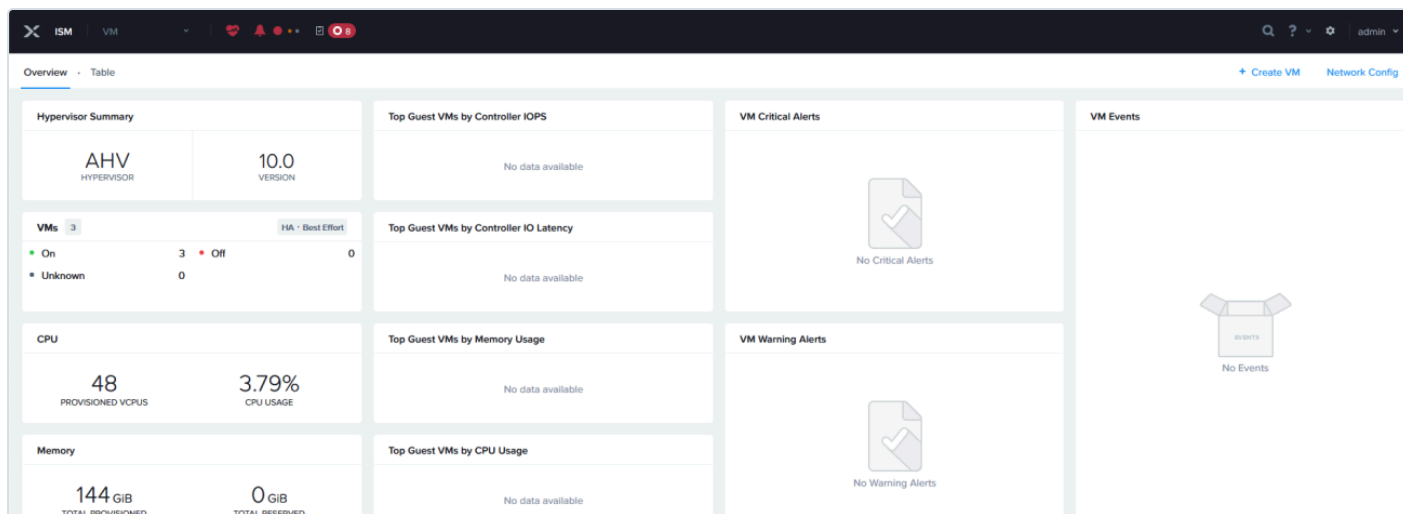

Let's fill in the new VM information

- Name = Ubuntu VM
- vCPU(s) = 2
- Memory = 4
- Disk 1. + Add a New Disk 2. Logical size = 20 3. Click Add 4. Click the pencil of CD-ROM 5. Operation = Clone from Image Service 6. Image = select Ubuntu from the drop down 7. Click Add
- Network Adapters (NIC) 1. + Add New NIC 2. Subnet Name = VMNetwork 3. Click Add
- Click Save
- Then Click Table at the top left, next to overview

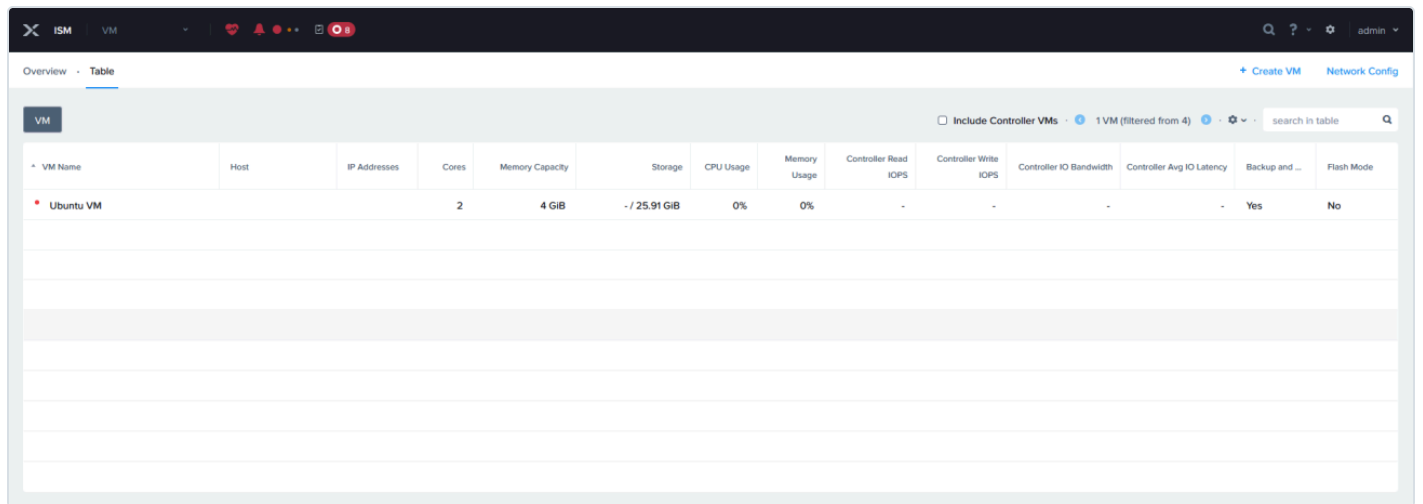


| VM Name   | Host | IP Addresses | Cores | Memory Capacity | Storage       | CPU Usage | Memory Usage | Controller Read IOPS | Controller Write IOPS | Controller IO Bandwidth | Controller Avg IO Latency | Backup and ... | Flash Mode |
|-----------|------|--------------|-------|-----------------|---------------|-----------|--------------|----------------------|-----------------------|-------------------------|---------------------------|----------------|------------|
| Ubuntu VM |      |              | 2     | 4 GiB           | - / 25.91 GiB | 0%        | 0%           | -                    | -                     | -                       | -                         | Yes            | No         |

### Note


Note the new VM recently created

Right-click the Ubuntu VM and select Power On

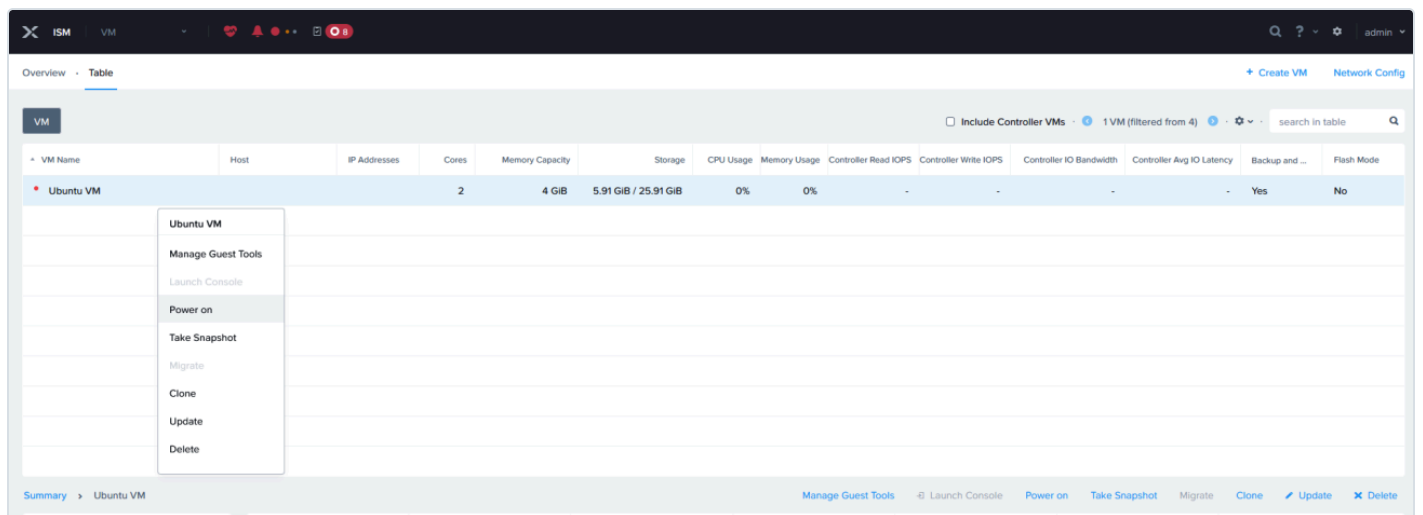


| VM Name   | Host | IP Addresses | Cores | Memory Capacity | Storage              | CPU Usage | Memory Usage | Controller Read IOPS | Controller Write IOPS | Controller IO Bandwidth | Controller Avg IO Latency | Backup and ... | Flash Mode |
|-----------|------|--------------|-------|-----------------|----------------------|-----------|--------------|----------------------|-----------------------|-------------------------|---------------------------|----------------|------------|
| Ubuntu VM |      |              | 2     | 4 GiB           | 5.91 GiB / 25.91 GiB | 0%        | 0%           | -                    | -                     | -                       | -                         | Yes            | No         |

Right-click the VM again and select Launch Console

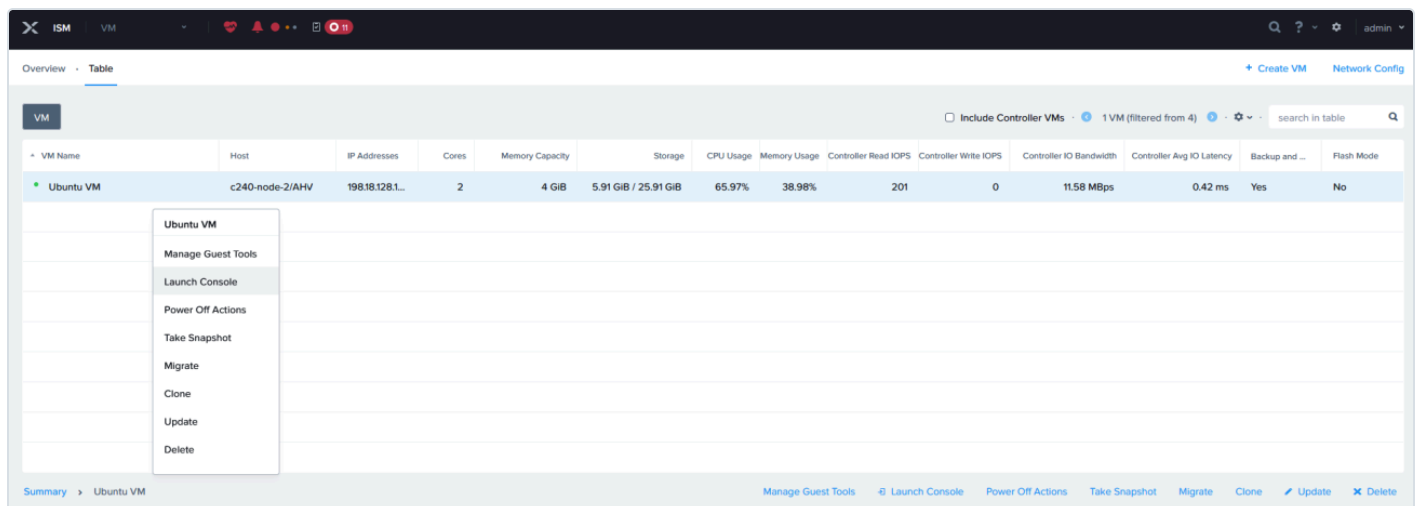

| VM Name   | Host            | IP Addresses    | Cores | Memory Capacity | Storage              | CPU Usage | Memory Usage | Controller Read IOPS | Controller Write IOPS | Controller IO Bandwidth | Controller Avg IO Latency | Backup and ... | Flash Mode |
|-----------|-----------------|-----------------|-------|-----------------|----------------------|-----------|--------------|----------------------|-----------------------|-------------------------|---------------------------|----------------|------------|
| Ubuntu VM | c240-node-2/AHV | 198.18.128.1... | 2     | 4 GiB           | 5.91 GiB / 25.91 GiB | 65.97%    | 38.98%       | 201                  | 0                     | 11.58 MBps              | 0.42 ms                   | Yes            | No         |


On the VM console, close the Installation window and open a Firefox browser and point to "cisco.com" to test VM usability and connectivity to the Internet.

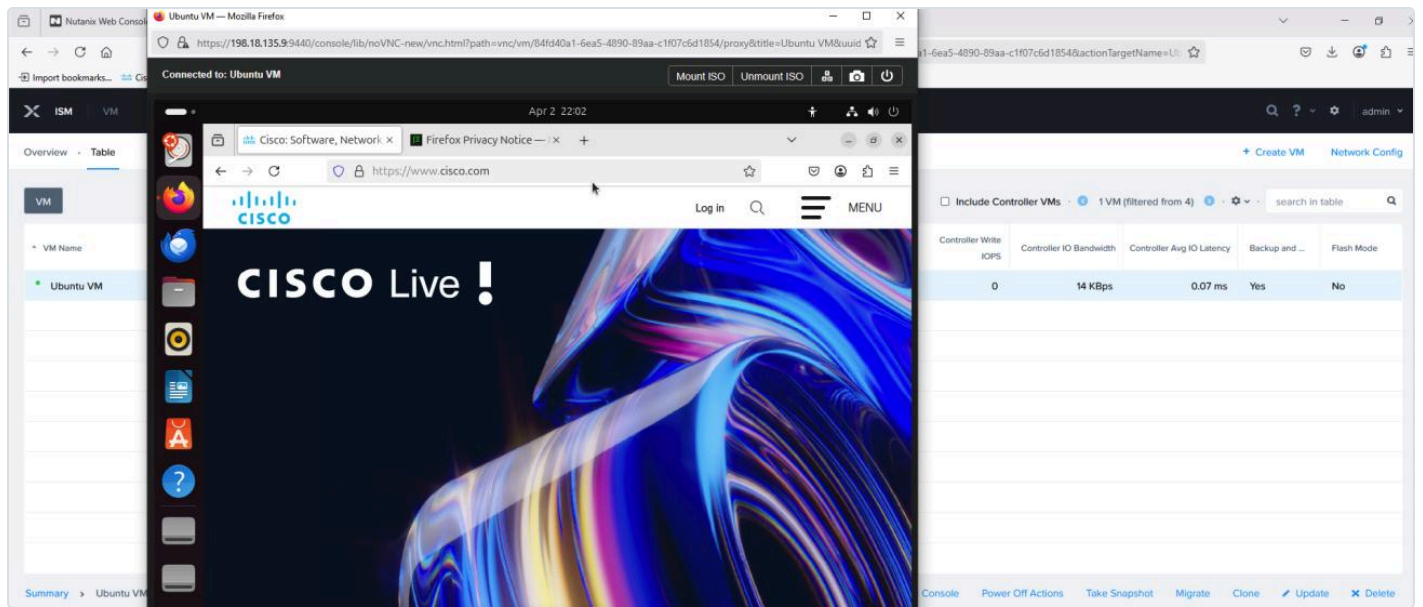


This concludes this scenario; you can close the Ubuntu console to continue with the next scenario

## Scenario 4 · Nutanix Prism Central Deployment and Cluster Registration

In the main dashboard on the Prism Central click in Register or create new

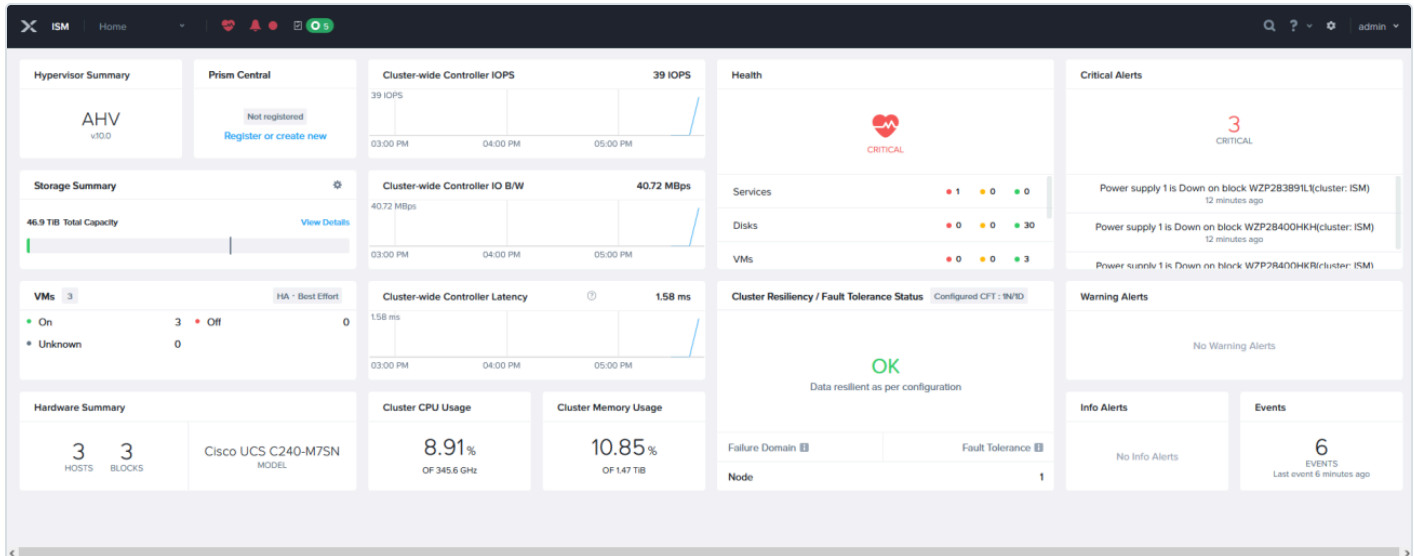

Select the first option, I want to deploy a new Prism Central Instance

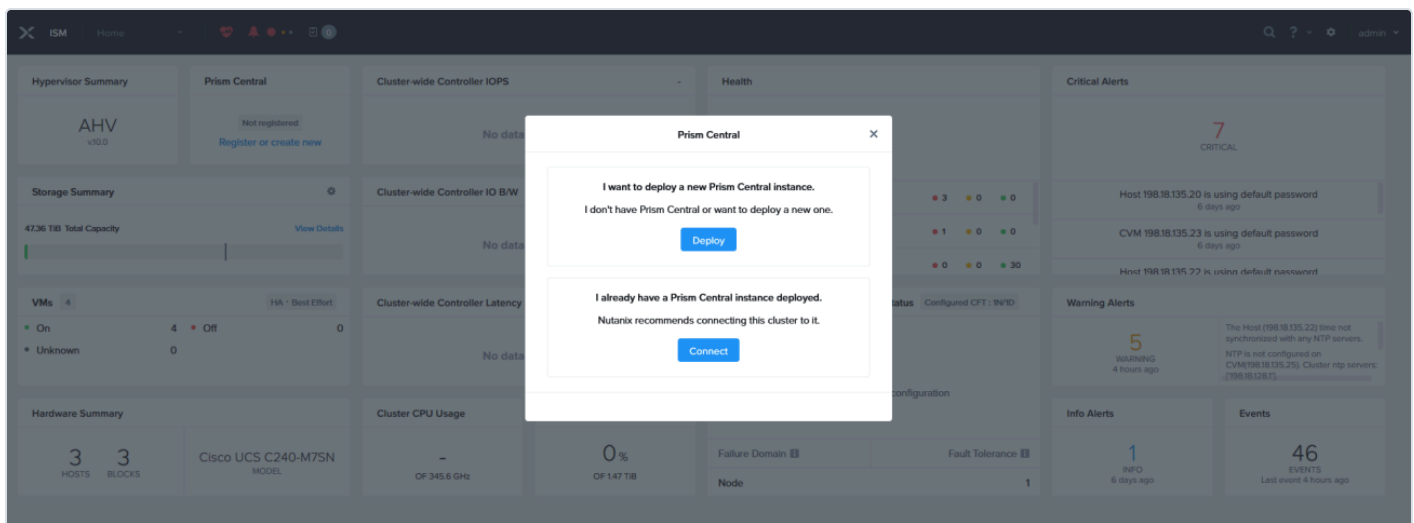

Under Installation Image section, PC details ISM-PC select “pc.7.5.1.1” and click Next

Prism Central (PC) Deployment

1 Version 2 Size and Scale 3 Configuration

**PC Details**  
Create PC Name

ISM-PC

**Installation Image**  
Provide the Prism Central image you'd like to install. You can download the latest version from the internet or upload an installation binary from your local machine.  
[Learn more about PC Versions.](#)

**Available versions**  
☒ Only show compatible versions [Upload Installation Binary](#)

| Version Number                             | Version Type   |
|--------------------------------------------|----------------|
| <input type="radio"/> pc.75.1              | Public version |
| <input checked="" type="radio"/> pc.75.1.1 | Public version |
| <input type="radio"/> pc.75.1.10           | Public version |
| <input type="radio"/> pc.75.1.12           | Public version |
| <input type="radio"/> pc.75.1.2            | Public version |
| <input type="radio"/> pc.75.1.4            | Public version |
| <input type="radio"/> pc.75.1.6            | Public version |
| <input type="radio"/> pc.75.1.8            | Public version |

Cancel Next

Select "Small" and click next

#### Note

NOTE: Do NOT select X-Small, this option does not support cluster expansion

Prism Central (PC) Deployment

PC Version PC Size and Scale Configuration Microservices

**Select Prism Central (PC) Size and Scale**  
Each size supports given number of VMs and can be used with the minimum number of resources provided below.  
[Learn more about PC sizes](#)

**X-Small** New

Supports up to 500 VMs | 5 Clusters | 50 hosts

4 vCPU 18 GB Memory 100 GiB Disk

☐ Start with the smallest size to explore basic Prism Central capabilities.

**Small (S)**

Supports up to 2500 VMs | 10 Clusters | 200 hosts

6 vCPU 28 GB Memory 500 GiB Disk

☒ Scale-Out PC

**Large (L)**

Supports up to 12500 VMs | 25 Clusters | 500 hosts

10 vCPU 46 GB Memory 2500 GiB Disk

Add Network information:

- Network = select existing VMNetwork
- Subnet Mask = 255.255.192.0
- Gateway IP = 198.18.128.1
- DNS = 198.18.133.1
- NTP = 198.18.128.1
- Container = SelfServiceContainer
- Under General Details
- IP Address= 198.18.135.4
- Click Deploy

Prism Central (PC) Deployment

**Networking Details**

Network: VMNetwork

Subnet Mask: 255.255.192.0 Gateway IP: 198.18.128.1

DNS Address(es): 198.18.133.1

NTP Address(es): 198.18.128.1

Container: SelfServiceContainer


**General Details**

VM Name: PC-2024-3-ISM (6 vCPUs, 28 GB RAM)

IP Address: 198.18.135.4


< Back Cancel Next

After the deployment begins it will take you back to the main dashboard and under the Prism Central widget you will see the deployment activity.


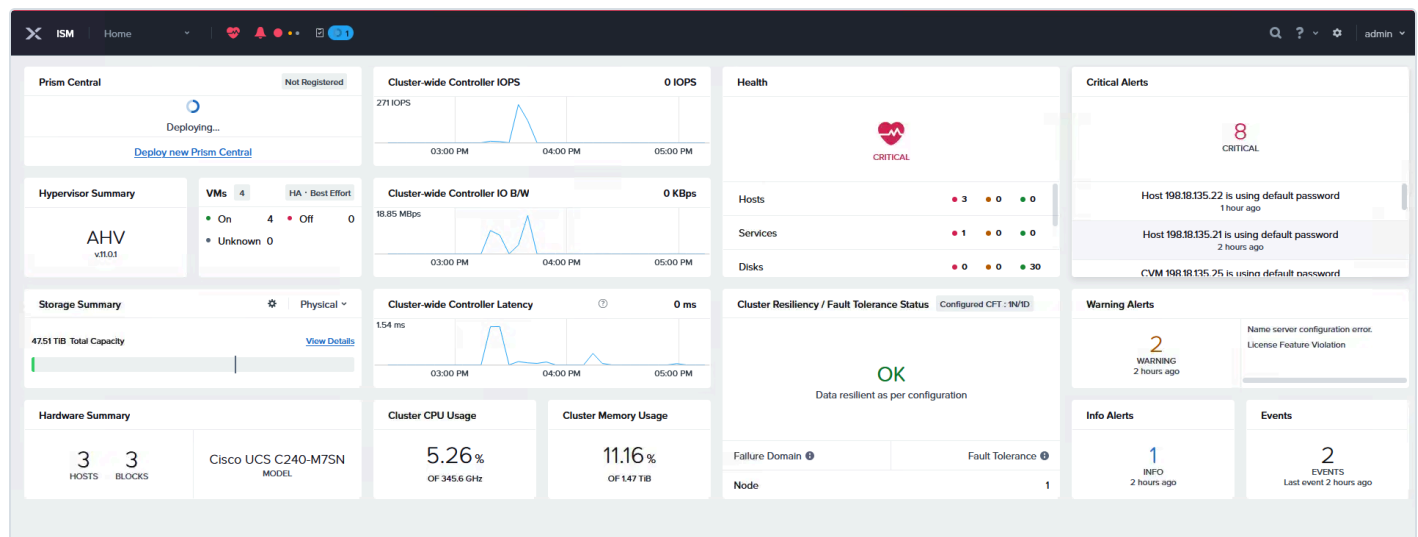


Once Prism Central deployment is completed, use a web browser to connect to the virtual IP assigned (198.18.135.4) and change the default

- First time logging in the credentials are:
  - Username = admin
  - Password = Nutanix/4u

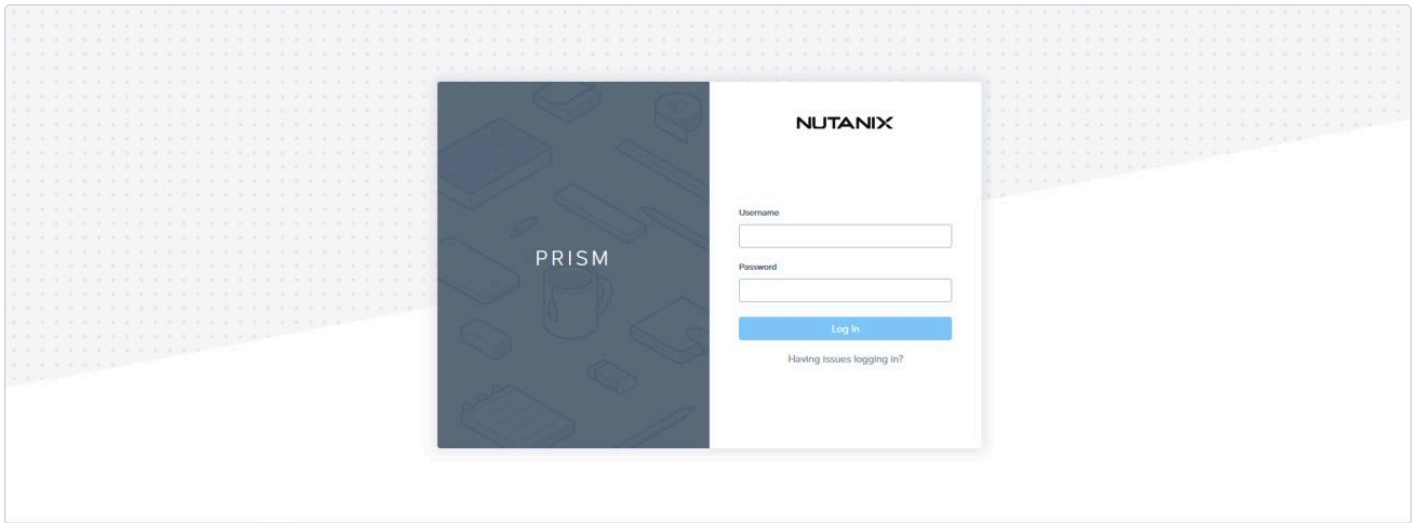

- New password C1sco12345!

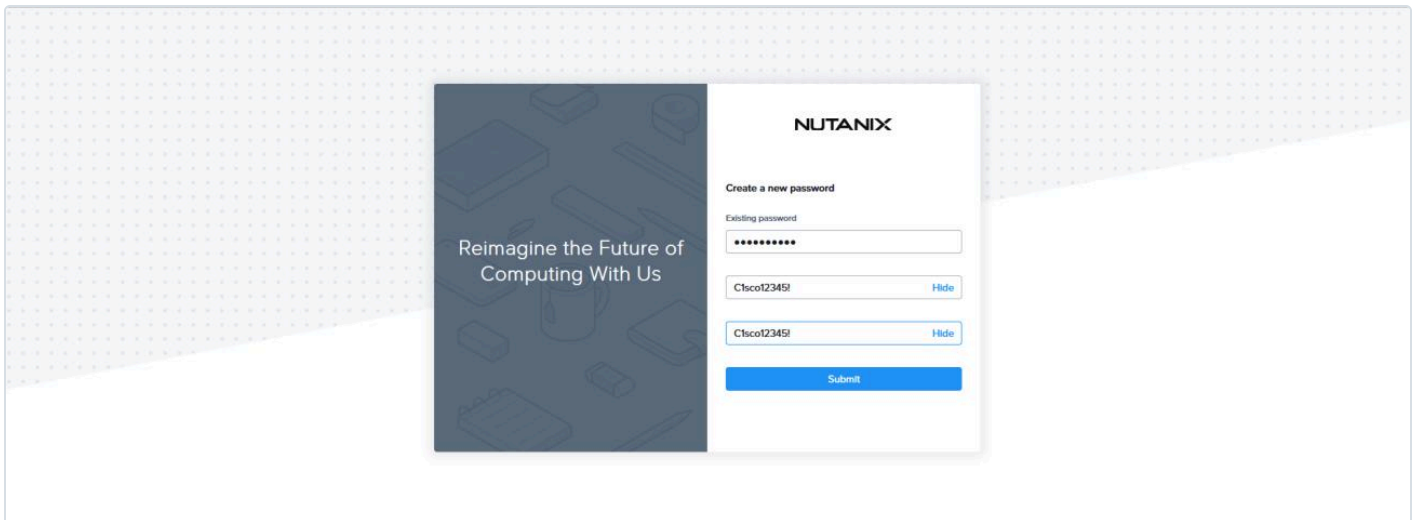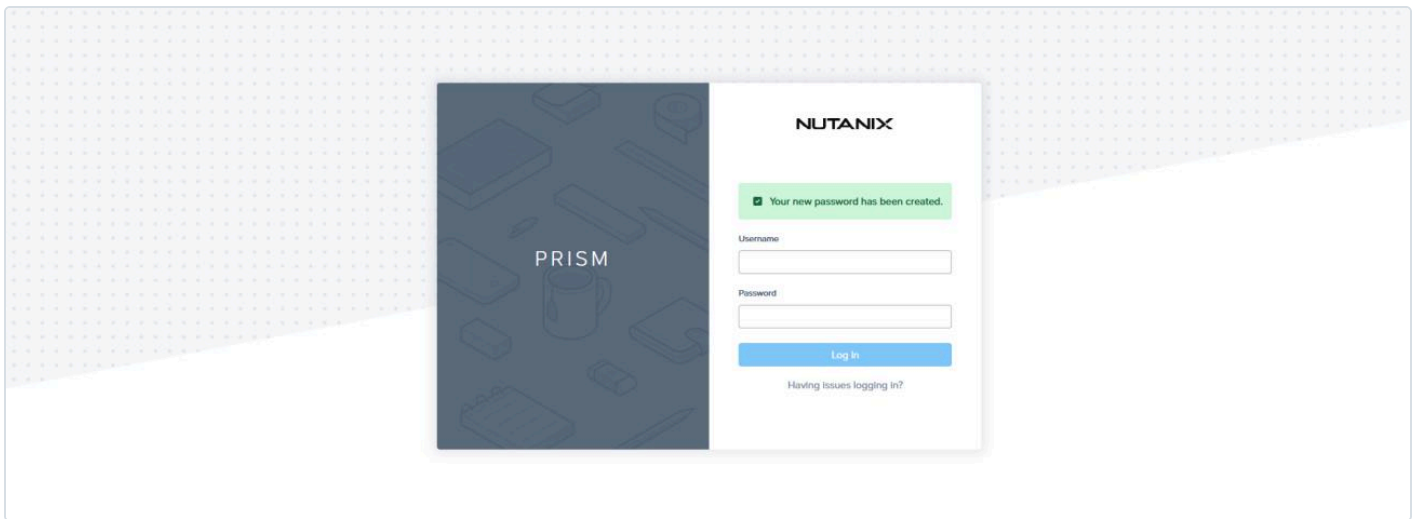

1. After the password is changed continue with the EULA

## Nutanix End User License Agreement (EULA) and Terms of Use

Nutanix is referred to in this Agreement as "Us", "We" or "Our" and Your organization is referred to as "You" or "Your". This Nutanix License and Services Agreement ("Agreement") governs Your use of any Products (as defined below) and becomes effective when You (s) issue a purchase order for the Products; (b) execute or accept this Agreement; or (c) access, download, install, or use the Software or Cloud Services. This Agreement is entered into between You and Nutanix Inc., located at 1740 Technology Dr. Ste. 150, San Jose, CA 95110, United States, if You are contracting in the Americas, or Nutanix Netherlands B.V., located at Marcususplein 1, 2132 HA Hoofddorp, The Netherlands, if You are contracting anywhere else in the world or both if applicable. You represent and warrant that You have the authority to enter into this Agreement on behalf of Your organization.

**1. Definitions.**

1.1. "Affiliates" means any corporation or other business entity which controls, is controlled by or is under common control through the ownership of more than fifty percent (50%) of the

☒ I have read and agree to the terms and conditions.

1. Keep Pulse by default and click Continue

## Pulse will be enabled

Pulse will be enabled for this Prism Central and all clusters registered to this Prism Central. Pulse continuously monitors cluster health and periodically sends usage data to Nutanix's cloud based analytics engine. It automatically takes action when a problem has occurred, or is about to occur. [Learn More](#)

Nutanix strongly recommends not disabling this feature to improve your support experience in the event of a failure or critical system issue.


**If you disable Pulse, Nutanix will not be able to proactively reach out to you in the event of failures, and your issue resolution time may increase significantly.**

☒ **Disable Pulse. (not recommended)**  
Pulse will not be enabled on this Prism Central or any registered clusters.


☐ **Do not enable Pulse for registered clusters. (not recommended)**  
Pulse will not be enabled on any registered clusters.

At the top select Infrastructure from the drop-down, then click on Prism Central Settings, select Prism Central Management and click edit


- Cluster name = PC-VIP-ISM
- Virtual IP = 198.18.135.5
- Click Update

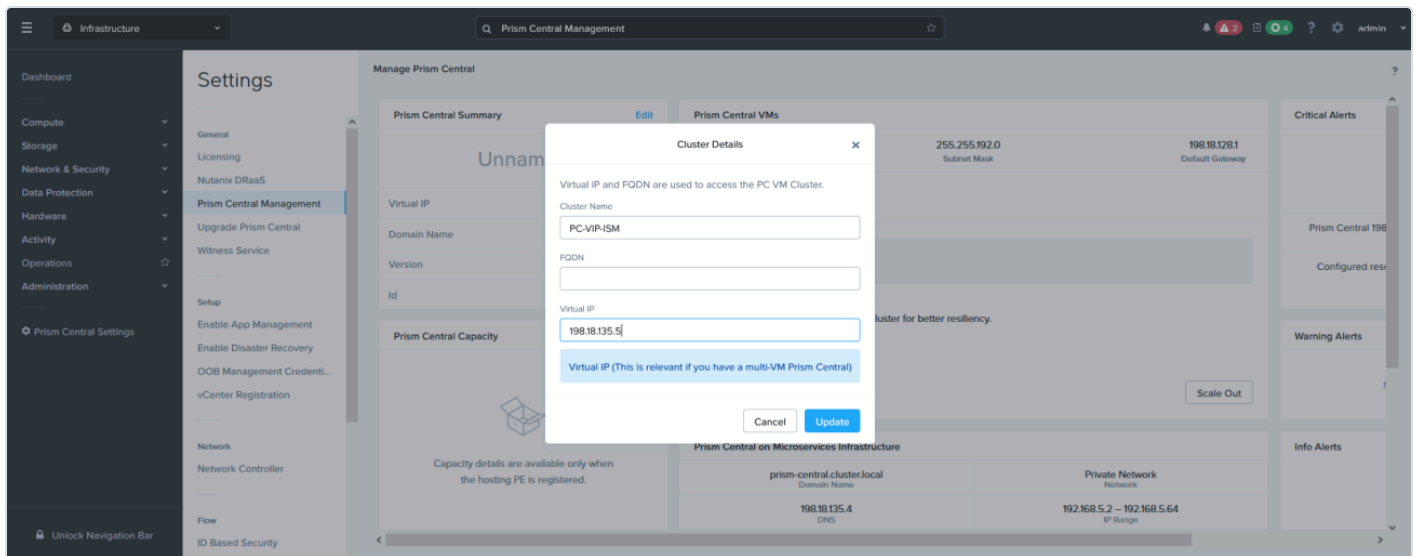


From the drop-down menu select Admin Center then click Marketplace and click Enable Marketplace

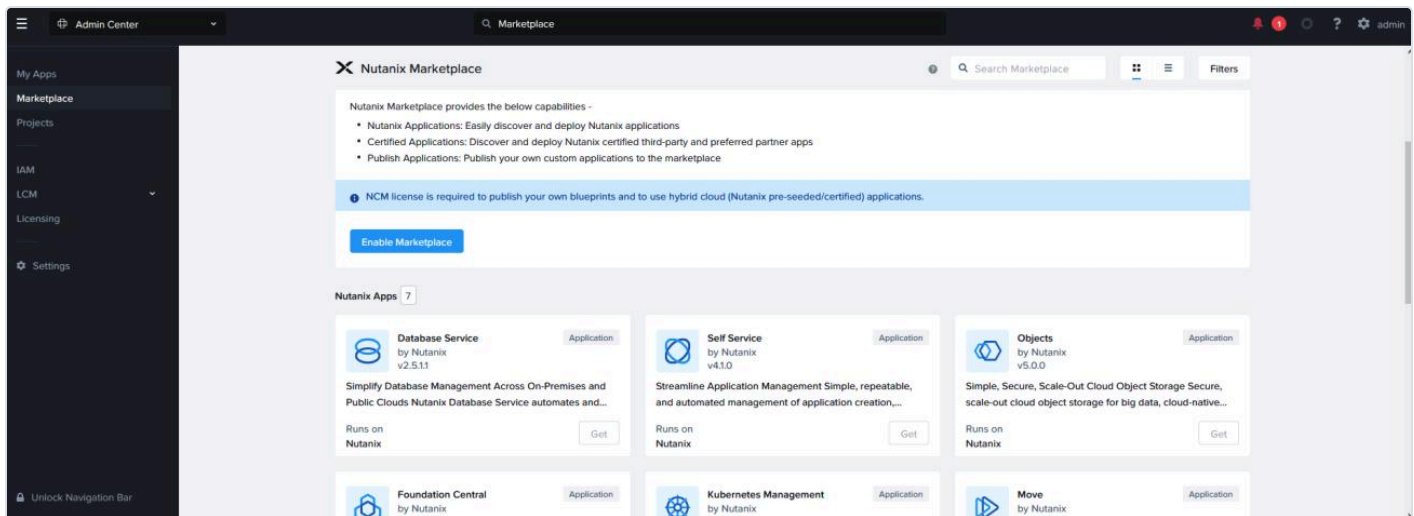


Once the Marketplace has been enabled, click "Get" on Foundation Central then click Deploy

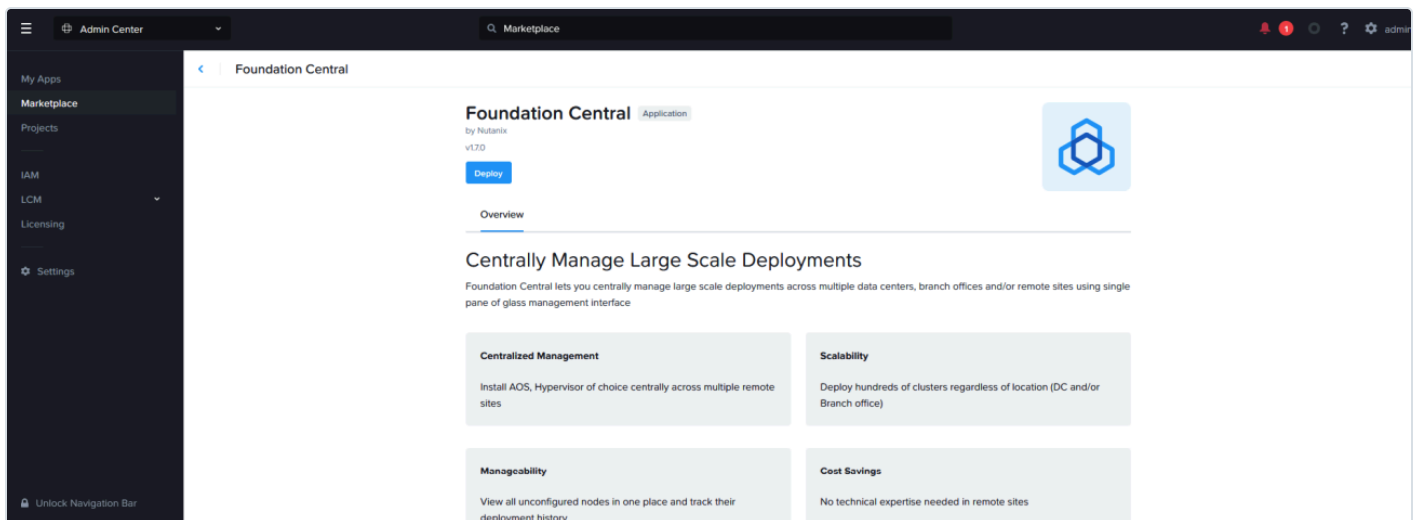

While the Foundation Central app is being deployed on Prism Central, return to the Prism Element main dashboard, and confirm then click "Register or create a new"

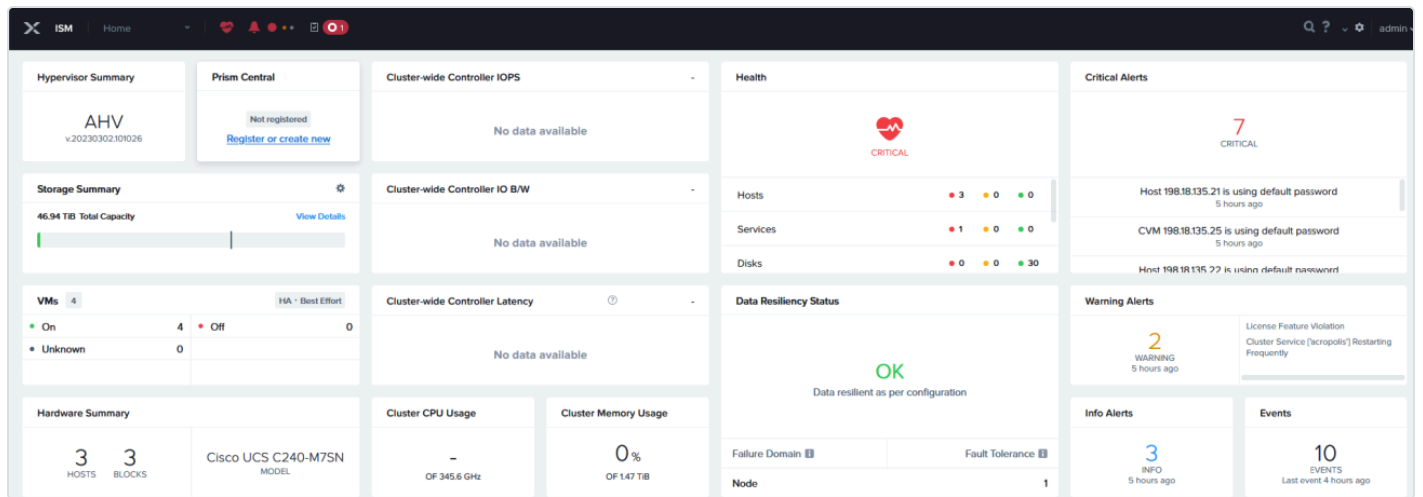


Now click connect and hit next

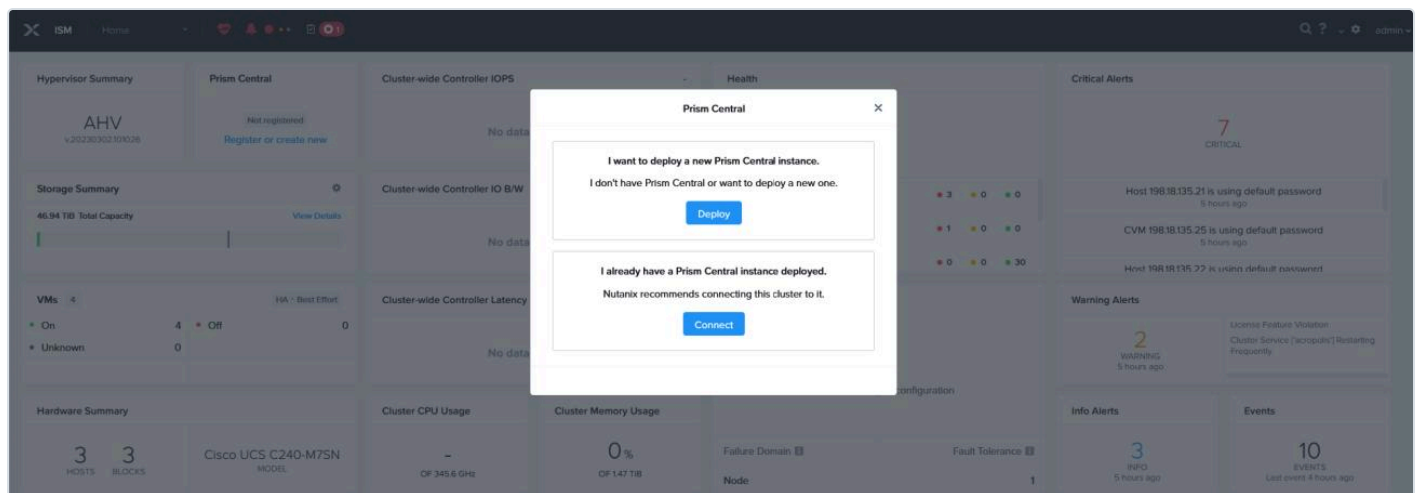


On the Prism Central configuration add

- Prism Central IP/FQDN = 198.18.135.5
- Username = admin
- Password = C1sco12345!
- Click Connect


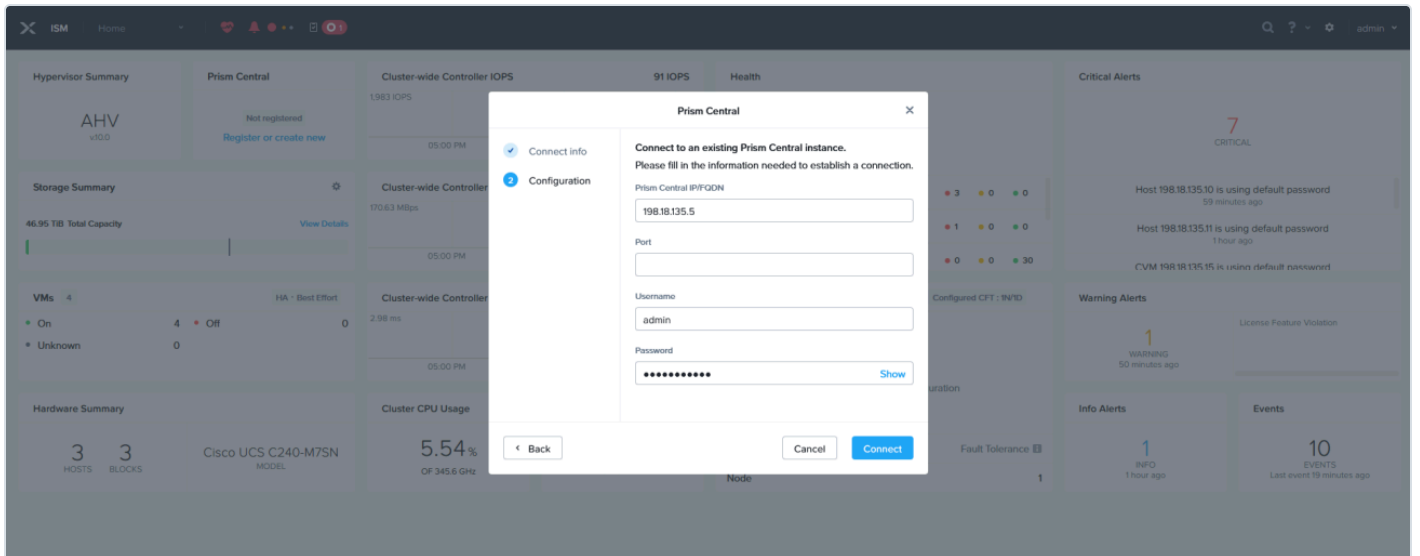


The ISM cluster is now registered with and connected to the new Prism Central (PC-7.5.1.1)

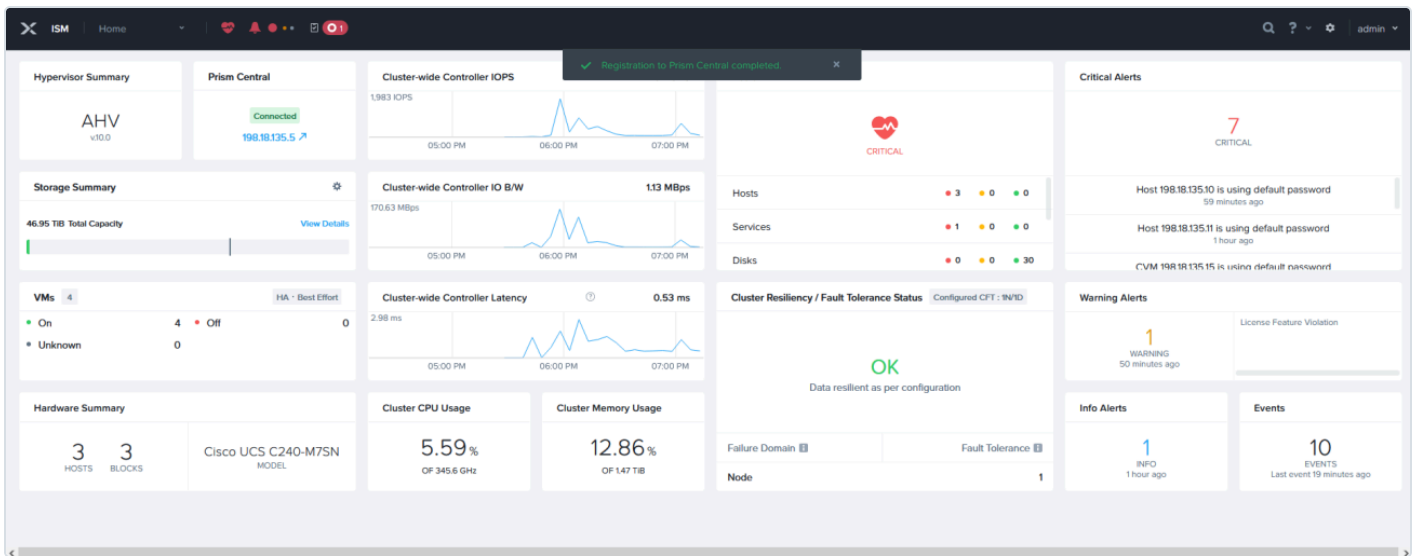


## Scenario 5 · Nutanix Cluster Expansion


1. Return to the new Prism Central (add IP info here to make sure users will go to PC 7.5.1.1) and click on View in my Apps

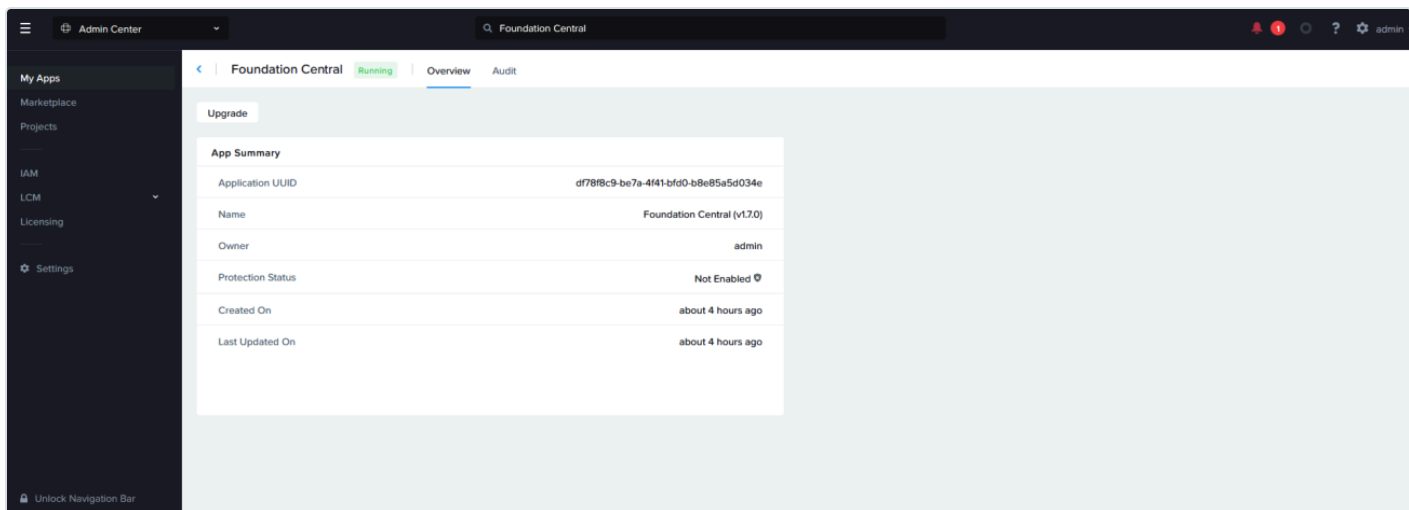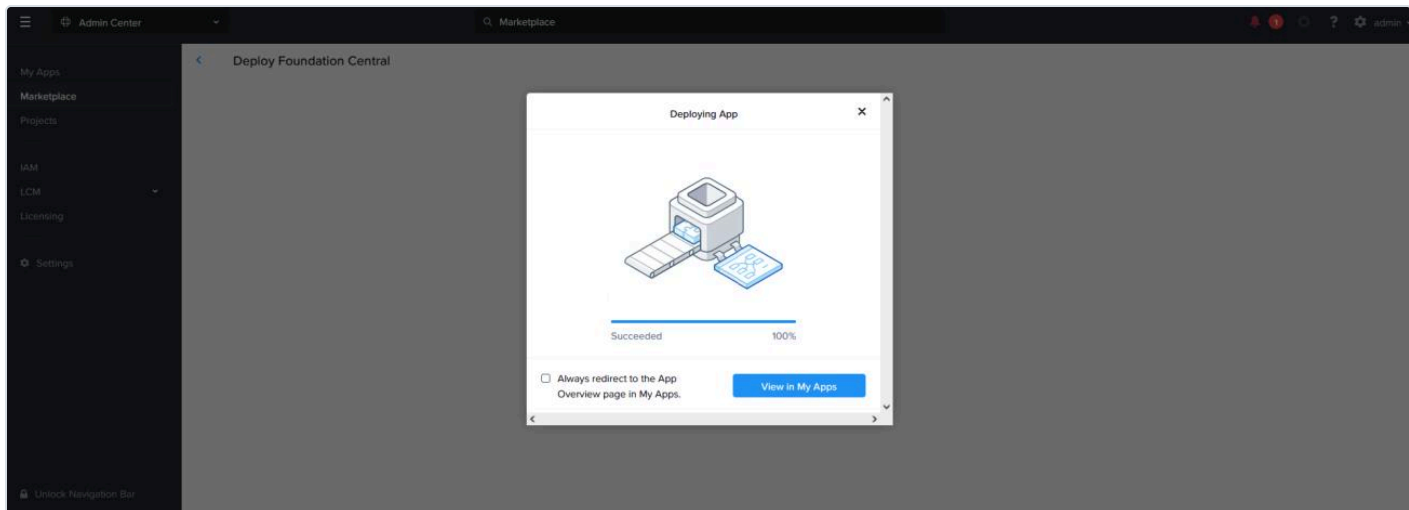


1. Once the App is on running state from Admin Center > LCM > Prism Central Cluster

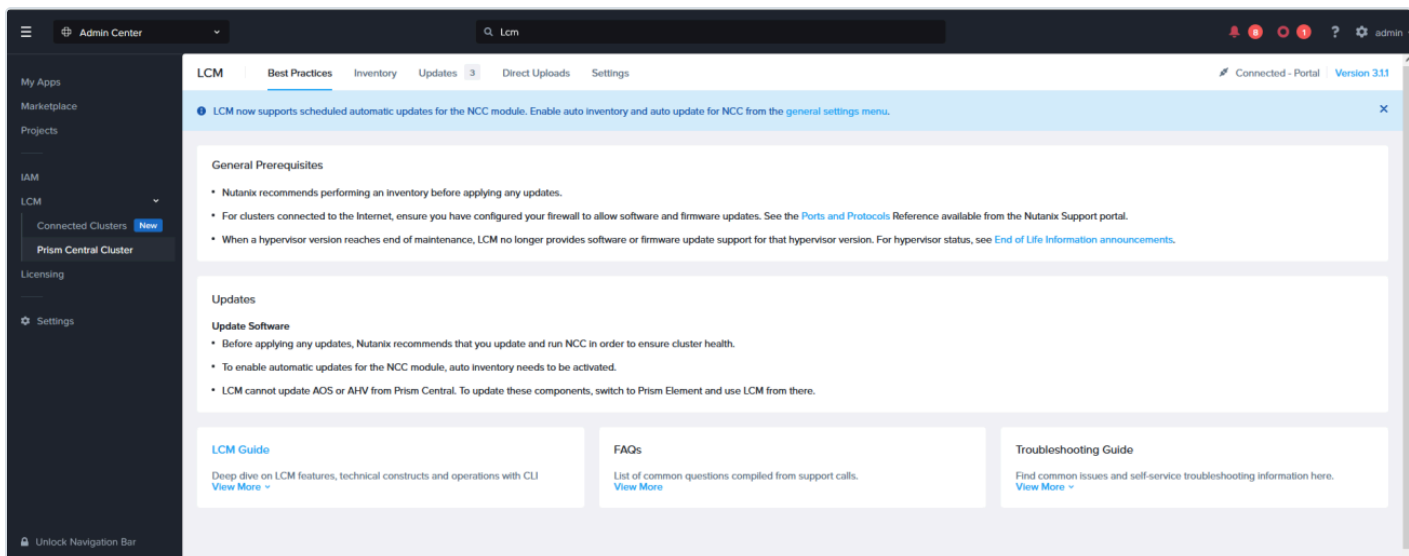

1. Click inventory and click Perform Inventory > Proceed

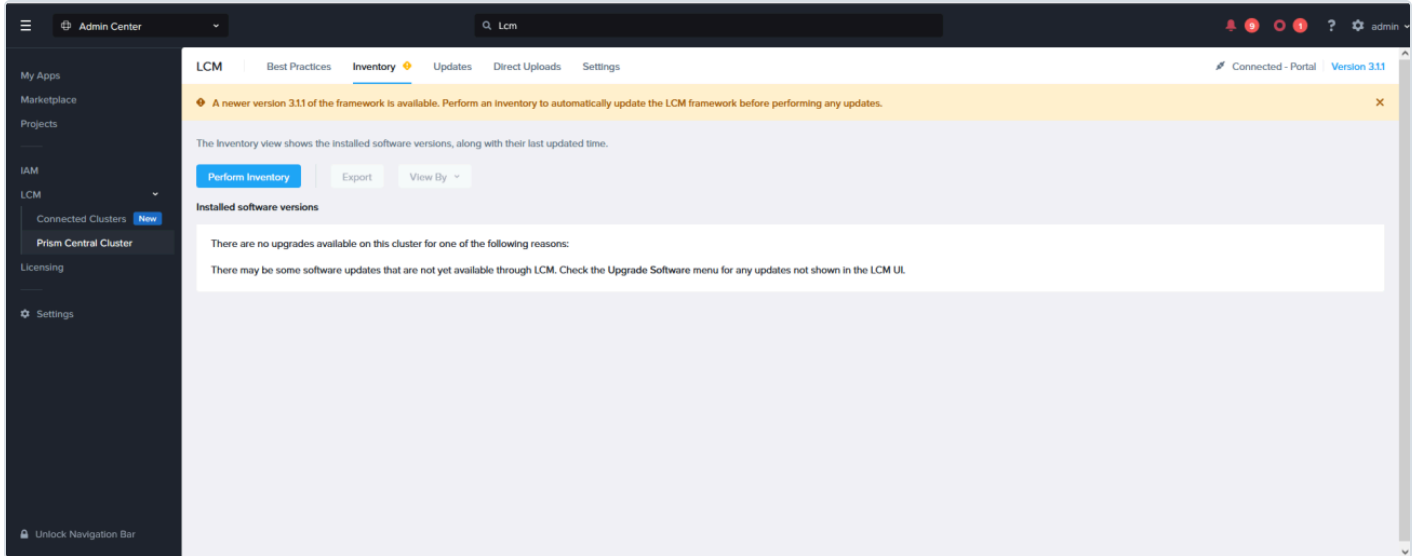

1. Wait until the Inventory is complete, then press Return to Inventory

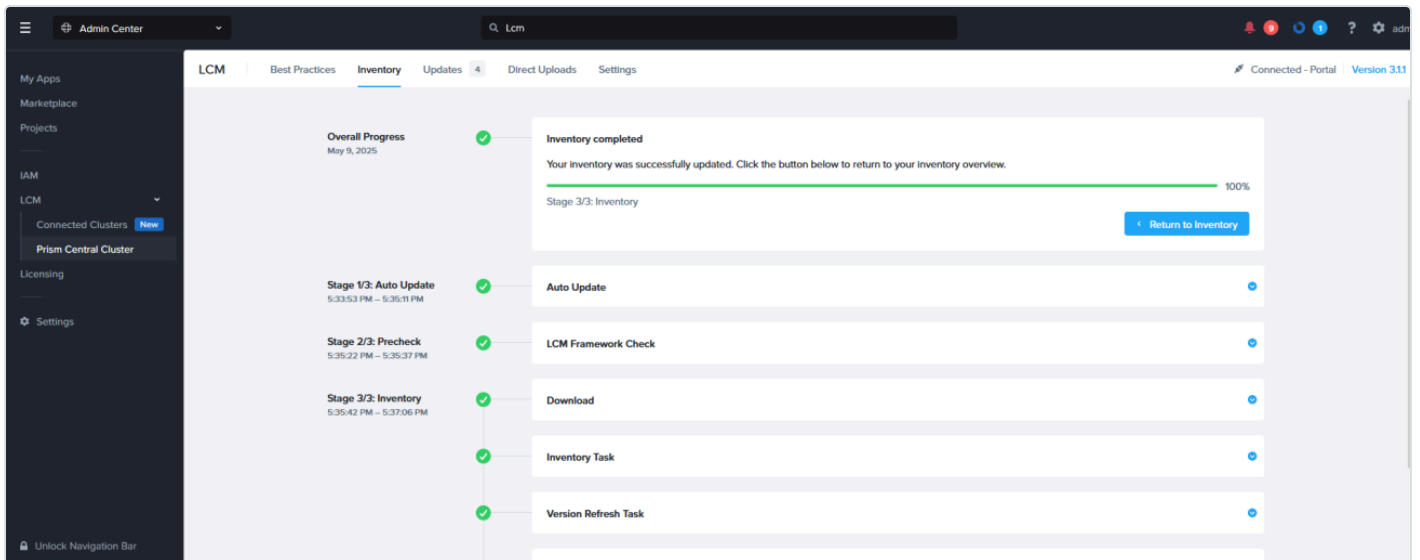

1. Click Updates, check the box of Foundation Central then click View Upgrade Plan

The screenshot shows the Cisco LCM Admin Center interface. The left sidebar contains navigation links: My Apps, Marketplace, Projects, IAM, LCM (selected), Connected Clusters (with a 'New' button), Prism Central Cluster, Licensing, and Settings. The main content area is titled 'LCM' and has tabs for Best Practices, Inventory, Updates (selected), Direct Uploads, and Settings. A notification banner at the top states: 'The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. LCM cannot update AOS or AHV from Prism Central. To update these components, switch to Prism Element and use LCM from there. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu.' Below the banner, there are buttons for 'View Upgrade Plan' and 'Pre-Upgrade', and a 'Filter' button. The main section is titled 'Viewing all 4 Software Updates' and contains a table:

| Software                                               | Available Version                                                                | Current Version | Last Updated | Release Notes                              |
|--------------------------------------------------------|----------------------------------------------------------------------------------|-----------------|--------------|--------------------------------------------|
| <input checked="" type="checkbox"/> Foundation Central | 1.71<br><a href="#">1 version update</a>                                         | 1.7             |              | <a href="#">View Release Notes</a>         |
| <input type="checkbox"/> MSP                           | 2.6.11<br><a href="#">1 version update</a>                                       | 2.6.10          |              |                                            |
| <input type="checkbox"/> PC                            | pc-2024.3.11<br>Release Date: April 23, 2025<br><a href="#">1 version update</a> | pc-2024.3.1     |              | <a href="#">View Release Notes</a>         |
| <input type="checkbox"/> Security Dashboard CVE Data   | 2025.04.1<br><a href="#">9 version updates</a>                                   | 2024.03.1       |              | Security Dashboard CVE data for April 2025 |

1. Click Apply 1 Update and wait until the Foundation Central update is complete

The screenshot shows the 'Review Upgrade Plan' dialog in the Cisco LCM Admin Center. It contains a warning message: 'Genesis service will be restarted on the cluster. User workloads will not be disrupted. Refer to KB 6945 for more details.' Below this, it states: 'Stopping the update is possible at any point via the "Stop Update" button. Please note that depending on the current state of the process, LCM will automatically choose the safest time to stop. Pausing the update is currently not supported.' It then asks: 'Do you want to apply the selected updates?'. Under 'Software Updates', there is a table:

| Cluster       | Foundation Central     |
|---------------|------------------------|
| Prism Central | 1.71<br>Installed: 1.7 |

At the bottom right, there are 'Cancel' and 'Apply 1 Updates' buttons.



The screenshot shows the 'Overall Progress' of the update in the Cisco LCM Admin Center. The progress bar is at 100%. The status is 'Update successful! All updates have been implemented successfully. To see all available remaining updates, please return to the update list.' Below this, there is a 'Return to Updates' button. The progress is broken down into stages:

- Stage 1/2: Precheck (5:40:00 PM - 5:40:25 PM)
  - LCM Framework Check (Completed)
  - Module Check (Completed)
- Stage 2/2: Install Update (5:40:27 PM - 5:42:00 PM)
  - Download (Completed)
  - Update Foundation Central (Completed)
  - Bundle Compatibility Check (Completed)
  - Module Compatibility Check (Completed)


1. Once the Foundation Central upgrade is complete, from the drop-down menu select Foundation Central

**Note**


If Foundation Central does not load, just Clear the cookies and site data

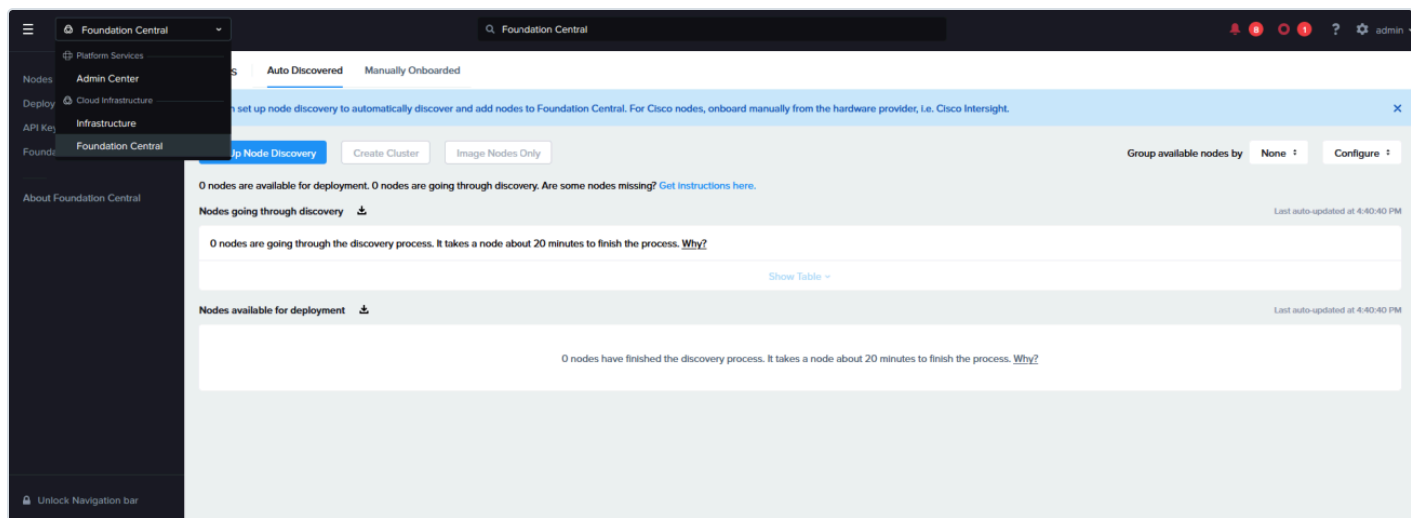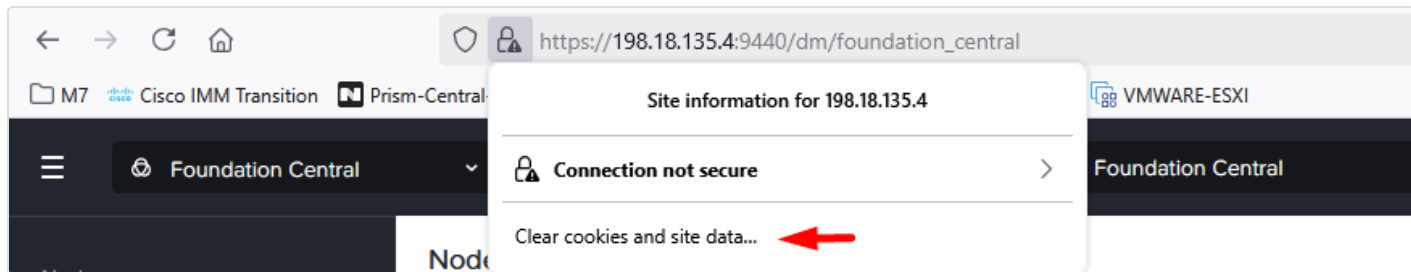


1. Confirm the Foundation Central by clicking on the left side About Foundation Central

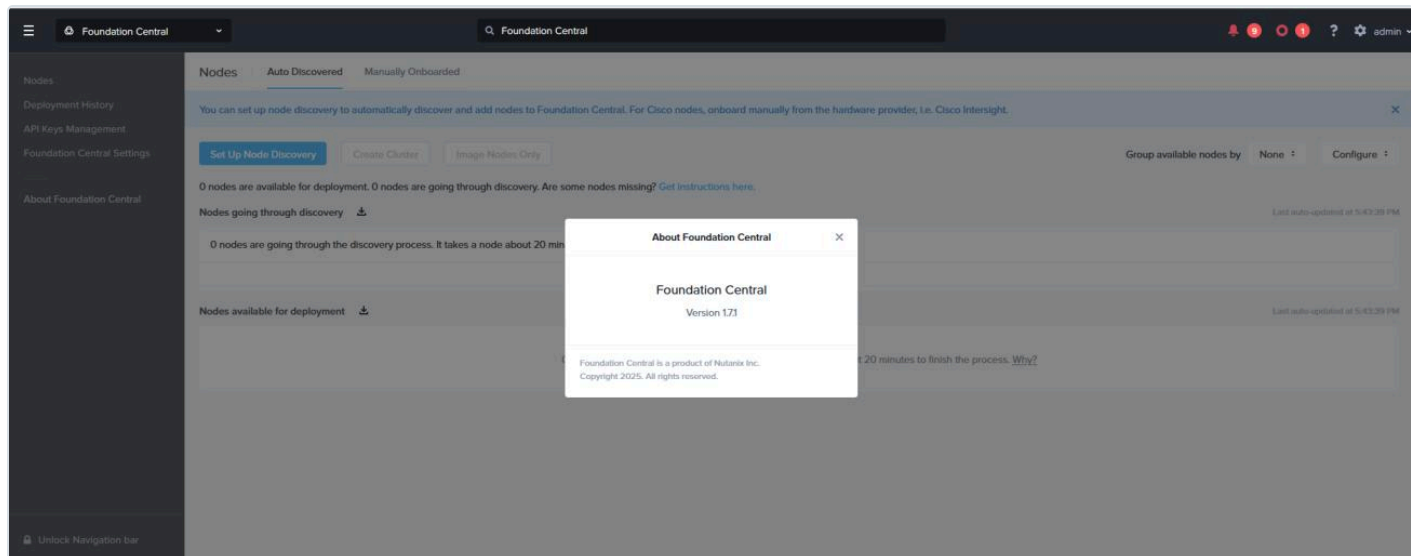

1. Then under Manually Onboarded, click Onboard Nodes

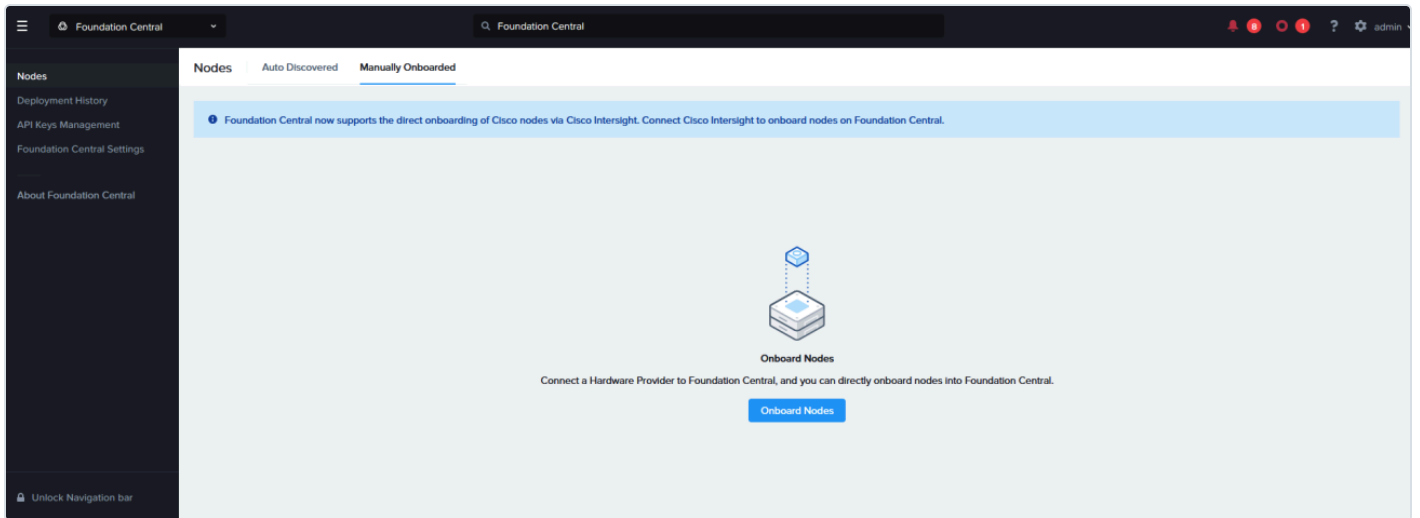

1. Connect Hardware Provider
2. Fill in the required information
3. Connection name= Intersight
4. Hardware Provider = Cisco Intersight
5. Intersight Deployment Type = SaaS
6. Intersight Region & URL = North America
7. Intersight API Key =
8. Secret Key=

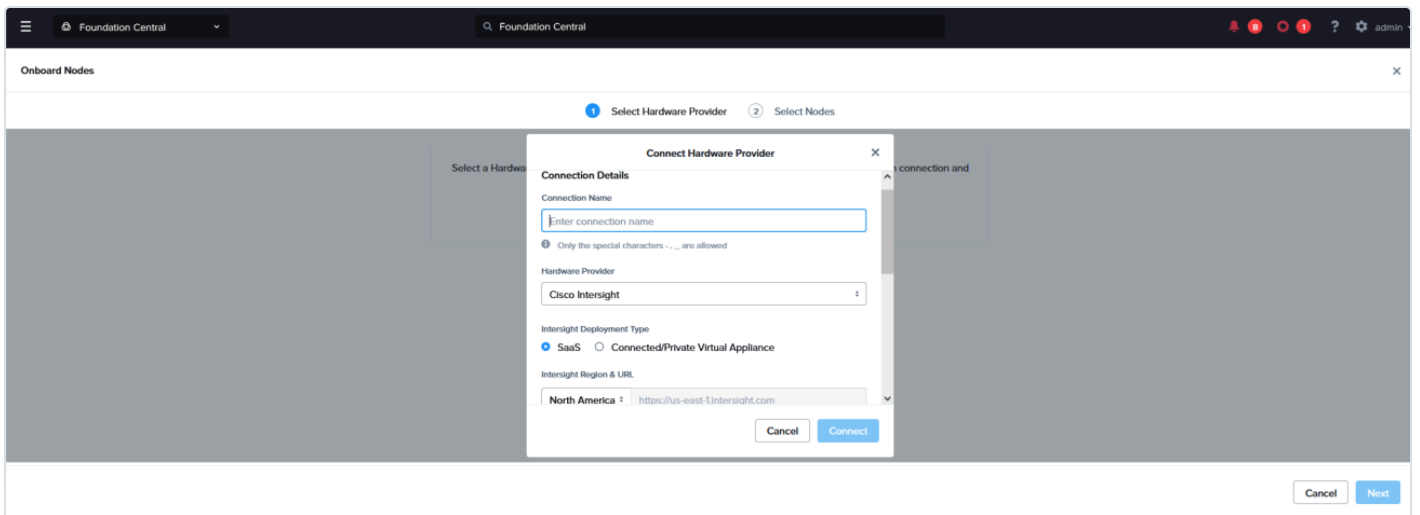

1. Select Intersight Standalone Mode and click Next

**Onboard Nodes**

1 Select Hardware Provider 2 Select Nodes

Select a Hardware Provider to onboard nodes to Foundation Central. Currently, only Cisco Intersight is supported and only a single connection is allowed at a time. To add a new connection, remove the existing one.

| Connection Name | Hardware Provider | URL                             |
|-----------------|-------------------|---------------------------------|
| intersight      | Cisco Intersight  | https://us-east-lintersight.com |

Connection has been saved.

**Node Management Mode**  
Select the management mode. In the next step, you will view the nodes based on the selected mode

☐ Intersight Managed Mode  
☒ Intersight Standalone Mode

Cancel Next

1. Select the node and click Onboard

**Onboard Nodes**

1 Select Hardware Provider 2 Select Nodes

Connection Name: **intersight** Management Mode: **Intersight Standalone Mode**

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click Refresh.

Type in a query Modify Filters

1 selected out of 1 Cisco Node 1-1 of 1 20 rows

| Node Serial                                     | Name             | Model          | Block Serial | Domain | Classification | Intersight Organizations | Intersight Tags | Memory (GB) | CPU (Core) |
|-------------------------------------------------|------------------|----------------|--------------|--------|----------------|--------------------------|-----------------|-------------|------------|
| <input checked="" type="checkbox"/> WZP283891L1 | C240-WZP283891L1 | UCSC-C240-M7SN | WZP283891L1  | -      | Nutanix        | ISM                      | -               | 512         | 32         |

Back Cancel Onboard

1. Click "Prepare Nodes for Cluster"

**Nodes** Auto Discovered Manually Onboarded

Onboard Nodes Prepare Nodes for Cluster Create Cluster Actions

View by Group by Management Mode

Group By: Management Mode Modify Filters

Viewing 1 grouped out of 1 Cisco Node 1-1 of 1

Management Mode: Intersight Standalone 1 Empty Groups

| Node Serial                          | Name             | Node Status | Model          | Domain | Intersight Organizations | Intersight Tags | Classification | Onboarded On           | Last Refreshed         |
|--------------------------------------|------------------|-------------|----------------|--------|--------------------------|-----------------|----------------|------------------------|------------------------|
| <input type="checkbox"/> WZP283891L1 | C240-WZP283891L1 | Onboarded   | UCSC-C240-M7SN | -      | ISM                      | -               | Nutanix        | Apr 10, 2025, 01:26 PM | Apr 10, 2025, 01:26 PM |

Unlock Navigation bar

1. Select the existing ISM cluster and click Next

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

You are viewing the clusters registered with Prism Central. Please select the cluster for which you want to prepare nodes.

Viewing 1 cluster

| Cluster Name | AOS Version | Hypervisor   | Node Count |
|--------------|-------------|--------------|------------|
| ISM          | 70.0.5      | AHV 10.0.0.1 | 3          |

Cancel Next

1. Select the node that will be added to the cluster and click Next

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Cluster: ISM

The following list shows the eligible nodes for the cluster. Please select nodes to prepare with the selected cluster.

Type in a query

1 selected out of 1 Cisco Node

| Node Serial | Name             | Model          | block_serial | Intersight Tags | Classification | Memory (GB) | Onboarded On          |
|-------------|------------------|----------------|--------------|-----------------|----------------|-------------|-----------------------|
| WZP283891LX | C240-WZP283891LX | UCSC-C240-M7SN | WZP283891LX  | -               | Nutanix        | 512         | May 7, 2025, 07:23 PM |

Back Cancel Next

1. Return to Cisco IMM tool and copy the AOS and AHV URLs

Foundation Central

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Provide the URL to download AOS and metadata from during imaging. The URLs must be accessible to Foundation Central.

AOS Download URL

[https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/nutanix\\_installer\\_package-release-ganges-70.0.5.iso](https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/nutanix_installer_package-release-ganges-70.0.5.iso)

AOS Metadata URL

[https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/generated-nutanix\\_installer\\_package-release-ganges-70.0.5.iso](https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/generated-nutanix_installer_package-release-ganges-70.0.5.iso)

Hypervisor

☐ Hypervisor AHV 10.0.0.1 is included in the AOS 70.0.5 package. I have verified and want to use it.

If you won't use the included hypervisor, provide the URL below to download the hypervisor from during imaging. The URLs must be accessible to Foundation Central. The checksum will be used to avoid re-downloading an already downloaded installer.

Hypervisor Download URL


[https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/AHV-DVD-x86\\_64-10.0.0.1-1.iso](https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/AHV-DVD-x86_64-10.0.0.1-1.iso)

Pre-computed SHA256 Checksum of Hypervisor Installer


7f6b213ef5766e8692627384a85032bdb37cbb53aef85757ac6de9e6be5e522d

Back Cancel Next

1. For the AHV checksum, the Cisco IMM tool can be used to generate the SHA256 checksum.

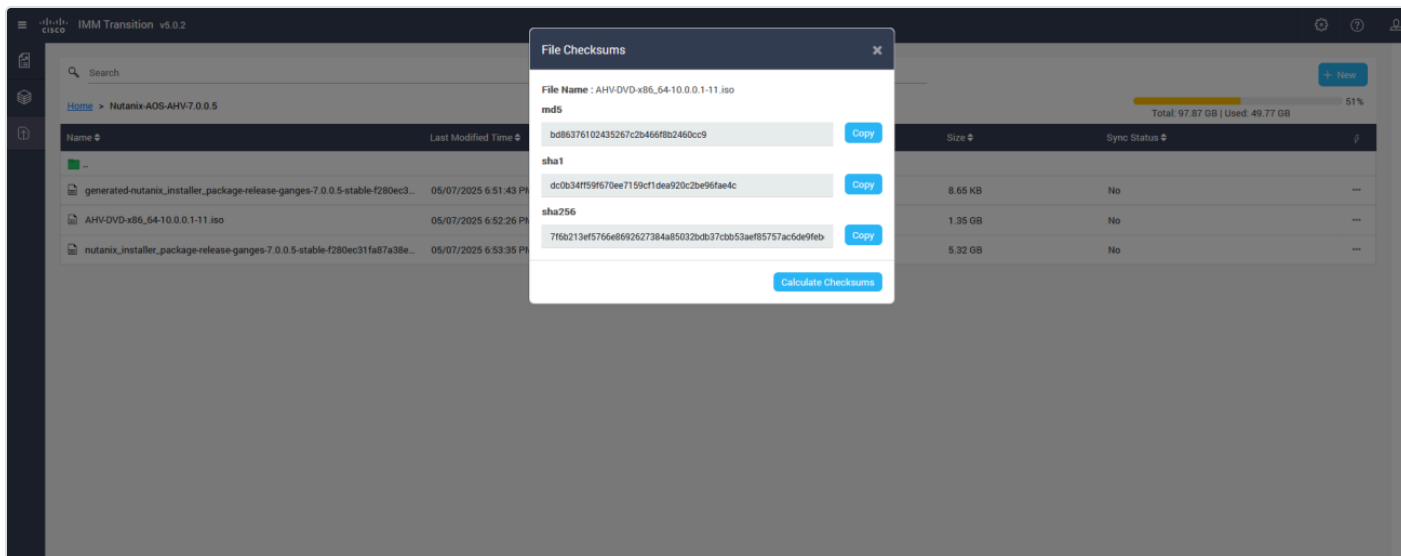

1. Host and CVM Network
2. Gateway= 198.18.128.1
3. Netmask= 255.255.192.0 /18
4. Host and CVM VLAN = 10
5. Click Next

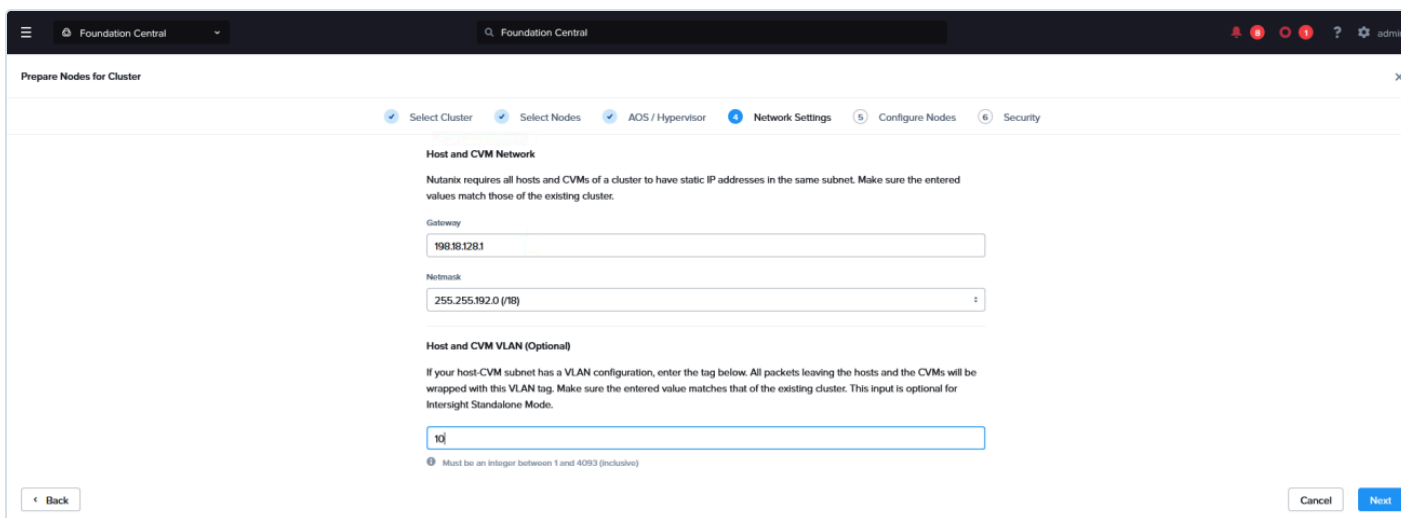

1. Fill in the IP range for the hypervisor and CVM

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** Security

1 Nodes

| Node Serial | Name             | Hypervisor IP<br><a href="#">Set Range</a> | CVM IP<br><a href="#">Set Range</a> | Hypervisor Hostname<br><a href="#">Set Range</a> |
|-------------|------------------|--------------------------------------------|-------------------------------------|--------------------------------------------------|
| WZP283891L1 | C240-WZP283891L1 | 198.18.135.23                              | 198.18.135.27                       | c240-node-4                                      |

Back Cancel Next

1. Generate a Foundation Central API key by clicking the “+ Generate New Key”. Provide an alias and click Done. From the drop-down menu select the alias and click Submit

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** **Security**

**Foundation Central API Key**

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key [+ Generate New Key](#)

ISM

API key was generated successfully.

Back Cancel Submit

1. The node preparation process begins

Foundation Central

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

**Node Preparation for Cluster "ISM"** Deployment in progress Start Date and Time: 5/9/2025, 05:50 PM

Phase 1A: Node Preparation 6% 1 node in progress Phase 1B: Node Imaging 0% Not started

**Cluster Details**

|                                     |                                                         |                                 |                                                                                                                                                                                                                                                                                                                                                                                                |
|-------------------------------------|---------------------------------------------------------|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Redundancy Factor<br>2              | Host CVM Subnet<br>198.18.128.1 / 255.255.192.0         | CVM NTP Servers<br>198.18.128.1 | AOS Installer URL<br><a href="https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/nutanix_installer_package-release-ganges-70.0.5-stable-1280ec31fa97a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz">https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/nutanix_installer_package-release-ganges-70.0.5-stable-1280ec31fa97a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz</a> |
| Cluster External IP<br>198.18.135.2 | Intersight Organization<br>Intersight-Nutanix           | CVM DNS Servers<br>198.18.133.1 | Hypervisor Installer URL<br><a href="https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/AH-V-DVD-x86_64-10.0.01-11.iso">https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/AH-V-DVD-x86_64-10.0.01-11.iso</a>                                                                                                                                                        |
| Host CVM VLAN ID<br>10              | Deployment UUID<br>dfc88d67-f927-48e3-7614-735621dc97e2 | LACP<br>No                      |                                                                                                                                                                                                                                                                                                                                                                                                |

1 Node In This Deployment [View Original Configuration](#)

| Node Serial | Block Serial | Position | Progress of Phase 1 | Status                                                                   | Host IP       | CVM IP        | Host Type | Host Name   |
|-------------|--------------|----------|---------------------|--------------------------------------------------------------------------|---------------|---------------|-----------|-------------|
| WZP283891L1 | WZP283891L1  | A        | 2%                  | [NodeConfiguration] Performing node specific configuration in Intersight | 198.18.135.23 | 198.18.135.27 | AH-V      | c240-node-4 |

Show Less

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment [Show Only Non-archived](#)

**Node Preparation for Cluster "ISM"** Deployment complete Start Date and Time: 5/9/2025, 05:50 PM [Go to Cluster Page](#) [Archive](#)

Phase 1A: Node Preparation 100% 1 node prepared Phase 1B: Node Imaging 100% 1 node finished

**Cluster Details**

|                                     |                                                         |                                 |                                                                                                                                                                                                                                                                                                                                                                                                  |
|-------------------------------------|---------------------------------------------------------|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Redundancy Factor<br>2              | Host CVM Subnet<br>198.18.128.1 / 255.255.192.0         | CVM NTP Servers<br>198.18.128.1 | AOS Installer URL<br><a href="https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz">https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz</a> |
| Cluster External IP<br>198.18.135.2 | Intersight Organization<br>Intersight-Nutanix           | CVM DNS Servers<br>198.18.133.1 | Hypervisor Installer URL<br><a href="https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-11.iso">https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-11.iso</a>                                                                                                                                                          |
| Host CVM VLAN ID<br>10              | Deployment UUID<br>d1c89d67-f927-48e3-76f4-73562fcd97e2 | LACP<br>No                      |                                                                                                                                                                                                                                                                                                                                                                                                  |

**1 Node In This Deployment** [View Original Configuration](#)

| Node Serial | Block Serial | Position | Progress of Phase 1 | Status                                | Host IP       | CVM IP        | Host Type | Host Name   |
|-------------|--------------|----------|---------------------|---------------------------------------|---------------|---------------|-----------|-------------|
| WZP283891L1 | WZP283891L1  | A        | <div></div> Done    | All operations completed successfully | 198.18.135.23 | 198.18.135.27 | AHV       | c240-node-4 |

[Show Less](#)

1. Once the node preparation is completed, click at the top drop-down menu and select infrastructure

Infrastructure

Dashboard

Reset Dashboard Data Density

Intelligent Operations widgets like VM Efficiency, Playbooks, and more are now available in [Operations Dashboard](#) in Intelligent Operations.

**Events** Last 24 hours

0 Critical 0 Warning 0 Info

**Cluster Quick Access**

ISM

**Cluster Storage**

| Cluster | Usage       | Data Resiliency |
|---------|-------------|-----------------|
| ISM     | <div></div> | OK              |

**Cluster Latency** Last Hour

| Cluster | Latency |
|---------|---------|
| ISM     | 0.52 ms |

**Cluster Memory Usage** Last Hour

| Cluster | Usage  |
|---------|--------|
| ISM     | 12.84% |

**Cluster CPU Usage** Last Hour

| Cluster | Usage |
|---------|-------|
| ISM     | 4.04% |

**Controller IOPS** Last Hour

| Cluster | IOPS |
|---------|------|
| ISM     | 157  |

**Power Usage**

This service is supported in Large PC and above only.

1. On the left menu, select Hardware > Clusters

Infrastructure

Clusters List

1 Total Clusters

[Create Cluster](#) [Actions](#)

View by Group by Modify Filters

1 selected out of 1 Cluster

| Name | AOS Version | Upgrade Status | Hypervisors | Host Count | VM Count | Cluster Runway | Inefficient VMs |
|------|-------------|----------------|-------------|------------|----------|----------------|-----------------|
| ISM  | 7.0.0.5     | Succeeded      | AHV         | 3          | 4        | -              | -               |

1. Check the ISM box and click on actions then select Expand Cluster

1. Check the box of the discovered node and click next

1. On the next page select HCI from the drop-down menu and click next

1. Add a name c240-node-4 and then click next

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ **Configure Host**
☐ Networking
 ☐ Software Check
 ☐ Review

Host name is required for all Hyper-V clusters, but can be skipped for AHV and ESXi clusters.  
You can change a Host Name or IP by clicking on its table cell.

1 Selected Hosts

| Model/Serial                       | Host Position | Name | CVM IPv4      | CVM IPv6 | Hypervisor IPv4 | Hypervisor IPv6 | IPMI IPv4    | IPMI IPv6 |
|------------------------------------|---------------|------|---------------|----------|-----------------|-----------------|--------------|-----------|
| Cisco UCS C240-M7SN<br>WZP263899L1 | A             |      | 198.18.135.27 |          | 198.18.135.23   |                 | 198.18.143.2 |           |

1. On the networking step click on skip Networking

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ **Networking**
☐ Software Check
 ☐ Review

Select the appropriate active and backup uplinks for the hosts.

1 Selected Hosts

| Model/Serial                       | Host Position | Active Uplink                     | Backup Uplink                     |
|------------------------------------|---------------|-----------------------------------|-----------------------------------|
| Cisco UCS C240-M7SN<br>WZP263899L1 | A             | Expand row to configure switches. | Expand row to configure switches. |

1. For the software check, let's wait for some time and then click next

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ **Software Check**
☐ Review

AOS and Hypervisor version on new hosts need to be the same as the cluster.  
If AOS version is lower than that of the cluster's then a reimage is not required and an upgrade will happen instead.

1 Selected Hosts

| Model/Serial                       | Host Position | Host Type | Hypervisor | AOS Version | Compatibility |
|------------------------------------|---------------|-----------|------------|-------------|---------------|
| Cisco UCS C240-M7SN<br>WZP263899L1 | A             | HCI       | AHV        | 7.0.0.5     | ✓ Compatible  |

1. Under review step, click Run Prechecks, wait until it completes

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

**Prechecks**

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

60 %

1. Once the precheck is completed, click on Expand Cluster

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

**Prechecks**

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

✓ Prechecks passed. Continue to expand the cluster.

100 %

Infrastructure

Clusters • List

1 Total Clusters

Create Cluster Actions

☆ Type text to filter by

1 selected out of 1 Cluster

Export 1-1 of 1 20 rows

| Name | ADIS Version | Upgrade Status | Hypervisors | Host Count | VM Count | Cluster Runway | Inefficient VMs |
|------|--------------|----------------|-------------|------------|----------|----------------|-----------------|
| ISM  | 70.0.5       | Succeeded      | AI-V        | 3          | 4        | -              | -               |

Unlock Navigation Bar

1. To review the progress of the cluster expansion, click task at the top right and click view all task

Infrastructure Clusters \* List

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

☆ Type text to filter by

1 selected out of 1 Cluster

| Name | AOS Version | Upgrade Status | Hypervisors |
|------|-------------|----------------|-------------|
| ISM  | 70.0.5      | Succeeded      | AHV         |

Recent Tasks

- Expand Cluster: ISM 24%
- Expand Cluster: ISM 100%
- Hypervisor Image Upload Check: ISM 100%
- Fetching cluster networks and uplinks: ISM 100%
- Discover Unconfigured Nodes: ISM 100%
- Security STIG scan 100%

View All Tasks

1 Total Clusters

Group by

Modify Filters

of 1 20 rows

Inefficient VMs

Infrastructure Tasks

Overview

A new and improved version for Tasks experience is available. To use that, you need to upgrade all the connected clusters to AOS 7.0 or above. You can find more information [here](#).

Type text to filter by

Modify Filters

Viewing all 54 Tasks

Export 1 - 20 of 54 20 per page

| Task                               | Entity Affected | Cluster | Progress | Status    | Created On            | Duration             | Sub-Tasks |
|------------------------------------|-----------------|---------|----------|-----------|-----------------------|----------------------|-----------|
| Node preparation for expand ...    | -               | ISM     | 86%      | Running   | Apr 14, 2025, 10:5... | 1 minute 7 seconds   | 5         |
| Expand Cluster                     | ISM             | -       | 86%      | Running   | Apr 14, 2025, 10:5... | 2 minutes 9 seco...  | 1         |
| Expand Cluster                     | ISM             | -       | 100%     | Succeeded | Apr 14, 2025, 10:5... | 1 minute 15 seconds  | 1         |
| Hypervisor Image Upload Che...     | ISM   Details   | -       | 100%     | Succeeded | Apr 14, 2025, 10:5... | 24 seconds           | 1         |
| Fetching cluster networks and...   | ISM   Details   | -       | 100%     | Succeeded | Apr 14, 2025, 10:5... | 16 seconds           | 1         |
| Discover Unconfigured Nodes        | ISM   Details   | -       | 100%     | Succeeded | Apr 14, 2025, 10:4... | 23 seconds           | 1         |
| Successfully finished STIG run ... | -               | ISM     | 100%     | Succeeded | Apr 13, 2025, 12:2... | Under 1 second       | -         |
| Running refresh scan               | -               | -       | 100%     | Succeeded | Apr 13, 2025, 12:2... | 1 minute 53 secon... | 4         |

1. To confirm the new host has been added to the existing cluster, select Clusters on the left side

Infrastructure Clusters \* List

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

☆ Type text to filter by

View by Group by


Modify Filters

Viewing 1 Cluster


Export 1 - 1 of 1 20 rows

| Name | AOS Version | Upgrade Status | Hypervisors | Host Count | VM Count | Cluster Runway | Inefficient VMs |
|------|-------------|----------------|-------------|------------|----------|----------------|-----------------|
| ISM  | 70.0.5      | Succeeded      | AHV         | 4          | 5        | -              | -               |


1. Return to Prism Element to review on the cluster main dashboard the Node count

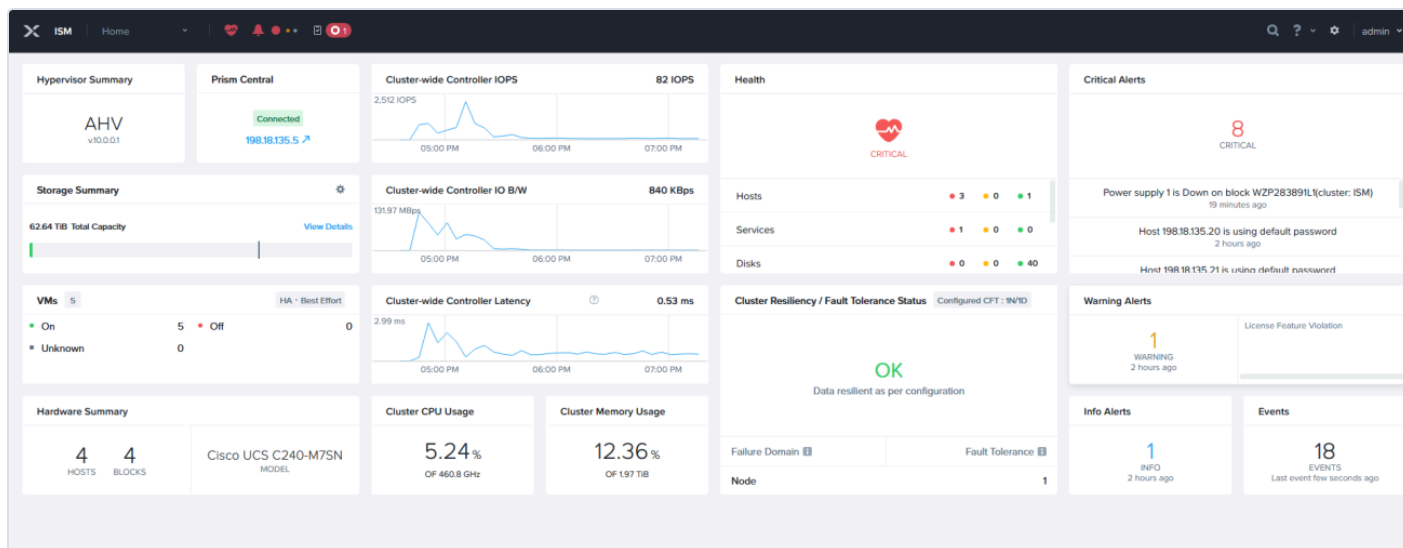


1. Click Home at the top and from the drop-down menu select LCM

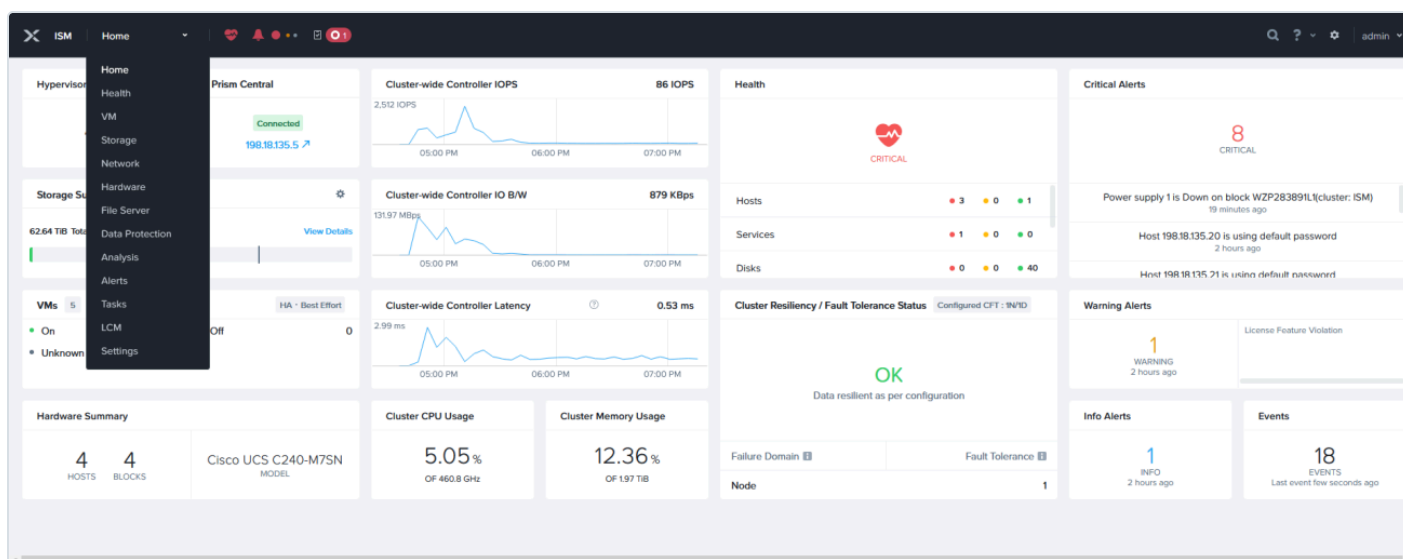


1. Select inventory and click Perform inventory

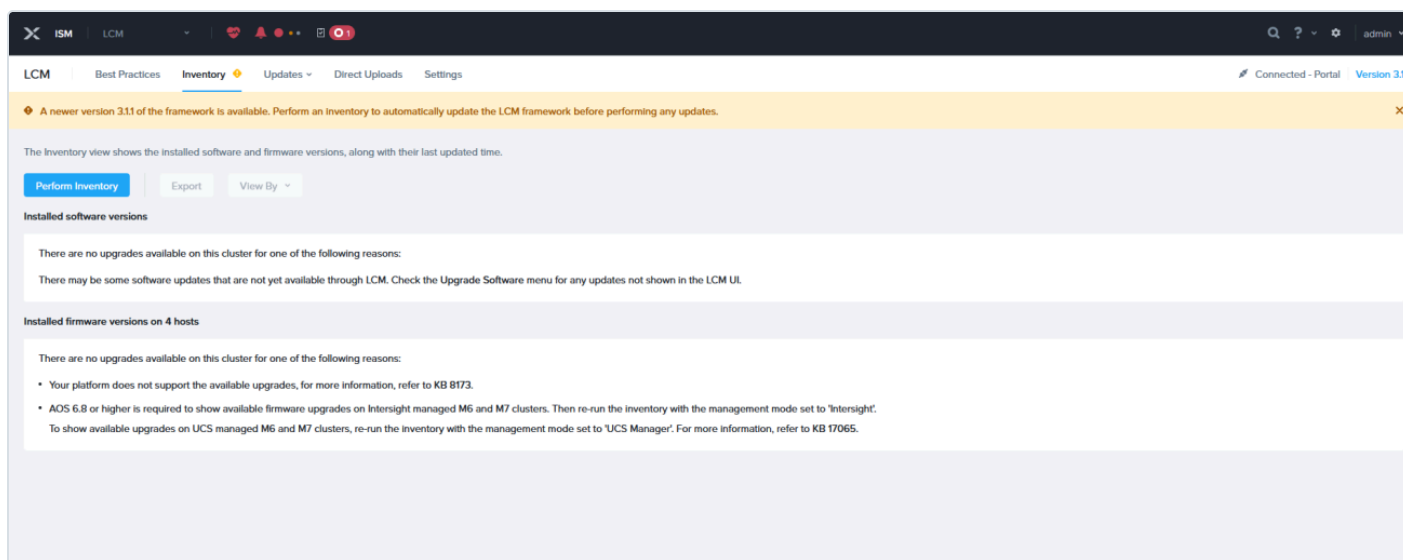


1. Click Proceed

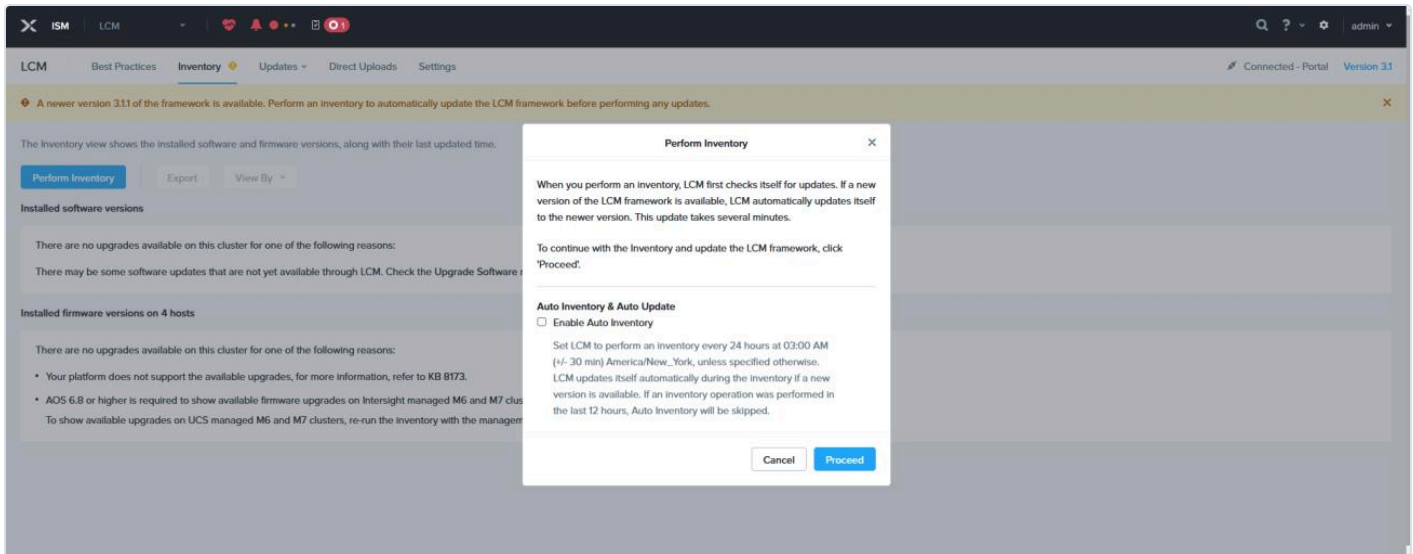

1. From the drop down select standalone Cisco IMC and click continue

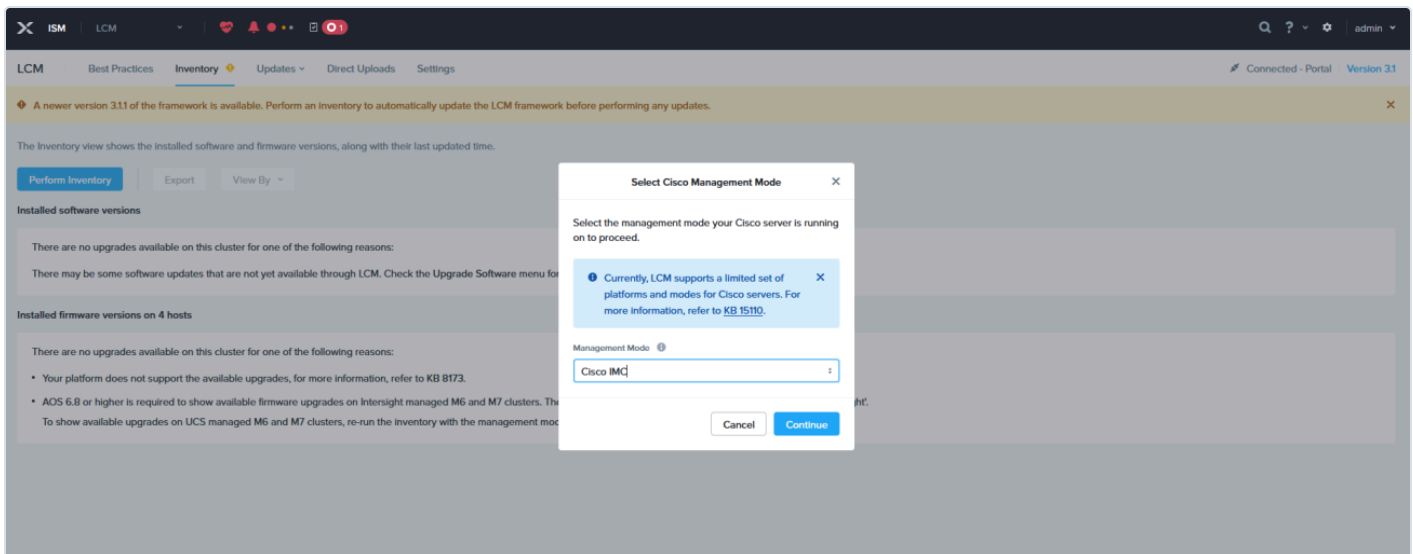

1. Wait until the Inventory completes

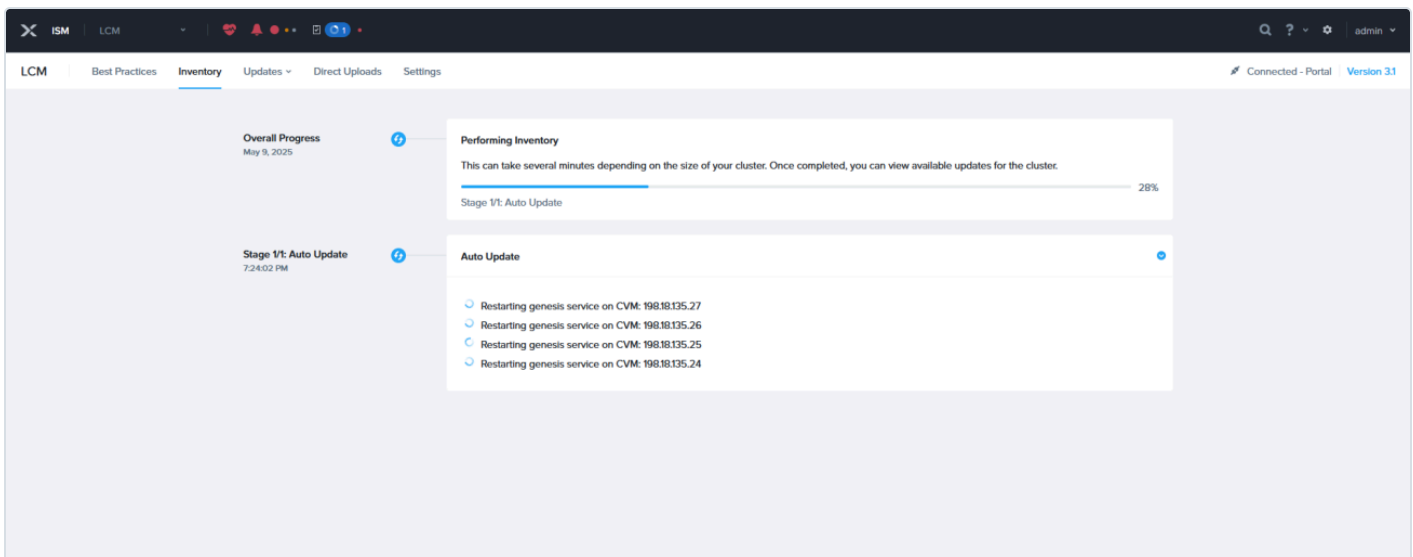

## 1. Once it's completed return to inventory

**Overall Progress**  
April 14, 2025

**Inventory completed**  
Your inventory was successfully updated. Click the button below to return to your inventory overview.

Stage 3/3: Inventory

[Return to Inventory](#)

**Stage 1/3: Auto Update**  
11:12:35 AM – 11:14:57 AM

**Auto Update**

**Stage 2/3: Precheck**  
11:15:14 AM – 11:15:27 AM

**LCM Framework Check**

**Stage 3/3: Inventory**  
11:15:29 AM – 11:16:21 AM

**Download**

**Inventory Task**

## 1. Click updates and select software to review all available updates

**Updates**

The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu.

[View Upgrade Plan](#) [Pre-Upgrade](#) [Filter](#)

Viewing all 8 Software Updates

| Software                                | Available Version                                        | Current Version       | Last Updated | Release Notes                      |
|-----------------------------------------|----------------------------------------------------------|-----------------------|--------------|------------------------------------|
| <input type="checkbox"/> AHV hypervisor | 10.01<br>1 version update                                | 10.0.01<br>4 entities |              | <a href="#">View Release Notes</a> |
| <input type="checkbox"/> AOS            | 7.01<br>Release Date: March 19, 2025<br>1 version update | 70.0.5                |              | <a href="#">View Release Notes</a> |
| <input type="checkbox"/> FSM            | 5.11<br>3 version updates                                | 5.0.01                |              |                                    |
| <input type="checkbox"/> Foundation     | 5.71<br>1 version update                                 | 5.7                   |              | <a href="#">View Release Notes</a> |
| <input type="checkbox"/> NCC            | 5.11<br>1 version update                                 | 5.1.0                 |              | <a href="#">View Release Notes</a> |

## 1. This is optional if you would like to apply the updates available or keep the cluster with the current version.

## What's Next

---

| Reference | Description |
|-----------|-------------|
|           |             |