
CISCO GLOBAL DEMO ENGINEERING · CUSTOMER PROOF OF CONCEPT

Cisco Unified Edge

Nutanix Unified Edge

1 October 2026

Esteban Arguedas

eargueda@cisco.com

Contents

Overview

Environment

Get Started

Scenario 1

Scenario 2

About this CPOC

Cisco Unified Edge with Nutanix is a joint, software-defined infrastructure platform designed to extend data center compute, networking, security, and storage directly to edge locations. By marrying Cisco's edge-optimized hardware and cloud-management SaaS with Nutanix's enterprise-grade hyperconverged and cloud-native software stack, this joint architecture solves the core challenge of managing distributed, remote edge locations at scale without requiring dedicated on-site IT staff.

Scope

Goals

After completing these scenarios, you will know how to claim, deploy and configure the Nutanix cluster with Cisco Intersight.

What you'll do

Scenario	Description
Scenario 1	Configure Hardware Provider
Scenario 2	TODO

See the [Environment](#) page for lab IP addresses, credentials and equipment, and [Get Started](#) to begin.

Disclaimer

Test results are suitable to the specific design, configuration, test procedure, and types of switches deployed in the environment described in this document.

This document is provided "As-Is," without warranty of any kind, express or implied, including without limitation those of merchantability, fitness for a particular purpose, and non-infringement arising from a course of dealing usage or trade practice.

All printed copies and duplicate soft copies are not considered controlled; therefore, please refer to the original online version for the latest version.

Document history

Revision	Date	Author	Description	Version
1	1 october 2026	Arguedas	Intersight – Nutanix UE use cases	1.0





[Start the Lab](#) [Convert to PDF](#)

Environment

IP Table

TODO: replace with the lab's Host Name / IP Address / Credentials / Model table.

Host Name	IP Address	Credentials	Model

Equipment – CPOC Lab

TODO: replace with the required equipment table.

Quantity Required	Model	Software Version

Design and Topology Diagram

TODO: add the topology diagram image once available, e.g.:

![Topology diagram](images/topology-01.png)

Get Started

TODO: add the steps to initiate the lab session and connect to the workstation, e.g.:


1. Initiate your dCloud session.
2. Connect to the workstation with Cisco Secure Client VPN and the local RDP client on your laptop.

Ready to go? Head to [Scenario 1](#).

Scenario 1 - Configure Hardware Provider

This scenario will guide you how to add the hardware provider


On the Desktop click the Active.html icon to access the Intersight login, on the next page click on the Hyperlink “Click here to login”

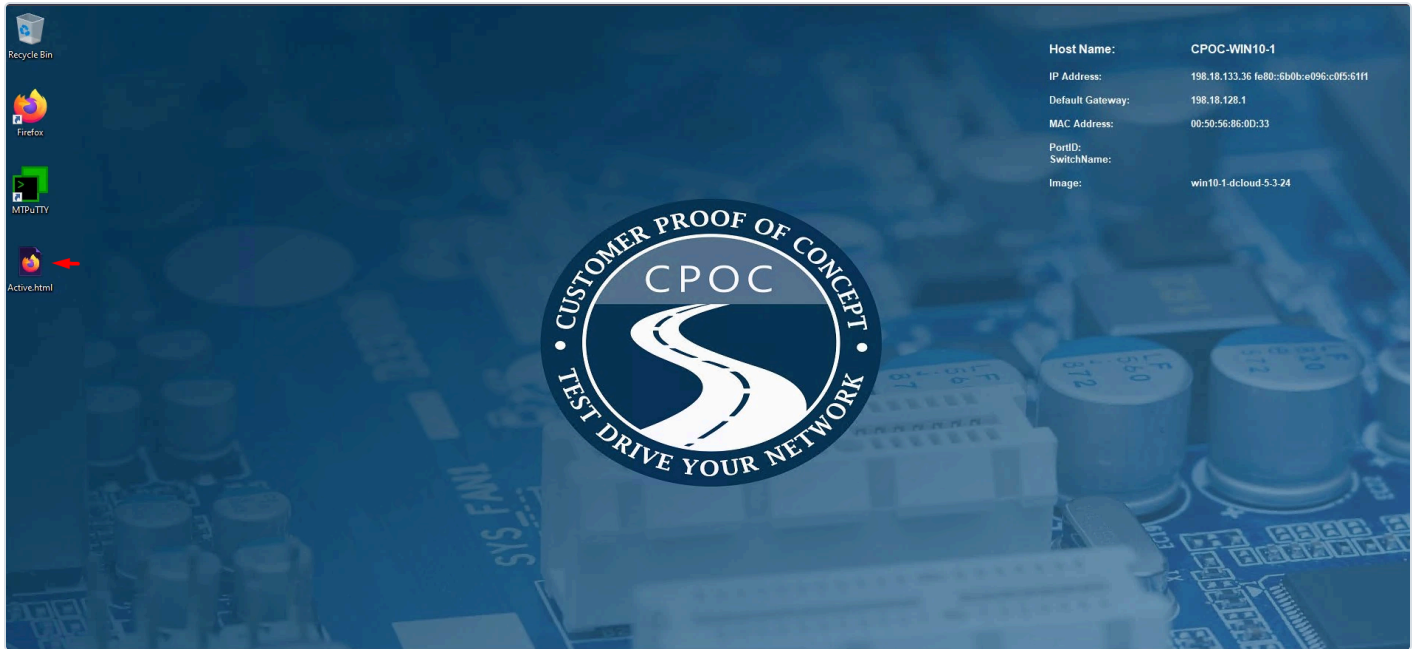



In the resulting window click Go to intersight, this will do the auto-login

Note

If requires accessing Intersight from the cpoc-win10-2, copy the URL and paste on the second windows virtual machine, then click Go to Intersight

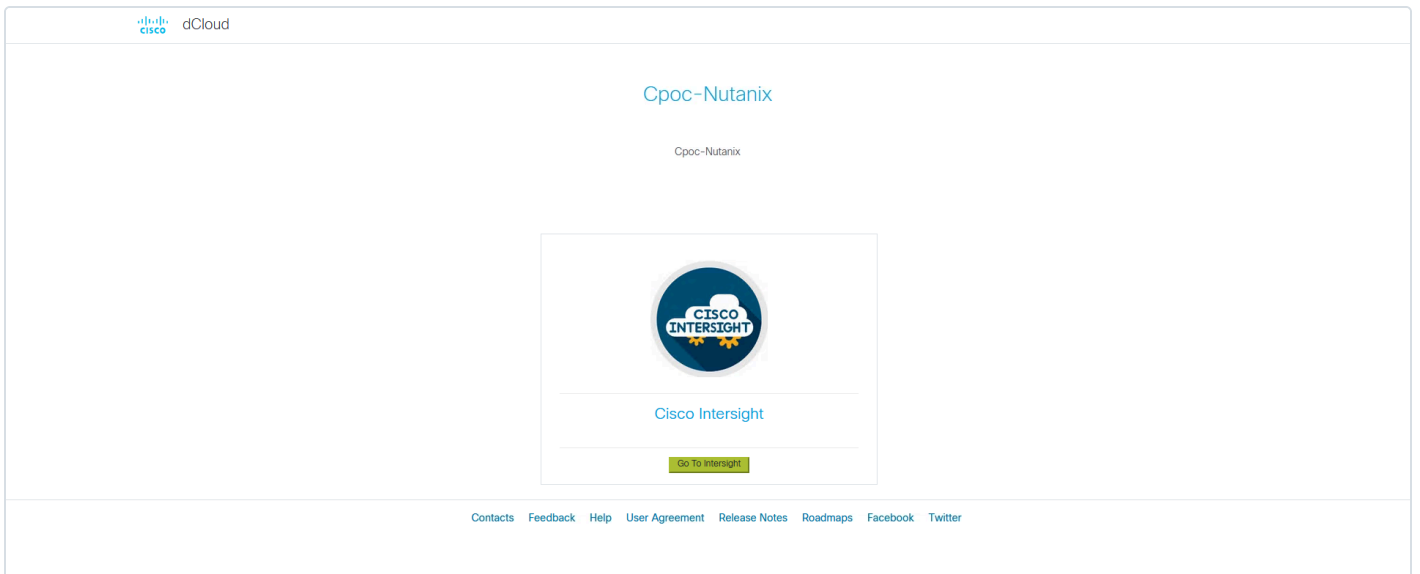

On the left page of Intersight, under Settings, click Keys Click “Generate API key” using schema version 3 for use by Nutanix Foundation Central. Be sure to save the Secret Key to a file. It will only be shown once

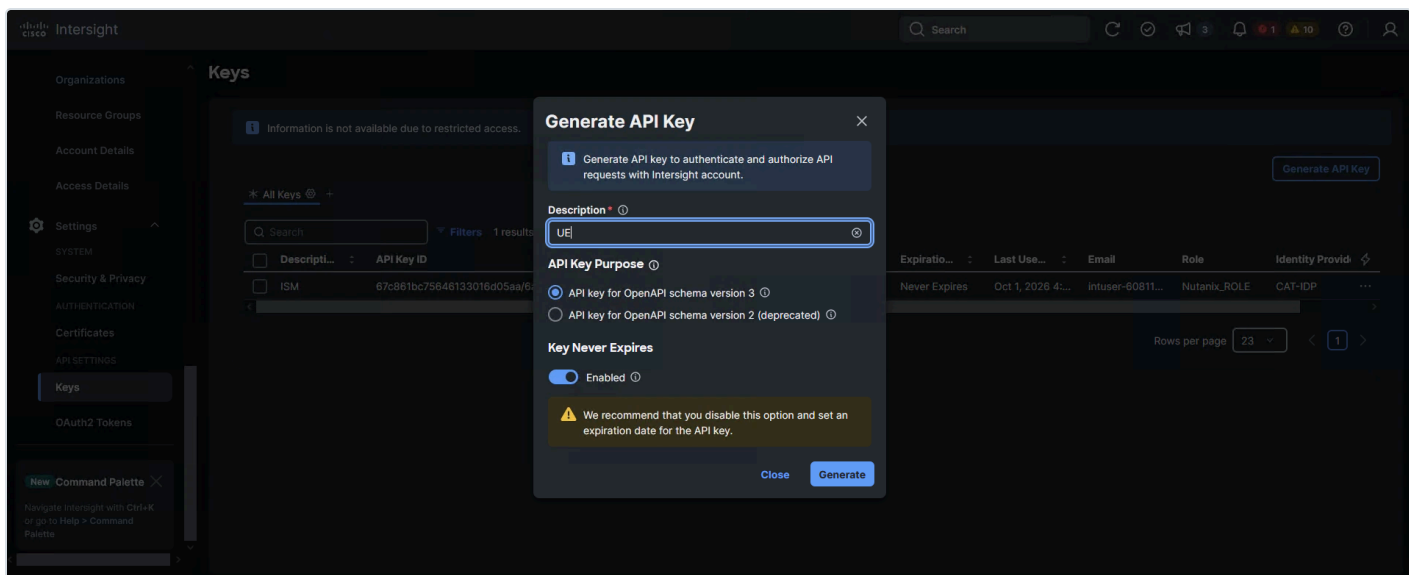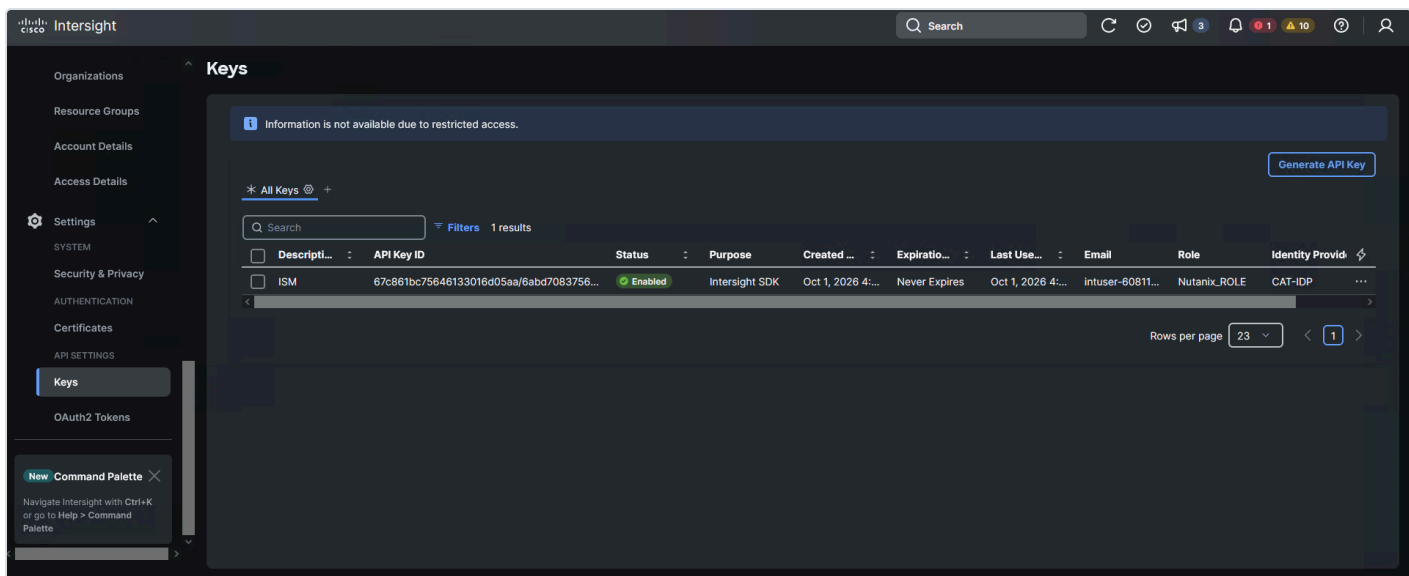


Save the API Key ID and Secret Key in the Desktop


At the top on the bookmark, click on Foundation Central 2.2




Open the Foundation Central Appliance VM GUI using a web browser at <https://:9440> Log in as the user "admin" using the password C1sco12345!

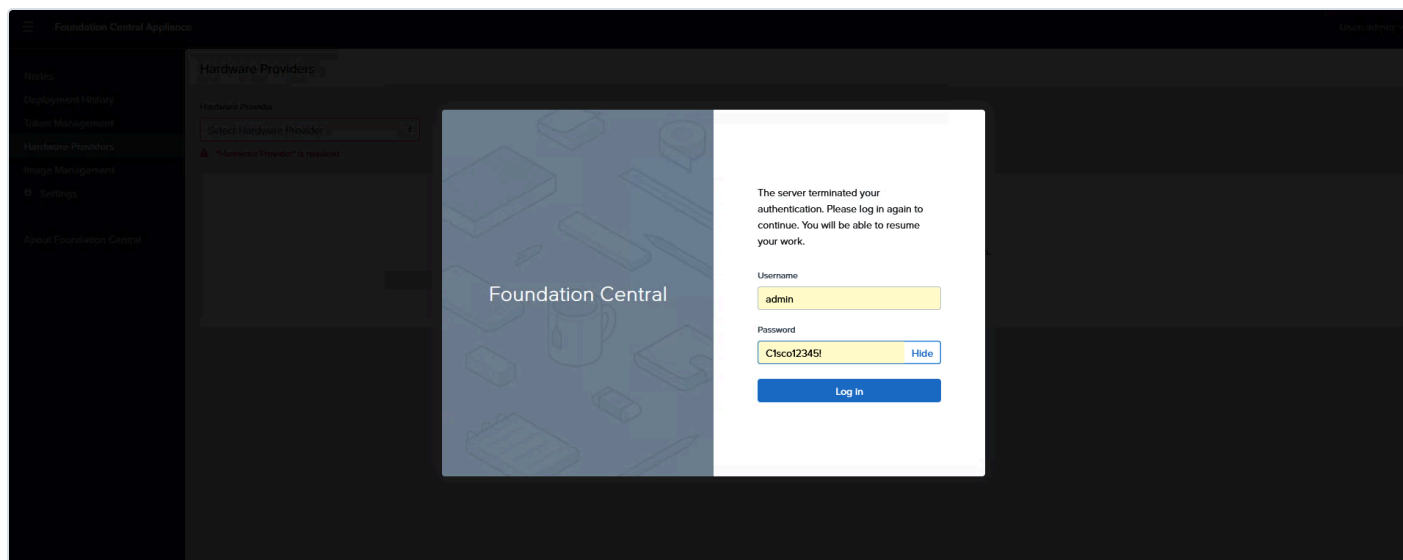


Click Hardware Providers on the left. Select Cisco Intersight from the dropdown list, then click Create Cisco-Intersight Connection.

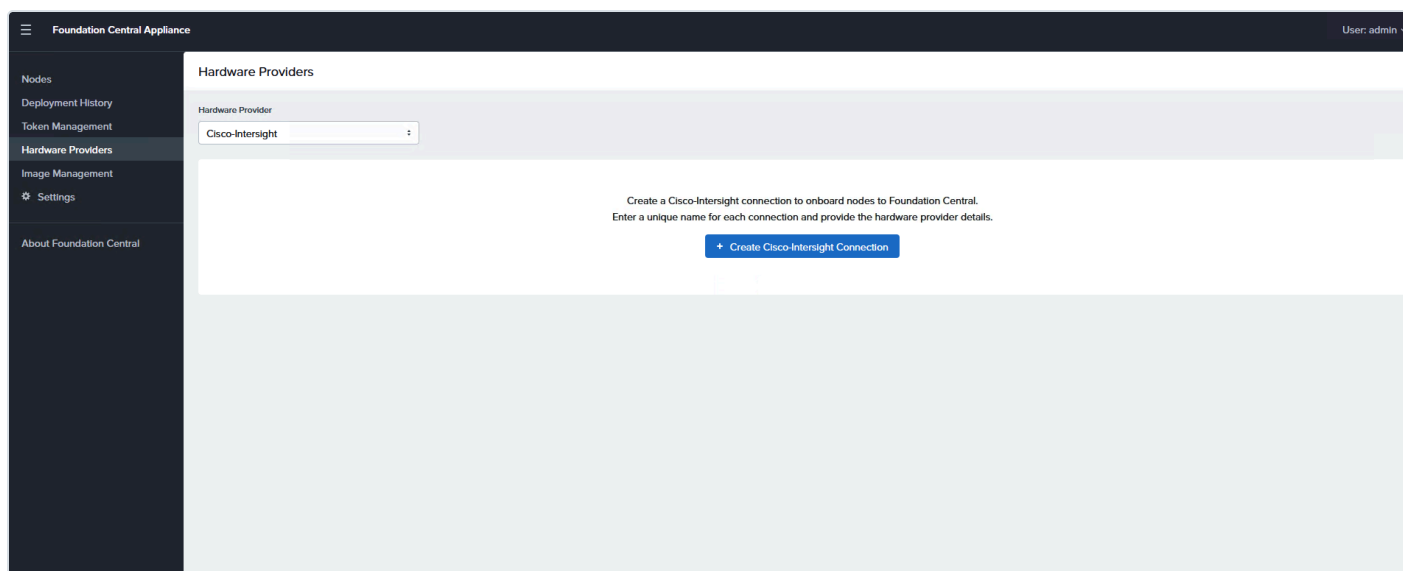


Give the connection a name, then select the deployment type; either SaaS (in the cloud) or a local CVA/PVA, then click Next.

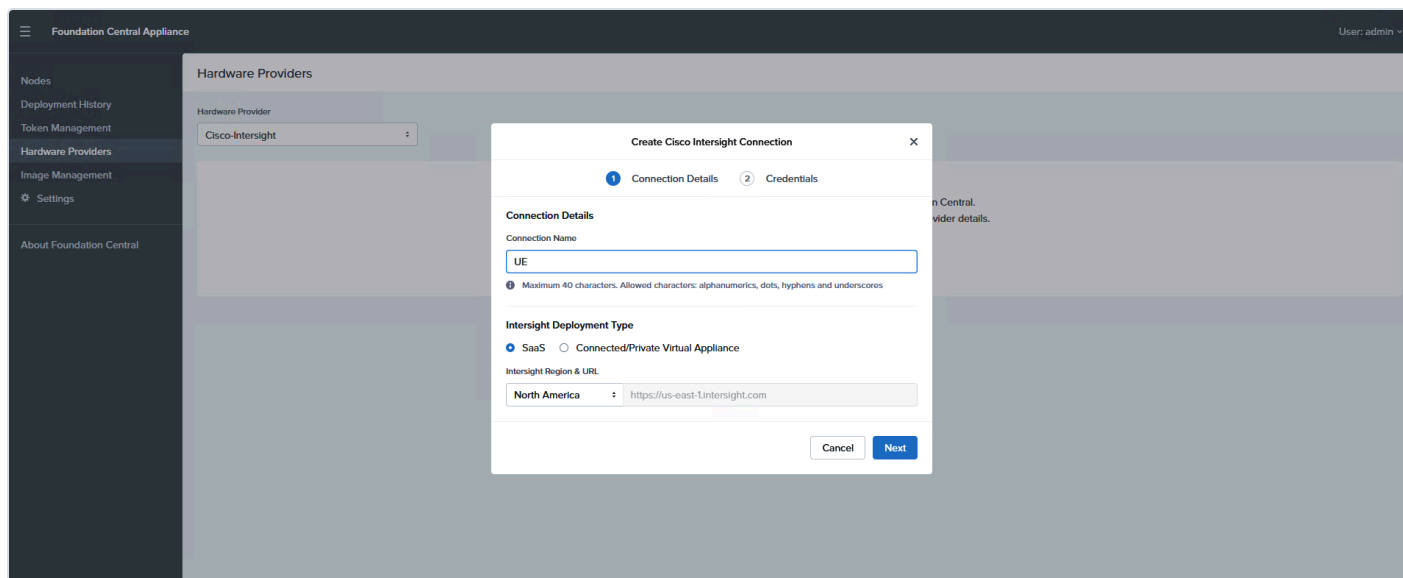

Enter the API Key ID and Secret Key for Cisco Intersight SaaS or the CVA/PVA being used. Once the connection successfully saves nodes can be onboarded.

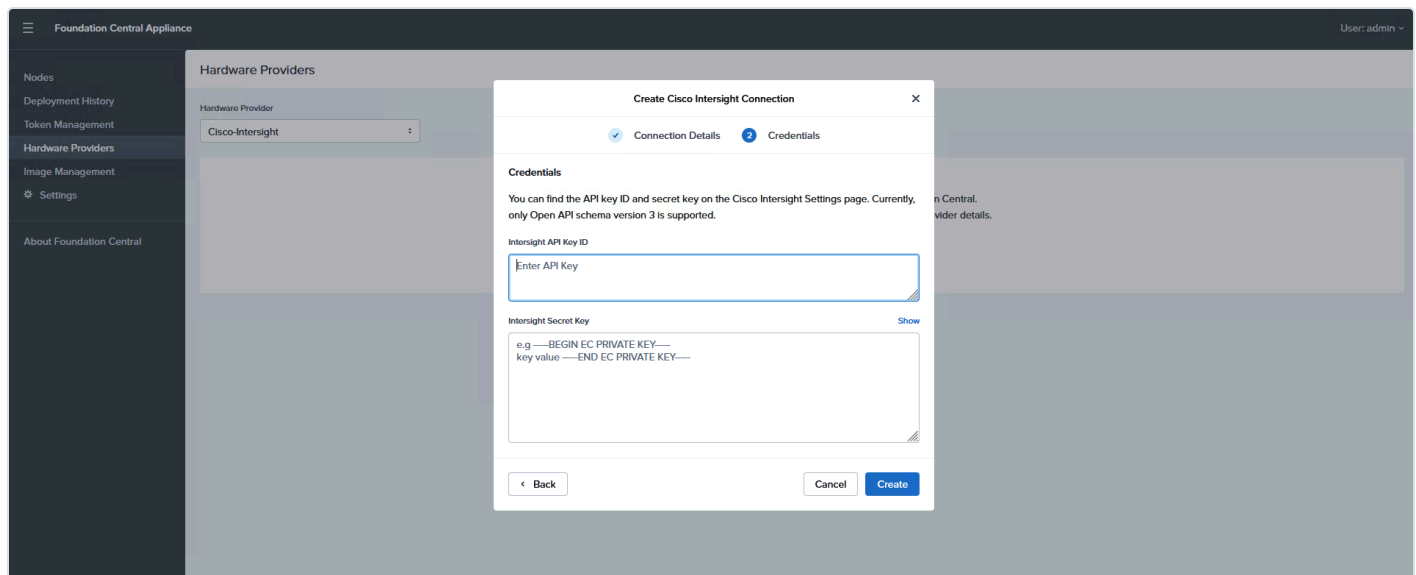


Click Image Management on the left and then click Upload Image.

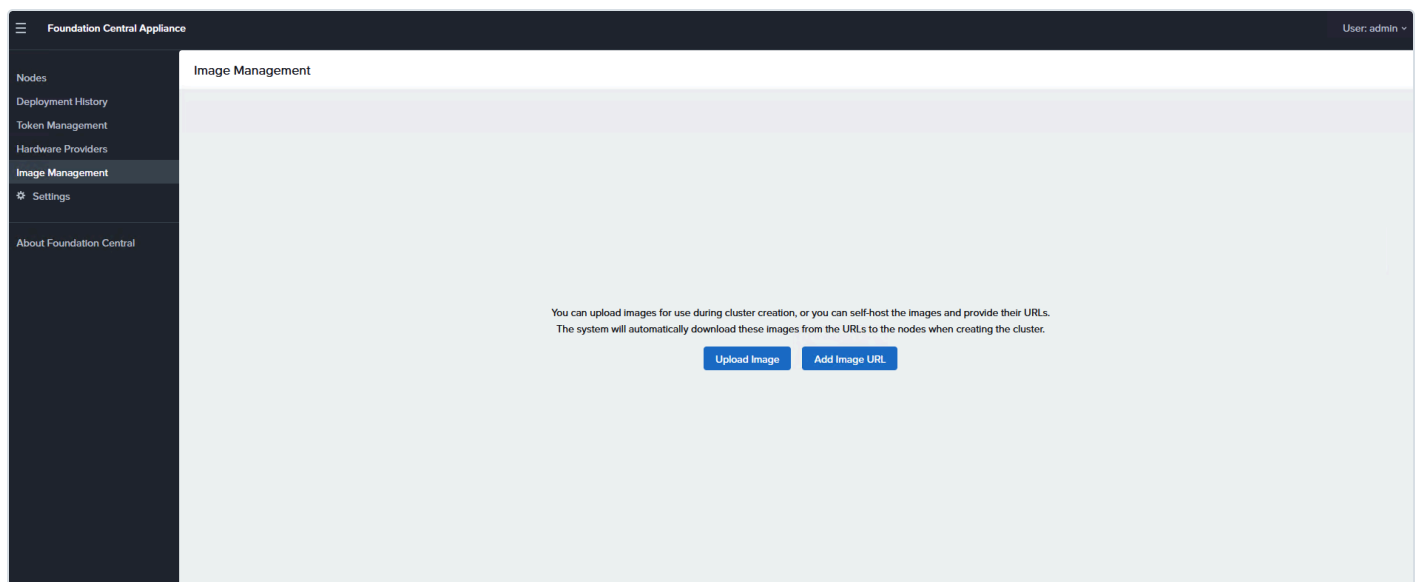



Where to get the images?




Login into Cisco IMM Transition tool, the access is located on the bookmark, In the Application click in Software Repository, you will see some folders for different versions, for this deployment, we offer the option to select one of the Nutanix AOS and the hypervisor which is supported by the servers, check the versions and select the one you like to deploy using AOS with AHV hypervisor or check below the options of VMware ESXi

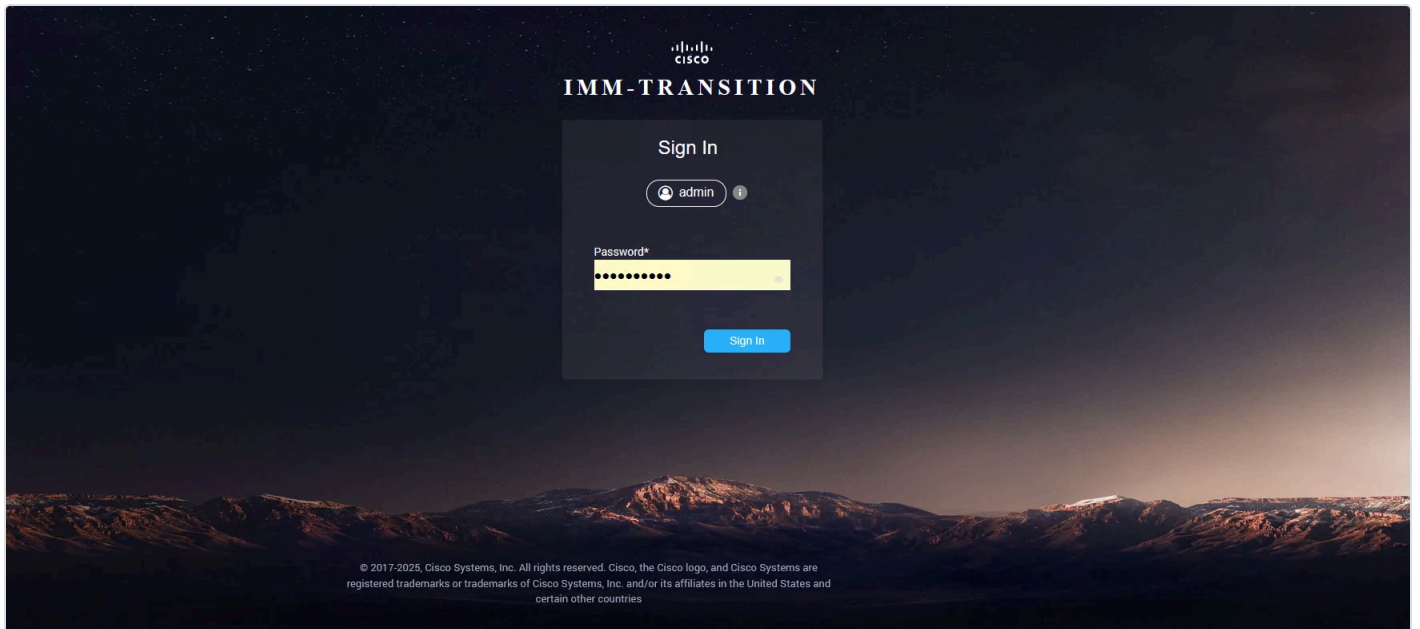



Choose one of the options to deploy the new cluster, access the desired folder and download the AOS and AHV, click the Ellipsis at the right side, then select download

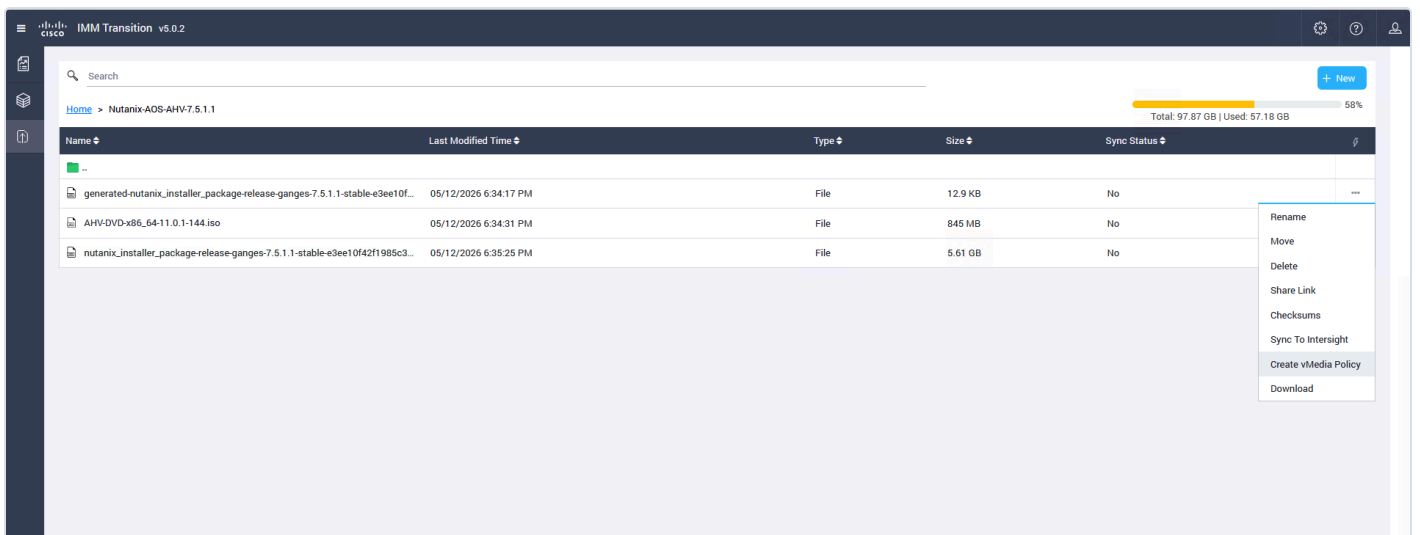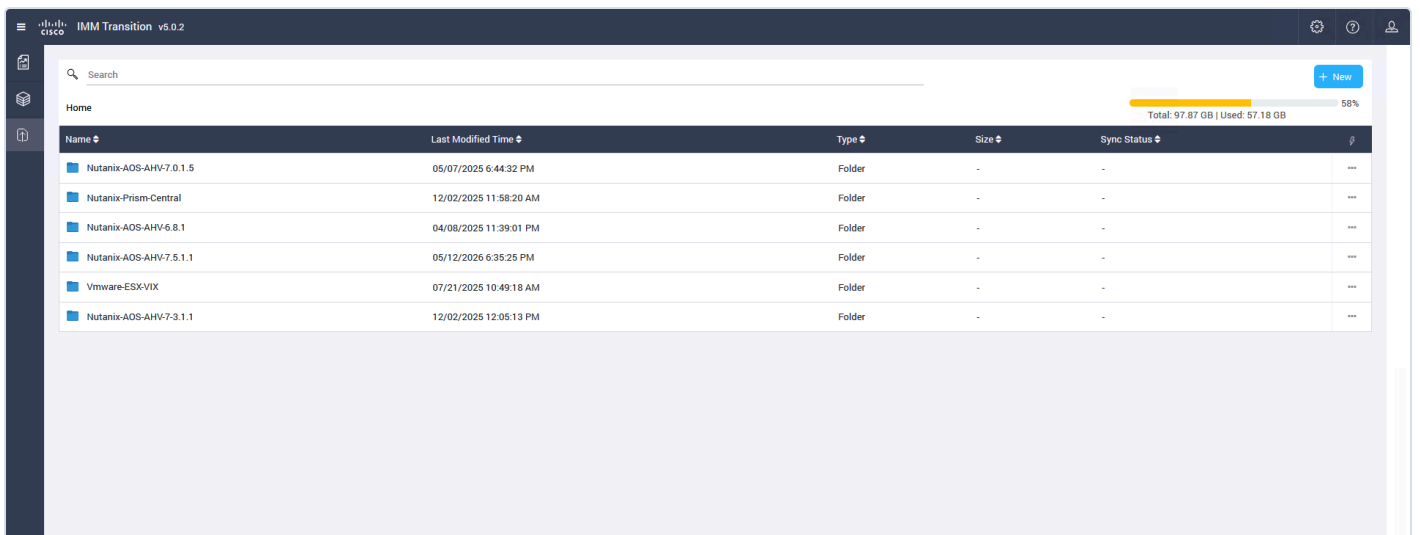


Return to Foundation Central and Select the image type of AOS or Hypervisor and give the image a name. Select the image file, metadata JSON or checksum then click Upload Image. Repeat the process until a supported AOS software installer and an AHV hypervisor installer are both uploaded.

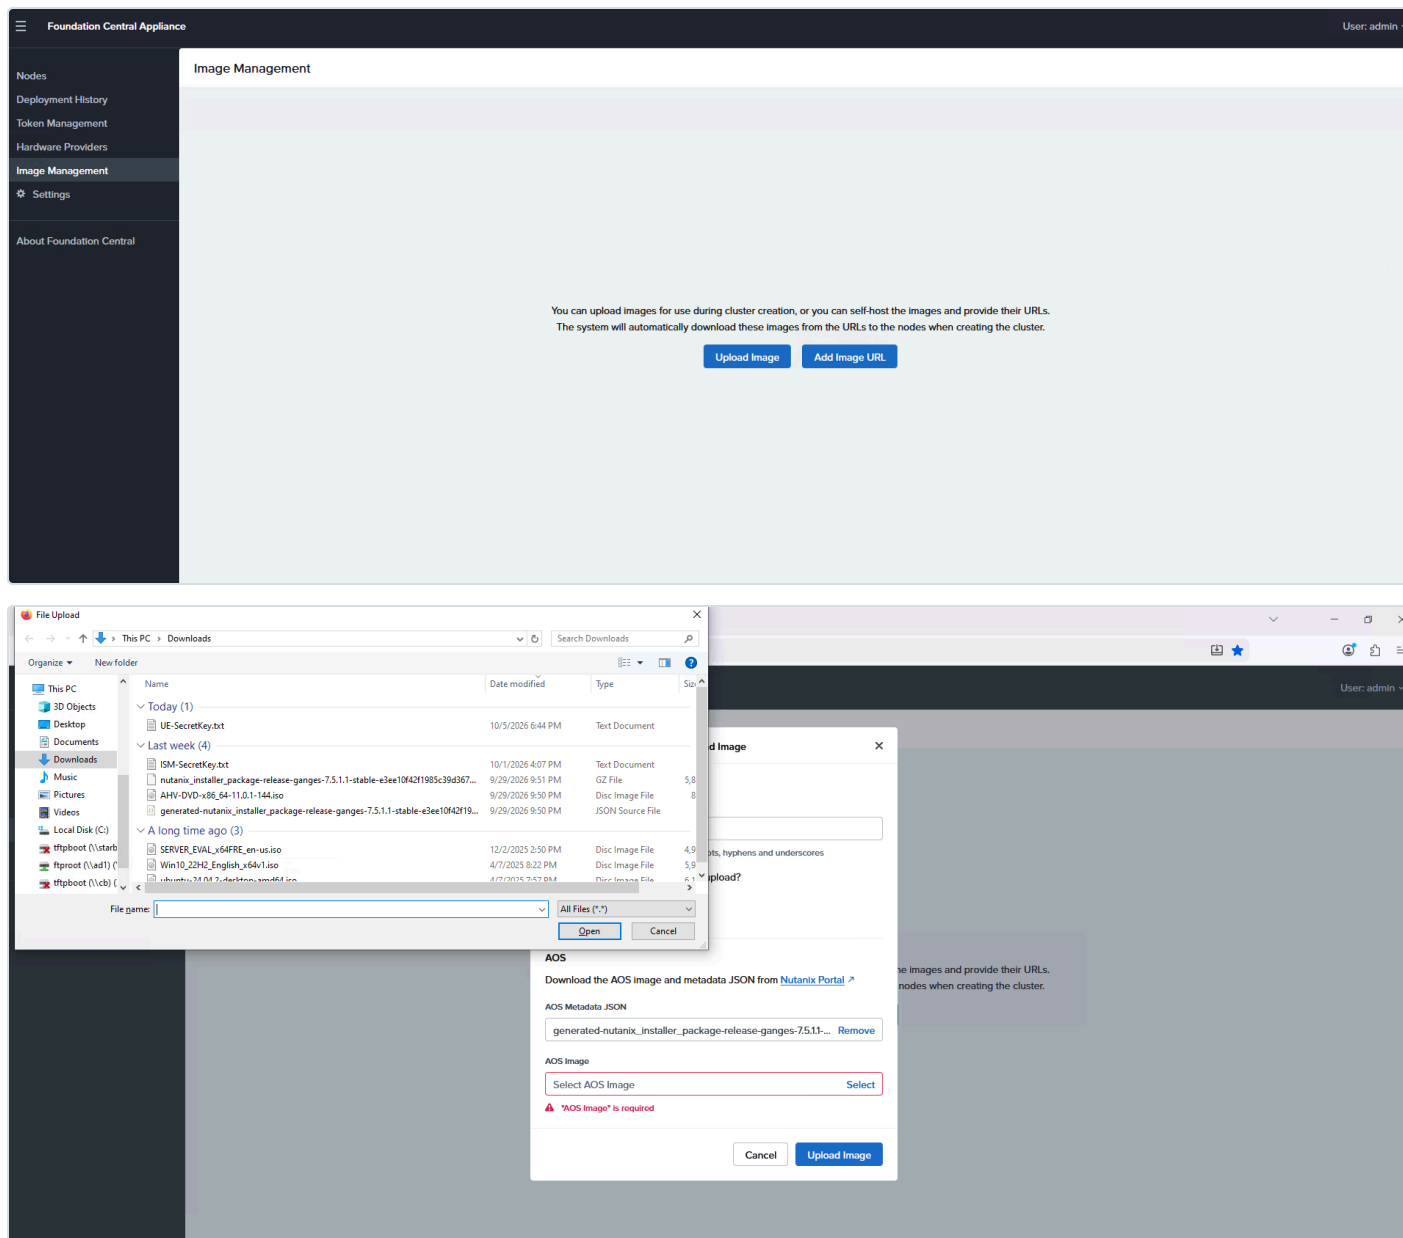


You'll need to generate the Checksum from the IMM Transition tool for the Hypervisor OS.

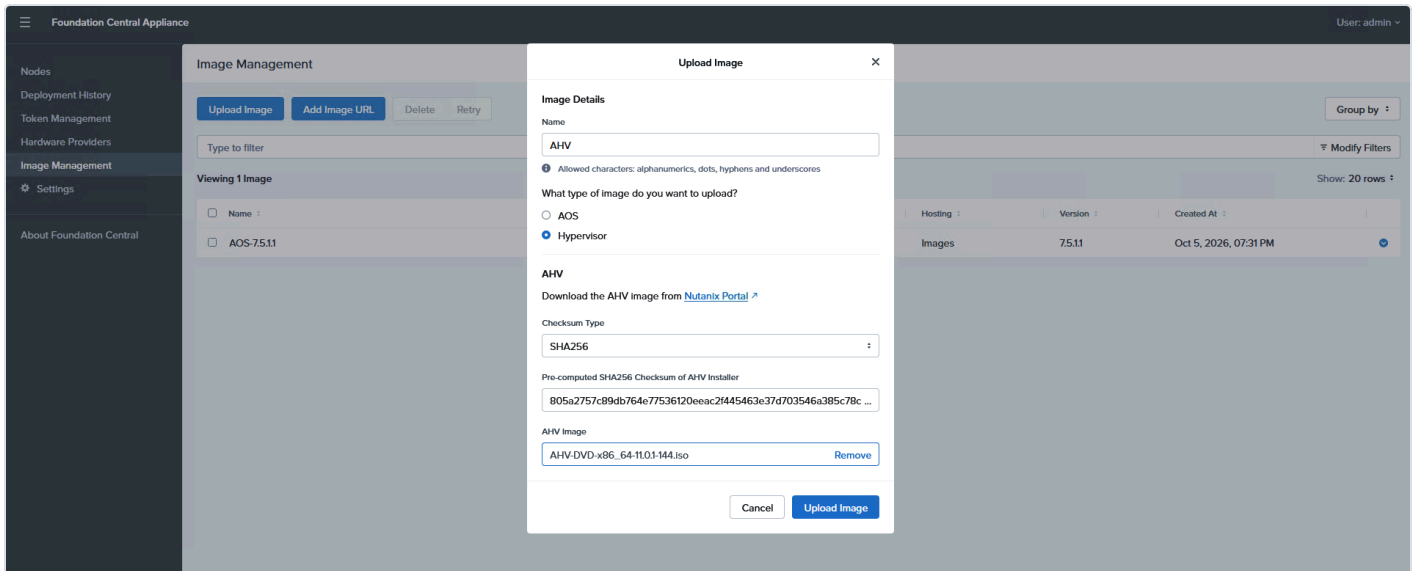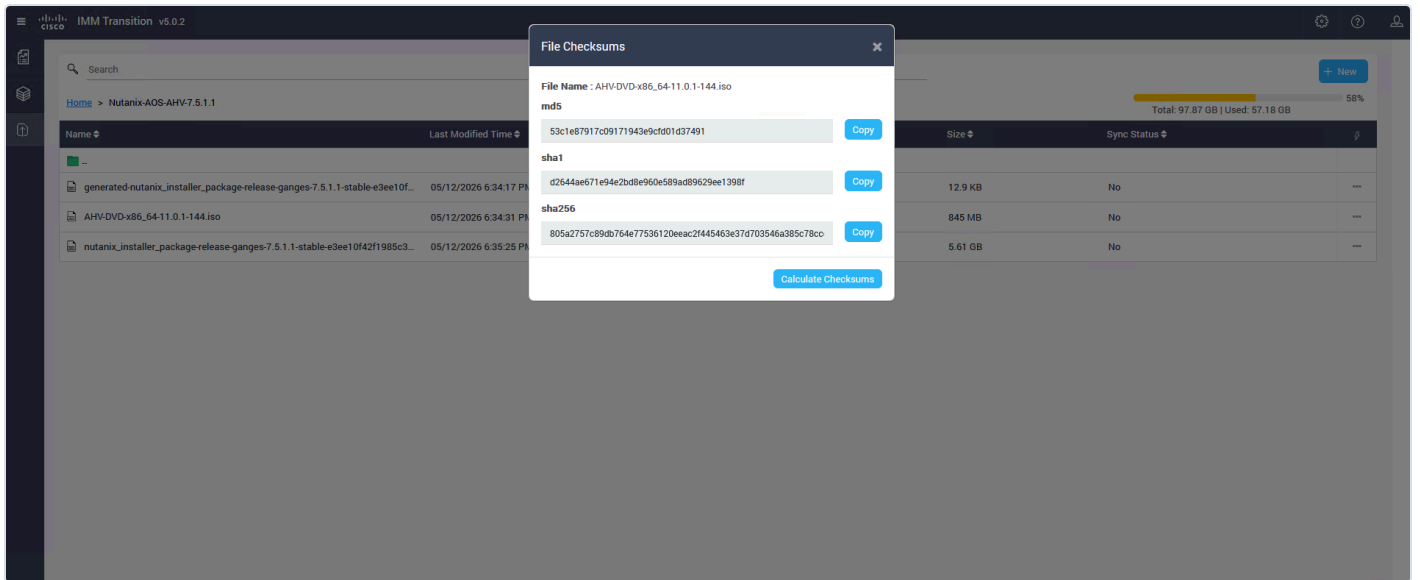

Once both are loaded should be like this example

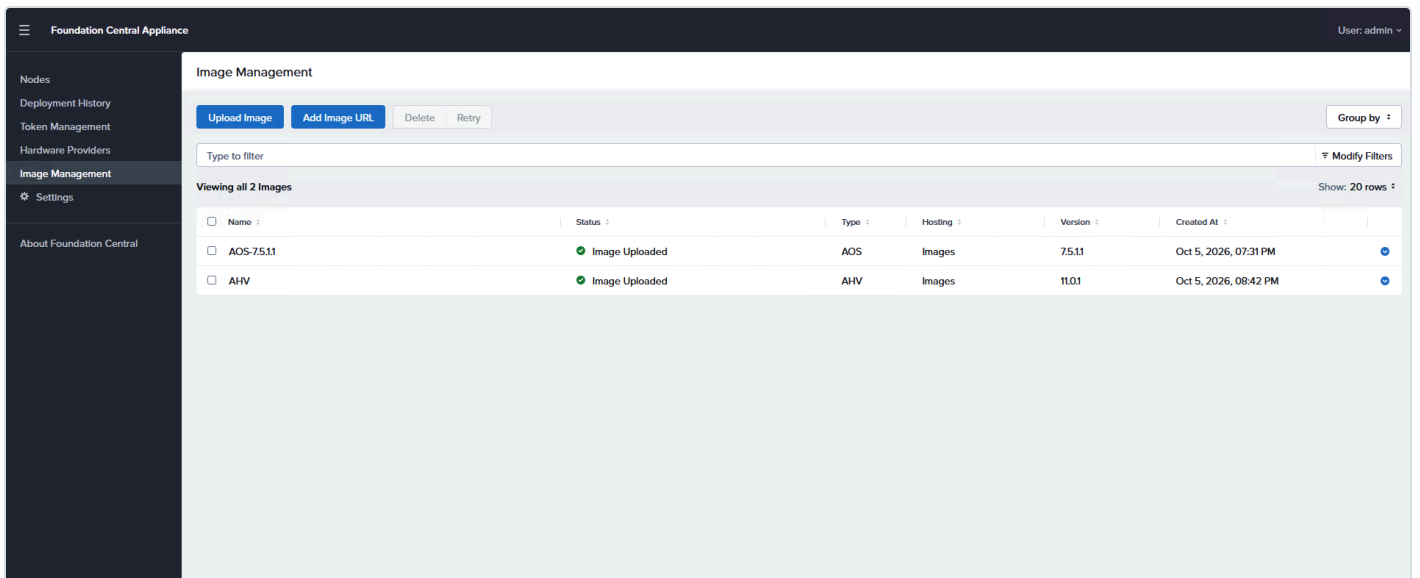

Click Nodes on the Left then click Onboard Nodes.

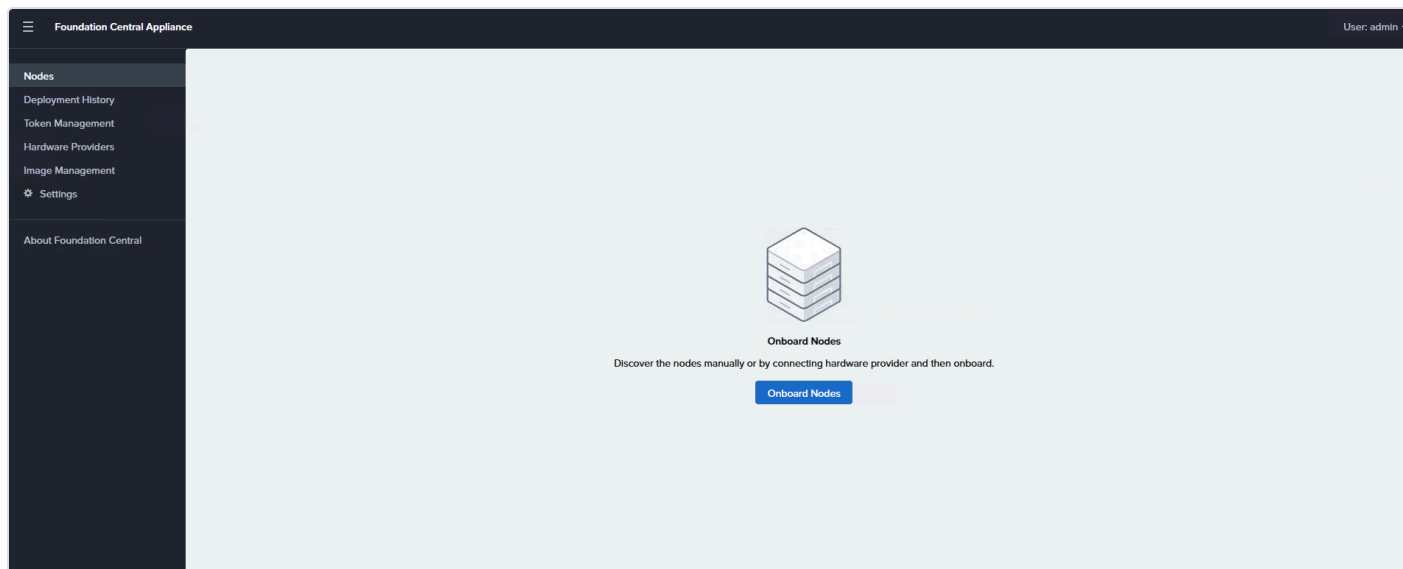

Select to onboard Via Hardware Provider, then select Cisco-Intersight from the dropdown list. Select the Intersight Connection where the new nodes for the cluster are managed, then click Next.

Onboard Nodes

1 Choose Onboarding Method
2 Select Nodes
3 Add Tags (Optional)

How do you want to onboard nodes?

Manually

- Use AHV Installer to install AHV on the nodes
- Discover and onboard AHV-installed nodes, using Claim Tokens

Via Hardware Provider

- Discover and onboard nodes, by connecting to BMCs or hardware providers
- Supports only select BMCs or hardware providers

Hardware Provider

Select a hardware provider and create connection to discover and onboard nodes to Foundation Central.

Hardware Provider

Cisco-Intersight

Viewing 1 Cisco-Intersight connection [+ Create Cisco-Intersight Connection](#)

Connection Name	Details	Available Nodes
UE	URL: https://us-east-1.intersight.com	4

1 - 1 of 1 | Show: 10 rows

Cancel
Next

Select all nodes on the left side and click next then click Onboard Nodes

Onboard Nodes

Choose Onboarding Method

Select Nodes

Add Tags (Optional)

Connection Name: UE

You are viewing the supported Cisco-Intersight nodes from UE without any server profile attached. Click [Refresh](#) to update the list and details (Last Refreshed: 10/5/2026, 7:01:50 PM)

Type in a query

Modify Filters

Viewing all 4 Nodes

Show: 20 rows

☐ Node Serial	Name	Model	Memory (GB)	CPU (Core)	Management Mode	Intersight Tags	Domain	Organization
☐ WZP29419SNL	rtp-cpoc-dng-b17-xe9305...	UCSXE-130C-M8-32	256	32	Intersight		rtp-cpoc-dng-b17-xe9305-1	default, Intersight-Nutanix
☐ WZP29429VPT	rtp-cpoc-dng-b17-xe9305...	UCSXE-130C-M8-32	256	32	Intersight		rtp-cpoc-dng-b17-xe9305-1	default, Intersight-Nutanix
☐ WZP29419SMS	rtp-cpoc-dng-b17-xe9305...	UCSXE-130C-M8-32	256	32	Intersight		rtp-cpoc-dng-b17-xe9305-1	default, Intersight-Nutanix
☐ WZP29419SMM	rtp-cpoc-dng-b17-xe9305...	UCSXE-130C-M8-32	256	32	Intersight		rtp-cpoc-dng-b17-xe9305-1	default, Intersight-Nutanix

Back

CancelNext

Once the nodes are onboarded, you'll see an example like this

Foundation Central Appliance

User: admin

Nodes

Deployment History

Token Management

Hardware Providers

Image Management

Settings

About Foundation Central

Nodes

All

Cisco-Intersight

Take Tour

Onboard Nodes

Create Cluster

Image Nodes

Update Tags

Delete Nodes

View by General

Type in a query

Modify Filters

Viewing all 4 Nodes Group By

Show: 20 rows

☐ Node Serial	Node Status	Model	Hostname	Host IP/Netmask	Host	AOS	Tags	Added On	Hardware Provider Connection
☐ WZP29419SMS	Onboarded	UCSXE-130C-M8-32	-	-	-	Not Installed	-	Oct 5, 2026, 08:54 PM	UE
☐ WZP29419SMM	Onboarded	UCSXE-130C-M8-32	-	-	-	Not Installed	-	Oct 5, 2026, 08:54 PM	UE
☐ WZP29429VPT	Onboarded	UCSXE-130C-M8-32	-	-	-	Not Installed	-	Oct 5, 2026, 08:54 PM	UE
☐ WZP29419SNL	Onboarded	UCSXE-130C-M8-32	-	-	-	Not Installed	-	Oct 5, 2026, 08:54 PM	UE

Scenario 2 · TODO Title

TODO: replace with the real scenario content — numbered steps interleaved with screenshots, e.g.:

1. *TODO: first step.*

! [Screenshot](images/scenario-2-01.png)

2. *TODO: next step.*