
CISCO GLOBAL DEMO ENGINEERING · CUSTOMER PROOF OF CONCEPT

Cisco Intersight Standalone Mode

Nutanix AHV or ESX

12 March 2026

Esteban Arguedas

eargueda@cisco.com

Contents

Overview

Environment

Get Started

Scenario 1 - Claim Servers

Scenario 2 - Foundation Central

Scenario 3 - Cluster Deployment

Scenario 4 - Prism Central

Scenario 5 - Cluster Expansion

Scenario 6 - Prism Central 2022

What's Next

Author: Esteban Arguedas (eargueda@cisco.com) · **Version:** 2.0 · **Last updated:** 1 October 2026

Document status

All printed copies and duplicate soft copies of this document are considered uncontrolled. Please refer to the original, online document link for the current version.

About this CPOC

Cisco Intersight Standalone Mode is an on-premises deployment of Cisco's infrastructure management platform that operates without requiring a connection to the Intersight cloud. When integrated with Nutanix hyperconverged infrastructure (HCI), it allows organizations to manage and monitor their Nutanix environments securely and locally.

In this mode, Intersight provides:

- Visibility into Nutanix clusters (via Prism API)
- Monitoring of VMs, hosts, and cluster health
- Management of Cisco hardware (e.g., UCS servers running Nutanix)
- Single pane of glass for hybrid environments
- Air-gapped and compliance-friendly operations

It's ideal for secure, regulated environments that require local control, while still benefiting from unified infrastructure management across Cisco and Nutanix systems.

Scope

Goals

After completing these scenarios, you will know how to claim, deploy and configure the Nutanix cluster with Cisco Intersight.

What you'll do

Scenario	Description
Scenario 1	Claim Servers in Cisco Intersight
Scenario 2	Onboard nodes in Foundation Central
Scenario 3	Nutanix Cluster Deployment with AHV or ESX Hypervisor
Scenario 4	Nutanix Prism Central deployment and Cluster registration
Scenario 5	Nutanix Cluster Expansion

See the [Environment](#) page for lab IP addresses, credentials and equipment, and [Get Started](#) to begin.

Disclaimer

Test results are suitable to the specific design, configuration, test procedure, and types of switches deployed in the environment described in this document.

This document is provided "As-Is," without warranty of any kind, express or implied, including without limitation those of merchantability, fitness for a particular purpose, and non-infringement arising from a course of dealing usage or trade practice.

All printed copies and duplicate soft copies are not considered controlled; therefore, please refer to the original online version for the latest version.

Document history

Revision	Date	Author	Description	Version
1	12 March 2026	Arguedas	Intersight – Nutanix ISM use cases	1.0
2	1 october 2026	Arguedas	Intersight – Nutanix ISM use cases	2.0

Environment

IP Table


Host Name	IP Address	Credentials	Model
rtp-cpoc-dng-b16-c240m7-1	198.18.143.1	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-2	198.18.143.2	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-3	198.18.143.3	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-4	198.18.143.4	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m4-1	198.18.143.6	admin/C1sco12345!	UCSC-C240-M4SX
rtp-cpoc-dng-b16-n9336-1	198.18.143.7	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-n9336-2	198.18.143.8	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-fi6536-1	198.18.143.9	admin/C1sco12345!	HCIX-FI-6536
rtp-cpoc-dng-b16-fi6536-2	198.18.143.10	admin/C1sco12345!	HCIX-FI-6536
rtp-cpoc-dng-b17-xe9305-1	198.18.143.11	admin/C1sco12345!	UCS XE9305
cpoc-win10-1	198.18.133.36	cpoc/cpoc123	Windows 10
cpoc-win10-2	198.18.133.37	cpoc/cpoc123	Windows 10
Ad1	198.18.133.1	dcloud/administrator/C1sco12345	Windows server
Vcenter 7	198.18.133.30	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Vcenter 8.0.3	198.18.133.31	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Cisco IMM	198.18.128.100	admin / C1sco12345	Cisco IMM Transition
Nutanix Foundation Central 1.10	198.18.128.176	admin / C1sco12345!	1.10
Nutanix Foundation Central 2.2	198.18.128.181	admin / C1sco12345!	2.2
Intersight Assist	198.18.128.254	admin / C1sco12345	Intersight
Intersight pva	198.18.128.253	admin / C1sco12345	Intersight
Intersight cva	198.18.128.252	admin / C1sco12345	Intersight
VMware-ESXI	198.18.128.250	root / C1sco12345!	ESX 7.0
ISM Prism Element	198.18.135.2	admin / C1sco12345	
ISM Prism Element virtual IP	198.18.135.3	admin / C1sco12345	
ISM Nutanix PC-2024	198.18.135.4	admin / C1sco12345	
ISM Nutanix PC-2024 virtual IP	198.18.135.5	admin / C1sco12345	
ISM IP Pool for cluster	198.18.135.10-100		


Equipment – CPOC Lab

Note

Be sure to include the Software Version in this table.

Quantity Required	Model	Software Version
4	UCSC-C240-M7SN	4.3(5.240021)
2	N9K-C9336C-FX2	nxos10.4

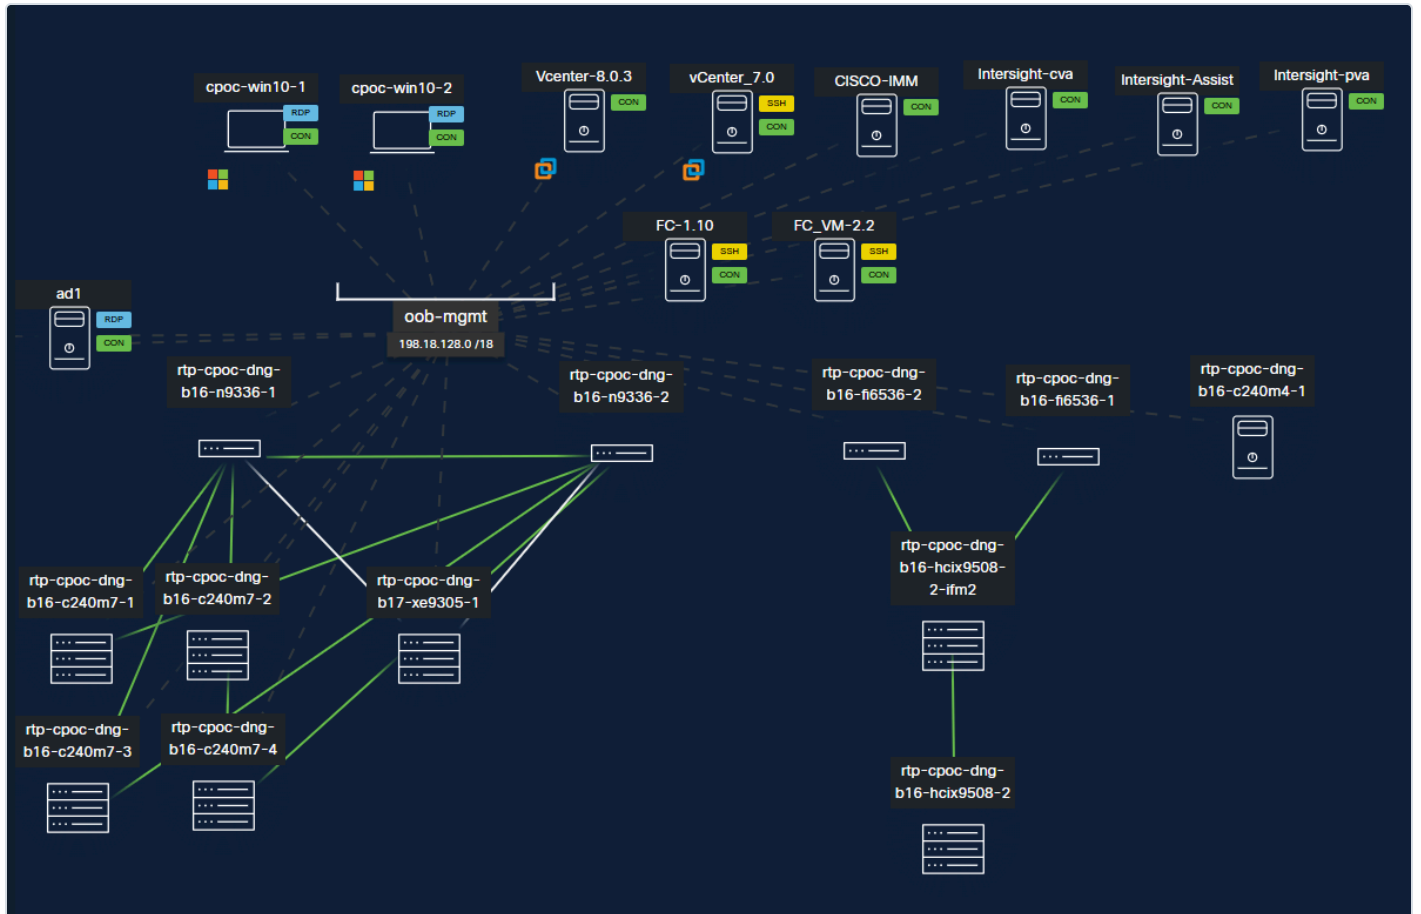Design and Topology Diagram

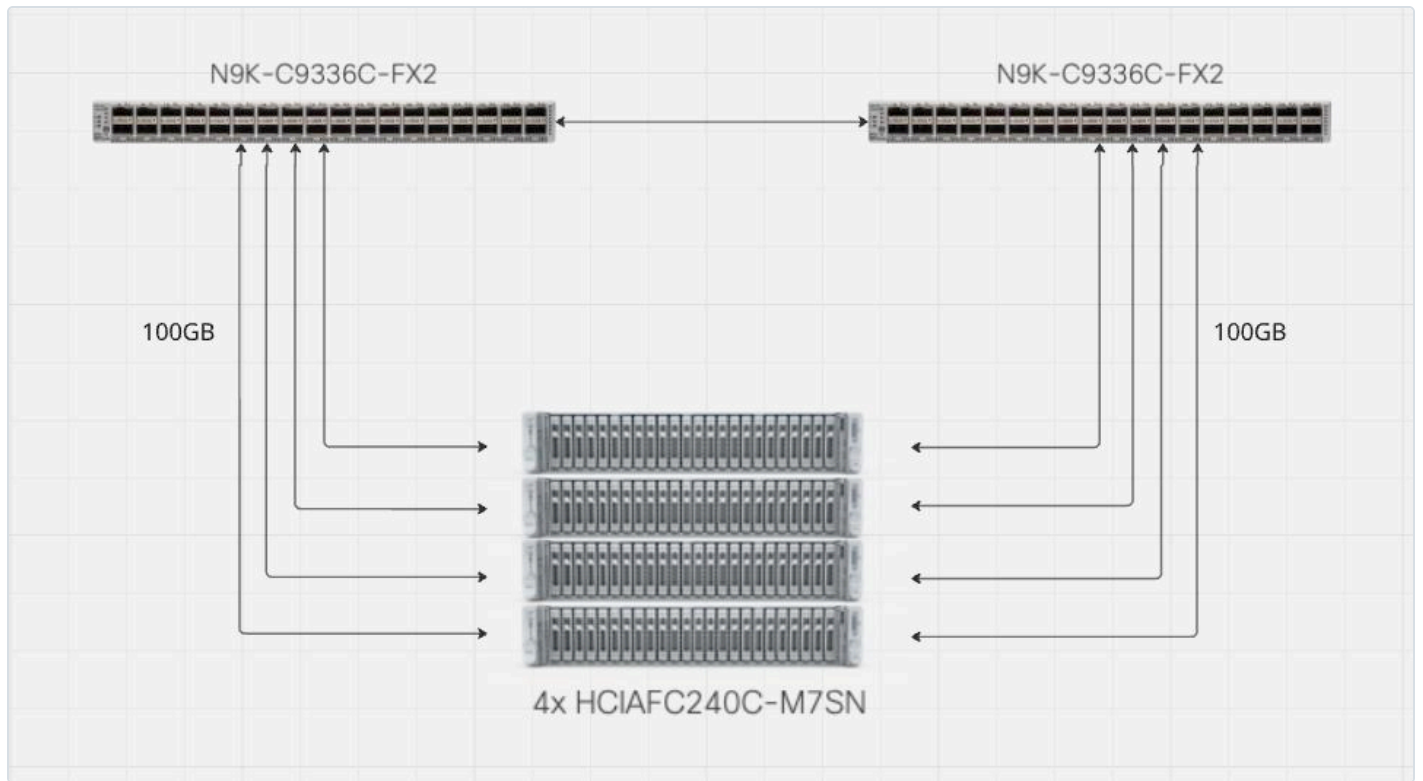

Get Started


1. Initiate your dCloud session. [Show Me How](#)
2. For best performance, connect to the workstation with Cisco Secure Client VPN [Show Me How](#) and the local RDP client on your laptop.
[Show Me How](#)
 - Workstation 1: 198.18.133.36, Username: cpoc, Password: cpoc123

Ready to go? Head to [Scenario 1](#).

Scenario 1 · Claim Servers in Cisco Intersight

Cisco Intersight Claim Servers is a process used to register or "claim" physical infrastructure devices (like Cisco UCS servers or Nexus switches) to the Cisco Intersight platform. Intersight is a cloud-based infrastructure management tool that provides centralized monitoring, configuration, and lifecycle management for Cisco data center hardware.

1. Click on cpoc-win10-1 on the main topology, on the left side select remote access and then click on web RDP to log in

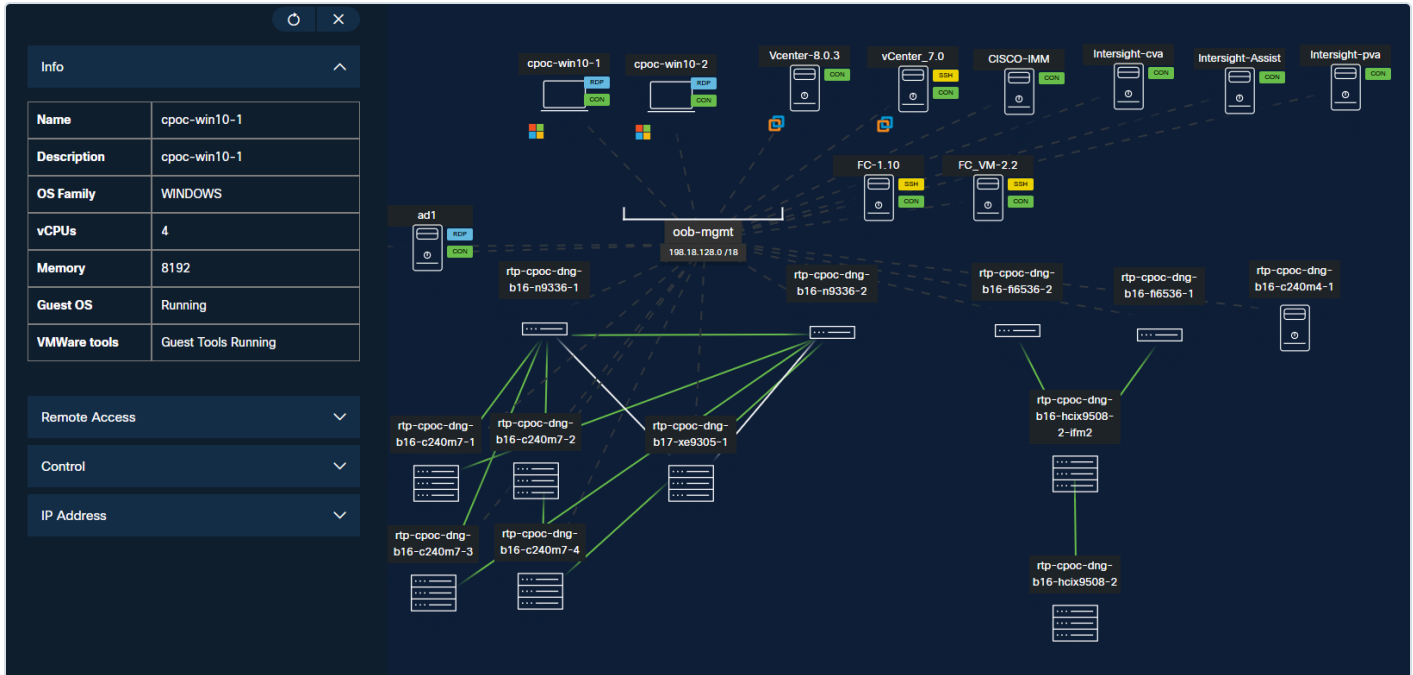


1. Once in the workstation open firefox browser




Note

NOTE: Steps from 3 to 5 have already been performed, so these are just read and view steps.

1. Log in to the CIMC interface with a web browser using the IP address you set. Retrieve the Device ID and the Claim Code from the CIMC web UI, under Admin > Device Connector

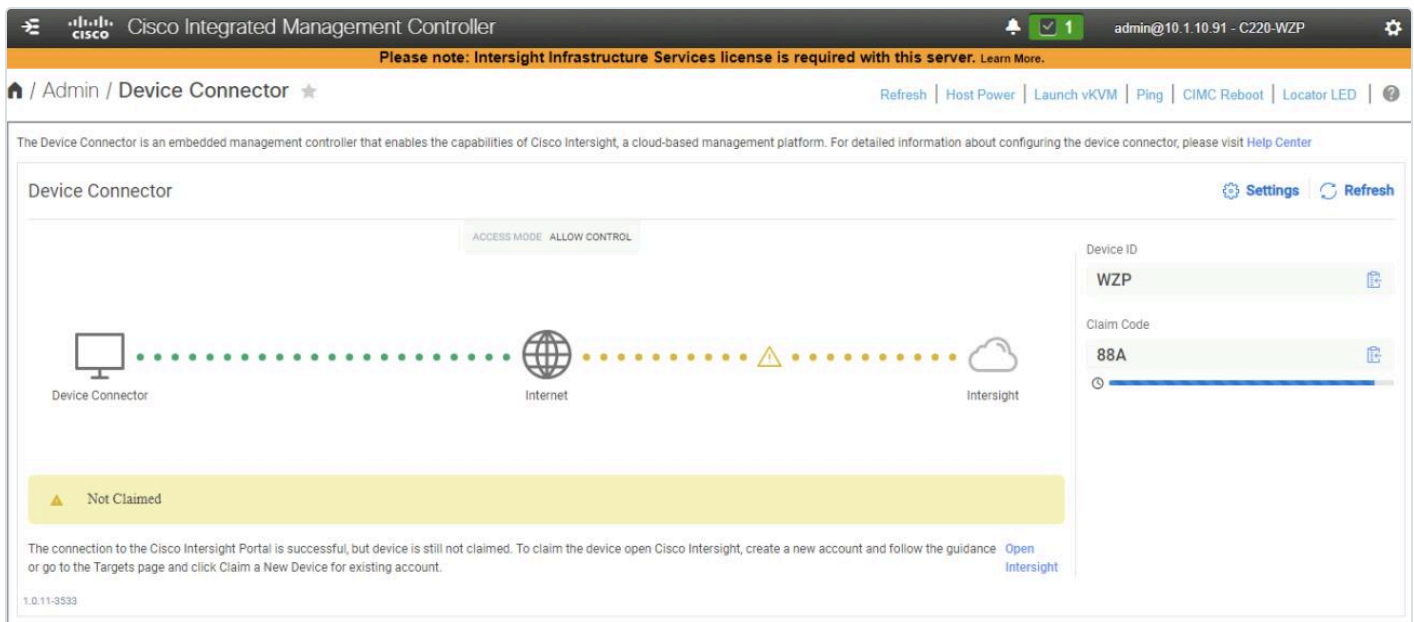

1. In Cisco Intersight, go to the System area, click on Targets, then Claim a New Target

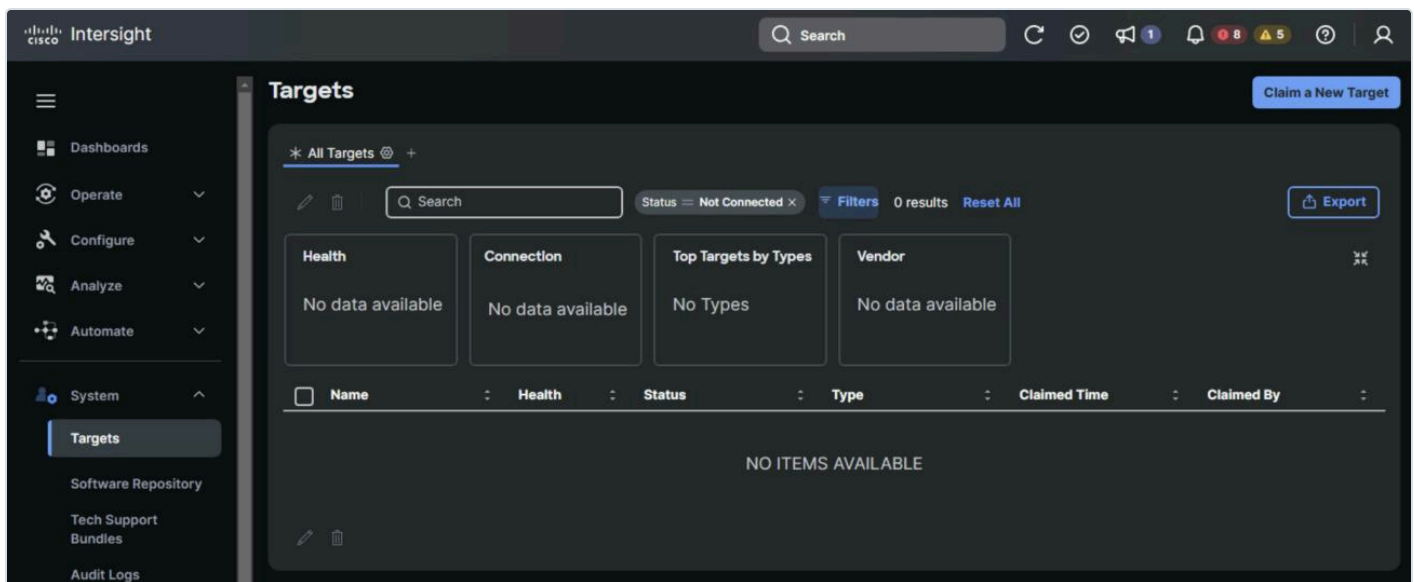

1. Select Cisco UCS Server (Standalone), then enter the Device ID and Claim Code, then click Claim. Repeat for all the servers to be used in your new cluster

Select Target Type

Filters

☒ Available for Claiming

Categories

- ☒ All
- ☐ Cloud
- ☐ Compute / Fabric
- ☐ Hyperconverged
- ☐ Network
- ☐ Orchestrator
- ☐ Platform Services
- ☐ Security

Search

Compute / Fabric

☒ Cisco UCS Server (Standalone)

Cisco UCS Domain (Intersight Managed)

Cisco UCS Domain (UCSM Managed)

Cisco UCS C890

Redfish Server

Platform Services

Cisco Intersight Appliance

Cisco Assist

Network

Cisco MDS Switch

Cisco Nexus Switch

Cisco Catalyst Center

Start

Claim Cisco UCS Server (Standalone) Target

To claim your target, provide the Device ID, Claim Code and select the appropriate Resource Groups.

General

Device ID *

WZP27460GLC

Claim Code *

88AE1D09B9F7

Resource Groups



Select resource groups, if required. This is not mandatory, since by default, the claimed target will be added to "All" type resource groups.

0 items found

10

per page << < 0 of 0 > >>



Name

Usage

Description

NO ITEMS AVAILABLE

<< < 0 of 0 > >>

Back Cancel

Claim

Note

NOTE: When using the Cisco Intersight Virtual Appliance, the servers' CIMC IP addresses and their usernames and passwords are used to claim the servers instead of the Device IDs and Claim Codes.


1. On the Desktop click the Active.html icon to access the Intersight login, on the next page click on the Hyperlink "Click here to login"





1. In the resulting window click Go to intersight, this will do the auto-login

Note


If requires accessing Intersight from the cpoc-win10-2, copy the URL and paste on the second windows virtual machine, then click Go to Intersight

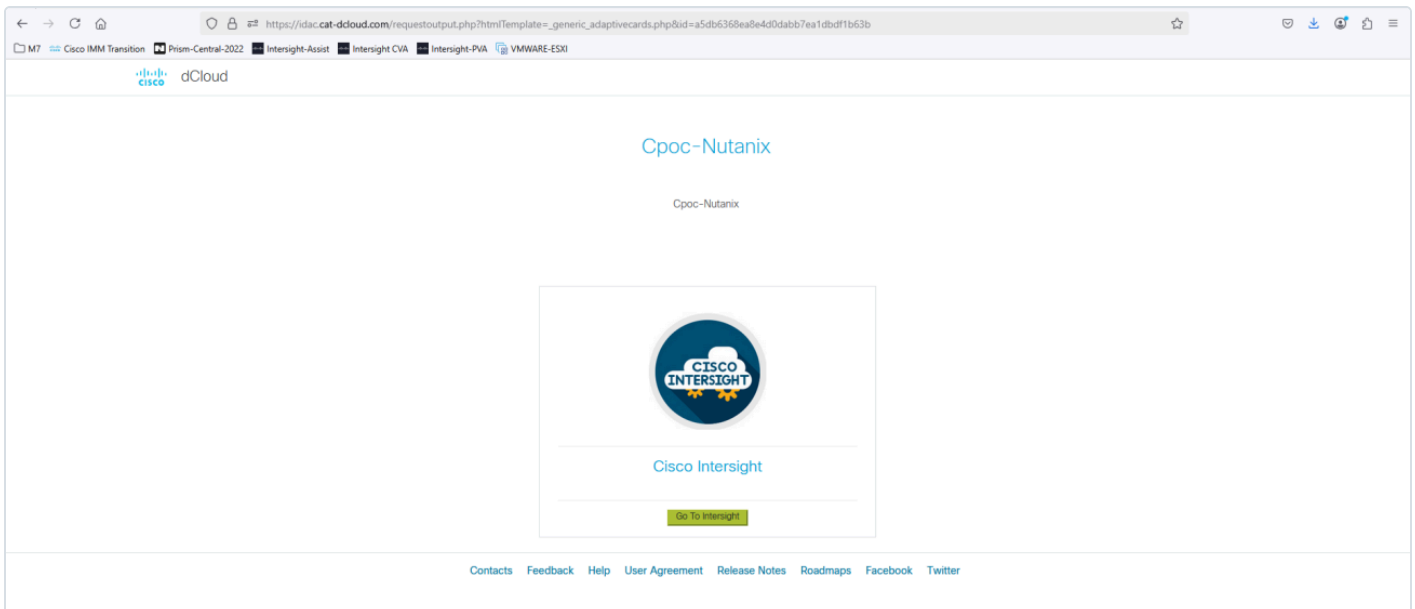

1. On the left page of Intersight, under Settings, click Keys
2. Click "Generate API key" using schema version 3 for use by Nutanix Foundation Central. Be sure to save the Secret Key to a file. It will only be shown once

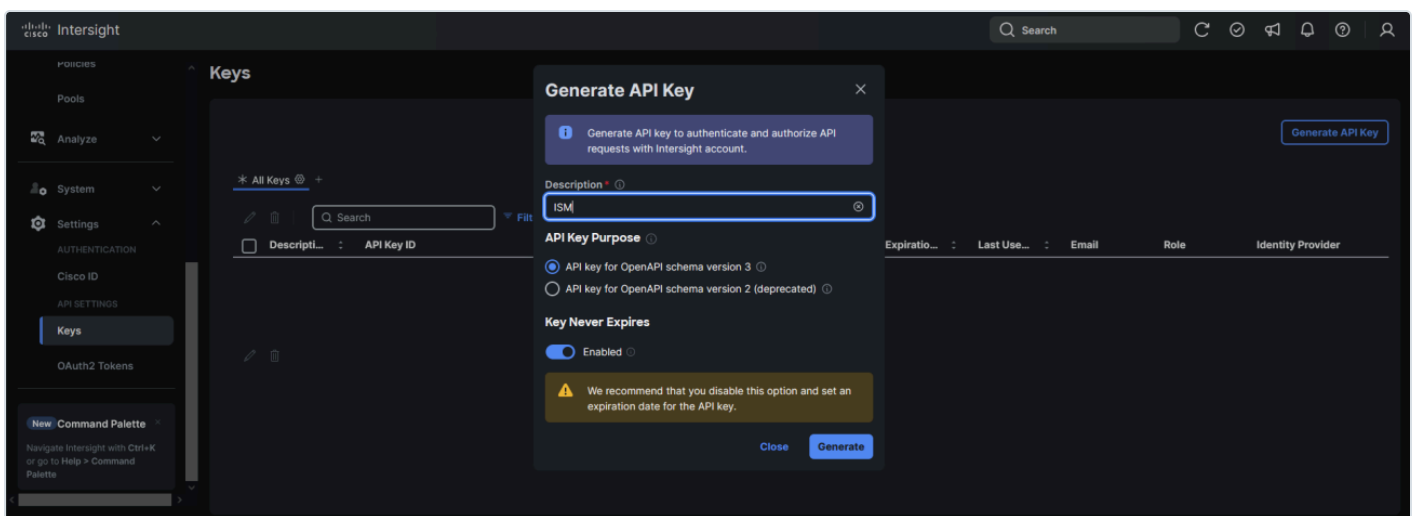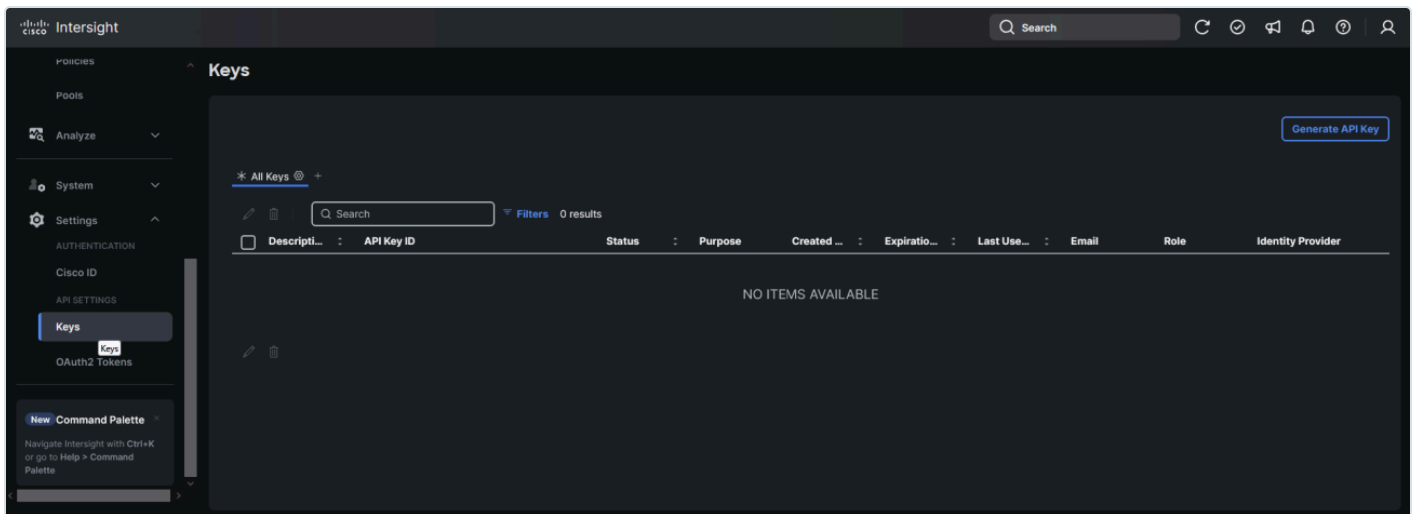


1. Save the API Key ID and Secret Key in the Desktop
2. Ensure your Cisco ID is granted access to download software from CCO. If not, click the Activate link and enter your CCO login credentials. This step is not required for an air-gapped Cisco Intersight private Virtual Appliance (PVA).

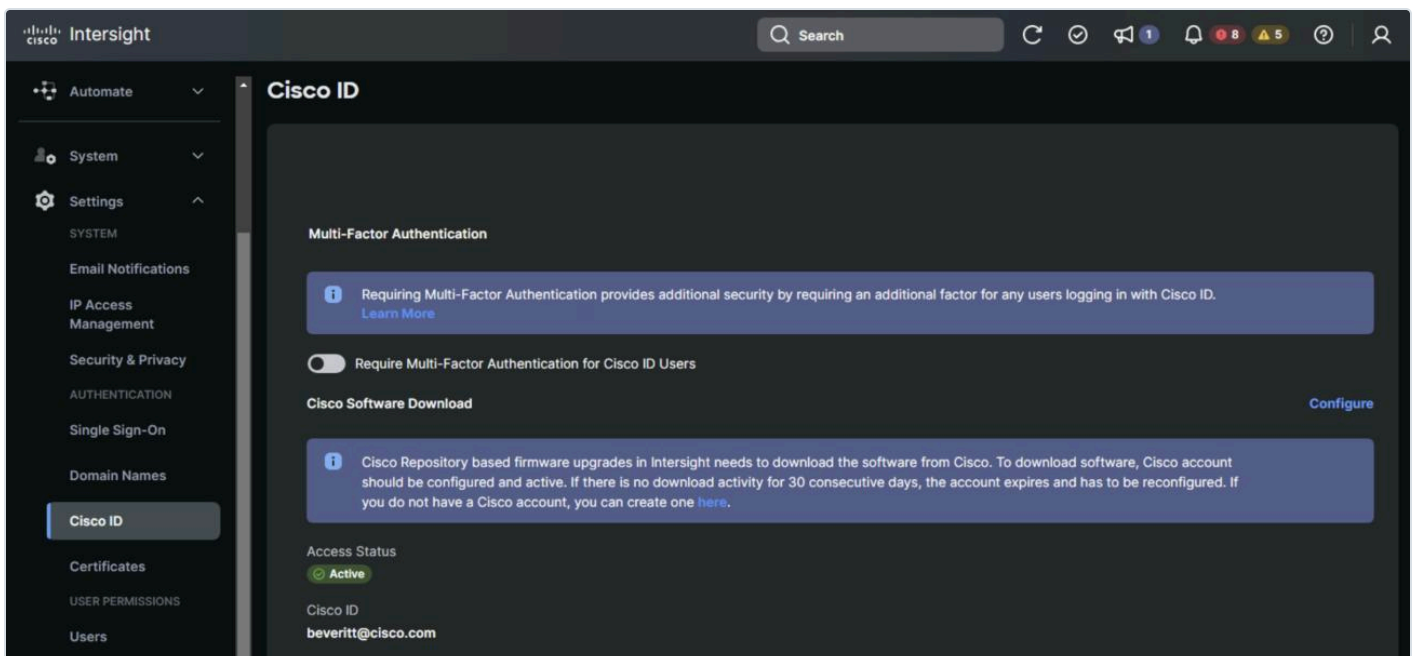


Scenario 2 · Onboard Nodes in Foundation Central

On Firefox browser bookmarks click over Foundation-Central-1.10, the credentials are admin / C1sco12345!




On this lab we're using the Foundation Central 1.10 Go to Settings and click on Connect Hardware Provider

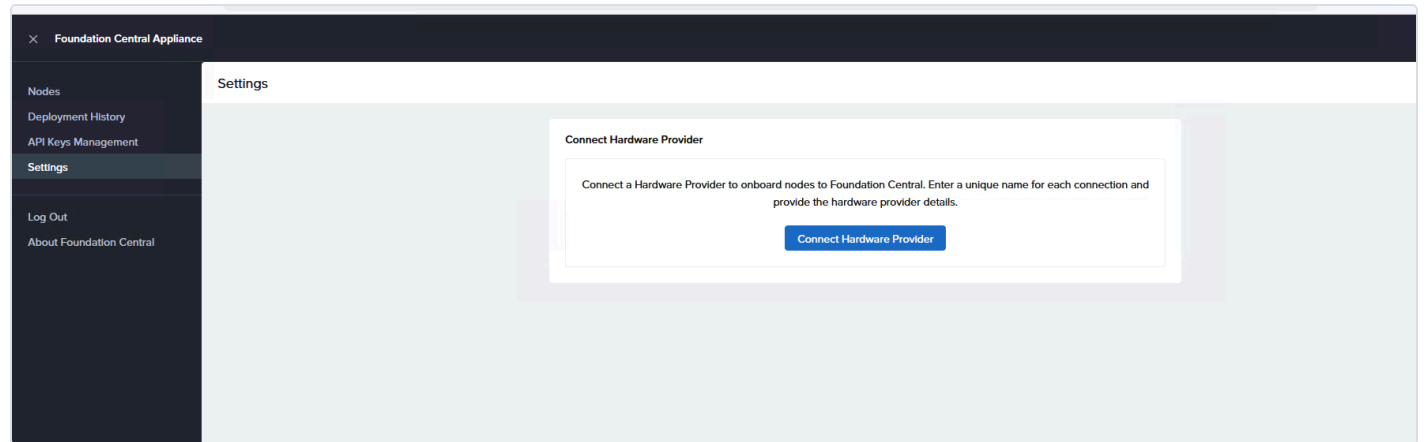


Fill in the required information


- Connection name= Intersight
- Hardware Provider = Cisco Intersight
- Intersight Deployment Type = SaaS
- Intersight Region & URL = North America
- Intersight API Key =
- Secret Key=

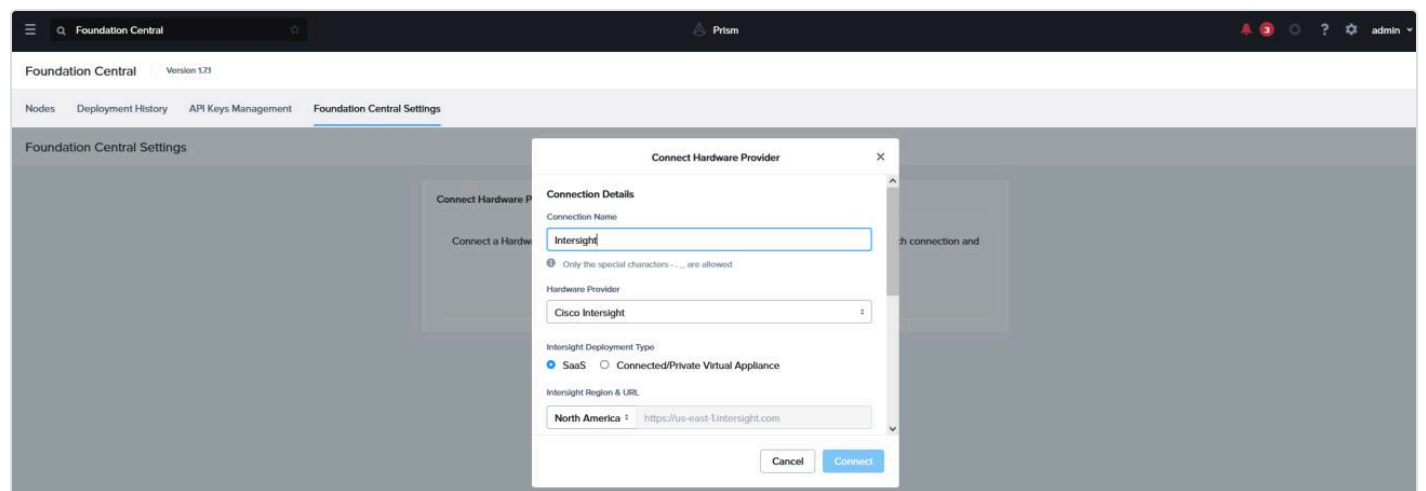


Prism Central will display a pop-up of “Connection has been saved”

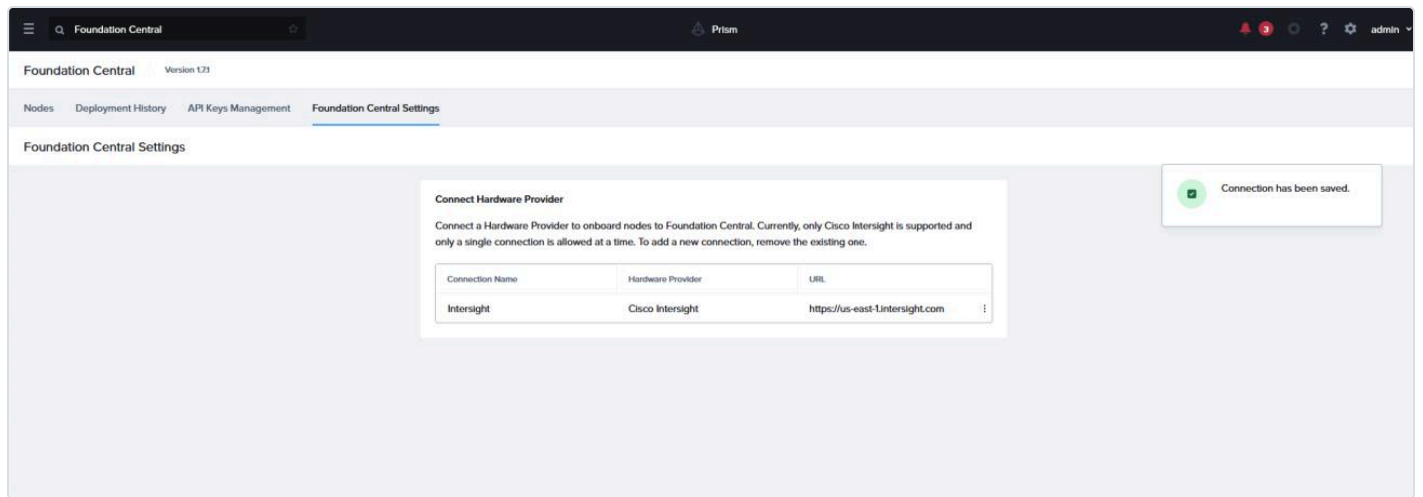

Then click on Nodes > Manually Onboarded and click Onboard Nodes

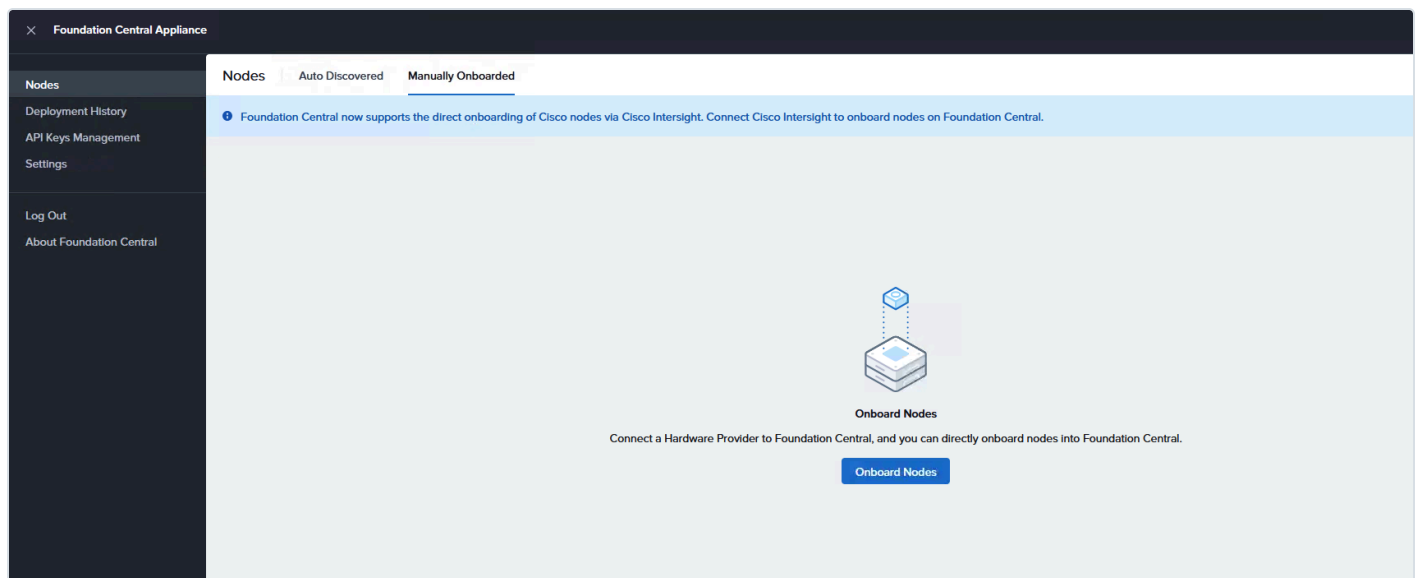

For node management mode, choose Intersight Standalone Mode then click Next

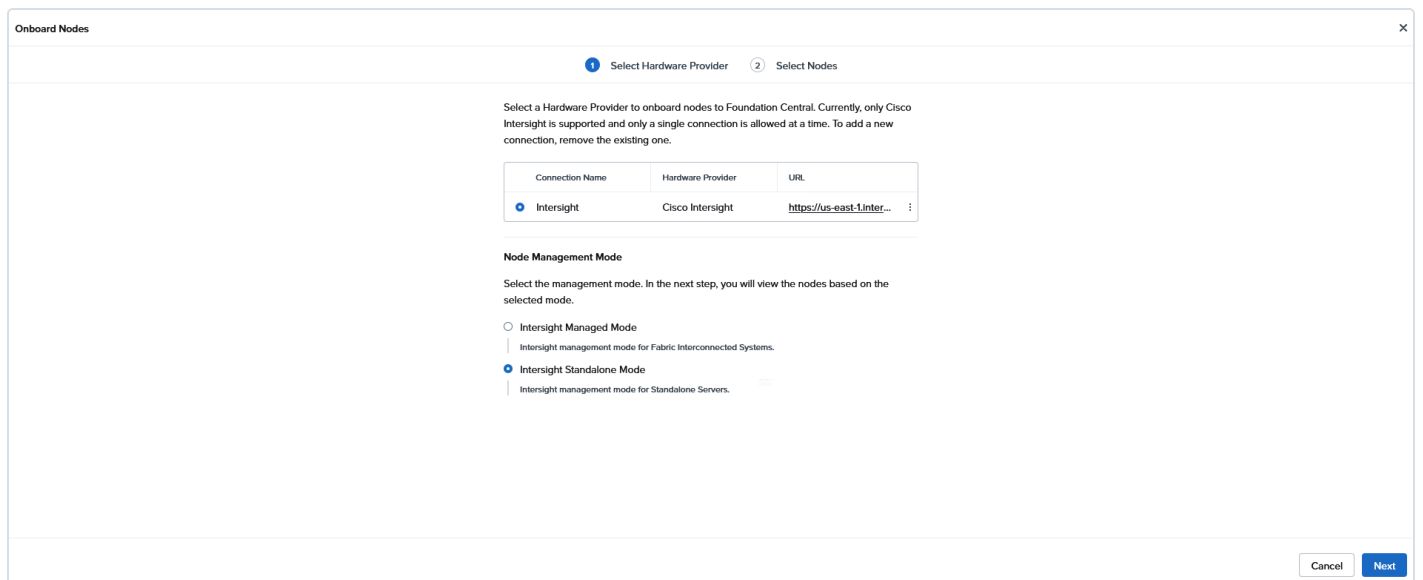

Select all Nodes and then click Onboard

Onboard Nodes

Select Hardware Provider

Select Nodes

Connection Name: Intersight

Management Mode: Intersight Standalone Mode

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click Refresh.

Type in a query

Modify Filters

4 selected out of 4 Cisco Nodes

1 - 4 of 4

Show: 20 rows

☒ Node Serial	Name	Model	Block Serial	Domain	Classification	Intersight Organizations	Intersight Tags	Memory (GB)	CPU (Core)
☒ WZP283891L1	C240-WZP283891L1	UCSC-C240-M75N	WZP283891L1	-	Nutanix	default, Intersight-Nutanix	-	512	32
☒ WZP283891LX	C240-WZP283891LX	UCSC-C240-M75N	WZP283891LX	-	Nutanix	Intersight-Nutanix, default	-	512	32
☒ WZP28400HKB	C240-WZP28400HKB	UCSC-C240-M75N	WZP28400HKB	-	Nutanix	default, Intersight-Nutanix	-	512	32
☒ WZP28400HKH	C240-WZP28400HKH	UCSC-C240-M75N	WZP28400HKH	-	Nutanix	default, Intersight-Nutanix	-	512	32

Back

Cancel

Onboard Nodes

Scenario 3 · Nutanix Cluster Deployment with AHV or ESX Hypervisor

Note

Note In this scenario we're deploying a cluster of 3 nodes, but if want to deploy the cluster with 4 nodes it can be done, but will have to skip the scenario 4 cluster expansion

In Foundation Central under Nodes > Manually Onboarded, select the first 3 nodes would like to use for the cluster deployment and click on Create Cluster

Foundation Central Appliance

Nodes Auto Discovered Manually Onboarded

Foundation Central now supports the direct onboarding of Cisco nodes via Cisco Intersight. Connect Cisco Intersight to onboard nodes on Foundation Central.

Onboard Nodes Prepare Nodes for Cluster Create Cluster Delete Nodes ...

Group by Management Mode View by

Group By: Management Mode Type in a query Modify Filters

3 selected out of 4 grouped Cisco Nodes 1 - 4 of 4 Show: 20 rows

Node Serial	Name	Node Status	Model	Domain	Intersight Organizations	Intersight Tags	VIC Count	Classification	Onboarded On	Last Refreshed
☒ WZP28400HKH	C240-WZP2840...	Onboarded	UCSC-C240-M75N	-	default, Intersight...	-	1	Nutanix	Oct 1, 2026, 05:47 PM	Oct 1, 2026, 05:4
☒ WZP283891LX	C240-WZP2838...	Onboarded	UCSC-C240-M75N	-	Intersight-Nutani...	-	1	Nutanix	Oct 1, 2026, 05:47 PM	Oct 1, 2026, 05:4
☒ WZP28400HKB	C240-WZP2840...	Onboarded	UCSC-C240-M75N	-	default, Intersight...	-	1	Nutanix	Oct 1, 2026, 05:47 PM	Oct 1, 2026, 05:4
☐ WZP283891L1	C240-WZP2838...	Onboarded	UCSC-C240-M75N	-	default, Intersight...	-	1	Nutanix	Oct 1, 2026, 05:47 PM	Oct 1, 2026, 05:4

Enter the required information and click Next

- Name = ISM
- Intersight Organization= Intersight-Nutanix

Create Deployment

1 Cluster Details 2 Network Settings 3 Configure Nodes 4 AOS / Hypervisor 5 CVM Settings 6 Security

Provide a name for the cluster. It will also help identify and track the deployment.

Cluster Name

ISM

Allowed characters: alphanumeric, dots, hyphens, underscores.

Cluster Type

What kind of cluster do you want to create?

☒ Hyperconverged cluster

All selected nodes can be used as hyperconverged, or as storage, or a mix of both. You will specify the role of each node in the Configure Nodes step.

☐ Compute cluster

All selected nodes will be used as compute. Choose this option if you want to create a cluster that will have external storage.

Cluster Replication Factor

Replication Factor

RF2

RF3 is supported only if the cluster has 5+ nodes.

Intersight Organization

The organization is required to apply server profiles to nodes. Only nodes within the same organization can create a cluster. If the selected nodes have multiple common

Cancel Next

Fill in the networking information a. Gateway = 198.18.128.1 b. Netmask = 255.255.192.0 c. Cluster Virtual IP = 198.18.135.2 d. Host and CVM VLAN = 10 e. Click Next

Create Deployment

Cluster Details **2** Network Settings 3 Configure Nodes 4 AOS / Hypervisor 5 CVM Settings 6 Security

Host and CVM Network
Nutanix requires all hosts and CVMs of a cluster to have static IP addresses in the same subnet.

Gateway of Every Host and CVM
198.18.128.1

Netmask of Every Host and CVM
255.255.192.0 (/18)

Cluster Virtual IP (Optional)
This IP will always point to an online CVM, even in case of a node failure.

Cluster Virtual IP (Optional)
198.18.135.2

Host and CVM VLAN (Optional)
This input is optional for Intersight Standalone Mode.

⚠ If you will choose on Step 4 later to skip re-imaging the nodes, please ensure that the existing hypervisor is AHV 10.0 or above, or a hypervisor other than AHV. AHV only supports VLAN re-configuration with versions 10.0 or above.

Back Cancel Next

To complete the cluster Host IP, CVM IP and Host name use the image below as an example, you can choose any IP address from 198.18.135.10 up to 198.18.135.100

Note

When adding the Host IP, skip one IP address between Host IP and CVM IP

Foundation Central Prism

Create Deployment

Cluster Details 2 Hypervisor / AOS 3 Network Settings 4 CVM Settings **5** Configure Nodes 6 Security

Enter the IP/Hostnames you want each node to have. [Reuse Existing](#) [Reorder](#) [Clear](#)


Node Serial	Node Name	Host IP Set Range	CVM IP Set Range	Hostname of Host Set Range
WZP28400HKG	C240-WZP28400HKG	198.18.135.20	198.18.135.24	c240-node-1
WZP28400HKB	C240-WZP28400HKB	198.18.135.21	198.18.135.25	c240-node-2
WZP28389LX	C240-WZP28389LX	198.18.135.22	198.18.135.26	c240-node-3

Back Next

Login into Cisco IMM Transition tool, the access is located on the bookmark, In the Application click in Software Repository, you will see some folders for different versions, for this deployment, we offer the option to select one of the Nutanix AOS and the hypervisor which is supported by the servers, check the versions and select the one you like to deploy using AOS with AHV hypervisor or check below the options of VMware ESXi

Note

Check the versions here <https://portal.nutanix.com/page/compatibility-interoperability-matrix>

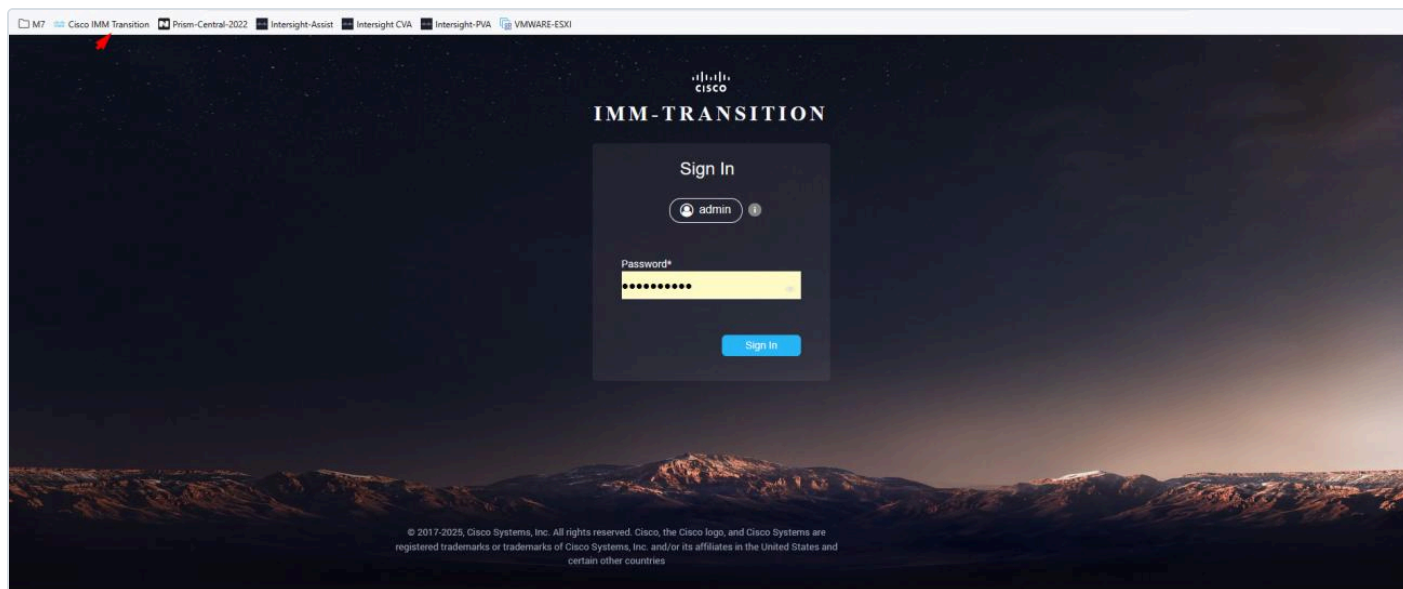

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	AHV-20230302.101026

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	AHV-20230302.102001

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	AHV-10.0

All Versions		
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	AHV-10.0.0.1

All Versions		
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	AHV-10.0.1

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
🔍 Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 7.0 U3s
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 8.0 U2d


Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U3 Vendor

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3s

All Versions		
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3s

All Versions		
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3s

Choose one of the options to deploy the new cluster, access the desired folder and copy the AOS link, click the Ellipsis at the right side, then select share link

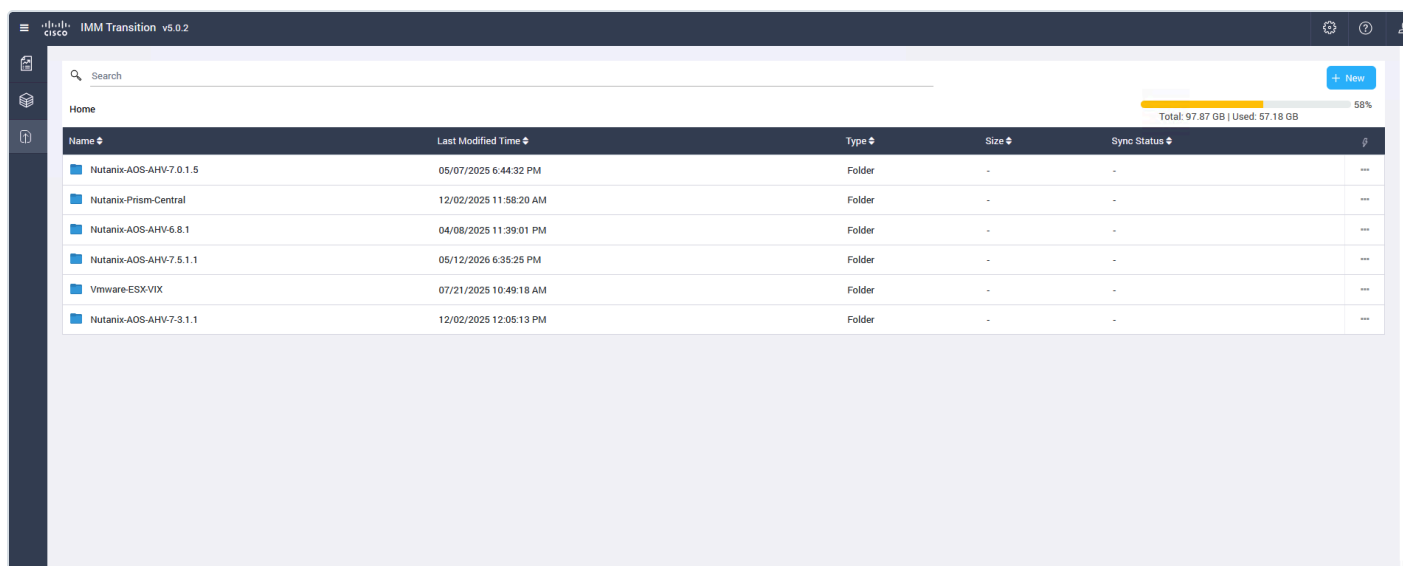

Return to Prism Central and paste the copied link into the AOS URL, then from the hypervisor option click on it and select AHV, then return to Cisco IMM to copy the link of AHV, select the ISO and click Next

Create Deployment

Cluster Details Network Settings Configure Nodes **AOS / Hypervisor** CVM Settings Security

AOS Metadata URL (Optional)
https://198.18.128.100/repo/Nutanix-AOS-AHV-7.5.1.1/generated-nutanix_installer_packa...

Hypervisor
 Hypervisor
 AHV
 Choose the hypervisor that you want to install on each node.

AHV Download Details
☐ AHV is included in the above AOS package. I have verified and want to use it.

If you won't use the included hypervisor, provide the URL to download the hypervisor from, during imaging. The URL must be accessible to Foundation Central. Download hypervisor image from [Nutanix Portal](#). Foundation Central will verify the checksum of the existing file to avoid re-downloading.

Hypervisor Download URL
https://198.18.128.100/repo/Nutanix-AOS-AHV-7.5.1.1/AHV-DVD-x86_64-11.0.1.144.iso

Pre-computed SHA256 Checksum of Hypervisor Installer (Optional)
 805a2757c89db764e77536120eeac2f445463e37d703546a385c78ccd8761f76

Back Cancel Next

CVM Settings uses the following information:

- Timezone= America/New_York
- NTP=198.18.128.1
- DNS= 198.18.133.1
- Click Next

Create Deployment

Cluster Details

Network Settings

Configure Nodes

AOS / Hypervisor

CVM Settings

Security

CVM Timezone

Doesn't apply to AHV and ESX hosts. Nutanix concluded these hypervisors don't support host timezone. The UTC offset numbers in the dropdown don't account for daylight saving. The numbers are only meant to help with visual navigation within the dropdown. Only the location name, not the offset number, of the timezone will be sent to the cluster formation process.

Timezone

America/New_York

NTP Servers of CVM and AHV (Optional)

NTP servers will apply to host too only if AHV. For ESX, configure NTP servers in vCenter.

Nutanix recommends using at least 5 low-stratum NTP servers. Also, Windows-based servers or pool.ntp.org servers should be used with caution.

[View full documentation for more details](#)

NTP Servers of CVM and AHV (Optional)

198.18.128.1

DNS Servers of CVM and AHV (Optional)

DNS servers will apply to host too only if AHV. For ESX, configure DNS servers in vCenter.

DNS Servers of CVM and AHV (Optional)

198.18.133.1

Back

Cancel

Next

For the Foundation Central API Key, click the "+ Generate API key", add a name, select the new API from the drop-down menu and click Submit

1 Cluster Details

2 Hypervisor / AOS

3 Network Settings

4 CVM Settings

5 Configure Nodes

6 Security

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key

+ Generate API Key

Intersight

Back

Submit

The cluster deployment begins and takes approximately 1h15m to complete

Foundation Central Prism

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

ISM Deployment in progress Start Date and Time: 5/9/2025, 08:09 PM [About](#)

Phase 1A: Node Preparation 11% 3 nodes in progress Phase 1B: Node Imaging 0% Not started Phase 2: Cluster Formation 0% Waiting for Phase 1 to finish

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL: https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b5f8d7e72ae-x86_64.largz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL: https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-1.iso
Cluster VLAN ID 10	Deployment UUID 738f3815-214e-4c16-7a7c-0073e47952e4	LACP No	

3 Nodes In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891LX	WZP283891LX	A	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.135.20	198.18.135.24	AHV	c240-node-1
WZP28400HKB	WZP28400HKB	A	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.135.21	198.18.135.25	AHV	c240-node-2
WZP28400HKH	WZP28400HKH	A	4%	[Node:Configuration] Deploying and activating the profile of the Node	198.18.135.22	198.18.135.26	AHV	c240-node-3

Return to Intersight, under Operate select Servers to check the Server Profile provisioning progress.

Cloud Control CPOC-Nutanix Home Intersight

Servers

* All Servers 16 results [Export](#)

Health 16 Healthy 16 **Power** Off 9 On 7 **HCL Status** Incomplete 4 Not Evaluated 12 **Custom HCL Conformance** Non Conforming 5... 16 **Bundle Version** 6.0(1.252114) 4 6.0(1.250192) 4 6.0(2.260042) 4 5.4(0.280001) 3 6.0(1.250122) 1 **Utility Storage** No 12 Yes 4 **Firmware Version** 6.0(1.252114) 4 6.0(1.250192) 4 6.0(2.260042) 4 5.4(0.280001) 3 6.0(1.250122) 1 **Models** 16

Name	Health	Model	CPU Capac...	Memory Capac...	UCS Domain	Server Profile	Bun
C240-WZP283891L1	Healthy	UCSC-C240-M7SN	115.2	512.0		ntnx_WZP28389...	6.0(...
C240-WZP283891LX	Healthy	UCSC-C240-M7SN	115.2	512.0		ntnx_WZP2840...	6.0(...
C240-WZP28400HKB	Healthy	UCSC-C240-M7SN	115.2	512.0		ntnx_WZP2840...	6.0(...
C240-WZP28400HKH	Healthy	UCSC-C240-M7SN	115.2	512.0		ntnx_WZP2840...	6.0(...
rtp-cpoc-dng-b16-fi6536-1-1	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-fi6536		5.4(...
rtp-cpoc-dng-b16-fi6536-1-2	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-fi6536		5.4(...
rtp-cpoc-dng-b16-fi6536-1-3	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-fi6536		5.4(...
rtp-cpoc-dng-b16-fi6536-1-4	Healthy	UCSX-215C-M8	350.4	768.0	rtp-cpoc-dng-b16-fi6536		6.0(...
rtp-cpoc-dng-b16-fi6536-1-5	Healthy	UCSX-215C-M8	350.4	768.0	rtp-cpoc-dng-b16-fi6536		6.0(...
rtp-cpoc-dng-b16-fi6536-1-6	Healthy	UCSX-215C-M8	350.4	768.0	rtp-cpoc-dng-b16-fi6536		6.0(...
rtp-cpoc-dng-b16-fi6536-1-7	Healthy	UCSX-210C-M7	115.2	256.0	rtp-cpoc-dng-b16-fi6536		6.0(...
rtp-cpoc-dng-b16-fi6536-1-8	Healthy	UCSX-215C-M8	350.4	768.0	rtp-cpoc-dng-b16-fi6536		6.0(...
rtp-cpoc-dng-b17-xe9305-1-1	Healthy	UCSXE-130C-M8-32	64.0	256.0			6.0(...

Let's explore Intersight, under Configure select Profiles > UCS Server Profiles. Note the profiles are being created/configured under Activating status.

The screenshot shows the 'Profiles' section in the Cisco UCS Manager interface. The 'UCS Server Profiles' tab is selected. A summary card shows 'Activating 3' profiles. Below, a table lists the profiles:

Name	Status	Target Platform	UCS Server Template	Server	Last Update
ntnx_WZP28400HKH_bd237b0...	Activating	UCS Server (Standalone)		C240-WZP28400HKH	in a few seconds
ntnx_WZP28400HKH_bd237b0...	Activating	UCS Server (Standalone)		C240-WZP28400HKH	in a few seconds
ntnx_WZP283891LX_bd237b08...	Activating	UCS Server (Standalone)		C240-WZP283891LX	in a few seconds

In Configure > Policies, note all the UCS Server policies created as part of the automated process between Foundation Central and Intersight.

The screenshot shows the 'Policies' section in the Cisco Intersight interface. The 'UCS-Domain' filter is selected. A summary card shows '44' policies, with 'Used 33' and 'Indirect 11'. Below, a table lists the policies:

Name	Platform Type	Type	Usage	Last Update
ntnx_iol_JSM_f54d17f3-cbf5-44e0-6...	UCS Server	IPMI Over LAN	Used - 3	Oct 2, 2026 9:16 AM
ntnx_nvme-bios_JSM_f54d17f3-cbf5...	UCS Server	BIOS	Used - 3	Oct 2, 2026 9:16 AM
ntnx_ac-cisco_WZP283891LX_f54d1...	UCS Server	Adapter Configuration	Used - 1	Oct 2, 2026 9:16 AM
ntnx_m2-raid_WZP283891LX_f54d17...	UCS Server	Boot Order	Used - 1	Oct 2, 2026 9:16 AM
ntnx_scp-cisco_WZP283891LX_f54d...	UCS Server	SAN Connectivity	Used - 1	Oct 2, 2026 9:16 AM
ntnx_kvm_JSM_f54d17f3-cbf5-44e0-...	UCS Server	Virtual KVM	Used - 3	Oct 2, 2026 9:16 AM
ntnx_firmware_WZP283891LX_f54d1...	UCS Server	Firmware	Used - 1	Oct 2, 2026 9:16 AM
ntnx_sol_JSM_f54d17f3-cbf5-44e0-6...	UCS Server	Serial Over LAN	Used - 3	Oct 2, 2026 9:16 AM
ntnx_m2-slot1_JSM_f54d17f3-cbf5-4...	UCS Server	Storage	Used - 3	Oct 2, 2026 9:16 AM
ntnx_iop-cisco_WZP283891LX_f54d1...	UCS Server	LAN Connectivity	Used - 1	Oct 2, 2026 9:16 AM
ntnx_ac-cisco_WZP28400HKH_f54d...	UCS Server	Adapter Configuration	Used - 1	Oct 2, 2026 9:16 AM

At the top right of the screen, click the Requests icon to monitor the undergoing tasks.

The screenshot shows the 'Requests' section in the Cisco Intersight interface. The 'All Requests' filter is selected. A summary card shows 'In Progress 3' and 'Execute 3' requests. Below, a table lists the requests:


Name	Status	Initiator	Target Type	Target Name	Start Time	Duration	ID	Execution
Deploy Server ...	In Progress 50%	intuser-60811@cat-dcloud.com	Rack Server	C240-WZP283...	14 minutes ago	13 m 40 s	6abfcb06896f...	Execute
Deploy Server ...	In Progress 50%	intuser-60811@cat-dcloud.com	Rack Server	C240-WZP284...	14 minutes ago	13 m 50 s	6abfcafc696f6...	Execute
Deploy Server ...	In Progress 50%	intuser-60811@cat-dcloud.com	Rack Server	C240-WZP284...	14 minutes ago	13 m 50 s	6abfcafc696f6...	Execute

Click on any of the tasks to check the progress of the server configuration

Return to Foundation Central to monitor the cluster deployment progress. Once the cluster deployment is completed, click “Open Prism Element”

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891LX	WZP283891LX	A	Done	All operations completed successfully	198.18.135.22	198.18.135.26	AHV	c240-node-3
WZP28400HKB	WZP28400HKB	A	Done	All operations completed successfully	198.18.135.21	198.18.135.25	AHV	c240-node-2
WZP28400KH	WZP28400KH	A	Done	All operations completed successfully	198.18.135.20	198.18.135.24	AHV	c240-node-1

On Prism Element UI, login with user “admin” (password: Nutanix/4u) and change the password to C1sco12345!

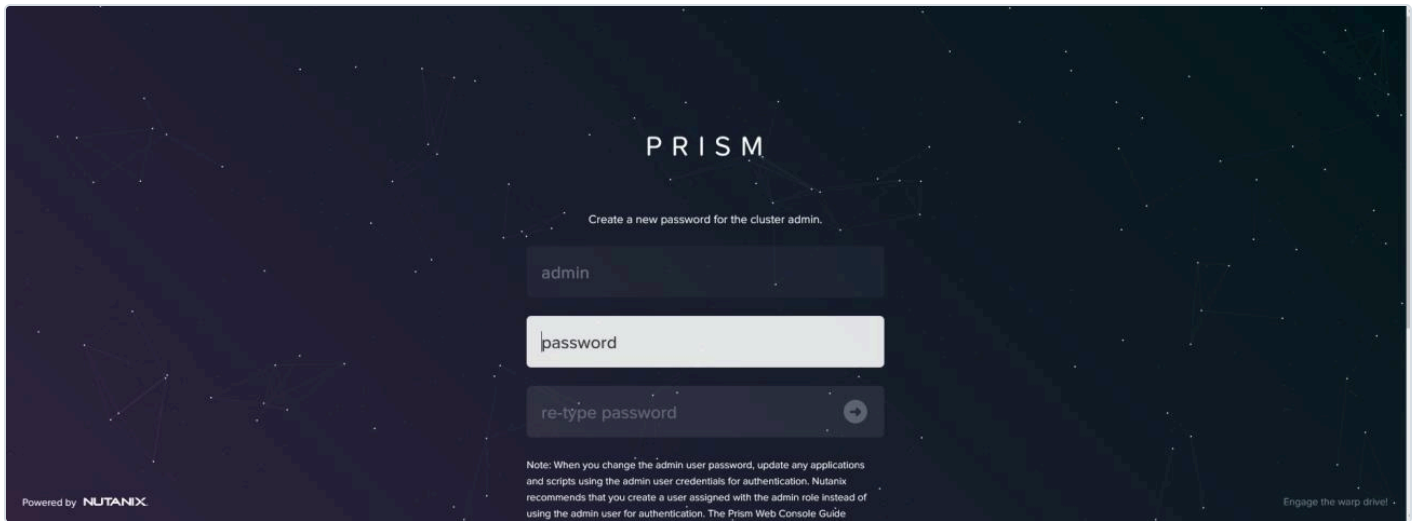

The image shows the PRISM web interface for changing the cluster admin password. The background is dark blue with a network diagram pattern. The word "PRISM" is at the top center. Below it, the text "Create a new password for the cluster admin." is displayed. There are three input fields: "admin" (username), "password" (new password), and "re-type password" (confirm password). A "re-type password" button with a circular arrow icon is to the right of the third field. Below the fields, a note states: "Note: When you change the admin user password, update any applications and scripts using the admin user credentials for authentication. Nutanix recommends that you create a user assigned with the admin role instead of using the admin user for authentication. The Prism Web Console Guide". At the bottom left, it says "Powered by NUTANIX". At the bottom right, it says "Engage the warp drive!".

PRISM

Create a new password for the cluster admin.

admin

password


re-type password

Note: When you change the admin user password, update any applications and scripts using the admin user credentials for authentication. Nutanix recommends that you create a user assigned with the admin role instead of using the admin user for authentication. The Prism Web Console Guide

Powered by NUTANIX

Engage the warp drive!

After the password has been successfully changed, login with user admin and password C1sco12345!

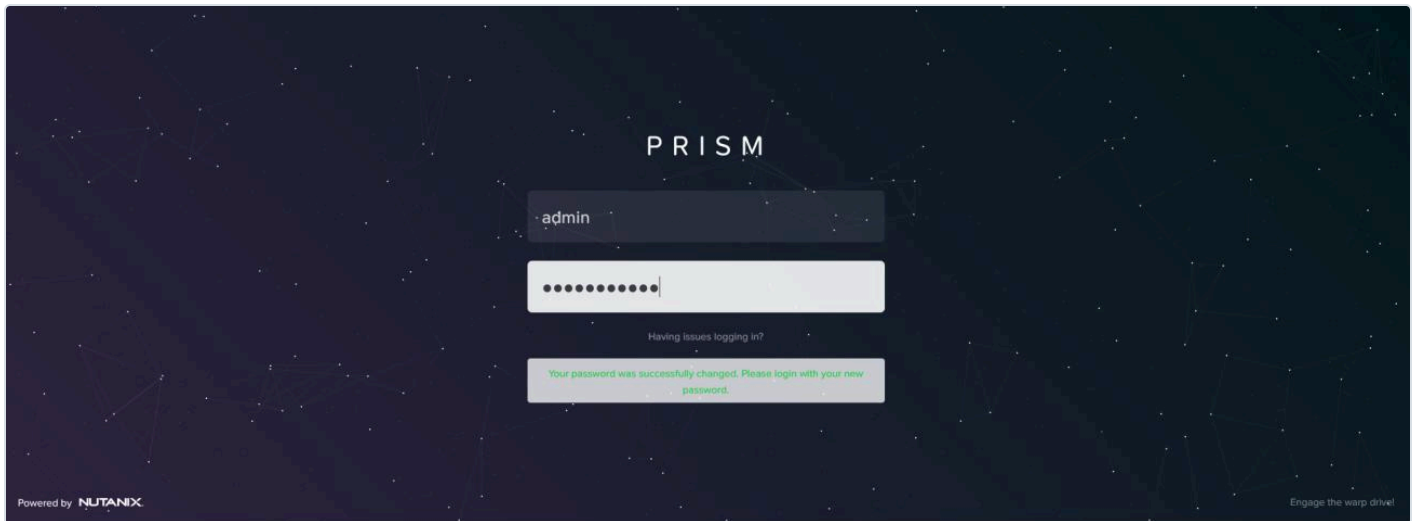

The image shows the PRISM web interface for logging in. The background is dark blue with a network diagram pattern. The word "PRISM" is at the top center. Below it, there are two input fields: "admin" (username) and a password field with masked characters. Below the password field, the text "Having issues logging in?" is displayed. A green message box states: "Your password was successfully changed. Please login with your new password." At the bottom left, it says "Powered by NUTANIX". At the bottom right, it says "Engage the warp drive!".

PRISM

admin

.....

Having issues logging in?

Your password was successfully changed. Please login with your new password.

Powered by NUTANIX

Engage the warp drive!

Complete the Nutanix EULA,

- Name = Cpoc
- Company = Cisco
- Job title = ISM
- Check the box and click accept and continue

Nutanix End User License Agreement (EULA) and Terms of Use

Nutanix is referred to in this Agreement as "Us", "We" or "Our" and Your organization is referred to as "You" or "Your". This Nutanix License and Services Agreement ("Agreement") governs Your use of any Products (as defined below) and becomes effective when You (a) issue a purchase order for the Products; (b) execute or accept this Agreement, or (c) access, download, install, or use the Software or Cloud Services. This Agreement is entered into between You and Nutanix Inc., located at 1740 Technology Dr. Ste. 150, San Jose, CA 95110, United States, if You are contracting in the Americas, or Nutanix Netherlands B.V., located at Mercuriusplein 1, 2132 HA Hoofddorp, The Netherlands, if You are contracting anywhere else in the world or both if applicable. You represent and warrant that You have the authority to enter into this Agreement on behalf of Your organization.

1. Definitions.

1.1 "Affiliates" means any corporation or other business entity which controls, is controlled by or is under common control through the ownership of more than fifty percent (50%) of the

CPOC

Chico

ISM

☒ I have read and agree to the terms and conditions.

Decline Accept

Keep the Pulse option by default, click Continue

Pulse will be enabled

Pulse continuously monitors cluster health and periodically sends usage data to Nutanix's cloud based analytics engine. It automatically takes action when a problem has occurred, or is about to occur. [Learn More](#)

Nutanix strongly recommends not disabling this feature to improve your support experience in the event of a failure or critical system issue.

If you disable Pulse, Nutanix will not be able to proactively reach out to you in the event of failures, and your issue resolution time may increase significantly.

☒ **Disable Pulse. (not recommended)**
Pulse will not be enabled on this cluster.


Continue

You should be taken to the main dashboard


The screenshot shows the Nutanix ISM (Infrastructure Service Manager) dashboard. The top navigation bar includes the ISM logo, a home button, and user information (admin). The dashboard is divided into several sections:

- Hypervisor Summary:** Shows AHV v10.0.
- Prism Central:** Indicates 'Not registered' with a link to 'Register or create new'.
- Storage Summary:** Shows 47.31 TiB Total Capacity with a 'View Details' link.
- VMs:** Shows 3 VMs, with 3 On, 0 Off, and 0 Unknown.
- Hardware Summary:** Shows 3 Hosts, 3 Blocks, and Cisco UCS C240-M7SN Model.
- Cluster-wide Controller IOPS and IO B/W:** Both show 'No data available'.
- Cluster-wide Controller Latency:** Shows 'No data available'.
- Cluster CPU Usage:** Shows 0% of 345.6 GHz.
- Cluster Memory Usage:** Shows 0% of 147 TiB.
- Health:** Shows a 'CRITICAL' status with a red heart icon.
- Cluster Resiliency / Fault Tolerance Status:** Shows 'OK' with a green checkmark, indicating 'Data resilient as per configuration'.
- Critical Alerts:** Shows 7 critical alerts, including 'Host 198.18.135.20 is using default password' and 'CVM 198.18.135.23 is using default password'.
- Warning Alerts:** Shows 1 warning alert, 'License Feature Violation'.
- Info Alerts:** Shows 2 info alerts.
- Events:** Shows 6 events.

Click the cluster name on the top left ("ISM") next to the X icon, add 198.18.135.3 in the Data Service IP field and click Save

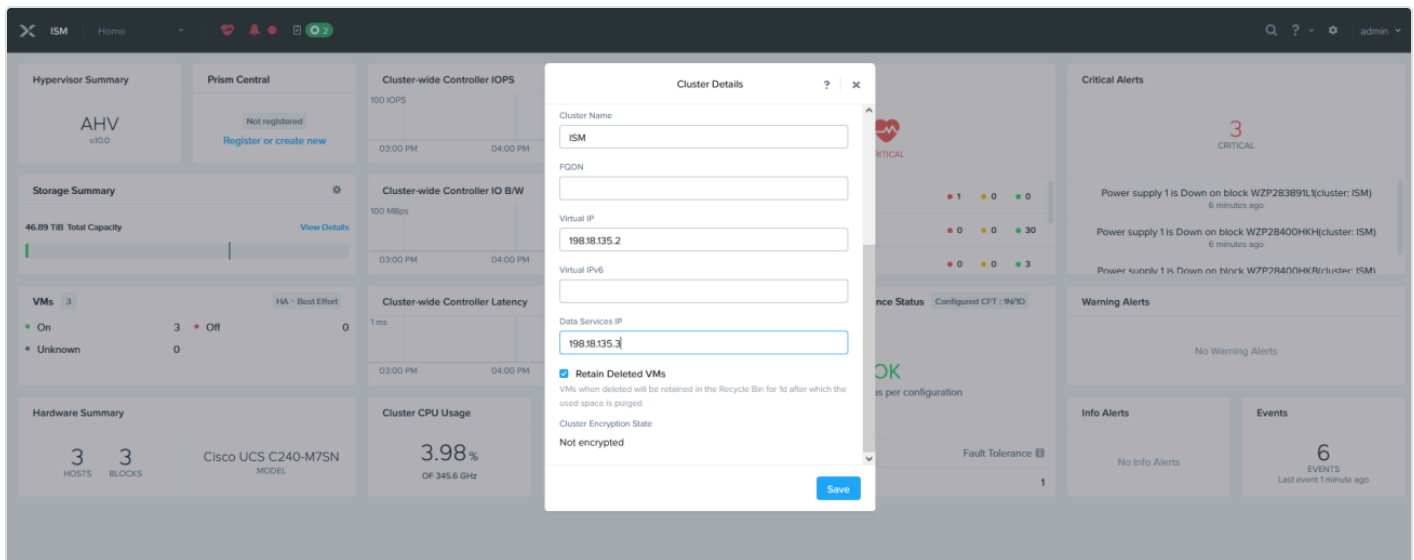

Let's start with some basic configuration, click Home at the top and select Settings then Network Configuration and click "Create Subnet"

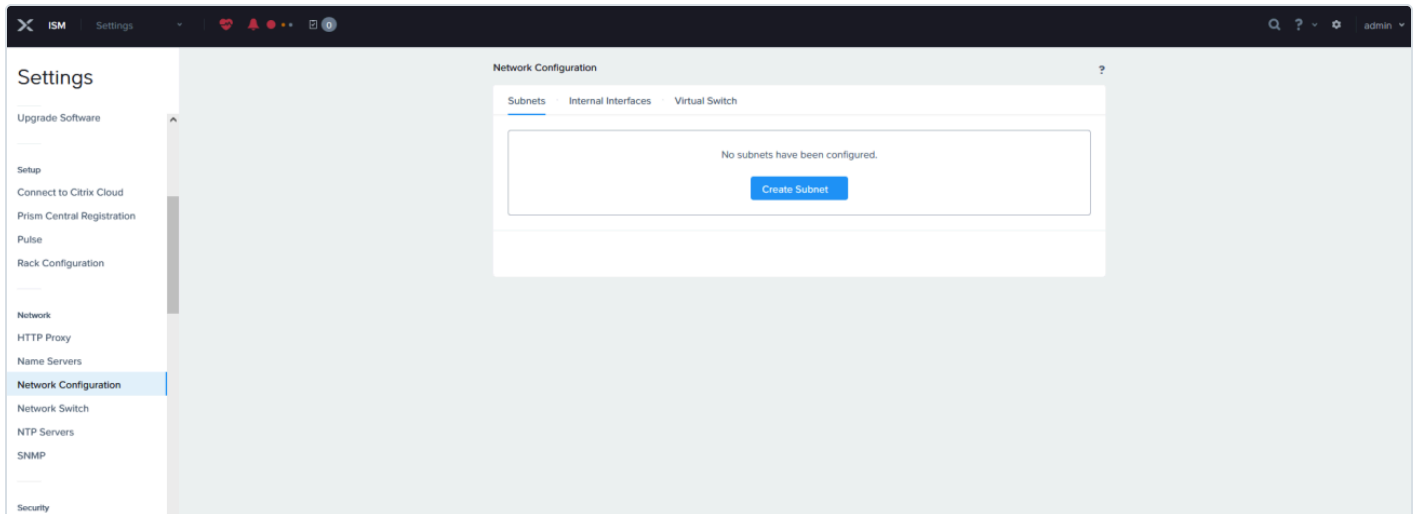

On "Create Subnet" use the following information

- Subnet Name = VMNetwork
- Virtual Switch= vs0(default)
- VLAN ID = 10
- Click Save

The screenshot shows the 'Create Subnet' form in the ISM Settings interface. The left sidebar lists various settings categories, with 'Network Configuration' selected. The main form contains the following fields and options:

- Subnet Name:** A text input field containing 'VMNetwork'.
- Virtual Switch:** A dropdown menu showing 'vs0'.
- VLAN ID:** A text input field containing '10'.
- Enable IP address management:** An unchecked checkbox.
- Help text:** 'This gives AHV control of IP address assignments within the network.'
- Buttons:** 'Cancel' and 'Save' buttons at the bottom right.

Then scroll up and select “Image configuration” and click “+ Upload image”.

The screenshot shows the 'Image Configuration' form in the ISM Settings interface. The left sidebar lists various settings categories, with 'Image Configuration' selected. The main form contains the following elements:

- Header:** 'Image Configuration' with a help icon.
- Text:** 'Manage the images to be used for creating virtual disks.'
- Buttons:** '+ Upload Image' button.
- Table:** A table with columns: Name, Annotation, Type, State, and Size. The table is currently empty, displaying the message 'No images have been created.'

In this case we are going to use Ubuntu as an example

- Name = Ubuntu ISO
- Image Type = ISO
- Storage Container = SelfServiceContainer
- Image Source
 - Upload File > Click “Browse...”, from the Downloads folder select Ubuntu ISO
- Click Save

The screenshot shows the 'Create Image' form in the ISM Settings page. The form has the following fields and options:

- Name:** Text input field containing 'Ubuntu ISO'.
- Annotation:** Text input field.
- Image Type:** Dropdown menu with 'ISO' selected.
- Storage Container:** Dropdown menu with 'SelfServiceContainer' selected.
- Image Source:** Radio buttons for 'From URL' and 'Upload a file'. 'Upload a file' is selected.
- Upload a file:** Includes a 'Browse...' button and a status 'No file selected.'.
- Buttons:** 'Back', 'Cancel', and 'Save' buttons at the bottom.

The left sidebar shows the 'Settings' menu with 'Image Configuration' highlighted.

This screenshot shows a 'File Upload' dialog box overlaid on the 'Create Image' form. The dialog box displays the 'Downloads' folder with the following files:


Name	Date modified	Type	Size
Today (2)			
Win11_24H2_English_x64.iso	4/2/2025 5:51 PM	Disc Image File	5,683
ubuntu-24.04.2-desktop-amd64.iso	4/2/2025 3:18 PM	Disc Image File	6,194

The 'File name' field at the bottom contains 'ubuntu-24.04.2-desktop-amd64.iso'. The 'All Files (*.*)' filter is selected. The 'Open' button is highlighted.


Note

The ISO upload should take a few minutes to complete.

Then click the drop-down menu on the top left and select "VM"

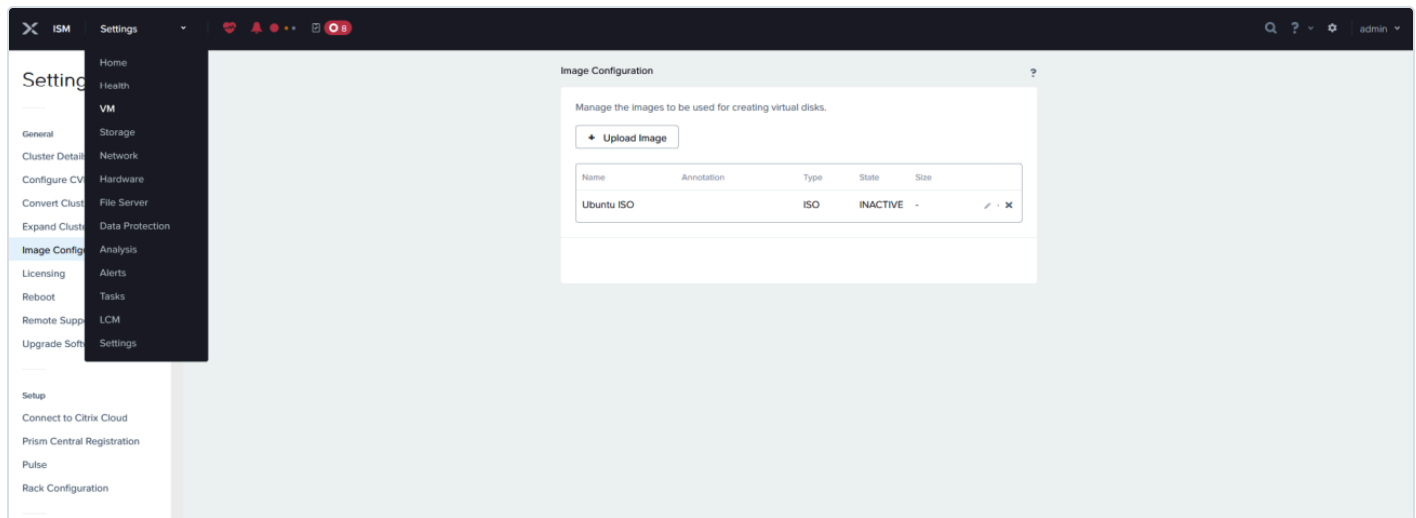

In the VM dashboard click “+ Create VM” on the top right

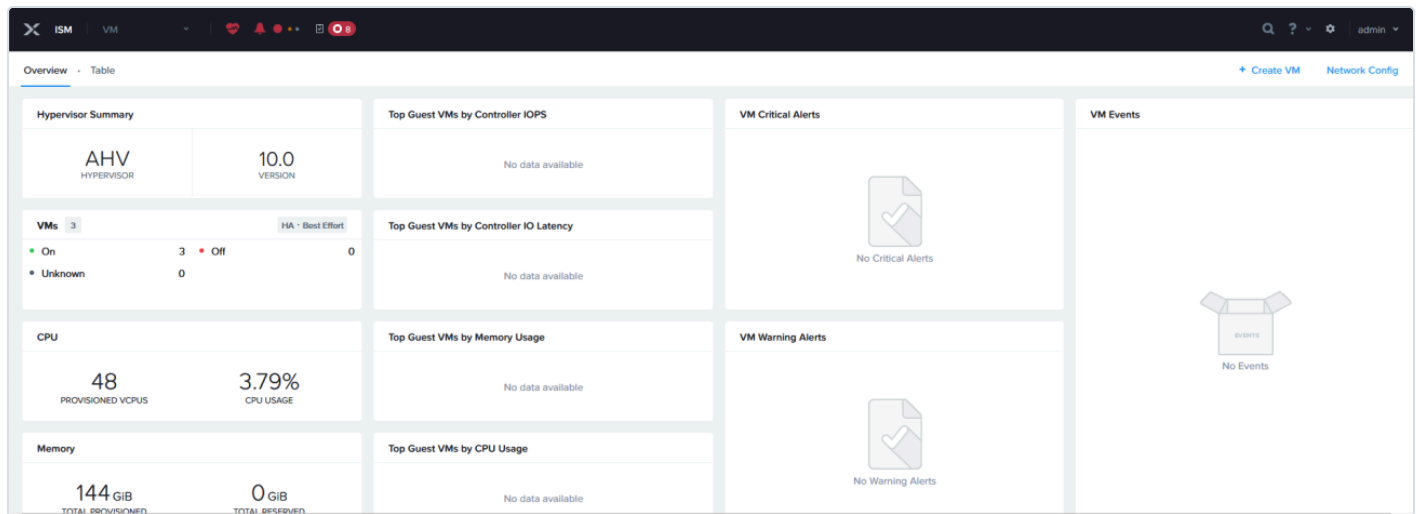

Let's fill in the new VM information

- Name = Ubuntu VM
- vCPU(s)= 2
- Memory = 4
- Disk 1. + Add a New Disk 2. Logical size = 20 3. Click Add 4. Click the pencil of CD-ROM 5. Operation = Clone from Image Service 6. Image = select Ubuntu from the drop down 7. Click Add
- Network Adapters (NIC) 1. + Add New NIC 2. Subnet Name = VMNetwork 3. Click Add
- Click Save
- Then Click Table at the top left, next to overview

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM			2	4 GiB	- / 25.91 GiB	0%	0%	-	-	-	-	Yes	No

Note

Note the new VM recently created


Right-click the Ubuntu VM and select Power On

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM			2	4 GiB	5.91 GiB / 25.91 GiB	0%	0%	-	-	-	-	Yes	No

Right-click the VM again and select Launch Console

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM	c240-node-2/AHV	198.18.128.1...	2	4 GiB	5.91 GiB / 25.91 GiB	65.97%	38.98%	201	0	11.58 MBps	0.42 ms	Yes	No


On the VM console, close the Installation window and open a Firefox browser and point to "cisco.com" to test VM usability and connectivity to the Internet.

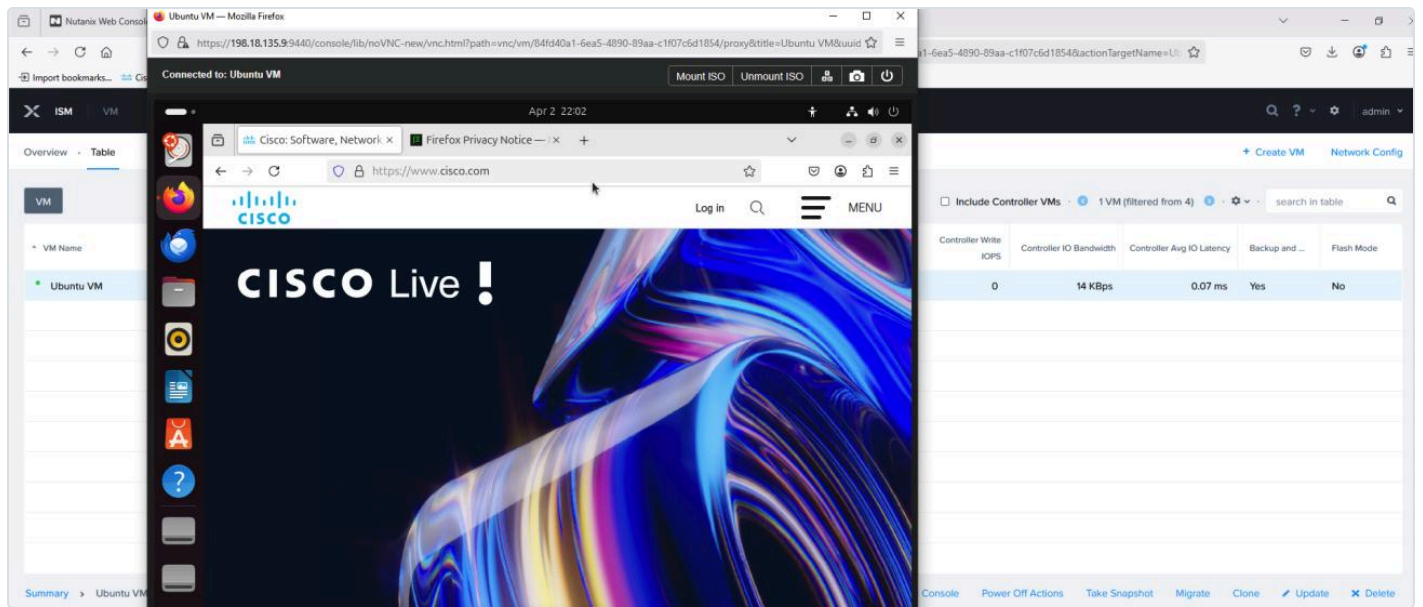


This concludes this scenario; you can close the Ubuntu console to continue with the next scenario

Scenario 4 · Nutanix Prism Central Deployment and Cluster Registration

In the main dashboard on the Prism Central click in Register or create new

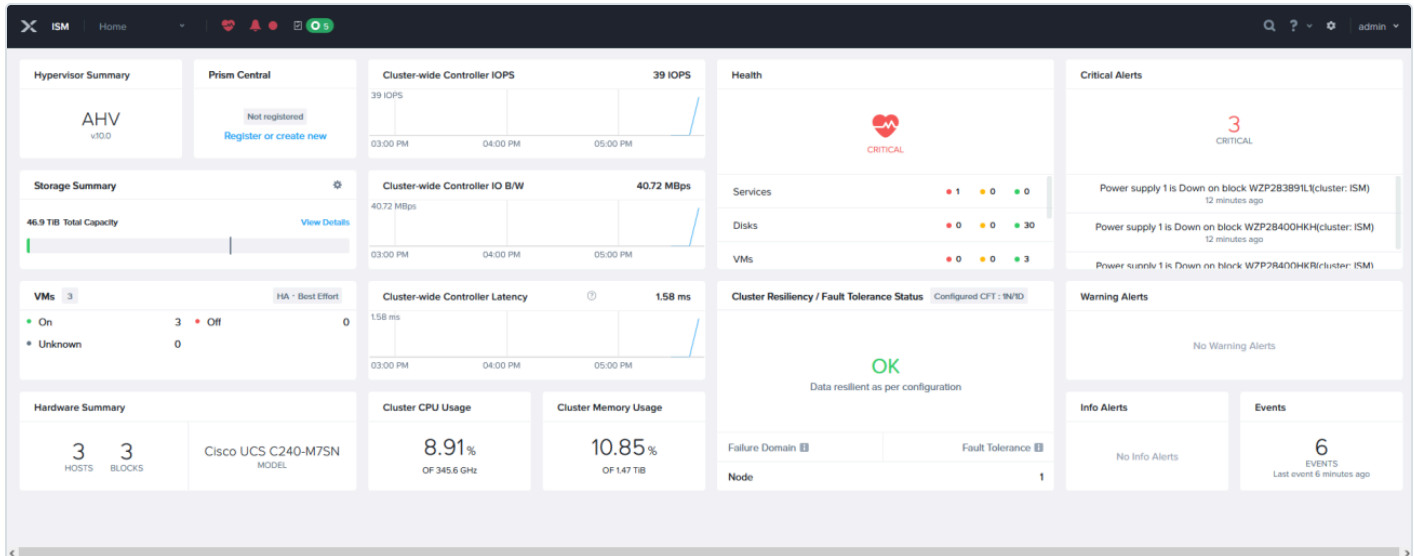

Select the first option, I want to deploy a new Prism Central Instance

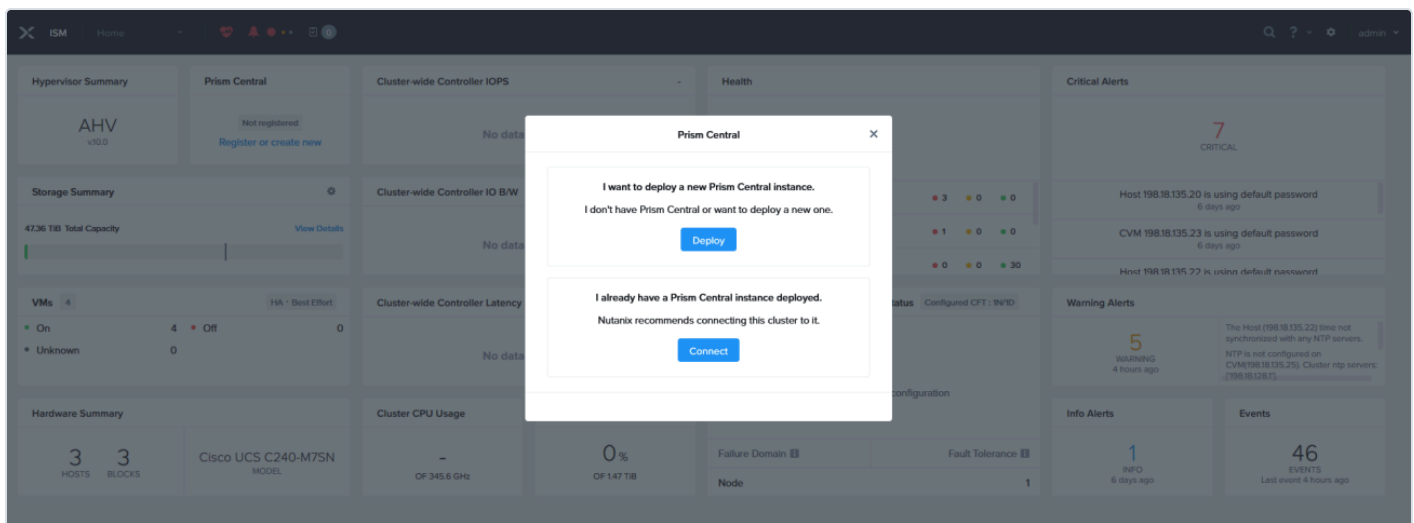

Under Installation Image section, PC details ISM-PC select “pc.7.5.1.1” and click Next

Prism Central (PC) Deployment

1 Version 2 Size and Scale 3 Configuration

PC Details
Create PC Name
ISM-PC

Installation Image
Provide the Prism Central image you'd like to install. You can download the latest version from the internet or upload an installation binary from your local machine.
[Learn more about PC Versions.](#)

Available versions
☒ Only show compatible versions [Upload Installation Binary](#)

Version Number	Version Type
☐ pc.75.1	Public version
☒ pc.75.11	Public version
☐ pc.75.110	Public version
☐ pc.75.112	Public version
☐ pc.75.12	Public version
☐ pc.75.14	Public version
☐ pc.75.16	Public version
☐ pc.75.18	Public version

Cancel Next

Select "Small" and click next

Note

NOTE: Do NOT select X-Small, this option does not support cluster expansion

Prism Central (PC) Deployment

PC Version PC Size and Scale Configuration Microservices

Select Prism Central (PC) Size and Scale
Each size supports given number of VMs and can be used with the minimum number of resources provided below.
[Learn more about PC sizes](#)

X-Small New

Supports up to 500 VMs | 5 Clusters | 50 hosts

4 vCPU 18 GB Memory 100 GiB Disk

☐ Start with the smallest size to explore basic Prism Central capabilities.

Small (S)

Supports up to 2500 VMs | 10 Clusters | 200 hosts

6 vCPU 28 GB Memory 500 GiB Disk

☒ Scale-Out PC

Large (L)

Supports up to 12500 VMs | 25 Clusters | 500 hosts

10 vCPU 46 GB Memory 2500 GiB Disk

Add Network information:

- Network = select existing VMNetwork
- Subnet Mask = 255.255.192.0
- Gateway IP = 198.18.128.1
- DNS = 198.18.133.1
- NTP = 198.18.128.1
- Container = SelfServiceContainer
- Under General Details
- IP Address= 198.18.135.4
- Click Deploy

Prism Central (PC) Deployment

Networking Details

Network: VMNetwork

Subnet Mask: 255.255.192.0 Gateway IP: 198.18.128.1

DNS Address(es): 198.18.133.1

NTP Address(es): 198.18.128.1

Container: SelfServiceContainer


General Details

VM Name: PC-2024-3-ISM (6 vCPUs, 28 GB RAM)

IP Address: 198.18.135.4


Back Cancel Next

After the deployment begins it will take you back to the main dashboard and under the Prism Central widget you will see the deployment activity.


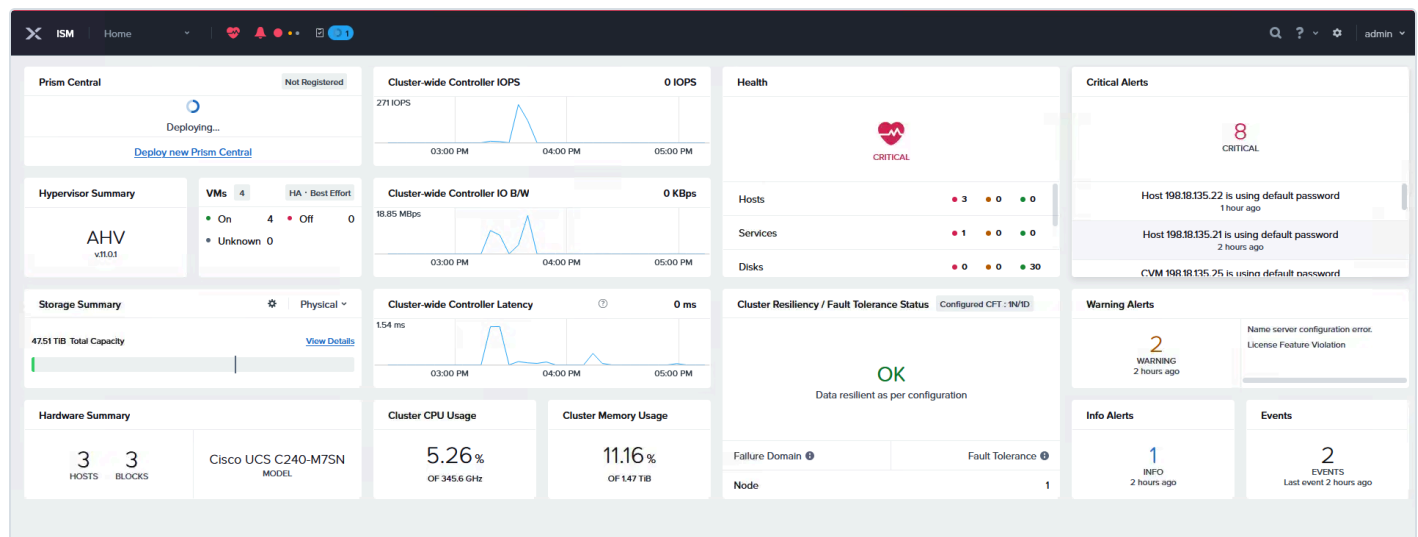


Once Prism Central deployment is completed, use a web browser to connect to the virtual IP assigned (198.18.135.4) and change the default

- First time logging in the credentials are:
 - Username = admin
 - Password = Nutanix/4u

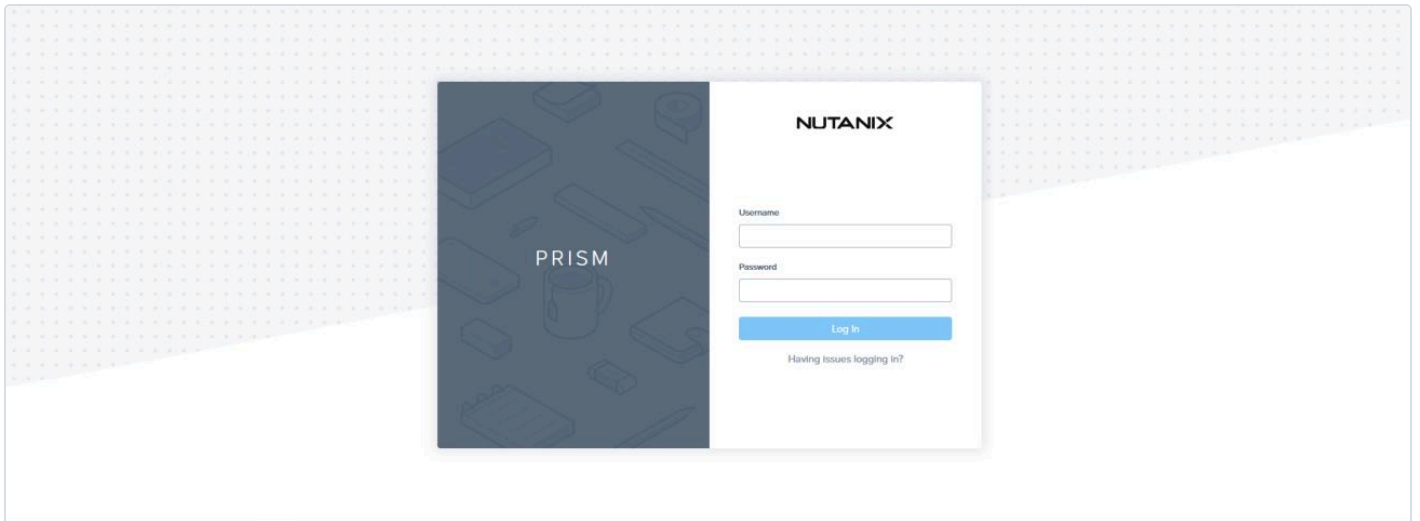

- New password C1sco12345!

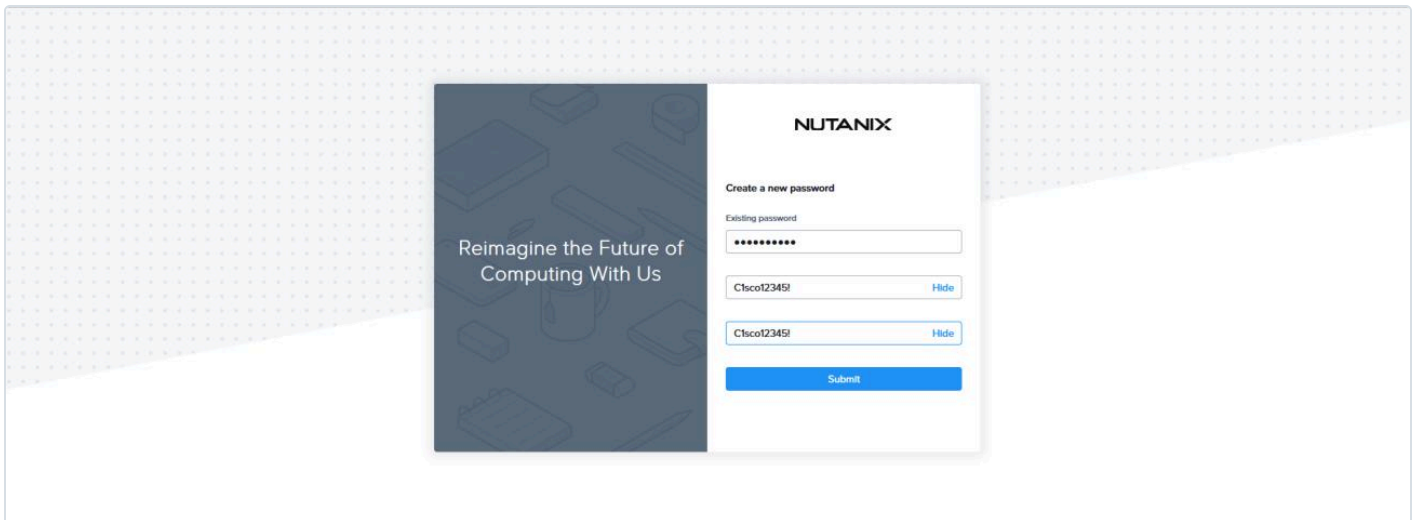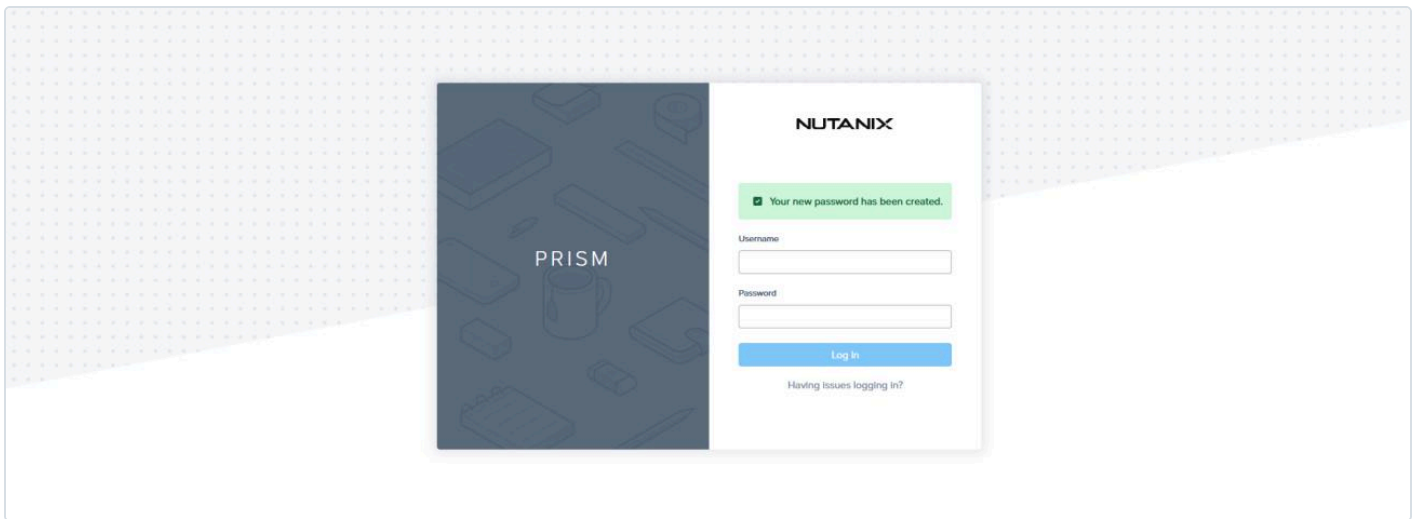

1. After the password is changed continue with the EULA

Nutanix End User License Agreement (EULA) and Terms of Use

Nutanix is referred to in this Agreement as "Us", "We" or "Our" and Your organization is referred to as "You" or "Your". This Nutanix License and Services Agreement ("Agreement") governs Your use of any Products (as defined below) and becomes effective when You (s) issue a purchase order for the Products; (b) execute or accept this Agreement; or (c) access, download, install, or use the Software or Cloud Services. This Agreement is entered into between You and Nutanix Inc., located at 1740 Technology Dr. Ste. 150, San Jose, CA 95110, United States, if You are contracting in the Americas, or Nutanix Netherlands B.V., located at Marcususplein 1, 2132 HA Hoofddorp, The Netherlands, if You are contracting anywhere else in the world or both if applicable. You represent and warrant that You have the authority to enter into this Agreement on behalf of Your organization.

1. Definitions.

1.1. "Affiliates" means any corporation or other business entity which controls, is controlled by or is under common control through the ownership of more than fifty percent (50%) of the

Cpoc

Cisco

Test Cases

☒ I have read and agree to the terms and conditions.

Decline

Accept

1. Keep Pulse by default and click Continue

Pulse will be enabled

Pulse will be enabled for this Prism Central and all clusters registered to this Prism Central. Pulse continuously monitors cluster health and periodically sends usage data to Nutanix's cloud based analytics engine. It automatically takes action when a problem has occurred, or is about to occur. [Learn More](#)

Nutanix strongly recommends not disabling this feature to improve your support experience in the event of a failure or critical system issue.

If you disable Pulse, Nutanix will not be able to proactively reach out to you in the event of failures, and your issue resolution time may increase significantly.

☒

Disable Pulse. (not recommended)

Pulse will not be enabled on this Prism Central or any registered clusters.

☒


Do not enable Pulse for registered clusters. (not recommended)

Pulse will not be enabled on any registered clusters.


Continue

At the top select Infrastructure from the drop-down, then click on Prism Central Settings, select Prism Central Management and click edit


- Cluster name = PC-VIP-ISM
- Virtual IP = 198.18.135.5
- Click Update

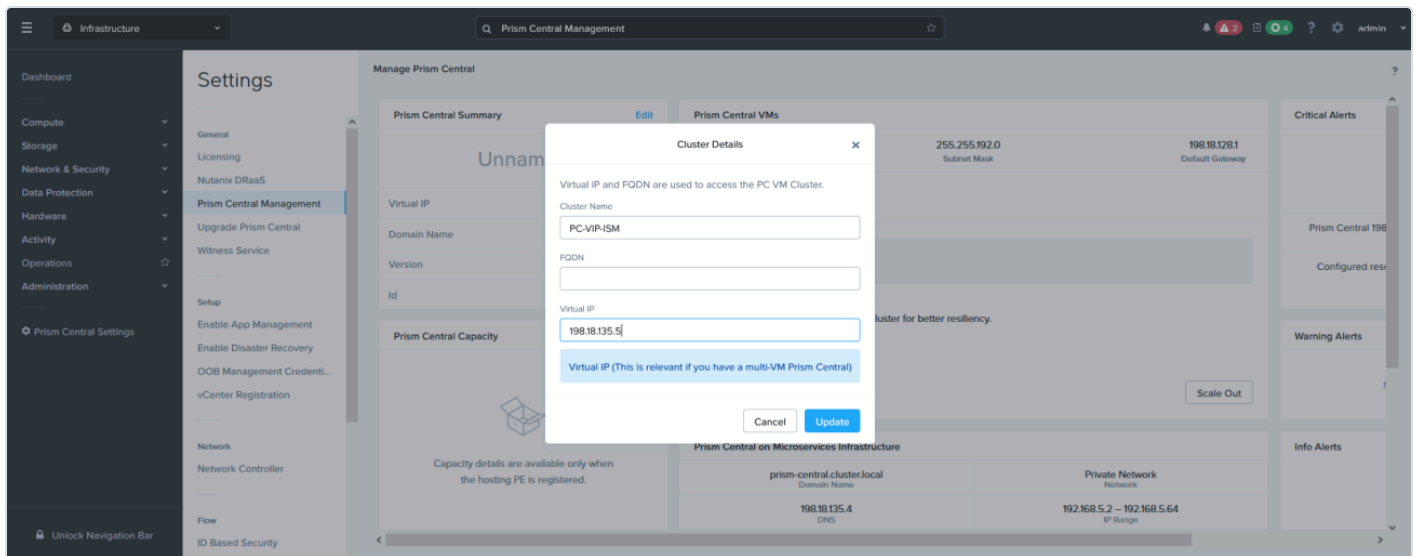


From the drop-down menu select Admin Center then click Marketplace and click Enable Marketplace

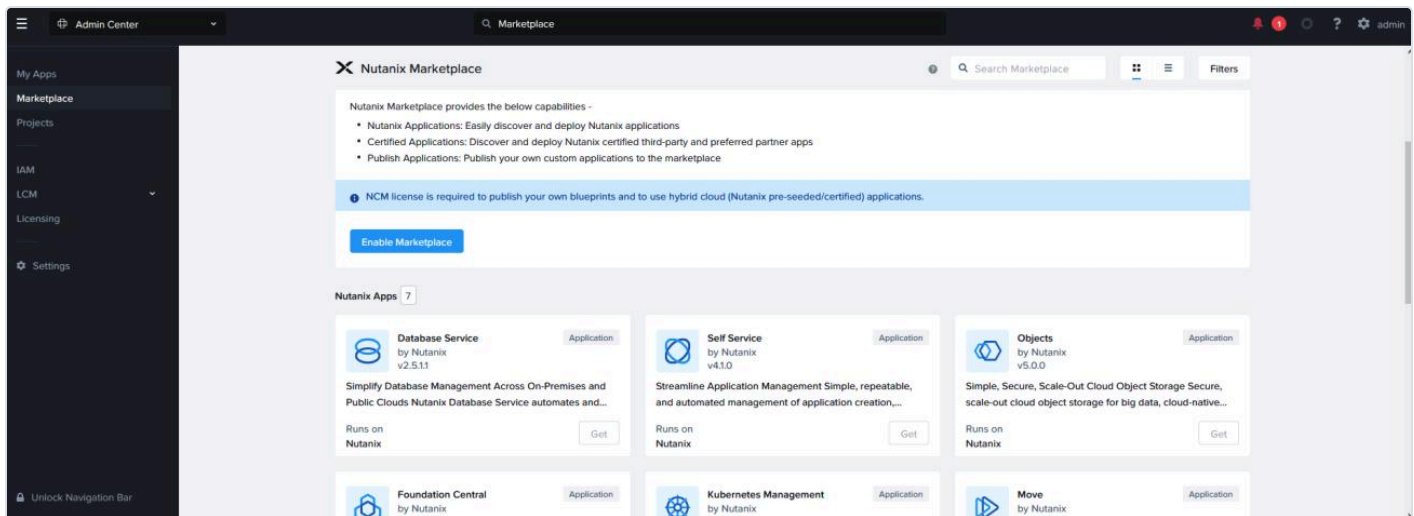


Once the Marketplace has been enabled, click "Get" on Foundation Central then click Deploy

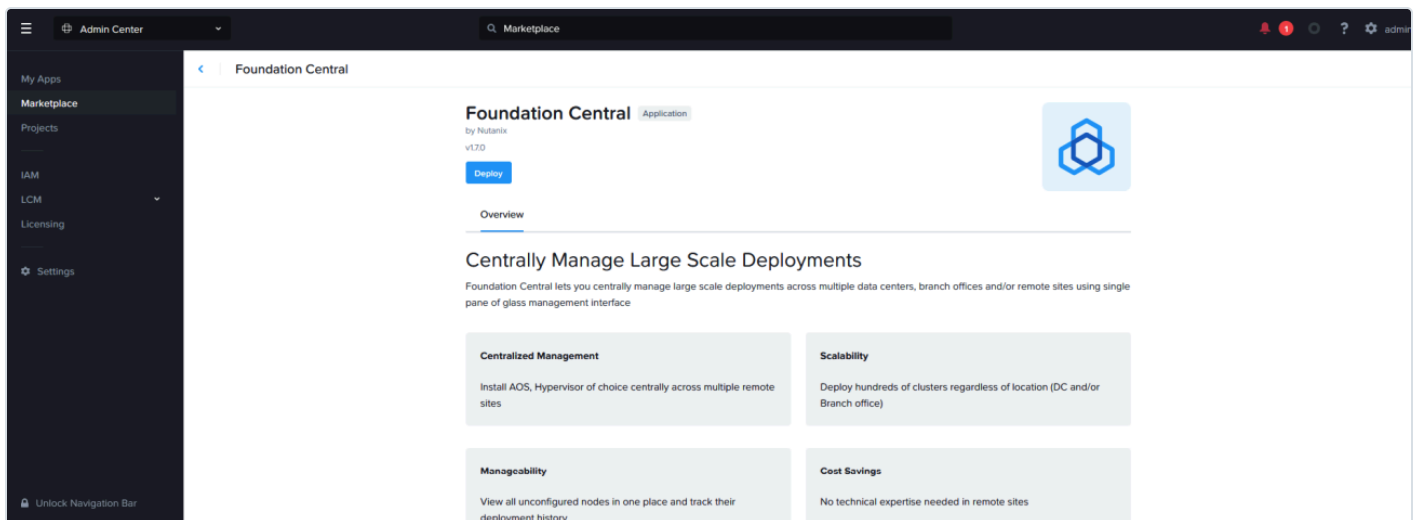

While the Foundation Central app is being deployed on Prism Central, return to the Prism Element main dashboard, and confirm then click "Register or create a new"

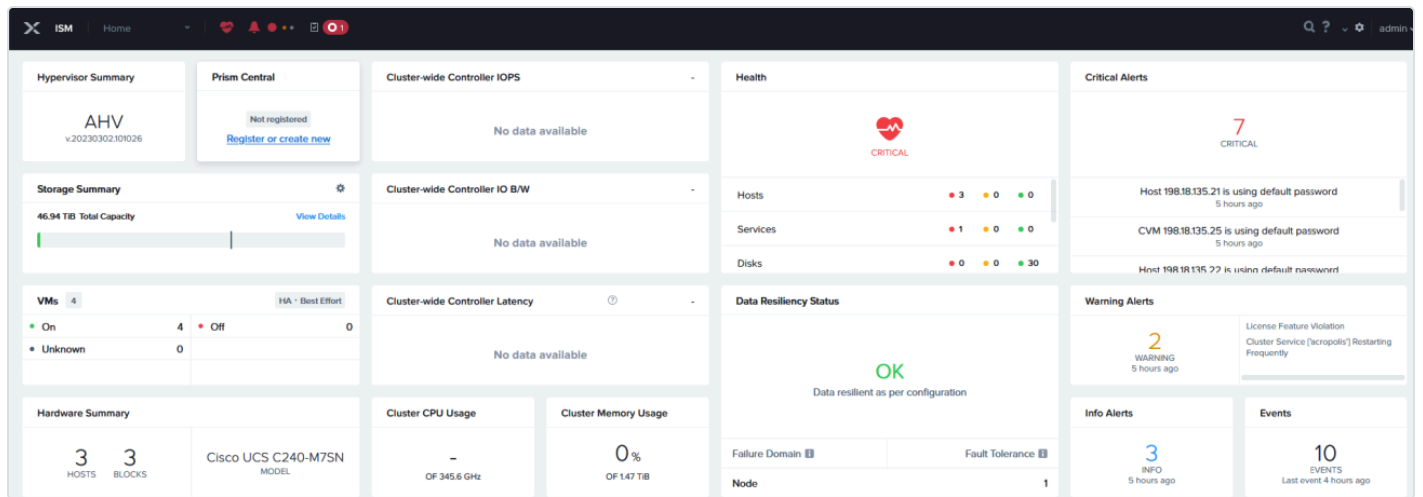


Now click connect and hit next

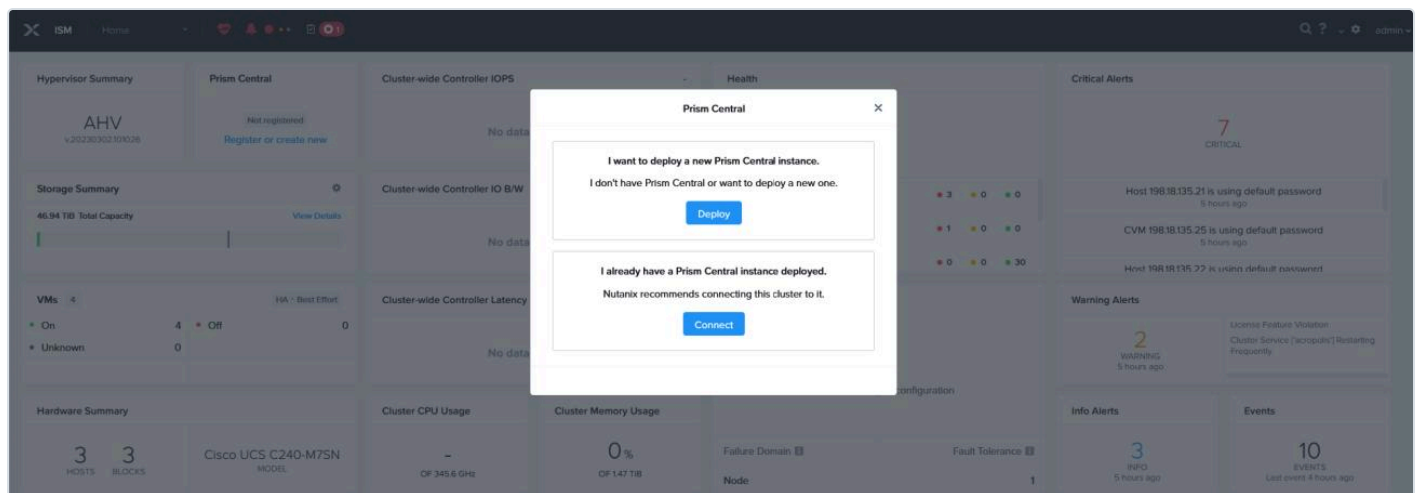


On the Prism Central configuration add

- Prism Central IP/FQDN = 198.18.135.5
- Username = admin
- Password = C1sco12345!
- Click Connect


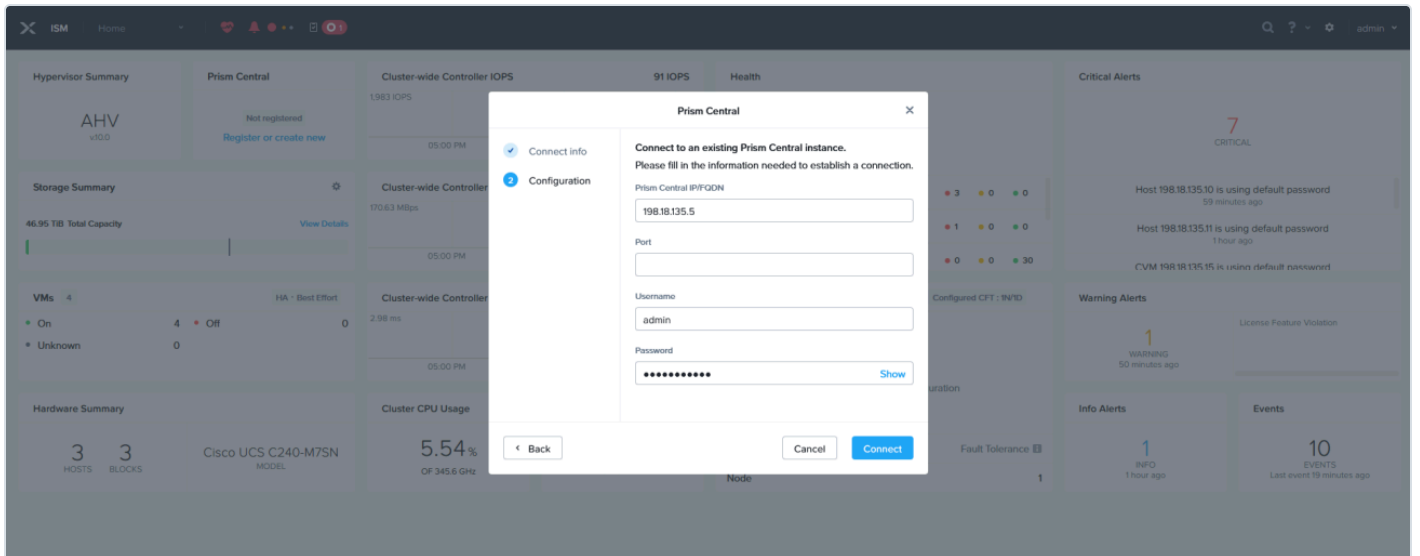


The ISM cluster is now registered with and connected to the new Prism Central (PC-7.5.1.1)

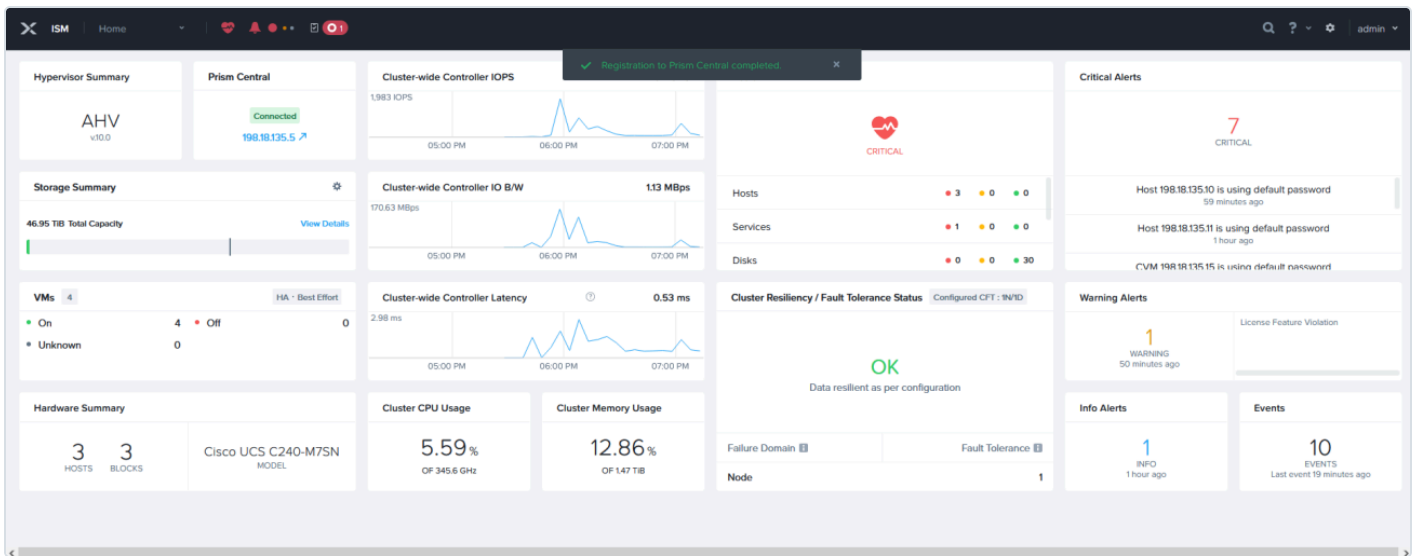


Scenario 5 · Nutanix Cluster Expansion


1. Return to the new Prism Central (add IP info here to make sure users will go to PC 7.5.1.1) and click on View in my Apps

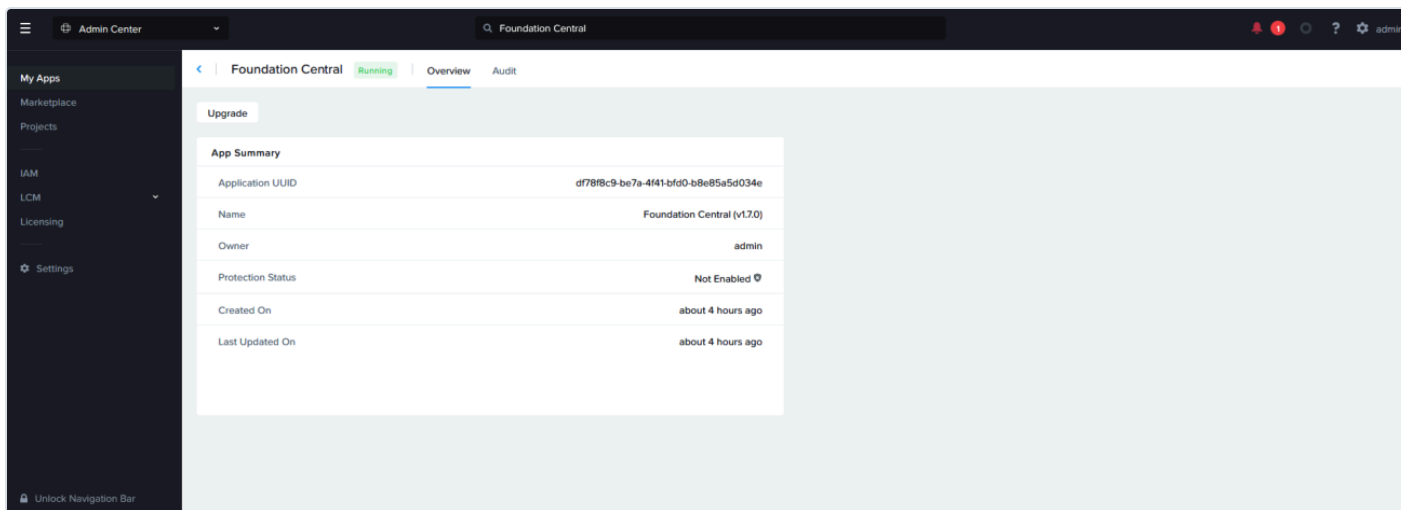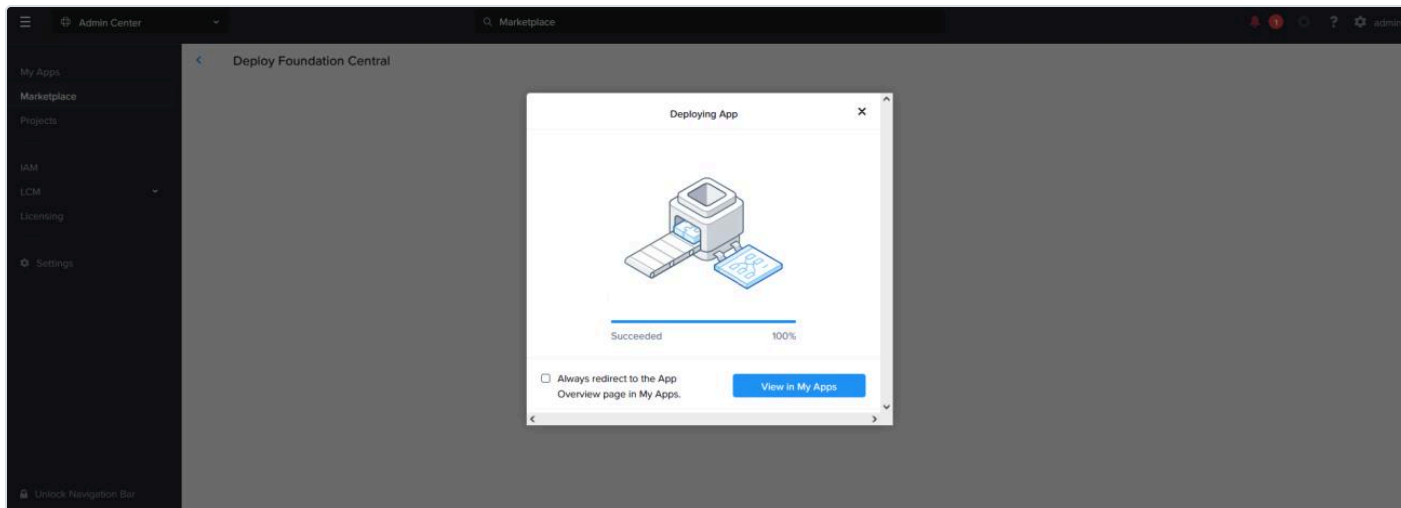


1. Once the App is on running state from Admin Center > LCM > Prism Central Cluster

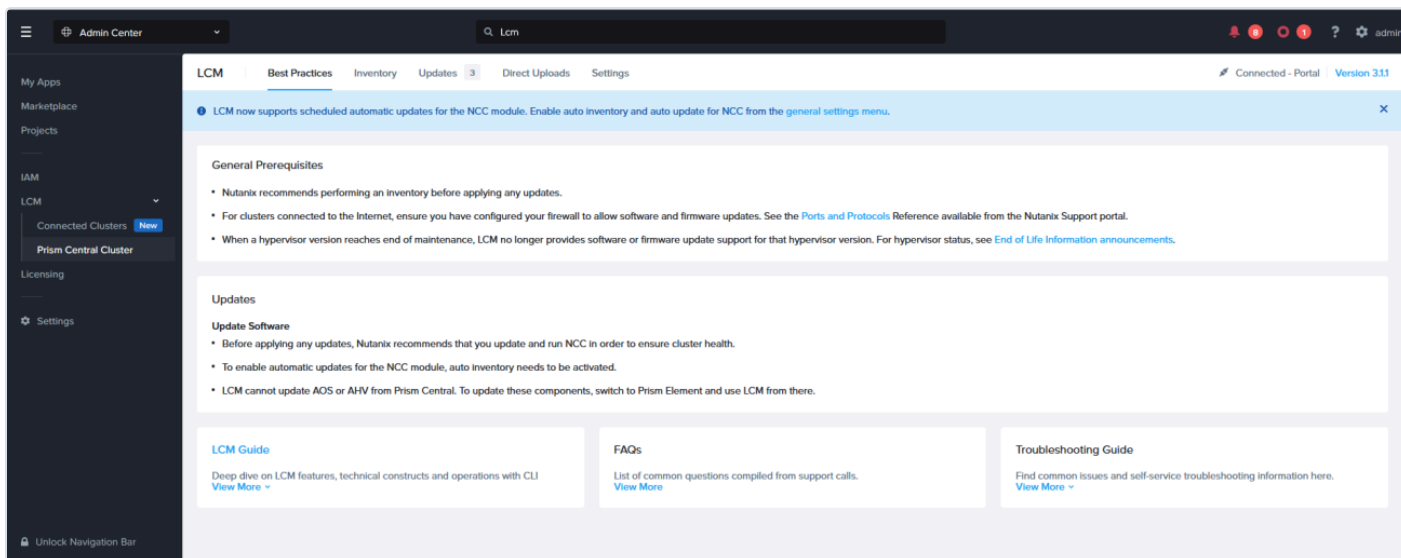

1. Click inventory and click Perform Inventory > Proceed

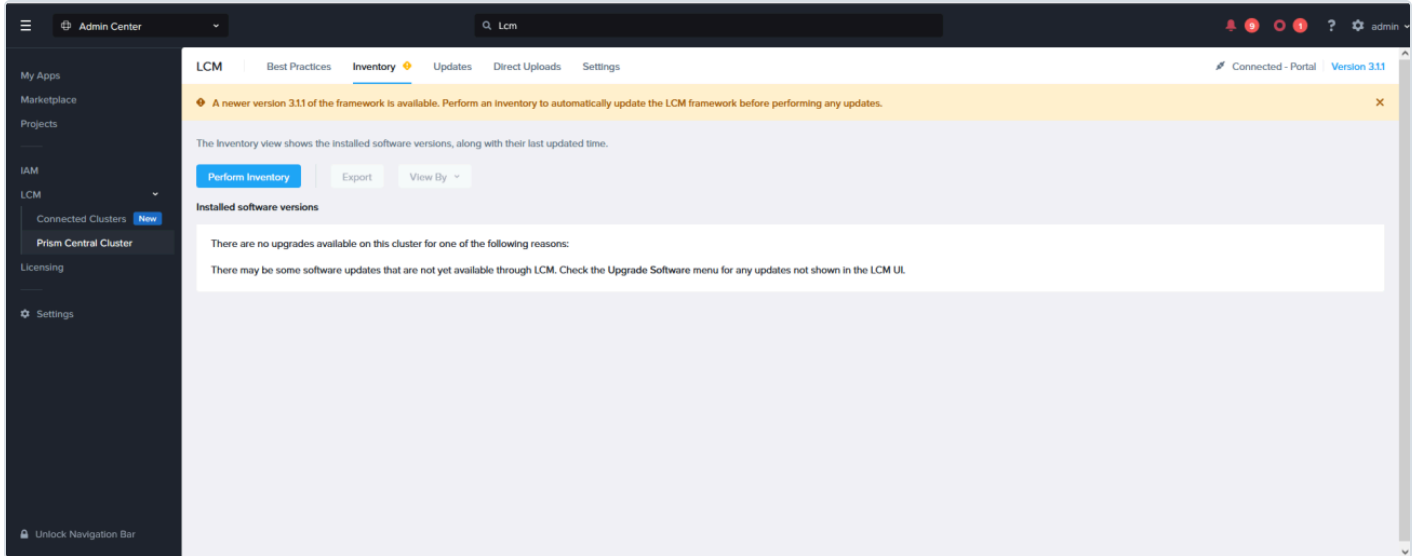

1. Wait until the Inventory is complete, then press Return to Inventory

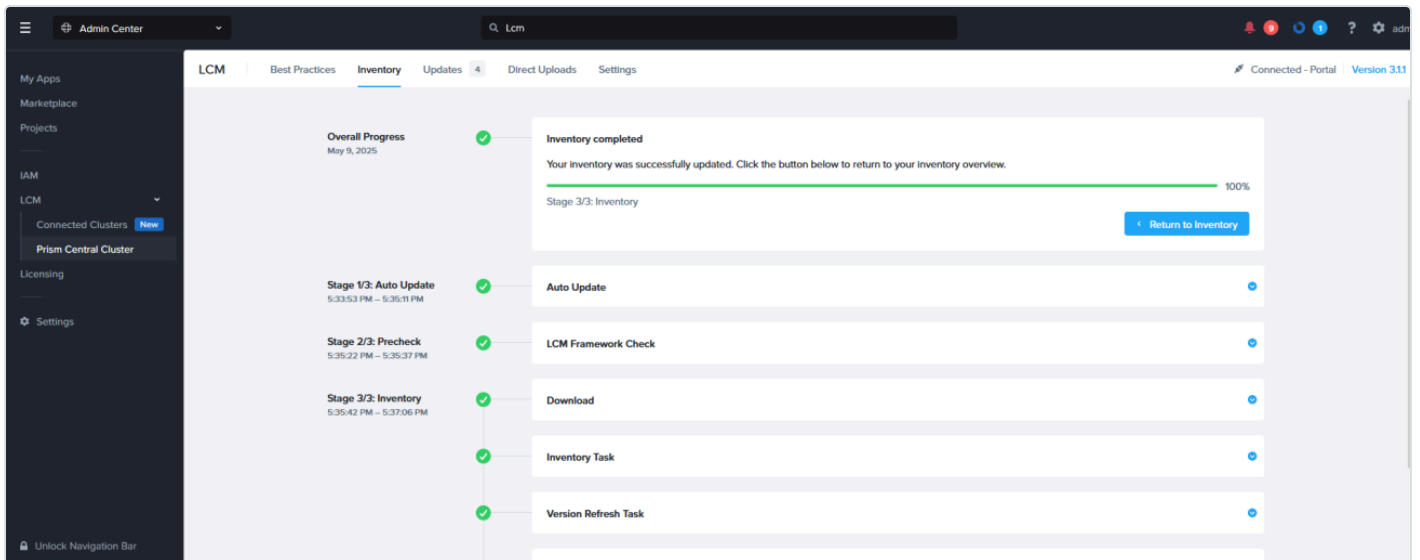

1. Click Updates, check the box of Foundation Central then click View Upgrade Plan

The screenshot shows the Cisco LCM Admin Center interface. The left sidebar contains navigation links: My Apps, Marketplace, Projects, IAM, LCM (selected), Connected Clusters (with a 'New' button), Prism Central Cluster, Licensing, and Settings. The main content area is titled 'LCM' and has tabs for Best Practices, Inventory, Updates (selected), Direct Uploads, and Settings. A notification banner at the top states: 'The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. LCM cannot update AOS or AHV from Prism Central. To update these components, switch to Prism Element and use LCM from there. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu.' Below the banner, there are buttons for 'View Upgrade Plan' and 'Pre-Upgrade', and a 'Filter' button. The main section is titled 'Viewing all 4 Software Updates' and contains a table:

Software	Available Version	Current Version	Last Updated	Release Notes
☒ Foundation Central	1.7.1 1 version update	1.7		View Release Notes
☐ MSP	2.6.1.1 1 version update	2.6.1.0		
☐ PC	pc-2024.3.11 Release Date: April 23, 2025 1 version update	pc-2024.3.1		View Release Notes
☐ Security Dashboard CVE Data	2025.04.1 9 version updates	2024.03.1		Security Dashboard CVE data for April 2025

1. Click Apply 1 Update and wait until the Foundation Central update is complete

The screenshot shows the 'Review Upgrade Plan' dialog box. It contains a blue information banner: 'Genesis service will be restarted on the cluster. User workloads will not be disrupted. Refer to KB 6945 for more details.' Below this, text explains that stopping the update is possible via the 'Stop Update' button and that LCM will choose the safest time to stop. A question asks: 'Do you want to apply the selected updates?'. Under 'Software Updates', a table shows the selected update:

Cluster	Foundation Central
Prism Central	1.7.1 Installed: 1.7

At the bottom right of the dialog are 'Cancel' and 'Apply 1 Updates' buttons.

The screenshot shows the Cisco LCM Admin Center interface after the update. The 'Updates' tab is selected, and the 'Overall Progress' section shows a green checkmark and the date 'May 9, 2025'. A progress bar indicates 100% completion. A message states: 'Update successful! All updates have been implemented successfully. To see all available remaining updates, please return to the update list.' Below this, a list of update stages is shown, all with green checkmarks:



- Stage 1/2: Precheck (5:40:00 PM - 5:40:25 PM)
 - LCM Framework Check
 - Module Check
- Stage 2/2: Install Update (5:40:27 PM - 5:42:00 PM)
 - Download
 - Update Foundation Central
 - Bundle Compatibility Check
 - Module Compatibility Check

A 'Return to Updates' button is visible at the top right of the progress section.


1. Once the Foundation Central upgrade is complete, from the drop-down menu select Foundation Central

Note


If Foundation Central does not load, just Clear the cookies and site data

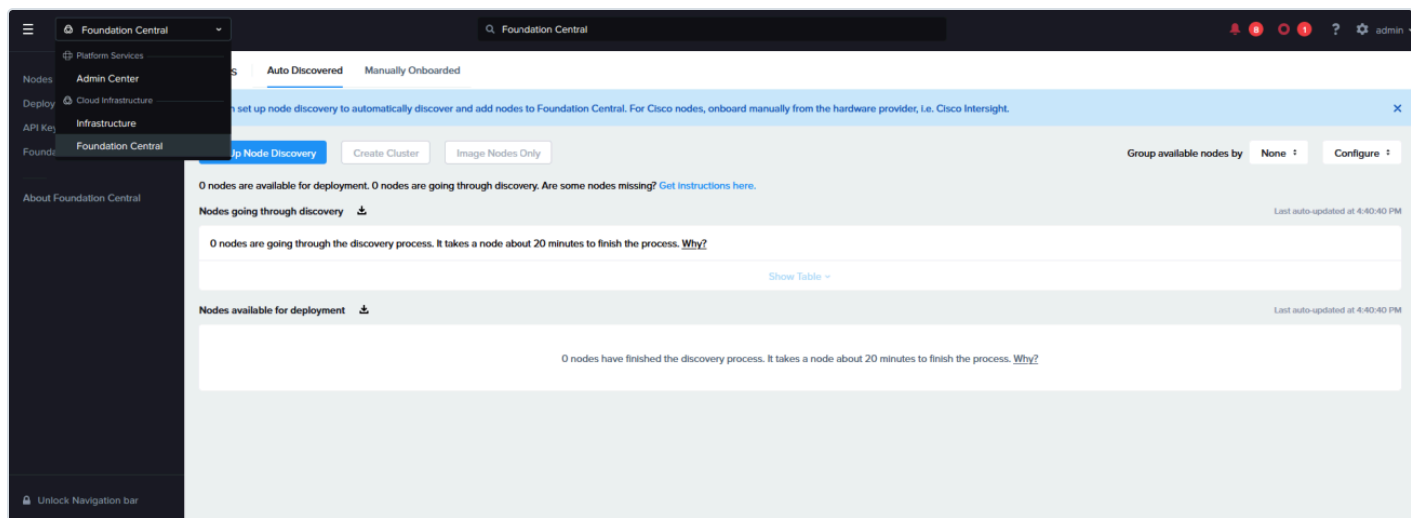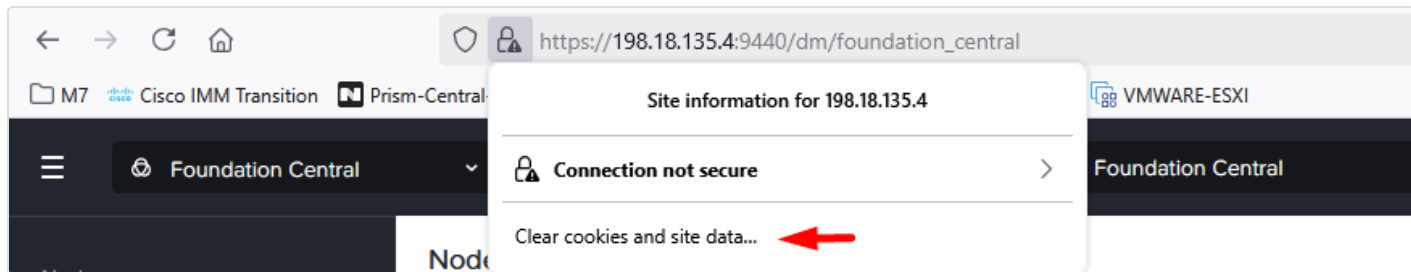


1. Confirm the Foundation Central by clicking on the left side About Foundation Central

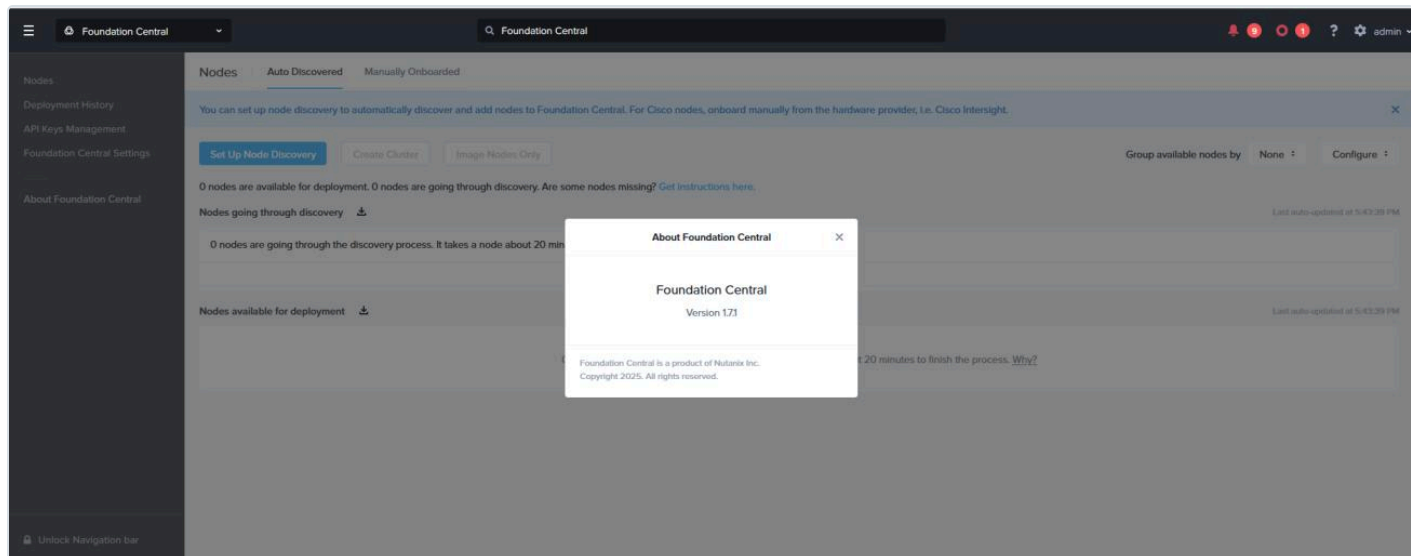

1. Then under Manually Onboarded, click Onboard Nodes

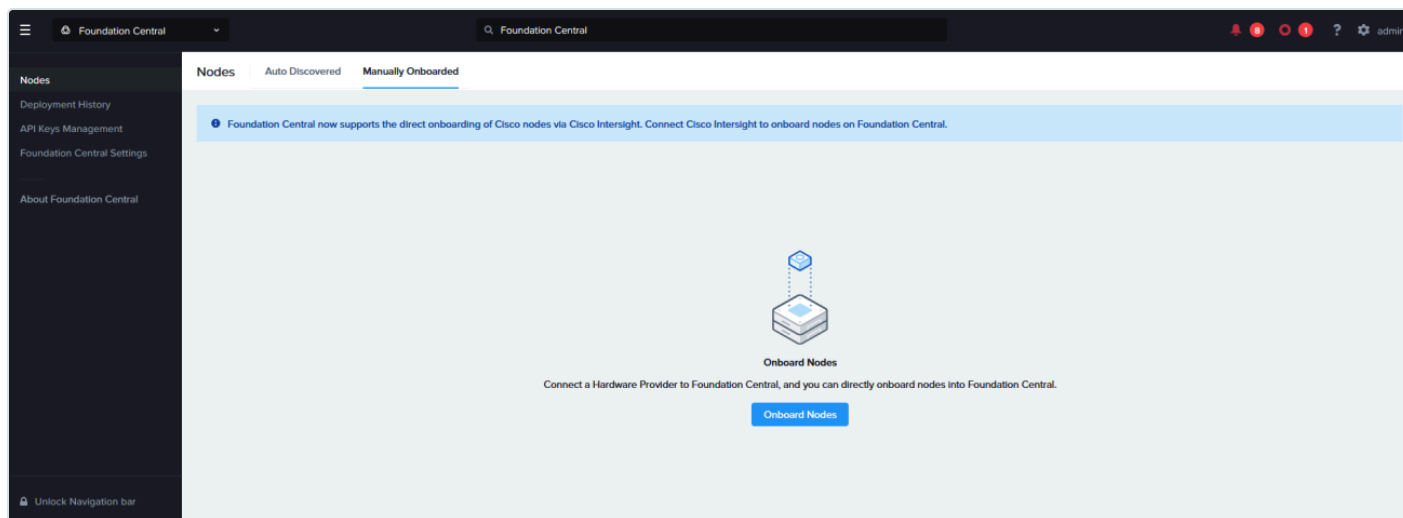

1. Connect Hardware Provider
2. Fill in the required information
3. Connection name= Intersight
4. Hardware Provider = Cisco Intersight
5. Intersight Deployment Type = SaaS
6. Intersight Region & URL = North America
7. Intersight API Key =
8. Secret Key=

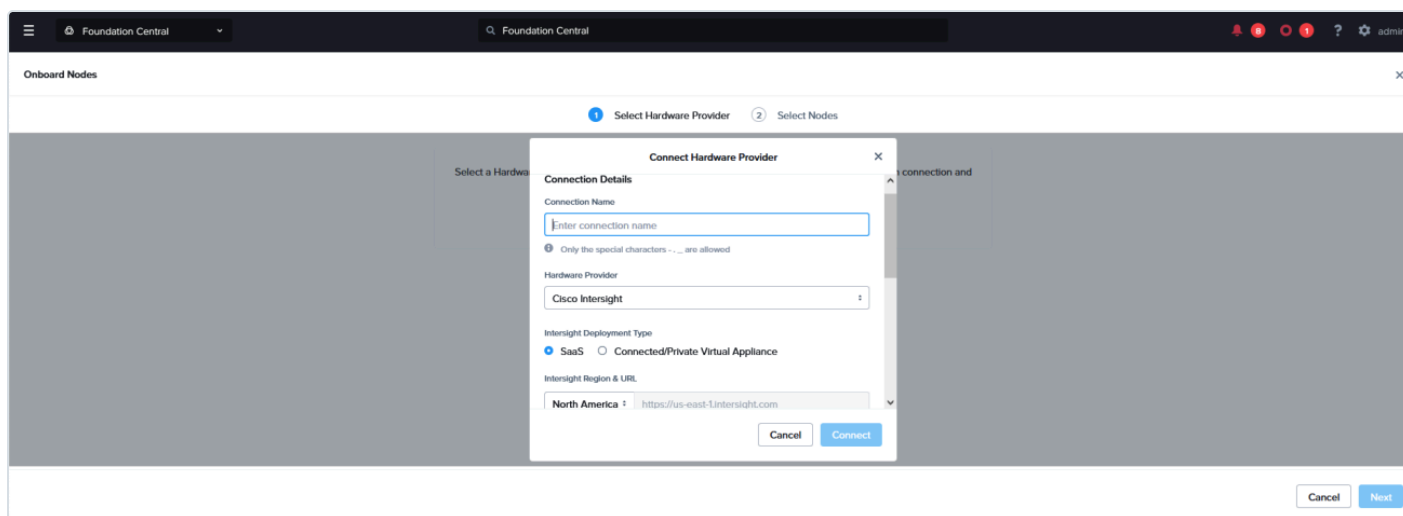

1. Select Intersight Standalone Mode and click Next

Onboard Nodes

1 Select Hardware Provider 2 Select Nodes

Select a Hardware Provider to onboard nodes to Foundation Central. Currently, only Cisco Intersight is supported and only a single connection is allowed at a time. To add a new connection, remove the existing one.

Connection Name	Hardware Provider	URL
intersight	Cisco Intersight	https://us-east-1-intersight.com

Node Management Mode
Select the management mode. In the next step, you will view the nodes based on the selected mode

☐ Intersight Managed Mode
☒ Intersight Standalone Mode

Cancel Next

1. Select the node and click Onboard

Onboard Nodes

1 Select Hardware Provider 2 Select Nodes

Connection Name: **intersight** Management Mode: **Intersight Standalone Mode**

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click Refresh.

Type in a query Modify Filters

1 selected out of 1 Cisco Node 1-1 of 1 20 rows

Node Serial	Name	Model	Block Serial	Domain	Classification	Intersight Organizations	Intersight Tags	Memory (GB)	CPU (Core)
WZP283891L1	C240-WZP283891L1	UCSC-C240-M7SN	WZP283891L1	-	Nutanix	ISM	-	512	32

Back Cancel Onboard

1. Click "Prepare Nodes for Cluster"

Nodes Auto Discovered Manually Onboarded

Onboard Nodes Prepare Nodes for Cluster Create Cluster Actions

View by Group by Management Mode

Group By: Management Mode Modify Filters

Viewing 1 grouped out of 1 Cisco Node 1-1 of 1

Management Mode: Intersight Standalone 1 Empty Groups

Node Serial	Name	Node Status	Model	Domain	Intersight Organizations	Intersight Tags	Classification	Onboarded On	Last Refreshed
WZP283891L1	C240-WZP283891L1	Onboarded	UCSC-C240-M7SN	-	ISM	-	Nutanix	Apr 10, 2025, 01:26 PM	Apr 10, 2025, 01:26 PM

1. Select the existing ISM cluster and click Next

Foundation Central

Foundation Central

admin

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

You are viewing the clusters registered with Prism Central. Please select the cluster for which you want to prepare nodes.

Viewing 1 cluster

1 - 1 of 1 20 rows

Cluster Name	AOS Version	Hypervisor	Node Count
ISM	70.0.5	AHV 10.0.0.1	3

Cancel Next

1. Select the node that will be added to the cluster and click Next

Foundation Central

Foundation Central

admin

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Cluster: ISM

The following list shows the eligible nodes for the cluster. Please select nodes to prepare with the selected cluster.

Type in a query

1 selected out of 1 Cisco Node

1 - 1 of 1 20 rows

Node Serial	Name	Model	block_serial	Intersight Tags	Classification	Memory (GB)	Onboarded On
☒ WZP283891LX	C240-WZP283891LX	UCSC-C240-M7SN	WZP283891LX	-	Nutanix	512	May 7, 2025, 07:23 PM

Back Cancel Next

1. Return to Cisco IMM tool and copy the AOS and AHV URLs

Foundation Central

Foundation Central

admin

Prepare Nodes for Cluster

1 Select Cluster 2 Select Nodes 3 AOS / Hypervisor 4 Network Settings 5 Configure Nodes 6 Security

Provide the URL to download AOS and metadata from during imaging. The URLs must be accessible to Foundation Central.

AOS Download URL

https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/nutanix_installer_package-release-ganges-70.0.5.iso

AOS Metadata URL

https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/generated-nutanix_installer_package-release-ganges-70.0.5.iso

Hypervisor

☐ Hypervisor AHV 10.0.0.1 is included in the AOS 70.0.5 package. I have verified and want to use it.

If you won't use the included hypervisor, provide the URL below to download the hypervisor from during imaging. The URLs must be accessible to Foundation Central. The checksum will be used to avoid re-downloading an already downloaded installer.

Hypervisor Download URL


https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-70.0.5/AHV-DVD-x86_64-10.0.0.1-1.iso

Pre-computed SHA256 Checksum of Hypervisor Installer


[7f6b213ef5766e8692627384a85032bdb37cbb53aef85757ac6de9e6be5e522d](#)

Back Cancel Next

1. For the AHV checksum, the Cisco IMM tool can be used to generate the SHA256 checksum.

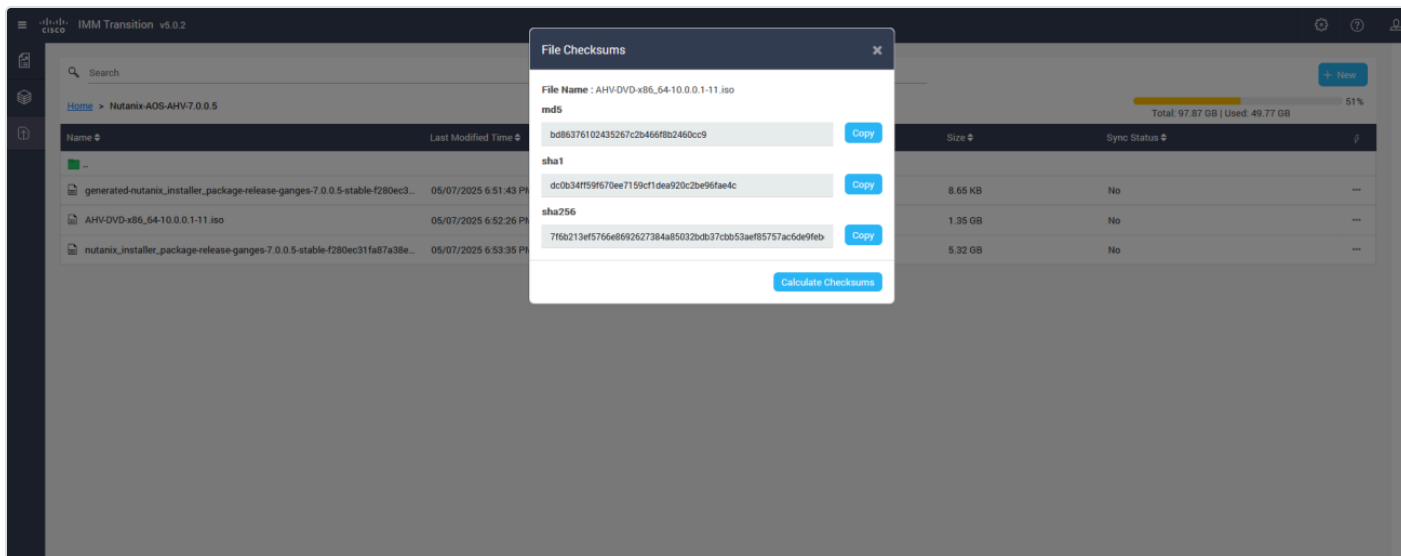

1. Host and CVM Network
2. Gateway= 198.18.128.1
3. Netmask= 255.255.192.0 /18
4. Host and CVM VLAN = 10
5. Click Next

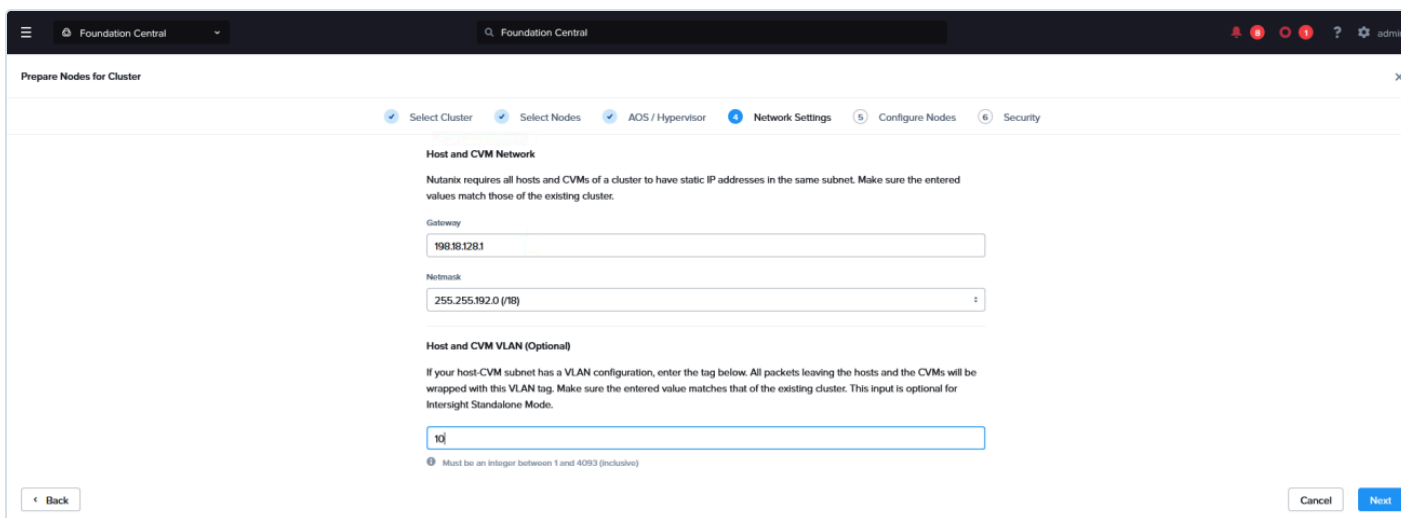

1. Fill in the IP range for the hypervisor and CVM

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** Security

1 Nodes

Node Serial	Name	Hypervisor IP Set Range	CVM IP Set Range	Hypervisor Hostname Set Range
WZP283891L1	C240-WZP283891L1	198.18.135.23	198.18.135.27	c240-node-4

Back Cancel Next

1. Generate a Foundation Central API key by clicking the “+ Generate New Key”. Provide an alias and click Done. From the drop-down menu select the alias and click Submit

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** **Security**

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key [+ Generate New Key](#)

ISM

API key was generated successfully.

Back Cancel Submit

1. The node preparation process begins

Foundation Central

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

Node Preparation for Cluster "ISM" Deployment in progress Start Date and Time: 5/9/2025, 05:50 PM

Phase 1A: Node Preparation 6% 1 node in progress Phase 1B: Node Imaging 0% Not started

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/nutanix_installer_package-release-ganges-70.0.5-stable-1280ec31fa97a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V-70.0.5/AH-V-DVD-x86_64-10.0.01-11.iso
Host CVM VLAN ID 10	Deployment UUID dfc88d67-f927-48e3-7614-735621dc97e2	LACP No	

1 Node In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891L1	WZP283891L1	A	2%	[NodeConfiguration] Performing node specific configuration in Intersight	198.18.135.23	198.18.135.27	AH-V	c240-node-4

Show Less

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment [Show Only Non-archived](#)

Node Preparation for Cluster "ISM" Deployment complete Start Date and Time: 5/9/2025, 05:50 PM [Go to Cluster Page](#) [Archive](#)

Phase 1A: Node Preparation 100% 1 node prepared Phase 1B: Node Imaging 100% 1 node finished

Cluster Details

Redundancy Factor 2	Host CVM Subnet 198.18.128.1 / 255.255.192.0	CVM NTP Servers 198.18.128.1	AOS Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b518d7e72ae-x86_64.tar.gz
Cluster External IP 198.18.135.2	Intersight Organization Intersight-Nutanix	CVM DNS Servers 198.18.133.1	Hypervisor Installer URL https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AHV-7.0.0.5/AHV-DVD-x86_64-10.0.0.1-11.iso
Host CVM VLAN ID 10	Deployment UUID d1c88d67-f927-48e3-76f4-73562fcd97e2	LACP No	

1 Node In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891L1	WZP283891L1	A	Done	All operations completed successfully	198.18.135.23	198.18.135.27	AHV	c240-node-4

[Show Less](#)

1. Once the node preparation is completed, click at the top drop-down menu and select infrastructure

Infrastructure

Dashboard

Reset Dashboard Data Density

Intelligent Operations widgets like VM Efficiency, Playbooks, and more are now available in [Operations Dashboard](#) in Intelligent Operations.

Events Last 24 hours

0 Critical 0 Warning 0 Info

Cluster Quick Access

ISM

Cluster Storage

Cluster	Usage	Data Resiliency
ISM	OK	

Cluster Latency Last Hour

Cluster	Latency
ISM	0.52 ms

Cluster Memory Usage Last Hour

Cluster	Usage
ISM	12.84%

Cluster CPU Usage Last Hour

Cluster	Usage
ISM	4.04%

Controller IOPS Last Hour

Cluster	IOPS
ISM	157

Power Usage

This service is supported in Large PC and above only.

1. On the left menu, select Hardware > Clusters

Infrastructure

Clusters List

1 Total Clusters

[Create Cluster](#) [Actions](#)

View by Group by Modify Filters

1 selected out of 1 Cluster

Name	AOS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	7.0.0.5	Succeeded	AHV	3	4	-	-

1. Check the ISM box and click on actions then select Expand Cluster

1. Check the box of the discovered node and click next

1. On the next page select HCI from the drop-down menu and click next

1. Add a name c240-node-4 and then click next

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ **Configure Host**
☐ Networking
 ☐ Software Check
 ☐ Review

Host name is required for all Hyper-V clusters, but can be skipped for AHV and ESXi clusters.
You can change a Host Name or IP by clicking on its table cell.

1 Selected Hosts

Model/Serial	Host Position	Name	CVM IPv4	CVM IPv6	Hypervisor IPv4	Hypervisor IPv6	IPMI IPv4	IPMI IPv6
Cisco UCS C240-M7SN WZP263899L1	A		198.18.135.27		198.18.135.23		198.18.143.2	

1. On the networking step click on skip Networking

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ **Networking**
☐ Software Check
 ☐ Review

Select the appropriate active and backup uplinks for the hosts.

1 Selected Hosts

Model/Serial	Host Position	Active Uplink	Backup Uplink
Cisco UCS C240-M7SN WZP263899L1	A	Expand row to configure switches.	Expand row to configure switches. v

1. For the software check, let's wait for some time and then click next

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ **Software Check**
☐ Review

AOS and Hypervisor version on new hosts need to be the same as the cluster.
If AOS version is lower than that of the cluster's then a reimage is not required and an upgrade will happen instead.

1 Selected Hosts

Model/Serial	Host Position	Host Type	Hypervisor	AOS Version	Compatibility
Cisco UCS C240-M7SN WZP263899L1	A	HCI	AHV	7.0.0.5	✓ Compatible

1. Under review step, click Run Prechecks, wait until it completes

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

Prechecks

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

60 %

1. Once the precheck is completed, click on Expand Cluster

Expand Cluster- ISM

☒ Select Host
 ☒ Choose Host Type
 ☒ Configure Host
 ☒ Networking
 ☒ Software Check
 ☒ Review

Prechecks

Prechecks examine the health of your current cluster and target hosts. This might take a few minutes.

✓ Prechecks passed. Continue to expand the cluster.

100 %

Infrastructure

Clusters • List

1 Total Clusters

Create Cluster Actions

☆ Type text to filter by

1 selected out of 1 Cluster

Export 1-1 of 1 20 rows

Name	ADS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	70.0.5	Succeeded	AI-V	3	4	-	-

Unlock Navigation Bar

1. To review the progress of the cluster expansion, click task at the top right and click view all task

Infrastructure Clusters * List

Dashboard

Compute

Storage

Network & Security

Data Protection

Hardware

Clusters

Hosts

Disks

GPUs

Activity

Operations

Administration

Prism Central Settings

Unlock Navigation Bar

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

Type text to filter by

1 selected out of 1 Cluster

Name	AOS Version	Upgrade Status	Hypervisors
ISM	70.0.5	Succeeded	AHV

Recent Tasks

Expand Cluster: ISM 24%

Expand Cluster: ISM 100%

Hypervisor Image Upload Check: ISM 100%

Fetching cluster networks and uplinks: ISM 100%

Discover Unconfigured Nodes: ISM 100%

Security STIG scan 100%

View All Tasks

1 Total Clusters

Group by

Modify Filters

of 1 20 rows

Inefficient VMs

Infrastructure Tasks

Overview

A new and improved version for Tasks experience is available. To use that, you need to upgrade all the connected clusters to AOS 7.0 or above. You can find more information [here](#).

Type text to filter by

Modify Filters

Viewing all 54 Tasks

Export 1 - 20 of 54 20 per page

Task	Entity Affected	Cluster	Progress	Status	Created On	Duration	Sub-Tasks
Node preparation for expand ...	-	ISM	86%	Running	Apr 14, 2025, 10:5...	1 minute 7 seconds	5
Expand Cluster	ISM	-	86%	Running	Apr 14, 2025, 10:5...	2 minutes 9 seco...	1
Expand Cluster	ISM	-	100%	Succeeded	Apr 14, 2025, 10:5...	1 minute 15 seconds	1
Hypervisor Image Upload Che...	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:5...	24 seconds	1
Fetching cluster networks and...	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:5...	16 seconds	1
Discover Unconfigured Nodes	ISM Details	-	100%	Succeeded	Apr 14, 2025, 10:4...	23 seconds	1
Successfully finished STIG run ...	-	ISM	100%	Succeeded	Apr 13, 2025, 12:2...	Under 1 second	-
Running refresh scan	-	-	100%	Succeeded	Apr 13, 2025, 12:2...	1 minute 53 secon...	4

1. To confirm the new host has been added to the existing cluster, select Clusters on the left side

Infrastructure Clusters * List

Dashboard

Compute

Storage

Network & Security

Data Protection

Hardware

Clusters

Hosts

Disks

GPUs

Activity

Operations

Administration

Prism Central Settings

Unlock Navigation Bar

Clusters Summary List Alerts Events Metrics Profiles

Create Cluster Actions

Type text to filter by

1 Total Clusters

View by

Group by


Modify Filters

Viewing 1 Cluster


Export 1 - 1 of 1 20 rows

Name	AOS Version	Upgrade Status	Hypervisors	Host Count	VM Count	Cluster Runway	Inefficient VMs
ISM	70.0.5	Succeeded	AHV	4	5	-	-


1. Return to Prism Element to review on the cluster main dashboard the Node count

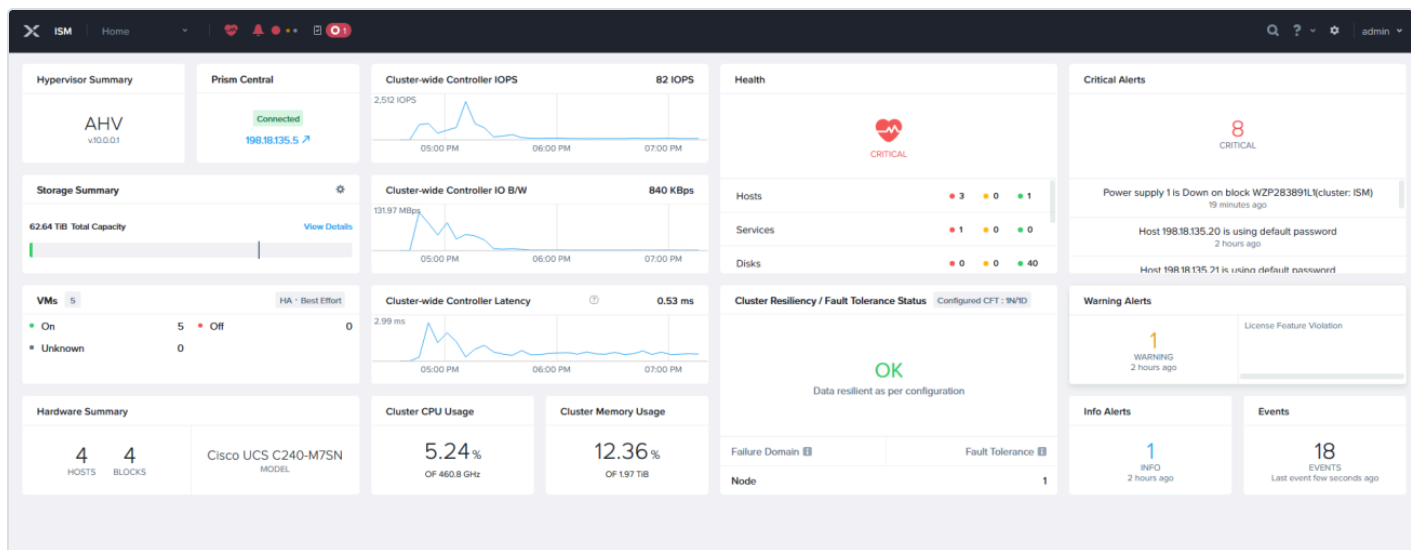


1. Click Home at the top and from the drop-down menu select LCM

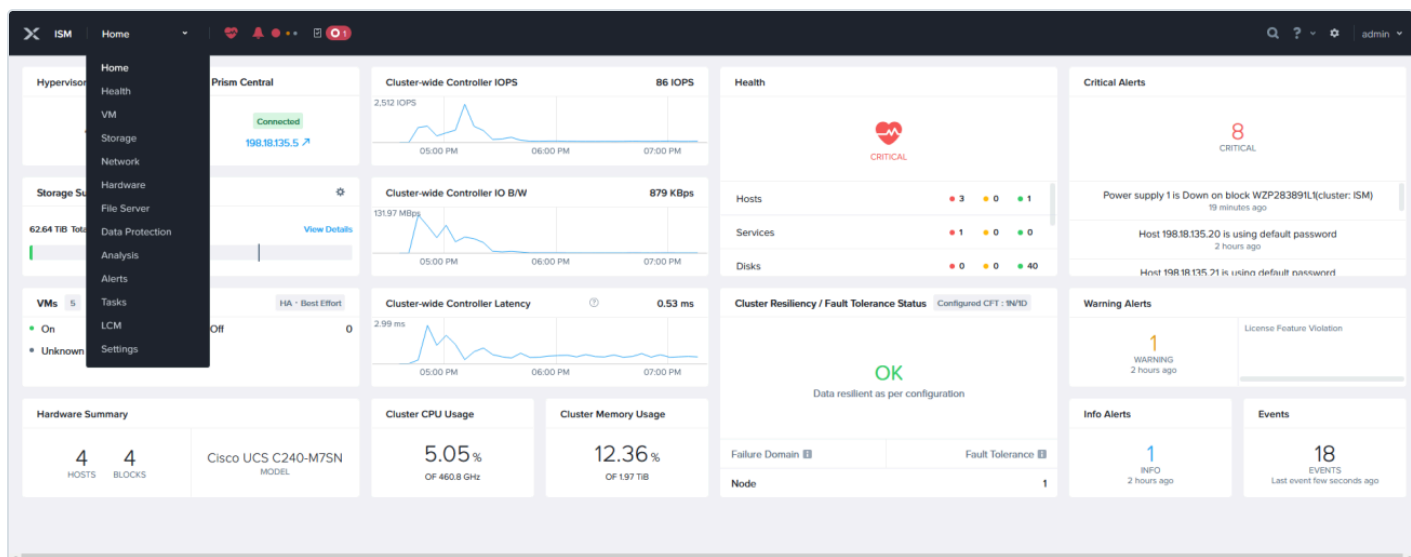


1. Select inventory and click Perform inventory

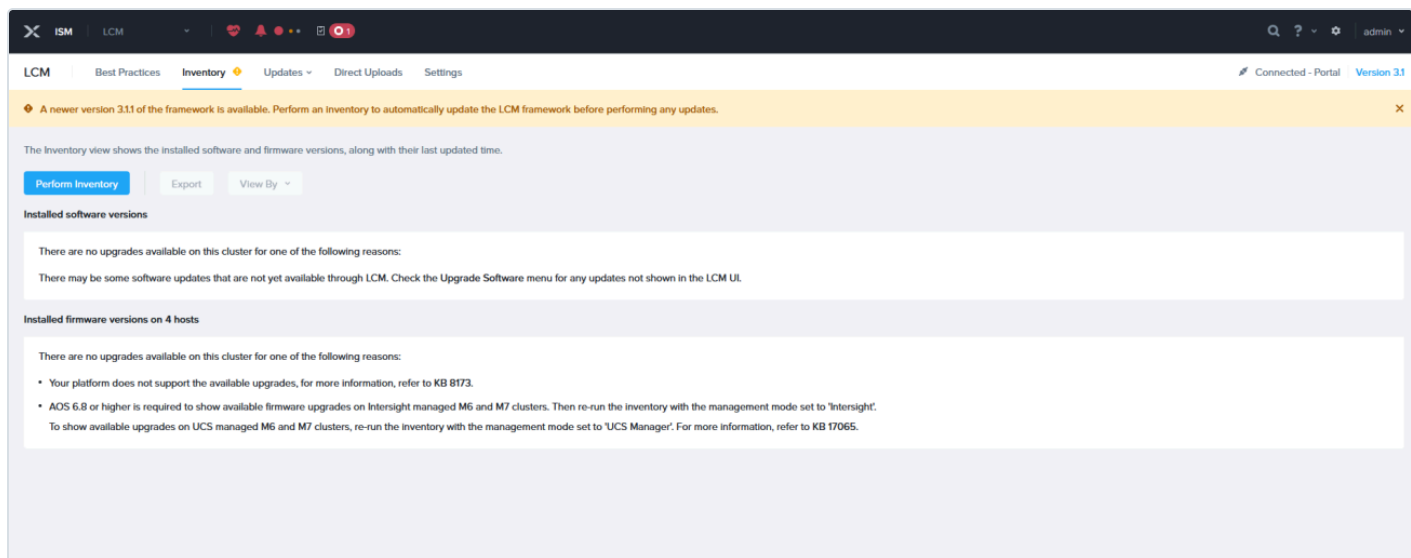


1. Click Proceed

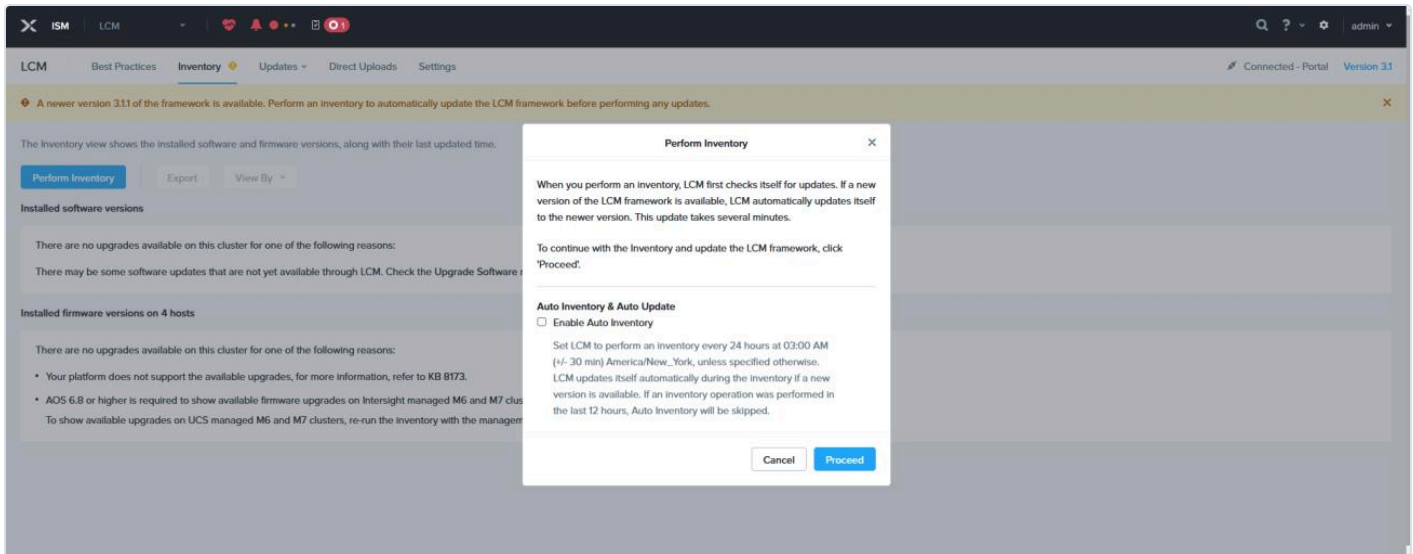

1. From the drop down select standalone Cisco IMC and click continue

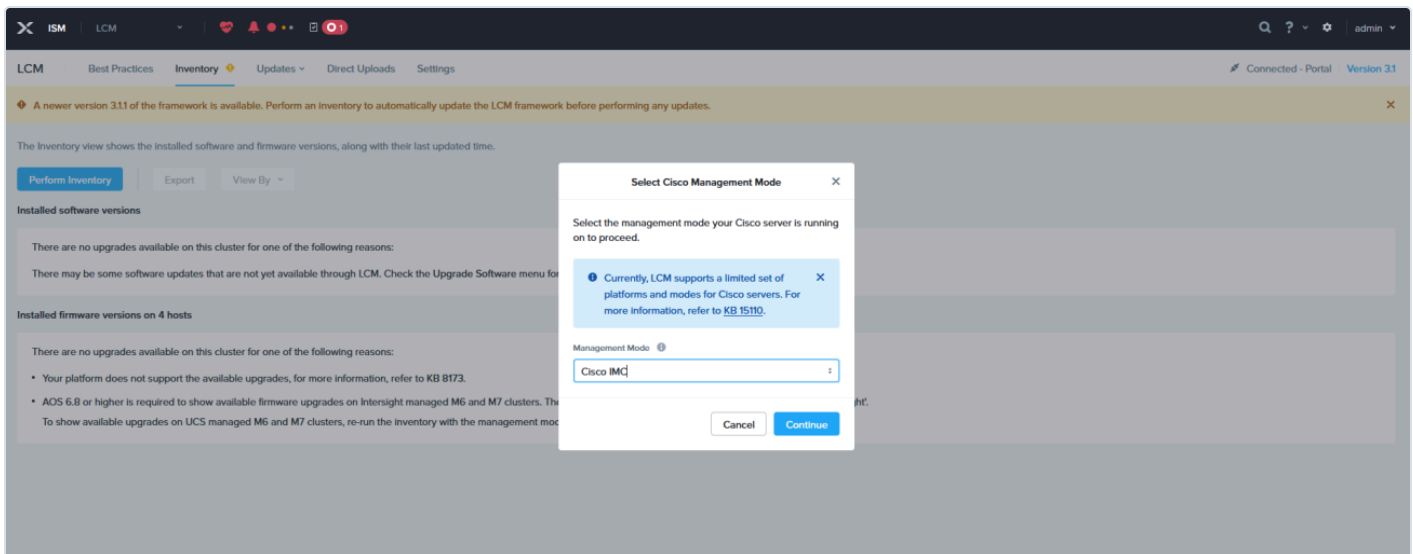

1. Wait until the Inventory completes

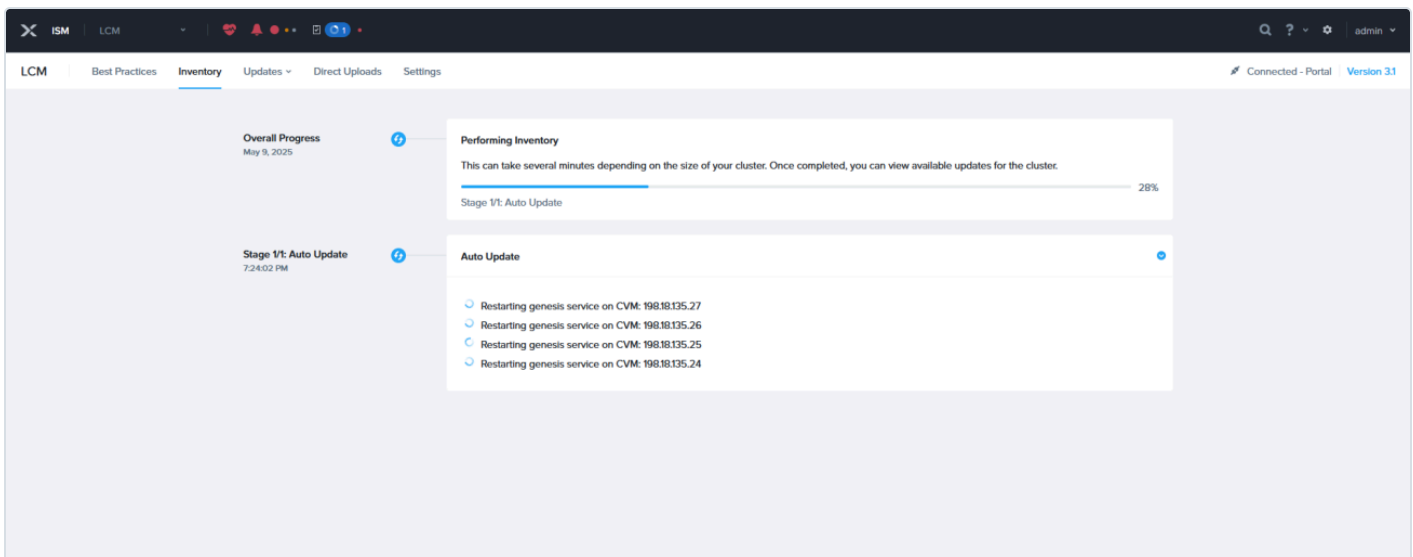

1. Once it's completed return to inventory

Overall Progress
April 14, 2025

Inventory completed
Your inventory was successfully updated. Click the button below to return to your inventory overview.

Stage 3/3: Inventory

[Return to Inventory](#)

Stage 1/3: Auto Update
11:12:35 AM – 11:14:57 AM

Auto Update

Stage 2/3: Precheck
11:15:14 AM – 11:15:27 AM

LCM Framework Check

Stage 3/3: Inventory
11:15:29 AM – 11:16:21 AM

Download

Inventory Task

1. Click updates and select software to review all available updates

Updates

The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu.

[View Upgrade Plan](#) [Pre-Upgrade](#) [Filter](#)


Viewing all 8 Software Updates

Software	Available Version	Current Version	Last Updated	Release Notes
☐ AHV hypervisor	10.01 1 version update	10.0.01 4 entities		View Release Notes
☐ AOS	7.01 Release Date: March 19, 2025 1 version update	70.0.5		View Release Notes
☐ FSM	5.11 3 version updates	5.0.01		
☐ Foundation	5.71 1 version update	5.7		View Release Notes
☐ NCC	5.11 1 version update	5.1.0		View Release Notes


1. This is optional if you would like to apply the updates available or keep the cluster with the current version.

Scenario 6 · Nutanix Prism Central 2022 Installation (Optional)


1. From Cisco IMM Transition, can get the PC.2022.6.0.12.ova to deploy it from zero
2. Login to Cisco IMM Transition and go to the folder Nutanix-Prism-Central and download the PC.2022.6.0.12.ova and the lcm_foundation-central_1.7.1 to the desktop

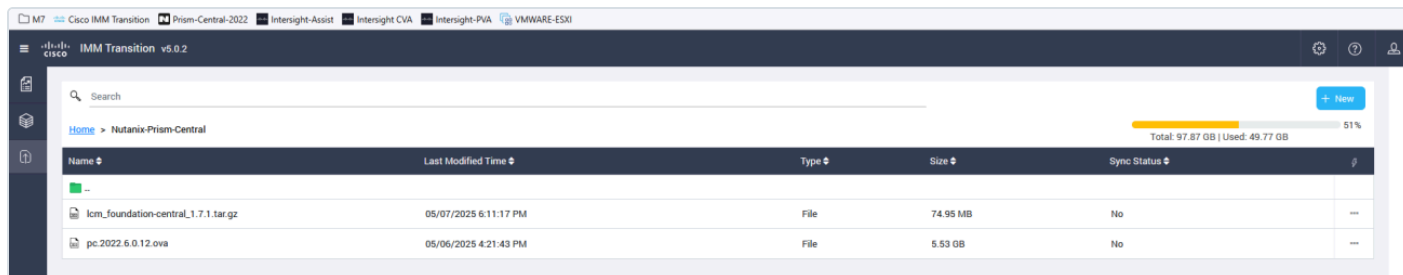

1. Open a new tab and from the bookmark click the VMWARE-ESXI and click Login.


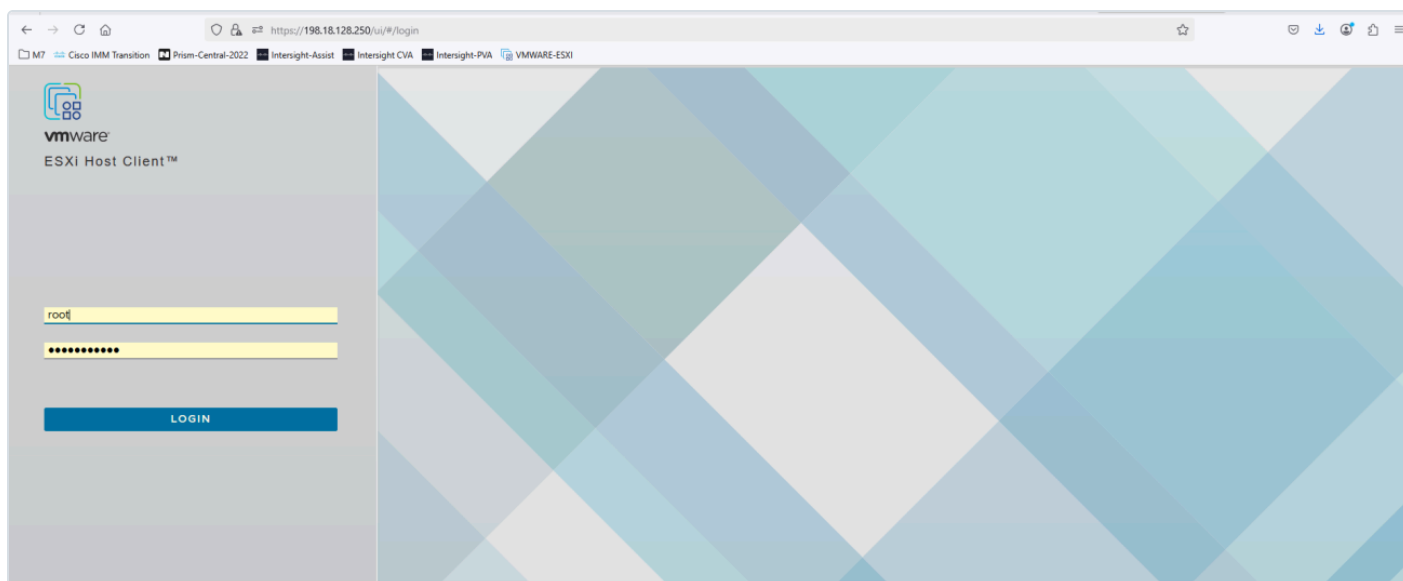


1. On the ESXi virtual Machines option, do right click and select Create/Register VM

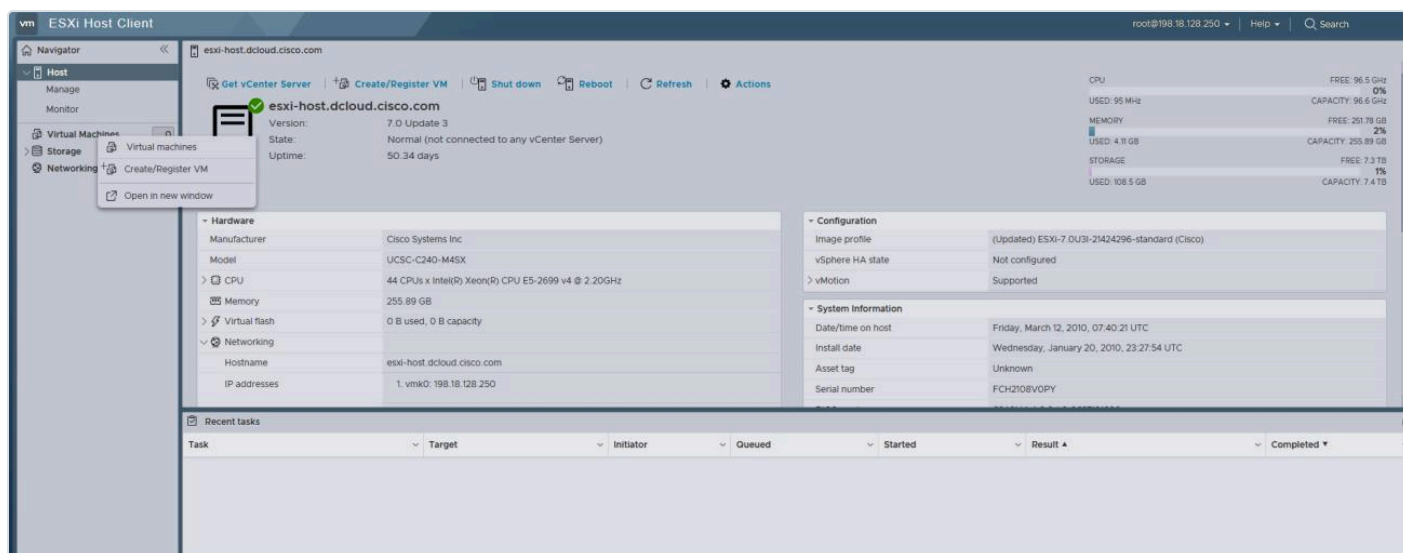


1. Then click Deploy a virtual machine from an OVF or OVA file and click Next


- Click to select the file and go to Downloads folder to find the pc.2022.6.0.12.ova, select and click open, then add a name to the new virtual machine and click Next

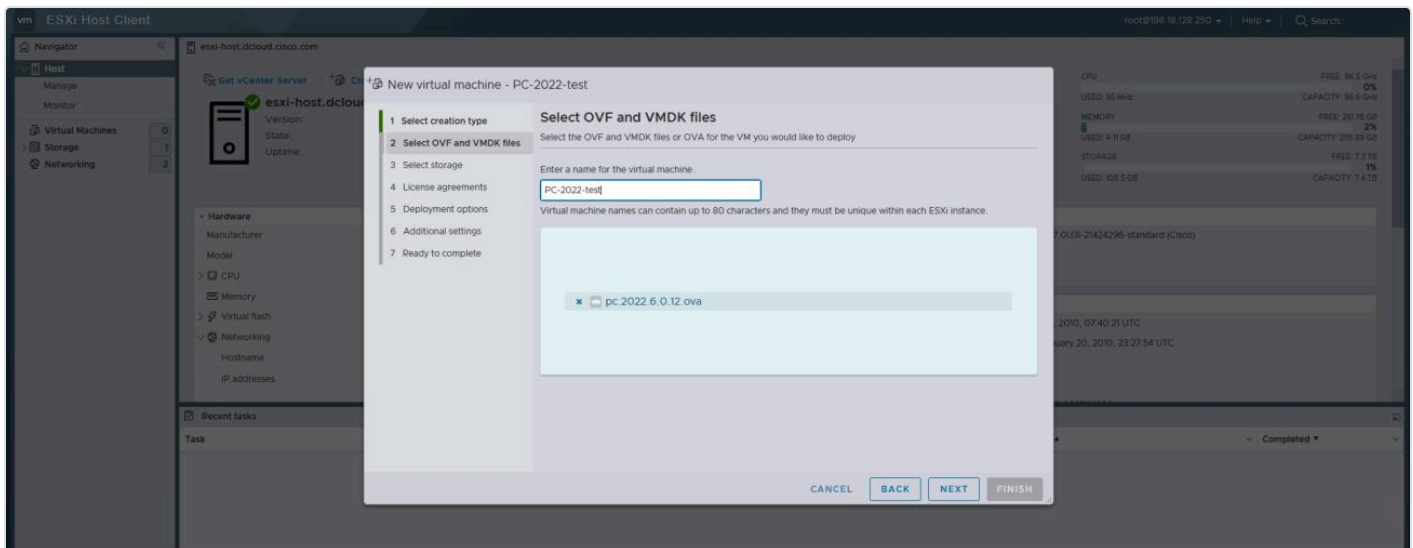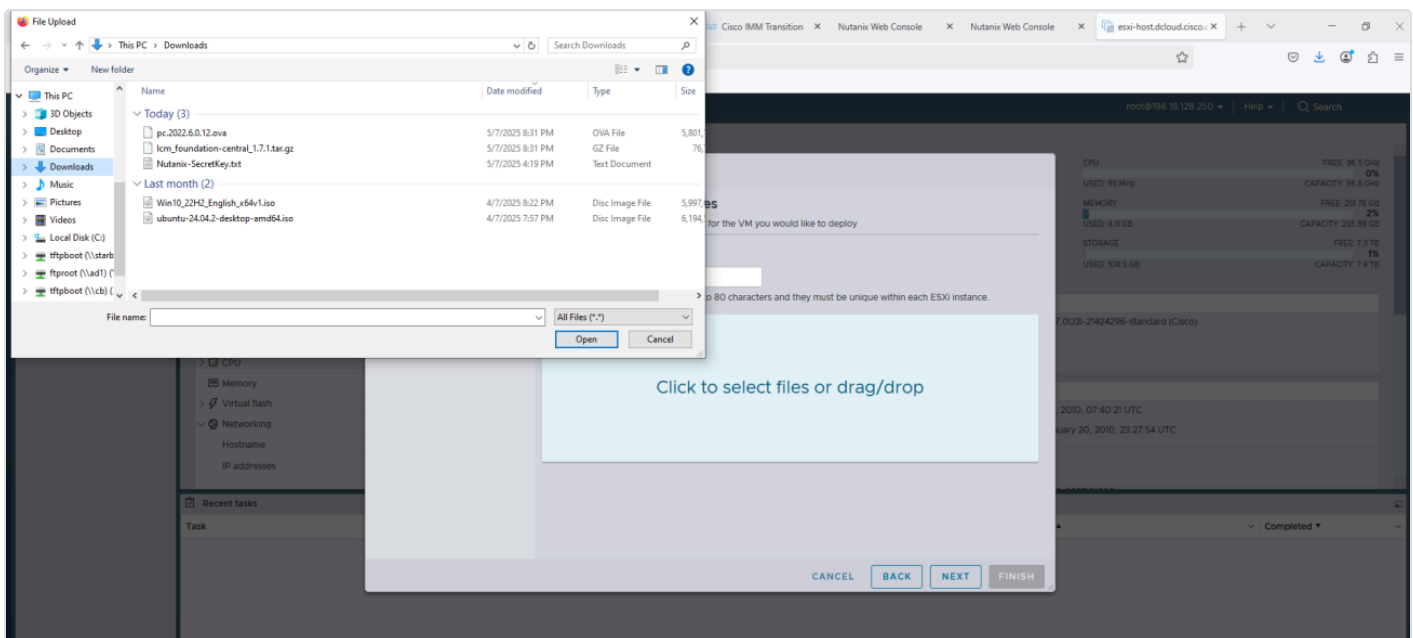


- Select storage just click Next
- On the Deployment options for VM Network from the drop-down menu select vmNetwork2 and click Next

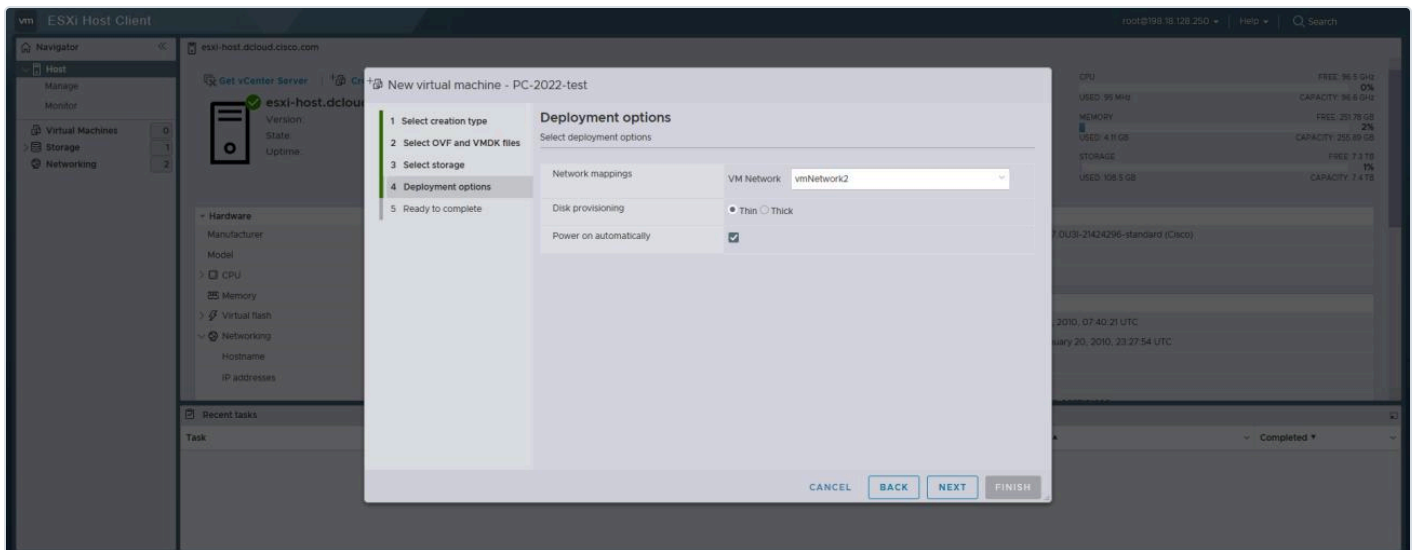


1. Then click Finish

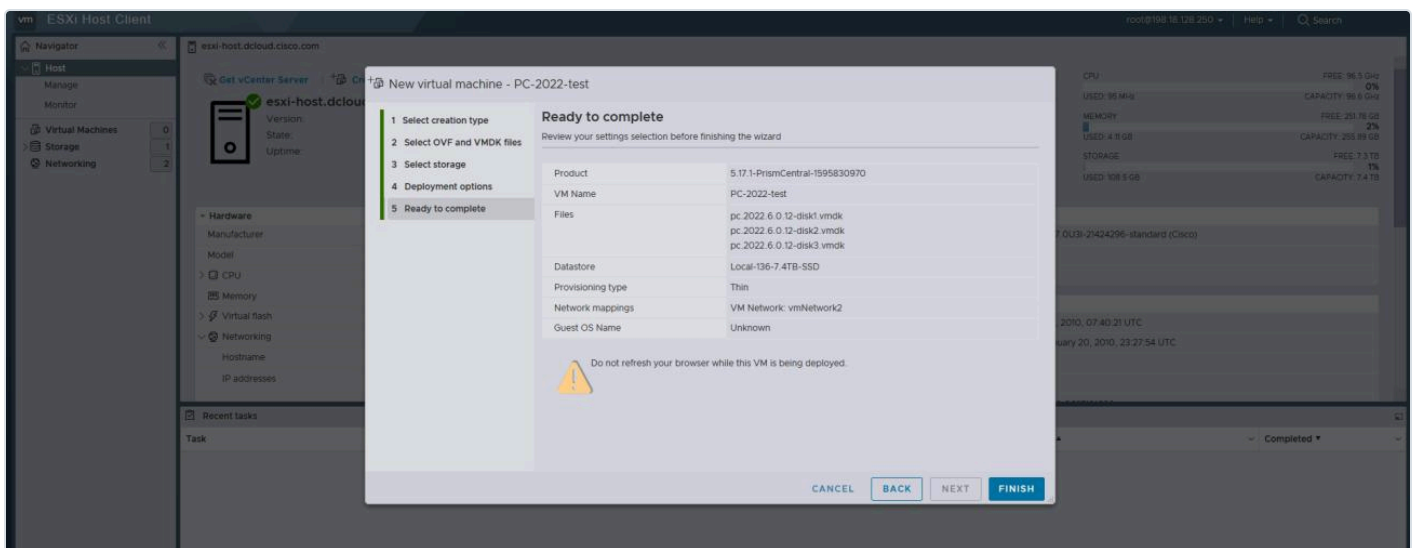


1. Power on the VM then open the local vSphere console. Let the VM run through its initial configuration steps for roughly 15 minutes, the VM will reboot multiple times.

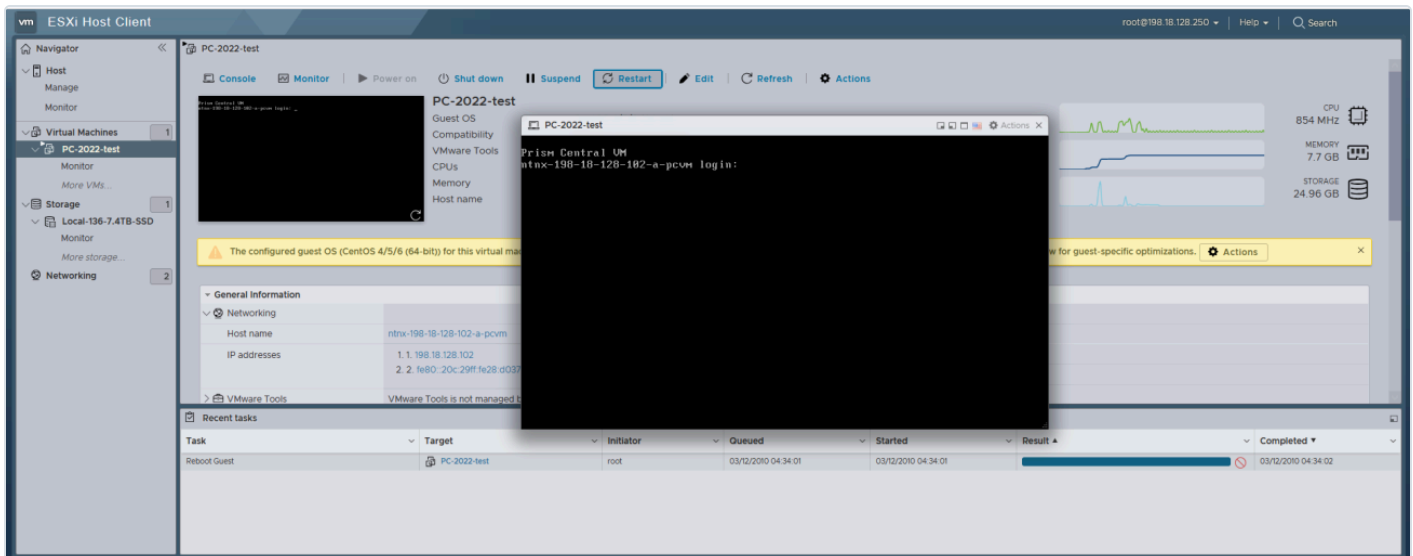


1. Log on as user: nutanix password: nutanix/4u
2. Edit the network interface with a static IP address: `$ sudo vi /etc/sysconfig/network-scripts/ifcfg-eth0` Add or edit the NETMASK, IPADDR and GATEWAY lines, change BOOTPROTO to none, then save the changes= :wq! NETMASK=255.255.192.0 IPADDR=198.18.128.160 BOOTPROTO=none GATEWAY=198.18.128.1

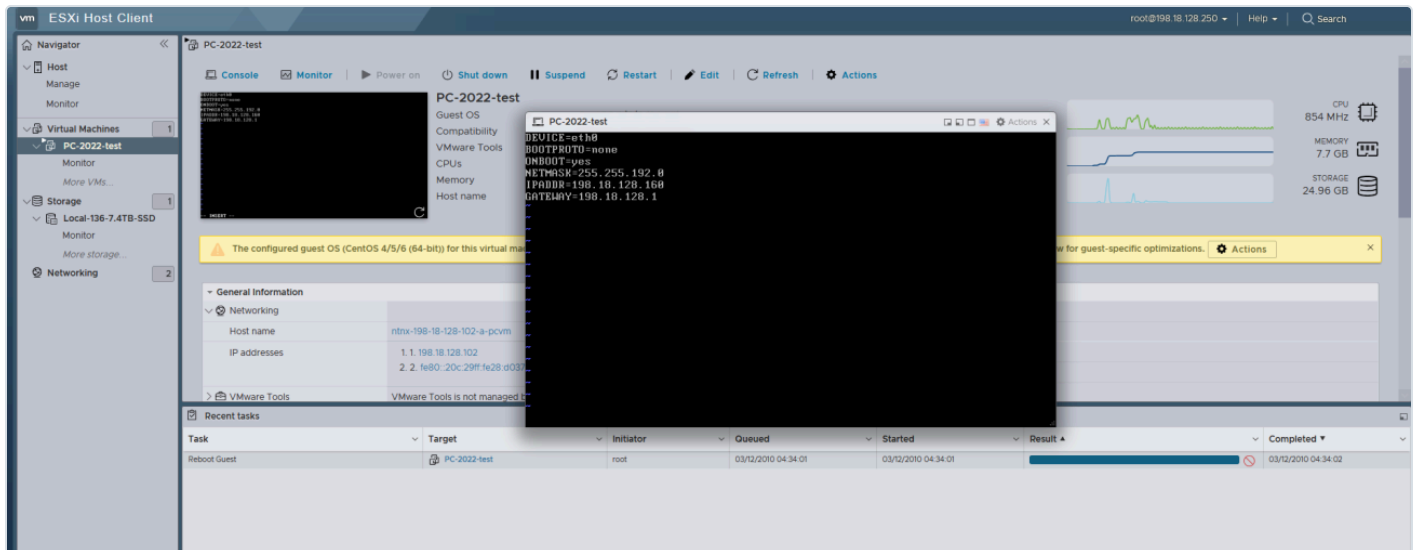


1. Edit the /etc/hosts file to remove all lines containing any entry like "127.0.0.1 NTN-10- 3-190-99-ACVM" then save the changes and reboot:
`$ sudo vi /etc/hosts $ sudo reboot`

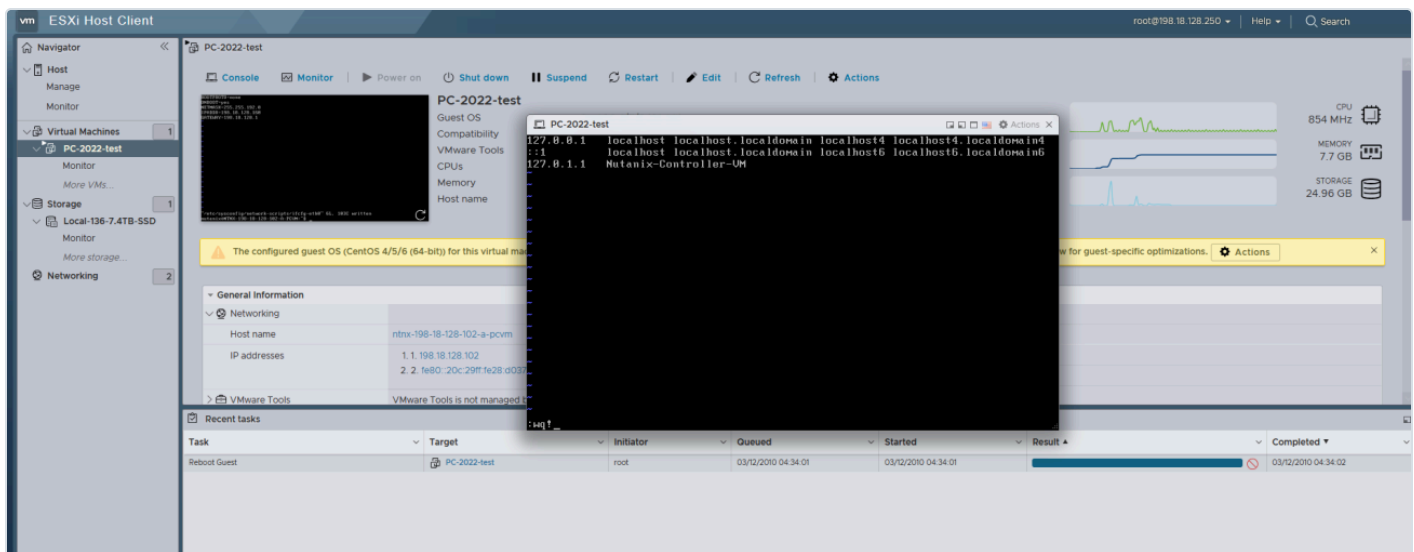


1. Log in to the Prism Central VM via SSH as user: nutanix password: nutanix/4u

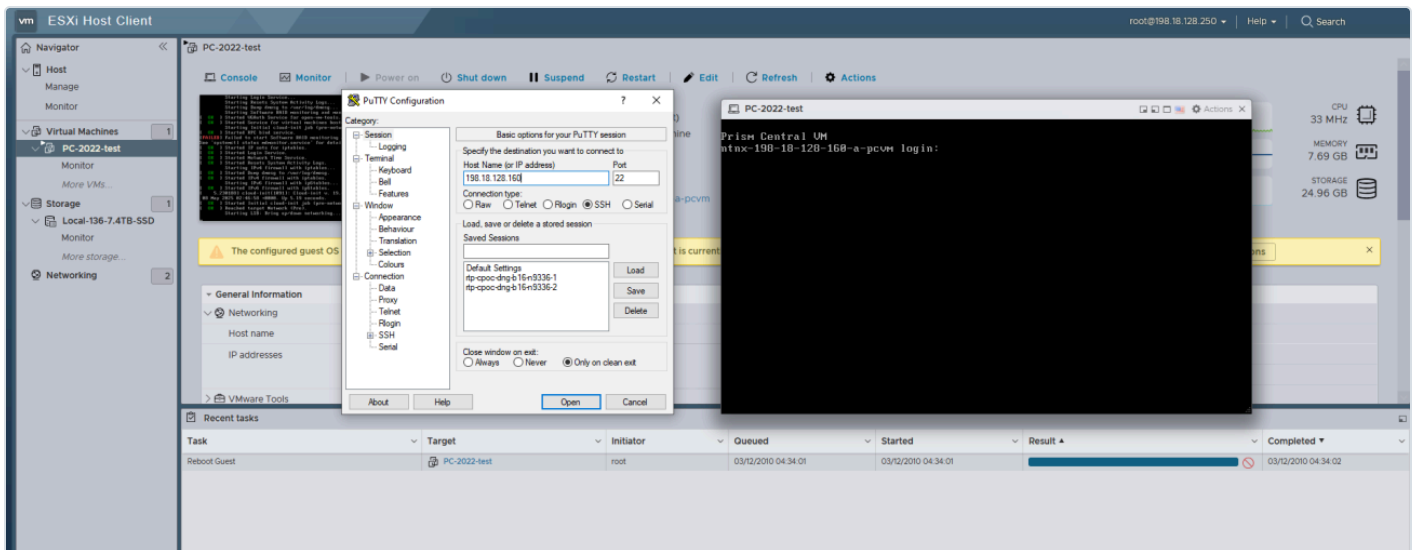


1. Run the command to create the Prism Central cluster: `$ cluster --cluster_function_list "multiclust" -s 198.18.128.160 -dns_servers "198.18.133.1" --ntp_servers "198.18.128.1" create`

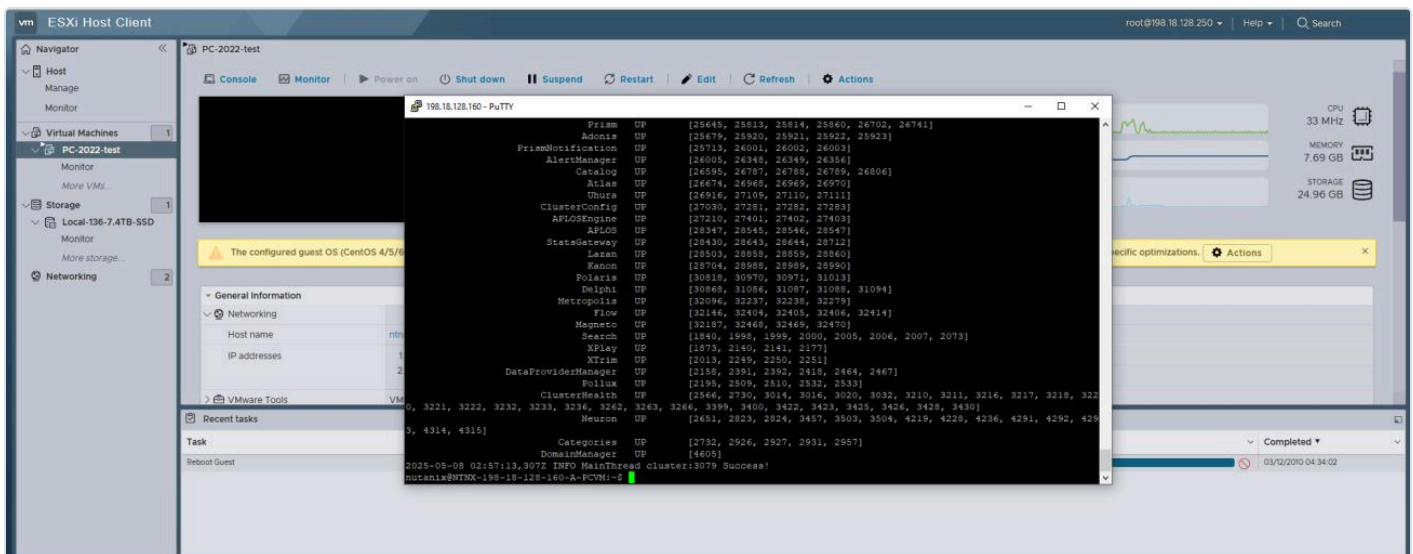


1. Log in to the Prism Central VM GUI with a web browser at <https://198.18.128.160:9440> as user: admin password: nutanix/4u
2. Add a new password C1sco12345! and then log in with the new password
3. After the password has been successfully changed, login with user admin and password C1sco12345!

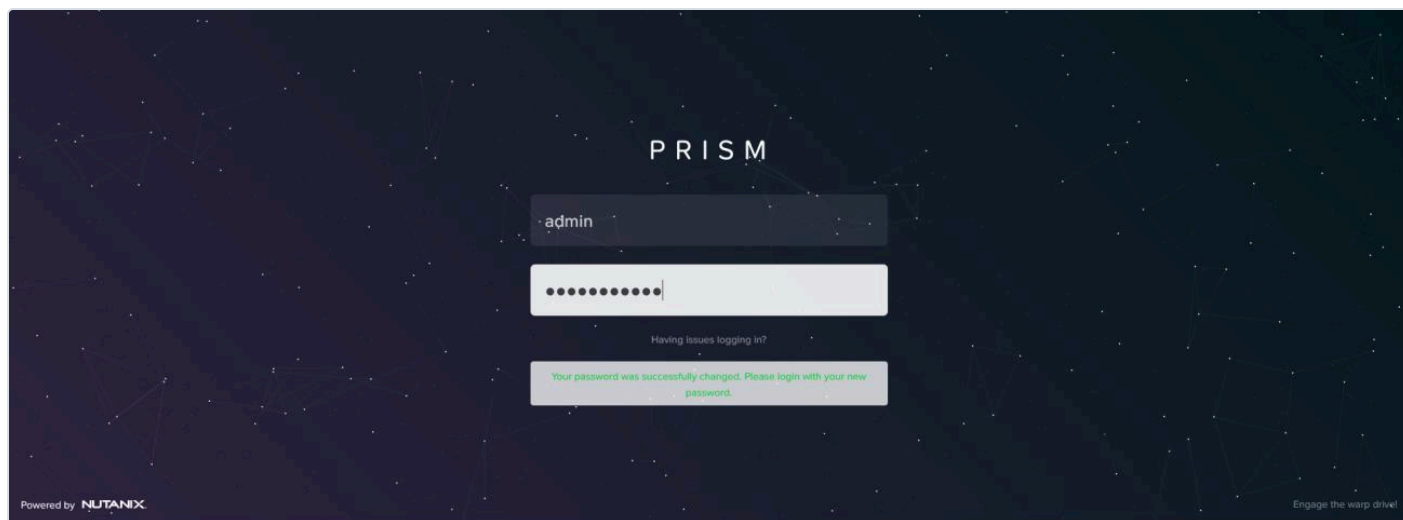


1. Complete the Nutanix EULA,
2. Name = Cpoc
3. Company = Cisco
4. Job title = PC-2022
5. Check the box and click accept and continue

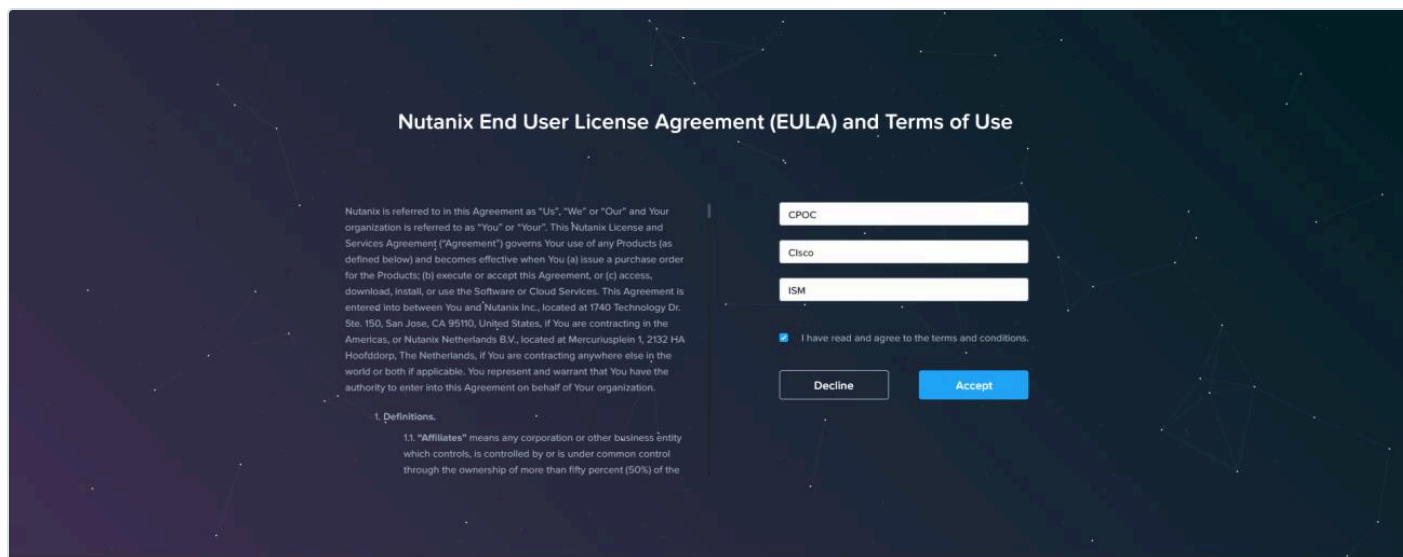


1. Keep the Pulse option by default, click Continue

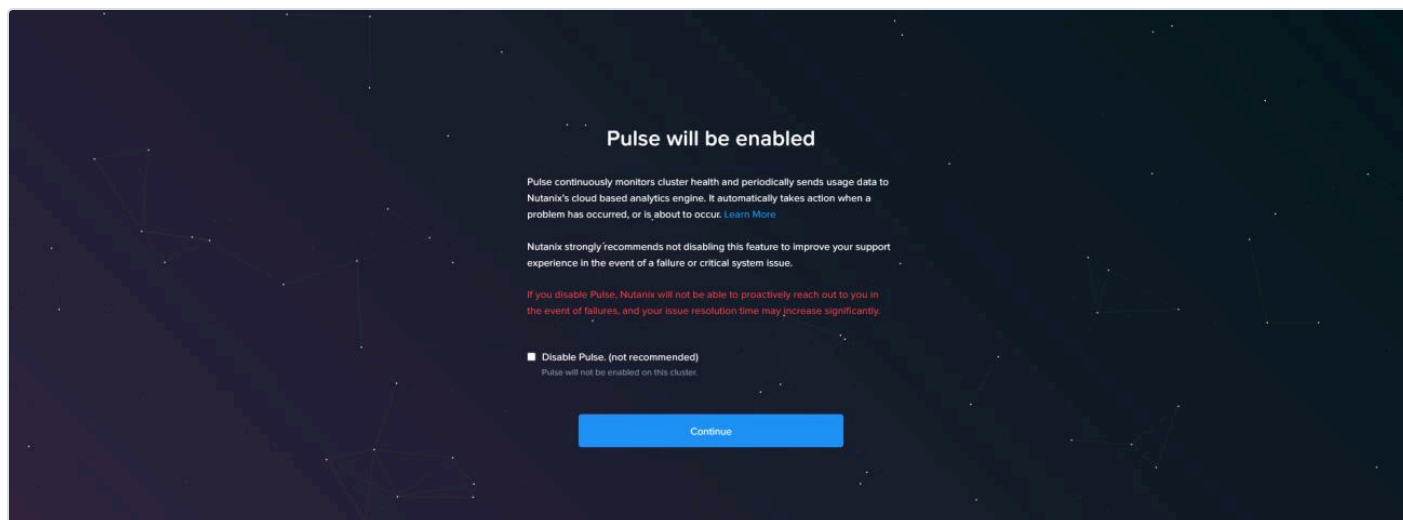

1. You should be taken to the main dashboard

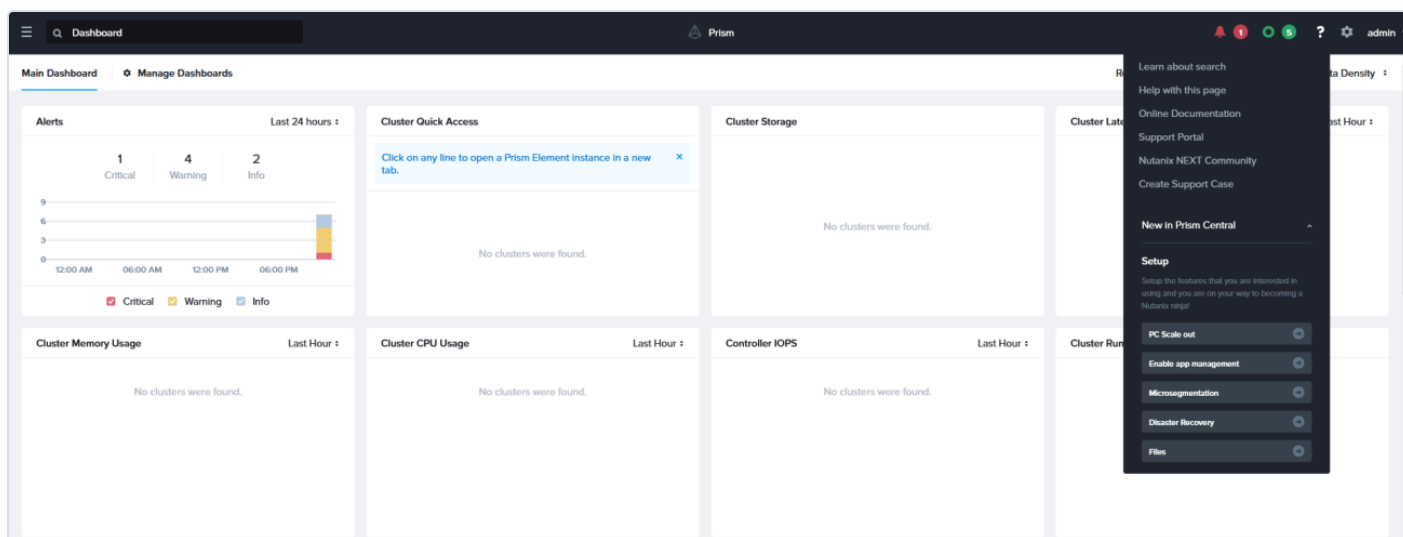


1. Click the ellipsis at the top left and select Prism Central Settings then Prism Central Management and click on Edit of the Prism Central Summary

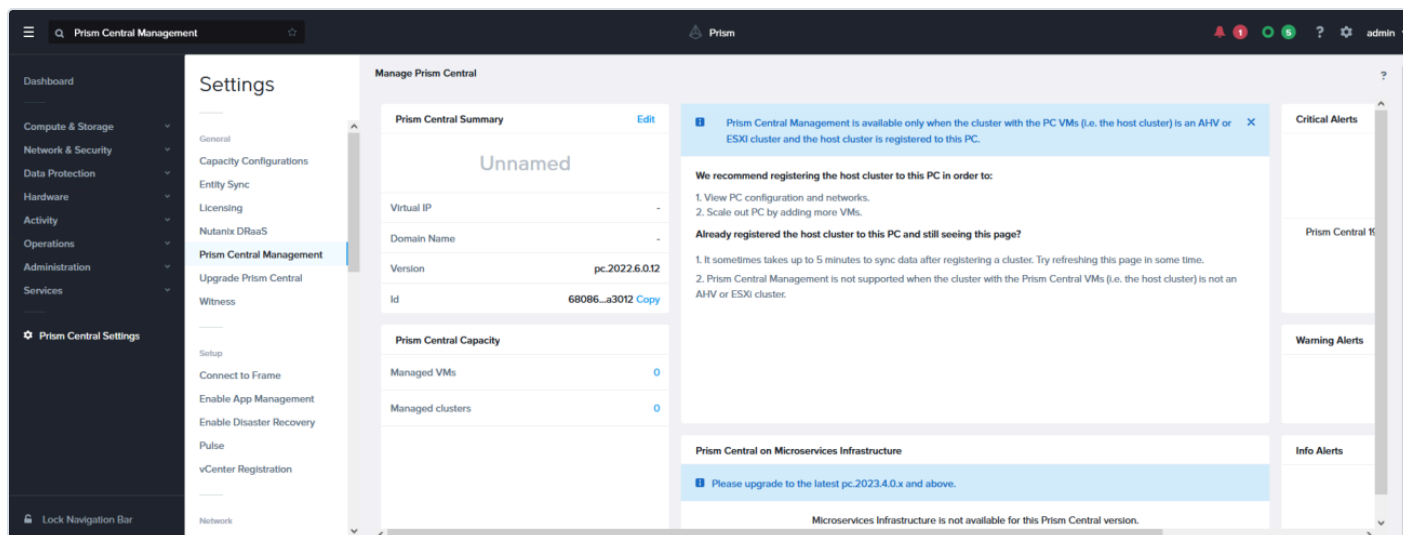


1. Add the FQDN and the virtual IP


2. FQDN = prism2022.dcloud.cisco.com
3. Virtual IP = 198.18.128.161
4. Click Update

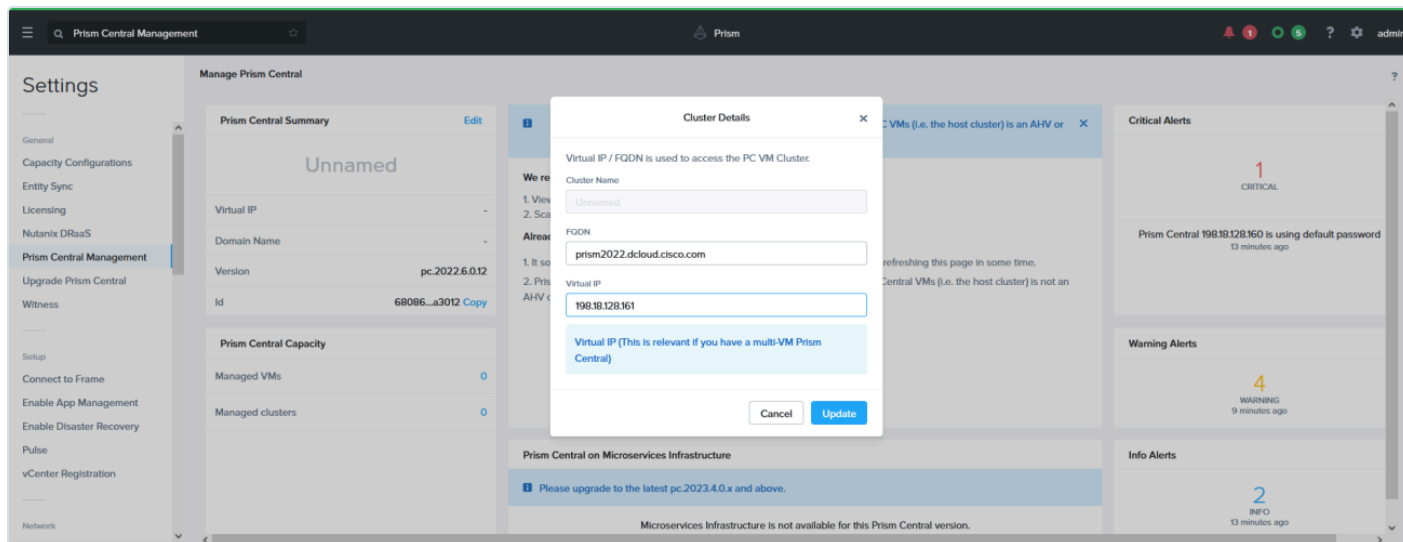


1. Confirm the Name servers and NTP Servers are set

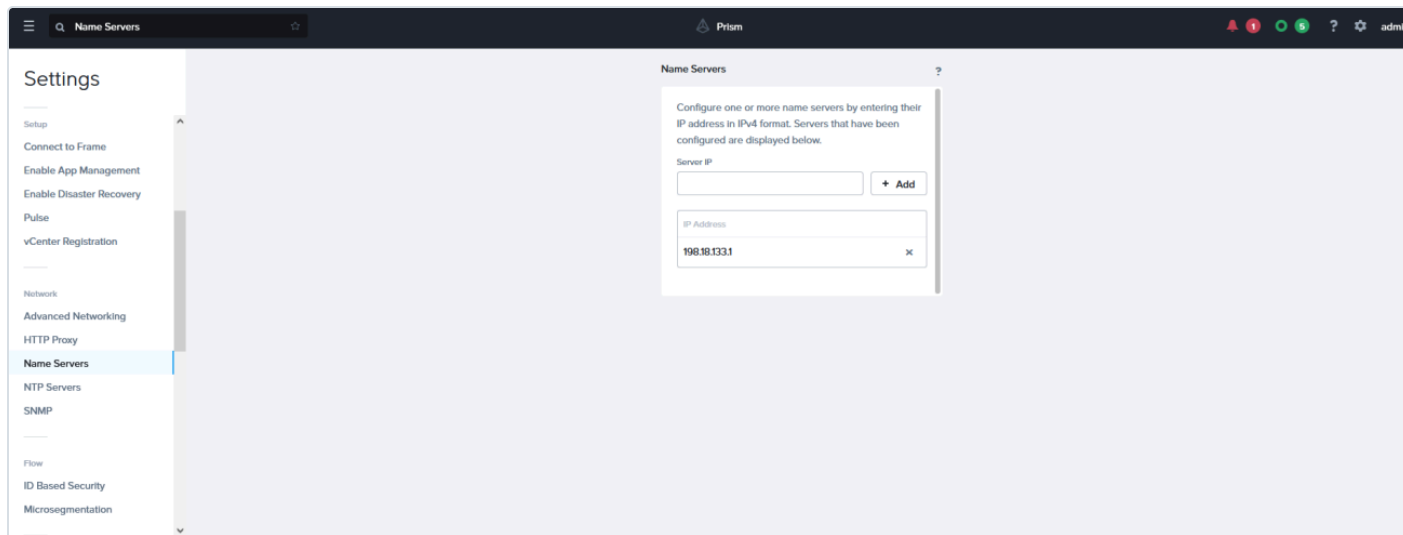


1. The Foundation Central requires an upgrade so in this case from the start menu of Windows look for WinSCP

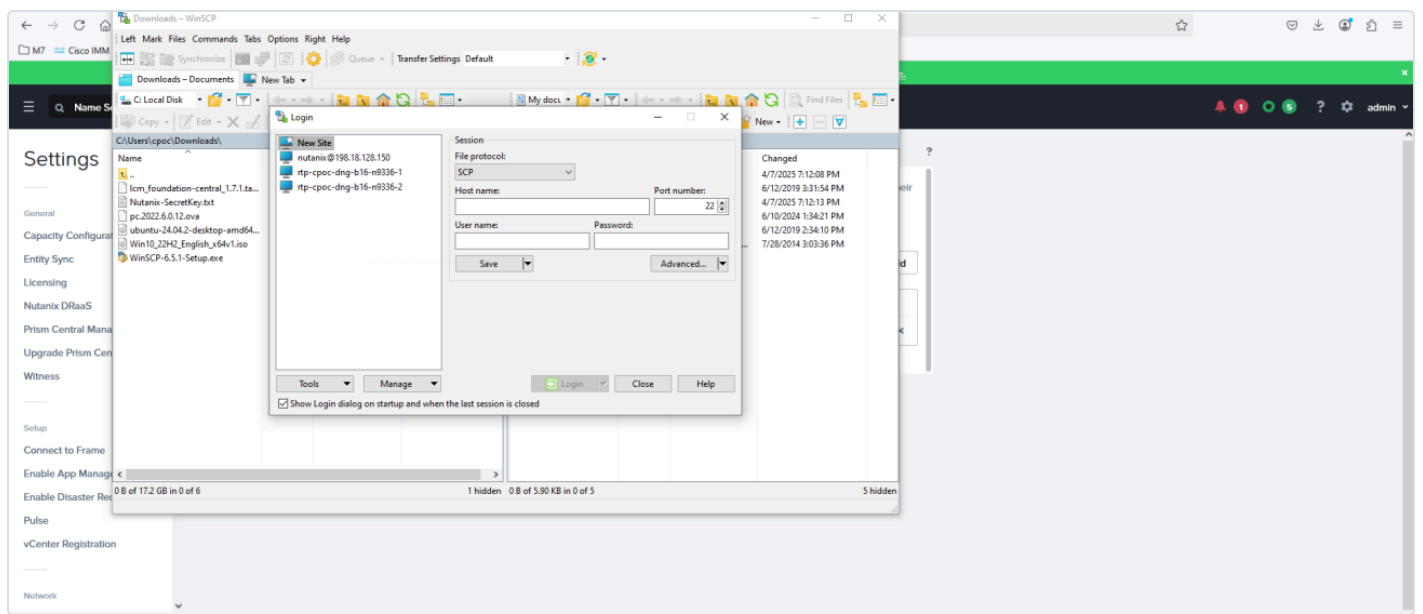


1. Click on New Site
2. File Protocol = SCP
3. Host name = 198.18.128.150
4. User name = nutanix
5. Password = Nutanix/4u
6. Click login and then accept

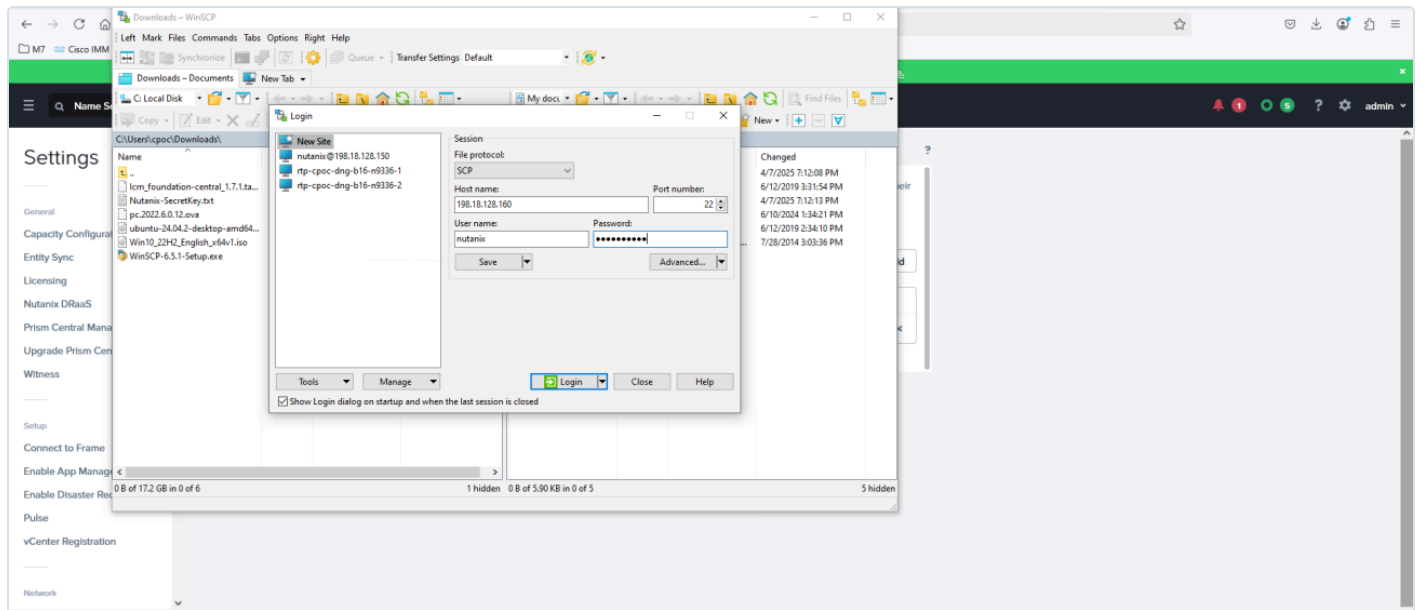


1. Drag and drop the lcm_foundation-central_1.7.1.tar.gz file from the Downloads folder to the /home/Nutanix/

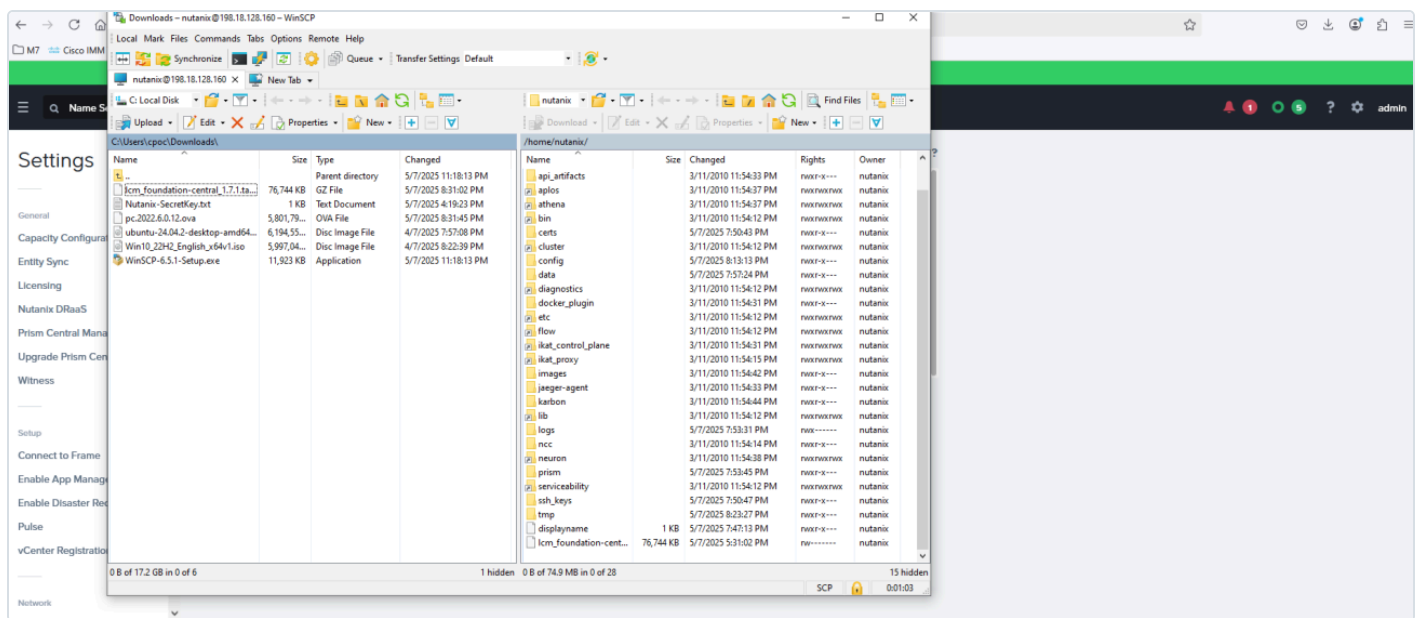


1. Then return to the Putty session and run the following commands
`$ mkdir /home/nutanix/fc_installer $ tar -xzf /home/nutanix/lcm_foundation-central_1.7.1.tar.gz -C /home/nutanix/fc_installer/ $ genesis stop foundation_central $ sudo rm -rf /home/docker/foundation_central/ $ sudo tar -xJf /home/nutanix/fc_installer/builds/foundation-central-builds/1.7.1/foundation-central-installer.tar.xz -C /home/docker/foundation_central/ $ sudo chown -R nutanix:nutanix /home/docker/foundation_central/ $ cluster start`

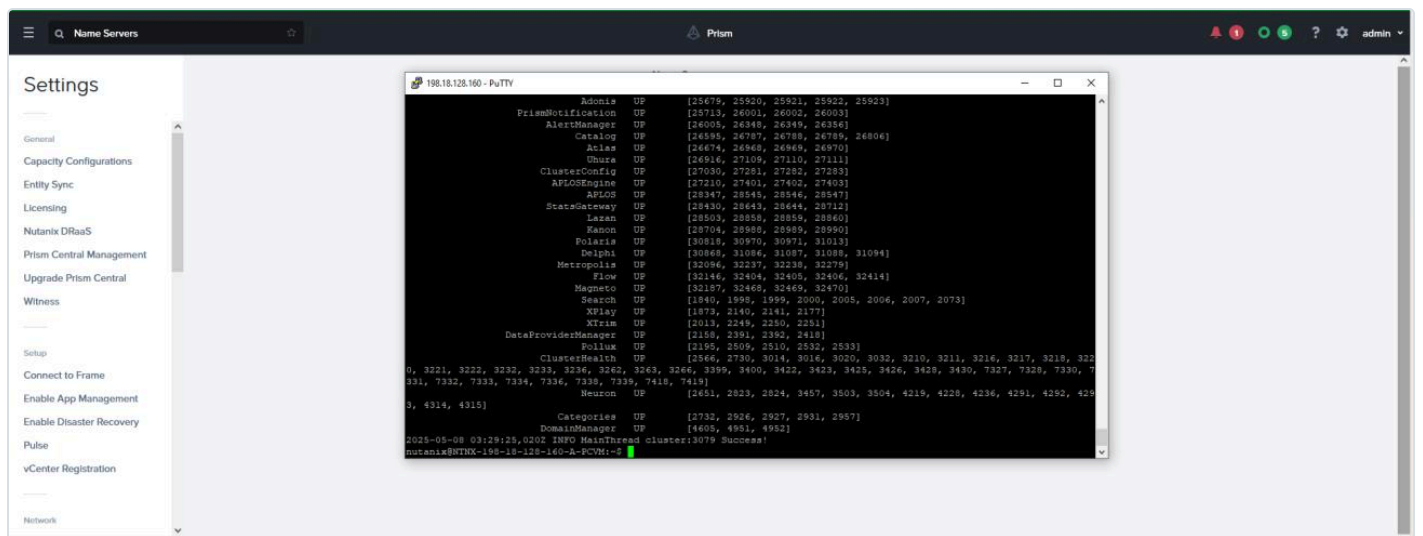

1. Return to Prism Central click the Ellipsis and select Services > Foundation Central and Click Enable Foundation Central

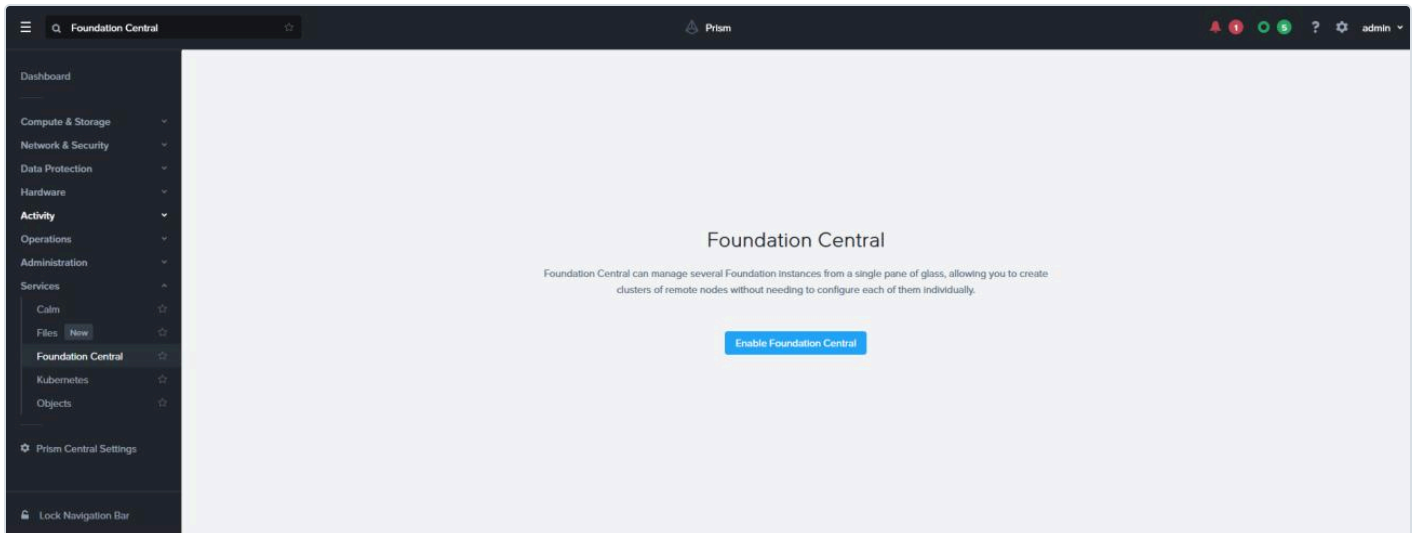

1. Then Foundation Central 1.7.1 will become available

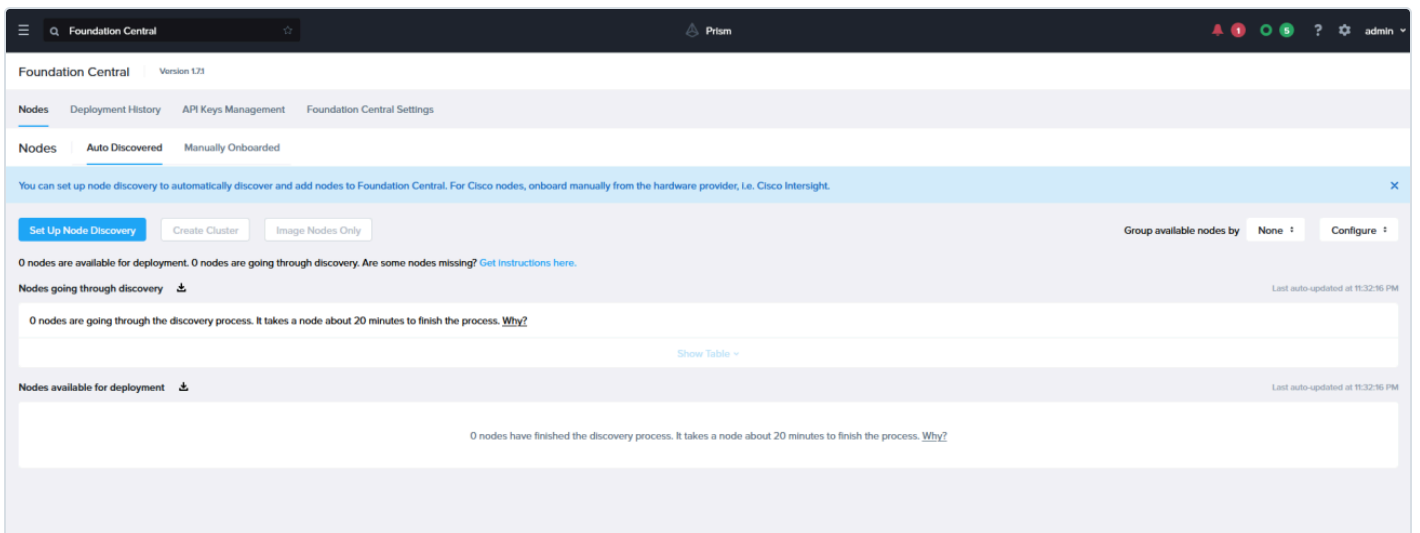

1. From here you can return to Scenario 2 and continue with the steps using your new Prism Central.

What's Next

Reference	Description