




Cisco Intersight Standalone Mode- Nutanix AHV or ESX

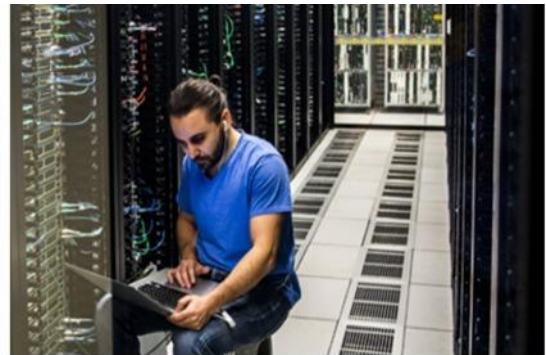

12 – March- 2026
Esteban Arguedas
eargueda@cisco.com

Disclaimer

Test results are suitable to the specific design, configuration, test procedure, and types of switches deployed in the environment described in this document.

This document is provided “As-Is,” without warranty of any kind, express or implied, including without limitation those of merchantability, fitness for a particular purpose, and non-infringement arising from a course of dealing usage or trade practice.

All printed copies and duplicate soft copies are not considered controlled; therefore, please refer to the original online version for the latest version.

Document History

Revision Date	Author	Description	Version
DD.MM.YYYY	AuthorLastName		
12 March 2026	Arguedas	Intersight – Nutanix ISM use cases	1.0



Americas Headquarters
Cisco Systems, Inc.
San Jose, CA

Asia Pacific Headquarters
Cisco Systems (USA) Pte. Ltd.
Singapore

Europe Headquarters
Cisco Systems International BV Amsterdam,
The Netherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Contents

<i>Disclaimer.....</i>	<i>1</i>
<i>About this CPOC</i>	<i>3</i>
<i>Scope</i>	<i>4</i>
<i>Goals</i>	<i>4</i>
<i>IP Table</i>	<i>5</i>
<i>Equipment – CPOC Lab.....</i>	<i>7</i>
<i>Design and Topology Diagram</i>	<i>7</i>
<i>Get Started.....</i>	<i>9</i>
<i>Scenario 1. Claim Servers in Cisco Intersight.....</i>	<i>10</i>
<i>Scenario 2. Onboard nodes in Foundation Central.....</i>	<i>16</i>
<i>Scenario 3. Nutanix Cluster Deployment with AHV or ESX Hypervisor.....</i>	<i>20</i>
<i>Scenario 4. Nutanix Prism Central deployment and Cluster registration.....</i>	<i>38</i>
<i>Scenario 5. Nutanix Cluster Expansion</i>	<i>47</i>
<i>Scenario 6. Nutanix Prism Central 2022 installation (Optional)</i>	<i>64</i>
<i>What’ s Next.....</i>	<i>76</i>

About this CPOC

Note: All printed copies and duplicate soft copies of this document are considered uncontrolled. Please refer to the original, online document link for the current version.

Cisco Intersight Standalone Mode is an **on-premises deployment** of Cisco's infrastructure management platform that operates **without requiring a connection to the Intersight cloud**. When integrated with **Nutanix hyperconverged infrastructure (HCI)**, it allows organizations to manage and monitor their Nutanix environments securely and locally.

In this mode, Intersight provides:

- **Visibility into Nutanix clusters** (via Prism API)
- **Monitoring of VMs, hosts, and cluster health**
- **Management of Cisco hardware** (e.g., UCS servers running Nutanix)
- **Single pane of glass** for hybrid environments
- **Air-gapped and compliance-friendly** operations

It's ideal for **secure, regulated environments** that require local control, while still benefiting from unified infrastructure management across Cisco and Nutanix systems.

Scope

Goals

After completing these scenarios, you will know how to claim, deploy and configure the Nutanix cluster with Cisco Intersight

IP Table

Host Name	IP Address	Credentials	Model
rtp-cpoc-dng-b16-c240m7-1	198.18.143.1	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-2	198.18.143.2	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-3	198.18.143.3	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m7-4	198.18.143.4	admin/C1sco12345!	HCIAF240C-M7SN
rtp-cpoc-dng-b16-c240m4-1	198.18.143.6	admin/C1sco12345!	UCSC-C240-M4SX
rtp-cpoc-dng-b16-n9336-1	198.18.143.7	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-n9336-2	198.18.143.8	admin/C1sco12345!	N9K-C9336C-FX2
rtp-cpoc-dng-b16-fi6536-1	198.18.143.9	admin/C1sco12345!	HCIX-FI-6536
rtp-cpoc-dng-b16-fi6536-2	198.18.143.10	admin/C1sco12345!	HCIX-FI-6536
cpoc-win10-1	198.18.133.36	cpoc/cpoc123	Windows 10
cpoc-win10-2	198.18.133.37	cpoc/cpoc123	Windows 10
Ad1	198.18.133.1	dcloud/administrator /C1sco12345	Windows server
Vcenter 7	198.18.133.30	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Vcenter 8.0.3	198.18.133.31	administrator@vsphere.local / C1sco12345!	VMWare Vsphere
Cisco IMM	198.18.128.100	admin / C1sco12345	Cisco IMM Transition
Nutanix-pc.2022.6.0.12	198.18.128.150	admin / C1sco12345!	Nutanix-pc.2022.6.0.12
Intersight Assist	198.18.128.254	admin / C1sco12345	Intersight
Intersight pva	198.18.128.253	admin / C1sco12345	Intersight
Intersight cva	198.18.128.252	admin / C1sco12345	Intersight
VMware-ESXI	198.18.128.250	root / C1sco12345!	ESX 7.0

Host Name	IP Address	Credentials	Model
ISM Prism Element	198.18.135.2	admin / C1sco12345	
ISM Prism Element virtual IP	198.18.135.3	admin / C1sco12345	
ISM Nutanix PC-2024	198.18.135.4	admin / C1sco12345	
ISM Nutanix PC-2024 virtual IP	198.18.135.5	admin / C1sco12345	
ISM IP Pool for cluster	198.18.135.10-100		



Equipment – CPOC Lab

Note: Be sure to include the Software Version in this table. Thank you!

Quantity Required	Model	Software Version
4	UCSC-C240-M75N	4.3(5.240021)
2	N9K-C9336C-FX2	nxos10.4

Design and Topology Diagram

Introduction if helpful to user... We' ll replace the below with a generic Topology with no customer-facing data.

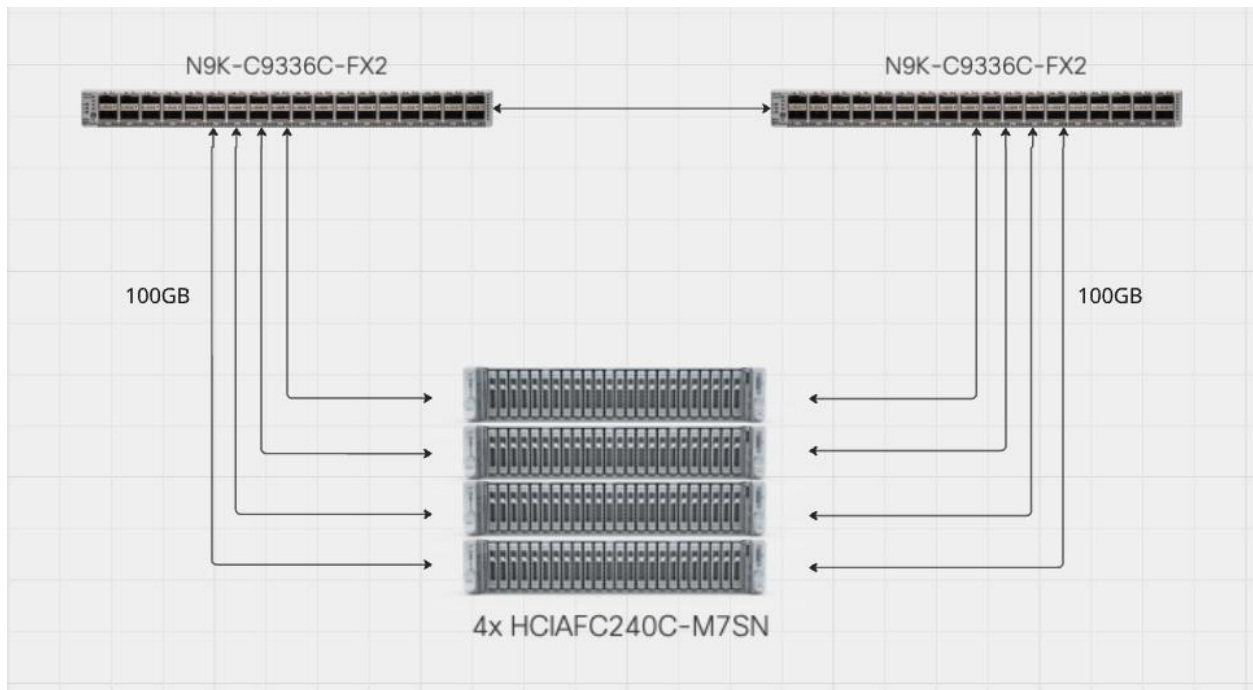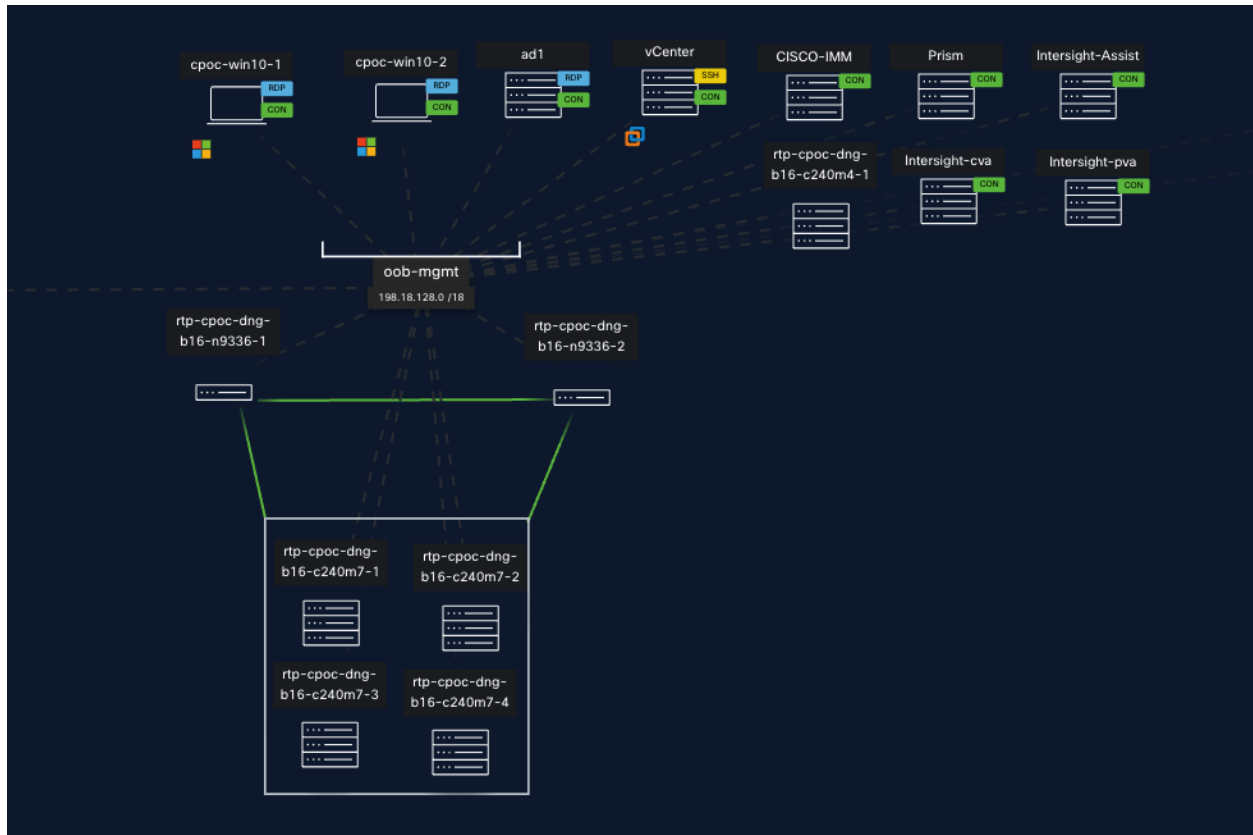


Get Started

1. Initiate your dCloud session. [\[Show Me How\]](#)
2. For best performance, connect to the workstation with **Cisco Secure Client VPN** [\[Show Me How\]](#) and the **local RDP client** on your laptop. [\[Show Me How\]](#)
 - Workstation 1: **198.18.133.36**, Username: **cpoc**, Password: **cpoc123**

Scenario 1. Claim Servers in Cisco Intersight

Cisco Intersight Claim Servers is a process used to register or "claim" physical infrastructure devices (like Cisco UCS servers or Nexus switches) to the Cisco Intersight platform. Intersight is a cloud-based infrastructure management tool that provides centralized monitoring, configuration, and lifecycle management for Cisco data center hardware.

1. Click on cpoc-win10-1 on the main topology, on the left side select remote access and then click on web RDP to log in

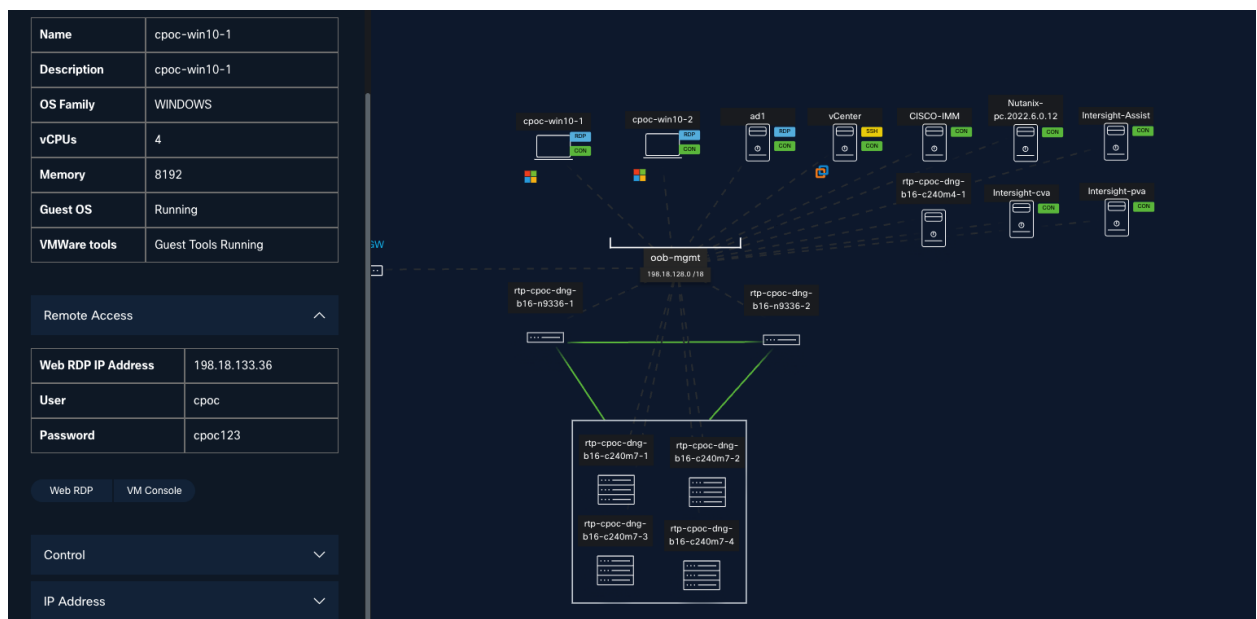


2. Once in the workstation open firefox browser




NOTE: Steps from 3 to 5 have already been performed, so these are just read and view steps.


3. Log in to the CIMC interface with a web browser using the IP address you set. Retrieve the Device ID and the Claim Code from the CIMC web UI, under Admin > Device Connector

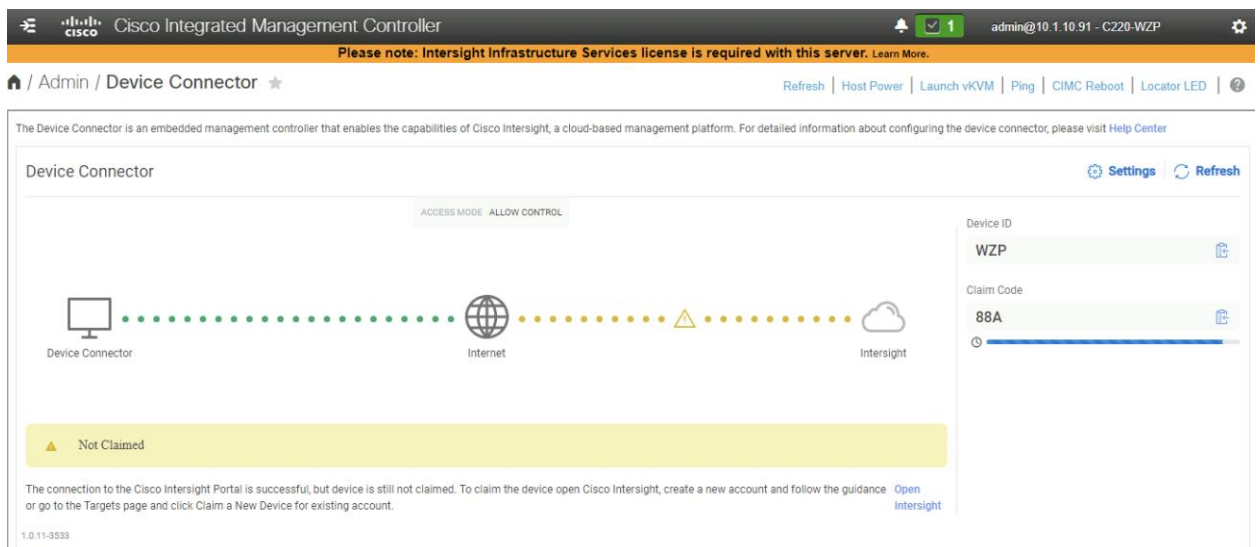

4. In Cisco Intersight, go to the System area, click on Targets, then Claim a New Target

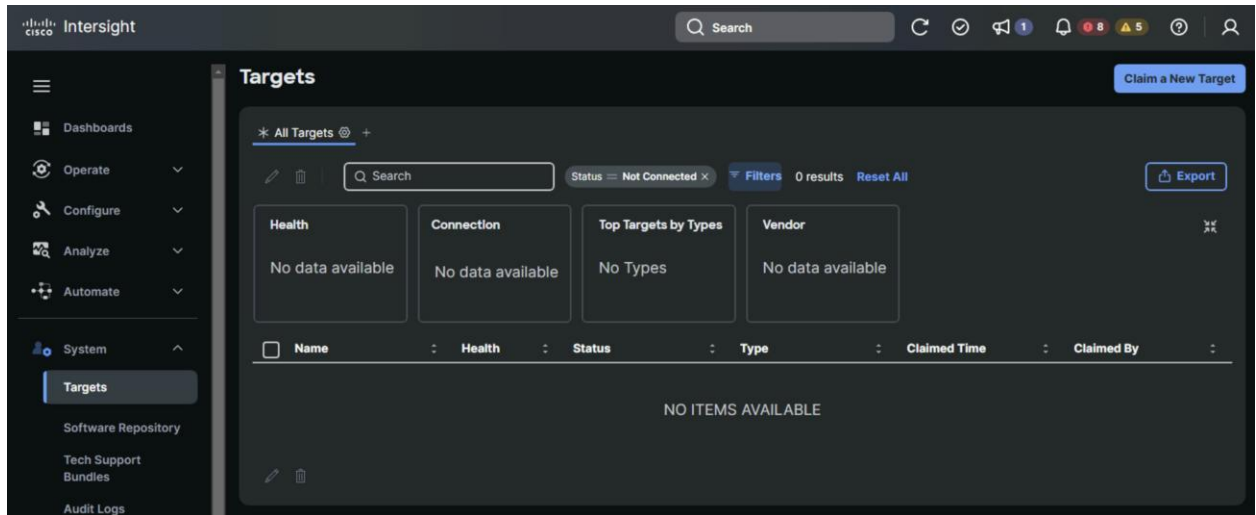

5. Select Cisco UCS Server (Standalone), then enter the Device ID and Claim Code, then click Claim. Repeat for all the servers to be used in your new cluster

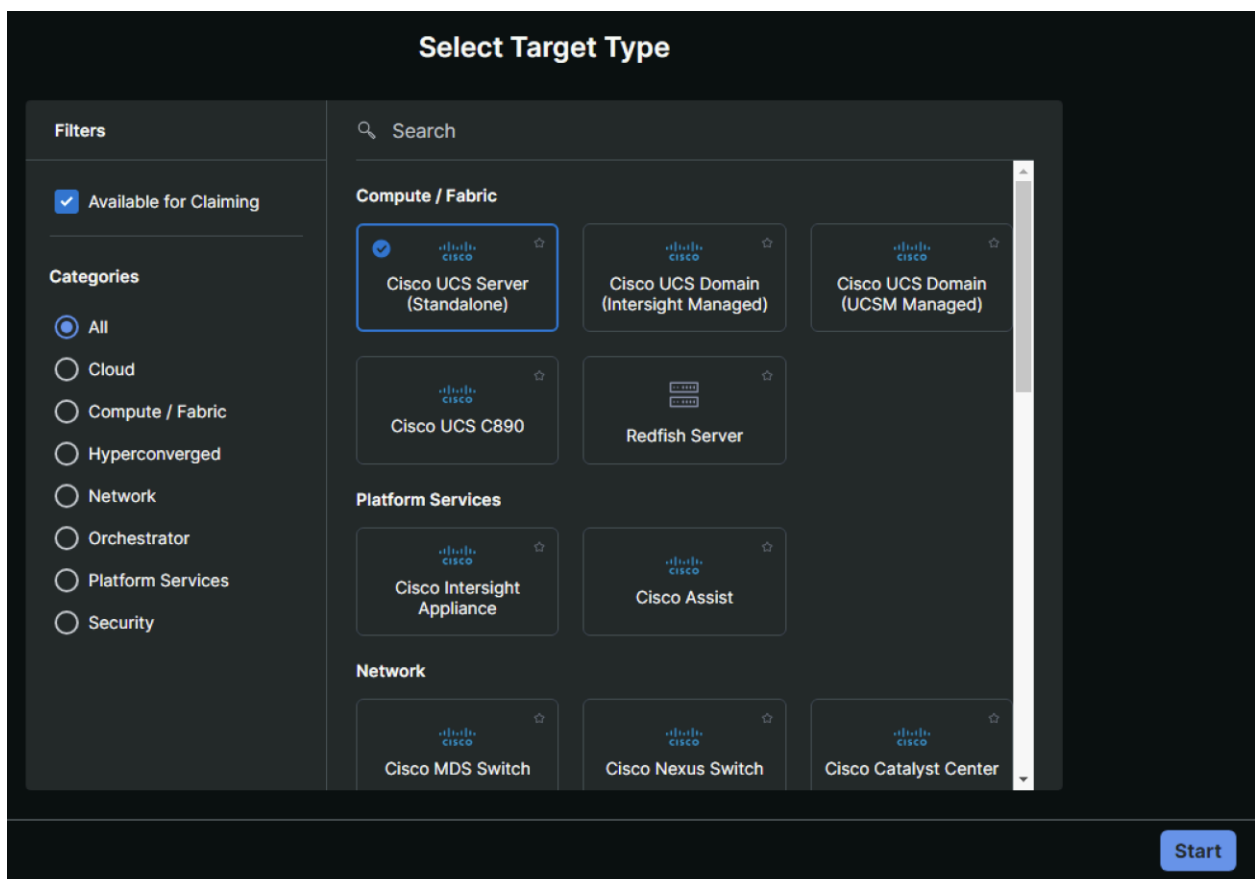

Claim Cisco UCS Server (Standalone) Target

To claim your target, provide the Device ID, Claim Code and select the appropriate Resource Groups.

General

Device ID * ⓘ Claim Code * ⓘ

Resource Groups

Select resource groups, if required. This is not mandatory, since by default, the claimed target will be added to "All" type resource groups.

0 items found per page << < 0 of 0 > > ⚙

☐	Name	Usage	Description
NO ITEMS AVAILABLE			

<< < 0 of 0 > >

[Back](#) [Cancel](#) [Claim](#)


NOTE: When using the Cisco Intersight Virtual Appliance, the servers' CIMC IP addresses and their usernames and passwords are used to claim the servers instead of the Device IDs and Claim Codes.

- On the Desktop click the Active.html icon to access the Intersight login, on the next page click on the Hyperlink "Click here to login"





7. In the resulting window click Go to intersight, this will do the auto-login

If requires accessing Intersight from the cpoc-win10-2, copy the URL and paste on the second windows virtual machine, then click Go to Intersight

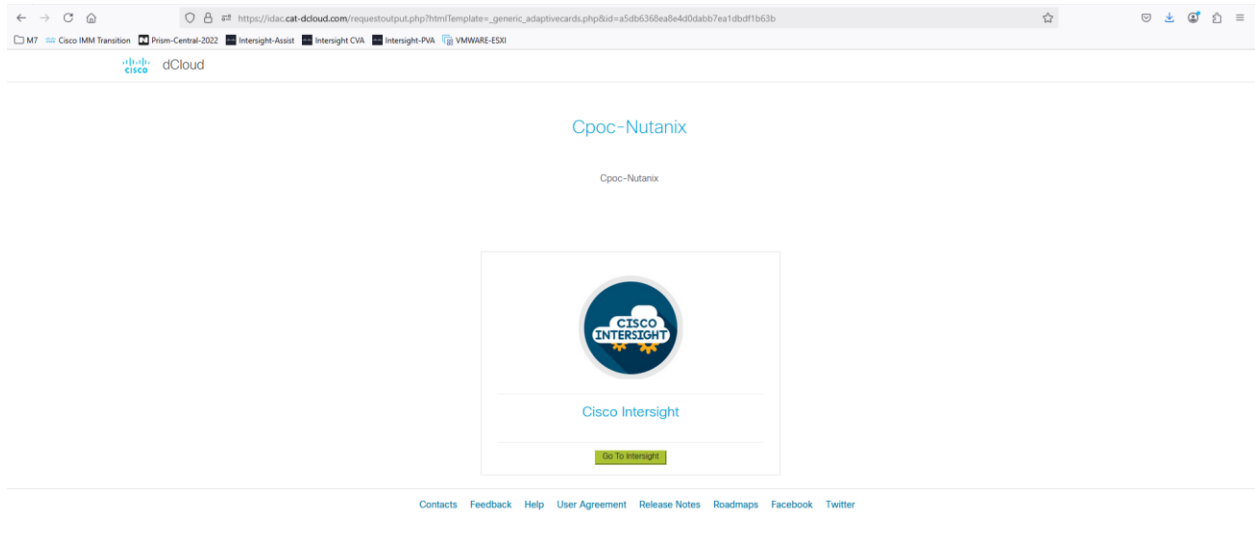


8. On the left page of Intersight, under Settings, click Keys
9. Click "Generate API key" using schema version 3 for use by Nutanix Foundation Central. Be sure to save the Secret Key to a file. It will only be shown once

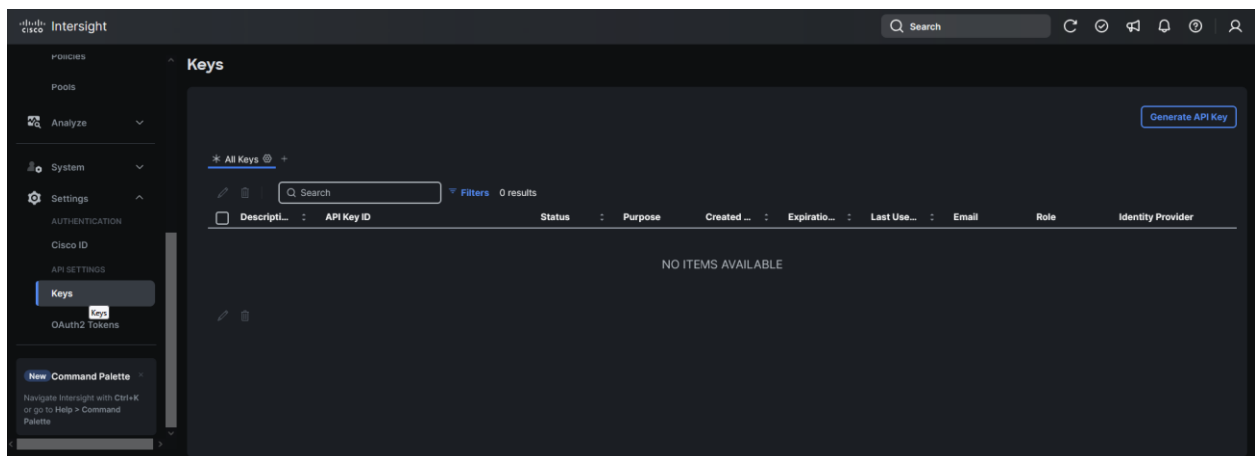

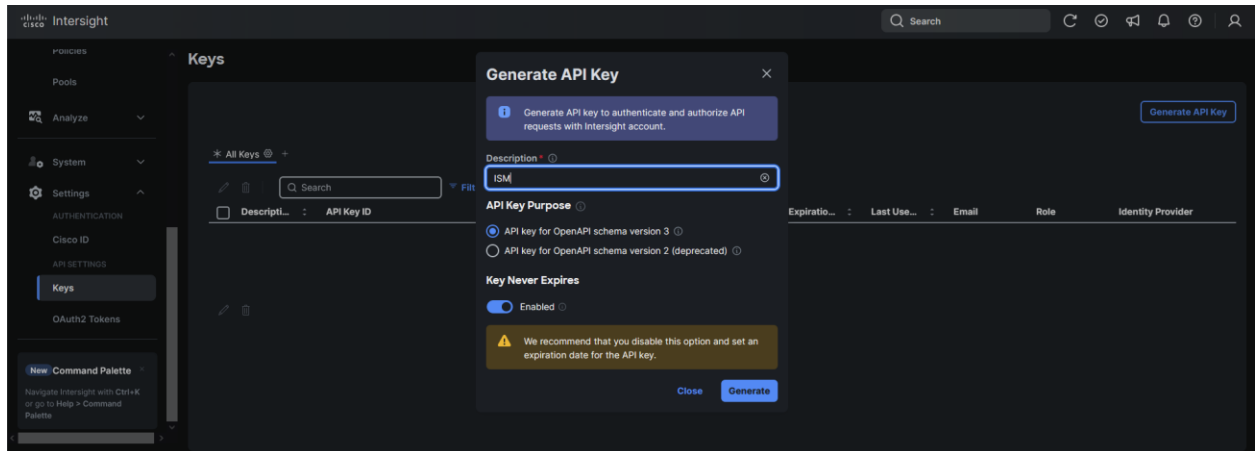


10. Save the API Key ID and Secret Key in the Desktop
11. Ensure your Cisco ID is granted access to download software from CCO. If not, click the Activate link and enter your CCO login credentials. This step is not required for an air-gapped Cisco Intersight private Virtual Appliance (PVA).

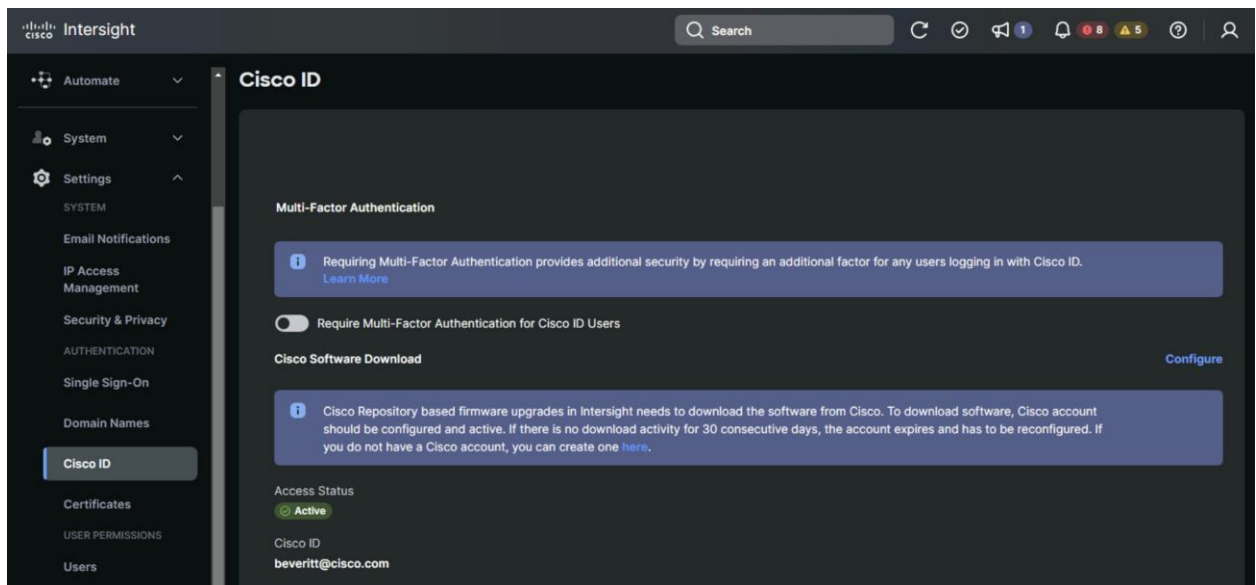


Scenario 2. Onboard nodes in Foundation Central


1. On Firefox browser bookmarks click over Prism-Central-2022, the credentials are **admin / C1sco12345!**



2. On this lab we' re using the Nutanix Prism 2022.6.0.12 with Foundation Central 1.7.1
3. Make sure the DNS, NTP, Virtual IP and Domain Name are set.

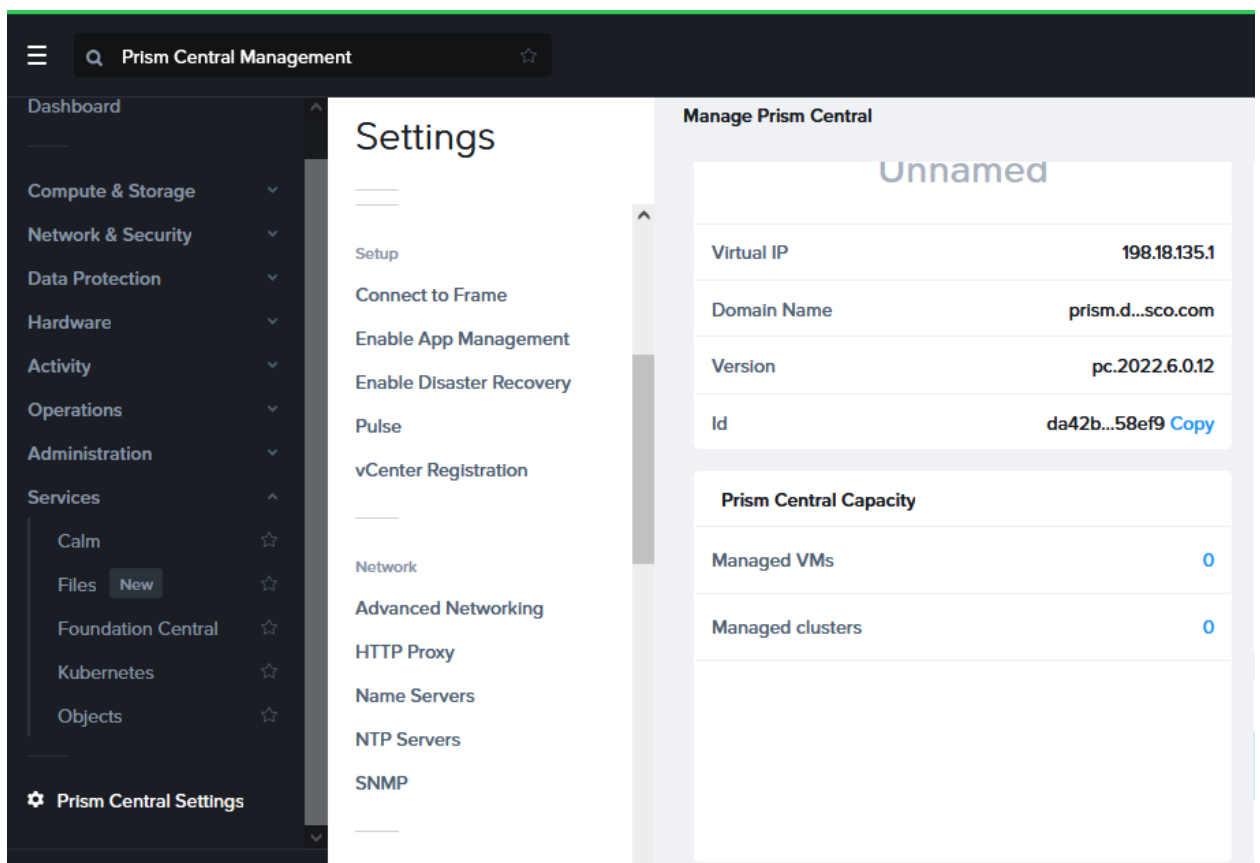


- Once all the parameters are confirmed, go to Foundation Central Settings to connect Prism Central with Intersight account, click “Connect Hardware Provider”

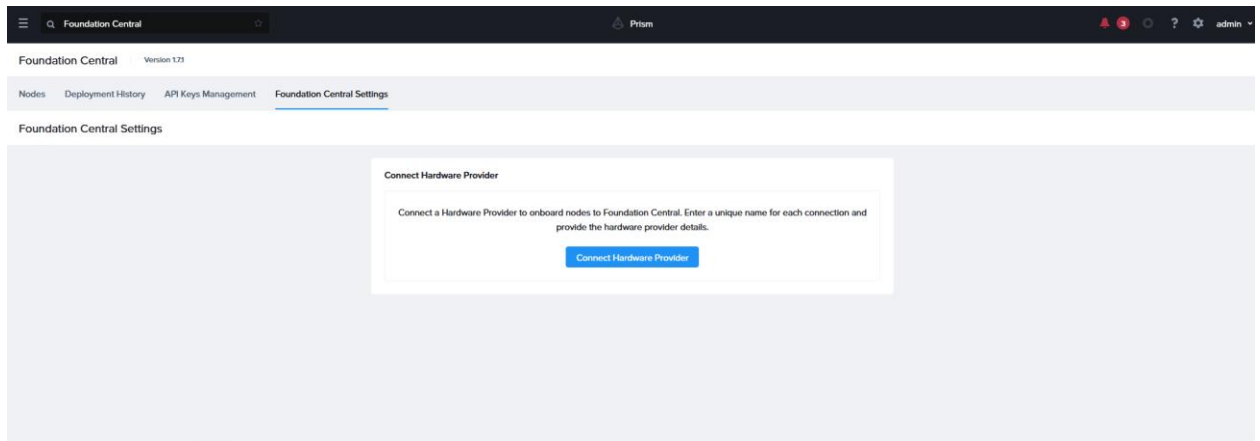


- Fill in the required information


- Connection name= Intersight
- Hardware Provider = Cisco Intersight
- Intersight Deployment Type = SaaS
- Intersight Region & URL = North America
- Intersight API Key = <copy the one generated previously>
- Secret Key= <copy the one generated previously and saved to the desktop>

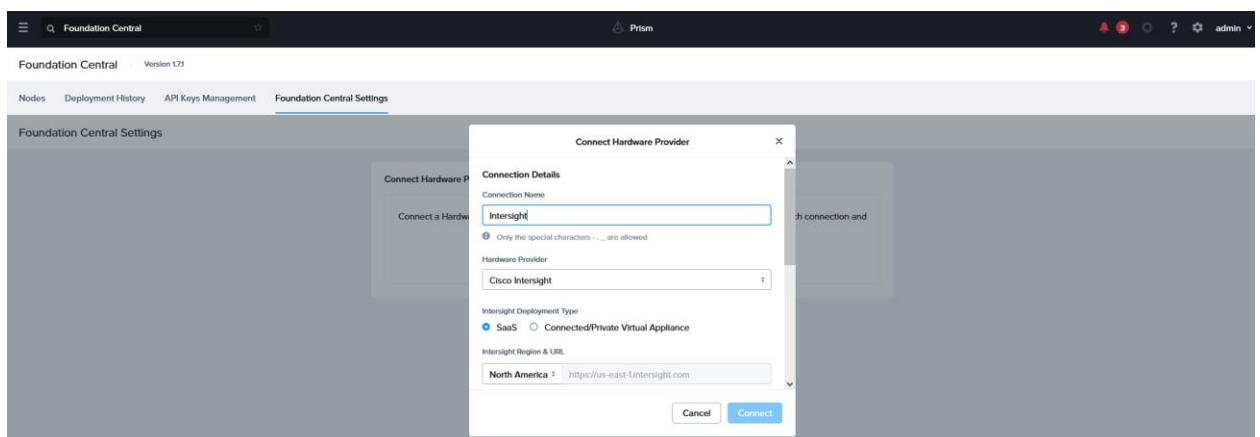


- Prism Central will display a pop-up of “Connection has been saved”

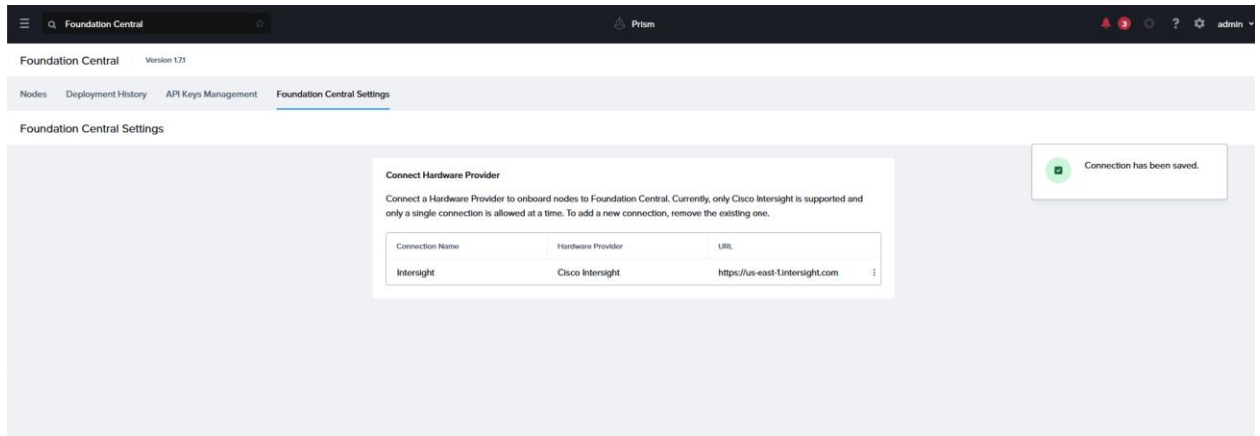

7. Then click on Nodes > Manually Onboarded and click Onboard Nodes

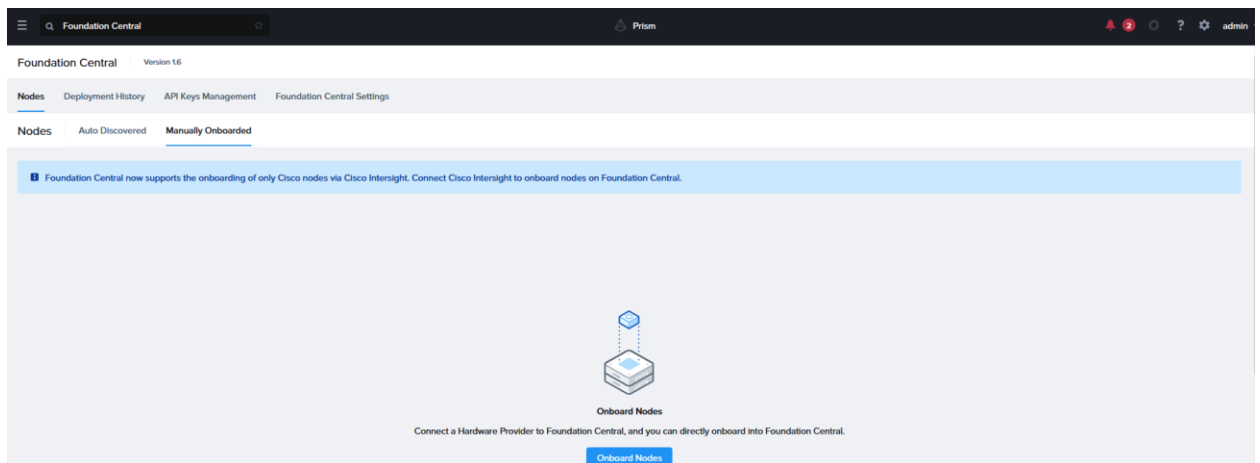

8. For node management mode, choose **Intersight Standalone Mode** then click Next

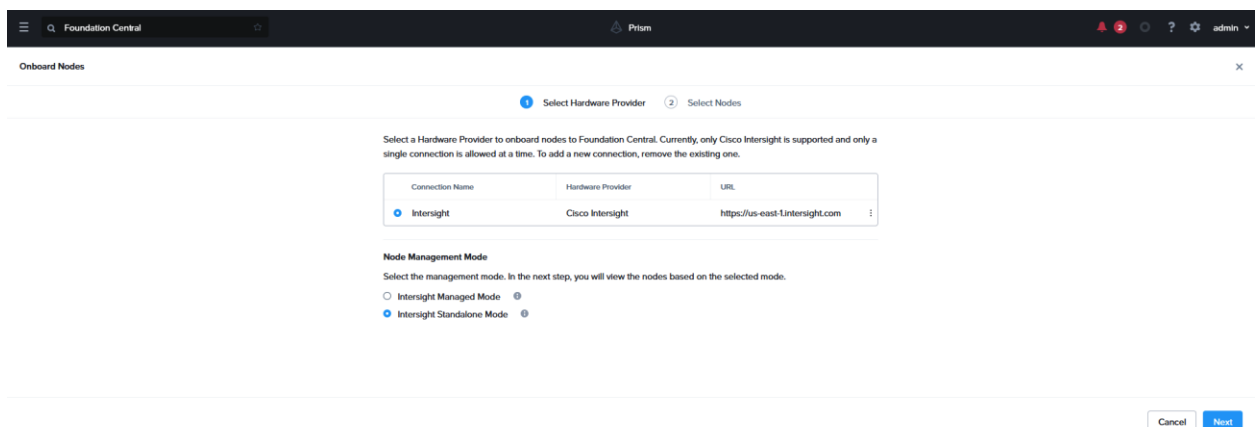

9. Select all Nodes you can to onboard and then click Onboard

Foundation Central

Ptarm

admin

Onboard Nodes

Select Hardware Provider

Select Nodes

You are currently viewing the nodes connected to Cisco Intersight for the connection name "Intersight" and there are no server profiles attached. To update the node list, please click on [Refresh](#).

Type in a query

Modify Filters

4 selected out of 4 Cisco Nodes

☒ Node Serial ↑	Name ↓	Classification ↓	Model ↓	Organizations ↓	Tags ↓	Memory (GB) ↓	CPU (Cores) ↓
☒ WZF28389L1	C240-WZF28389L1	Nutanix	UCSC-C240-M7SN	default	-	512	32
☒ WZF28389LX	C240-WZF28389LX	Nutanix	UCSC-C240-M7SN	default	-	512	32
☒ WZF28400HKB	C240-WZF28400HKB	Nutanix	UCSC-C240-M7SN	default	-	512	32
☒ WZF28400HH	C240-WZF28400HH	Nutanix	UCSC-C240-M7SN	default	-	512	32


Back

CancelOnboard

Scenario 3. Nutanix Cluster Deployment with AHV or ESX Hypervisor

Note In this scenario we' re deploying a cluster of 3 nodes, but if want to deploy the cluster with 4 nodes it can be done, but will have to skip the scenario 4 cluster expansion

1. In Foundation Central under **Nodes > Manually Onboarded**, select the first 3 nodes would like to use for the cluster deployment and click on **Create Cluster**

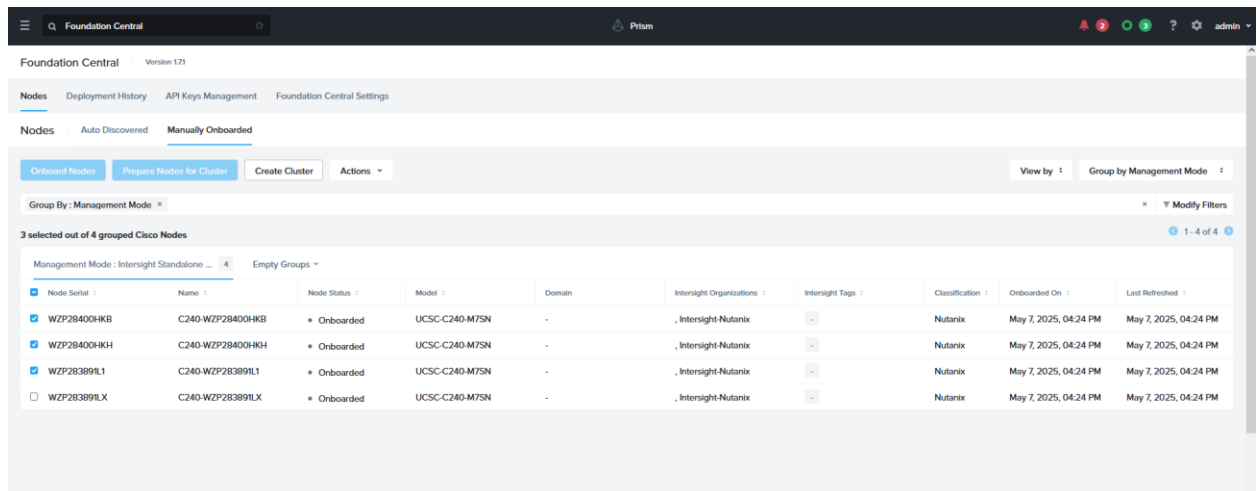

2. Enter the required information and click Next
 - Name = ISM
 - Intersight Organization= Intersight-Nutanix

Foundation Central | Pritam

Create Deployment

1 Cluster Details | 2 Hypervisor / AOS | 3 Network Settings | 4 CVM Settings | 5 Configure Nodes | 6 Security

Cluster Configuration

The following settings affect the entire cluster as a single entity.

Cluster Name
TSM
Allowed characters: alphanumeric, dash, hyphen, underscore.

Cluster Replication Factor
RF:2
Nutanix supports RF:2, and also RF:3 only if the cluster has 5+ nodes. You selected 4 nodes for your cluster.

Intersight Organization
The organization is required to apply server profiles to nodes. Only nodes within the same organization can create a cluster. If the selected nodes currently belong in multiple organizations, you can choose any one organization to apply to the policy.
Intersight Nutanix

Next

3. Login into Cisco IMM Transition tool, the access is located on the bookmark, In the Application click in Software Repository, you will see some folders for different versions, for this deployment, we offer the option to select one of the Nutanix AOS and the hypervisor which is supported by the servers, check the versions and select the one you like to deploy using AOS with AHV hypervisor or check below the options of VMware ESXi

Check the versions here <https://portal.nutanix.com/page/compatibility-interopability-matrix>

IMM-TRANSITION

Sign In

admin

Password*

Sign In

© 2017-2025, Cisco Systems, Inc. All rights reserved. Cisco, the Cisco logo, and Cisco Systems are registered trademarks or trademarks of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries

Hardware Model	AOS Version	Recommended Hypervisor Version
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	AHV-20230302.101026

Hardware Model	AOS Version	Recommended Hypervisor Version
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	AHV-20230302.102001

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	AHV-10.0

All Versions		
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	AHV-10.0.0.1

All Versions		
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	AHV-10.0.1

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 7.0 U3s
HCIAF240C-M7SN/UCSC-C240-M7SN	6.8.1	ESXi 8.0 U2d
Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	6.10	ESXi 8.0 U3 Vendor

Hardware Model ▾	AOS Version ▾	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0	ESXi 7.0 U3s

All Versions		
Hardware Model ▾	AOS Version ▴	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.0.5	ESXi 7.0 U3s

All Versions		
Hardware Model ▴	AOS Version ▾	Recommended Hypervisor Version ▾
Q Type to filter...		
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U3 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U2 Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3o Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U1a Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3i Vendor
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U3d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 8.0 U2d
HCIAF240C-M7SN/UCSC-C240-M7SN	7.0.1.5	ESXi 7.0 U3s

- Choose one of the options to deploy the new cluster, access the desired folder and copy the AOS link, click the Ellipsis at the right side, then select share link

Name	Last Modified Time	Type	Size	Sync Status	
Nutanix-AOS-AHV-7.0.1.5	05/07/2025 6:44:32 PM	Folder	-	-	...
Nutanix-Prism-Central	05/07/2025 6:11:17 PM	Folder	-	-	...
Nutanix-AOS-AHV-6.8.1	04/08/2025 11:39:01 PM	Folder	-	-	...
OS	04/07/2025 4:30:43 PM	Folder	-	-	...
Nutanix-AOS-AHV-7.0	04/08/2025 11:38:11 PM	Folder	-	-	...
Nutanix-AOS-AHV-7.0.0.5	05/07/2025 6:53:35 PM	Folder	-	-	...
Vmware-ESX	04/01/2025 5:33:59 PM	Folder	-	-	...
Nutanix-AOS-AHV-6.10	04/08/2025 11:37:23 PM	Folder	-	-	...

- Return to Prism Central and paste the copied link into the AOS URL, then from the hypervisor option click on it and select AHV, then return to Cisco IMM to copy the link of AHV, select the ISO and click Next

Foundation Central | Prisma | admin

Create Deployment

1 Cluster Details 2 **Hypervisor / AOS** 3 Network Settings 4 CVM Settings 5 Configure Nodes 6 Security

☒ I want to image all nodes with custom AOS and hypervisor installers.

AOS Download URL

AOS package will be downloaded from this location during the imaging process of each node.

Pre-computed SHA256 Checksum of AOS Installer (Optional)

Provide the checksum if you want Foundation Central to run a checksum test of the downloaded installer before starting the imaging process. This checksum also helps Foundation Central skip a re-download if a file with the same checksum already exists.

Hypervisor

Choose the hypervisor type that you want to install on each node.

☐ Instead of downloading AHV from a URL, I want to use the AHV bundled inside the AOS package specified above (please ensure your AOS package bundles an AHV installer)

Hypervisor Download URL

Hypervisor installer will be downloaded from this location during the imaging process of each node.

Pre-computed SHA256 Checksum of Hypervisor Installer (Optional)

6. Fill in the networking information

- Gateway = 198.18.128.1
- Netmask = 255.255.192.0
- Cluster Virtual IP = 198.18.135.2
- Host and CVM VLAN = 10
- Click Next

Foundation Central | Prisma | admin

Create Deployment

1 Cluster Details 2 Hypervisor / AOS 3 **Network Settings** 4 CVM Settings 5 Configure Nodes 6 Security

Nutanix requires all hosts and CVMs of a cluster to have static IP addresses in the same subnet.

Gateway of Every Host and CVM [Reset Existing](#)

Netmask of Every Host and CVM

Cluster Virtual IP (Optional)

This IP will always point to an online node, even in case of a node failure. Must be in the host-CVM subnet. Your subnet range is: 198.18.128.0 - 198.18.191.255

If you plan to deploy Nutanix Objects, click here to learn about important network requirements.

Host and CVM VLAN
If your host-CVM subnet has a VLAN configuration, enter the tag below. All packets leaving the hosts and the CVMs will be wrapped with this VLAN tag.

VLAN Tag of Every Host and CVM (Optional)

Minimum 1, maximum 4094. If left blank, VLAN 0 will be used.

Hypervisor LACP Configuration
☐ Enable LACP

7. CVM Settings uses the following information:

- Timezone= America/New_York
- NTP=198.18.128.1

- DNS= 198.18.133.1
- Click Next

Time Configuration

Time settings apply to every CVM, and also apply to hosts depending on the hypervisor you choose.

Timezone
America/New_York

Only available when you choose to form a cluster, because of technical reasons, Nutanix concluded AHV and ESX don't properly support host timezones.

NTP Servers (Optional)
198.18.128.1

Enter a comma-separated list of IPs or domain names.
Applies to the host too if the host is AHV.
For ESX, Nutanix concluded it is best to configure host NTP servers in vCenter.

DNS Settings

DNS settings apply to every CVM, and also apply to hosts depending on the hypervisor you choose.

DNS Servers (Optional)
198.18.133.1

Enter a comma-separated list of IPs.
Required if any NTP server above is a domain name, or if AOS/hypervisor package download URLs are using domain names.
For ESX, Nutanix concluded it is best to configure host DNS servers in vCenter.

- To complete the cluster Host IP, CVM IP and Host name use the image below as an example, you can choose any IP address from 198.18.135.10 up to 198.18.135.100

When adding the Host IP, skip one IP address between Host IP and CVM IP

Enter the IP/hostname you want each node to have.

Reuse Existing Reorder Clear

Node Serial	Node Name	Host IP Set Range	CVM IP Set Range	Hostname of Host Set Range
WZP28400HKH	C240-WZP28400HKH	198.18.135.20	198.18.135.24	c240-node-1
WZP28400HKB	C240-WZP28400HKB	198.18.135.21	198.18.135.25	c240-node-2
WZP283891X	C240-WZP283891X	198.18.135.22	198.18.135.26	c240-node-3

Back Next

- For the Foundation Central API Key, click the "+ Generate API key", add a name, select the new API from the drop-down menu and click Submit

1 Cluster Details

2 Hypervisor / AOS

3 Network Settings

4 CVM Settings

5 Configure Nodes

6 Security

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key [+ Generate API Key](#)

Intersight

< Back

Submit

10. The cluster deployment begins and takes approximately 1h15m to complete

Foundation Central

Prism

admin

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment [Show Only Non-archived](#)

ISM

Deployment in progress

Start Date and Time: 5/9/2025, 08:09 PM

Abort

Phase 1A: Node Preparation

11% 3 nodes in progress

Phase 1B: Node Imaging

0% Not started

Phase 2: Cluster Formation

0% Waiting for Phase 1 to finish

Cluster Details


Redundancy Factor	Host CVM Subnet	CVM NTP Servers	AOS Installer URL
2	198.18.128.1 / 255.255.192.0	198.18.128.1	https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-f280ec31fa87a38eb0e07d70e4878b51947e72ae-x86_64.tar.gz
Cluster External IP	Intersight Organization	CVM DNS Servers	Hypervisor Installer URL
198.18.135.2	Intersight-Nutanix	198.18.133.1	https://cisco-imm.dcloud.cisco.com/repo/Nutanix-AOS-AH-V7.0.0.5/AHV-DVD-x86_64-10.0.0.11.iso
VLAN ID	Deployment UUID	LACP	
10	738f3815-214e-4c16-7a7c-0073e47952e4	No	

3 Nodes in This Deployment


Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283891X	WZP283891X	A	4%	[NodeConfiguration] Deploying and activating the profile of the Node	198.18.135.20	198.18.135.24	AH-V	c240-node-1
WZP28400HKB	WZP28400HKB	A	4%	[NodeConfiguration] Deploying and activating the profile of the Node	198.18.135.21	198.18.135.25	AH-V	c240-node-2
WZP28400HKH	WZP28400HKH	A	4%	[NodeConfiguration] Deploying and activating the profile of the Node	198.18.135.22	198.18.135.26	AH-V	c240-node-3

[View Original Configuration](#)

11. Return to Intersight, under Operate select Servers to check the Server Profile provisioning progress.

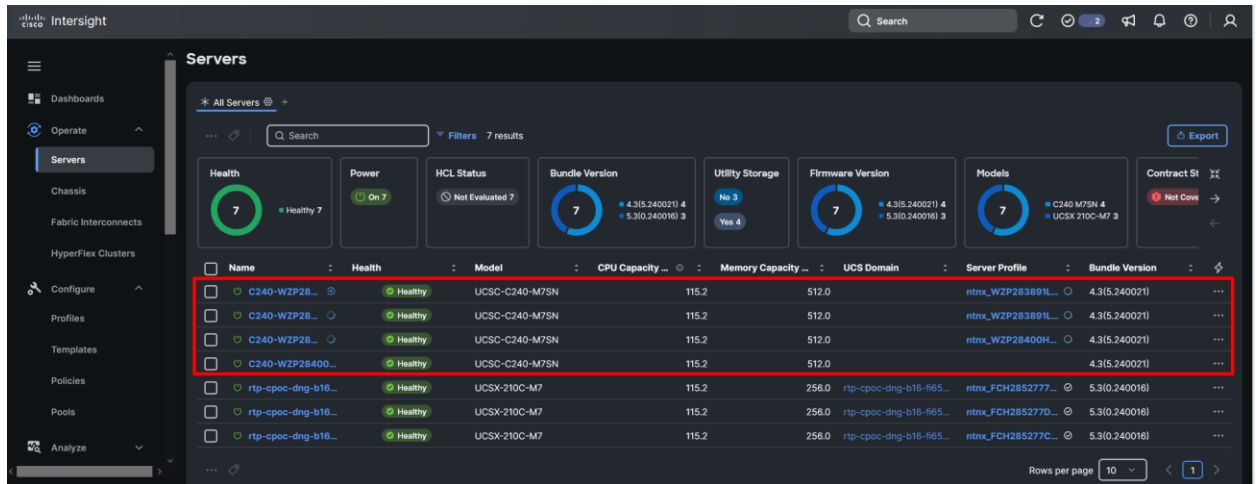

12. Let's explore Intersight, under Configure select Profiles > UCS Server Profiles. Note the profiles are being created/configured under Activating status.

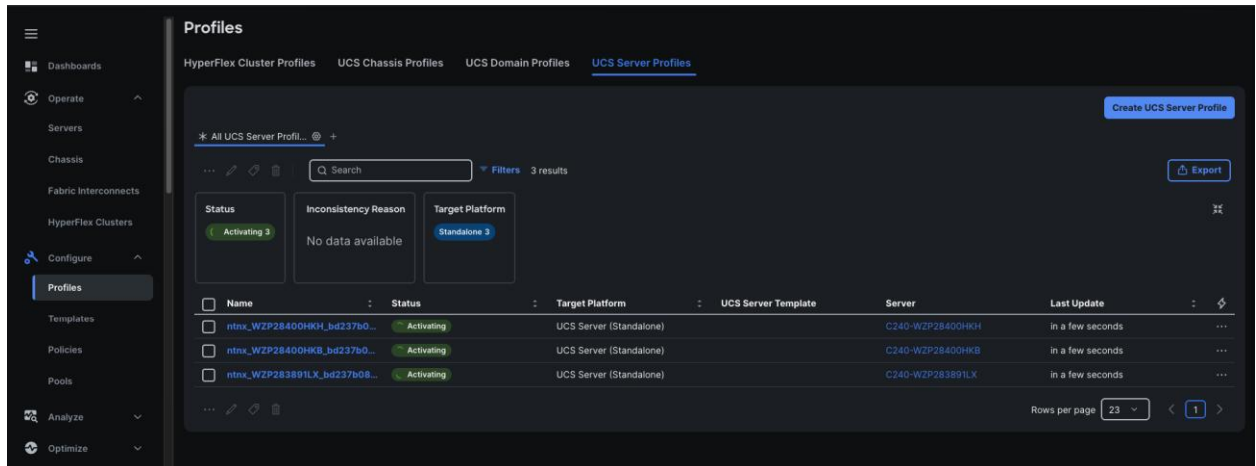

13. In Configure > Policies, note all the UCS Server policies created as part of the automated process between Foundation Central and Intersight.

Policies

* All Policies +

Search Filters 28 results

Platform Type: UCS Server 28

Usage: Used 22, Indirect 6

Name	Platform Type	Type	Usage	Last Update
ntnx_nvme-bios_ISM_bd237b08-09d...	UCS Server	BIOS	Used - 3	4 minutes ago
ntnx_m2-raid_WZP28400HKH_bd23...	UCS Server	Boot Order	Used - 1	4 minutes ago
ntnx_kvm_ISM_bd237b08-09dd-43e...	UCS Server	Virtual KVM	Used - 3	4 minutes ago
ntnx_ipi_ISM_bd237b08-09dd-43eb...	UCS Server	IPMI Over LAN	Used - 3	4 minutes ago
ntnx_ac-cisco_WZP28400HKH_bd23...	UCS Server	Adapter Configuration	Used - 1	4 minutes ago
ntnx_scp-cisco_WZP28400HKH_bd2...	UCS Server	SAN Connectivity	Used - 1	4 minutes ago
ntnx_firmware_WZP28400HKH_bd2...	UCS Server	Firmware	Used - 1	4 minutes ago
ntnx_m2-storage_WZP28400HKH_bd...	UCS Server	Storage	Used - 1	4 minutes ago
ntnx_lcp-cisco_WZP28400HKH_bd2...	UCS Server	LAN Connectivity	Used - 1	4 minutes ago
ntnx_ssl_ISM_bd237b08-09dd-43eb...	UCS Server	Serial Over LAN	Used - 3	4 minutes ago

14. In the top right of the screen, click the Requests icon to monitor the undergoing tasks.

Requests

* All Requests +

Search Status: In Progress x Filters 3 results Reset All


Export

Status: In Progress 3 Execution Type: Execute 3

Name	Status	Initiator	Target Type	Target Name	Start Time	Duration	ID	Execution Type
Server Profile A...	In Progress 9%	eargueda@cisc...	Rack Server	C240-WZP2840...	4 minutes ago	4 m 0 s	67eb2850696f6...	Execute
Server Profile A...	In Progress 9%	eargueda@cisc...	Rack Server	C240-WZP2838...	4 minutes ago	4 m 4 s	67eb284c596f6...	Execute
Server Profile A...	In Progress 9%	eargueda@cisc...	Rack Server	C240-WZP2840...	4 minutes ago	4 m 7 s	67eb2848696f6...	Execute


Rows per page: 21 < 1 >

15. Click on any of the tasks to check the progress of the server configuration

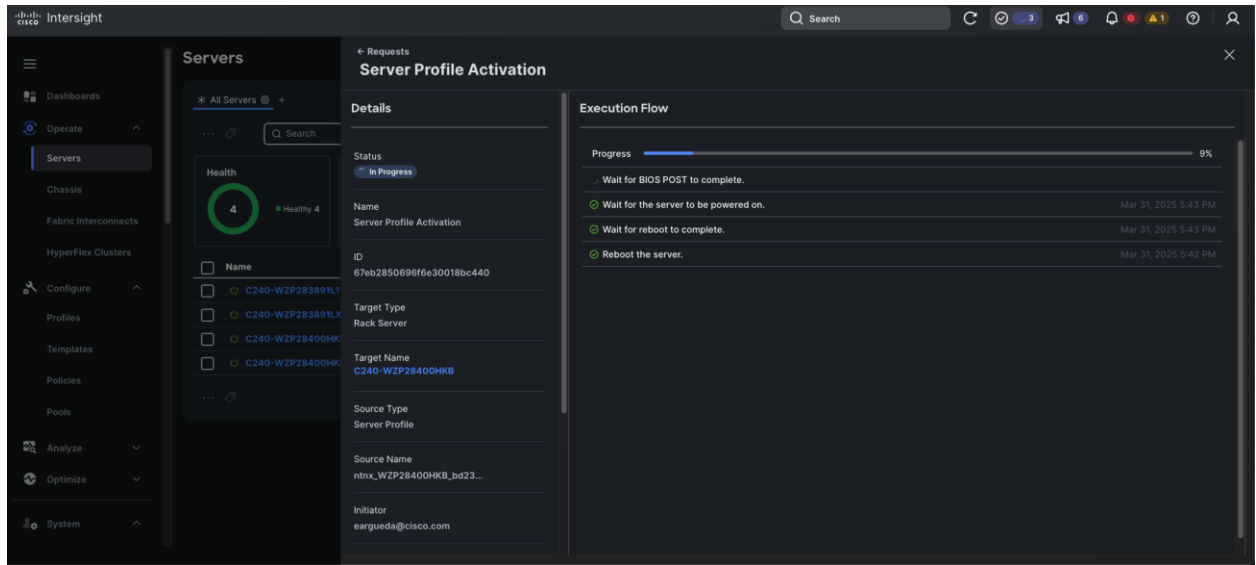


16. Return to Prism Central to monitor the cluster deployment progress.


17. Once the cluster deployment is completed, click **"Open Prism Element"**

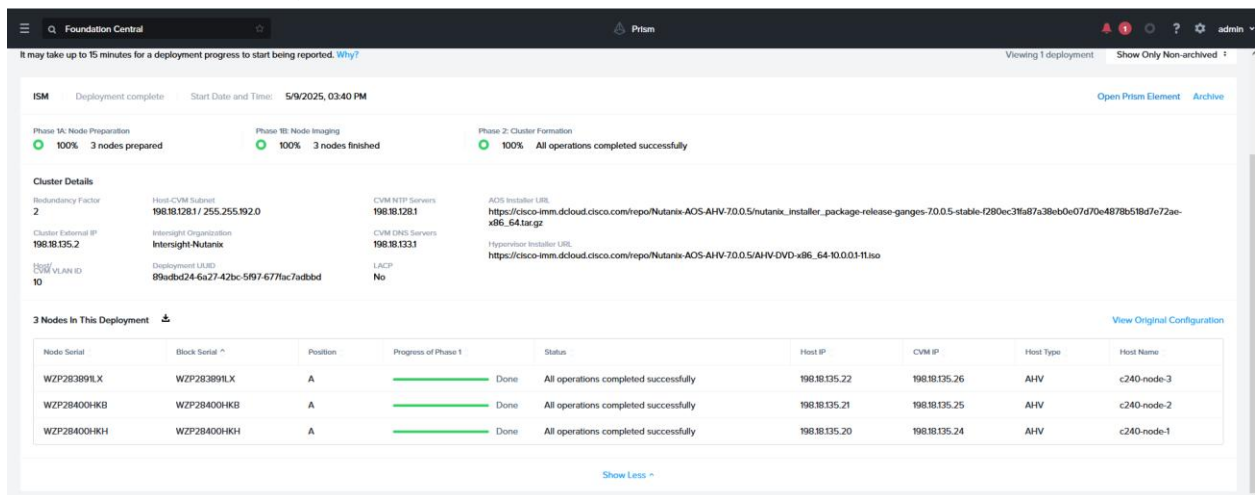

18. On Prism Element UI, login with user **"admin"** (password: **Nutanix/4u**) and change the password to **C1sco12345!**

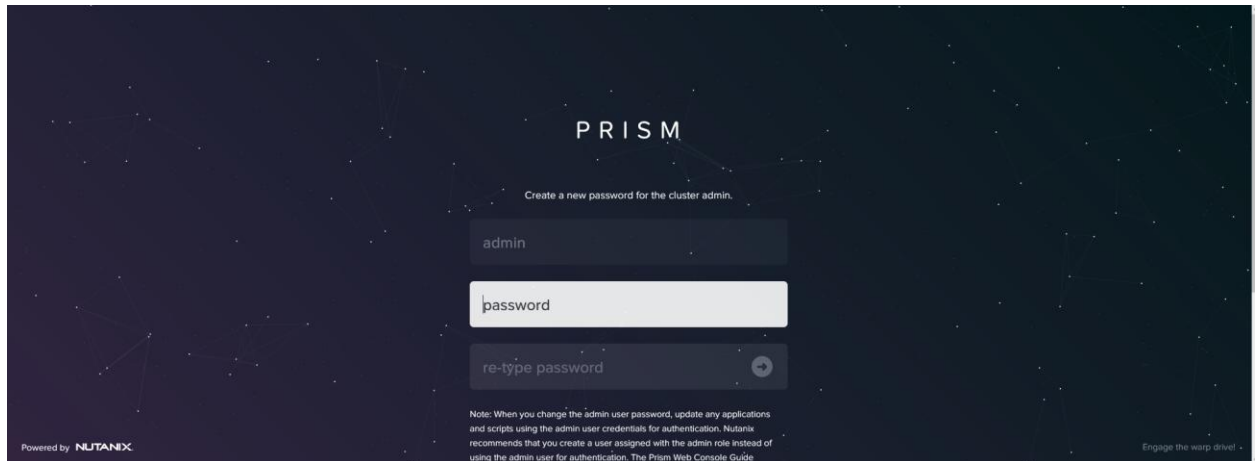

19. After the password has been successfully changed, login with user **admin** and password **C1sco12345!**

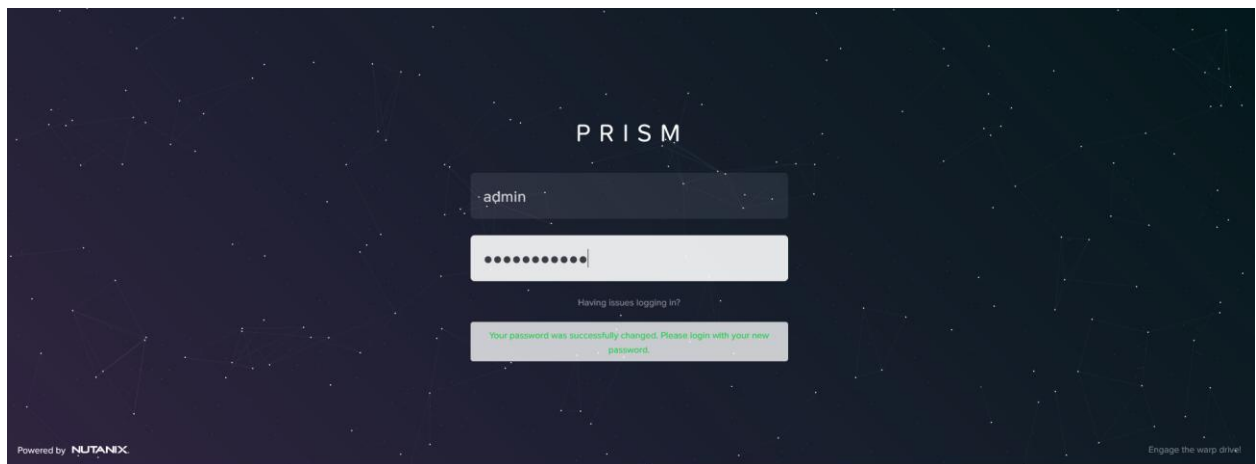

20. Complete the Nutanix EULA,

- Name = Cpoc
- Company = Cisco
- Job title = ISM
- Check the box and click accept and continue

Nutanix End User License Agreement (EULA) and Terms of Use

Nutanix is referred to in this Agreement as "Us", "We" or "Our" and Your organization is referred to as "You" or "Your". This Nutanix License and Services Agreement ("Agreement") governs Your use of any Products (as defined below) and becomes effective when You (a) issue a purchase order for the Products to receive or accept this Agreement, or (b) access, download, install, or use the Software or Cloud Services. This Agreement is entered into between You and Nutanix Inc., located at 1740 Technology Dr. Ste. 150, San Jose, CA 95110, United States, if You are contracting in the Americas, or Nutanix Netherlands B.V., located at Mercuriusplein 1, 2132 HA Hoofddorp, The Netherlands, if You are contracting anywhere else in the world or both if applicable. You represent and warrant that You have the authority to enter into this Agreement on behalf of Your organization.

1. Definitions.

1.1 "Affiliate" means any corporation or other business entity which controls, is controlled by or is under common control through the ownership of more than fifty percent (50%) of the

CPOC

Cisco

ISM

☒ I have read and agree to the terms and conditions.

Decline

Accept

21. Keep the Pulse option by default, click Continue

Pulse will be enabled

Pulse continuously monitors cluster health and periodically sends usage data to Nutanix's cloud based analytics engine. It automatically takes action when a problem has occurred, or is about to occur. [Learn More](#)

Nutanix strongly recommends not disabling this feature to improve your support experience in the event of a failure or critical system issue.


If you disable Pulse, Nutanix will not be able to proactively reach out to you in the event of failures, and your issue resolution time may increase significantly.

☒ **Disable Pulse. (not recommended)**
Pulse will not be enabled on this cluster.


Continue

22. You should be taken to the main dashboard

23. Click the cluster name on the top left ("ISM") next to the X icon, add 198.18.135.3 in the **Data Service IP** field and click **Save**

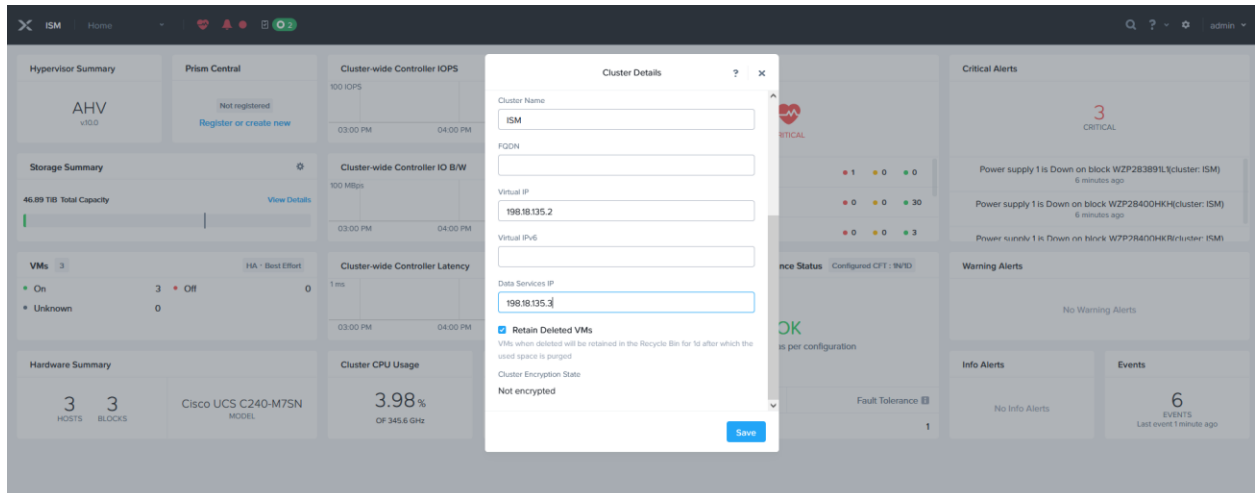


24. Let's start with some basic configuration, click **Home** at the top and select **Settings** then **Network Configuration** and click "Create Subnet"

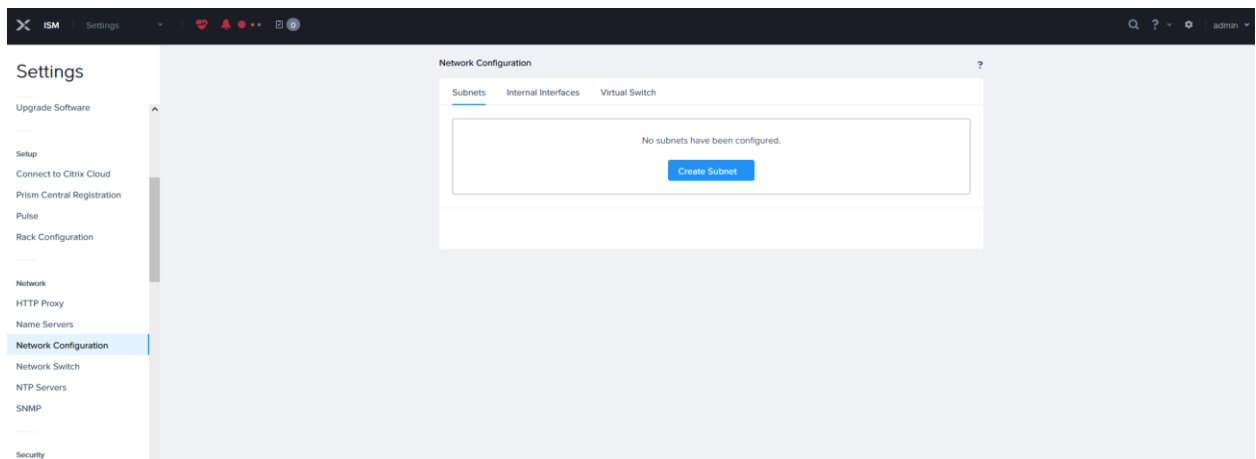


25. On "Create Subnet" use the following information

- Subnet Name = VMNetwork
- Virtual Switch= vs0(default)
- VLAN ID = 10
- Click Save

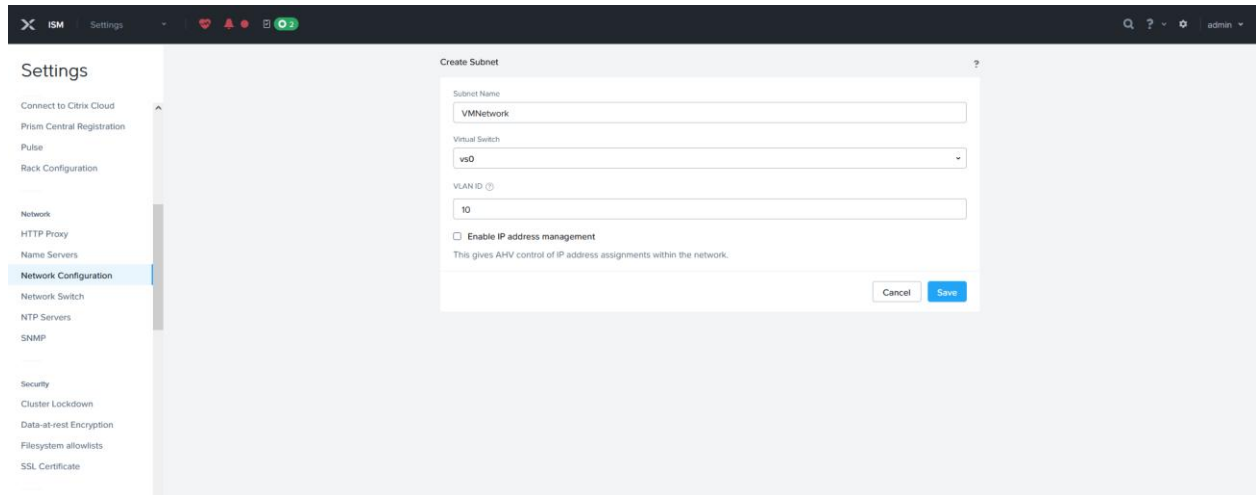


26. Then scroll up and select “Image configuration” and click “+ Upload image” .

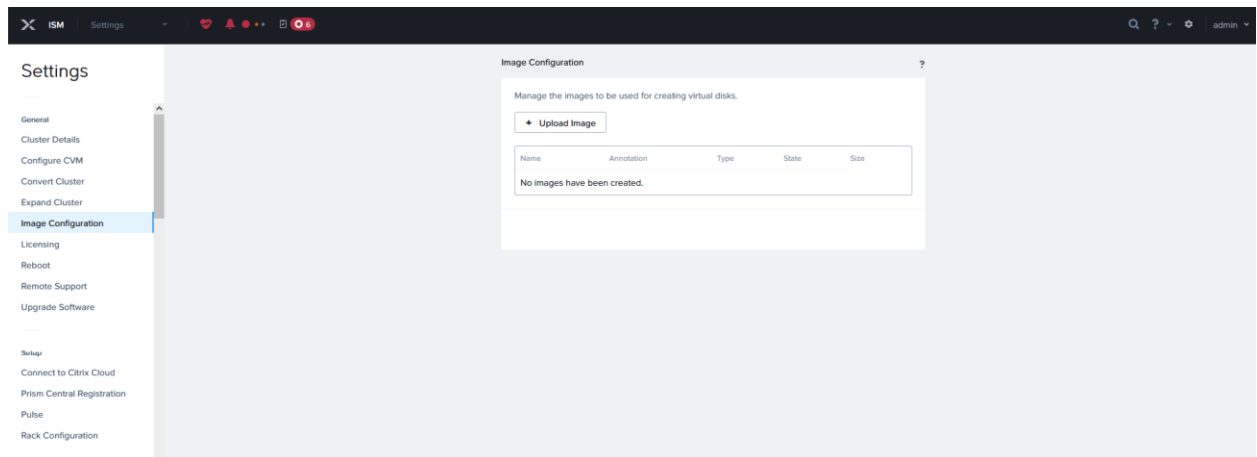


27. In this case we are going to use Ubuntu as an example

- Name = Ubuntu ISO
- Image Type = ISO
- Storage Container = SelfServiceContainer
- Image Source
 - Upload File > Click “Browse...” , from the Downloads folder select Ubuntu ISO
- Click Save

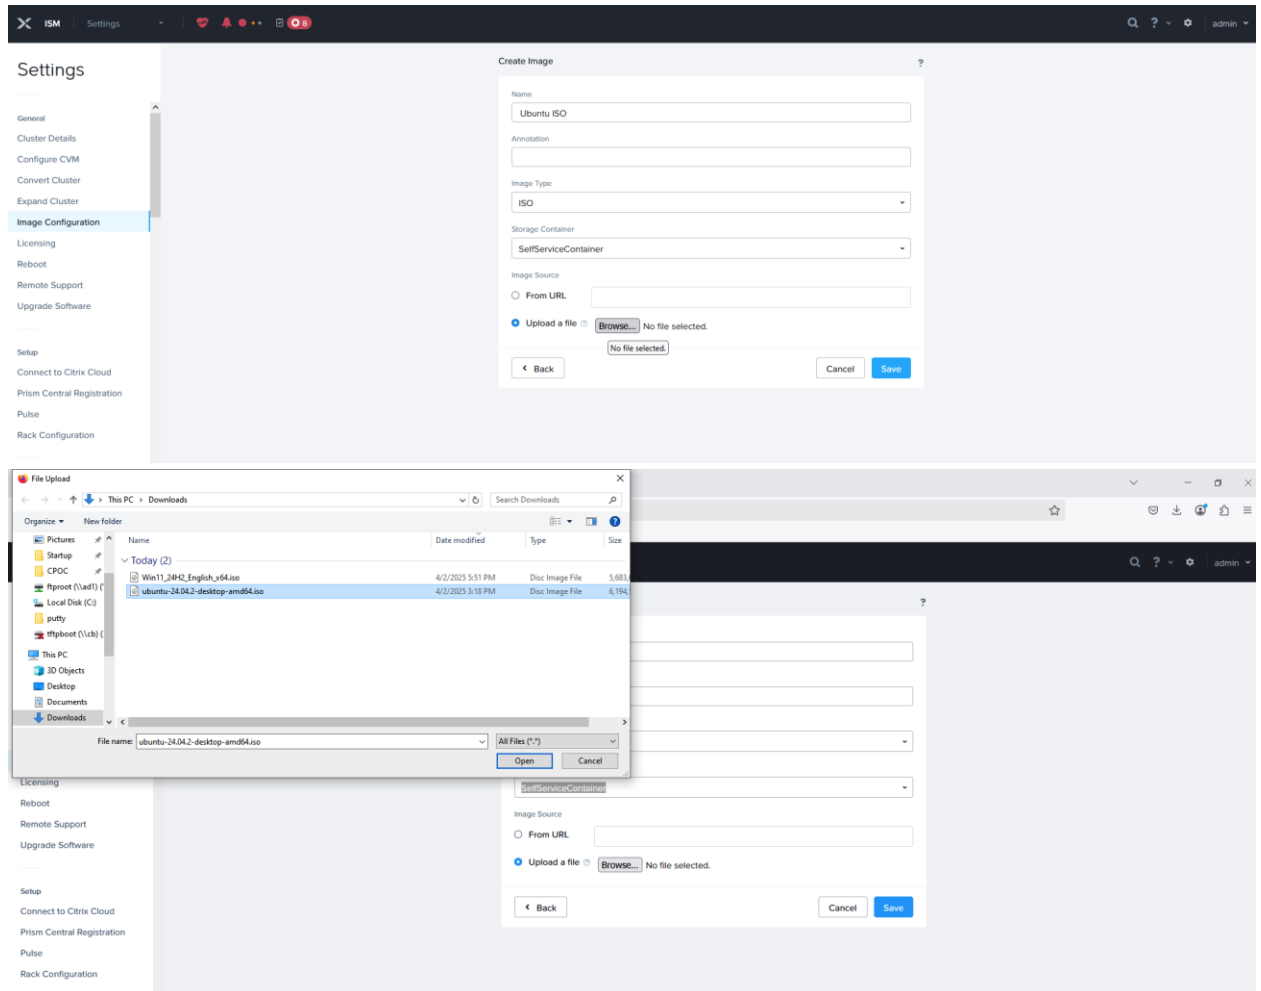


The ISO upload should take a few minutes to complete.

28. Then click the drop-down menu on the top left and select "VM"

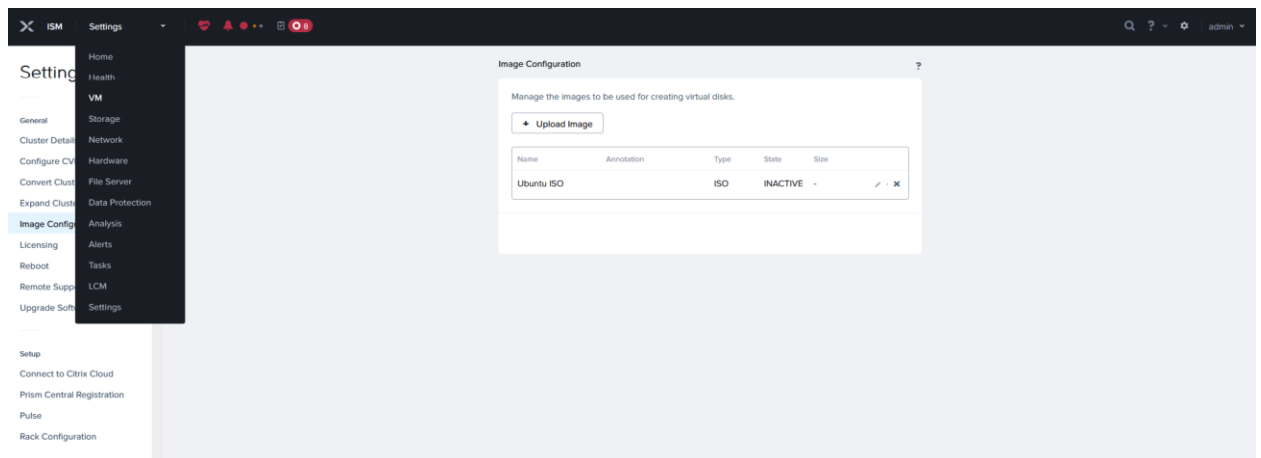

29. In the VM dashboard click "+ Create VM" on the top right

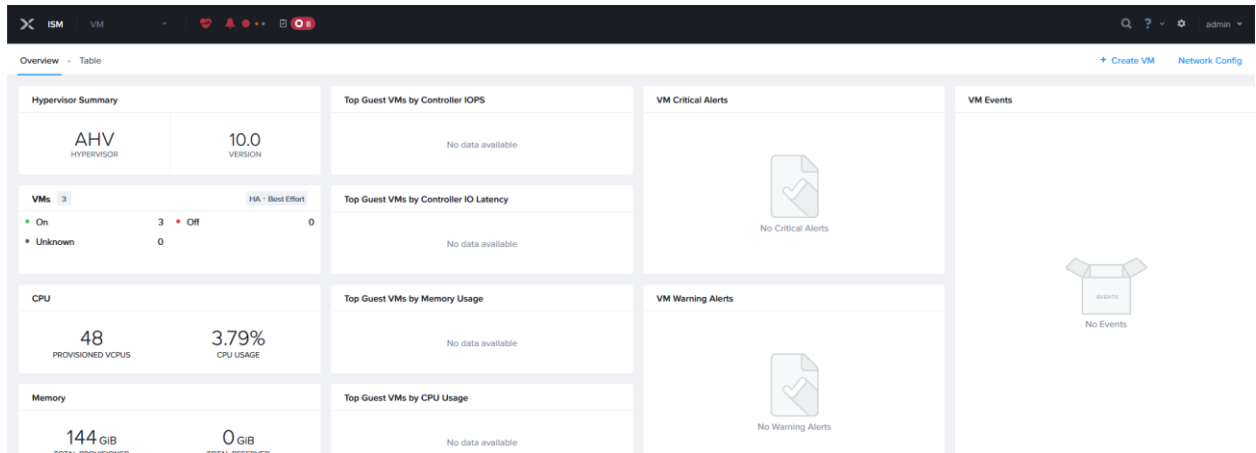

30. Let's fill in the new VM information

- Name = Ubuntu VM
- vCPU(s) = 2
- Memory = 4
- Disk
 1. + Add a New Disk
 2. Logical size = 20
 3. Click Add
 4. Click the pencil of CD-ROM
 5. Operation = Clone from Image Service
 6. Image = select Ubuntu from the drop down
 7. Click Update
- Network Adapters (NIC)
 1. + Add New NIC
 2. Subnet Name = VMNetwork
 3. Click Add
- Click Save

- Then Click Table at the top left, next to overview

Overview - Table

VM

Include Controller VMs 1 VM (filtered from 4)

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM			2	4 GiB	- / 25.91 GiB	0%	0%	-	-	-	-	Yes	No

Note the new VM recently created

31. Right-click the Ubuntu VM and select Power On

Overview - Table

VM

Include Controller VMs 1 VM (filtered from 4)

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM			2	4 GiB	5.91 GiB / 25.91 GiB	0%	0%	-	-	-	-	Yes	No

Summary > Ubuntu VM

Manage Guest Tools Launch Console Power on Take Snapshot Migrate Clone Update Delete

32. Right-click the VM again and select Launch Console

Overview - Table

VM


Include Controller VMs 1 VM (filtered from 4)

VM Name	Host	IP Addresses	Cores	Memory Capacity	Storage	CPU Usage	Memory Usage	Controller Read IOPS	Controller Write IOPS	Controller IO Bandwidth	Controller Avg IO Latency	Backup and ...	Flash Mode
Ubuntu VM	c240-node-2/AHV	198.18.128.1...	2	4 GiB	5.91 GiB / 25.91 GiB	65.97%	38.98%	201	0	11.58 MBps	0.42 ms	Yes	No

Summary > Ubuntu VM

Manage Guest Tools Launch Console Power Off Actions Take Snapshot Migrate Clone Update Delete


33. On the VM console, close the Installation window and open a Firefox browser and point to “cisco.com” to test VM usability and connectivity to the Internet.

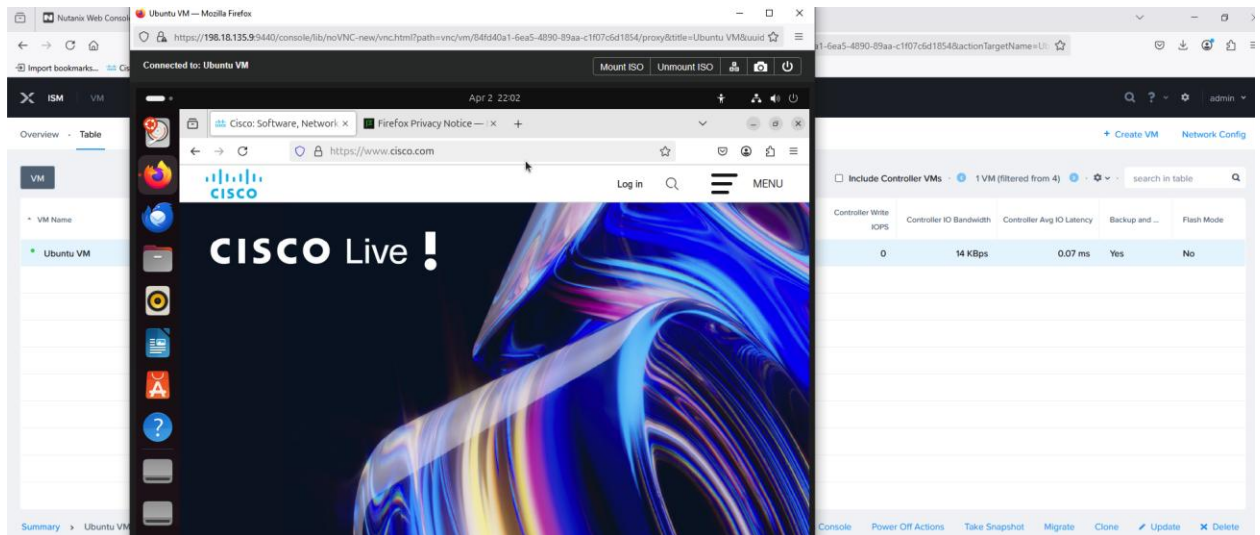


34. This concludes this scenario; you can close the Ubuntu console to continue with the next scenario

Scenario 4. Nutanix Prism Central deployment and Cluster registration

10. In the main dashboard on the Prism Central click in **Register or create new**

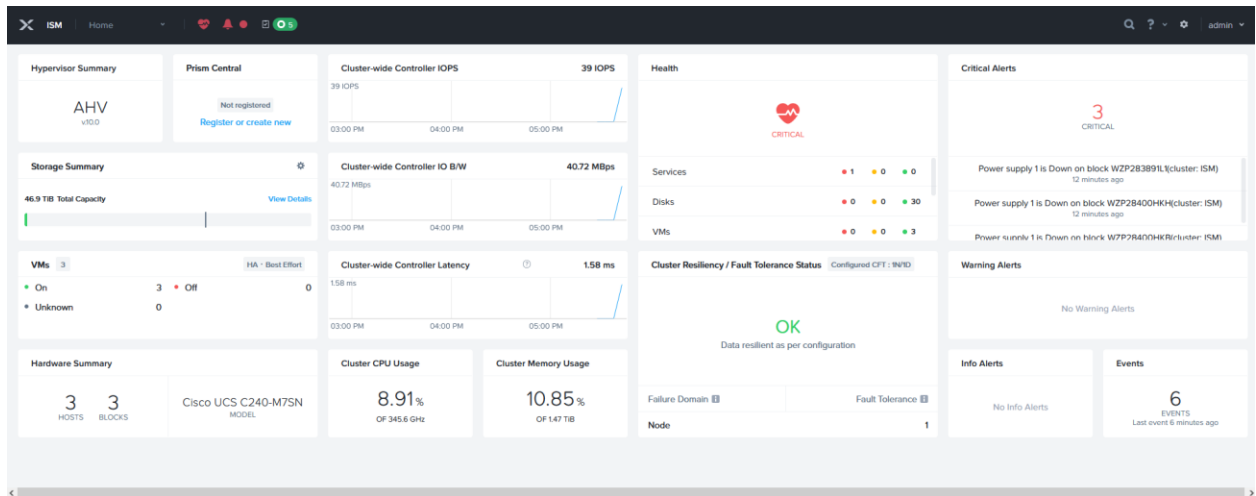

11. Select the first option, I want to deploy a new Prism Central Instance

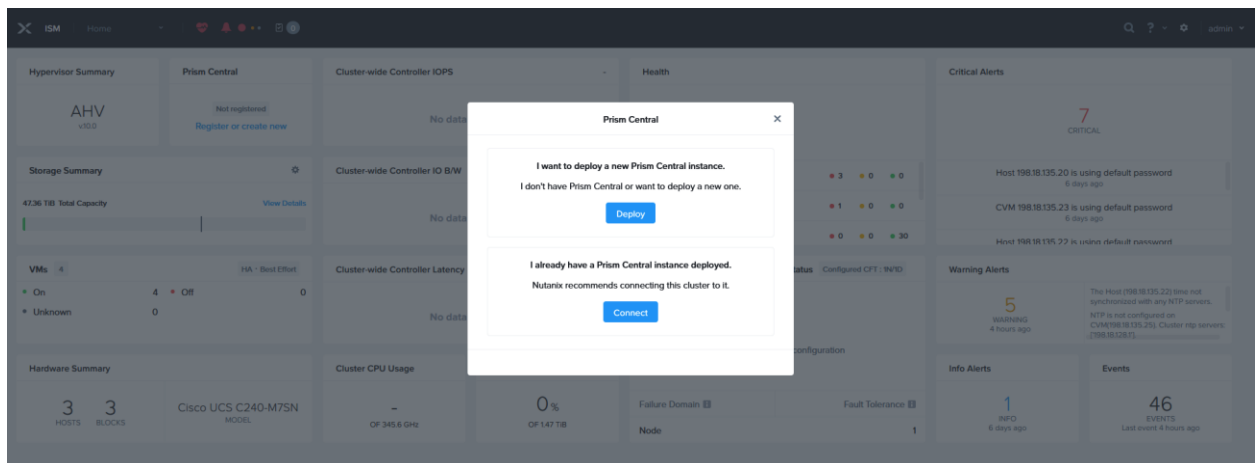

12. Under Installation Image section, select "pc.2024.3.1" and click Next

Prism Central (PC) Deployment

1 PC Version 2 PC Size and Scale 3 Configuration 4 Microservices

Installation Image
Provide the Prism Central image you'd like to install. You can download the latest version from the internet or upload an installation binary from your local machine.
[Learn more about PC Versions.](#)

Available versions
☒ Only show compatible versions [Upload Installation Binary](#)

Version Number	Version Type
☐ pc.2024.3.0.1	Public version
☐ pc.2024.3.0.2	Public version
☒ pc.2024.3.1	Public version

Cancel Next

13. Select "Small" and click next

NOTE: Do NOT select X-Small, this option does not support cluster expansion

Prism Central (PC) Deployment

1 PC Version 2 PC Size and Scale 3 Configuration 4 Microservices

Select Prism Central (PC) Size and Scale
Each size supports given number of VMs and can be used with the minimum number of resources provided below.
[Learn more about PC sizes](#)

X-Small New ☐

Supports up to 500 VMs | 5 Clusters | 50 hosts

4 vCPU 16 GB Memory 100 GB Disk

☐ Start with the smallest size to explore basic Prism Central capabilities.

Small (S) ☒

Supports up to 2500 VMs | 10 Clusters | 200 hosts

6 vCPU 28 GB Memory 500 GB Disk

☐ Scale-Out PC ☒

Large (L) ☐

Supports up to 12500 VMs | 25 Clusters | 1500 hosts

10 vCPU 46 GB Memory 2500 GB Disk

14. Add Network information:

- Network = select existing VMNetwork
- Subnet Mask = 255.255.192.0
- Gateway IP = 198.18.128.1
- DNS = 198.18.133.1
- NTP = 198.18.128.1
- Container = SelfServiceContainer

- Under General Details
- VM Name= PC-2024-3-ISM (Suggestion)
- IP Address= 198.18.135.4
- Click Next

Prism Central (PC) Deployment

Networking Details

Network

Subnet Mask Gateway IP

DNS Address(es)

NTP Address(es)

Container

General Details

VM Name 6 vCPU, 28 GB RAM

IP Address

- Prism Central Service Domain Name = prism-central.cluster.local
- Internal Network = Private Network [Default]
- Click Deploy

Prism Central (PC) Deployment

PC Version PC Size and Scale Configuration **Microservices**

Please enter the Prism Central domain name, select a network and provide the required inputs to enable the Microservices Infrastructure.

Prism Central Service Domain Name

Internal Network

☒ Use default settings (recommended)


Subnet Mask

Gateway IP Address

IP Address Range (5 IPs needed) -


☐ Please ensure that the entered IP address range does not conflict with any reserved IPs (e.g. DHCP IP Pool) in your network.

15. After the deployment begins it will take you back to the main dashboard and under the Prism Central widget you will see the deployment activity.

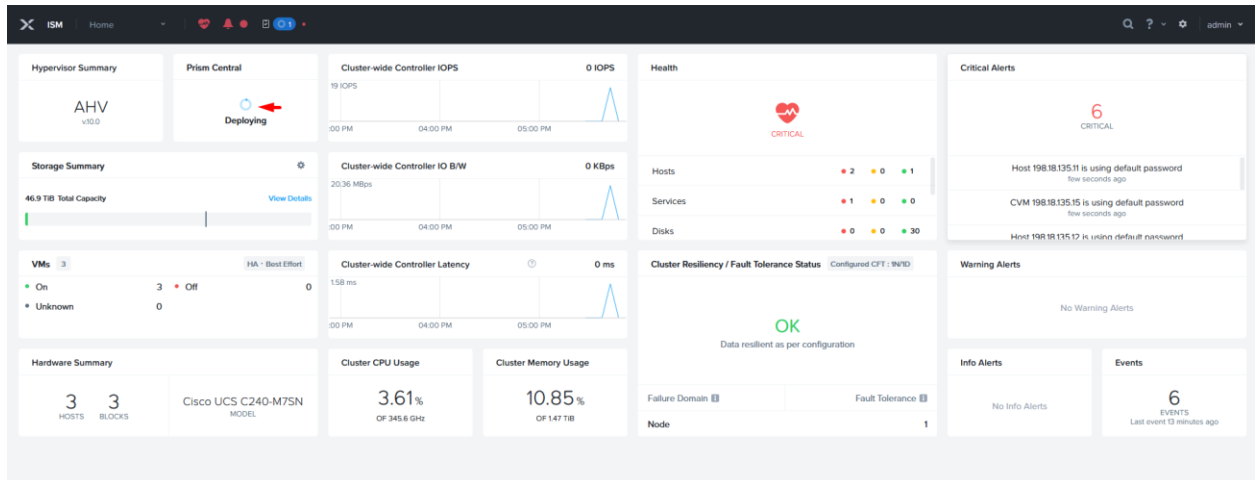


16. Once Prism Central deployment is completed, use a web browser to connect to the virtual IP assigned (198.18.135.4) and change the default


- First time logging in the credentials are:
 - Username = admin
 - Password= Nutanix/4u

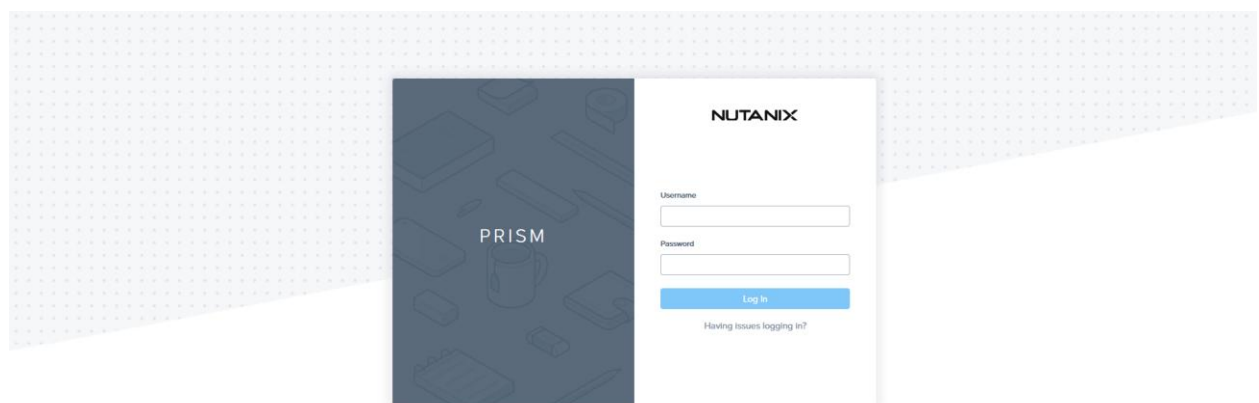


- New password **C1sco12345!**

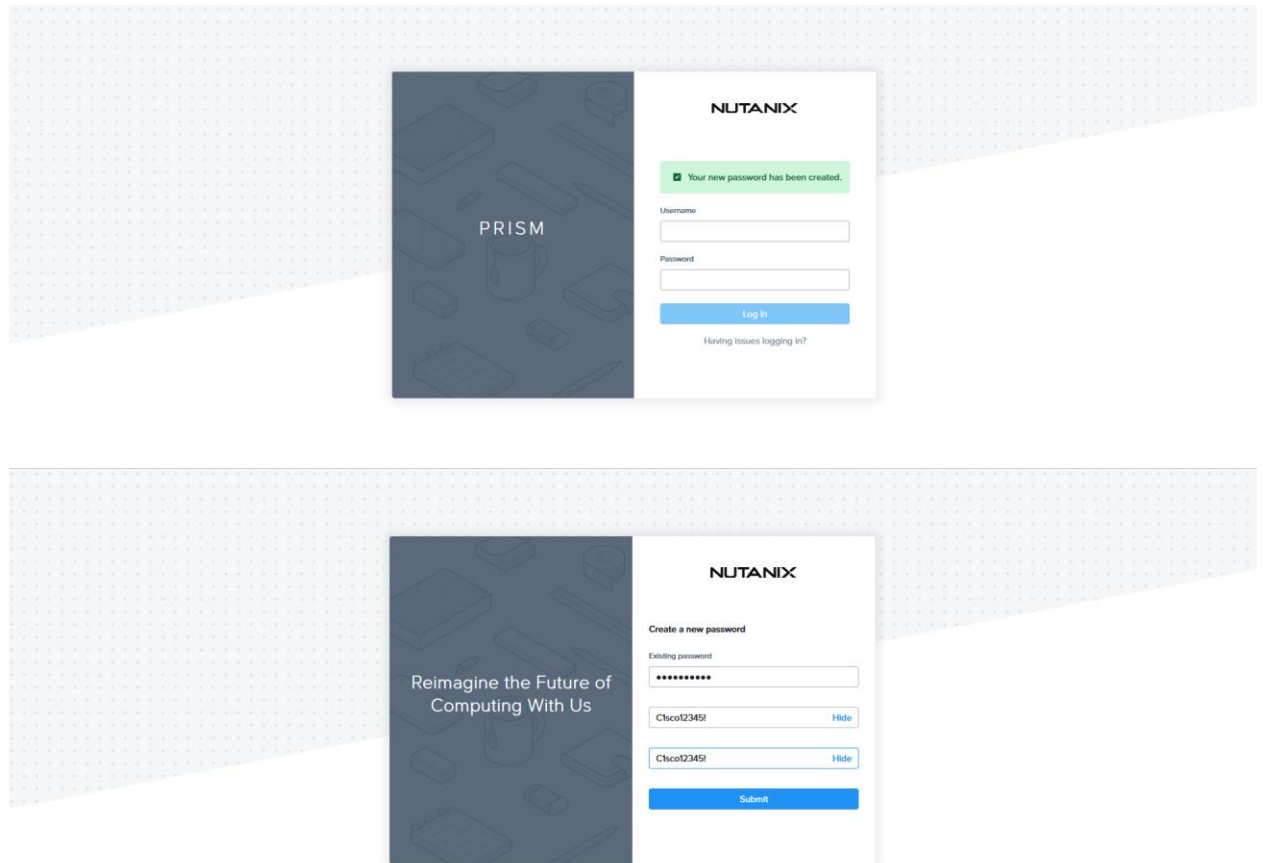

17. After the password is changed continue with the EULA

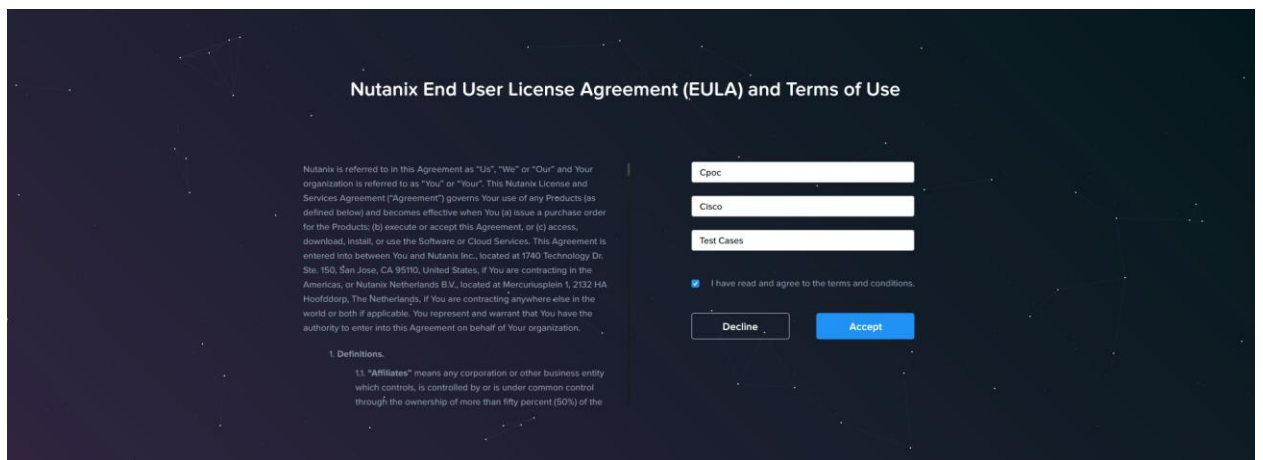


18. Keep Pulse by default and click Continue

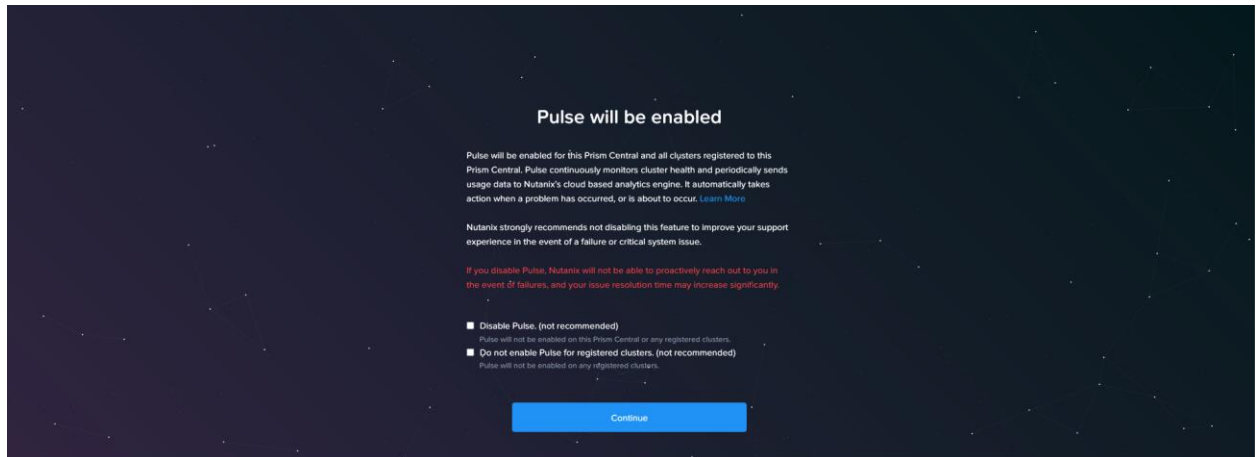


19. At the top select **Infrastructure** from the drop-down, then click on **Prism Central Settings**, select **Prism Central Management** and click edit


- Cluster name = PC-VIP-ISM
- Virtual IP = 198.18.135.5
- Click Update

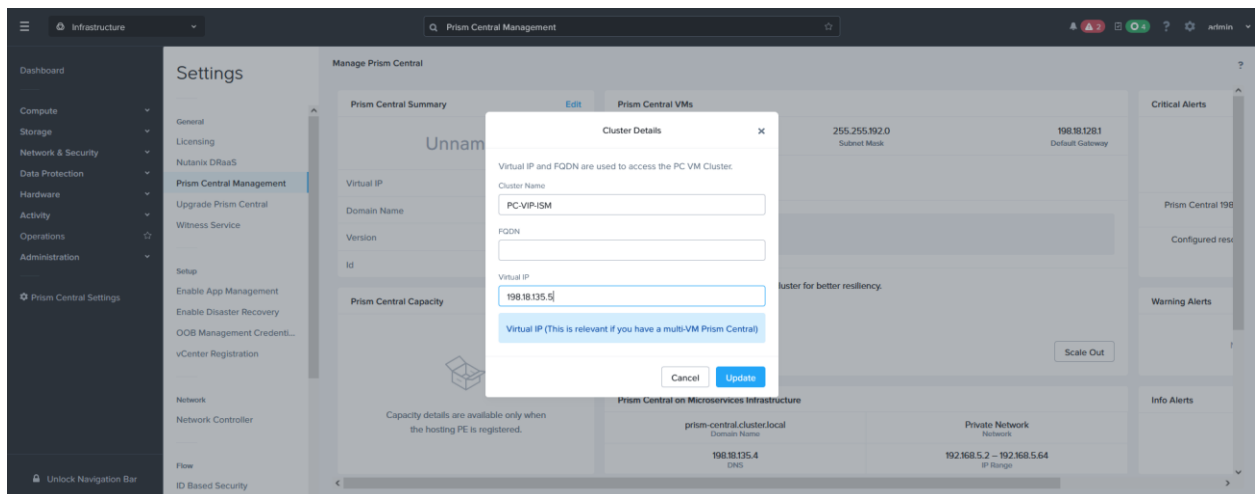


20. From the drop-down menu select **Admin Center** then click Marketplace and click **Enable Marketplace**

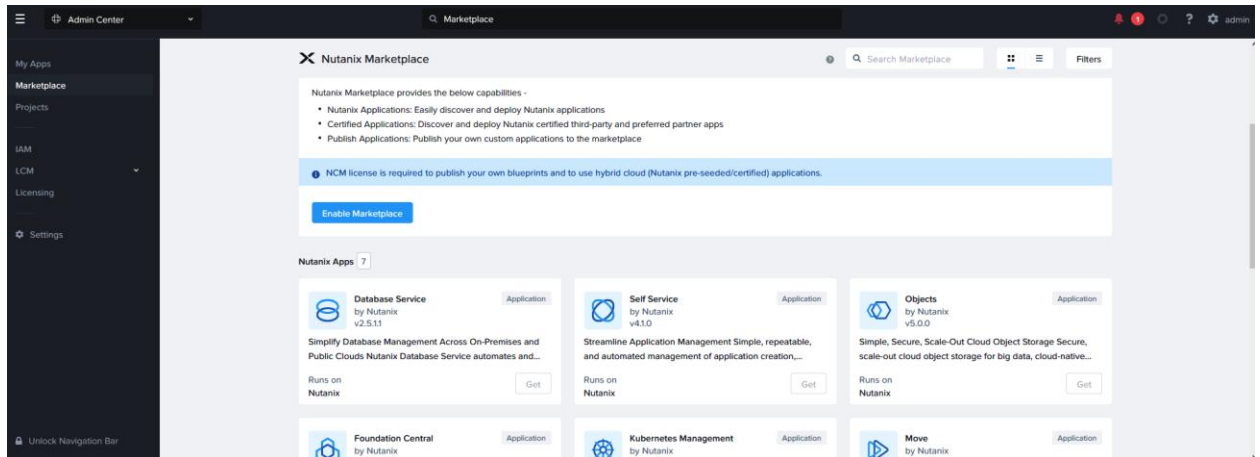


21. Once the Marketplace has been enabled, click **"Get"** on **Foundation Central** then click **Deploy**

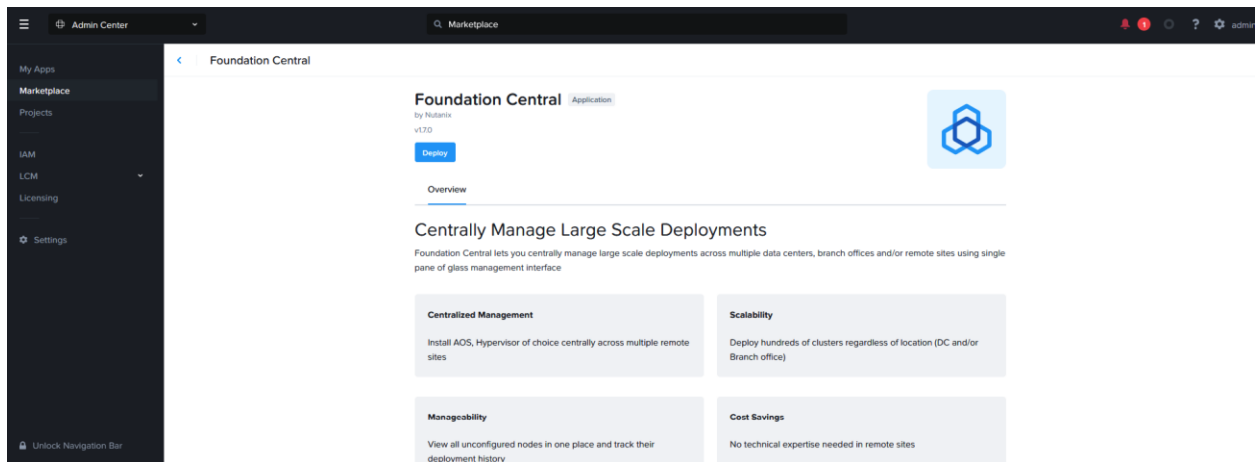

22. While the Foundation Central app is being deployed on Prism Central, return to the Prism Element main dashboard, and confirm then click **"Register or create a new "**

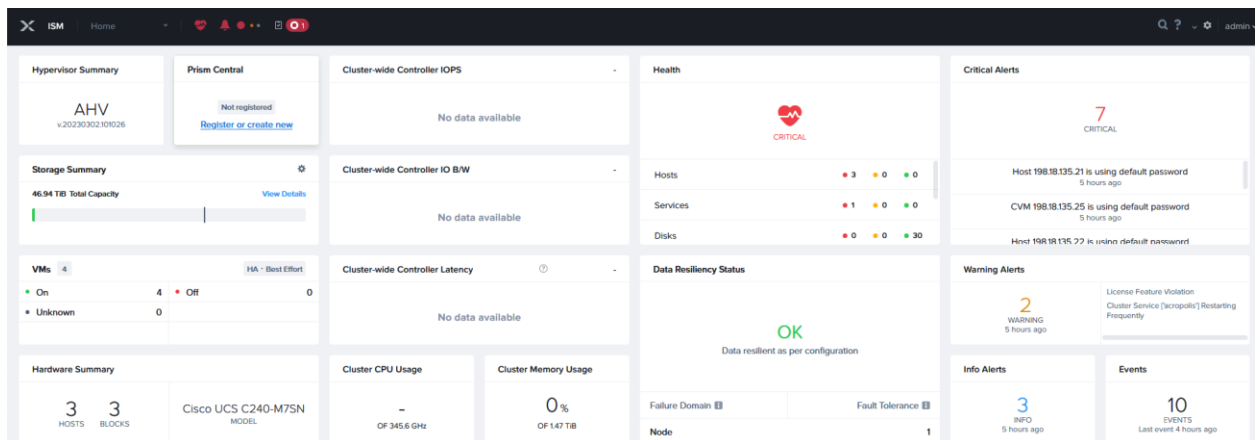


23. Now click connect and hit next

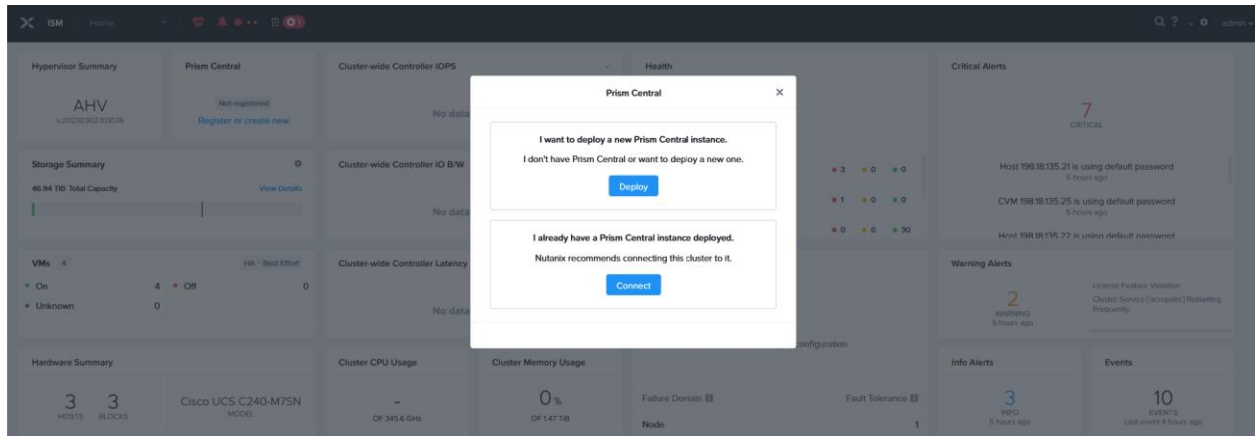


24. On the Prism Central configuration add

- Prism Central IP/FQDN = 198.18.135.5
- Username = admin
- Password = C1sco12345!
- Click Connect

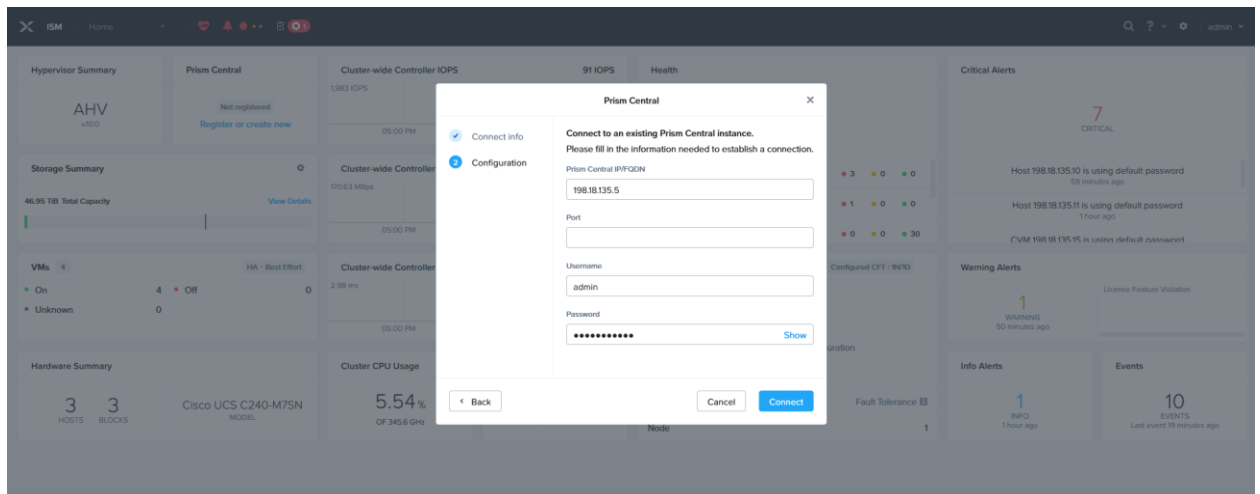


25. The ISM cluster is now registered with and connected to the new Prism Central (PC 2024.3.1)

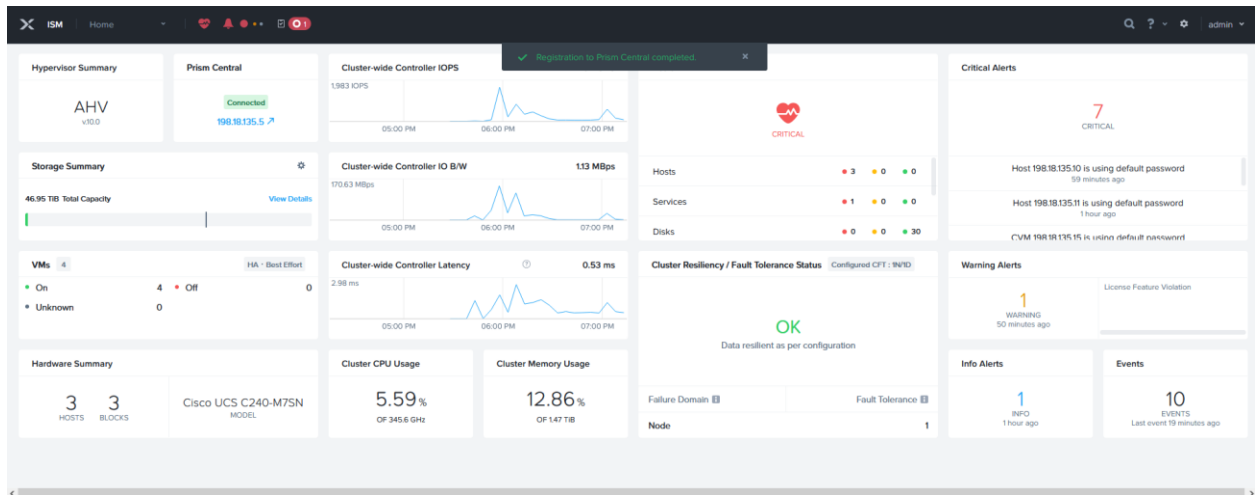


Scenario 5. Nutanix Cluster Expansion


1. Return to the new Prism Central (add IP info here to make sure users will go to PC 2024 and not PC 2022) and click on View in my Apps

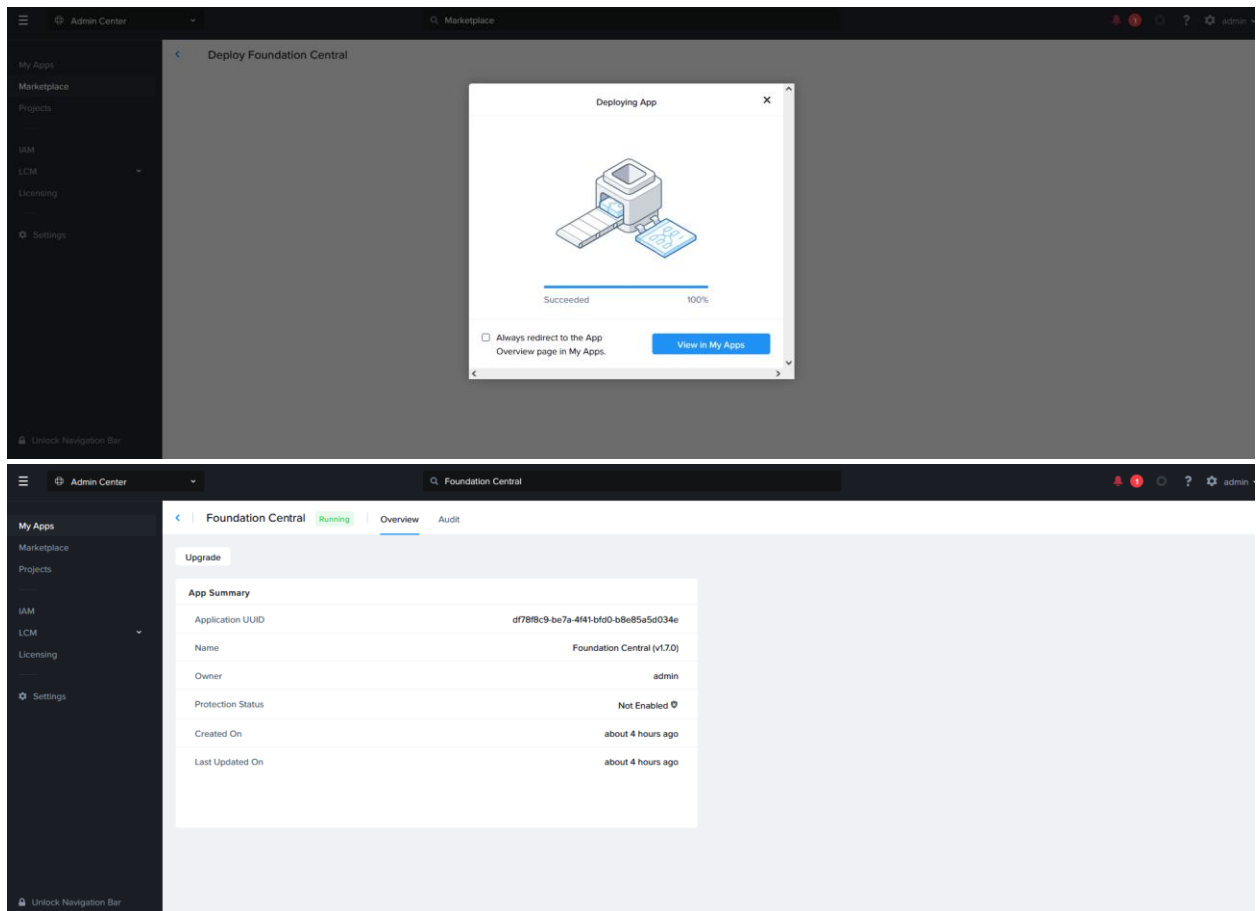


2. Once the App is on running state from **Admin Center > LCM > Prism Central Cluster**

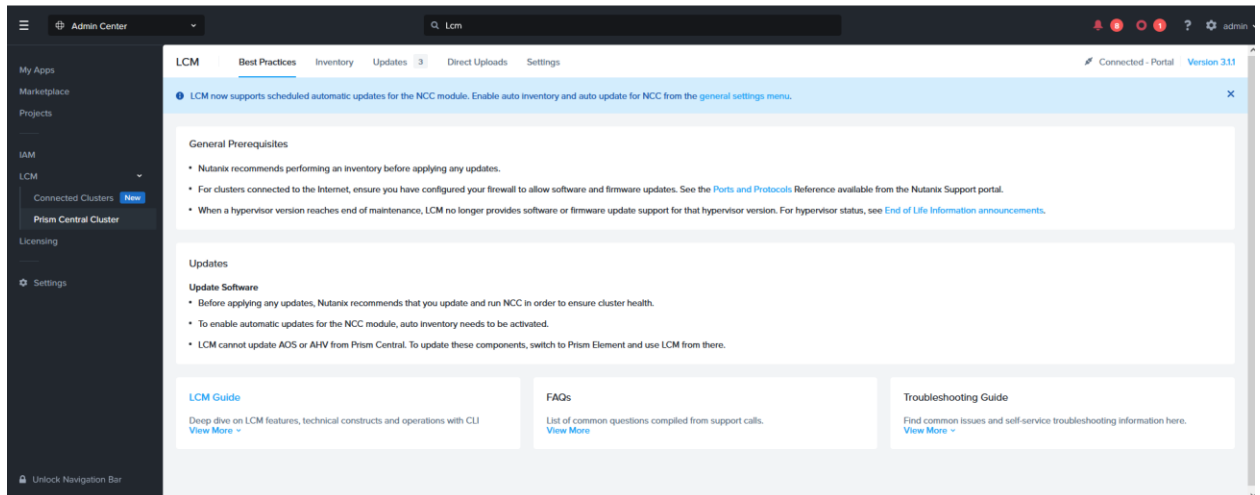


3. Click **inventory** and click **Perform Inventory** > **Proceed**

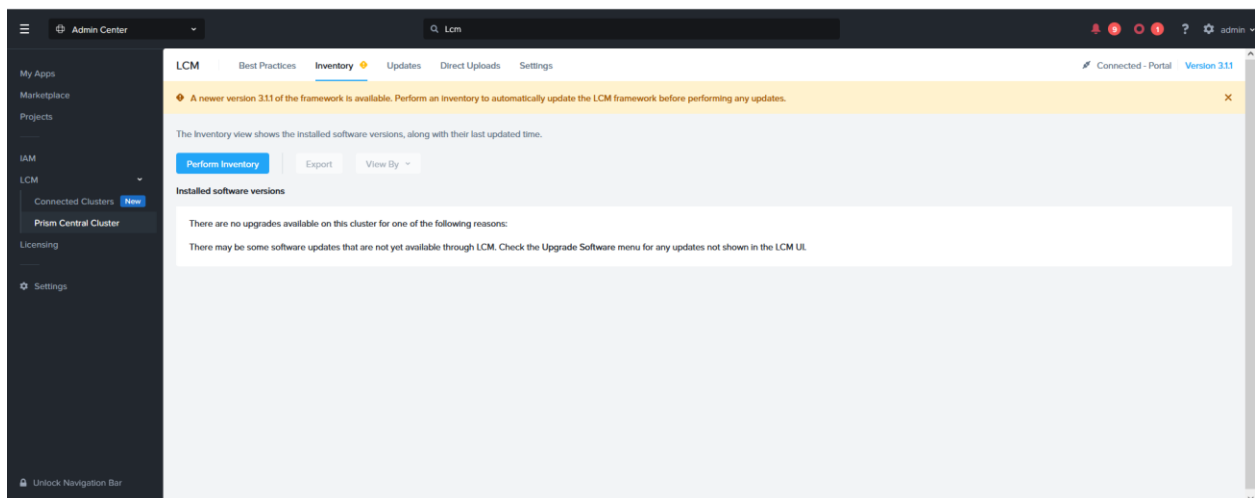

4. Wait until the Inventory is complete, then press **Return to Inventory**

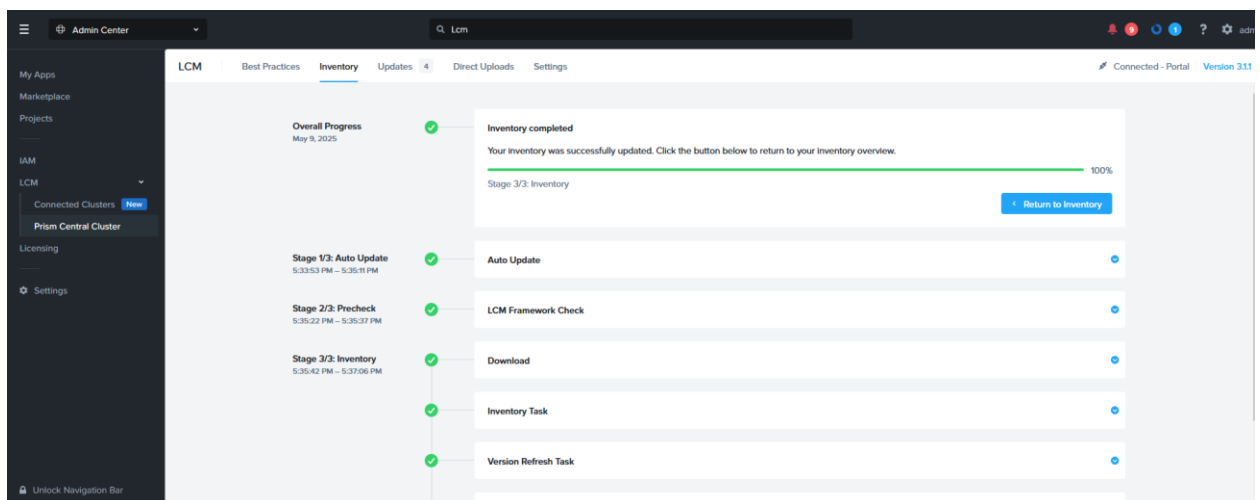


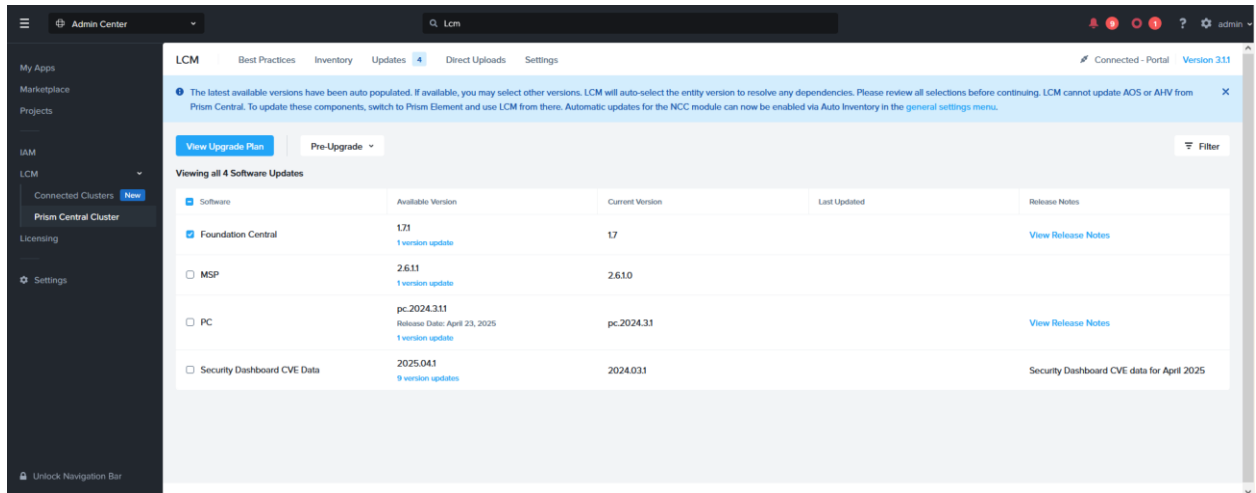5. Click Updates, check the box of Foundation Central then click **View Upgrade Plan**

The screenshot shows the LCM Updates page. The left sidebar contains navigation links: My Apps, Marketplace, Projects, IAM, LCM (selected), Connected Clusters, Prism Central Cluster, Licensing, Settings, and Unlock Navigation Bar. The main content area has tabs: LCM, Best Practices, Inventory, Updates (selected), Direct Uploads, and Settings. A notification at the top states: "The latest available versions have been auto populated. If available, you may select other versions. LCM will auto-select the entity version to resolve any dependencies. Please review all selections before continuing. LCM cannot update AOS or AI/IV from Prism Central. To update these components, switch to Prism Element and use LCM from there. Automatic updates for the NCC module can now be enabled via Auto Inventory in the general settings menu." Below this, there are buttons for "View Upgrade Plan" and "Pre-Upgrade". A table titled "Viewing all 4 Software Updates" lists the following:

Software	Available Version	Current Version	Last Updated	Release Notes
☒ Foundation Central	171 1 version update	17		View Release Notes
☐ MSP	2.6.11 1 version update	2.6.10		
☐ PC	pc.2024.3.11 Release Date: April 23, 2025 1 version update	pc.2024.3.1		View Release Notes
☐ Security Dashboard CVE Data	2025.04.1 9 version updates	2024.03.1		Security Dashboard CVE data for April 2025


6. Click Apply 1 Update and wait until the Foundation Central update is complete

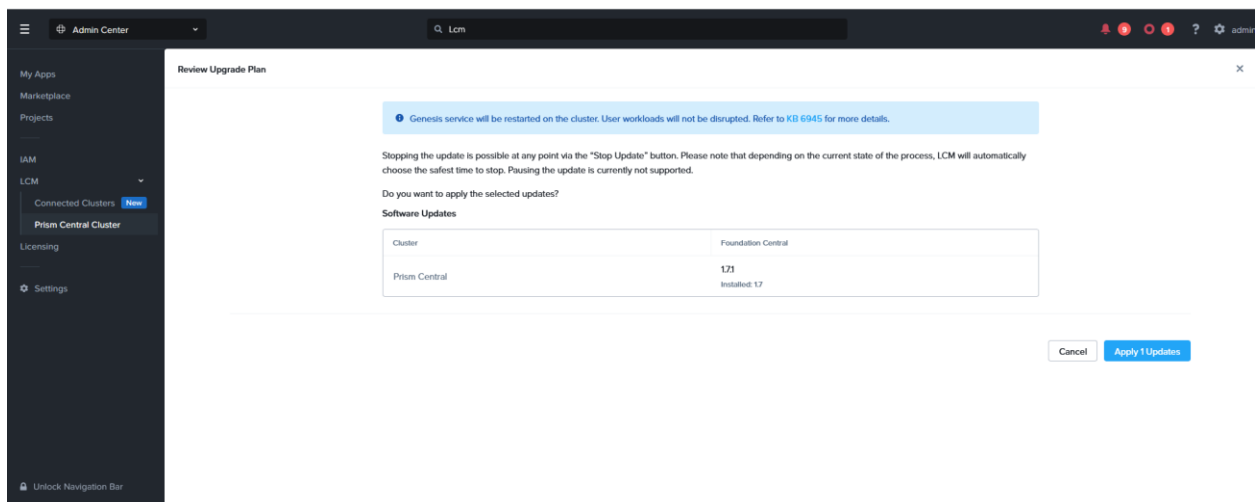

The screenshot shows the "Review Upgrade Plan" dialog box. It contains a notification: "Genesis service will be restarted on the cluster. User workloads will not be disrupted. Refer to KB 6945 for more details." Below this, a message states: "Stopping the update is possible at any point via the 'Stop Update' button. Please note that depending on the current state of the process, LCM will automatically choose the safest time to stop. Pausing the update is currently not supported." A question asks: "Do you want to apply the selected updates?" Below this, a table titled "Software Updates" shows the following:

Cluster	Foundation Central
Prism Central	171 Installed: 17

At the bottom right, there are "Cancel" and "Apply 1 Updates" buttons.

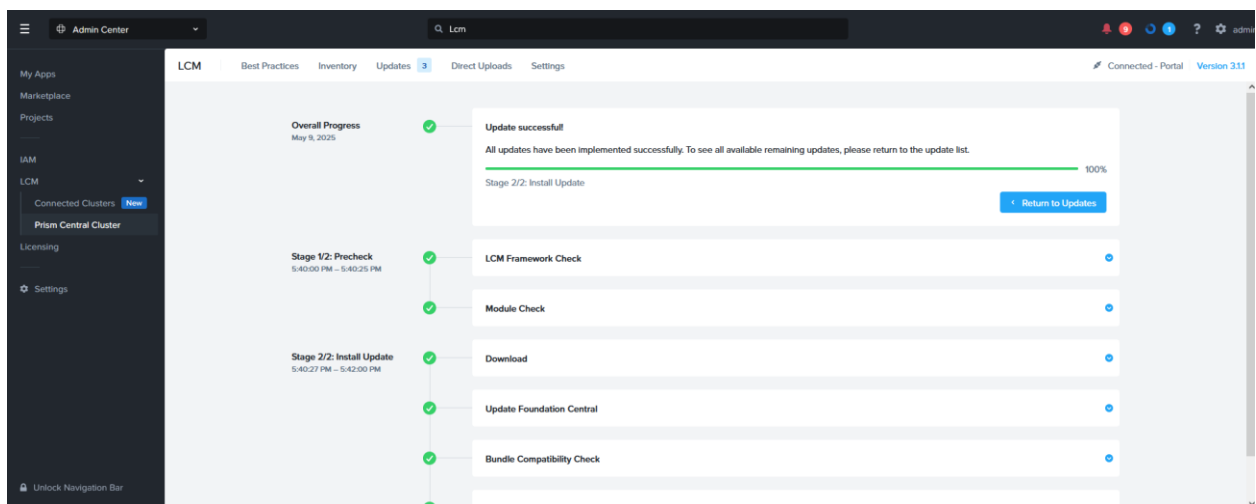


The screenshot shows the LCM Updates page with the "Updates" tab selected. The left sidebar is the same as in the previous screenshot. The main content area shows the "Overall Progress" section with a green checkmark and the date "May 8, 2025". A progress bar indicates 100% completion. Below this, a list of stages and tasks is shown:

- Stage 1/2: Precheck (5:40:00 PM - 5:40:25 PM)
 - LCM Framework Check (completed)
 - Module Check (completed)
- Stage 2/2: Install Update (5:40:27 PM - 5:42:00 PM)
 - Download (completed)
 - Update Foundation Central (completed)
 - Bundle Compatibility Check (completed)
 - Module Compatibility Check (completed)


A "Return to Updates" button is visible at the bottom right of the progress section.

- Once the Foundation Central upgrade is complete, from the drop-down menu select **Foundation Central**


If Foundation Central does not load, just Clear the cookies and site data

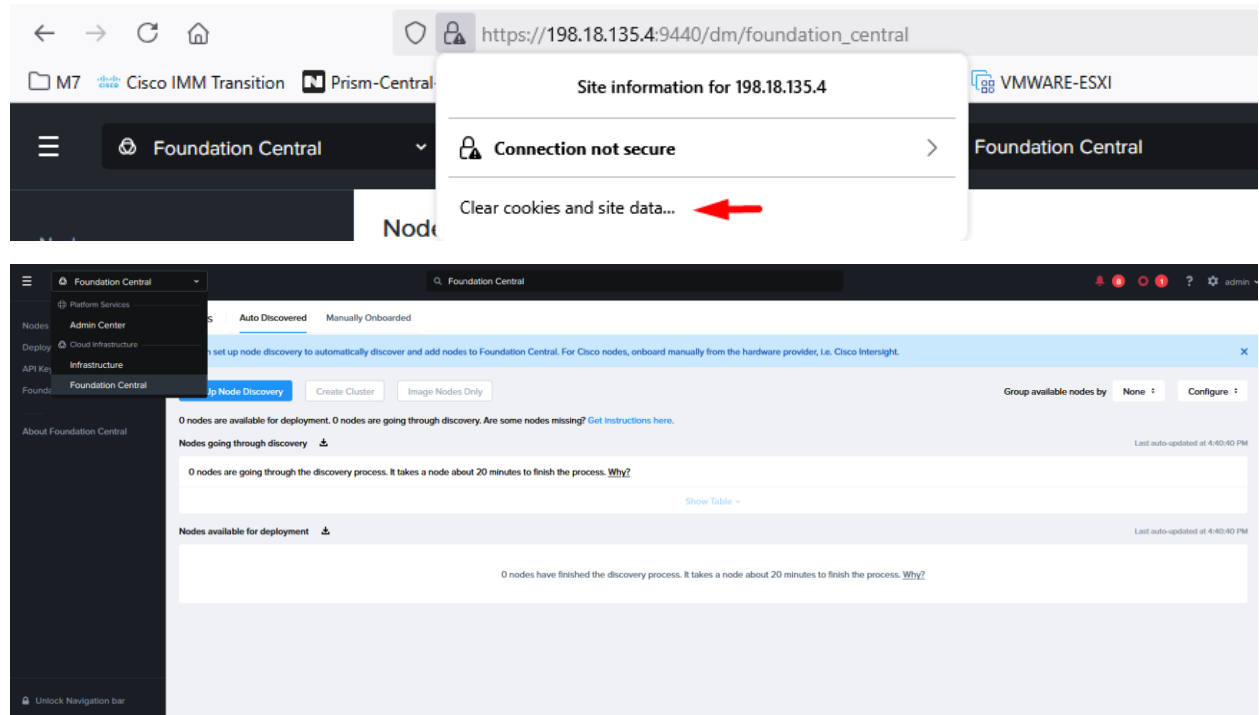

- Confirm the Foundation Central by clicking on the left side About Foundation Central

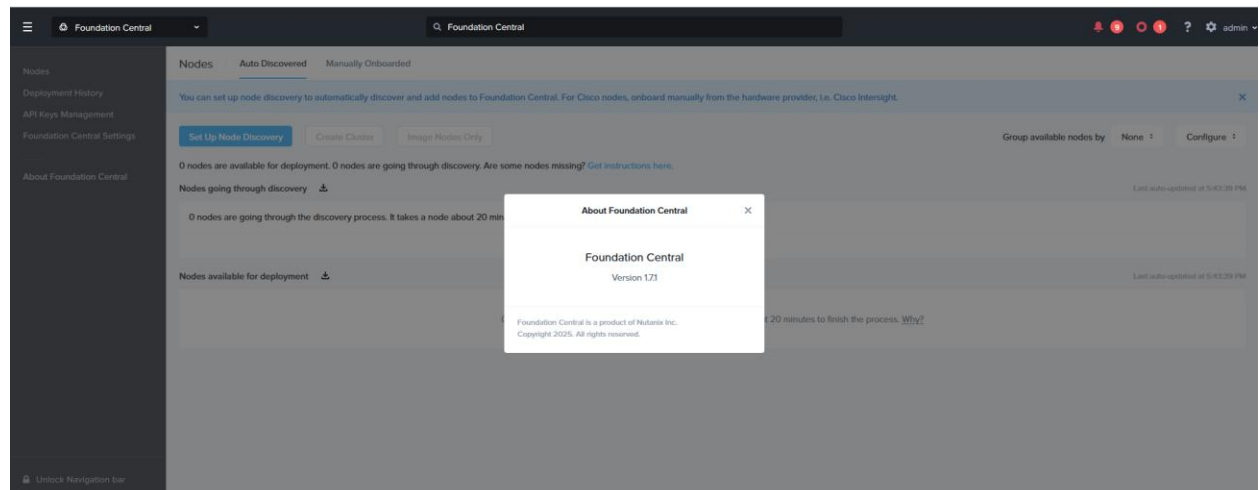


- Then under **Manually Onboarded**, click **Onboard Nodes**

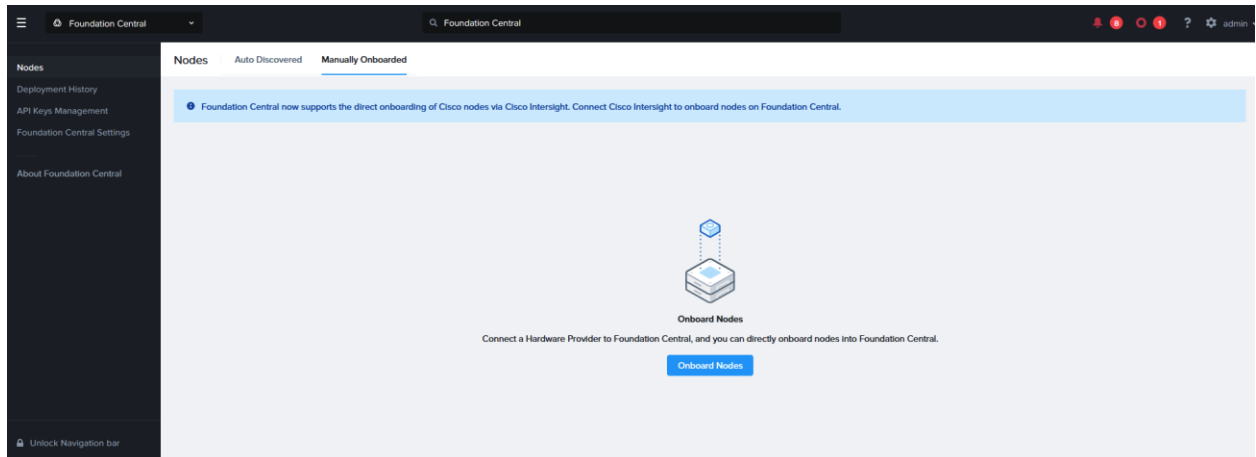

10. Connect Hardware Provider

11. Fill in the required information

- Connection name= Intersight
- Hardware Provider = Cisco Intersight
- Intersight Deployment Type = SaaS
- Intersight Region & URL = North America
- Intersight API Key = <copy the one generated previously>
- Secret Key= <copy the one generated previously and saved to the desktop>

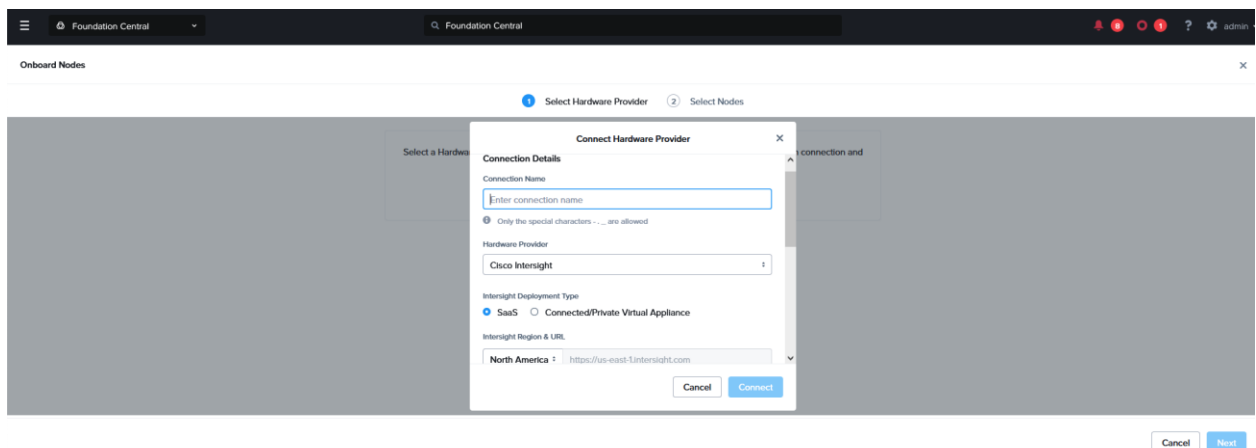

12. Select Intersight Standalone Mode and click Next

Foundation Central

Foundation Central

admin

Onboard Nodes

1 Select Hardware Provider

2 Select Nodes

Select a Hardware Provider to onboard nodes to Foundation Central. Currently, only Cisco Intersight is supported and only a single connection is allowed at a time. To add a new connection, remove the existing one.

Connection Name	Hardware Provider	URL
intersight	Cisco Intersight	https://us-east-1.intersight.com

Connection has been saved.

Node Management Mode
Select the management mode. In the next step, you will view the nodes based on the selected mode.

☐ Intersight Managed Mode

☒ Intersight Standalone Mode

Cancel

Next

13. Select the node and click Onboard

Foundation Central

Foundation Central

admin

Onboard Nodes

1 Select Hardware Provider

2 Select Nodes

Connection Name: intersight | Management Mode: Intersight Standalone Mode

You are viewing Cisco Intersight nodes without any server profile attached. To update the nodes list, click Refresh.

Type in a query

Modify Filters

1 selected out of 1 Cisco Node

Node Serial	Name	Model	Block Serial	Domain	Classification	Intersight Organizations	Intersight Tags	Memory (GB)	CPU (Cores)
☒ WZP28389L1	C240-WZP28389L1	UCSC-C240-M7SN	WZP28389L1	-	Nutanix	ISM	-	512	32

Back

Cancel

Onboard

14. Click "Prepare Nodes for Cluster"

Foundation Central

Foundation Central

admin

Nodes

Deployment History

API Keys Management

Foundation Central Settings

About Foundation Central

Nodes

Auto Discovered

Manually Onboarded

Onboard Nodes

Prepare Nodes for Cluster

Create Cluster

Actions

View by

Group by Management Mode

Group By: Management Mode

Modify Filters


Viewing 1 grouped out of 1 Cisco Node

Management Mode: Intersight Standalone


Node Serial	Name	Node Status	Model	Domain	Intersight Organizations	Intersight Tags	Classification	Onboarded On	Last Refreshed
☐ WZP28389L1	C240-WZP28389L1	Onboarded	UCSC-C240-M7SN	-	ISM	-	Nutanix	Apr 10, 2025, 01:26 PM	Apr 10, 2025, 01:26 PM

Unlock Navigation bar


15. Select the existing ISM cluster and click Next

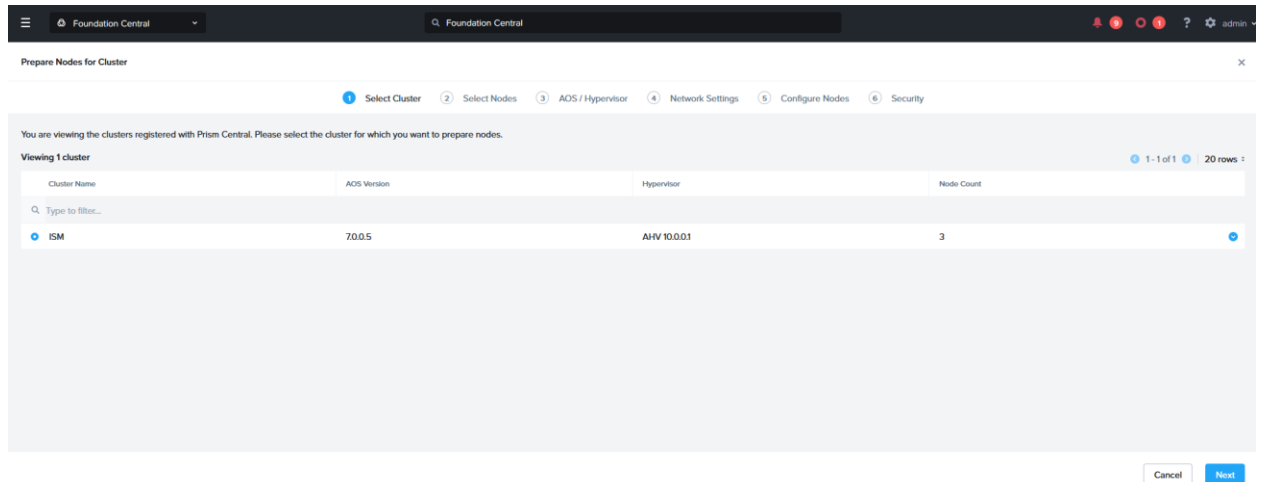


16. Select the node that will be added to the cluster and click Next

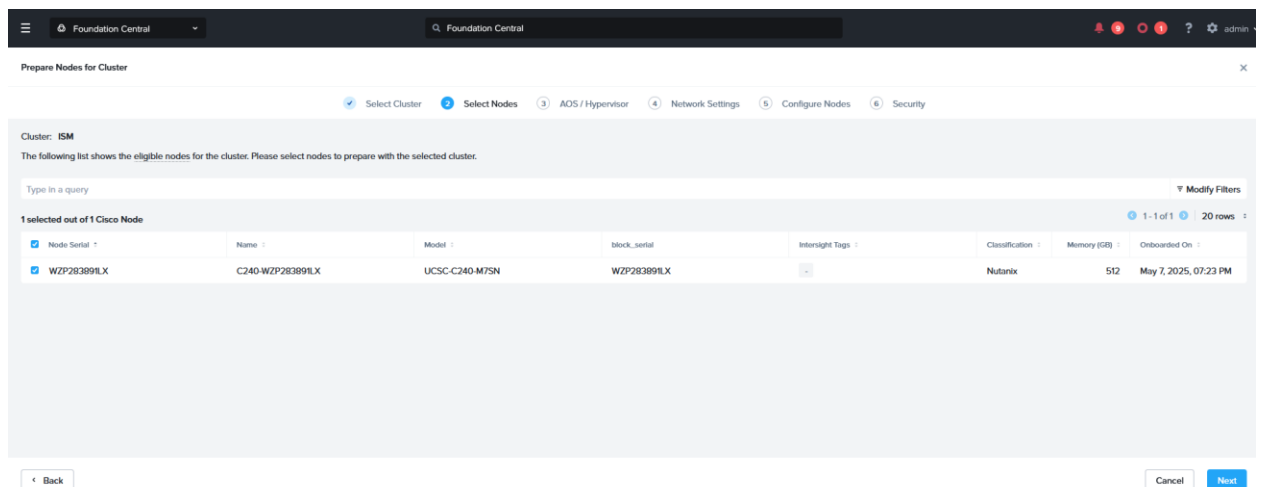

17. Return to Cisco IMM tool and copy the AOS and AHV URLs

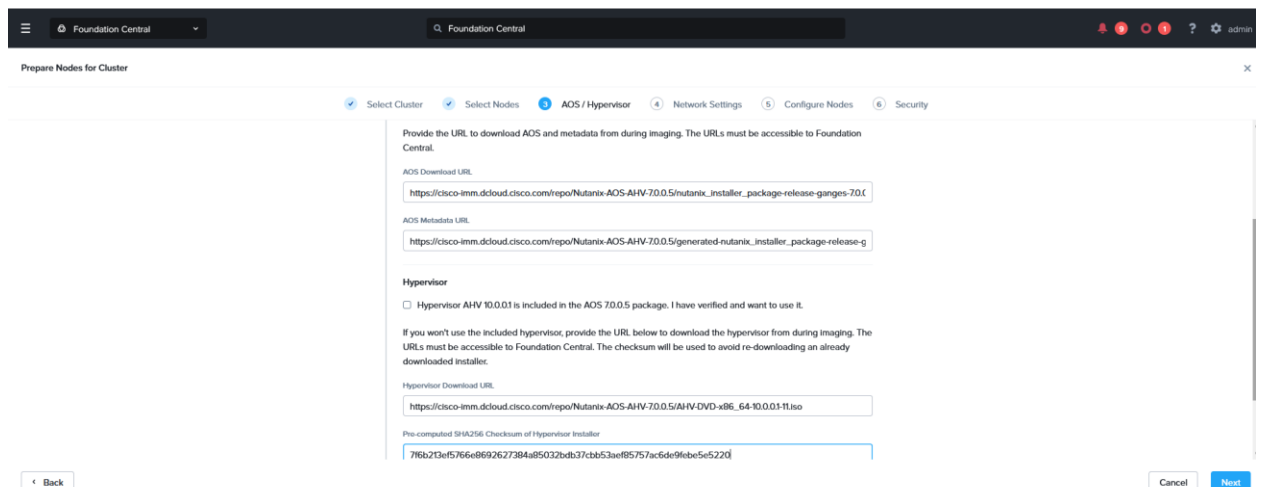


18. For the AHV checksum, the Cisco IMM tool can be used to generate the SHA256 checksum.

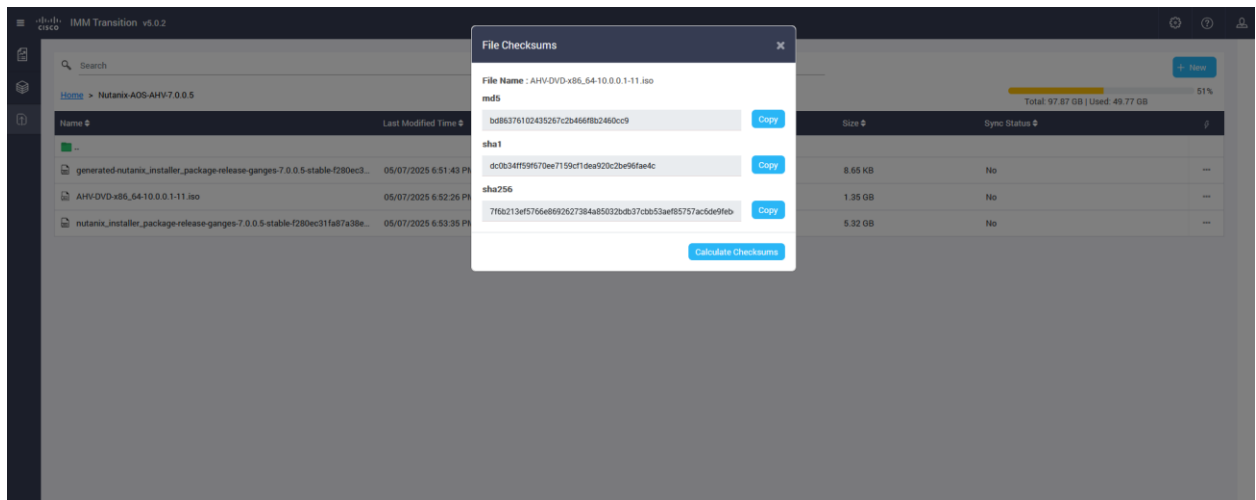

19. Host and CVM Network

- Gateway= 198.18.128.1
- Netmask= 255.255.192.0 /18
- Host and CVM VLAN = 10
- Click Next

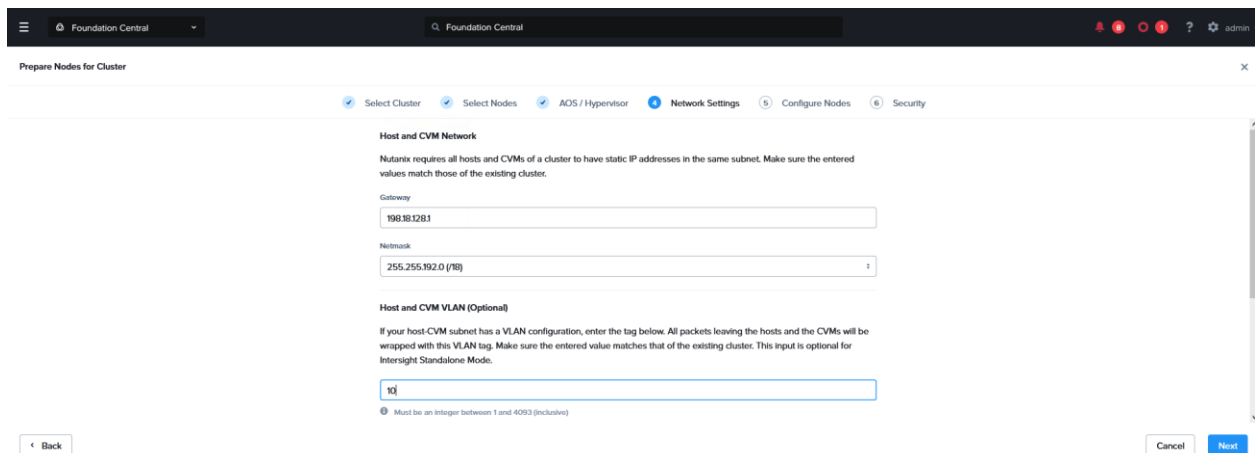

20. Fill in the IP range for the hypervisor and CVM

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** Security

1 Nodes

Node Serial	Name	Hypervisor IP Set Range	CVM IP Set Range	Hypervisor Hostname Set Range
WZP283899L1	C240-WZP283899L1	198.18.135.23	198.18.135.27	c240-node-4

[Back](#) [Cancel](#) [Next](#)

21. Generate a Foundation Central API key by clicking the “+ Generate New Key” . Provide an alias and click Done. From the drop-down menu select the alias and click Submit

Foundation Central

Prepare Nodes for Cluster

Select Cluster Select Nodes AOS / Hypervisor Network Settings **Configure Nodes** **Security**

Foundation Central API Key

Foundation Central provides an API key to authenticate the remote nodes. It is recommended that a distinct API key be created for each remote site. You can create a new key or select from the existing ones.

Foundation Central API Key [+ Generate New Key](#)

ISM

[Back](#) [Cancel](#) [Submit](#)

22. The node preparation process begins

Foundation Central

Deployment History

It may take up to 15 minutes for a deployment progress to start being reported. [Why?](#)

Viewing 1 deployment Show Only Non-archived

Node Preparation for Cluster "ISM" Deployment in progress Start Date and Time: 5/9/2025, 05:50 PM [Abort](#)

Phase 1A: Node Preparation 6% 1 node in progress Phase 1B: Node Imaging 0% Not started

Cluster Details

Redundancy Factor	Host CVM Subnet	CVM NTP Servers	AOS Installer URL
2	198.18.128.1 / 255.255.192.0	198.18.128.1	https://cisco-imm.dcloud.cisco.com/repos/Nutanix-AOS-AH-V-7.0.0.5/nutanix_installer_package-release-ganges-7.0.0.5-stable-1280ec3f6d7a38eb0c07d70e4678b59d7e72ae-x86_64.tar.gz


Cluster External IP	Intersight Organization	CVM DNS Servers	Hypervisor Installer URL
198.18.135.2	Intersight-Nutanix	198.18.133.1	https://cisco-imm.dcloud.cisco.com/repos/Nutanix-AOS-AH-V-7.0.0.5/AH-V-DVD-x86_64-10.0.0.1-1.iso

Deployment UUID: d1c88d67-1927-48e3-7614-735621dc97e2 LACP: No


1 Node In This Deployment [View Original Configuration](#)

Node Serial	Block Serial	Position	Progress of Phase 1	Status	Host IP	CVM IP	Host Type	Host Name
WZP283899L1	WZP283899L1	A	2%	[NodeConfiguration] Performing node specific configuration in Intersight	198.18.135.23	198.18.135.27	AH-V	c240-node-4


[Show Less](#)



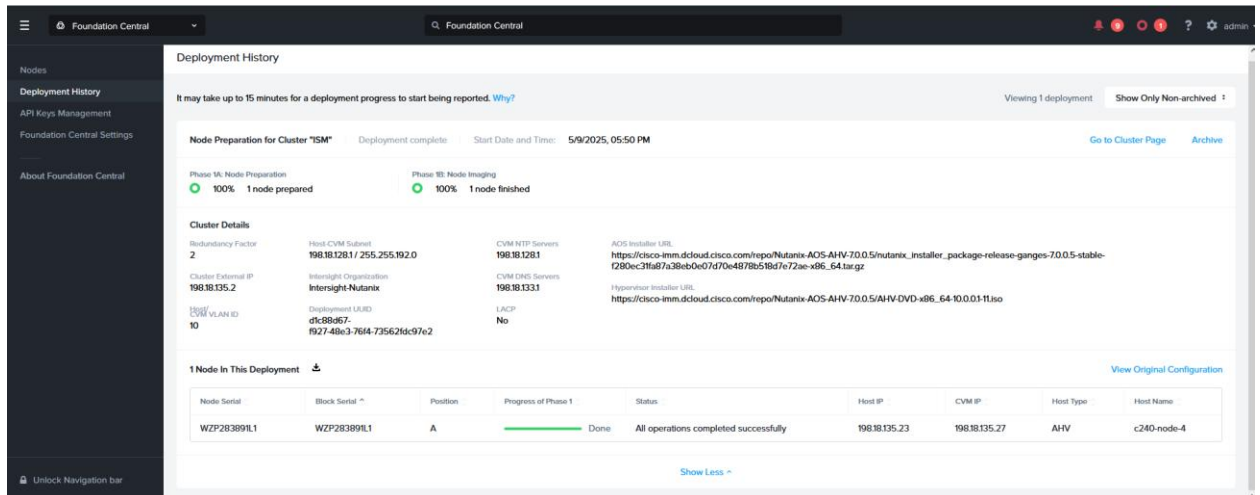


23. Once the node preparation is completed, click at the top drop-down menu and select infrastructure

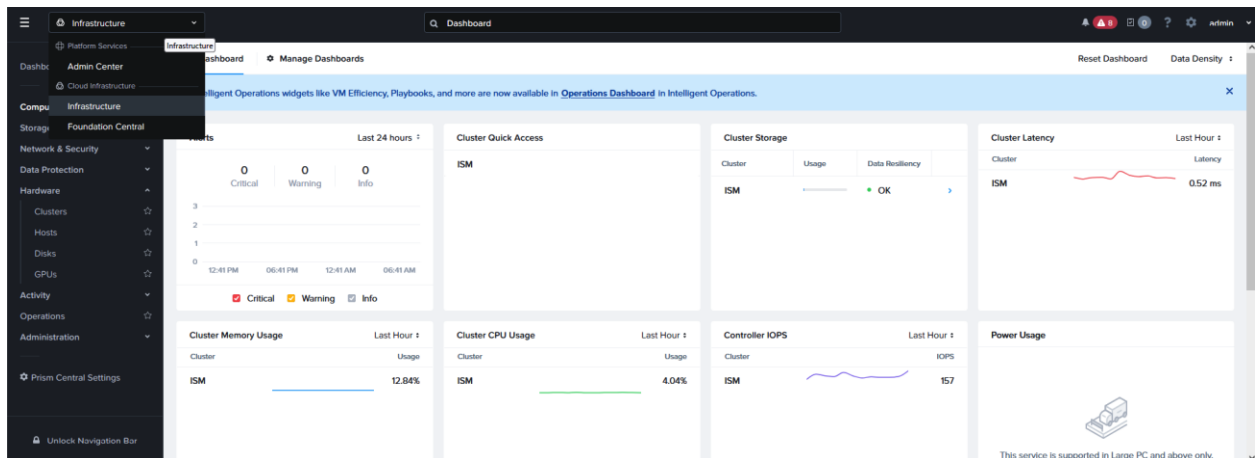

24. On the left menu, select Hardware > Clusters

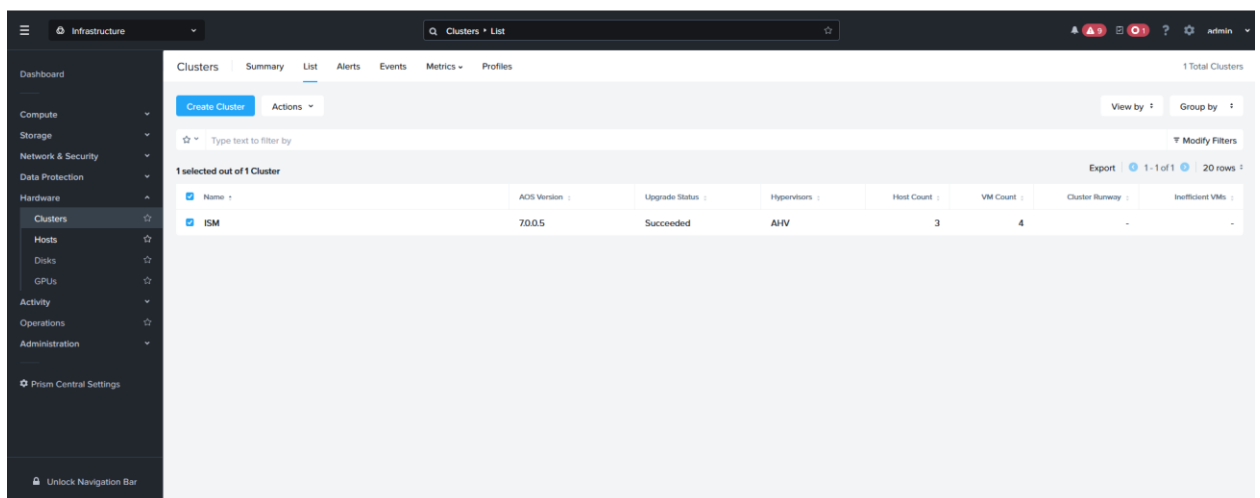

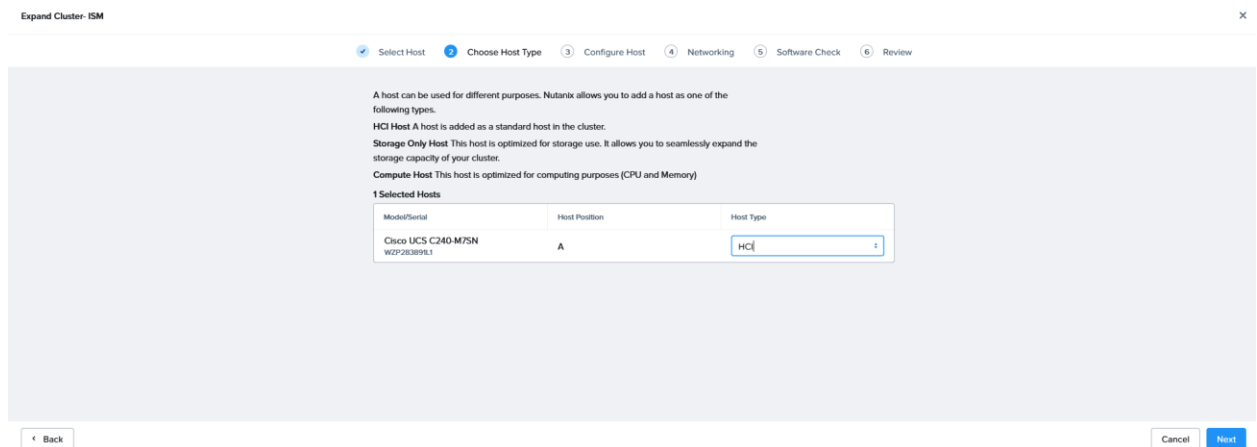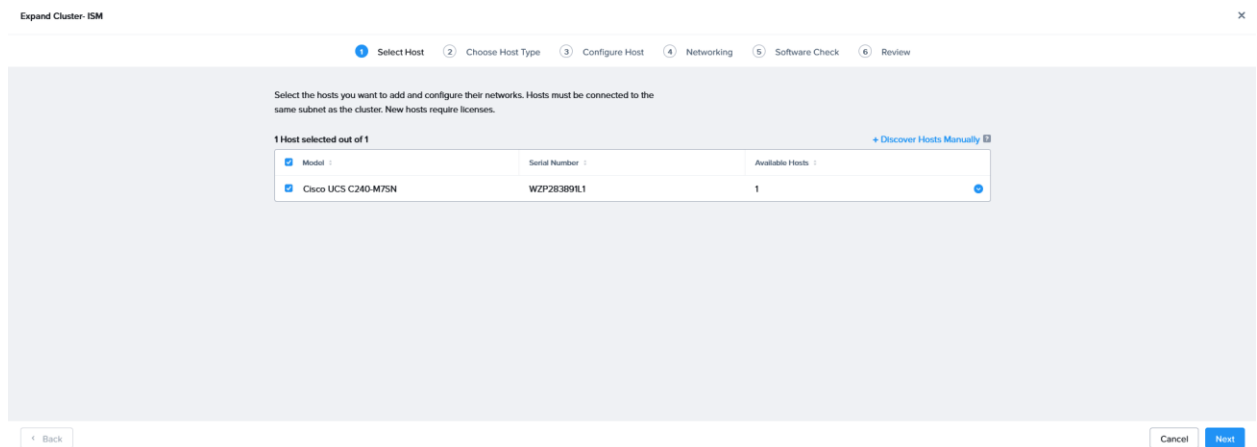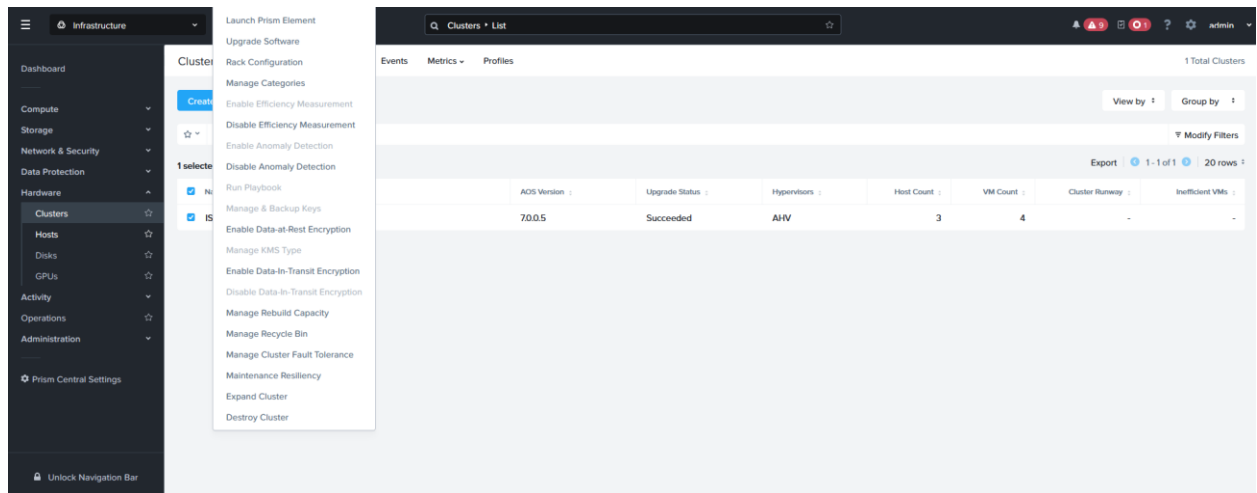

Expand Cluster-ISM

✔ Select Host

✔ Choose Host Type

Configure Host

4 Networking

5 Software Check

6 Review

Host name is required for all Hyper-V clusters, but can be skipped for AHV and ESXi clusters.
You can change a Host Name or IP by clicking on its table cell.

1 Selected Hosts

Model/Serial	Host Position	Name	CVM IPv4	CVM IPv6	Hypervisor IPv4	Hypervisor IPv6	IPMI IPv4	IPMI IPv6
Cisco UCS C240-M75N WZP2B389L1	A		198.18.135.27		198.18.135.23		198.18.143.2	

Back

CancelNext

29. On the networking step click on skip Networking

Expand Cluster-ISM

✔ Select Host

✔ Choose Host Type

✔ Configure Host

Networking

5 Software Check

6 Review

Select the appropriate active and backup uplinks for the hosts.

1 Selected Hosts

Model/Serial	Host Position	Active Uplink	Backup Uplink
Cisco UCS C240-M75N WZP2B389L1	A	Expand row to configure switches.	Expand row to configure switches.

Back

CancelSkip NetworkingNext

30. For the software check, let’ s wait for some time and then click next

Expand Cluster-ISM

✔ Select Host

✔ Choose Host Type

✔ Configure Host

✔ Networking

Software Check

6 Review

AOS and Hypervisor version on new hosts need to be the same as the cluster.
If AOS version is lower than that of the cluster's then a reimage is not required and an upgrade will happen instead.


1 Selected Hosts

Model/Serial	Host Position	Host Type	Hypervisor	AOS Version	Compatibility
Cisco UCS C240-M75N WZP2B389L1	A	HCI	AHV	7.0.0.5	✔ Compatible


Back

CancelNext



31. Under review step, click **Run Prechecks**, wait until it completes

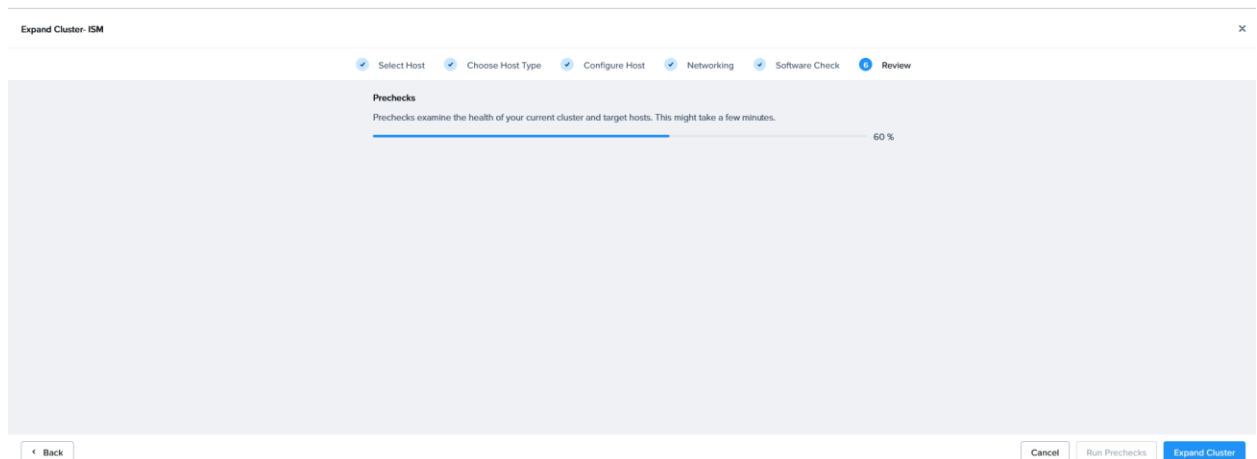


32. Once the precheck is completed, click on **Expand Cluster**

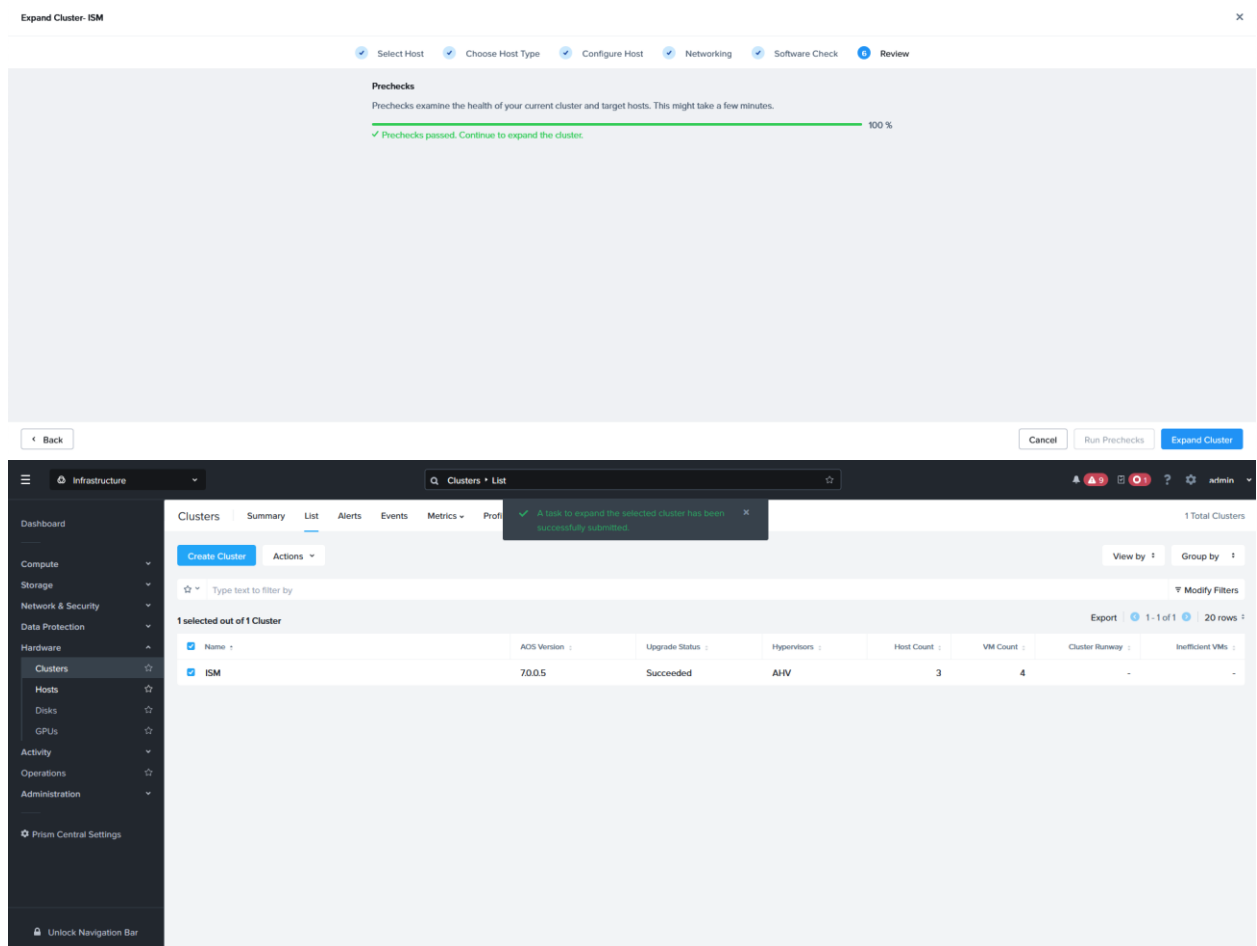


33. To review the progress of the cluster expansion, click task at the top right and click view all task

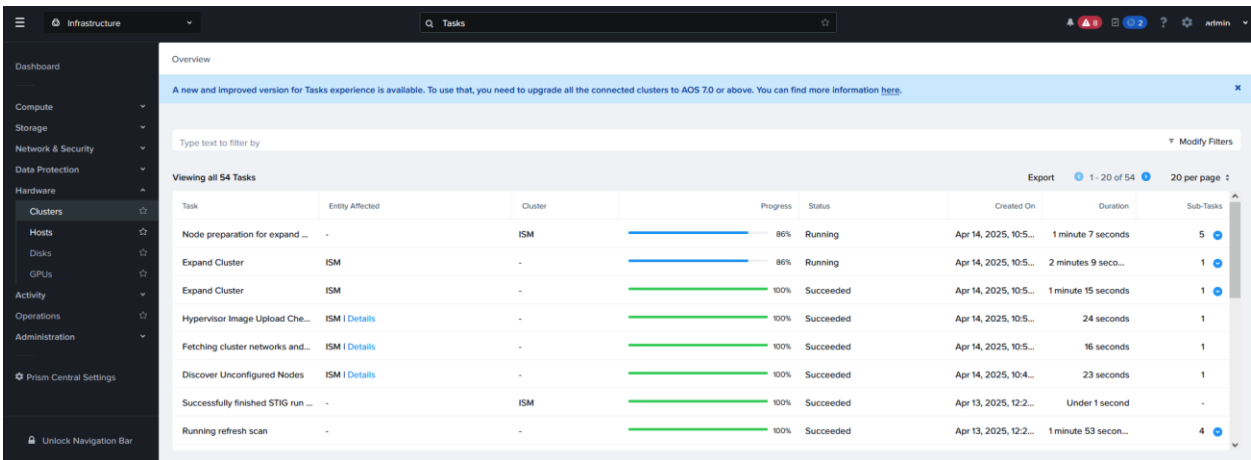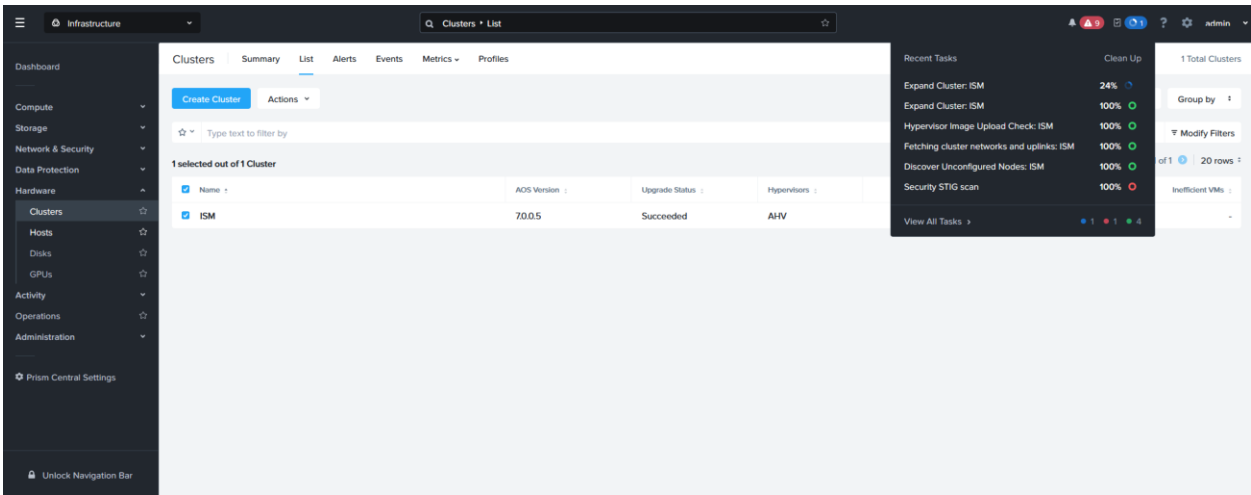


34. To confirm the new host has been added to the existing cluster, select Clusters on the left side

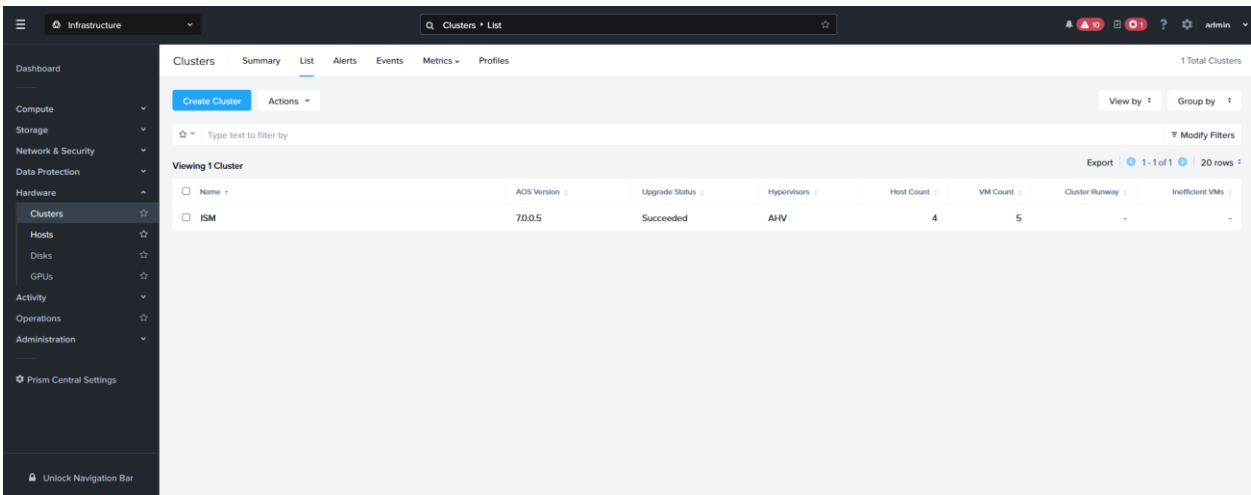


35. Return to Prism Element to review on the cluster main dashboard the Node count

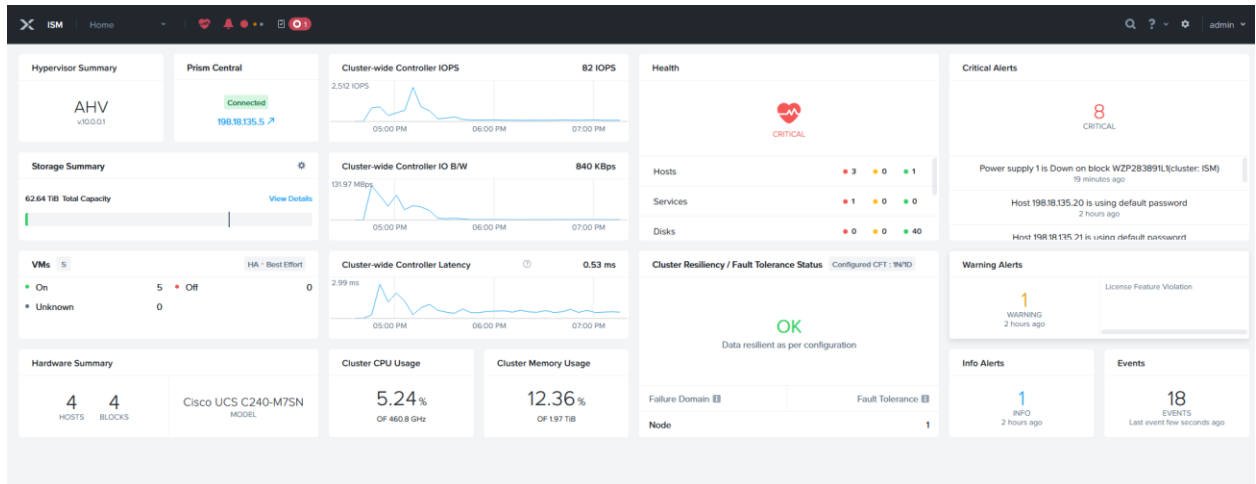


36. Click Home at the top and from the drop-down menu select LCM

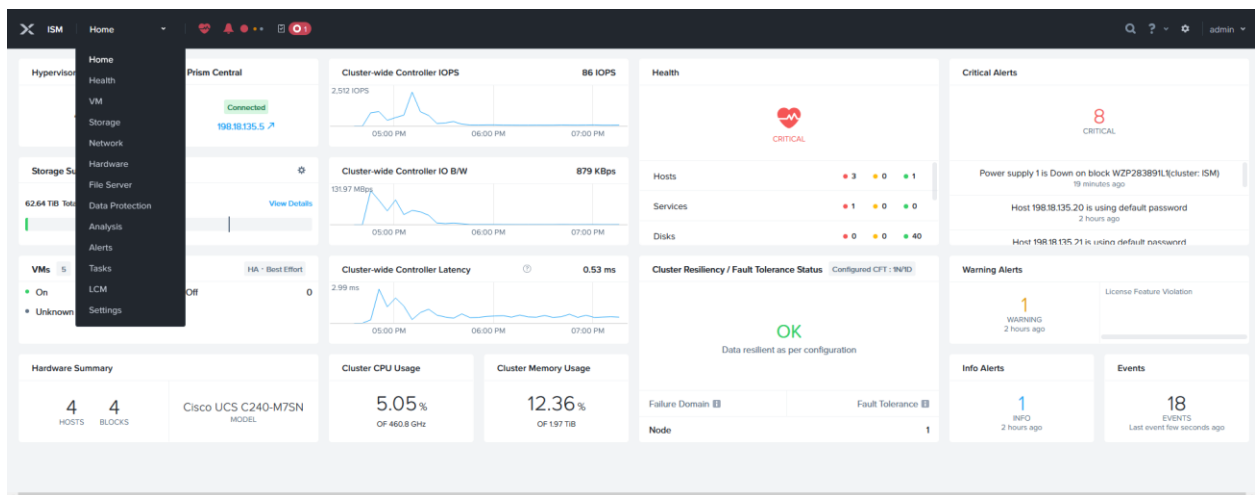


37. Select inventory and click Perform inventory

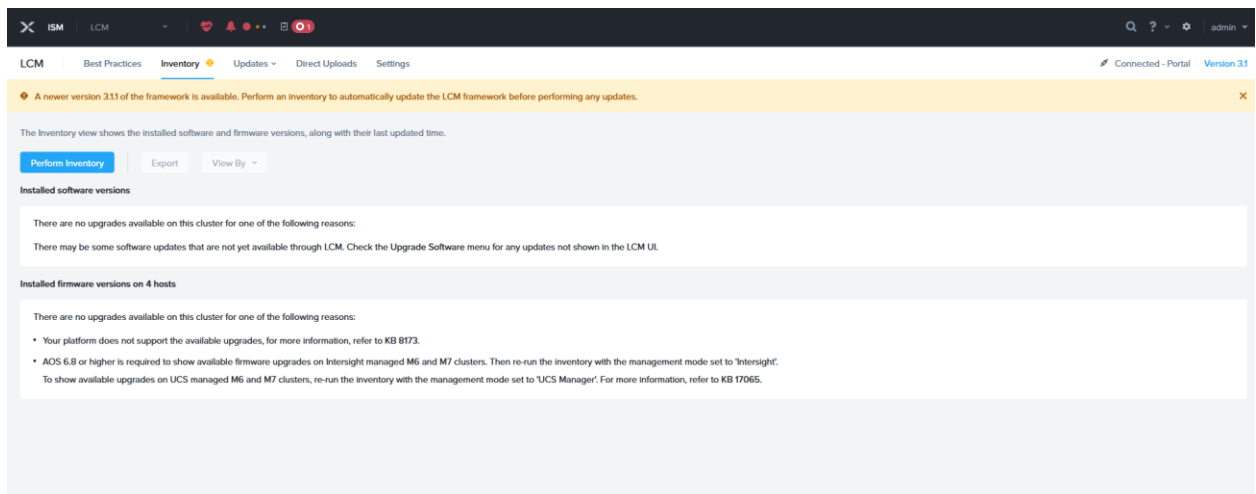


38. Click Proceed

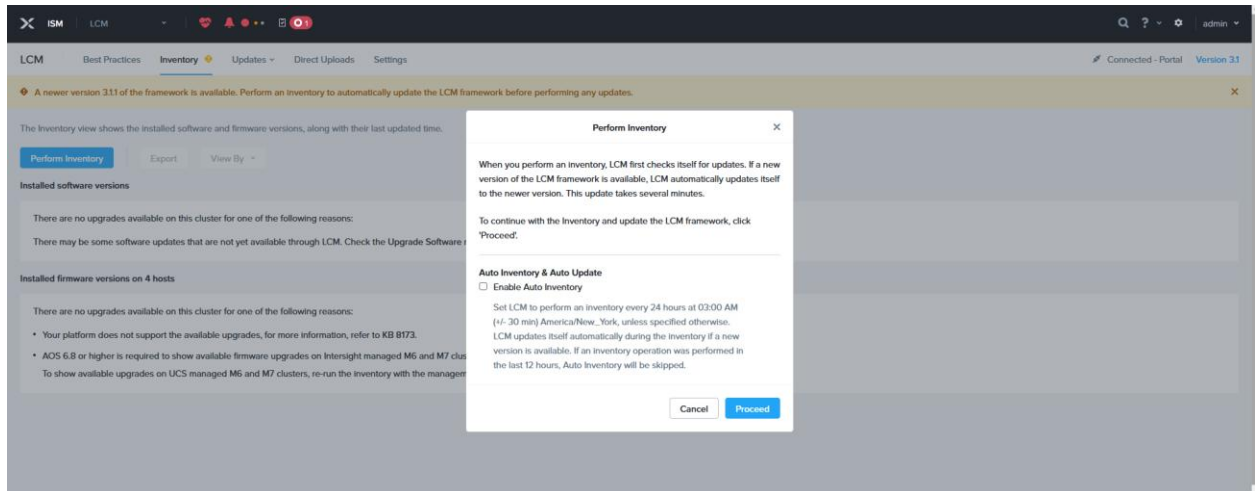


39. From the drop down select standalone Cisco IMC and click continue

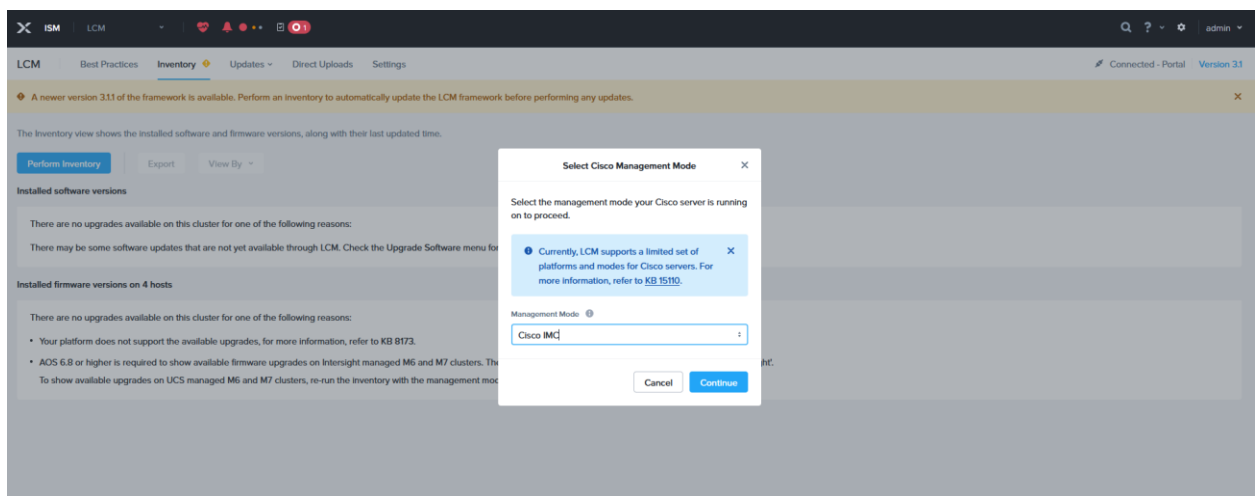


40. Wait until the Inventory completes

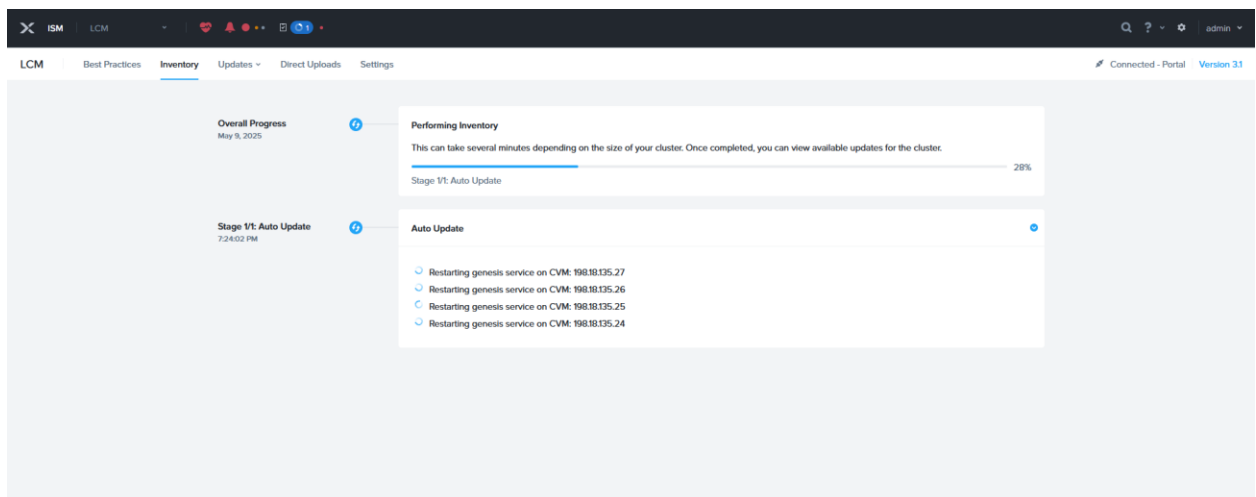

41. Once it's completed return to inventory

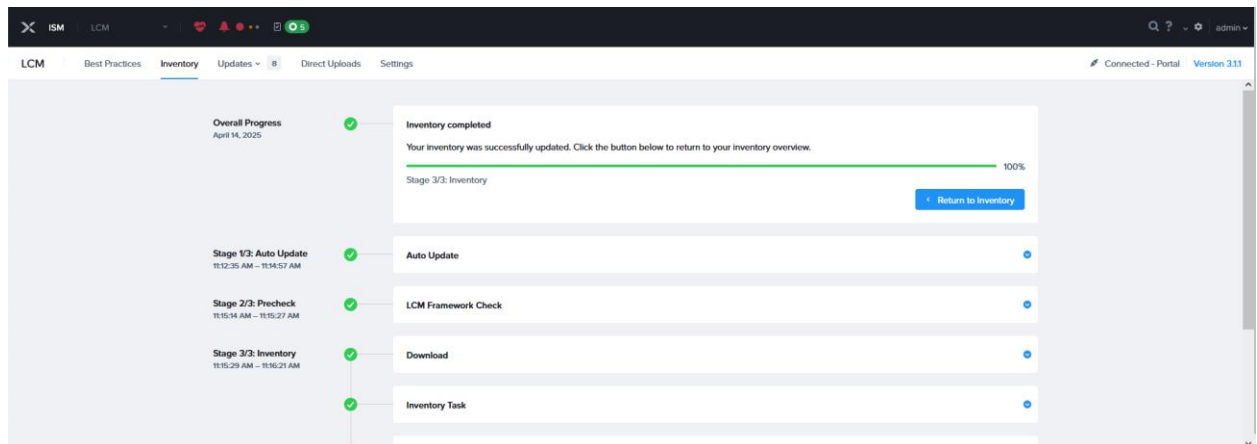


42. Click updates and select software to review all available updates

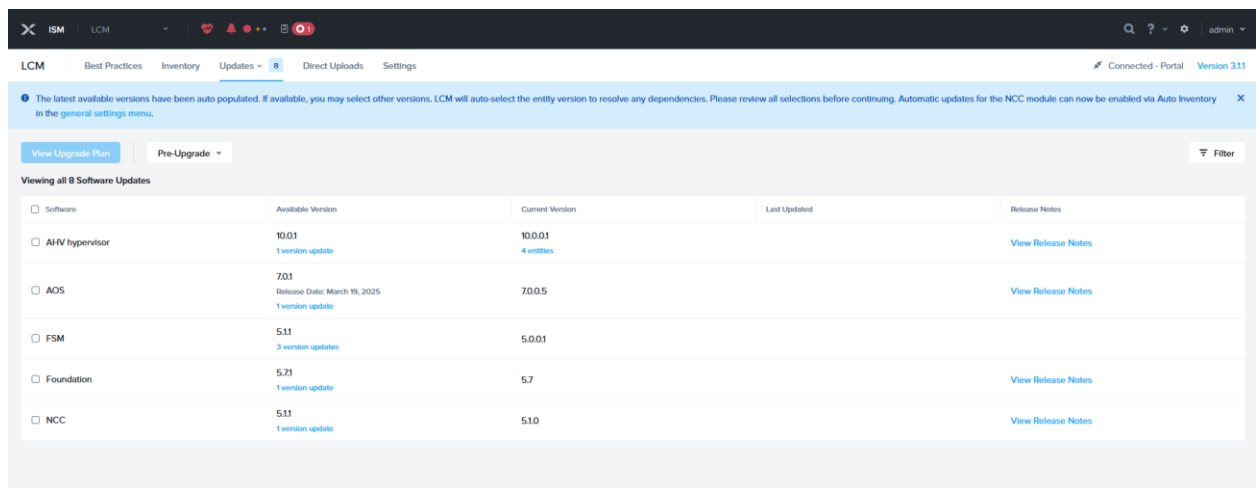


43. This is optional if you would like to apply the updates available or keep the cluster with the current version.

Scenario 6. Nutanix Prism Central 2022 installation (Optional)


1. From Cisco IMM Transition, can get the PC.2022.6.0.12.ova to deploy it from zero
2. Login to Cisco IMM Transition and go to the folder Nutanix-Prism-Central and download the PC.2022.6.0.12.ova and the lcm_foundation-central_1.7.1 to the desktop

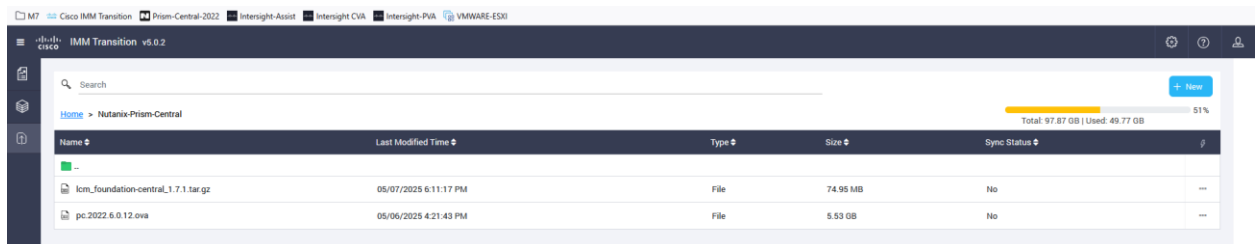


3. Open a new tab and from the bookmark click the VMWARE-ESXI and click Login.

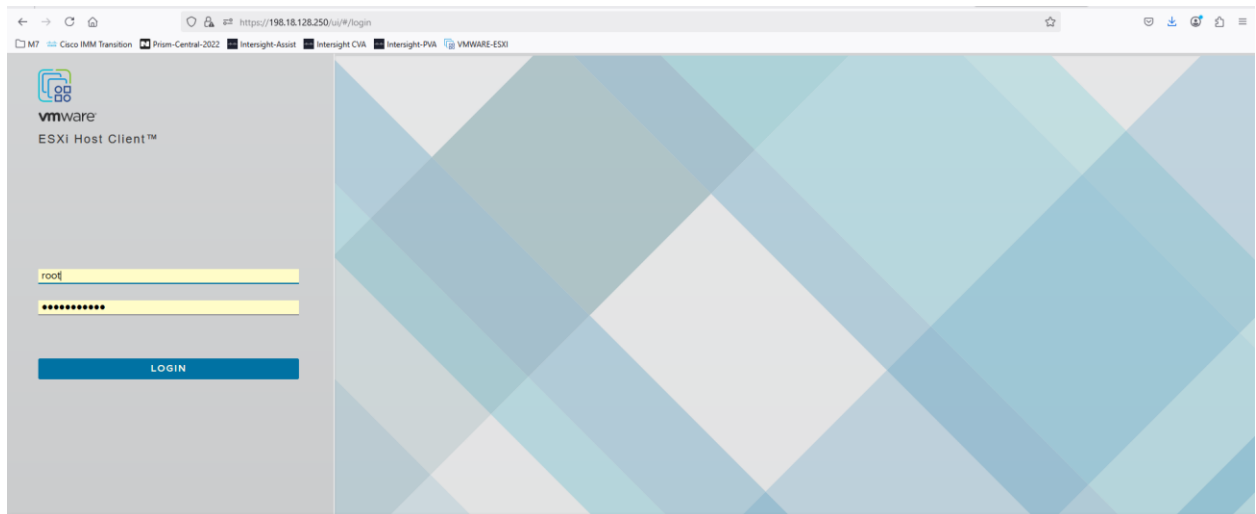


4. On the ESXi virtual Machines option, do right click and select Create/Register VM

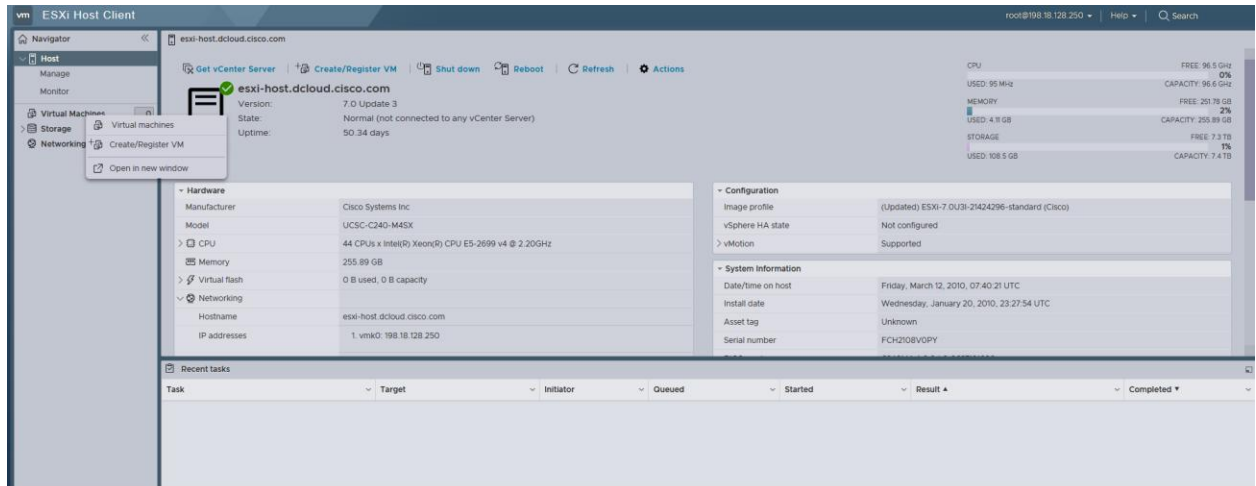


5. Then click Deploy a virtual machine from an OVF or OVA file and click Next
6. Click to select the file and go to Downloads folder to find the pc.2022.6.0.12.oVa, select and click open, then add a name to the new virtual machine and click Next

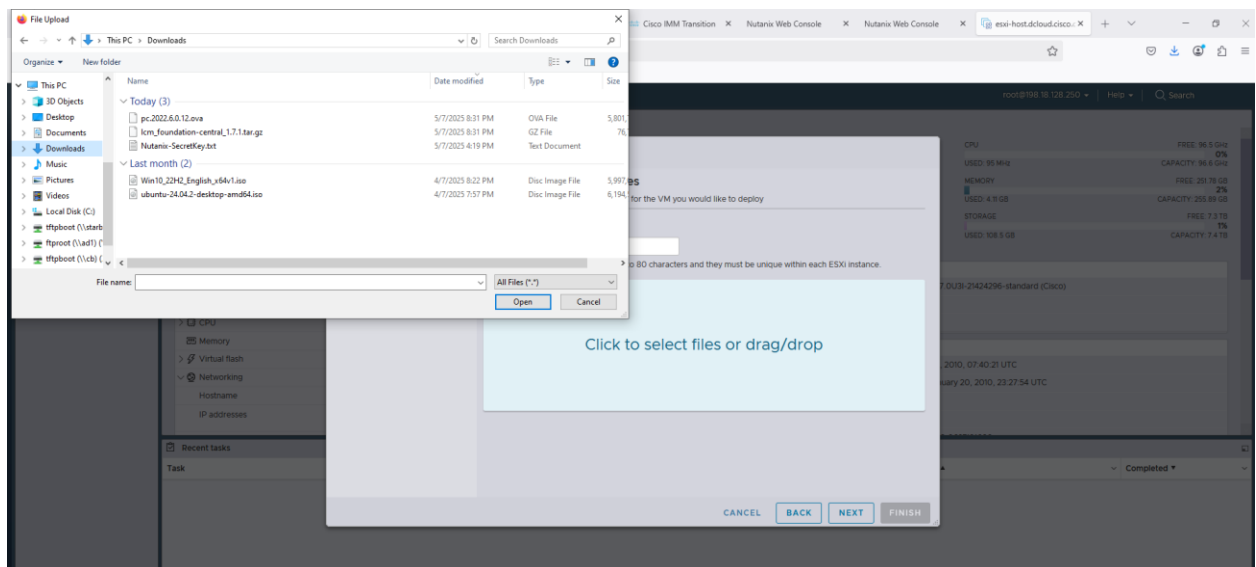


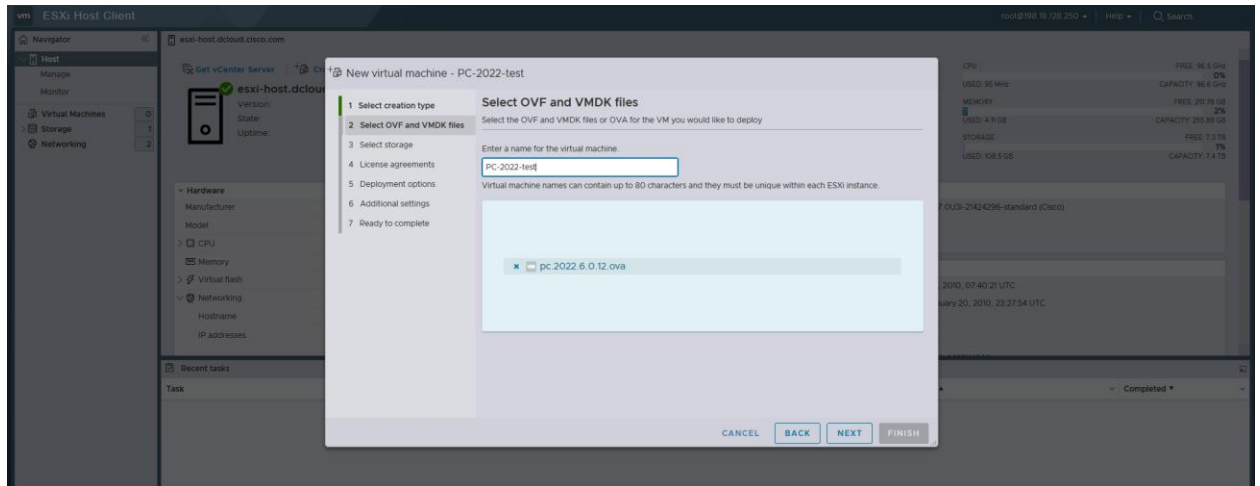


7. Select storage just click Next
8. On the Deployment options for VM Network from the drop-down menu select **vmNetwork2** and click Next

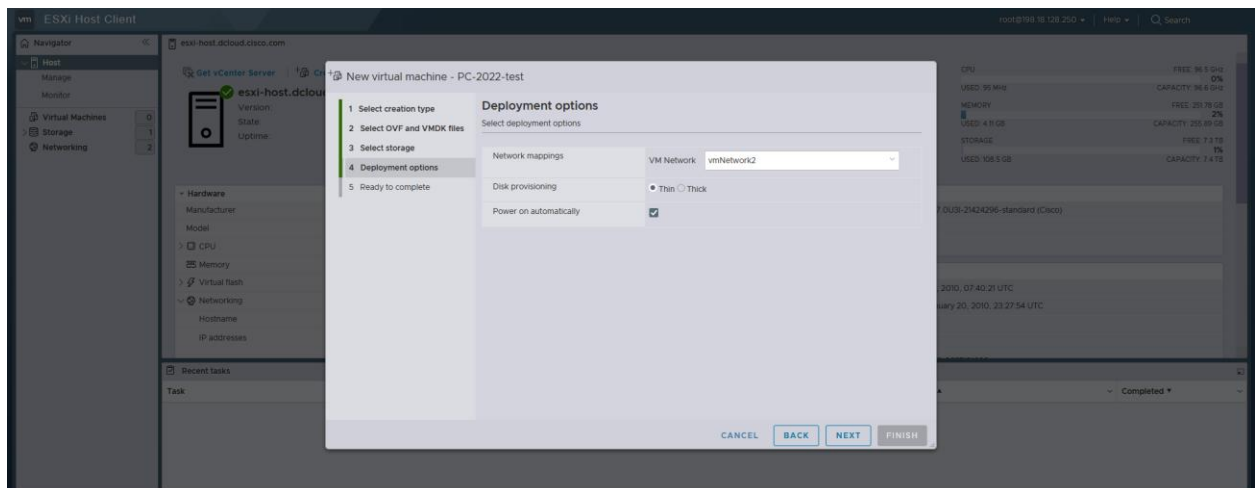

9. Then click Finish

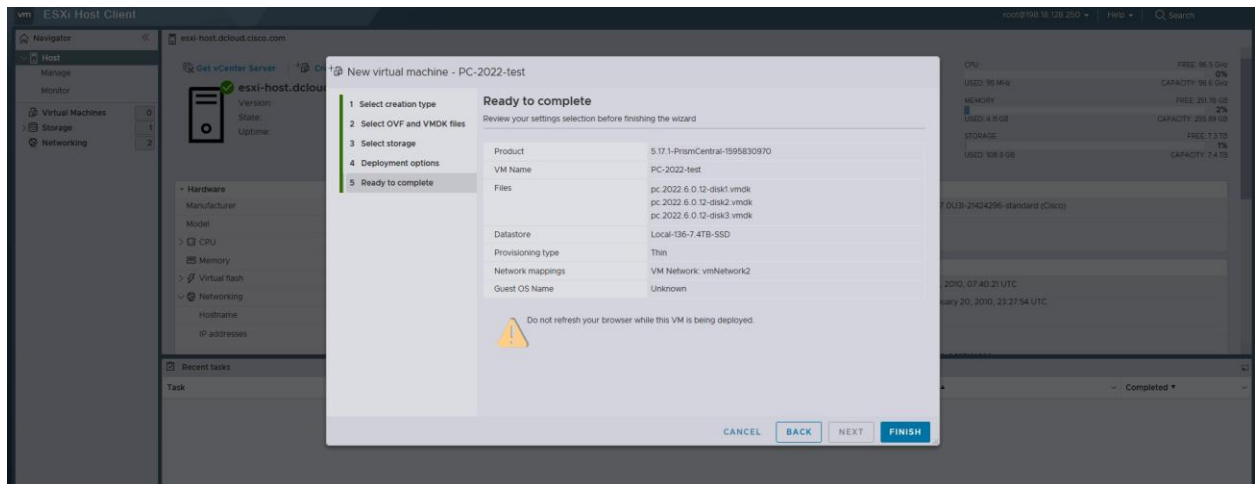

10. Power on the VM then open the local vSphere console. Let the VM run through its initial configuration steps for roughly 15 minutes, the VM will reboot multiple times.

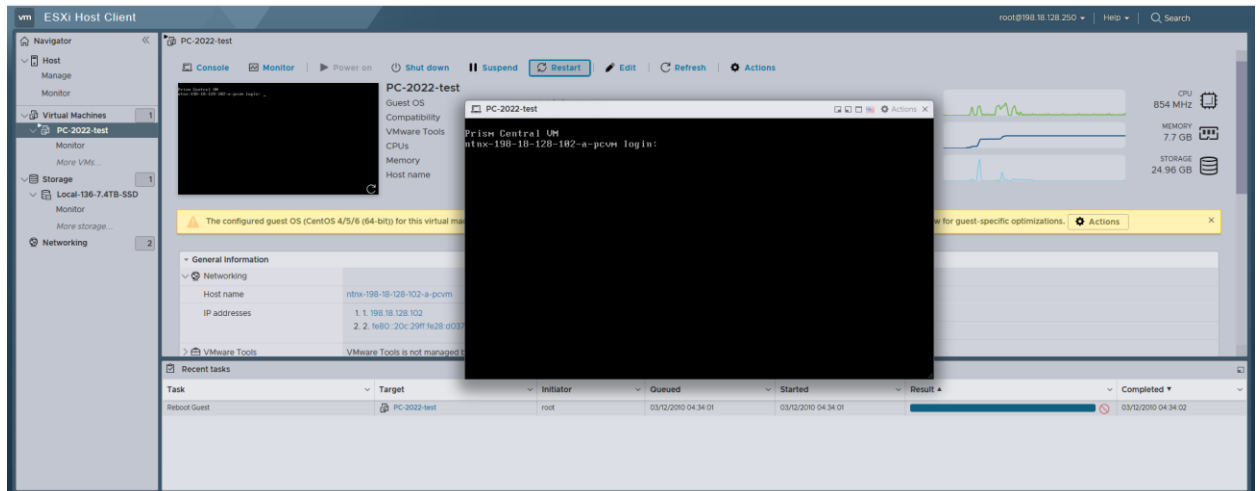

11. Log on as user: nutanix password: nutanix/4u
12. Edit the network interface with a static IP address:

```
$ sudo vi /etc/sysconfig/network-scripts/ifcfg-eth0
```


Add or edit the NETMASK, IPADDR and GATEWAY lines, change BOOTPROTO to none, then save the changes= :wq!

```
NETMASK=255.255.192.0
```

```
IPADDR=198.18.128.160
```

```
BOOTPROTO=none
```


```
GATEWAY=198.18.128.1
```

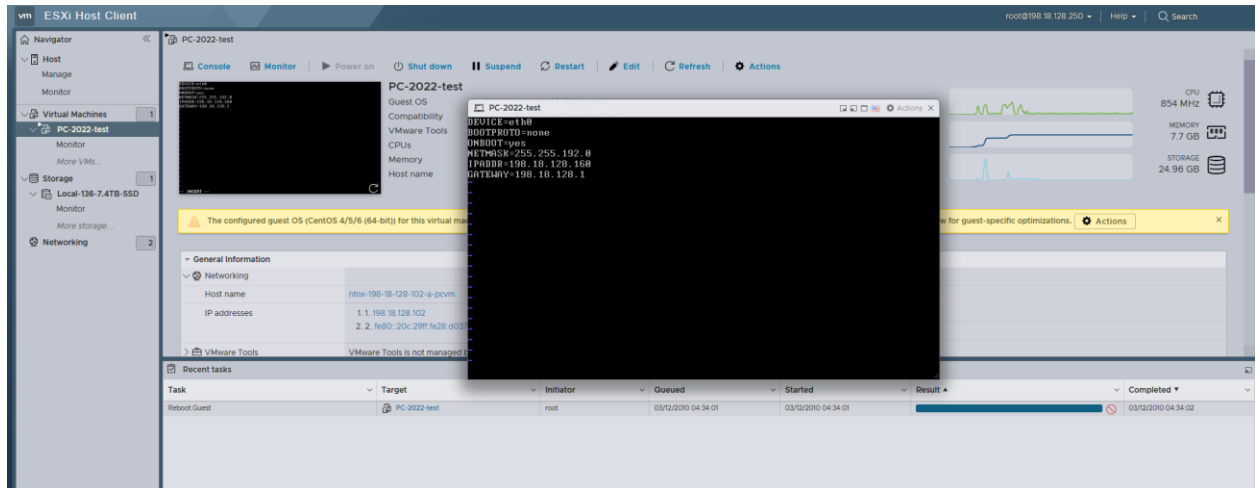


13. Edit the /etc/hosts file to remove all lines containing any entry like "127.0.0.1 NTNX-10-3-190-99-ACVM" then save the changes and reboot:

```
$ sudo vi /etc/hosts
```

```
$ sudo reboot
```

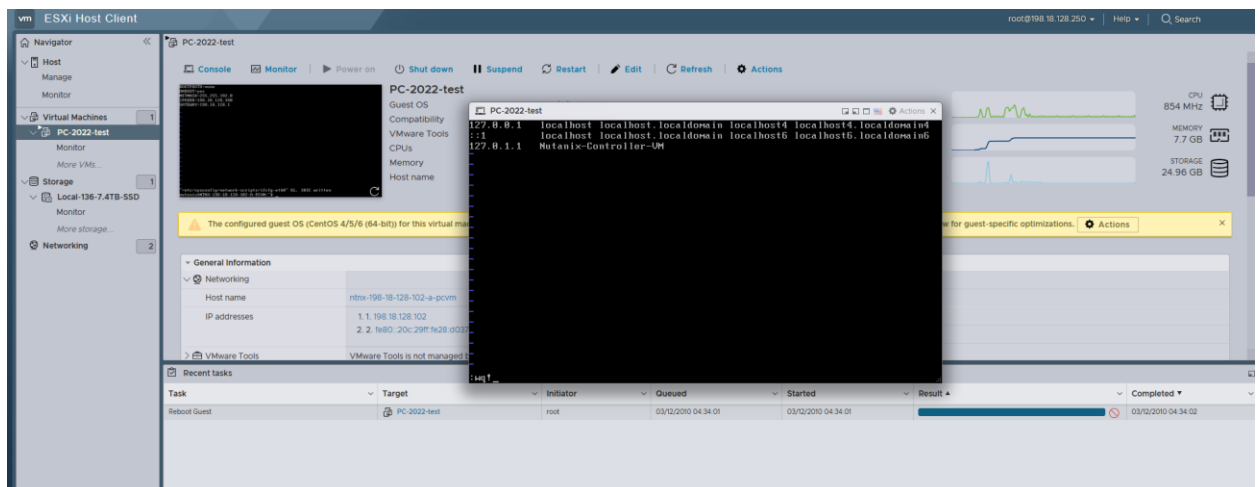


14. Log in to the Prism Central VM via SSH as user: nutanix password: nutanix/4u

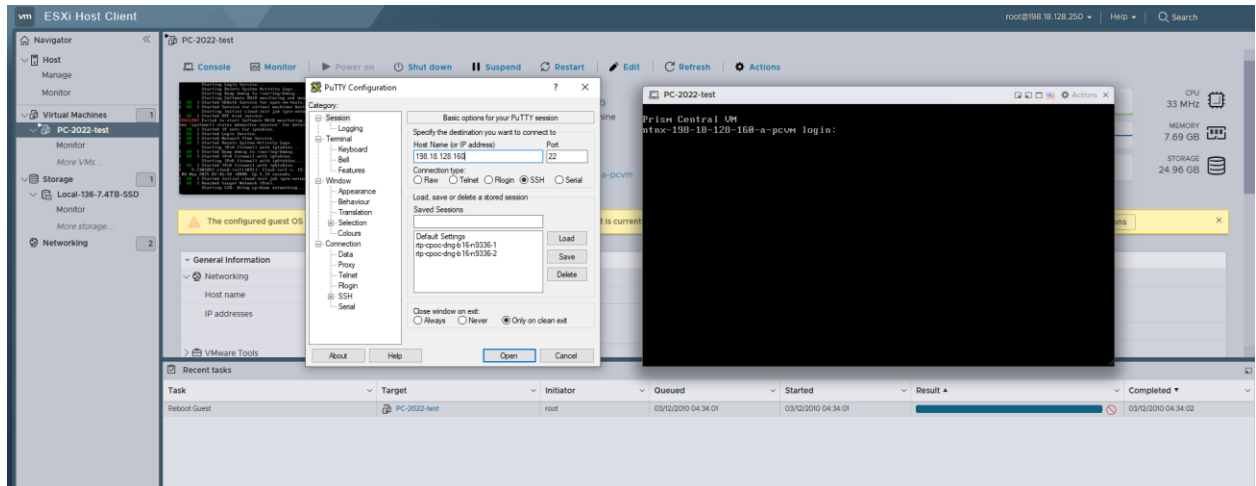

15. Run the command to create the Prism Central cluster:


```
$ cluster --cluster_function_list "multicluster" -s 198.18.128.160 -dns_servers "198.18.133.1" --ntp_servers "198.18.128.1" create
```

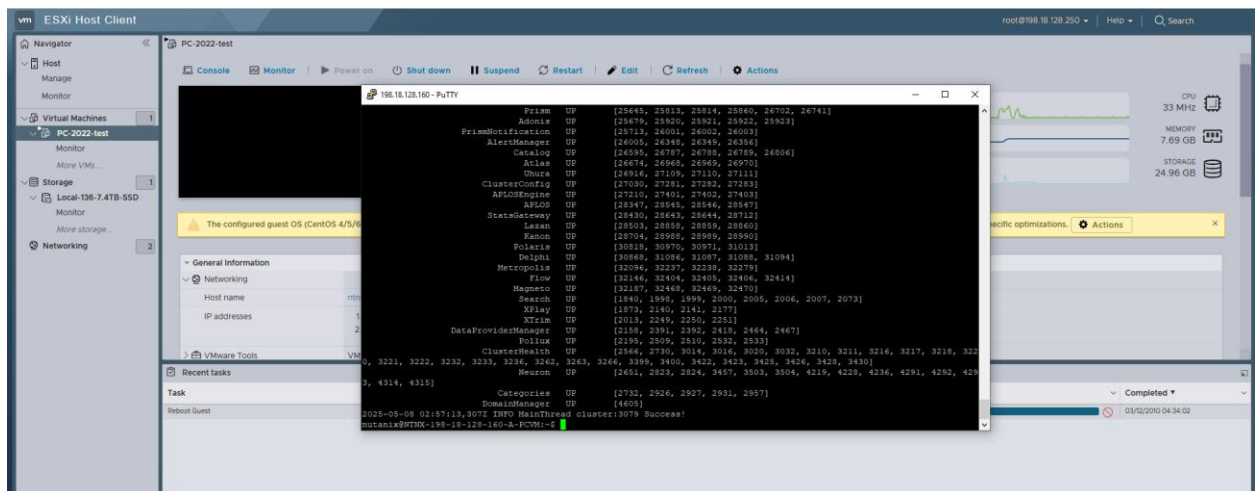

16. Log in to the Prism Central VM GUI with a web browser at <https://198.18.128.160:9440> as user: admin password: nutanix/4u


17. Add a new password C1sco12345! and then log in with the new password

35. After the password has been successfully changed, login with user **admin** and password **C1sco12345!**

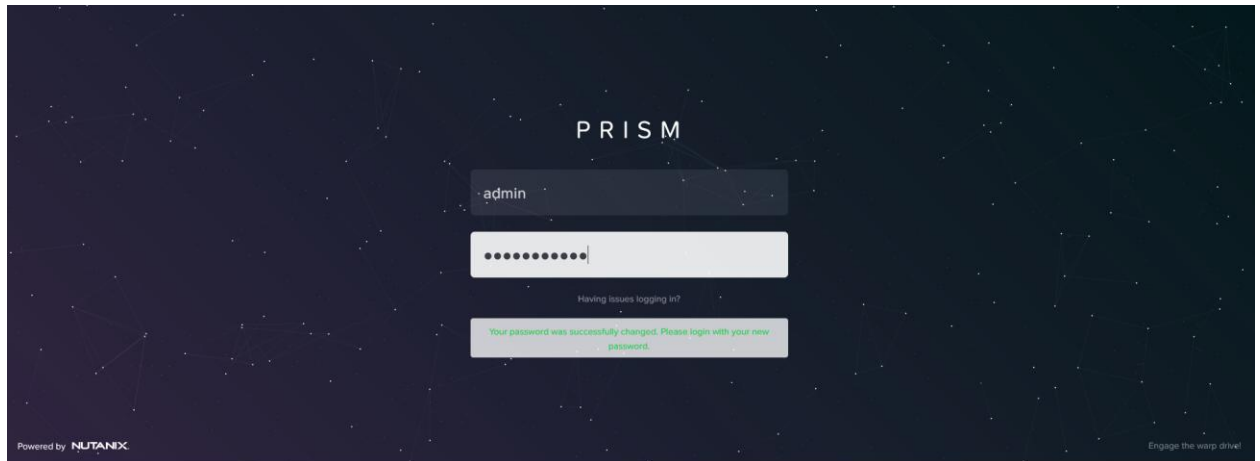


36. Complete the Nutanix EULA,


- Name = Cpoc
- Company = Cisco
- Job title = PC-2022
- Check the box and click accept and continue

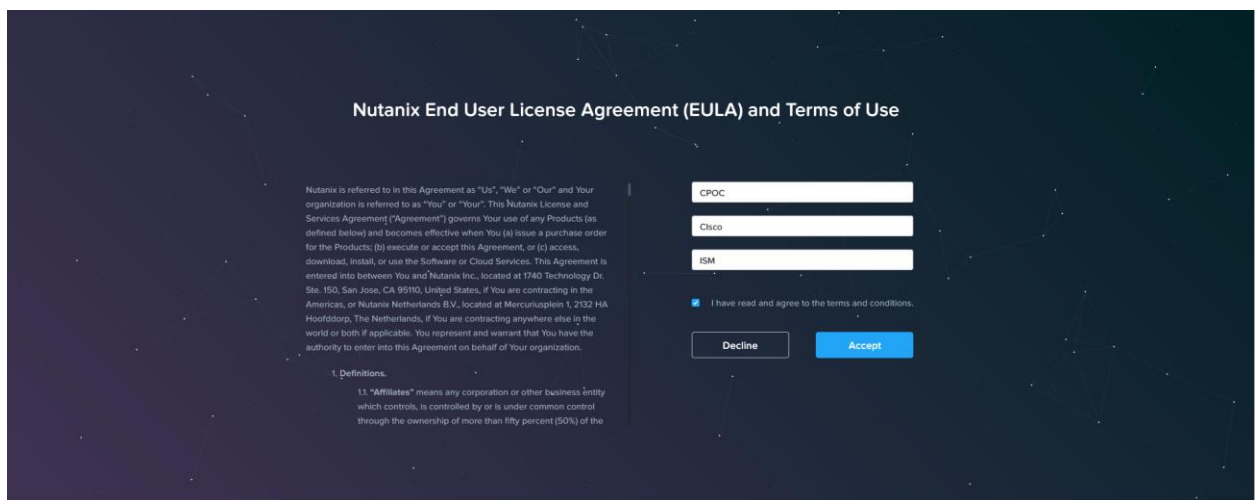


37. Keep the Pulse option by default, click Continue

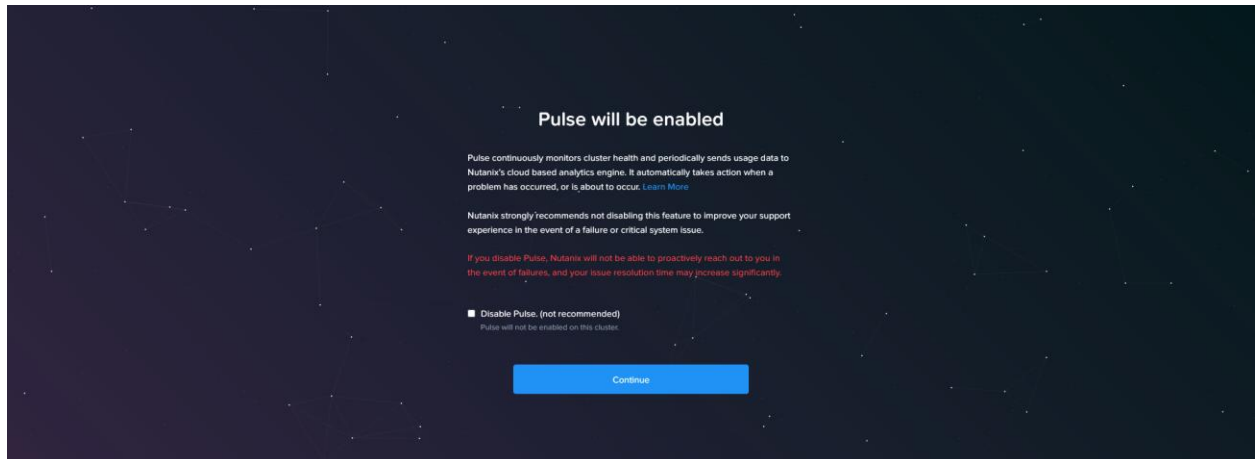

18. You should be taken to the main dashboard

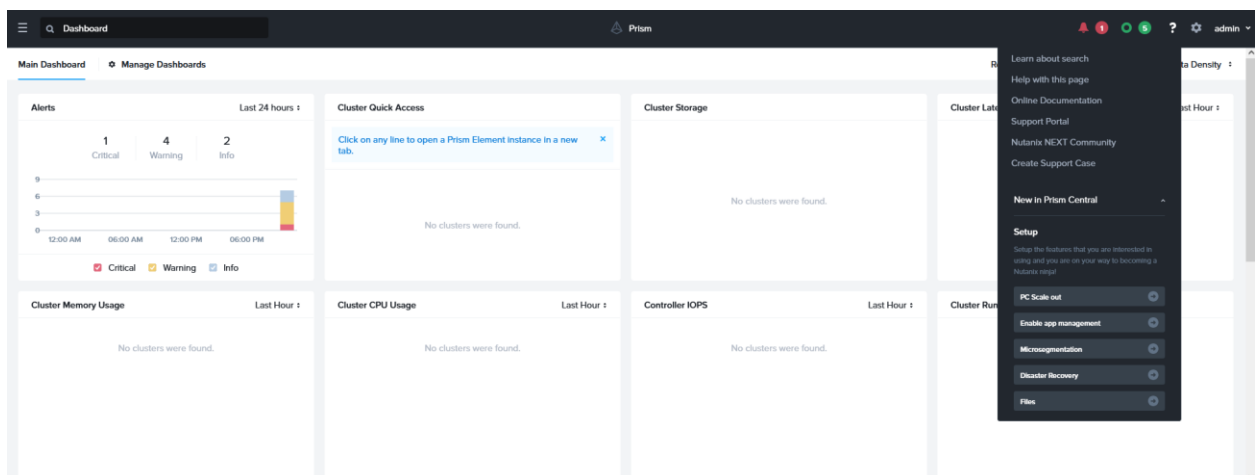


19. Click the ellipsis at the top left and select **Prism Central Settings** then **Prism Central Management** and click on **Edit** of the Prism Central Summary

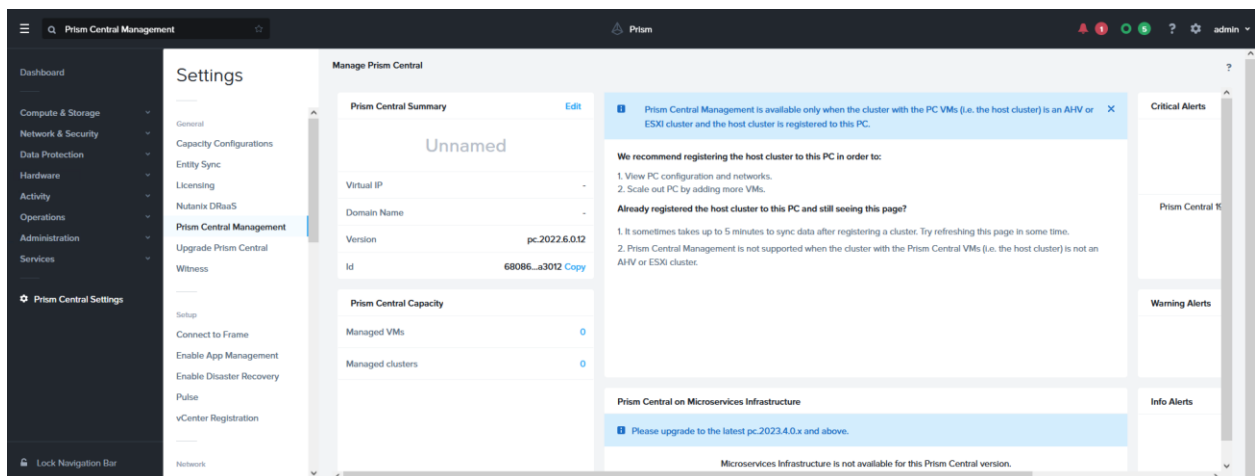


20. Add the FQDN and the virtual IP


- FQDN = prism2022.dcloud.cisco.com
- Virtual IP = 198.18.128.161
- Click Update

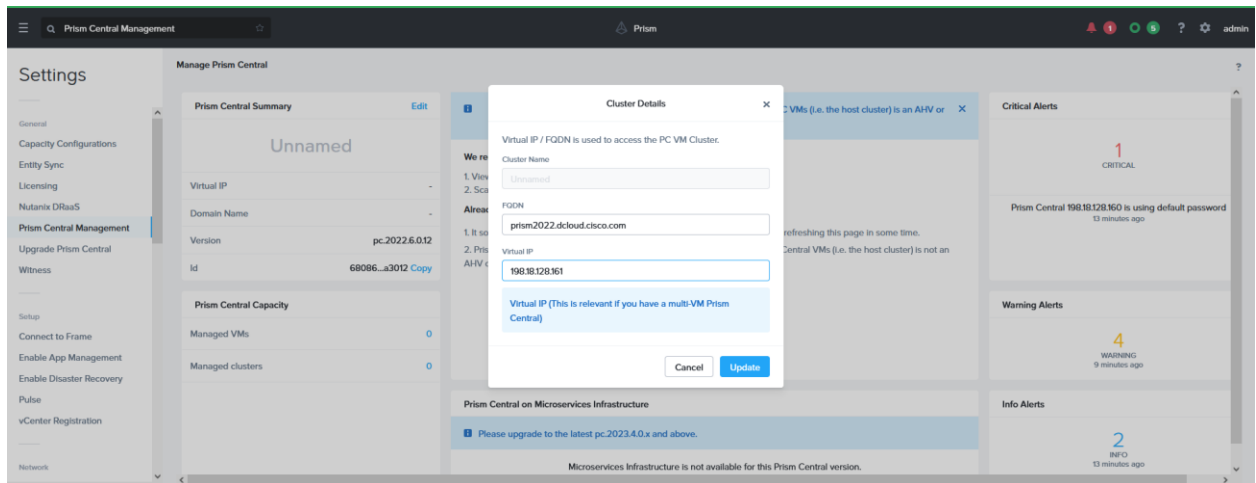

21. Confirm the Name servers and NTP Servers are set

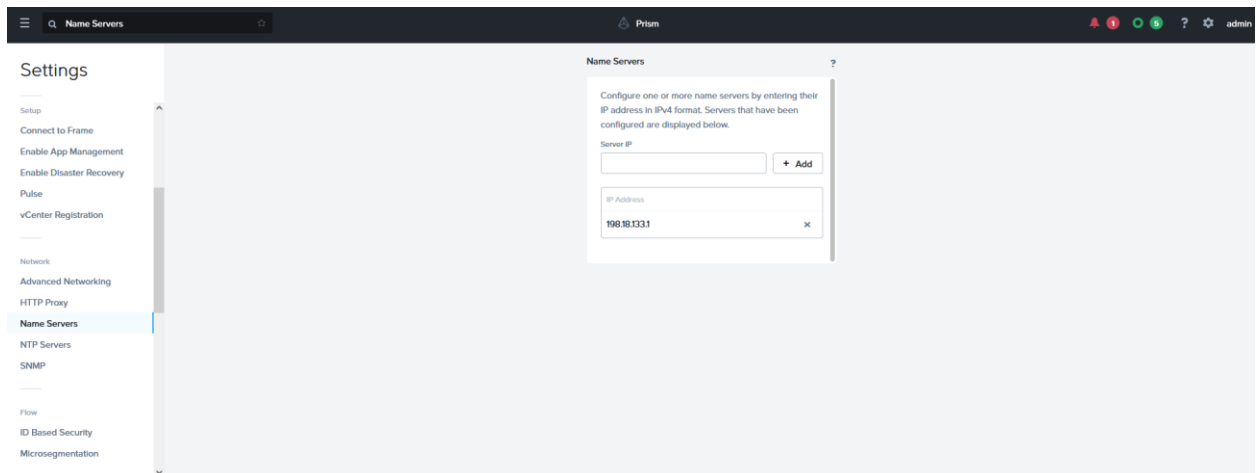


22. The Foundation Central requires an upgrade so in this case from the start menu of Windows look for WinSCP

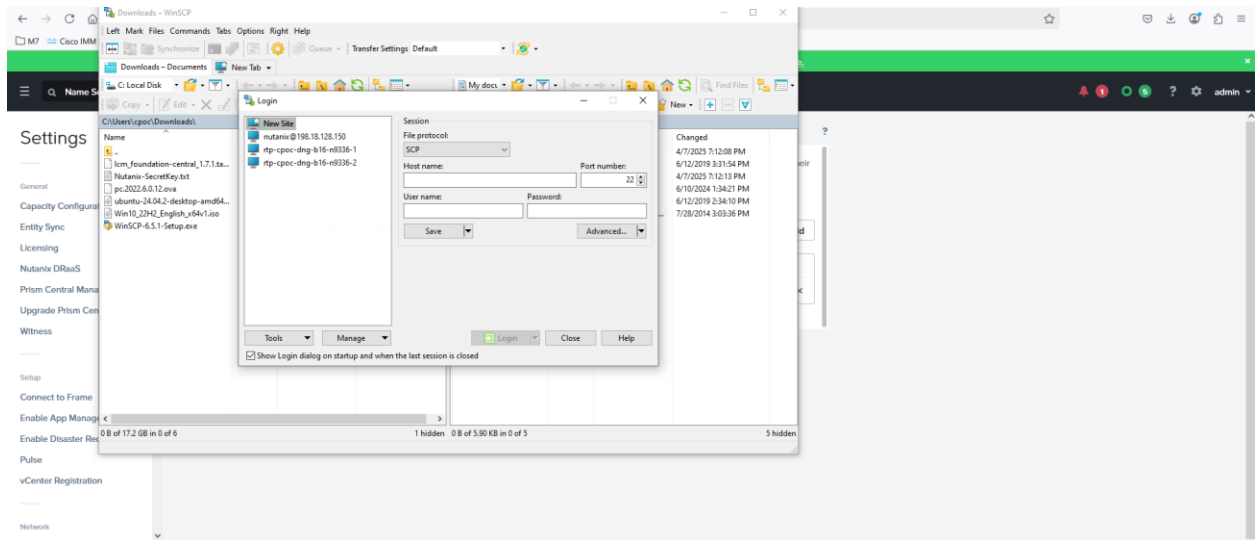


23. Click on New Site

- File Protocol = SCP
- Host name = 198.18.128.160
- User name = nutanix
- Password = Nutanix/4u
- Click login and then accept

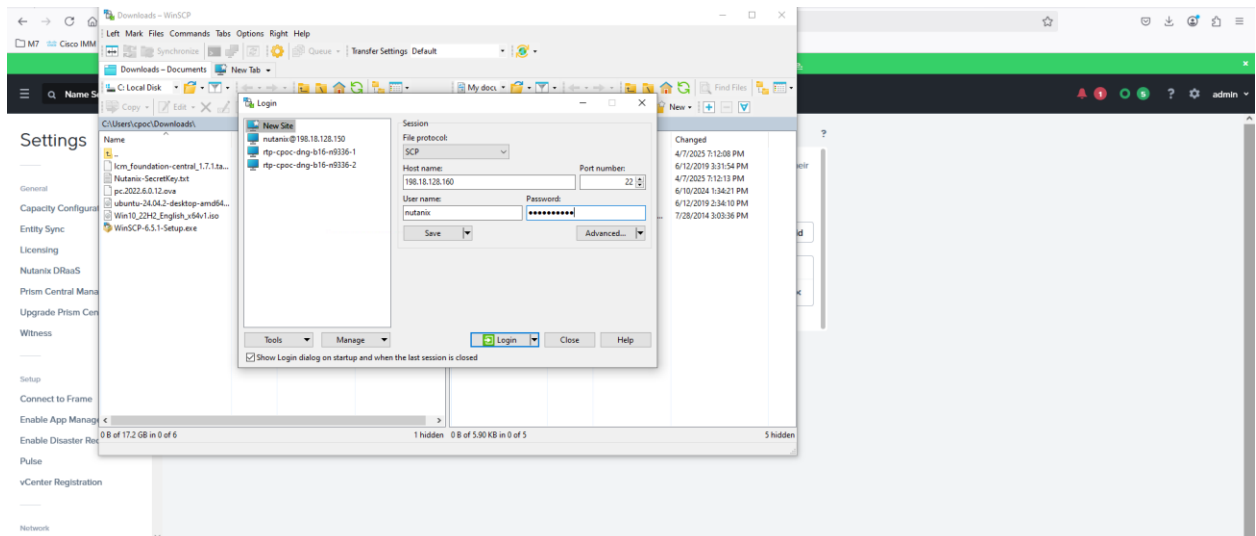

24. Drag and drop the lcm_foundation-central_1.7.1.tar.gz file from the Downloads folder to the /home/Nutanix/

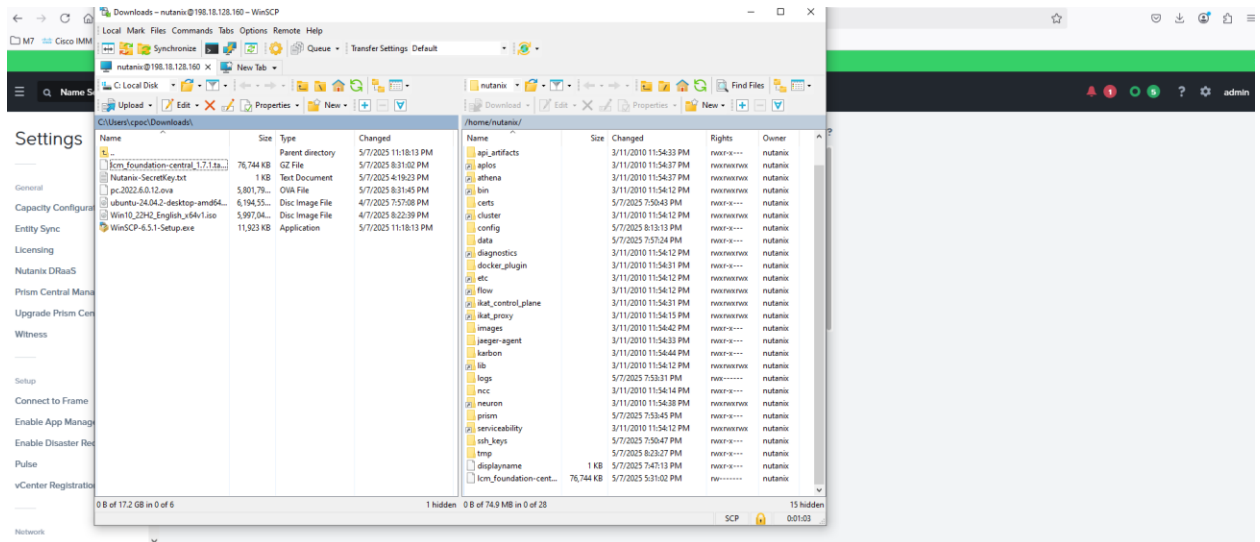

25. Then return to the Putty session and run the following commands

```
$ mkdir /home/nutanix/fc_installer
```

```
$ tar -xvf /home/nutanix/lcm_foundation-central_1.7.1.tar.gz -C /home/nutanix/fc_installer/
```


```
$ genesis stop foundation_central
```

```
$ sudo rm -rf /home/docker/foundation_central/*
```


```
$ sudo tar -xJf /home/nutanix/fc_installer/builds/foundation-central-builds/1.7.1/foundation-central-installer.tar.xz -C /home/docker/foundation_central/
```

```
$ sudo chown -R nutanix:nutanix /home/docker/foundation_central/*
```


```
$ cluster start
```

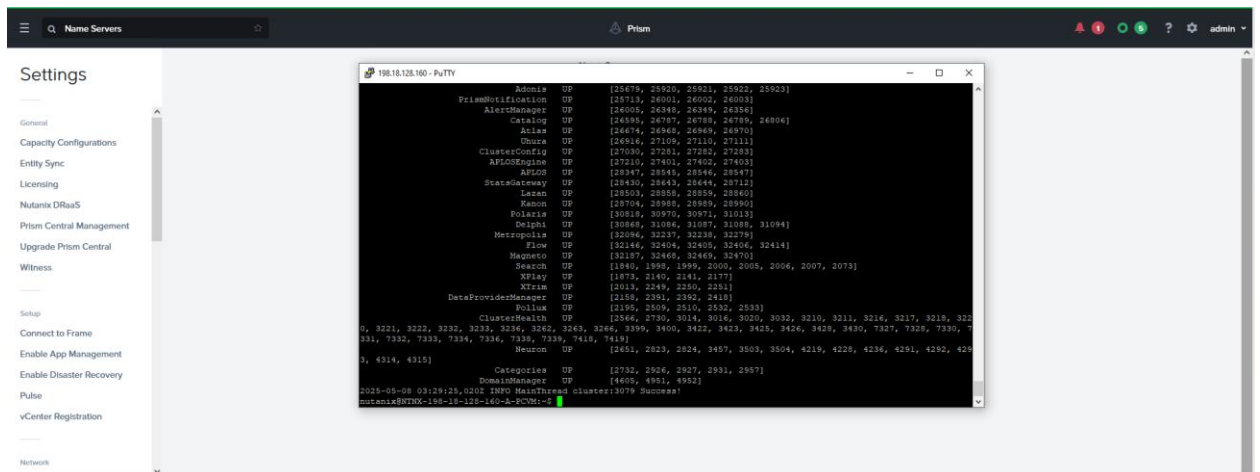

26. Return to Prism Central click the **Ellipsis** and select **Services > Foundation Central** and Click **Enable Foundation Central**

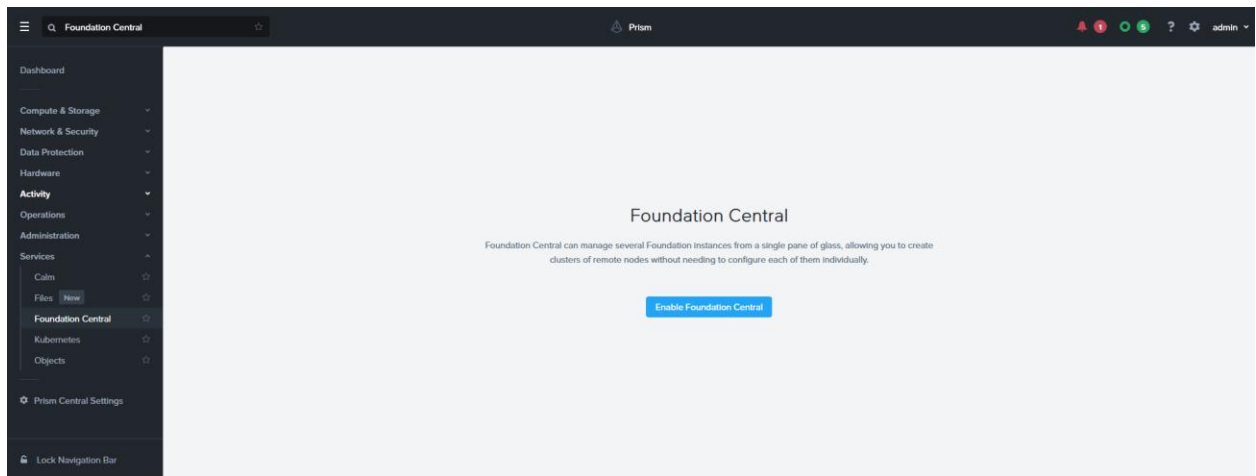

27. Then Foundation Central 1.7.1 will become available

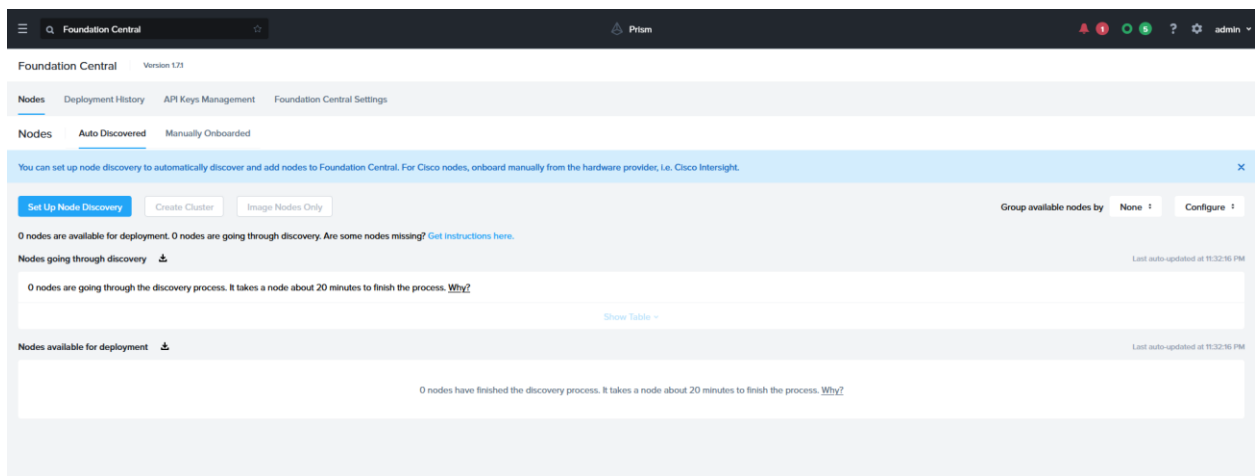

28. From here you can return to Scenario 2 and continue with the steps using your new Prism Central.

What's Next

Is there anything we want to point them to or provide references about?

Reference	Description
Table in case we want to use it	xxdd ▪