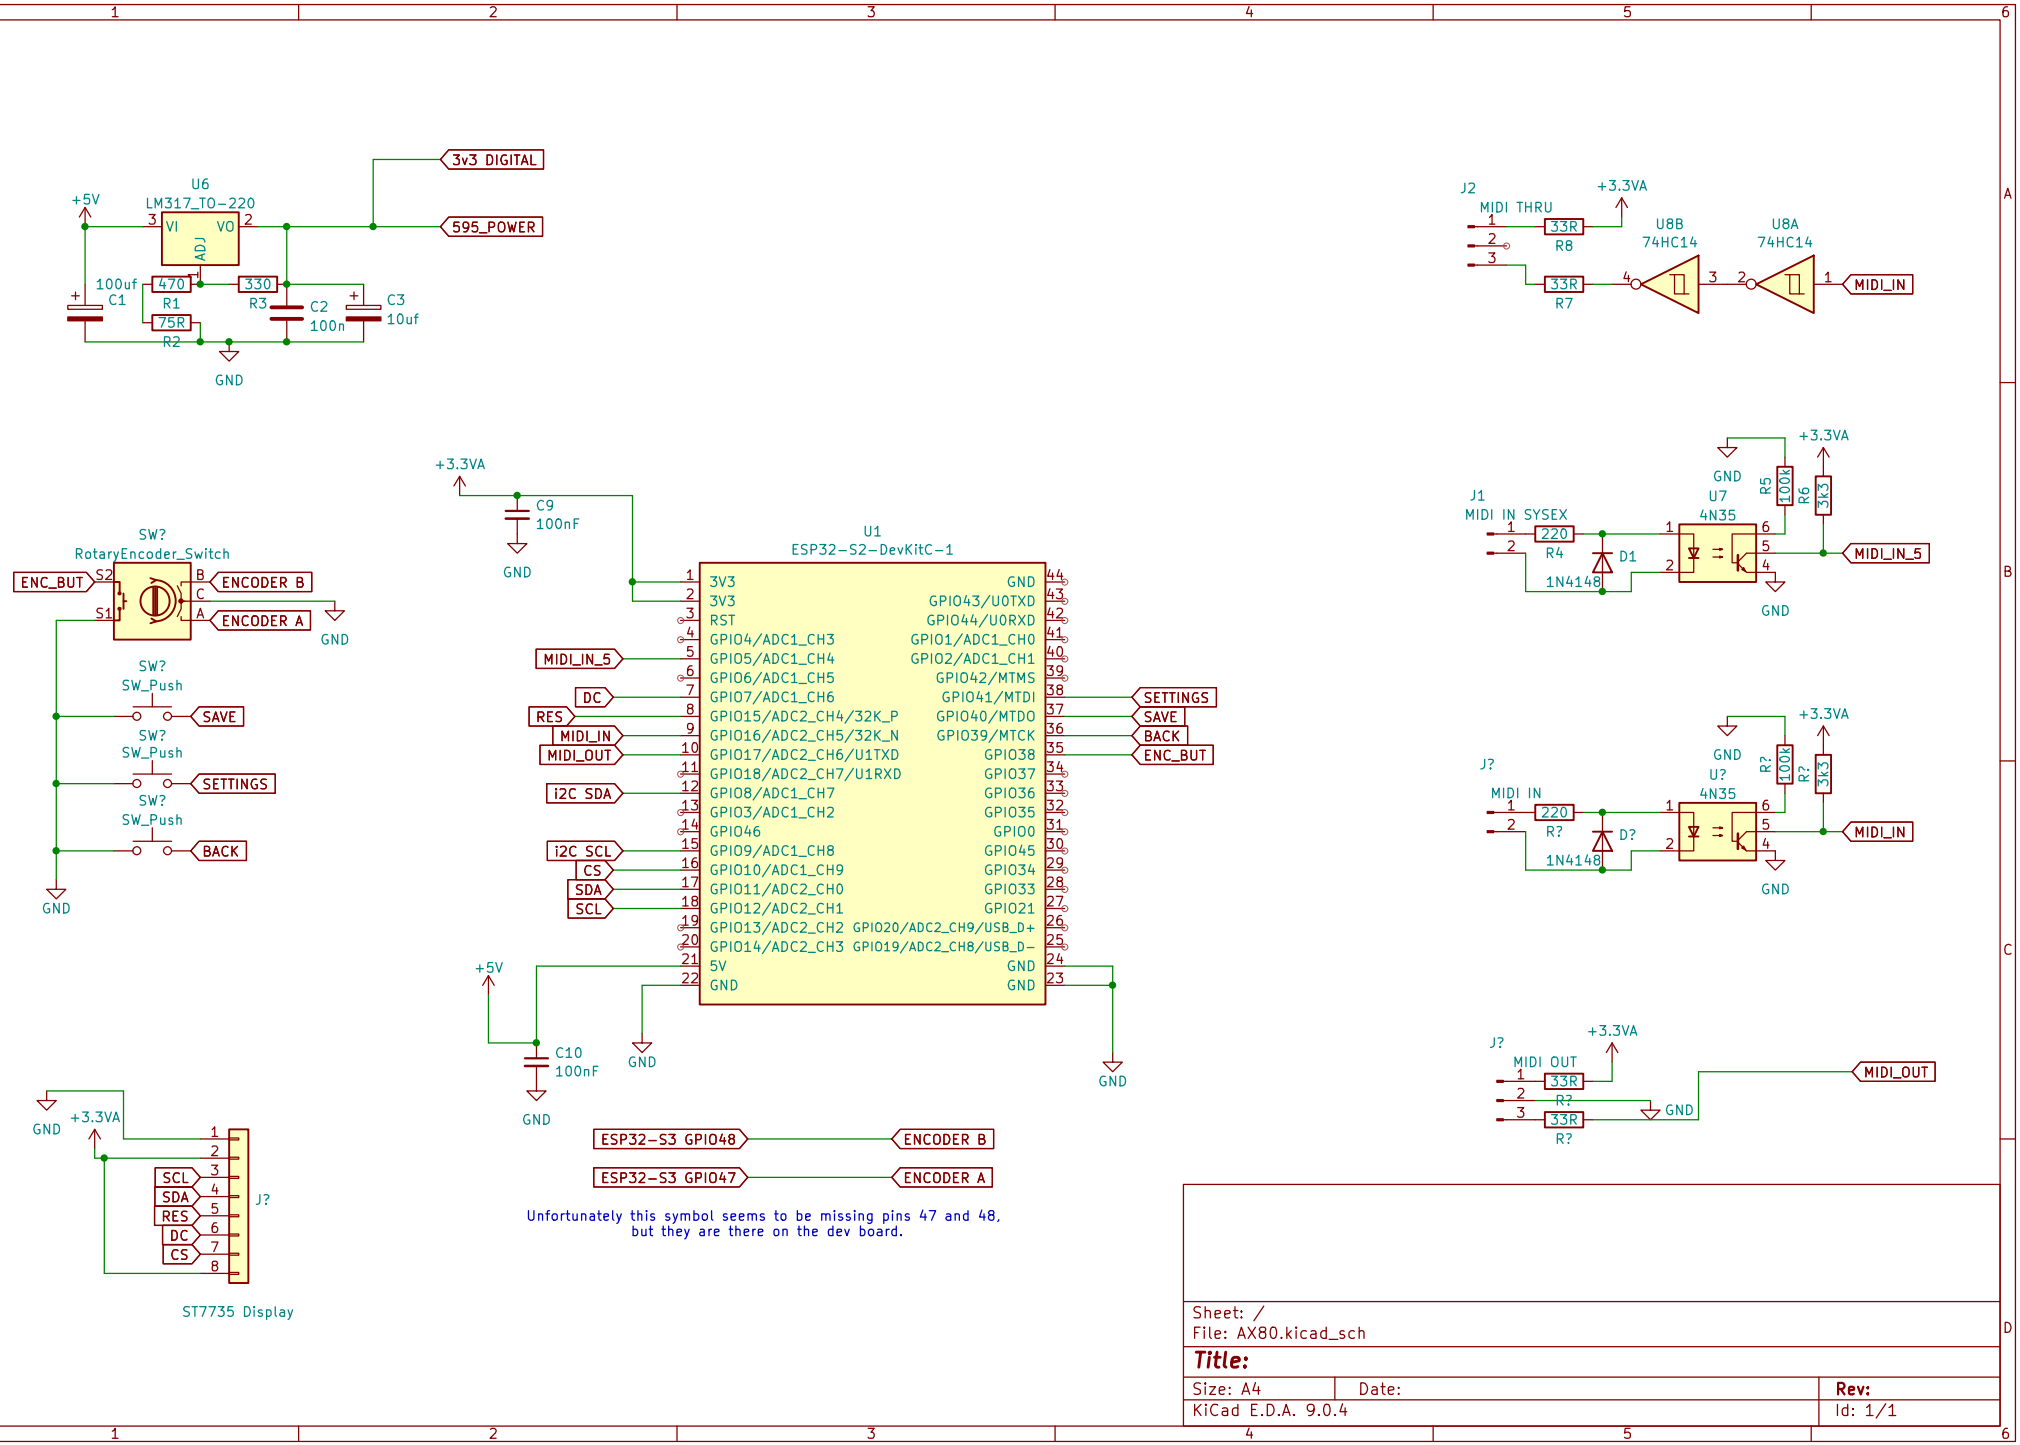

U6
LM317_TO-220
+5V
3v3 DIGITAL
595_POWER
100uf
C1
470
R1
75R
R2
330
R3
C2
100n
C3
10uf
GND
SW?
RotaryEncoder_Switch
ENC_BUT
ENCODER B
ENCODER A
SW?
SW_Push
SAVE
SETTINGS
BACK
U1
ESP32-S2-DevKitC-1
+3.3VA
C9
100nF
MIDI_IN_5
DC
RES
MIDI_IN
MIDI_OUT
i2C SDA
i2C SCL
CS
SDA
SCL
C10
100nF
ESP32-S3 GPIO48
ENCODER B
ESP32-S3 GPIO47
ENCODER A
Unfortunately this symbol seems to be missing pins 47 and 48,
but they are there on the dev board.
J?
ST7735 Display
J2
MIDI THRU
33R
R8
R7
U8B
74HC14
U8A
74HC14
MIDI_IN
J1
MIDI IN SYSEX
220
R4
D1
1N4148
U7
4N35
R5
100k
R6
3k3
MIDI_IN_5
J?
MIDI IN
R?
D?
MIDI_IN
MIDI OUT
MIDI_OUT
Sheet: /
File: AX80.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. 9.0.4
Id: 1/1