

Procedure for Zero Calibration

<https://www.youtube.com/watch?v=3chMgcb4fJs>

1. Select Both the buttons & hold for 3-4 seconds



2. SEE _Alarm is displayed & touch the scroll button



3. Off-line Maintenance is displayed. Touch the Select button



4. Displayed Scroll, so touch Scroll button



5. Select is displayed, Touch Select Button



6. Displayed Scroll again, so touch Scroll button




7. Offline-SCREW Is displayed. Touch the scroll button repeatedly until Offline-ZERO is Selected




8. Touch on Select button, to go into Calibration Mode.
Touch Select button again to do calibration.




9. Status LED Will be flickering RED. Wait for Few secs to turn Green. Touch Select button to finish the process

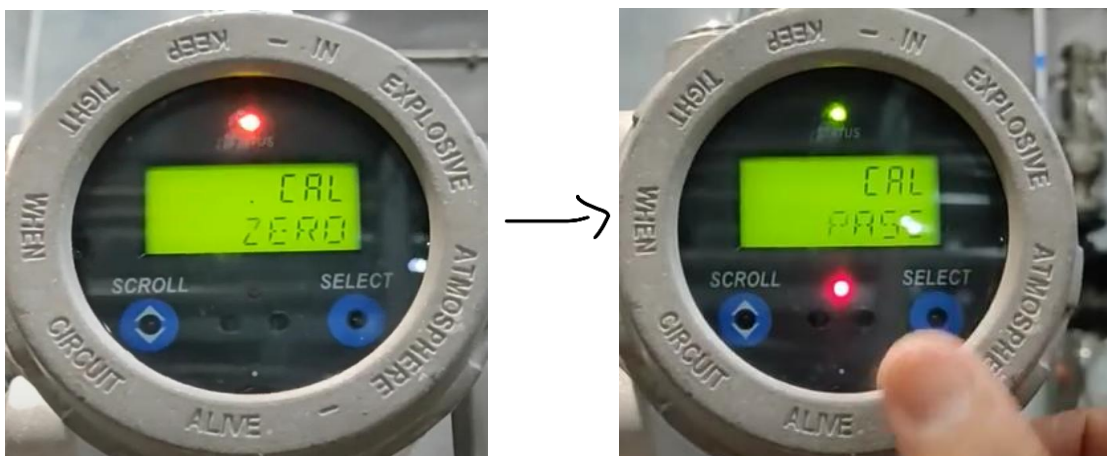

10. Offline-ZERO Is displayed. Touch Scroll button until EXIT Is displayed.

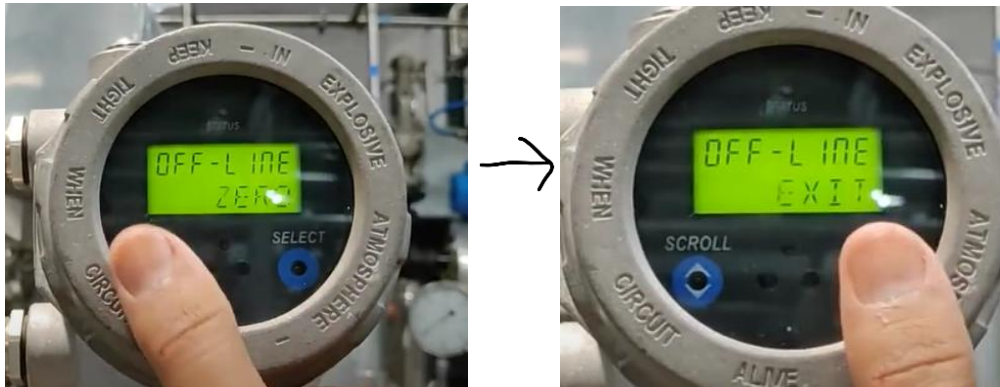

11. Offline-MAINT is Displayed, Touch Scroll Button until exit. When EXIT Is displayed Touch the Select button.

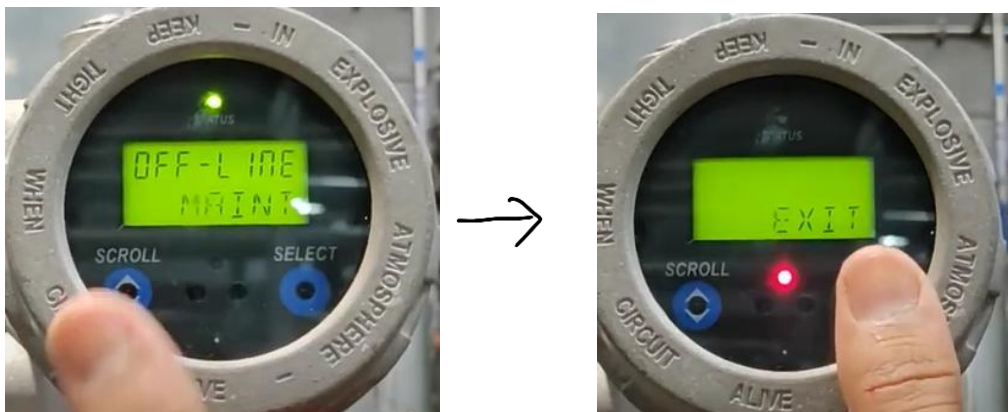

12. Now values are ZERO on the display

