




User Manual

Version 1.1.0

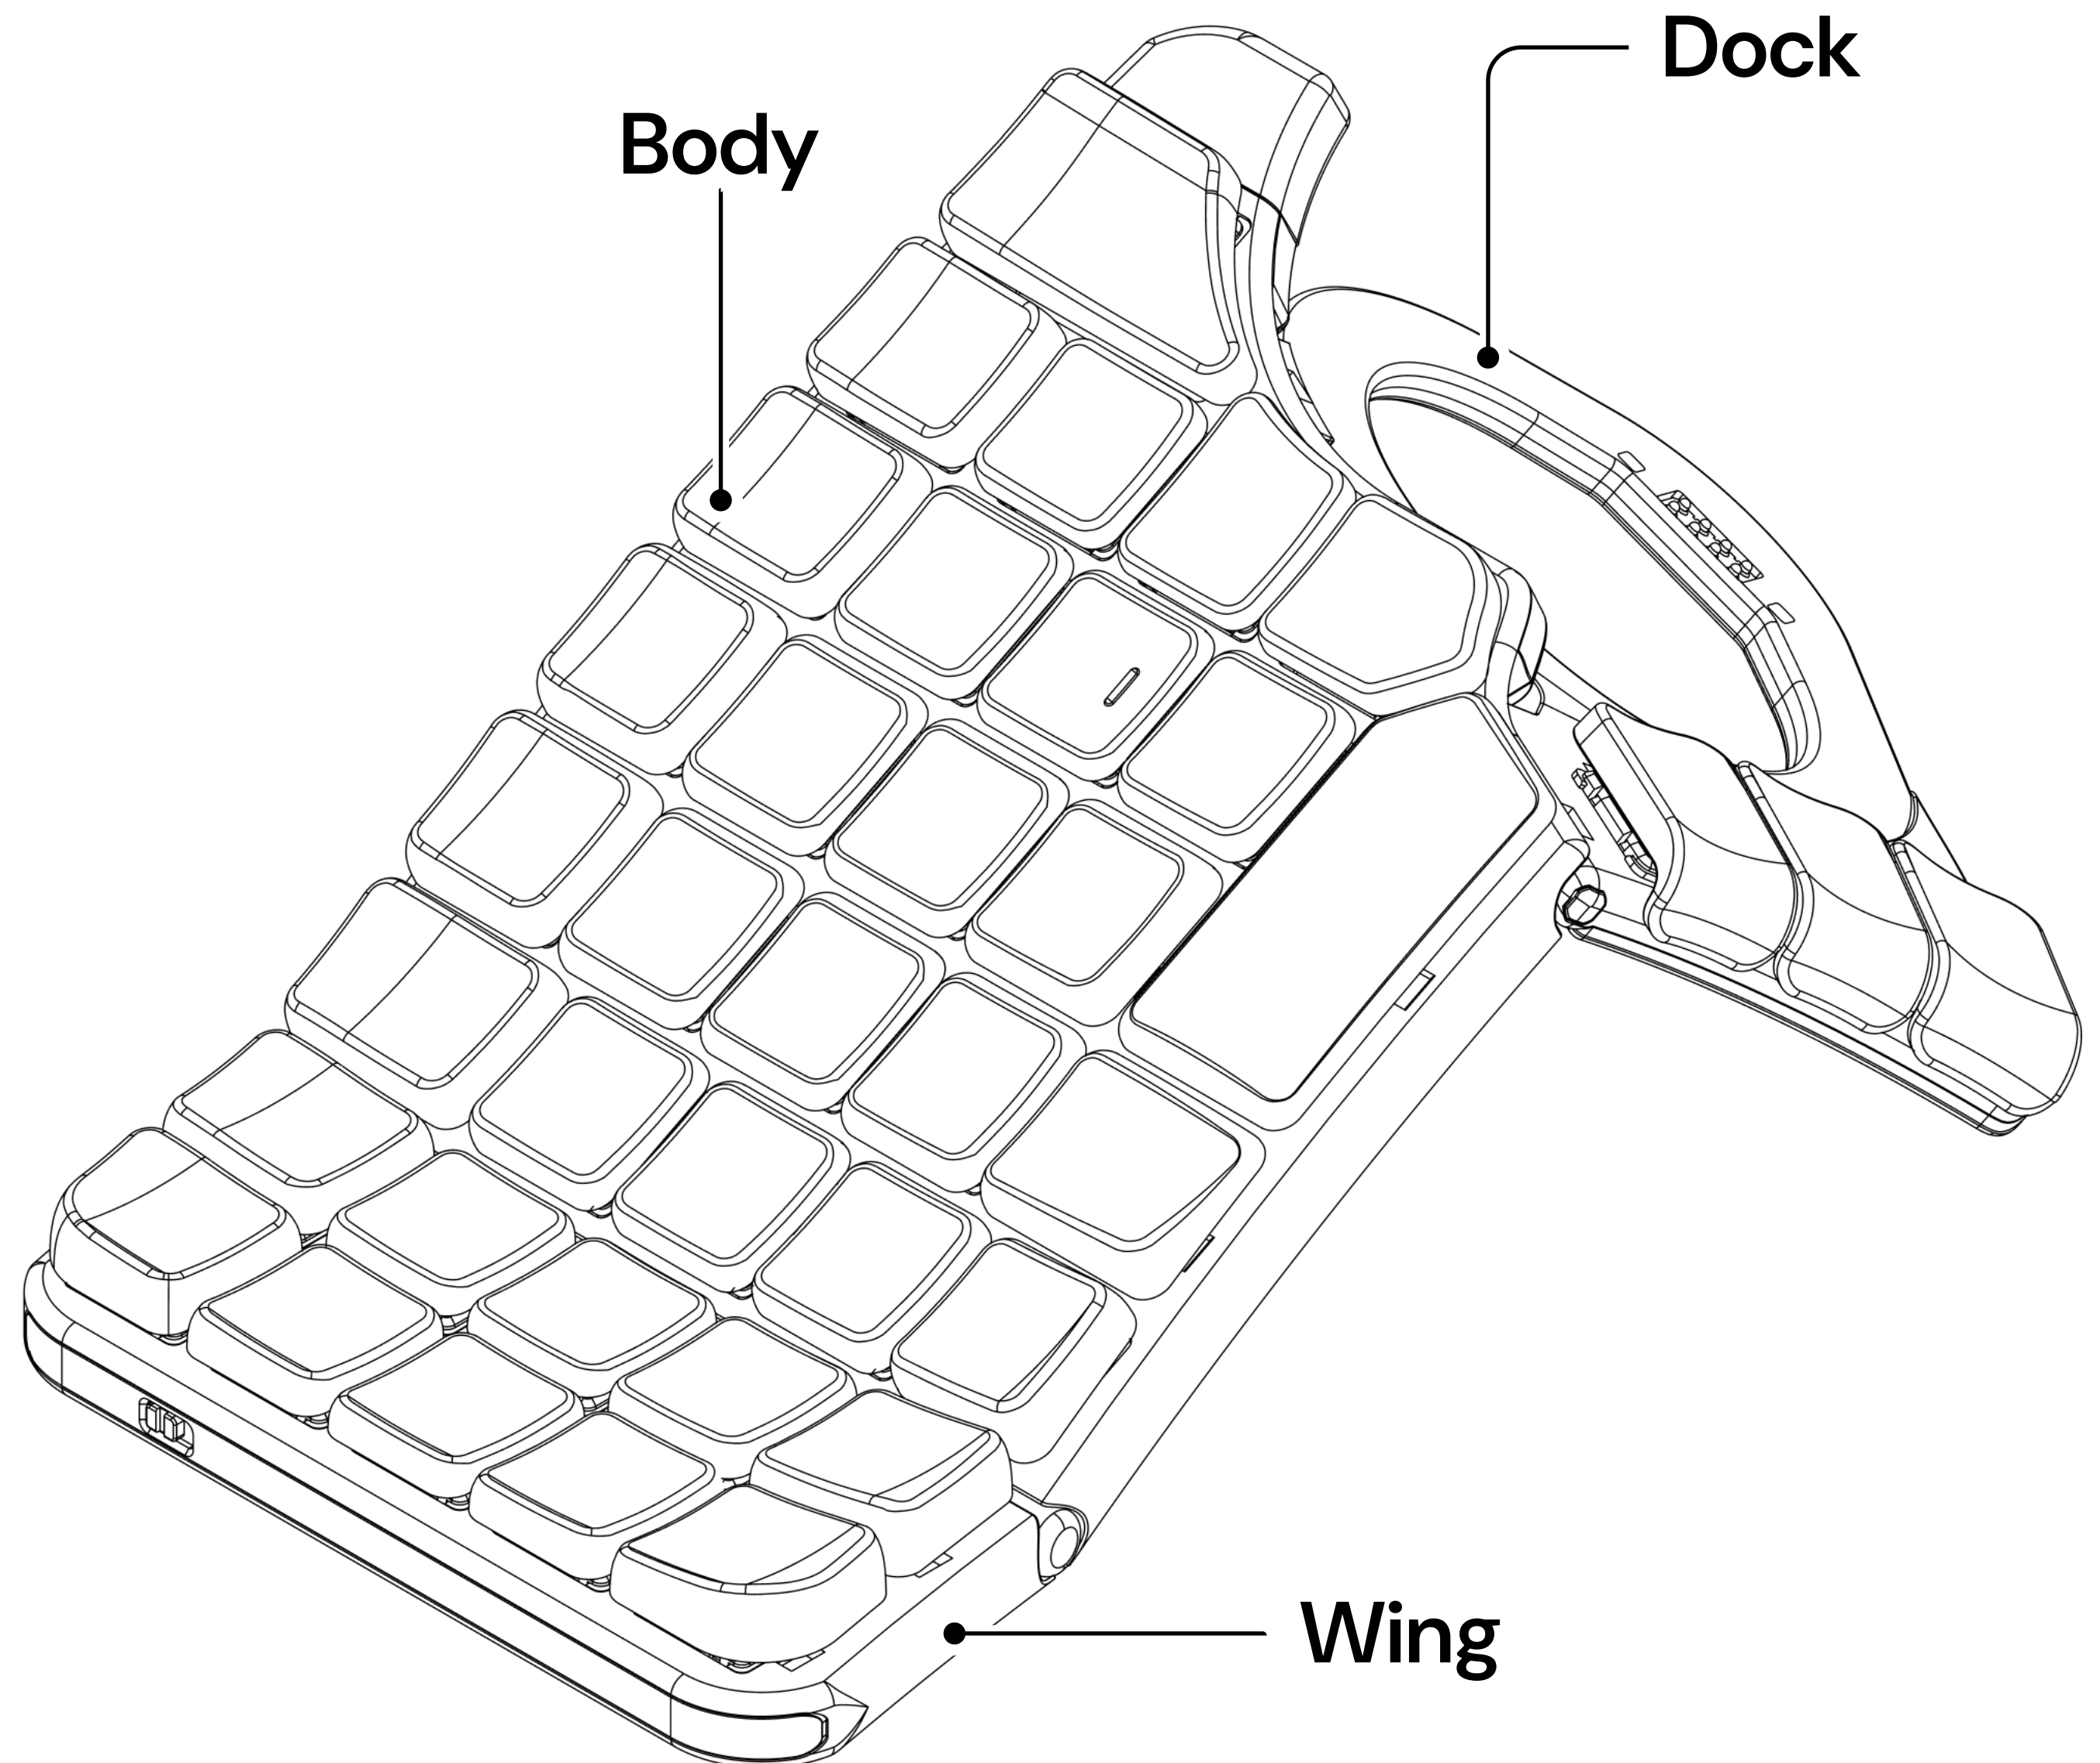


All rights reserved. Naya B.V.

Wasaweg 3, 9723JD Groningen, Netherlands

Whats in The Box ?

- A** Travel Case
- B** Naya Create
- C** Speedlink Dongle
- D** 1m USB Type-C Y-Cable
- E** Keycap/Switch Puller
- F** Spare/Sample Switches (3x)
- G** Module Spacers (2x)

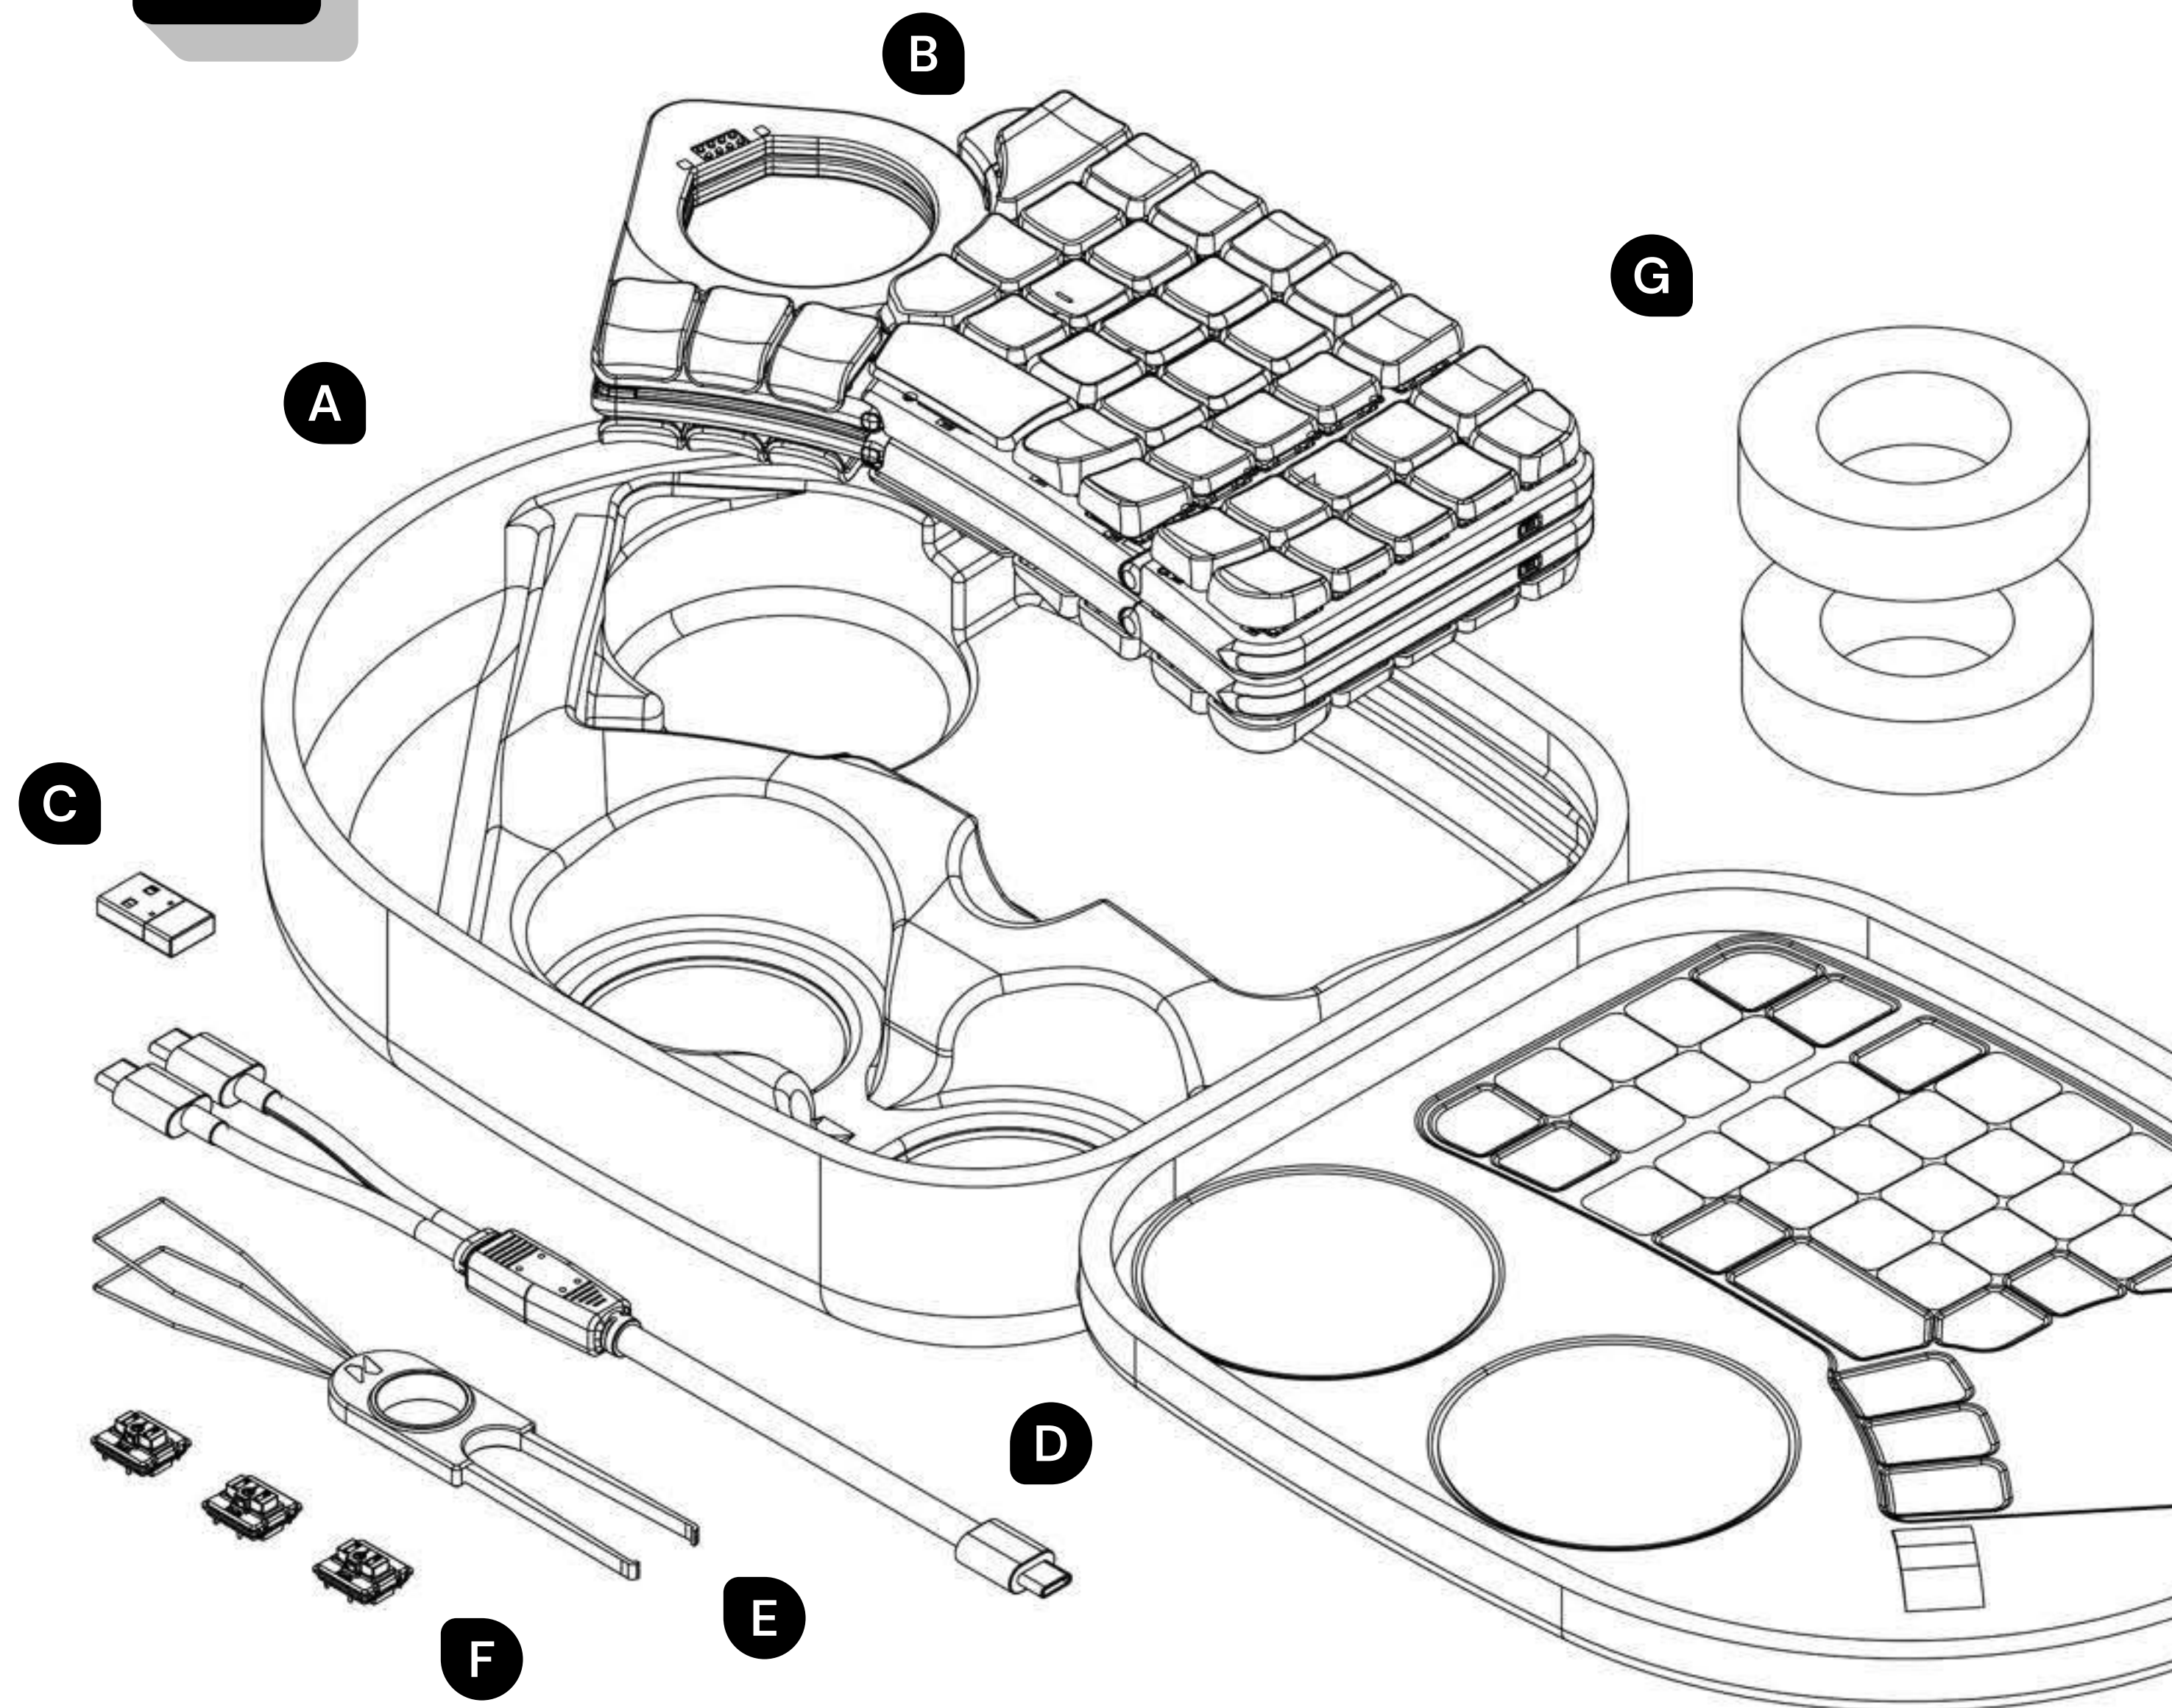

Product Information

Naya Create is a split-ergonomic keyboard design with a module dock on each half to hold specialized control modules. For more information on each module please refer to the user manual of that specific module.

Features

- Programmable Key Behavior
- Programmable RBG Backlighting
- In-built tenting up to 27°
- Modular design for additional inputs
- Foam-suspended PCB for sound dampening
- Dedicated Customization Software

OS Compatibility

- Windows 10 and Newer
- MacOS Ventura and Newer
- Tested on Ubuntu 24.04 LTS

Third-Party Input Compatibility

Due to compatibility, versions, and drivers of Windows/MacOS/Linux, functionalities of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

First Time Setup

The first time you turn on your Naya Create, you should connect your keyboard to a computer via USB (3.0) and update the firmware using Naya Flow (naya.tech/getstarted). If you experience issues updating the firmware try using a standalone USB 3.0 cable and update the halves one by one.

 Upon receipt your unit might have outdated firmware, please use Naya Flow to update it!

Spec Sheet

Internal Battery	Capacity	45mA
	Type	Lithium Ion
Physical Specifications	Dimensions	212 x 118 x 18mm
	Weight	1.4kg
Materials	Body / Dock / Wing	Aerospace Grade Aluminum
	Keycaps	Polycarbonate
	Hot-Swappable Switches	Kailh CPG-1232 (0.45x0.42mm pin variant)
LEDs	Backlighting	Reprogrammable RGB
Connectivity	Bluetooth Version	5.4
	Speedlink Connection	Using Bluetooth v5.4
	USB	3.0
Power	Input Voltage	4.2V


Power

Powering Create

Naya Create is designed to function while drawing power from either of two sources:

- 1. From a computer device connected via a USB 3.0 port.
- 2. From a docked module that contains a sufficient amount of charge.

Each half of the keyboard does contains a small internal battery that will keep the keyboard powered ON while hot swapping a module but is not intended to power normal operation of the keyboard. (The keyboard’s internal battery will be charged automatically while the keyboard is drawing power.)

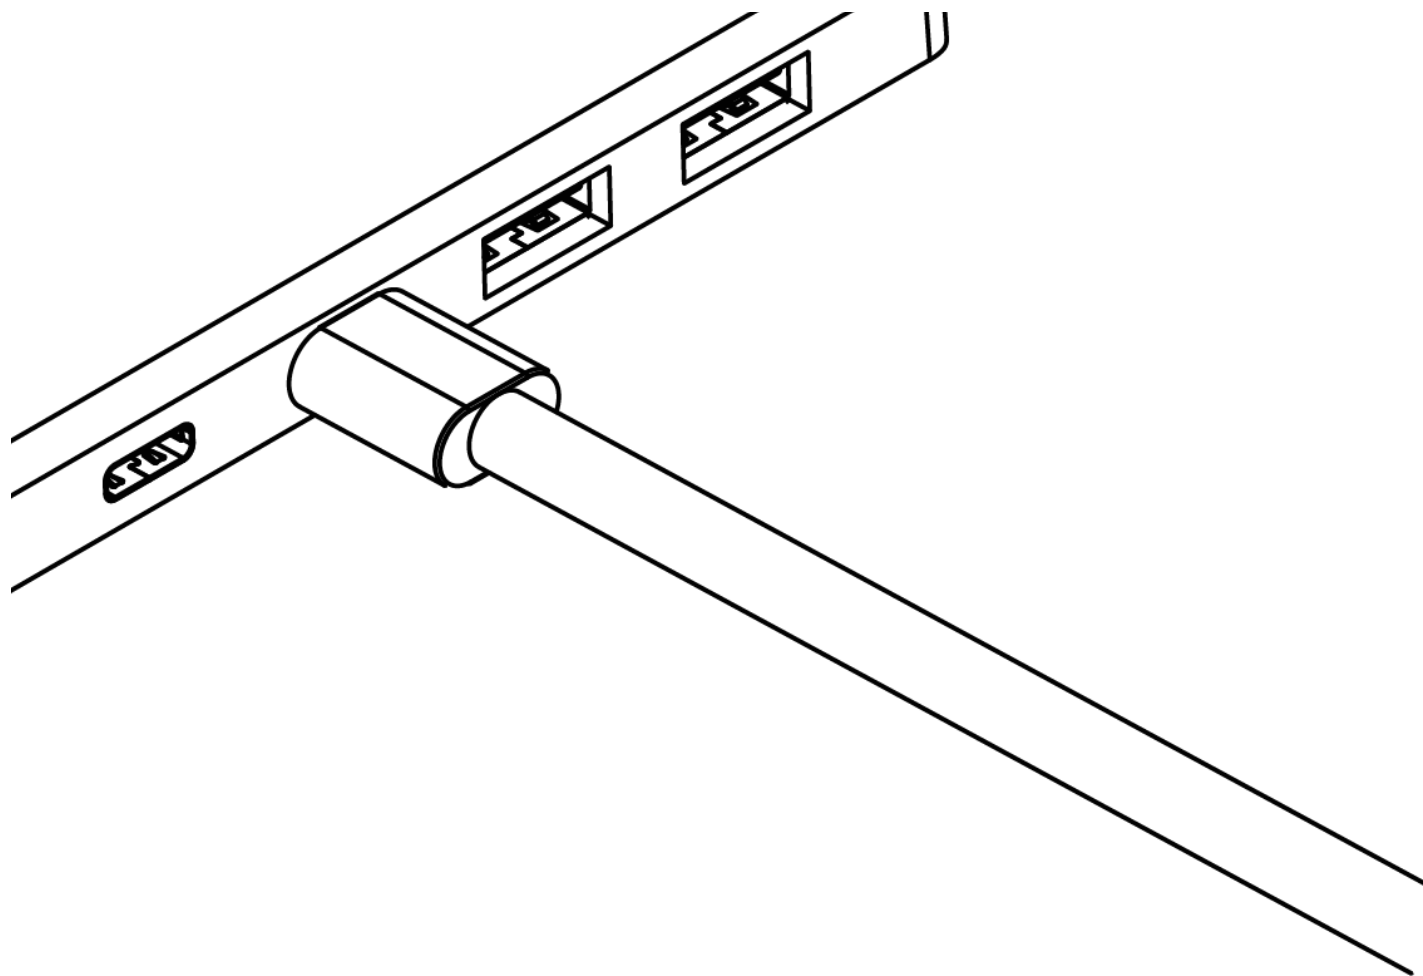


Charging Modules

Docked modules will be charged (if necessary) while docked, assuming the keyboard is connected to a compatible power source.

Modules can be charged with a wireless charger even while docked in a Naya Create.

While connected the LED indicators on each module will periodically indicate the battery state and if the module is charging.


For more information see the dedicated module user manuals.

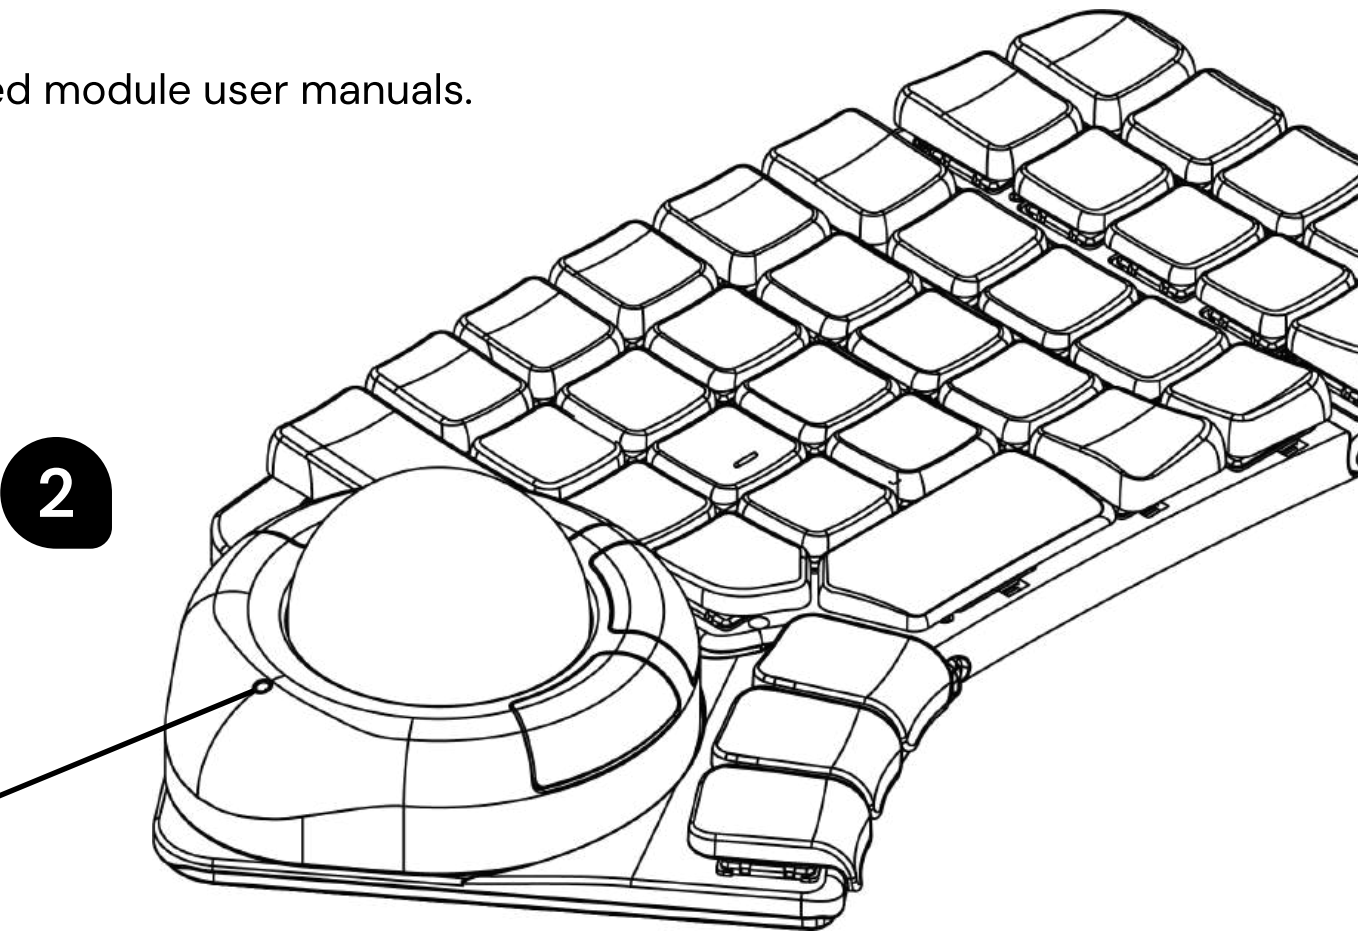


Indicator LED

LED	Status
Blinking Red ●	Battery low.
Solid Red ●	There is a problem with the charging device.
Blinking Orange ●	Battery charging.
Blinking Green ●	Battery charging, close to full.
Solid Green ●	Battery fully charged.
Blinking White ●	Connecting to keyboard.
Solid White for 2 seconds ●	Connected to keyboard and ready to be used.

2 Power ON

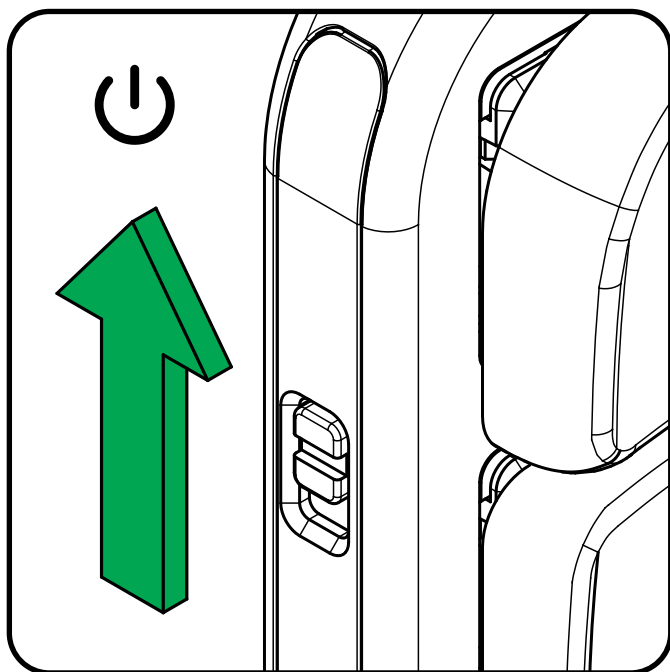

3 Power OFF

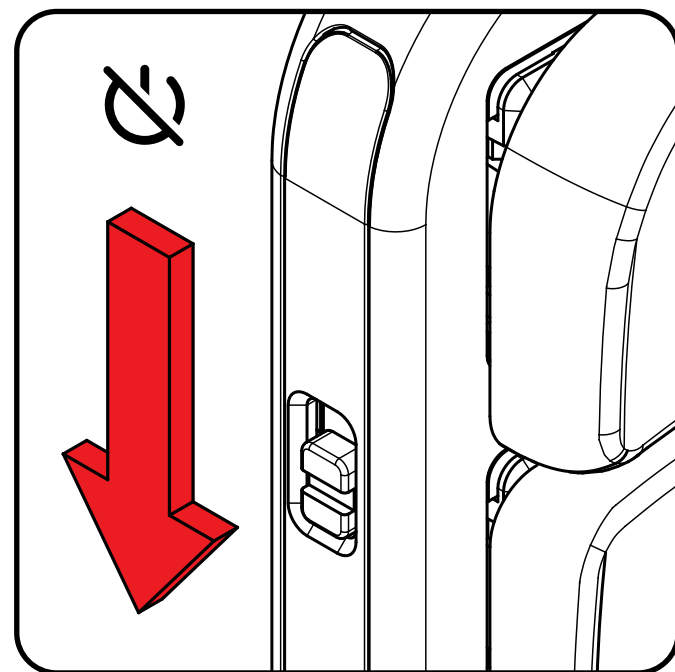

Turning Create ON/OFF

1. Locate the power switch on the side of each keyboard wing. Each keyboard half has independent power control.
2. Power ON – To switch the keyboard ON slide the switch to the ON position.
3. Power Create Left First – To ensure proper pairing between the keyboard halves it is recommended to power ON the left half first.

When the keyboard is turned ON and has adequate power, the LEDs will light up to indicate it's been powered ON.

3. Power OFF – To switch the keyboard OFF slide the switch the OFF position.

 Create will respect the ON/OFF state even while connected over USB.

Sleep Mode

Sleep Mode is a power-saving feature designed to reduce energy consumption while also allowing your device to quickly resume full functionality. Sleep Mode helps extend battery life with minimal power use.

The keyboard will enter Sleep Mode when the device is idle for 1.5 minutes (configurable).

Deep Sleep

Deep Sleep will disconnect bluetooth connections to preserve battery.

The keyboard will enter Deep Sleep when the device is idle for 10 minutes (configurable).

Best Practices

 **Be sure to power OFF both halves of your Naya Create when not in use to preserve battery life.**


Output Modes

Create can be connected to multiple devices but will only output to a single device at a time. You can switch your active device by selecting the corresponding output mode.

USB Output


- 1. Connect both short ends of the USB-C Y-Cable to the USB-C ports on Naya Create.
- 2. Connect the long end of the USB-C Y-Cable to a USB-C port on your computer.
- 3. Ensure your Create is powered ON.
- 4. Select USB output mode on the Naya Default Keymap by holding LAYER 2 (A5/H1) and pressing 'Z' (LC4) on your keyboard.


Important Note: The first time you turn on your Naya Create, you should connect your keyboard to a computer via USB (3.0).

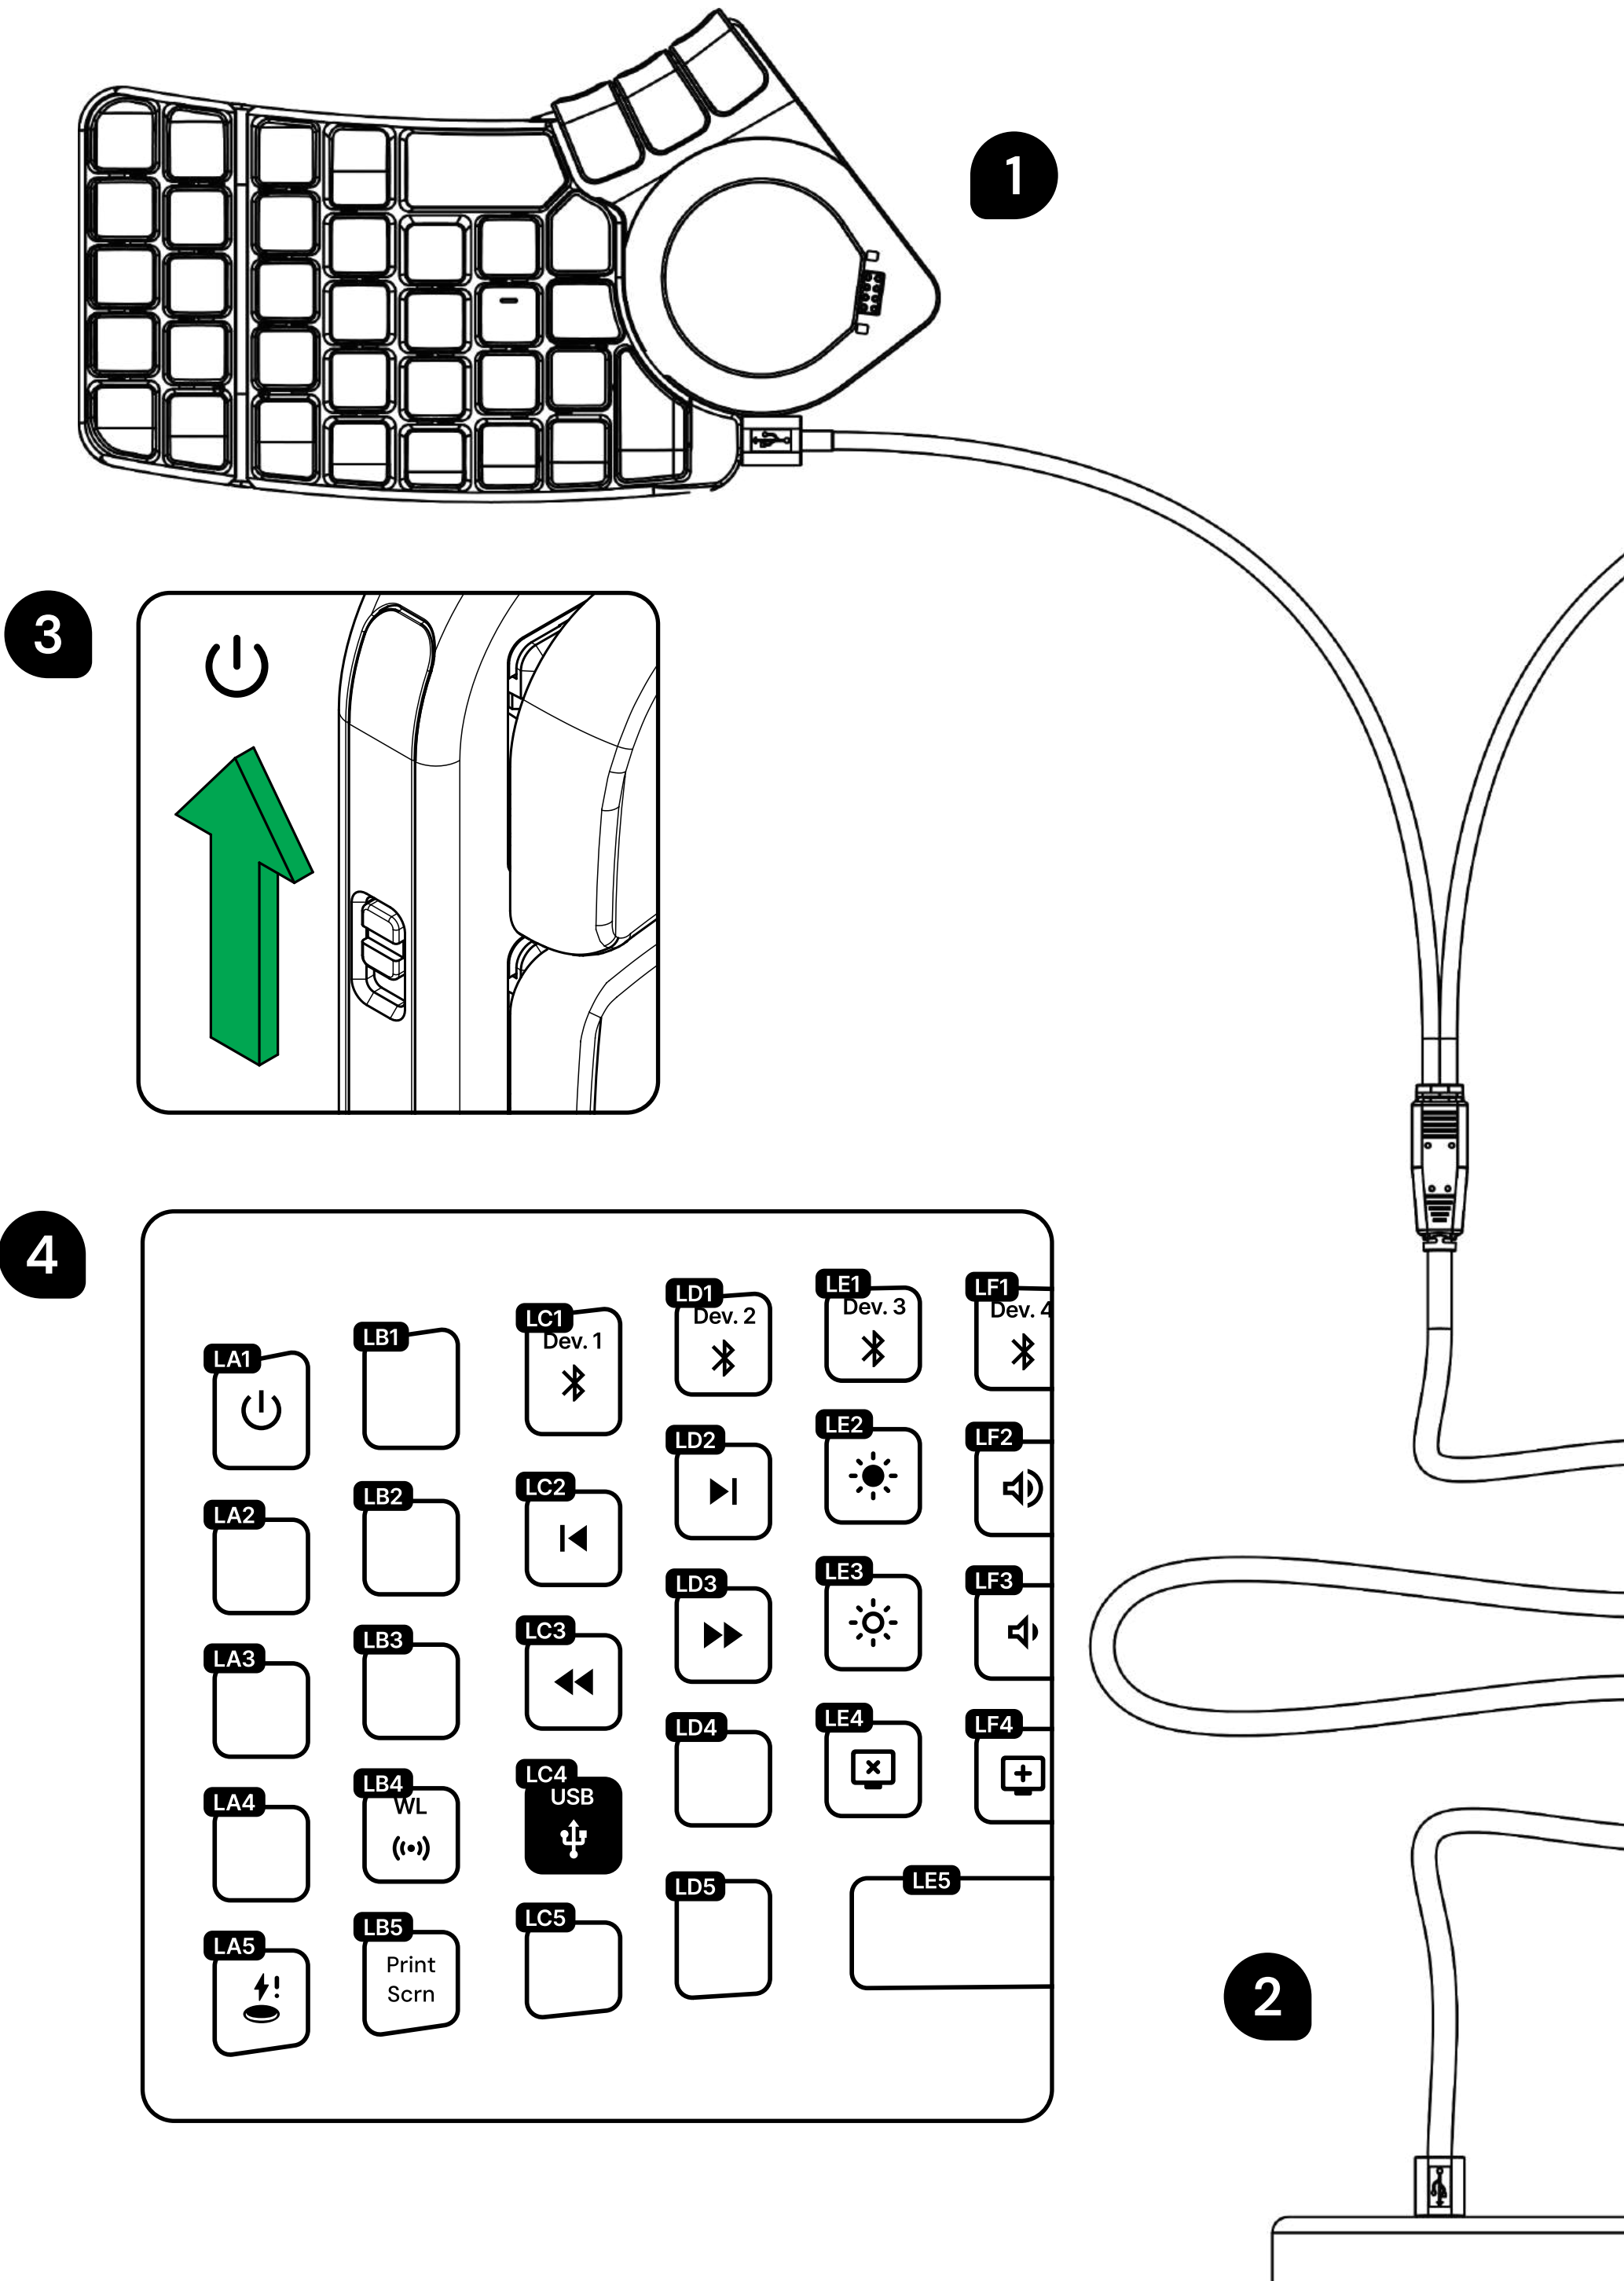

Bluetooth Output

1. Select a device slot – Hold the Layer 2 Key (A5/H1) and press one of the number keys 1–4 to select a device slot.
2. Enter Pairing Mode – Hold the Layer 2 Key (A5/H1) and press the 5 key (LG1) to enter pairing mode. Naya Create should now be visible to your device and can be paired.
3. The slot selected will now always attempt to connect to the paired device, should the connection attempt fail Create will default back to the previous connection state.



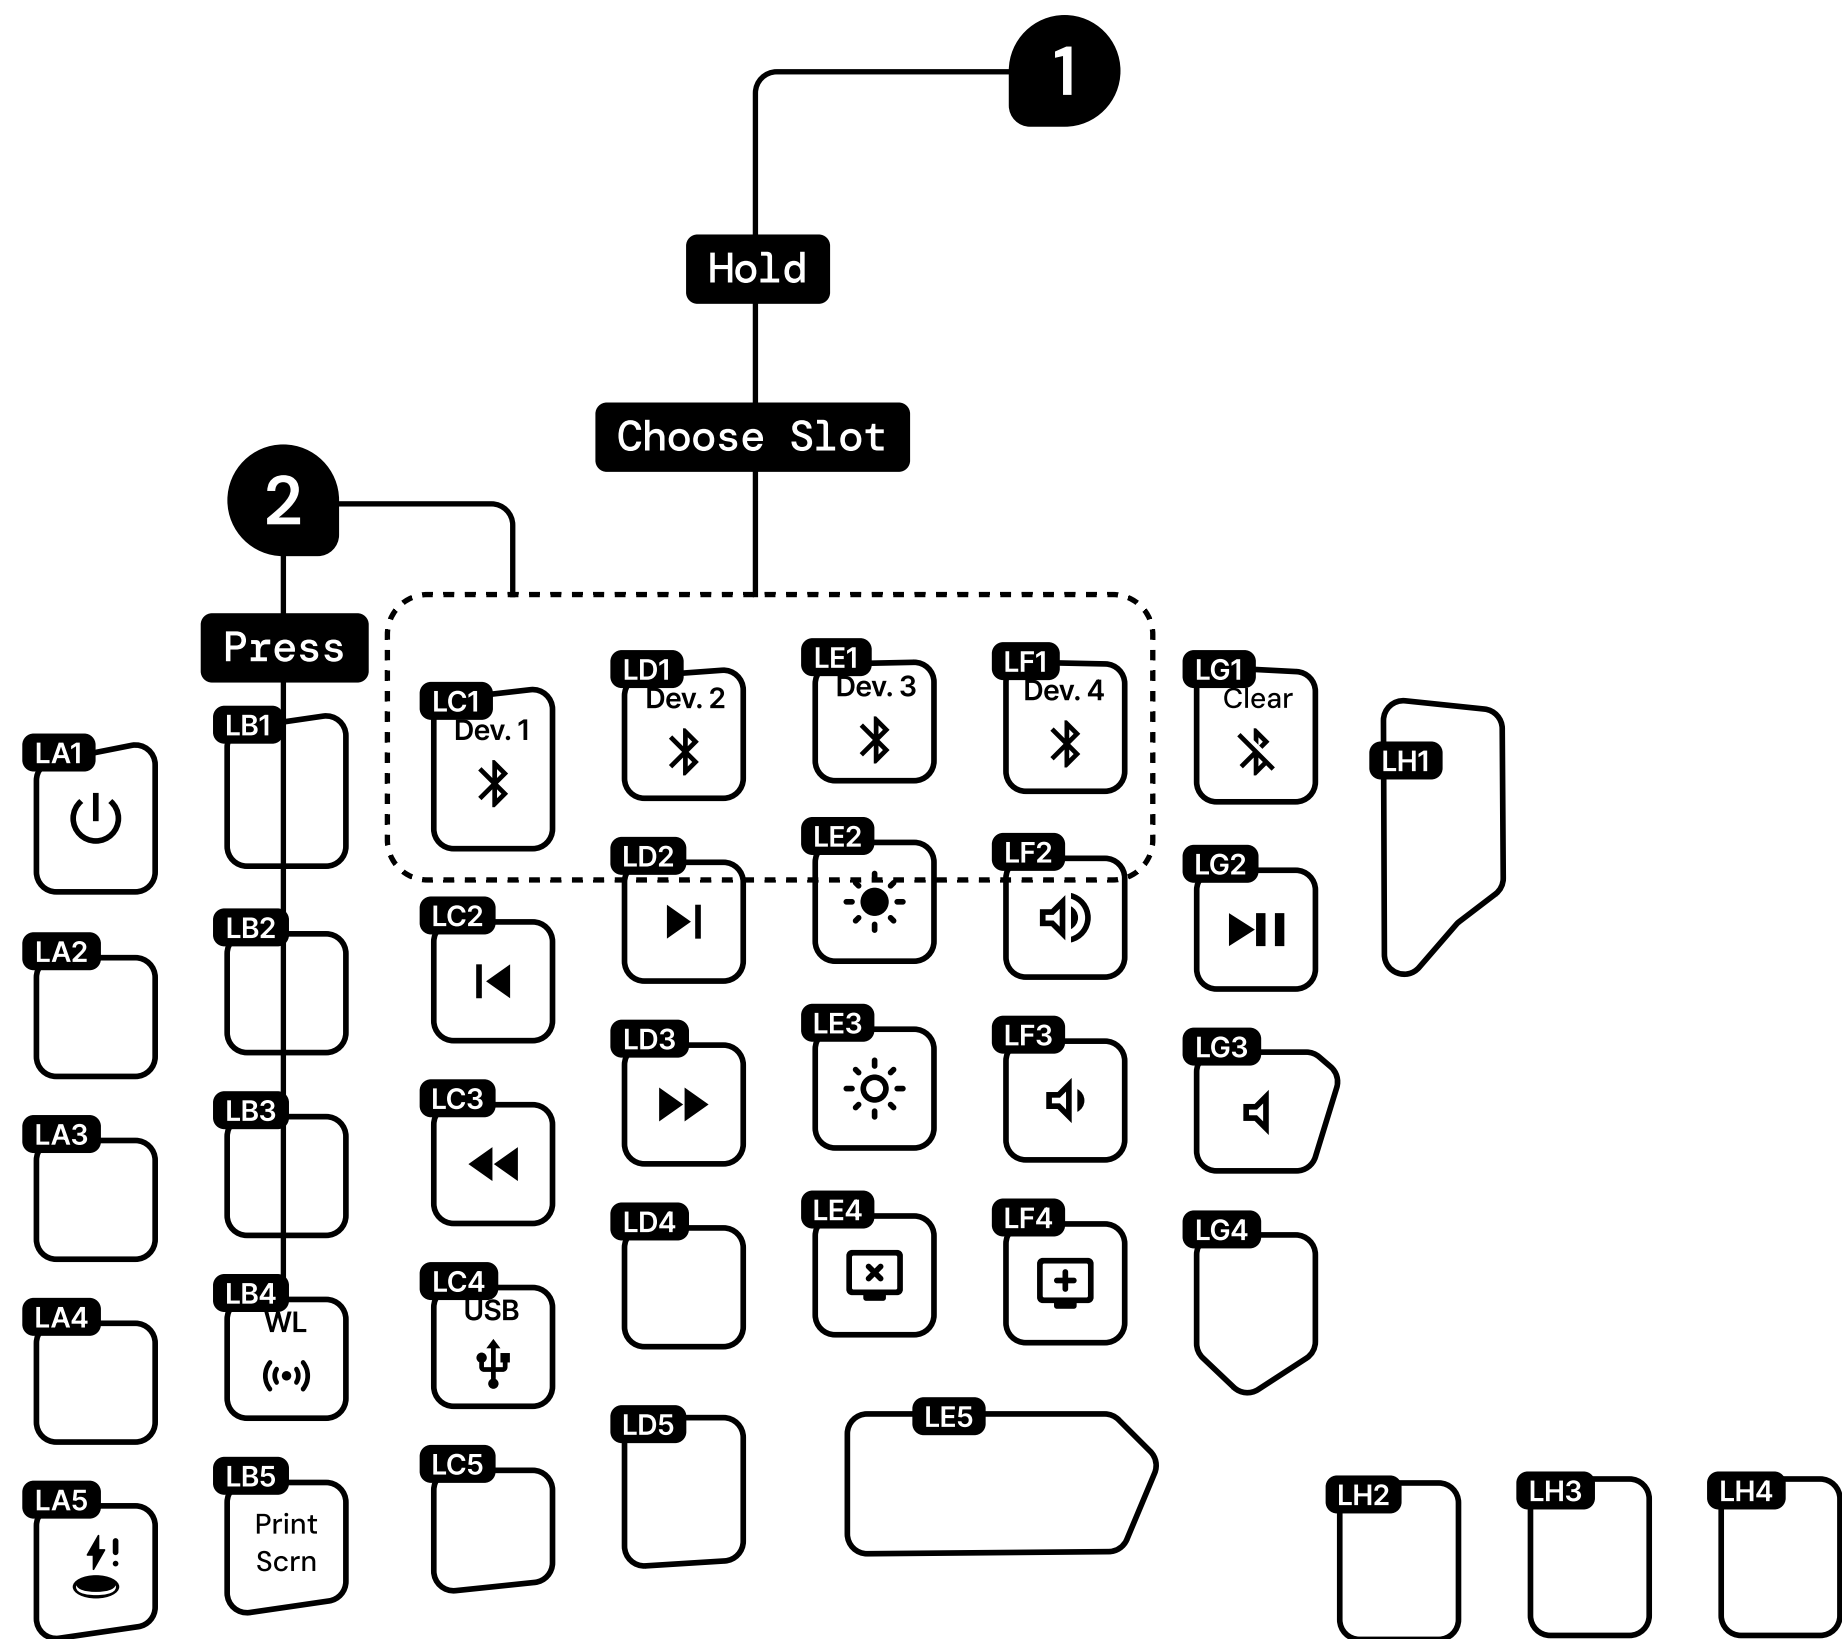


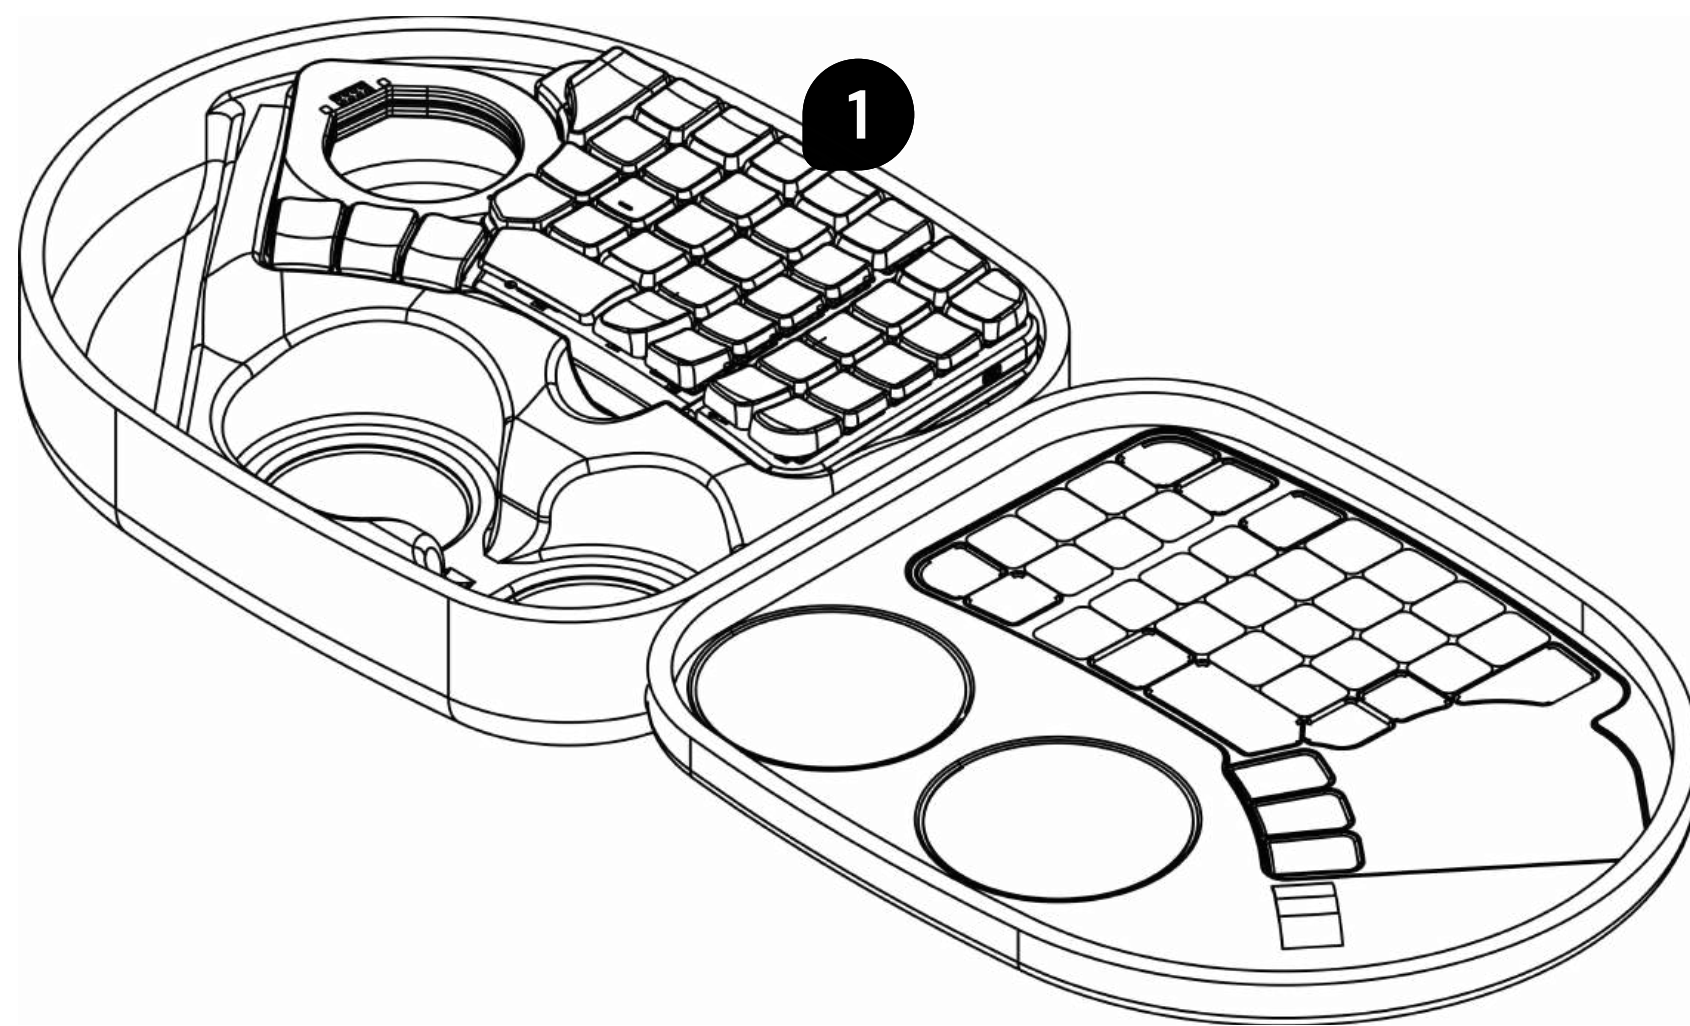

Using Your Naya Create



Handling

1. Open the Naya Travel Case on a flat surface. The two halves of Naya Create are magnetically attached to one another.
2. Gently remove both keyboard halves by grasping the keyboard by the metal body and lifting them out of the case. Do not grasp the keyboard by its keys when handling.
3. Separate the two halves by grasping the metal body of each half and pulling them apart.

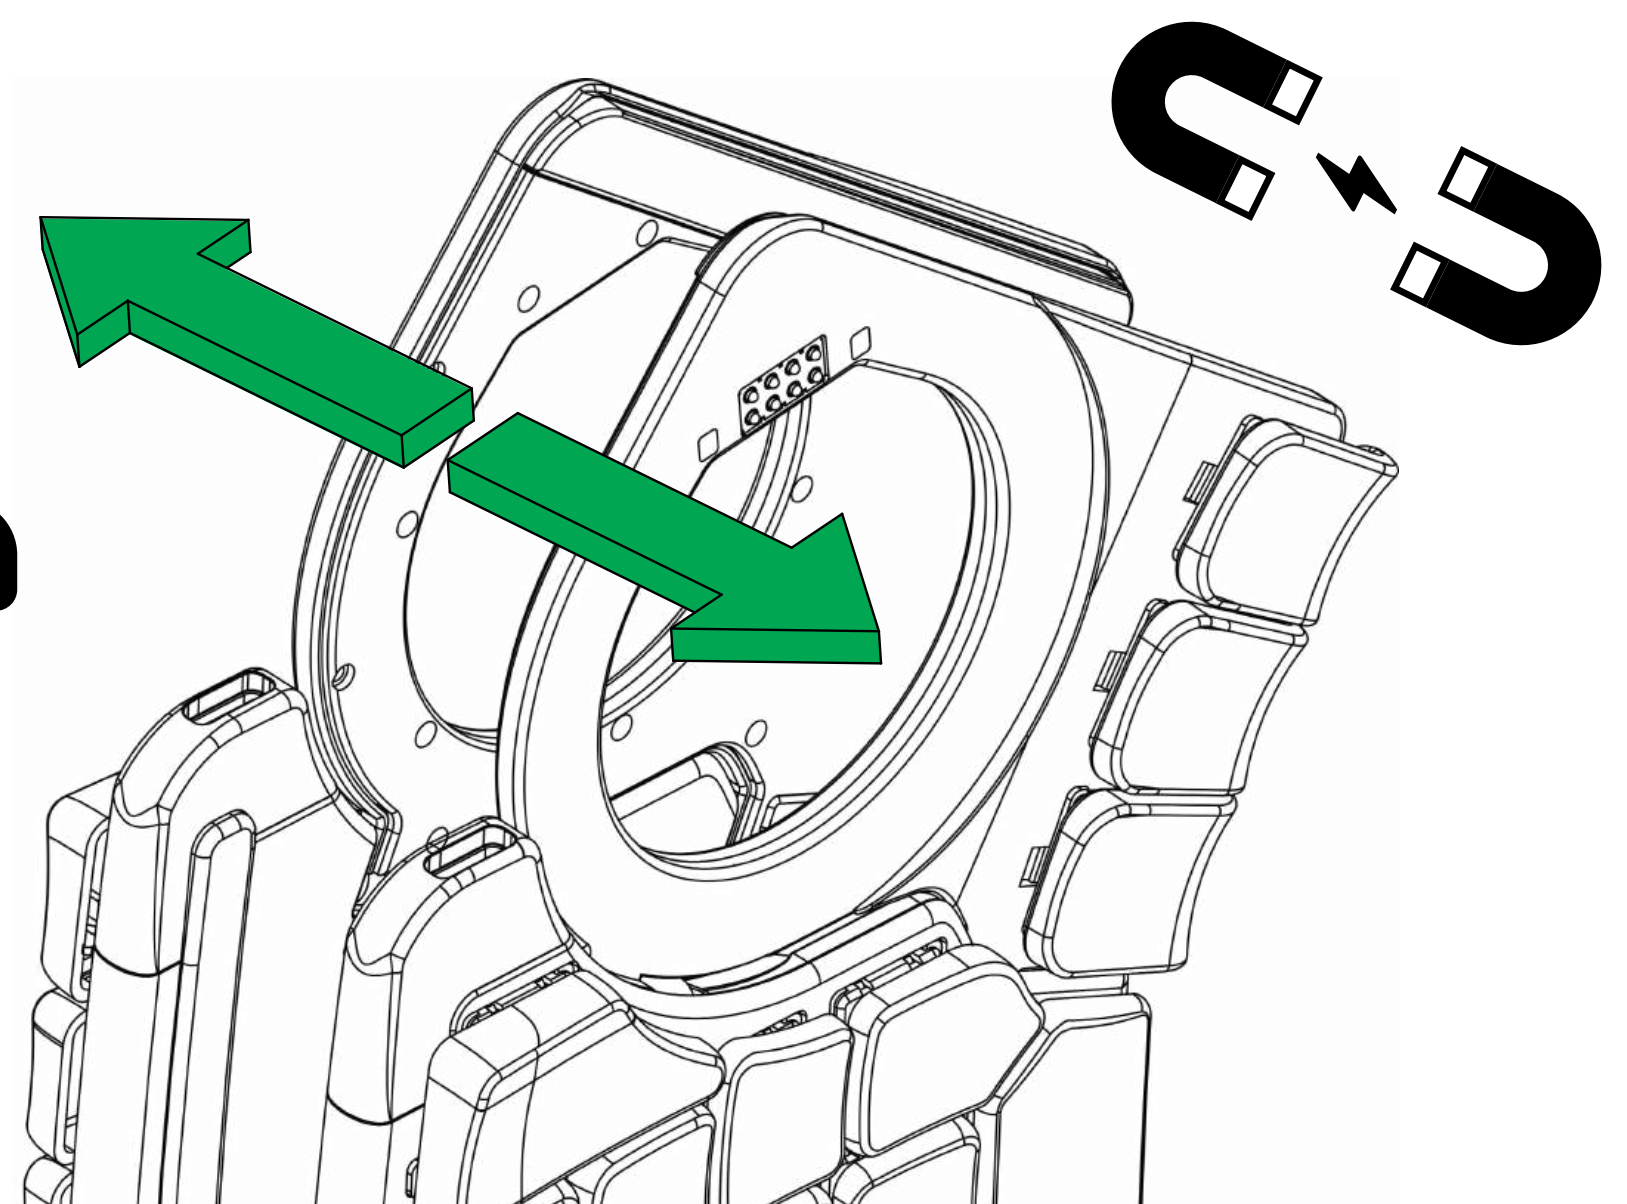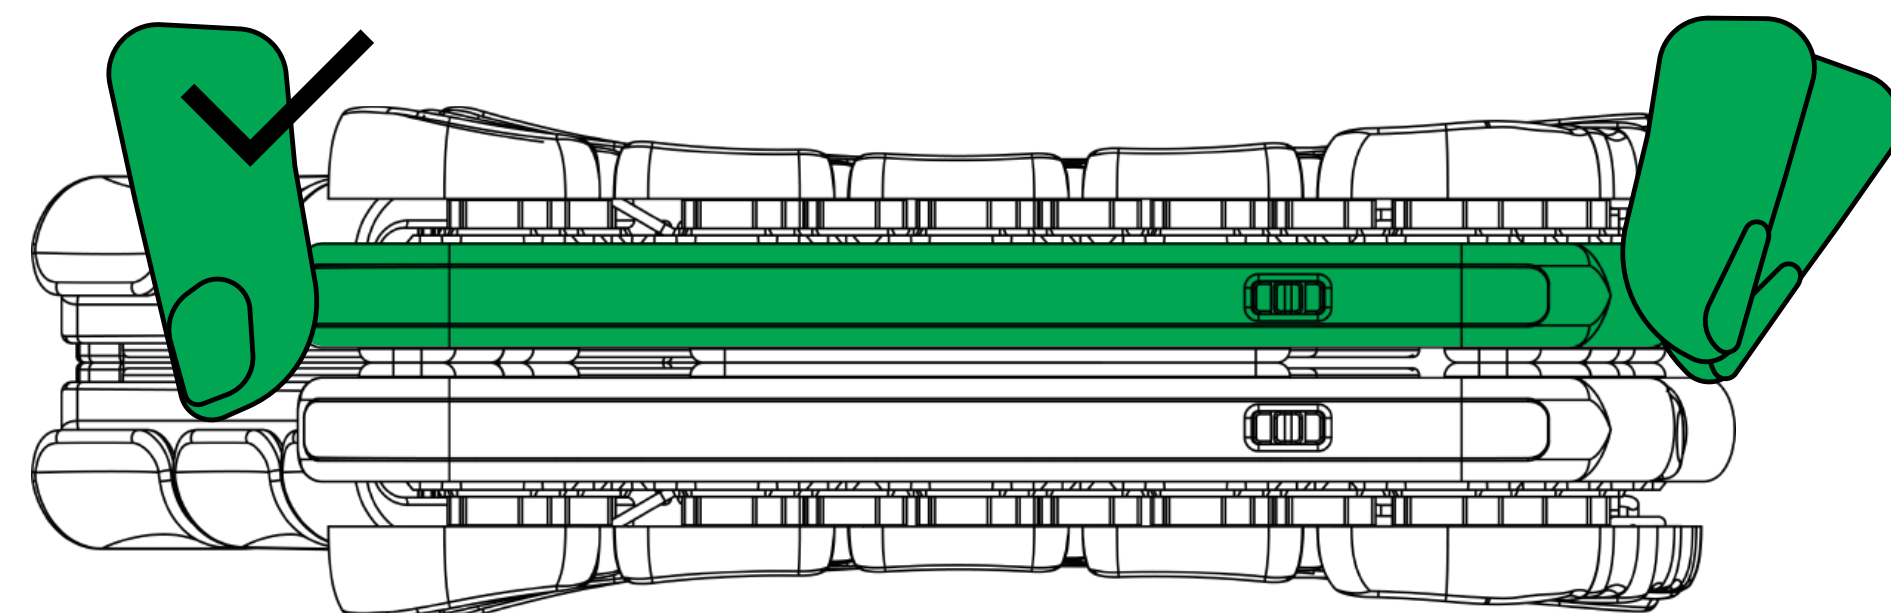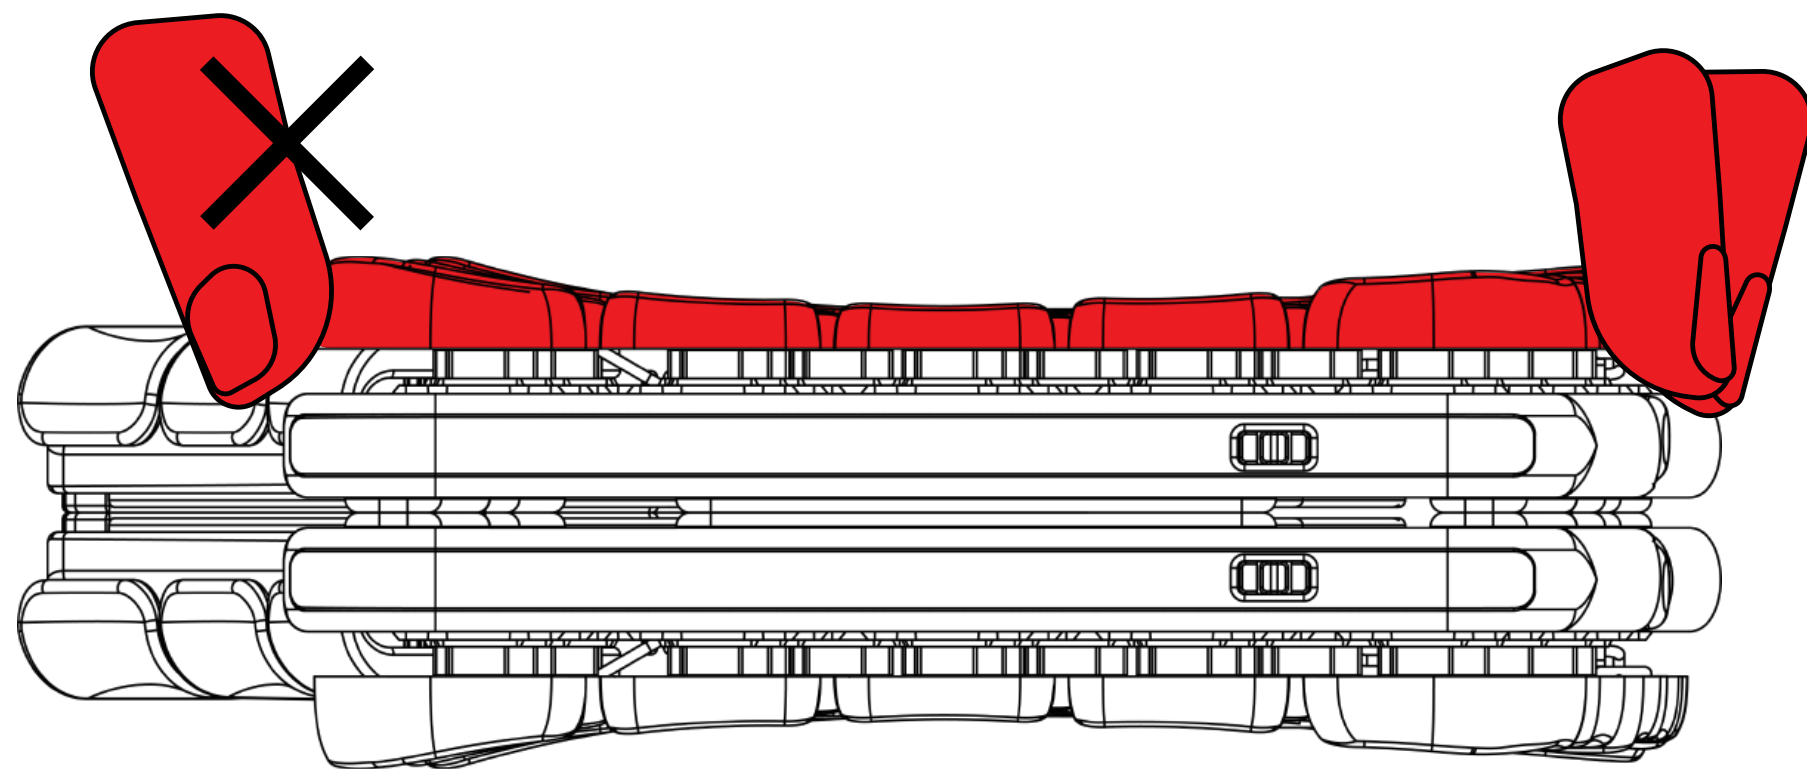

Tenting

1. Turn off Create – Disconnect the USB-C cable and module and ensure that the power switches are in the OFF position.
2. Lift Create – With one hand, pick up the keyboard and firmly grasp the main body.
3. Grasp wing hinge – With the other hand place your thumb over the middle two wing keys and grasp firmly with your remaining fingers on the bottom.
4. Bend wing hinge – Apply steady pressure upwards (towards the keycaps) until the wing reaches the desired angle.
5. Grasp dock hinge – Grasp the dock by pressing your thumb onto the metal body (avoid pressing on connection pins), supporting the bottom of the dock with your remaining fingers.
6. Bend dock hinge – Apply downward force to the module dock, until it reaches the desired angle.
7. Repeat for both halves – Repeat this process for the other half of Create.

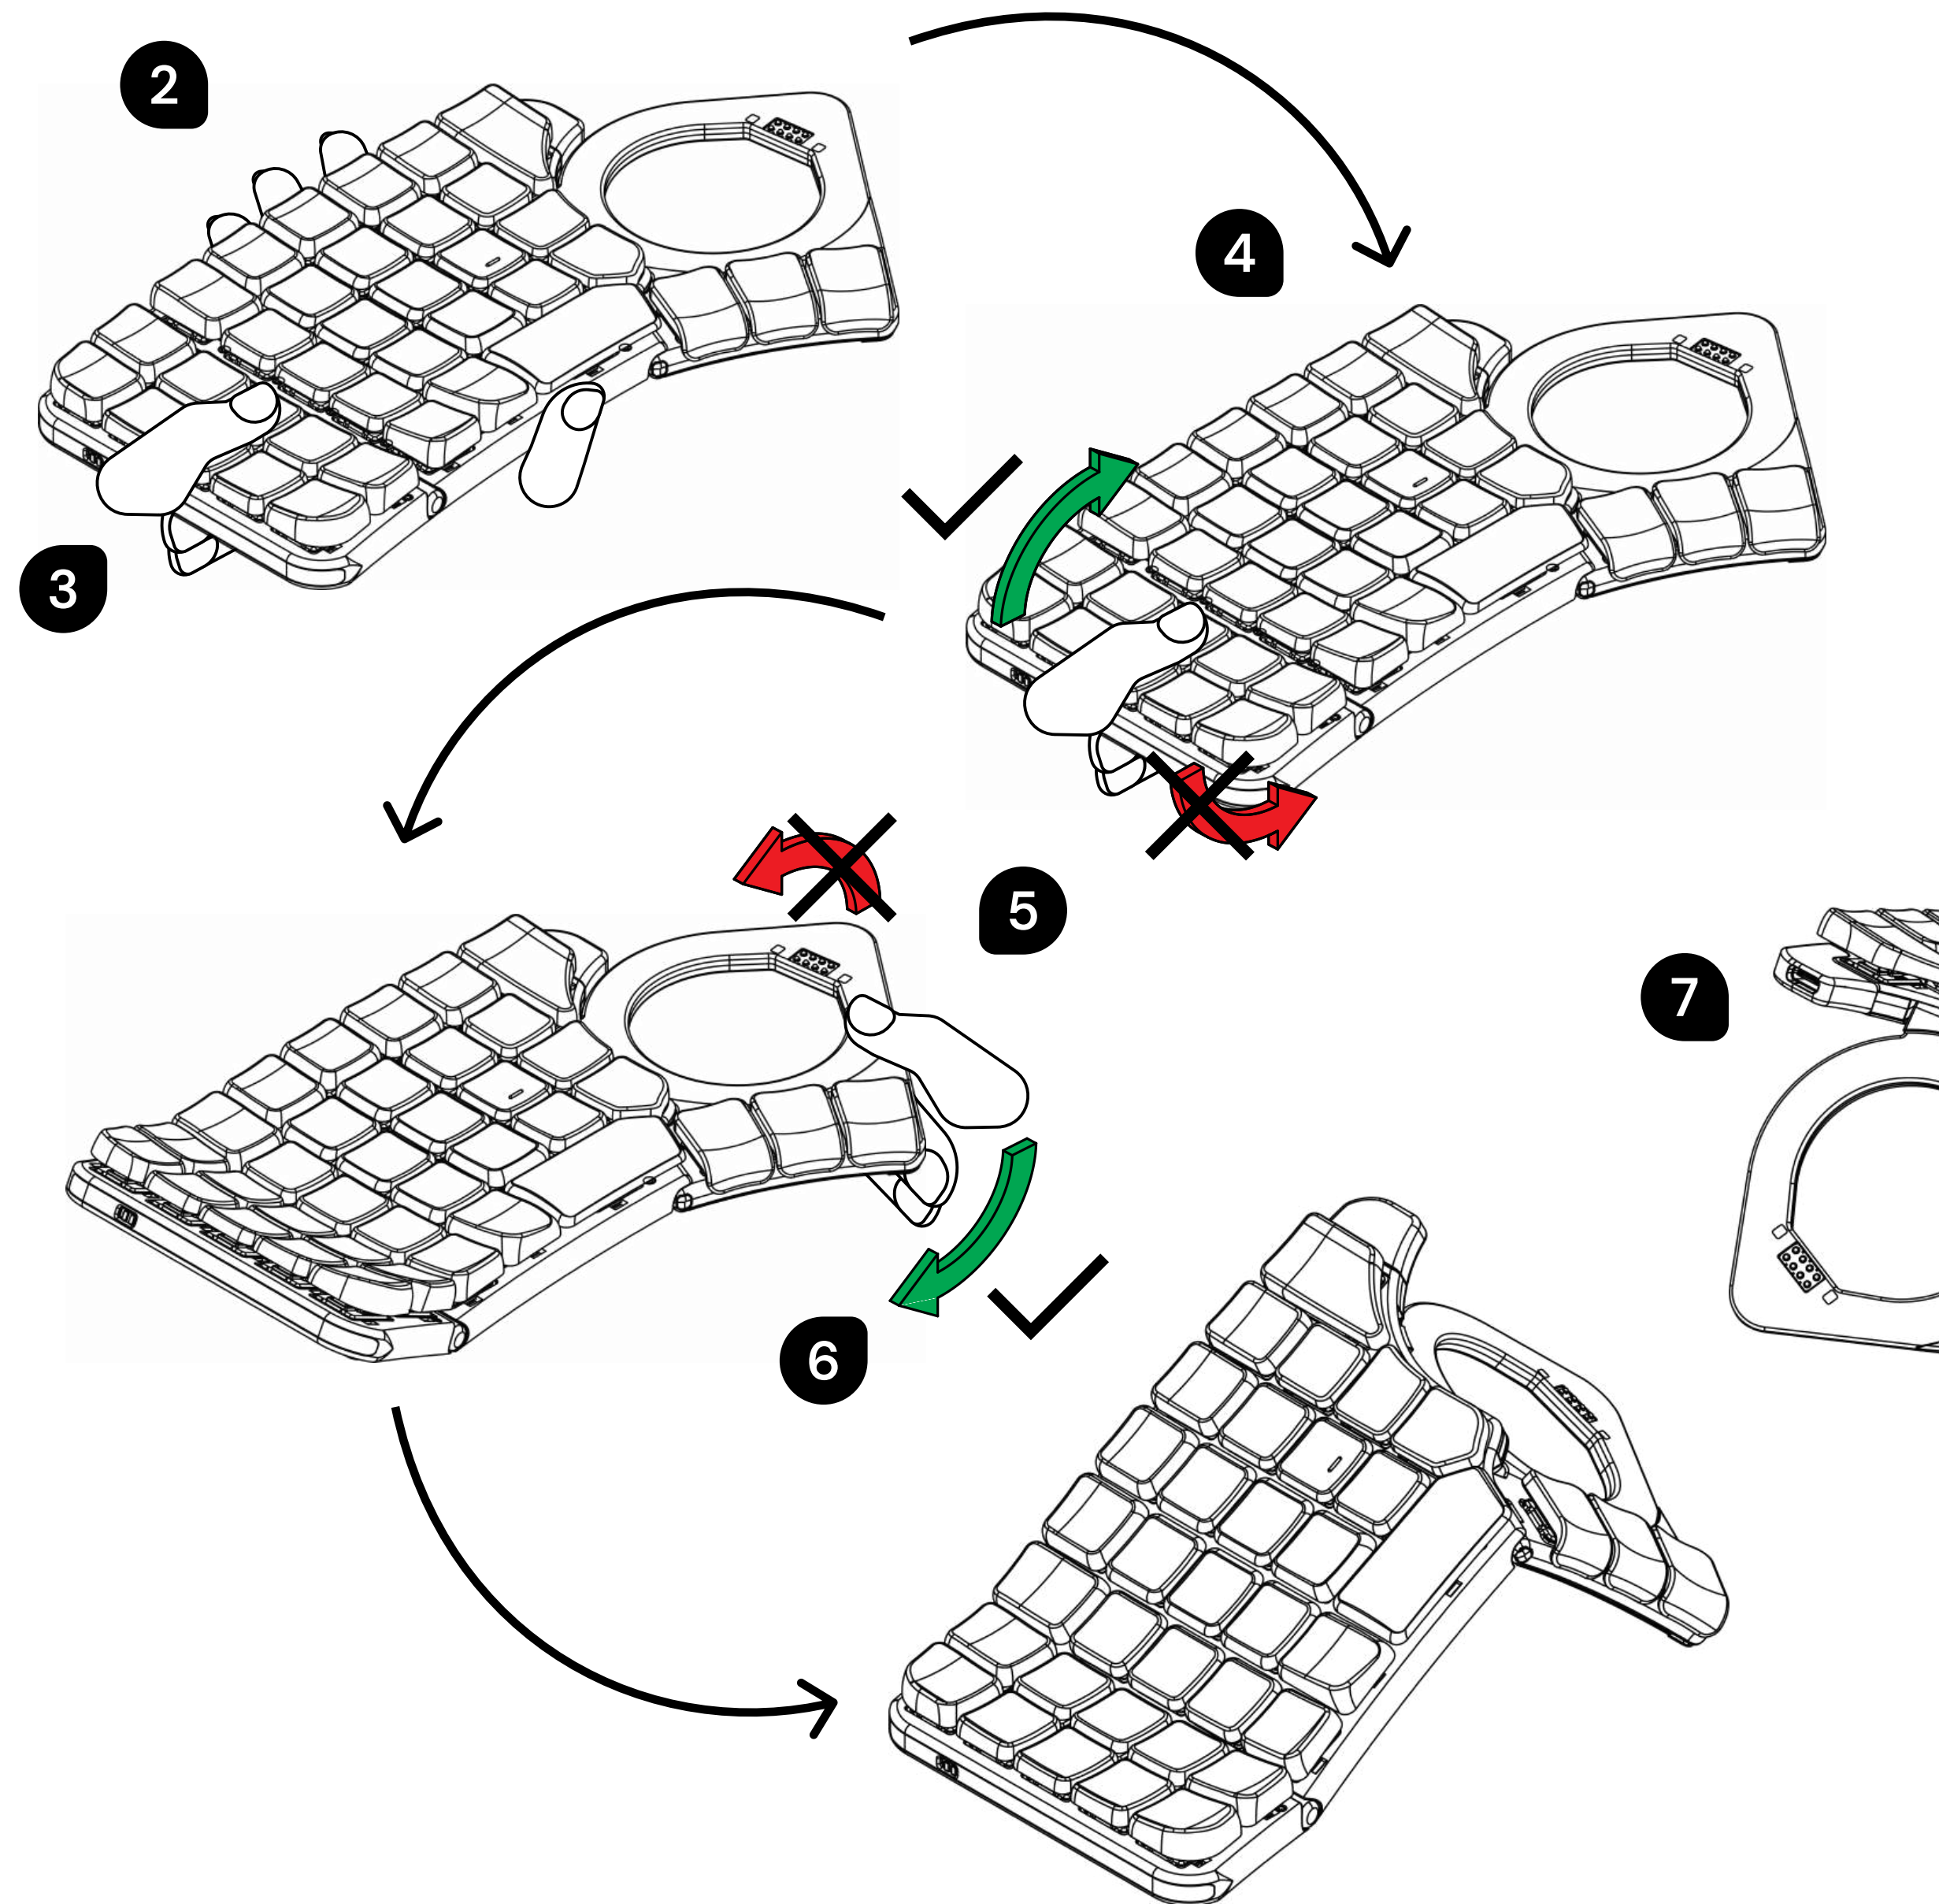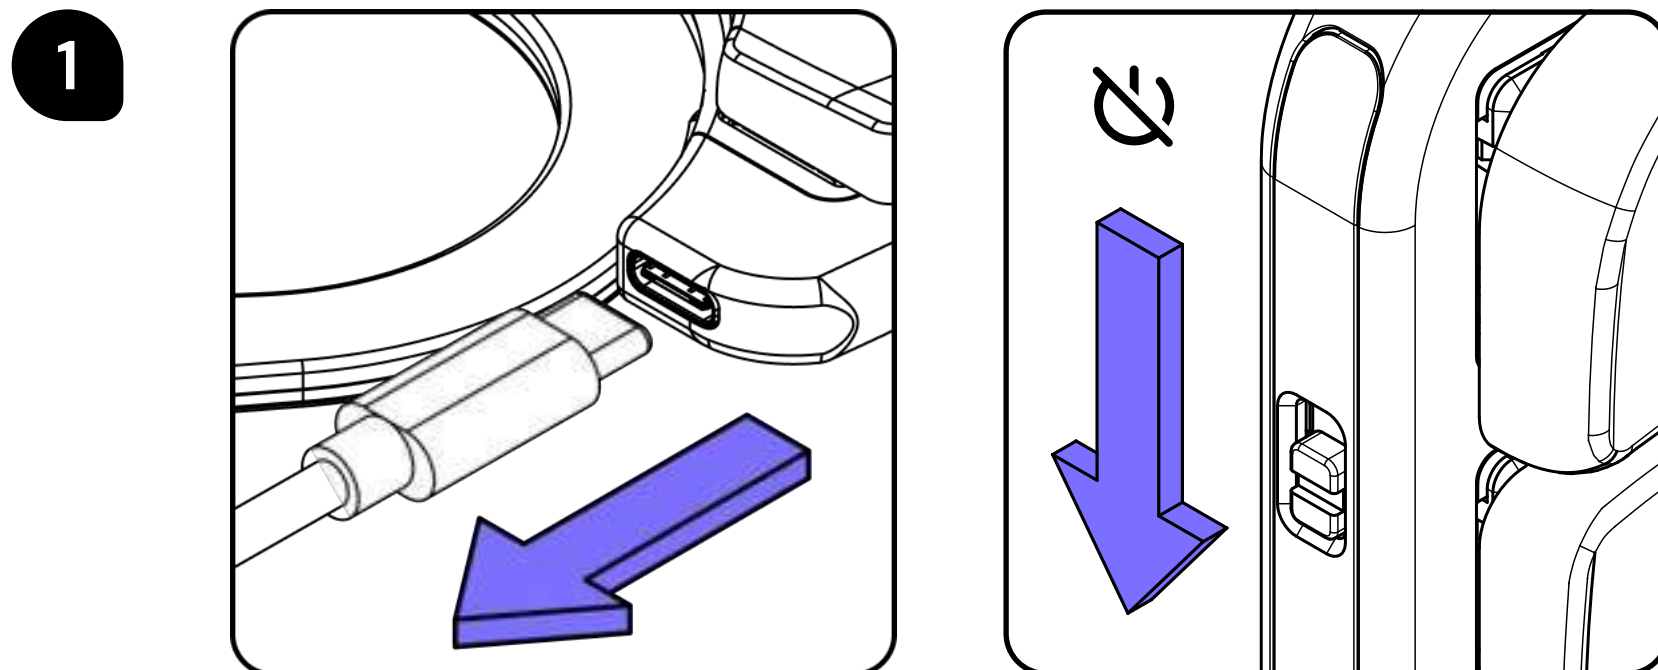


Do not attempt to force the hinges of Naya Create beyond their normal range of motion!

Docking & Removing Modules

Docking Modules


- 1. Align module – To dock a Naya module with your Naya Create keyboard, align the pogo pins of the module and keyboard.
- 2. Insert the module – Gently insert the module. The magnets in the dock and on the bottom of the module will attract and hold it in place.
- 3. Ensure proper seating – Make sure the module is seated completely flat. This ensures a proper connection with the data pins for full functionality.

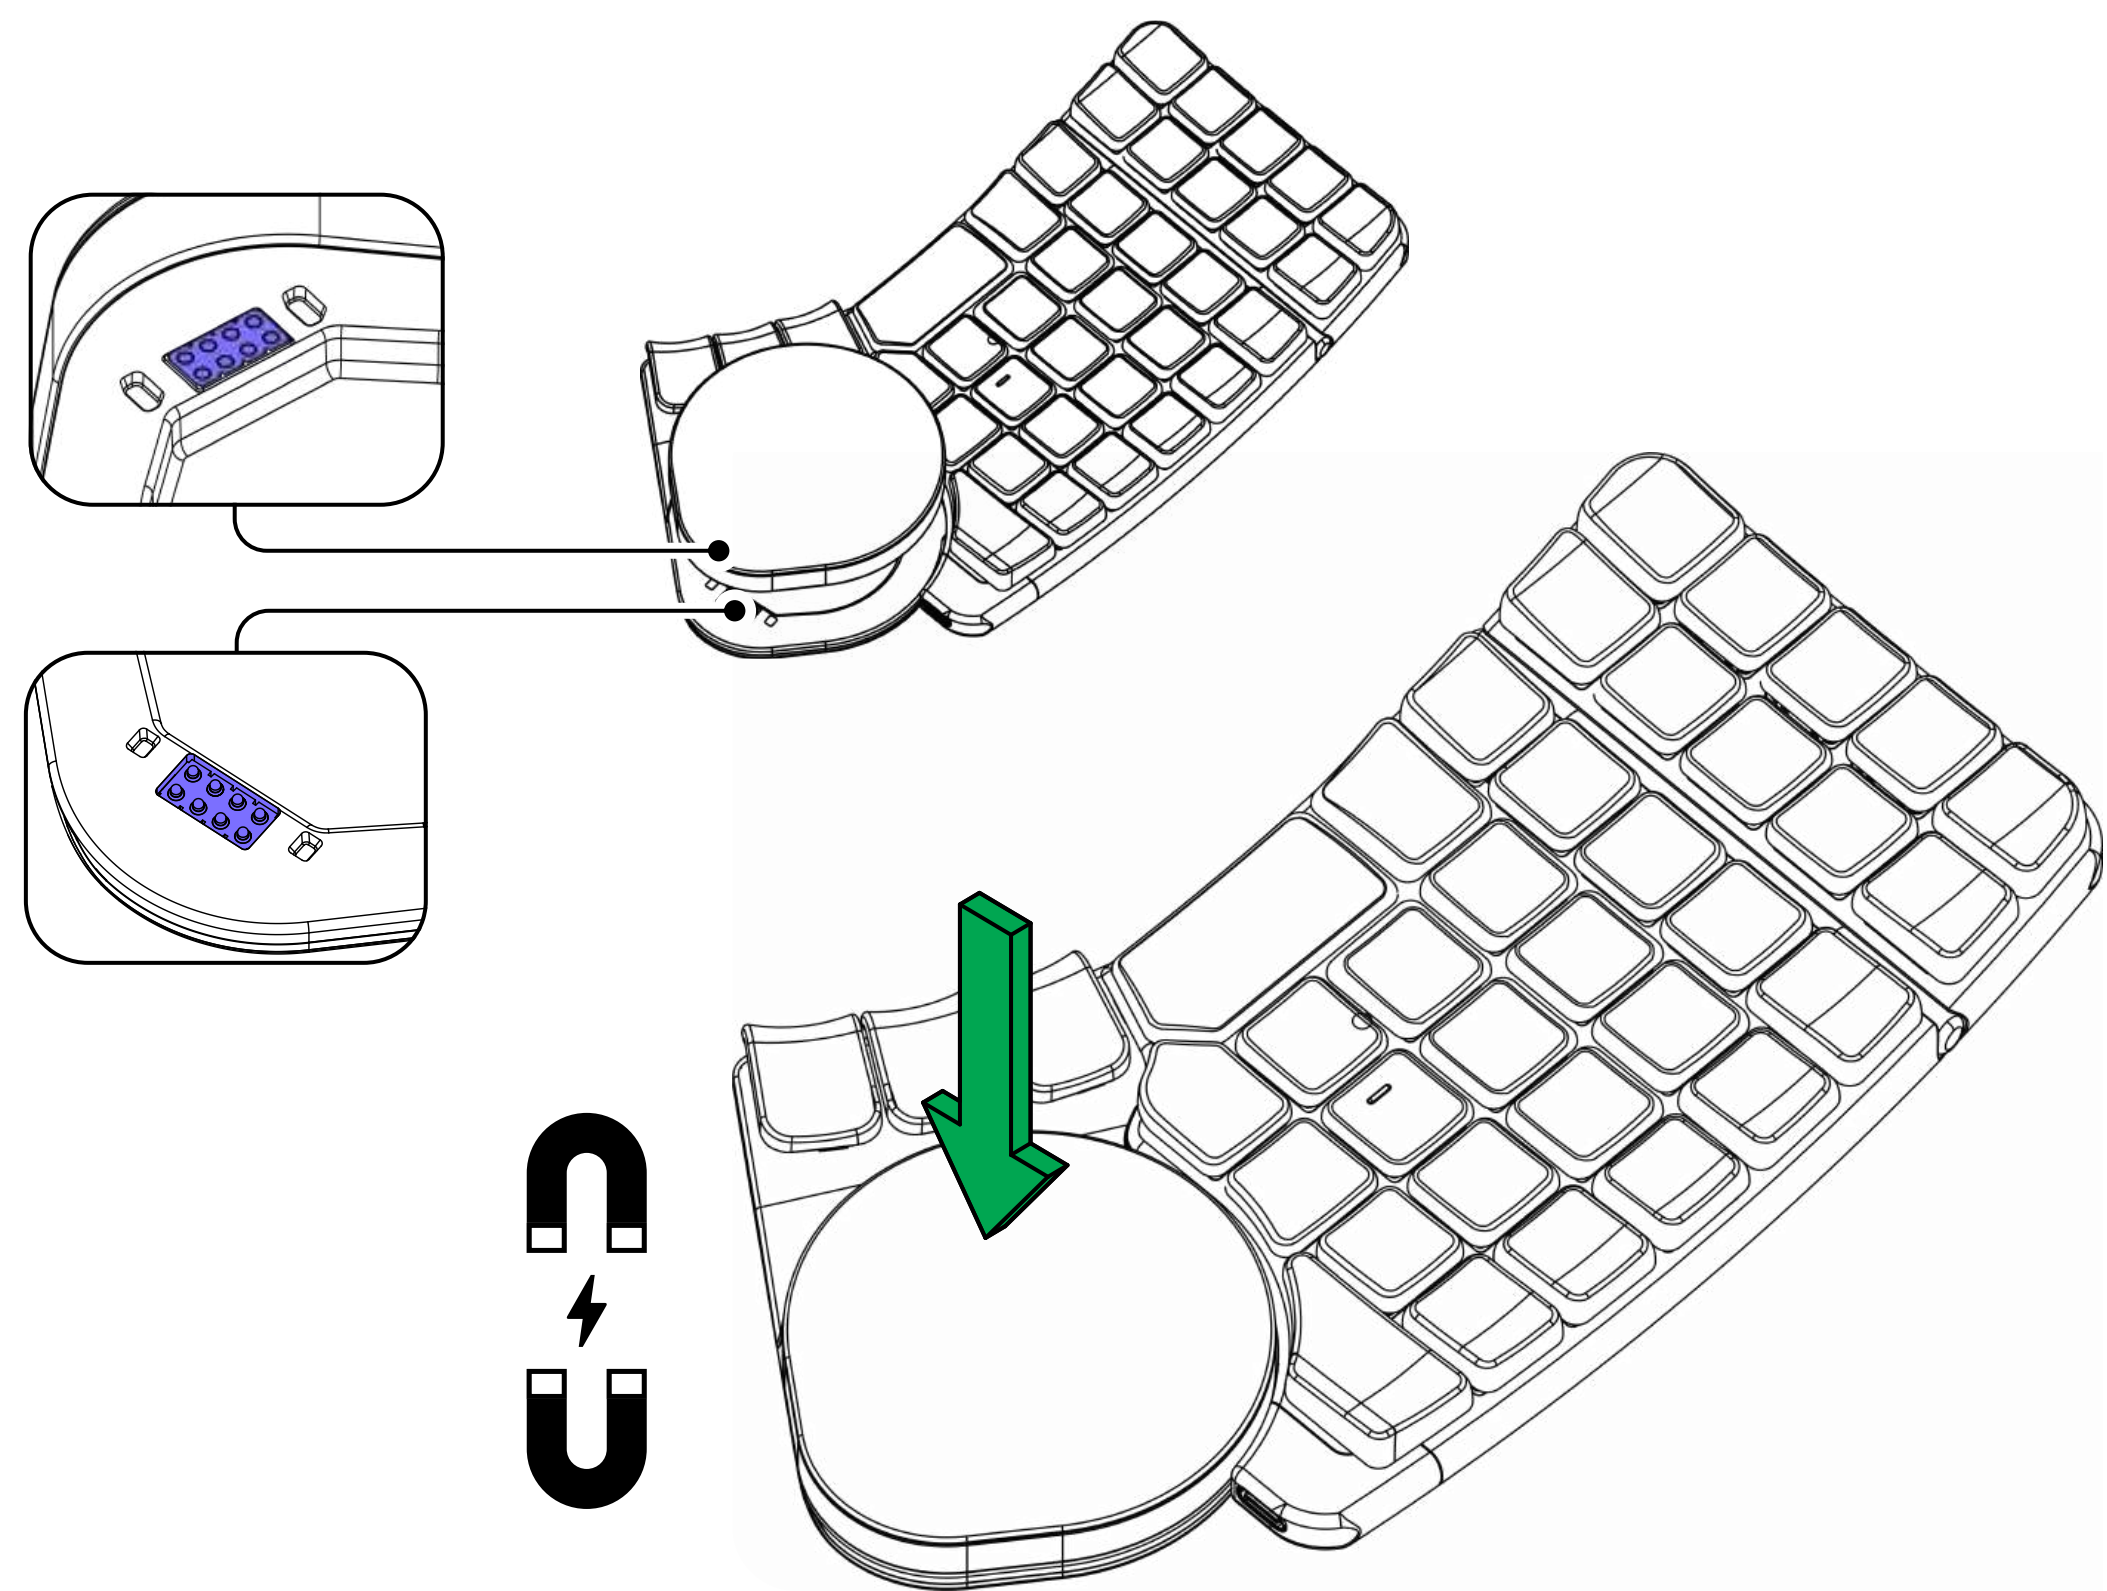

 Be careful to not bridge pogo-pins while docking or undocking modules!

Removing Modules

- 1. Hold Create – Hold the keyboard aloft, or rest it tented on a flat surface for stability.
- 2. Grasp the module – Grasp the top of the module, placing one or more fingers underneath the module through the module dock cutout, and gently press upward.
- 3. Undock the module – The module will separate from the magnetic link with the module dock.
- 4. Refer to User Manual – For specific undocking guidance for individual modules, please refer to the user manual for that module.

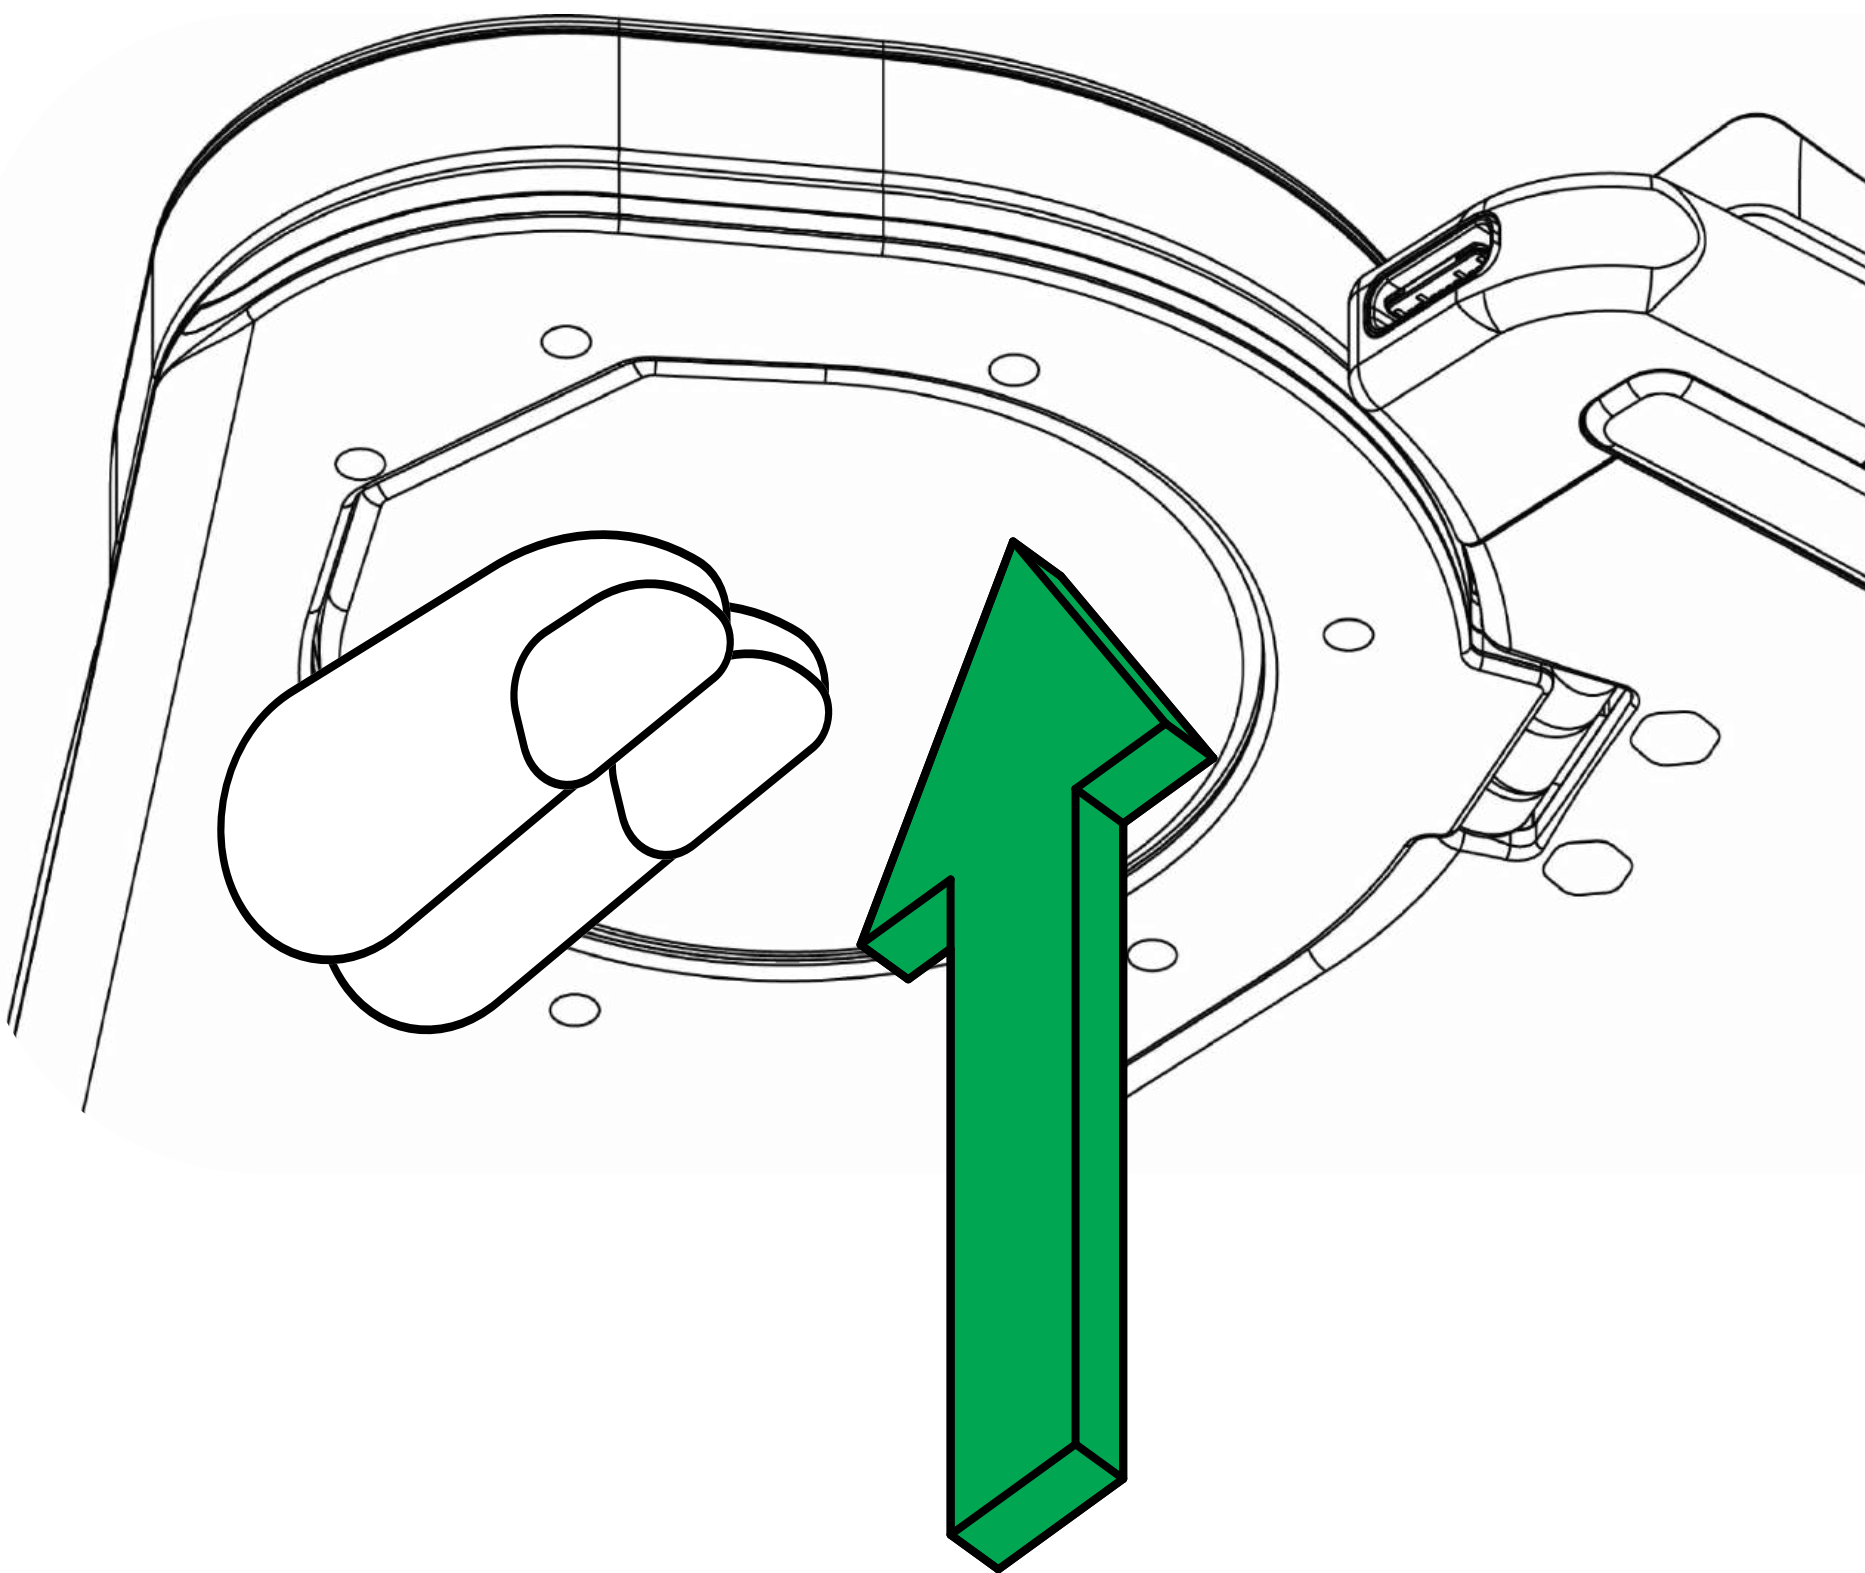


Maintenance & Care

- 1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the off position.
- 2. Remove dust and debris – Take a dry microfiber cloth and gently wipe the surface of the keyboard. Start by wiping the keycaps in a circular motion to remove dust and dirt.

 **Do not use liquid cleansers to clean Create!**


Do not clean pogo pin connections with liquids, chemicals or physical abrasion as you risk permanently damaging the connection.

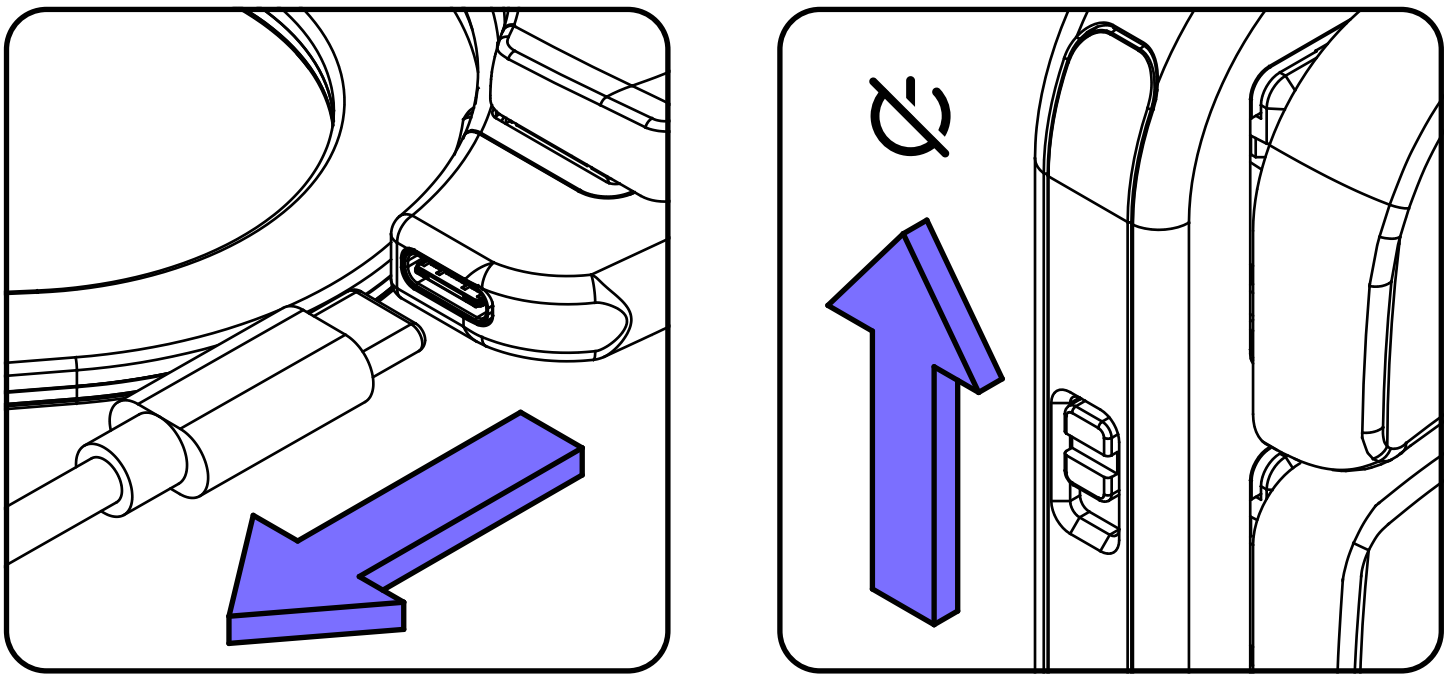



Storing Naya Create

Naya Create can be stored in your travel case with modules attached, there will be a slight power draw that may trigger battery protection if left unattended for too long. Make sure to:

- Turn off both halves of your Naya Create to prevent accidental keypresses and preserve battery.
- Use the provided spacers to pack empty space and prevent shifting while stored.
- If left stored for a long time disconnect any modules from the dock to prevent battery drain.

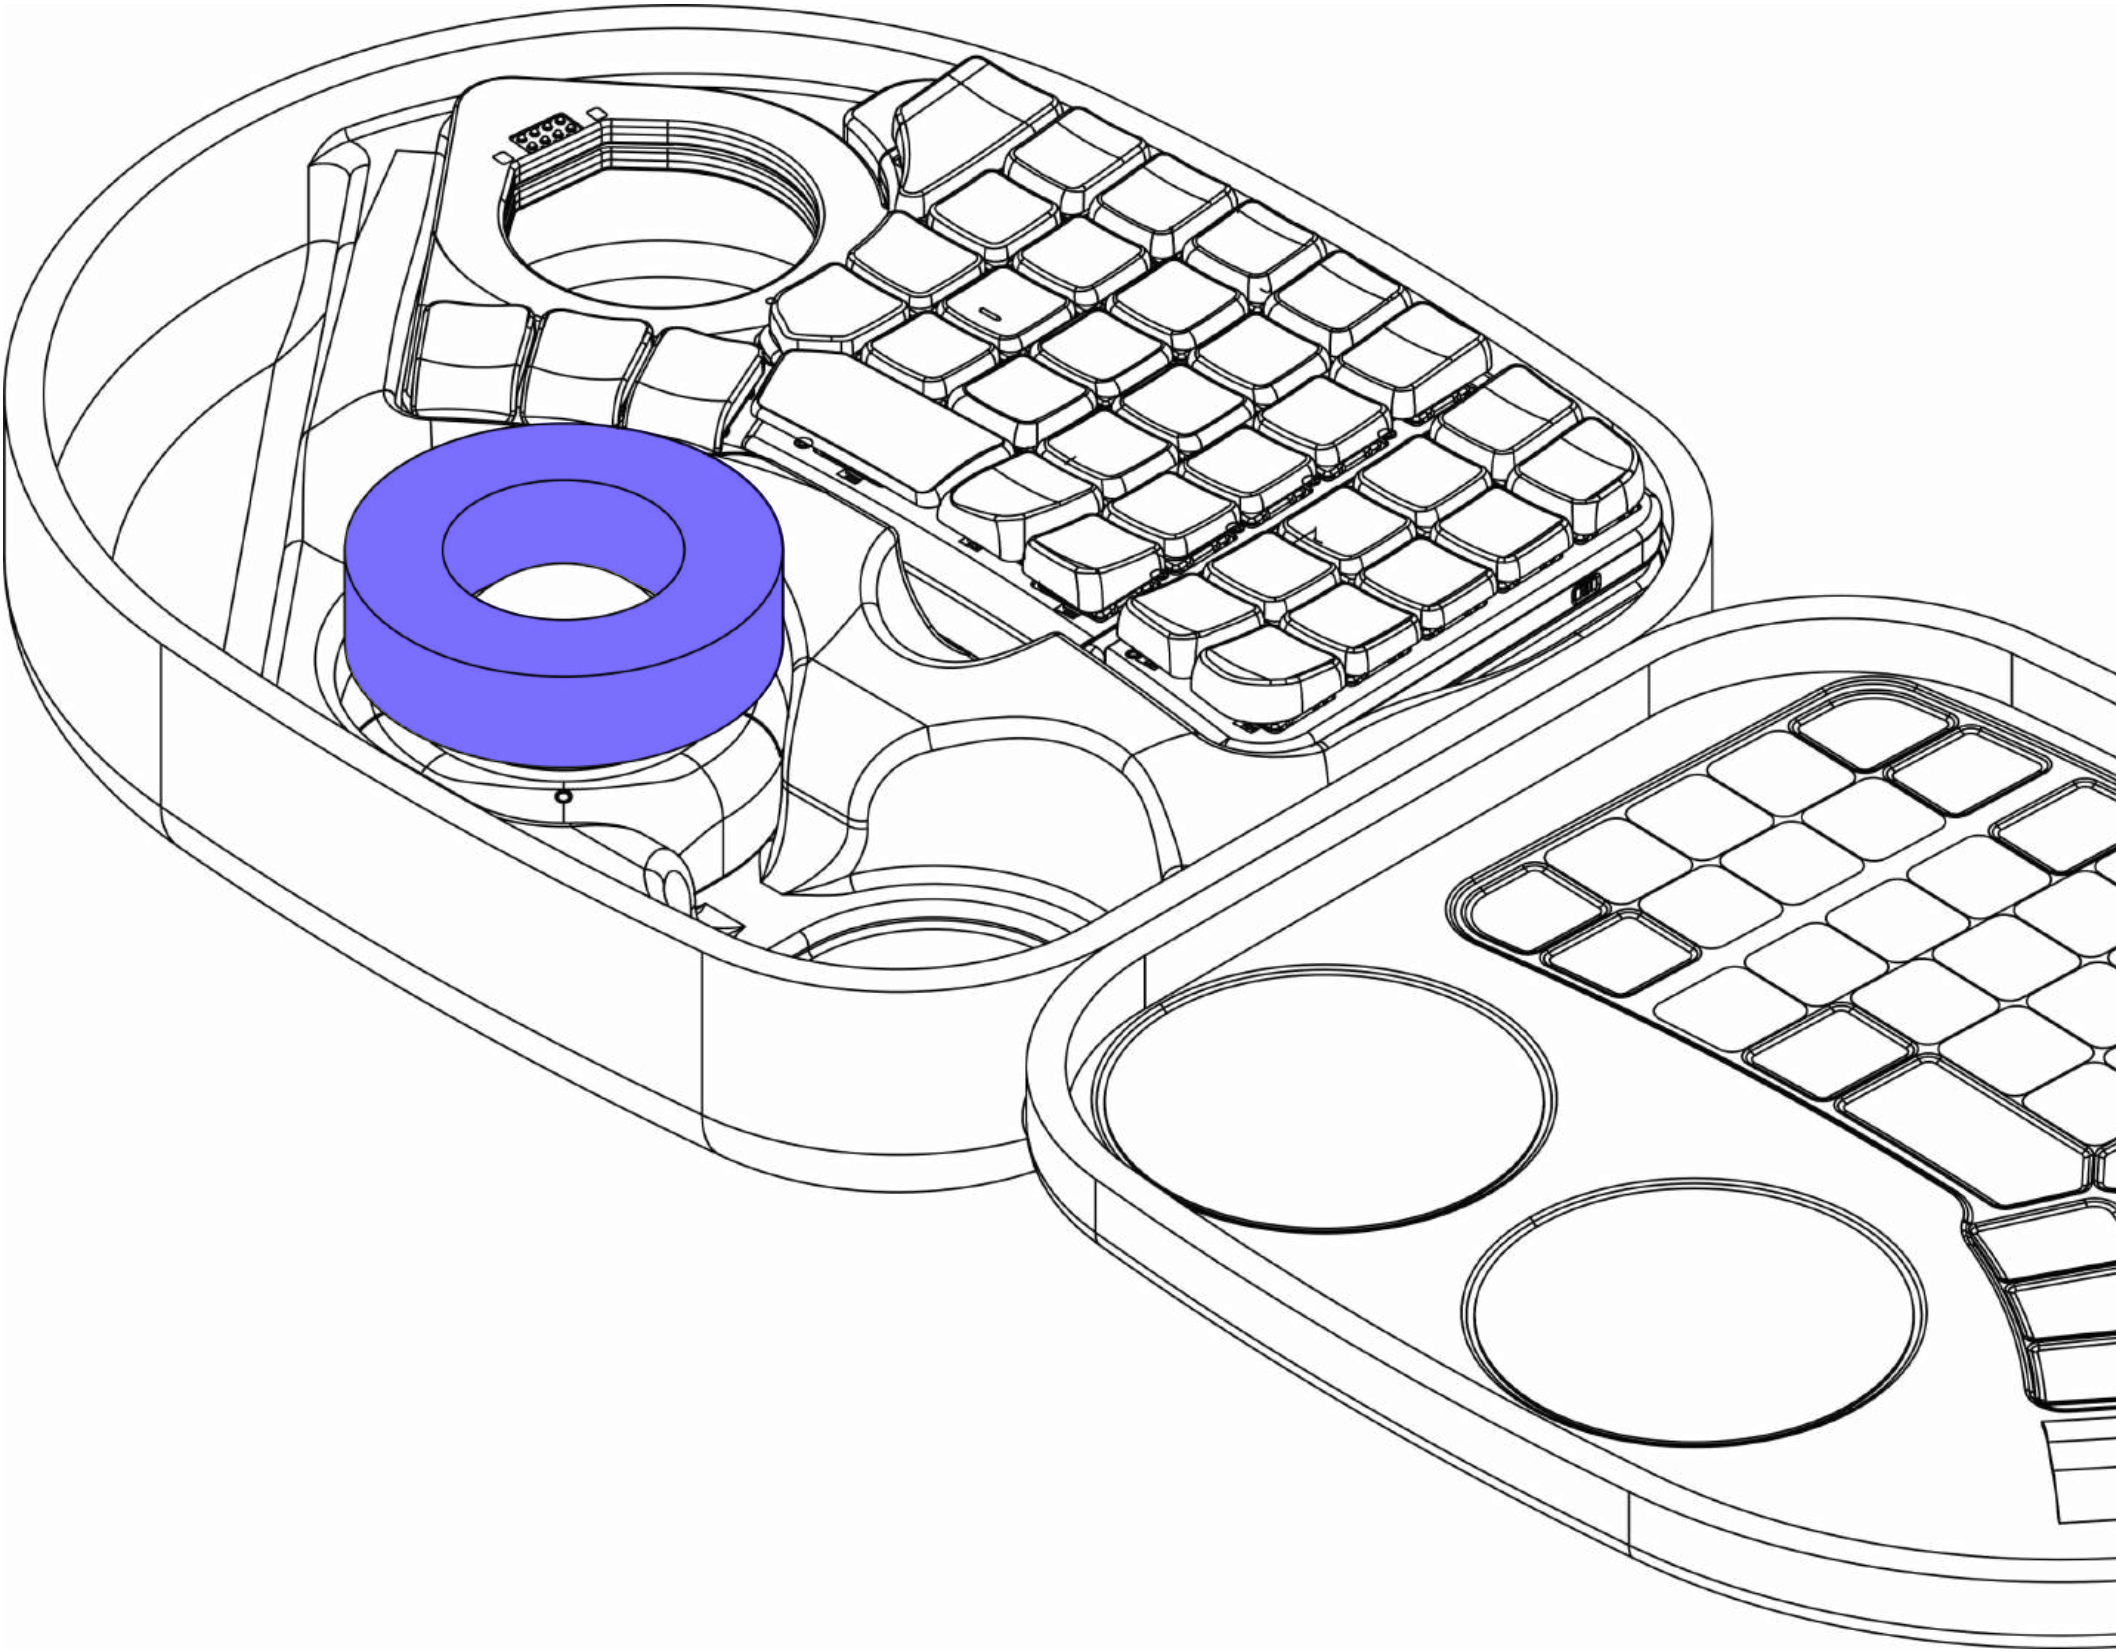

1

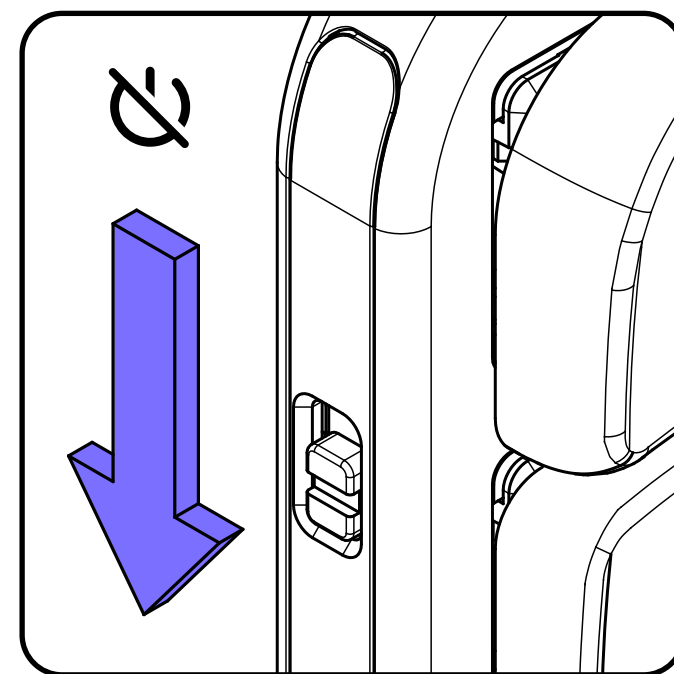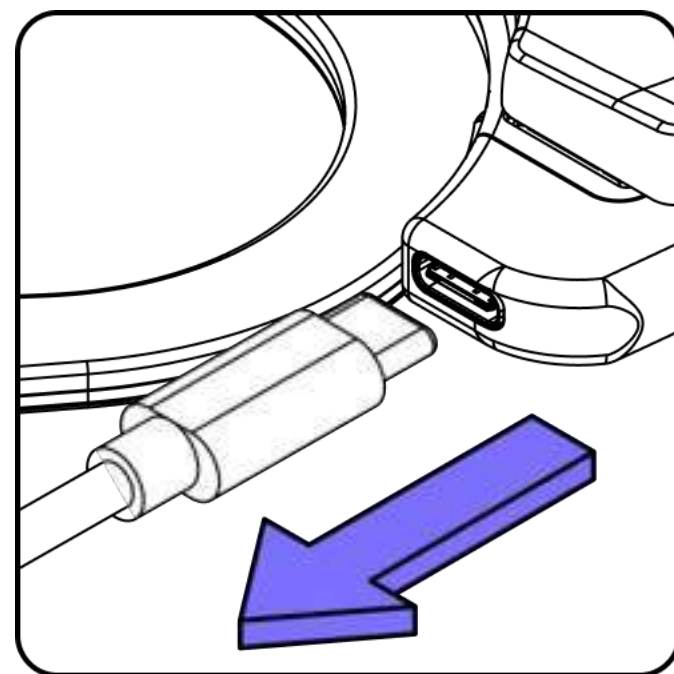


Removing Keycaps

1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the OFF position.
2. Position the keycap puller – Take the keycap puller and gently hook it under opposing sides of the keycap. Ensure the puller is securely attached to the keycap.
3. Gently pull up – Slowly and carefully pull upward to remove the keycap. Avoid using excessive force to prevent damage to the switches underneath. Larger keycaps may require more pressure as they have stabilizers.
4. Repeat for all keycaps – Continue this process for all keycaps you wish to remove. Place the removed keycaps in a safe location for reassembly.

Switches may sometimes release together with the keycap, if this occurs simply  separate the two by firmly grasping both and gently rocking the keycap back and forth while pulling them apart.

2

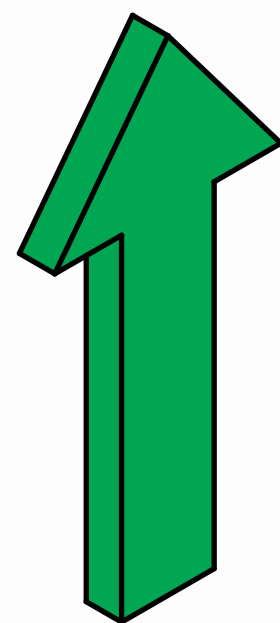



3

12

 If any keycaps or switches are difficult to remove or install, be patient and avoid using excessive force.



Installing Keycaps

1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the OFF position.
2. Match the location – The back of each keycap is labeled with a coordinate. You can reference the location the keycap should be placed based on the map provided below.
3. Align the keycap – Line up the stem of the keycap with the switch stem.
4. Press the keycap down – Gently press the keycap onto the switch until it fits securely in place. You should feel a slight snap when the keycap is correctly positioned.
5. Repeat for all keycaps – Continue the process for all keycaps. For larger keys with stabilizers, ensure that the stabilizers are properly aligned before pressing down.

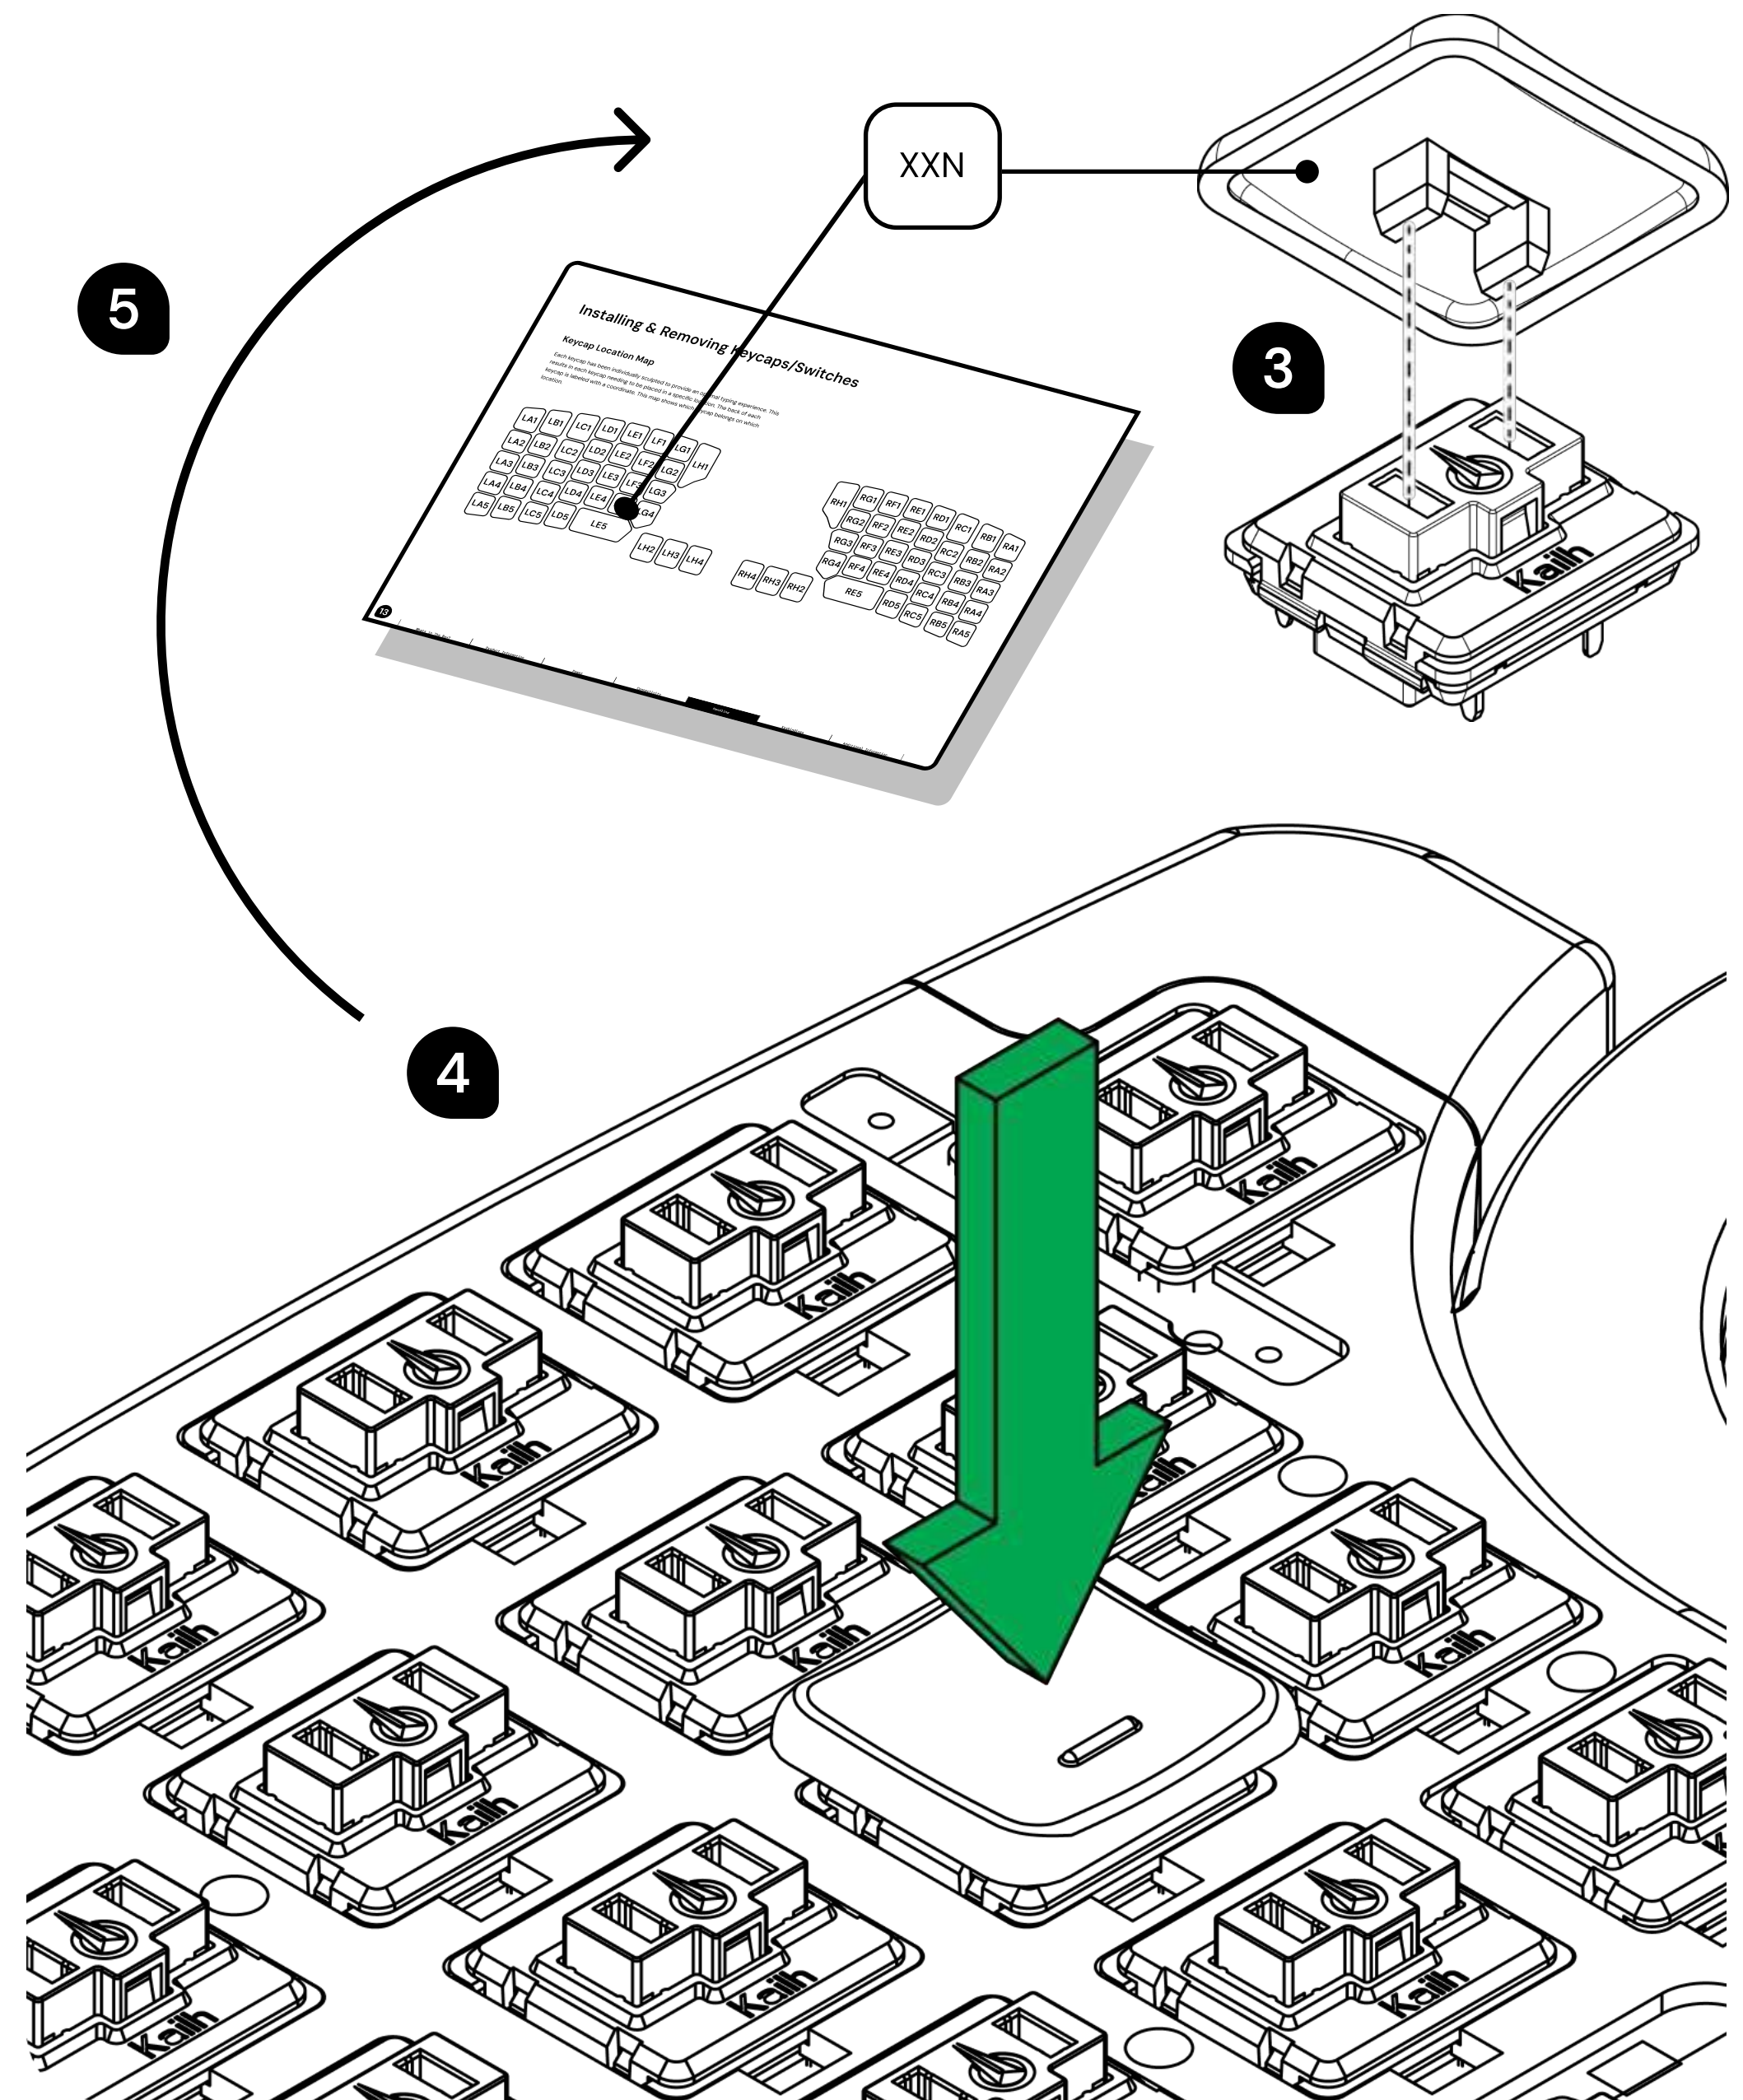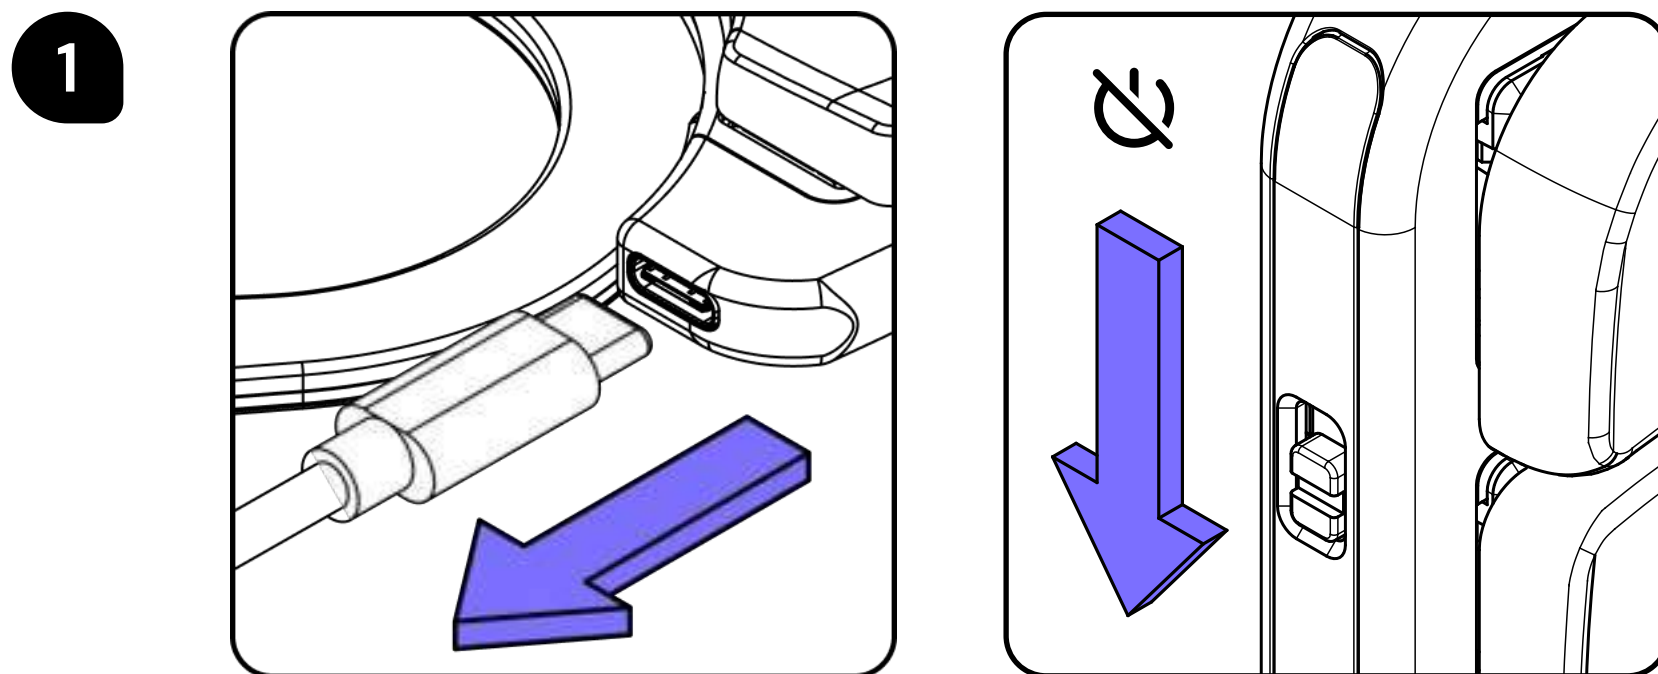





Removing Switches

1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the off position.
2. Remove Keycaps – See above.
3. Insert the switch puller – Use the switch puller to grip the switch. Position the prongs of the puller in the cutouts above and below the switch.
4. Gently pull the switch out – Once the puller is securely in place, carefully pull the switch straight up and out of the socket. This should not require an excessive amount of force.

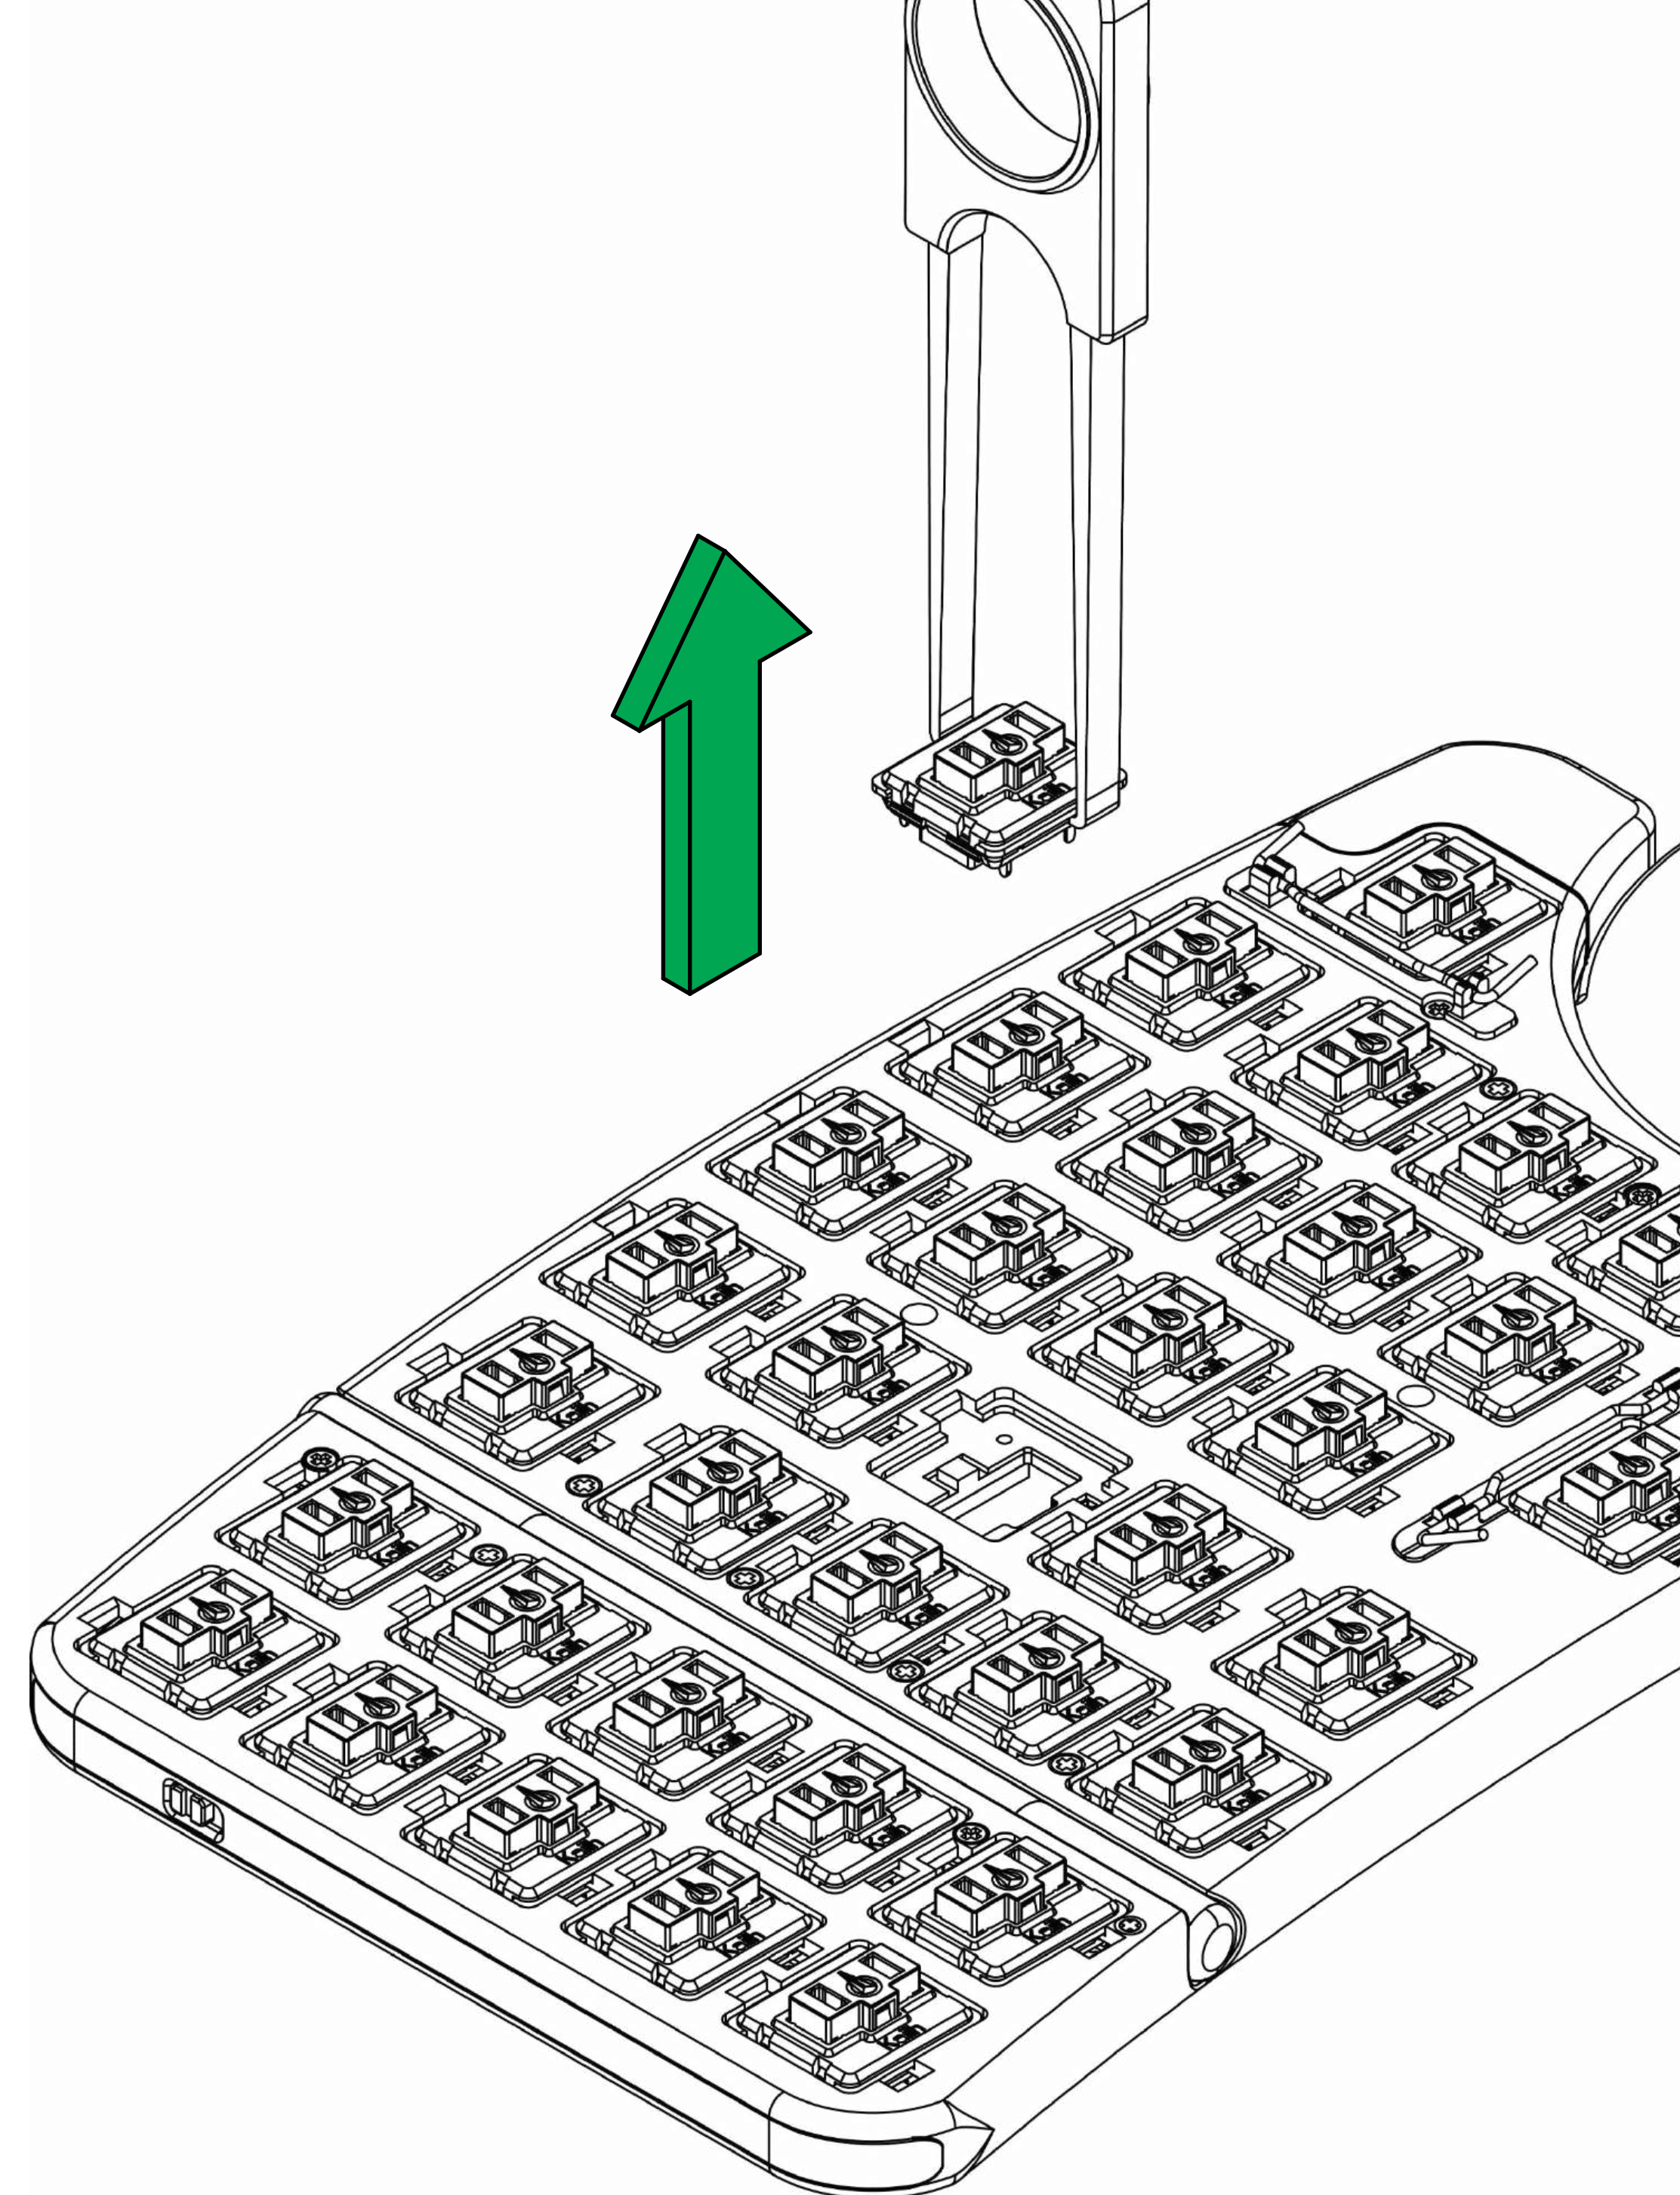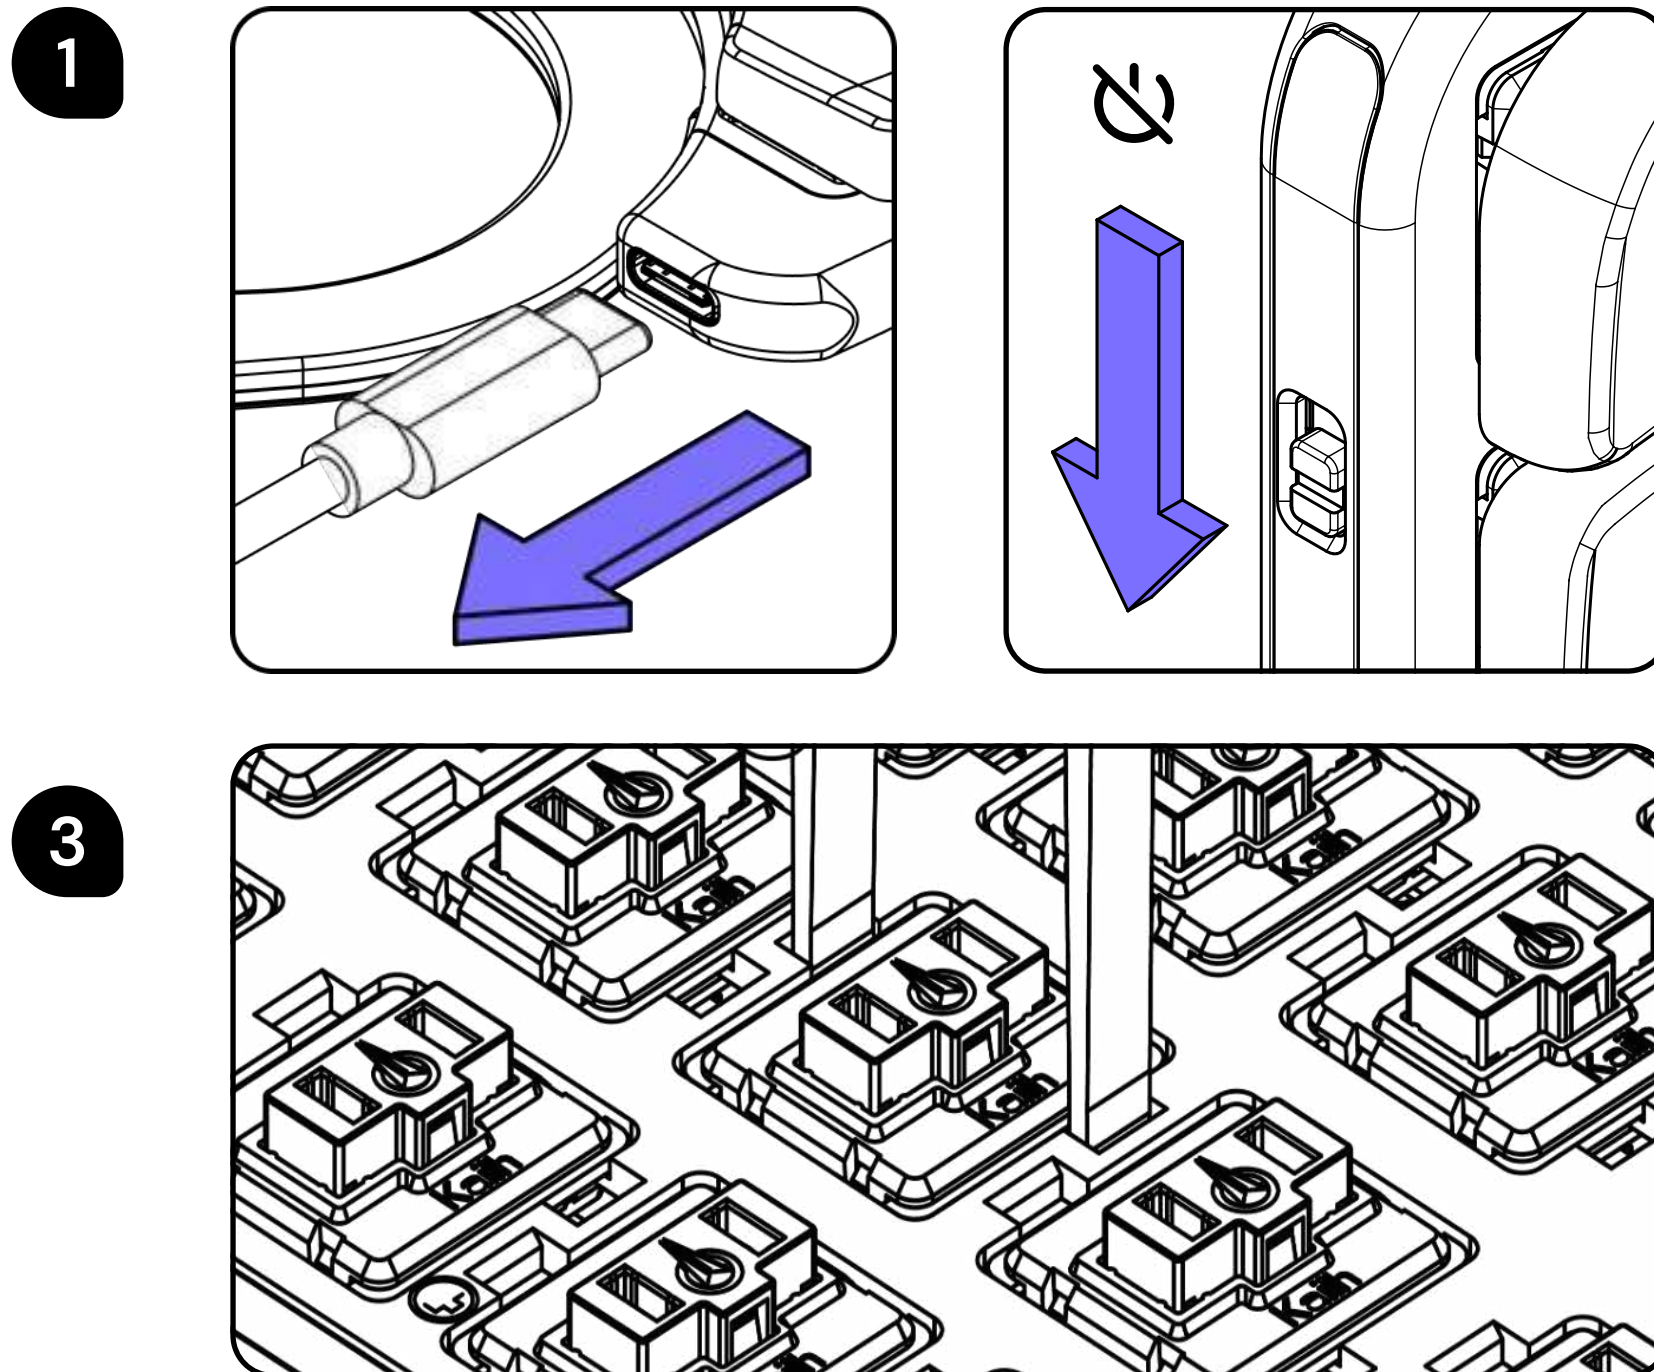

Installing Switches

1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the off position.
2. Inspect the socket – Ensure there is no dust or debris before inserting a new switch.
3. Inspect the switch – Ensure all pins on the switch are straight to prevent damage to switch and/or socket. (If using third-party sourced CPG-1232 switches please ensure that the pins are 0.45x0.42mm.)
4. Align the metal pins on the bottom of the switch with the holes of the socket. You may need to ensure that the sockets align with the cutouts on the body by pushing the PCB into position.
5. Press gently into the socket – Push the switch straight down into the socket until it clicks into place. Ensure the switch is seated firmly and evenly.
6. Repeat for all switches.
7. Check for stability – Test each switch by gently pressing it to confirm it's properly installed.

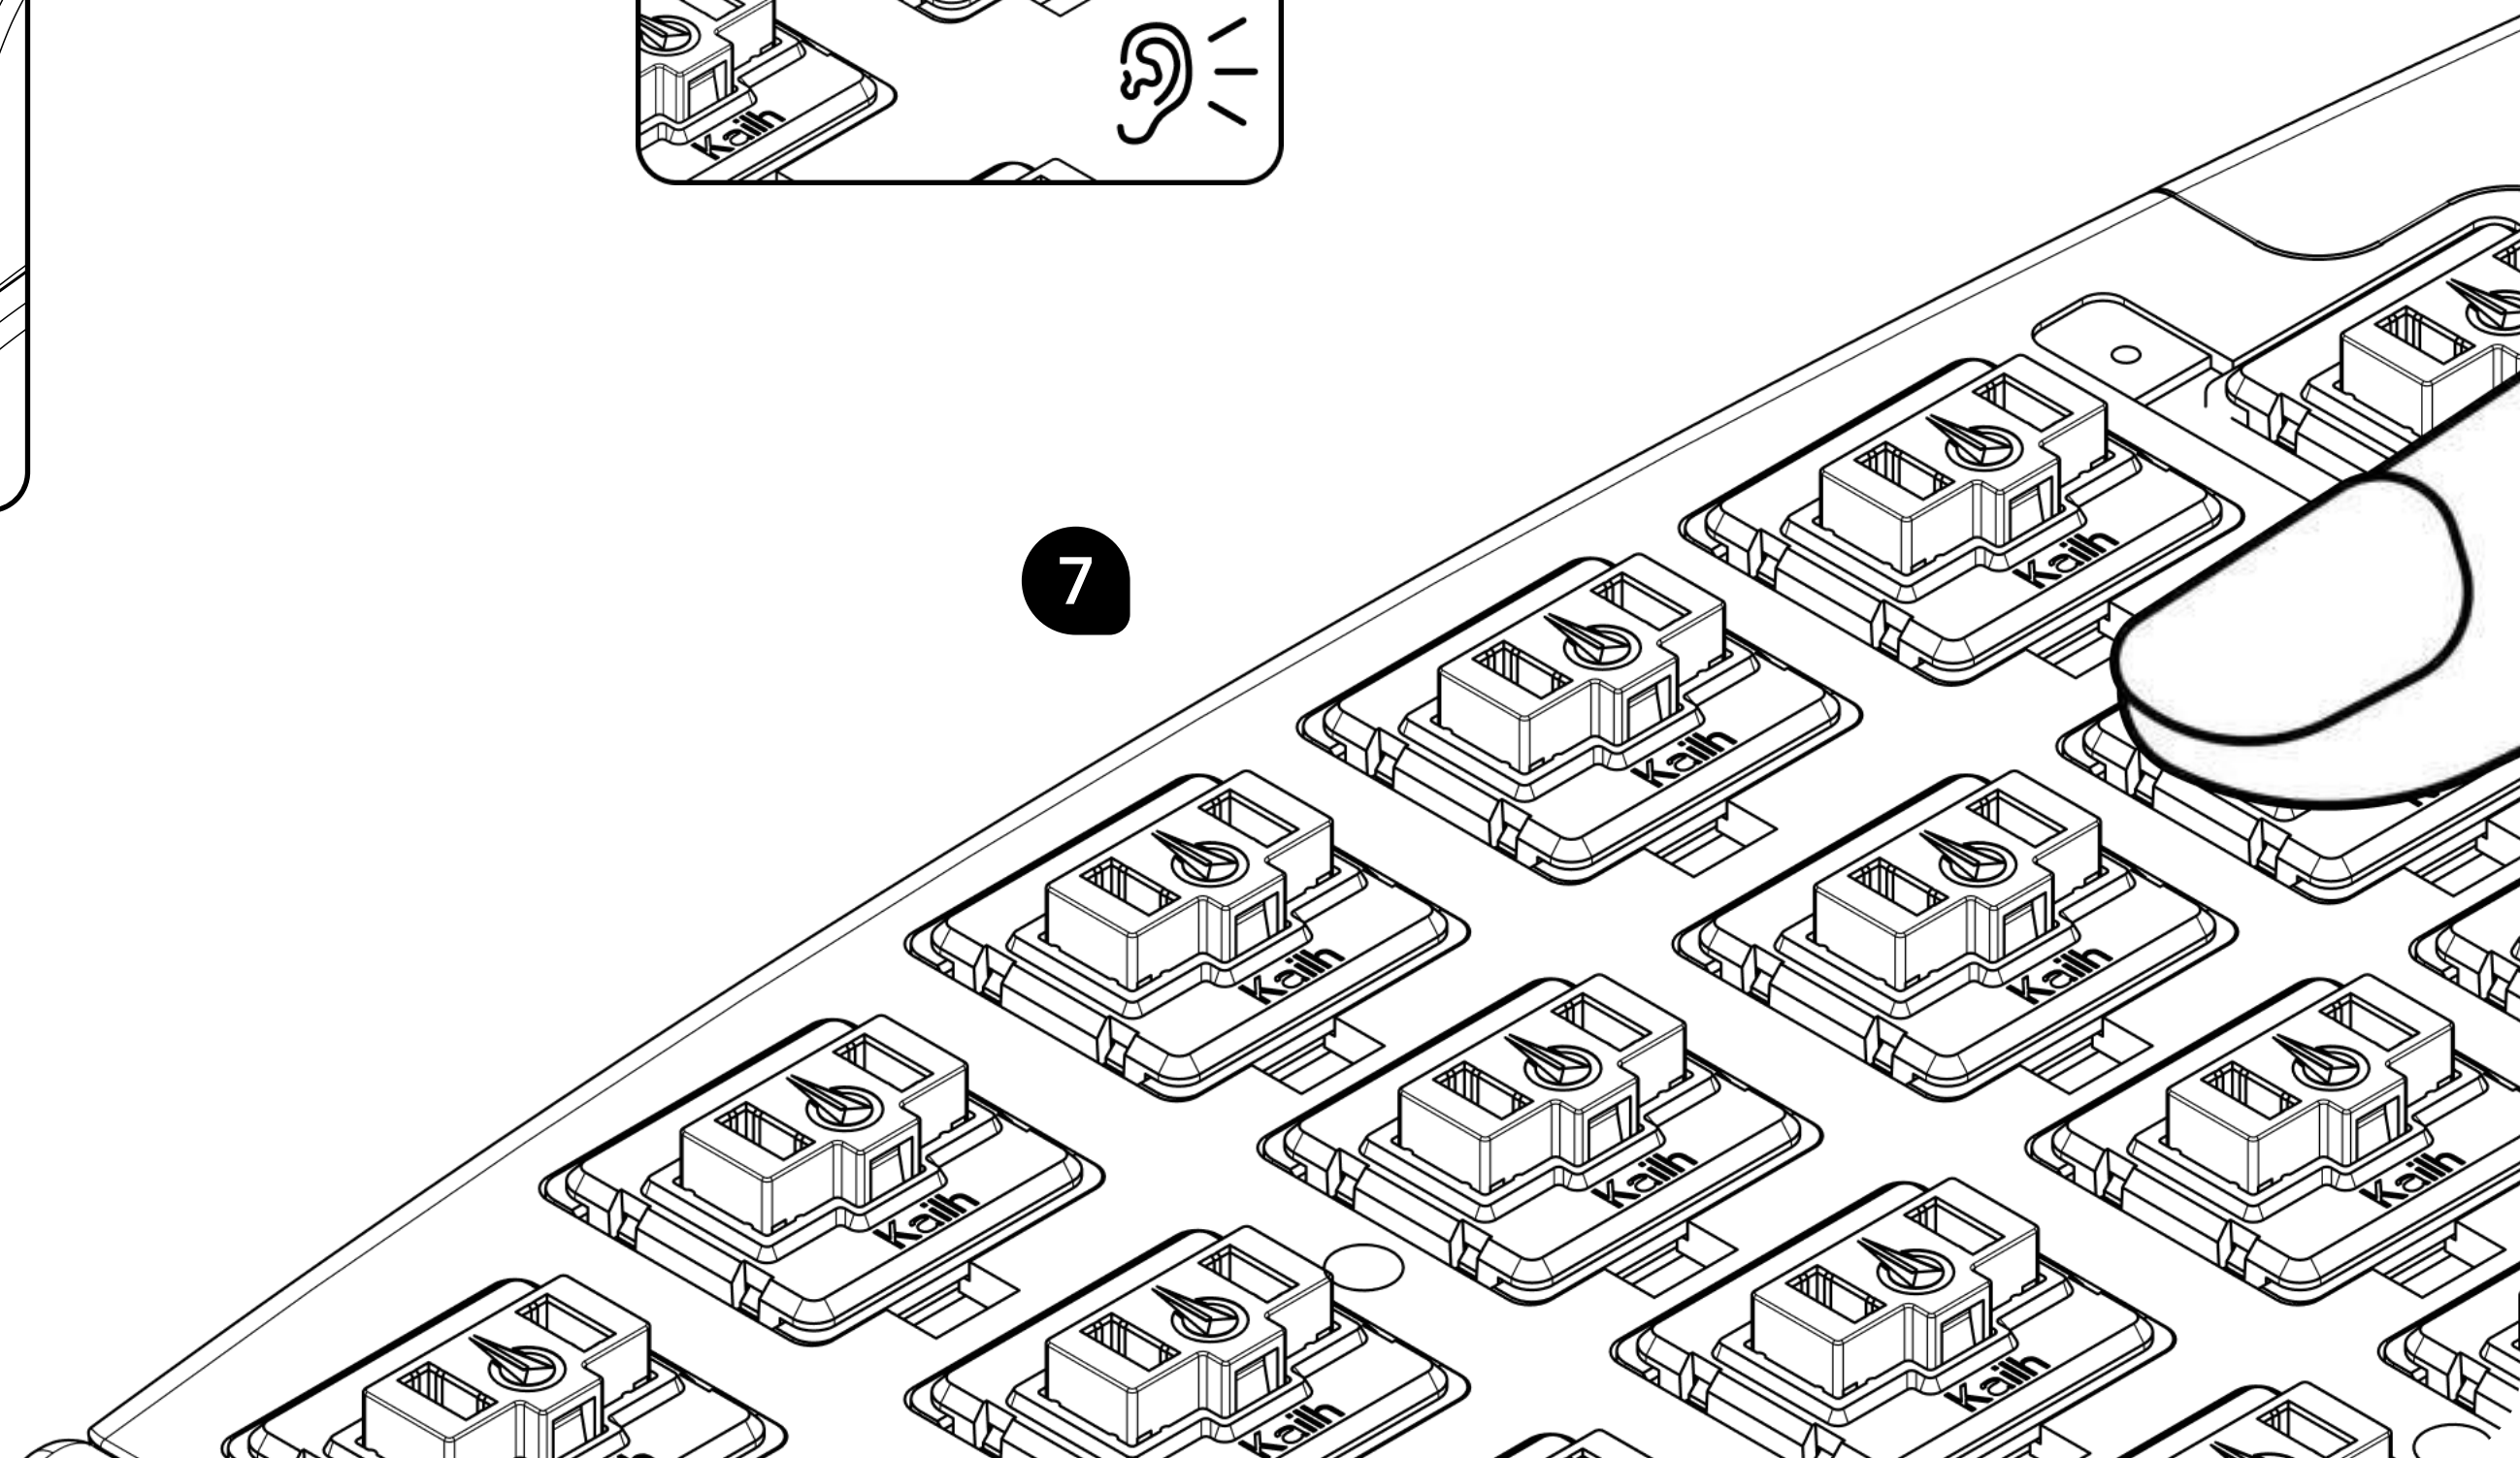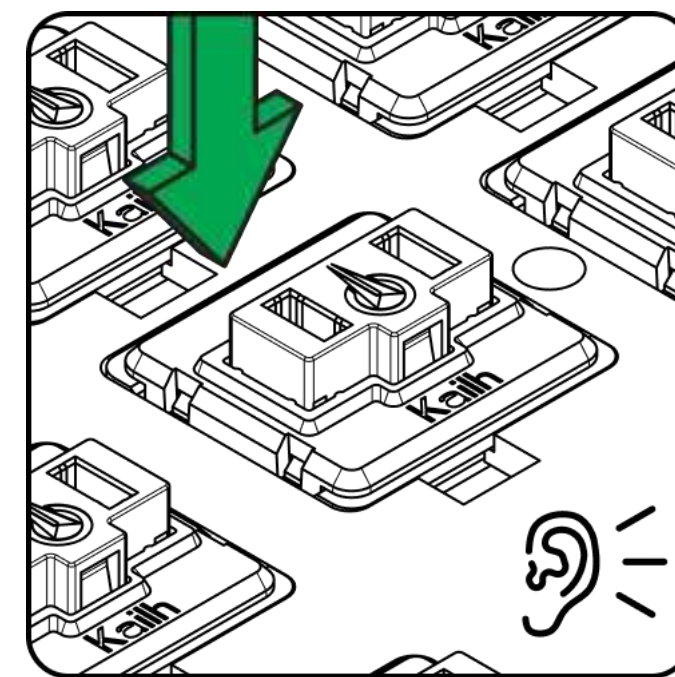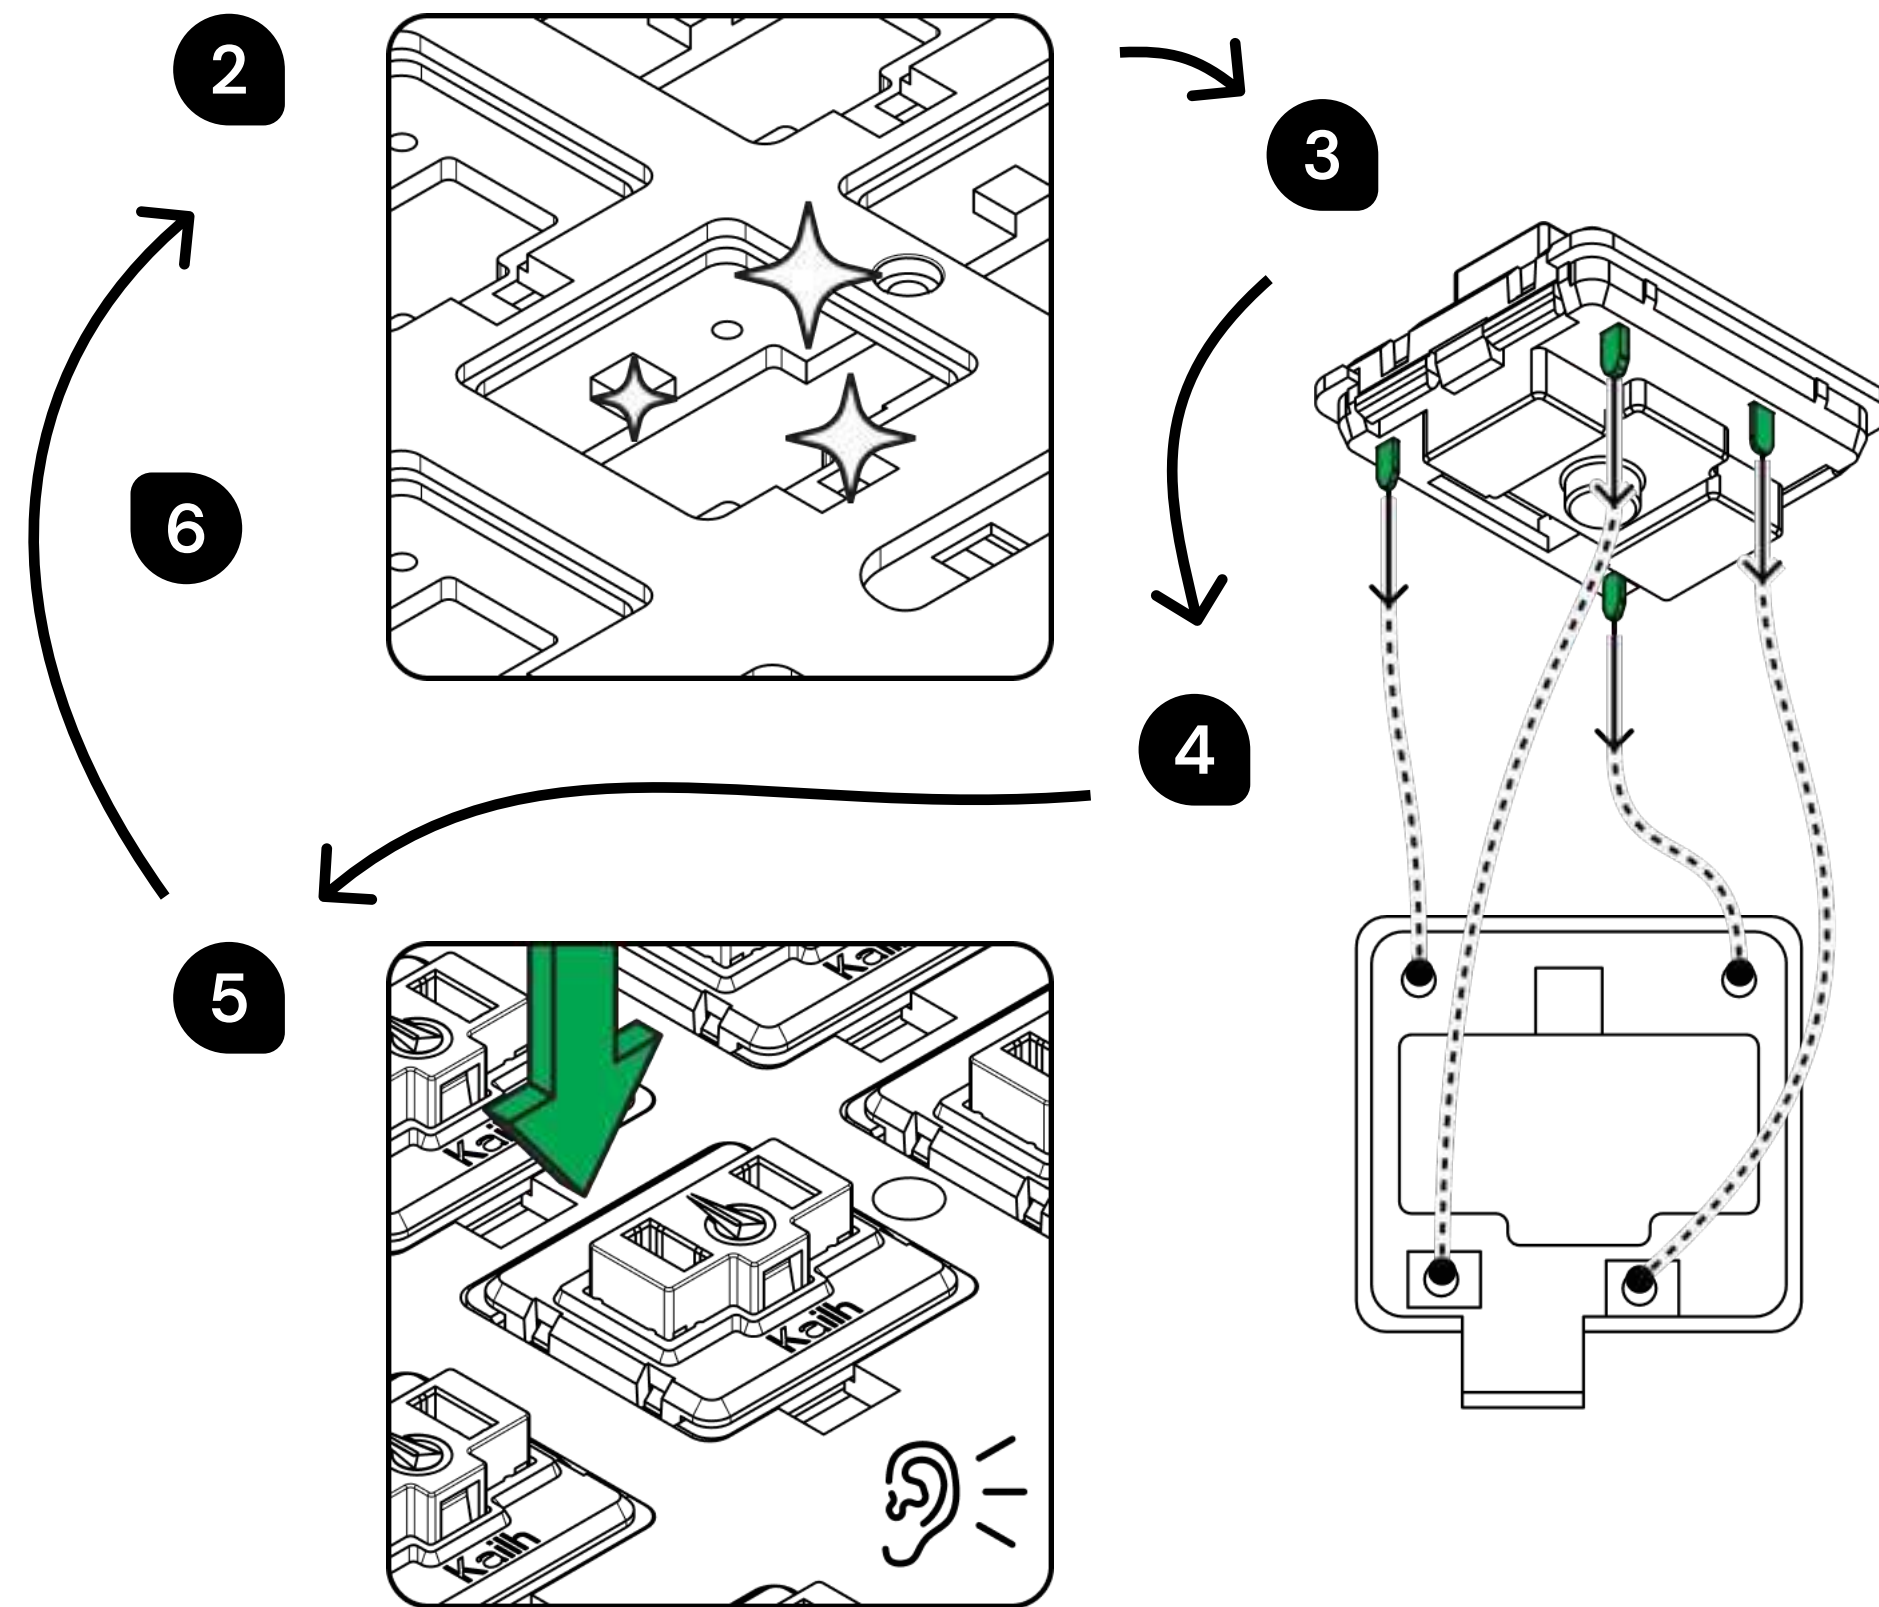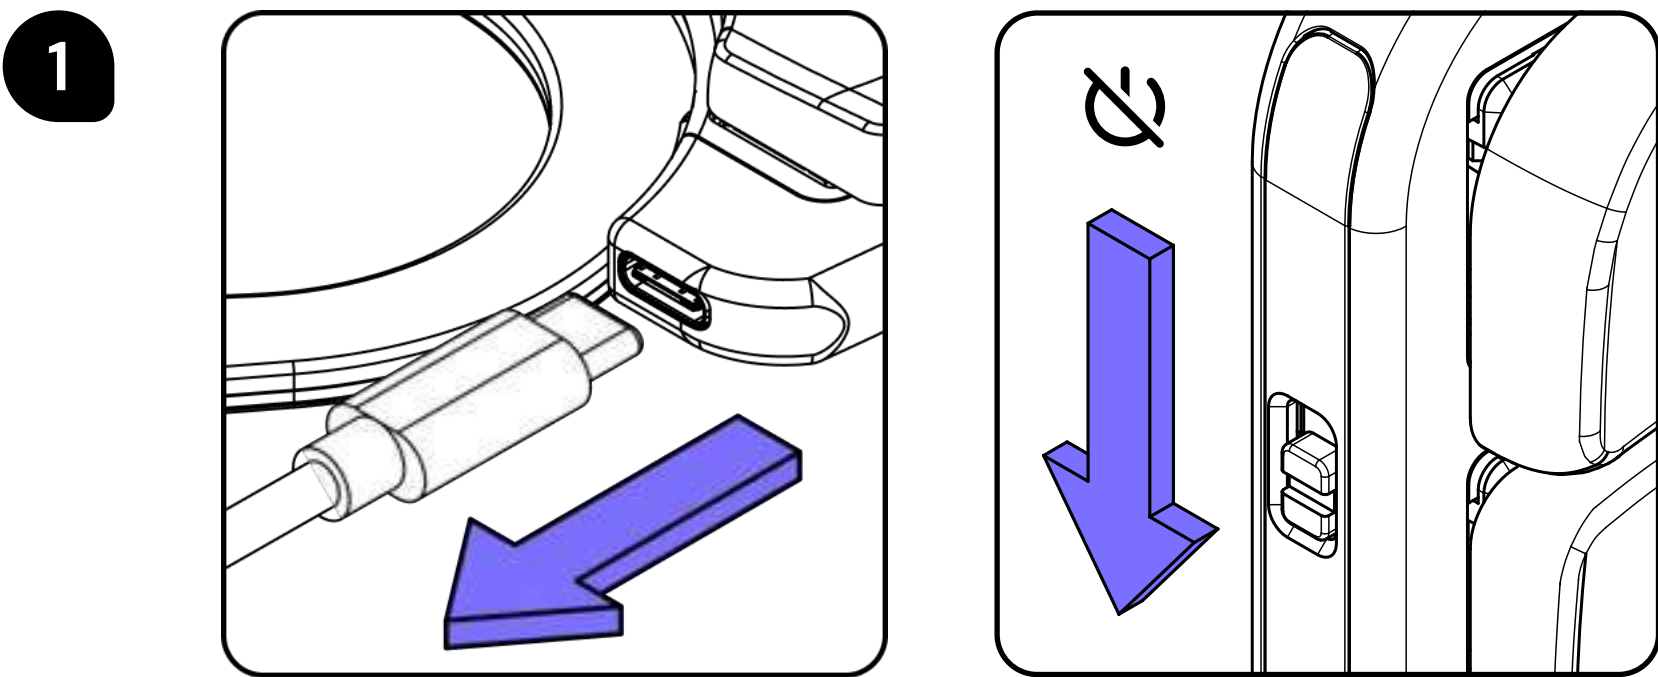

Keybindings

Programmable Keyboard Concepts

Layers

Naya Create can be loaded with multiple “layers” of bindings allowing for more bindings than there are keys on the keyboard. What action a key performs depends on which layers are currently active.

Each layer contains a binding for each key with the “transparent” action functions the same as if the layer was deactivated.

Profiles

Sets of Layers are saved in “profiles”. Each profile has a “base layer” that cannot be deactivated. This layer should usually contain your typing layer.

Keys and Actions

Each layer can be thought of as a list of bindings that map physical key locations to specific actions. For instance, the physical key location "LC2" might have the legend "Q" and, by default, output "Q" when pressed. However, since programmable keyboards allow for customization, the action performed by a key can vary depending on the active layer.

For example, the keys labeled "Q" and "W" could be reprogrammed such that pressing the "Q" key outputs "w," and pressing the "W" key outputs "q." In this case, simply referring to "Q" becomes ambiguous—are we talking about the key labeled "Q," or the key that types "q"?


To avoid confusion, the term "Key" will refer to a physical key location (e.g., "LC2"), while the term "Action" will refer to the function or output bound to that key, such as "Enter," "Q," or "Space."

Examples

Examples of how a single key behaves depending on which layer is active.


Layer Priority

1. Press → Type out “a”

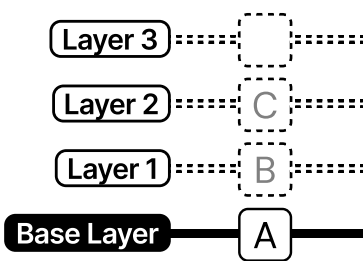


The default state, all layers are deactivated except for the Base Layer. Pressing this key will type “A”.

2. Activate Layer 2
3. Press → Type out “c”

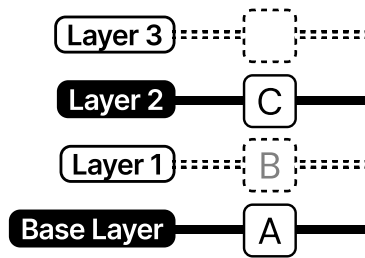

Since Layer 2 is active and is a higher layer than the Base Layer it takes priority.


4. Activate Layer 1
5. Press → Type out “c”

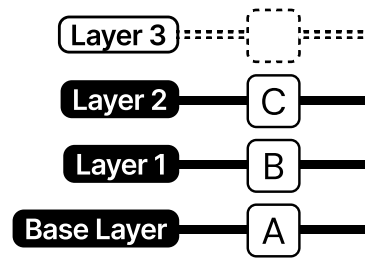

Even though Layer 1 was activated after Layer 2 it is a lower layer so Layer 2 still takes priority.


Transparency

1. Press → Type out “a”

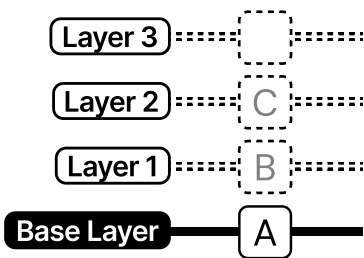


The default state, all layers are deactivated except for the Base Layer. Pressing this key will type “A”.

2. Activate Layer 2
3. Press → Type out “c”

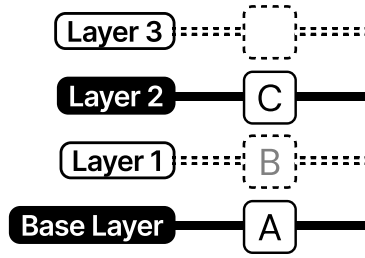

Since Layer 2 is active and is a higher layer than the Base Layer it takes priority.

4. Activate Layer 3
5. Press → Type out “c”

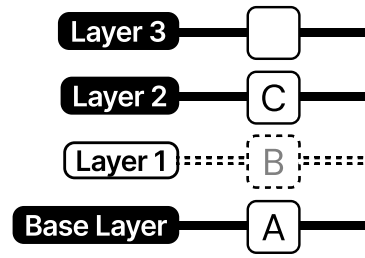

Since the action bound to Layer 3 is “Transparent” the action from the next highest active layer is used instead.

Input Sources

Naya Create comes with a pre-installed key-map. Since Create communicates with your computer using the HID protocol your computer may interpret the layout differently depending on the locale it has been set to. If your keyboard is interpreting your keystrokes incorrectly please follow the steps below:

1. Use Naya Flow to ensure that the correct layout profile is loaded on your Create, it should be named Naya Default (US, GER, or JP depending on the keycap set you have installed.)

MacOS

2. Change your input source settings to match your Naya Default variant.

Windows

2. Change your keyboard layout to match your Naya Default variant.


Ubuntu

2. Change your input source to match your Naya Default variant.

If there is a discrepancy between in the behaviour of your unit and the keymaps on the following pages you may need to update it using Naya Flow.




Naya Default Windows – Base Layer (QWERTY)

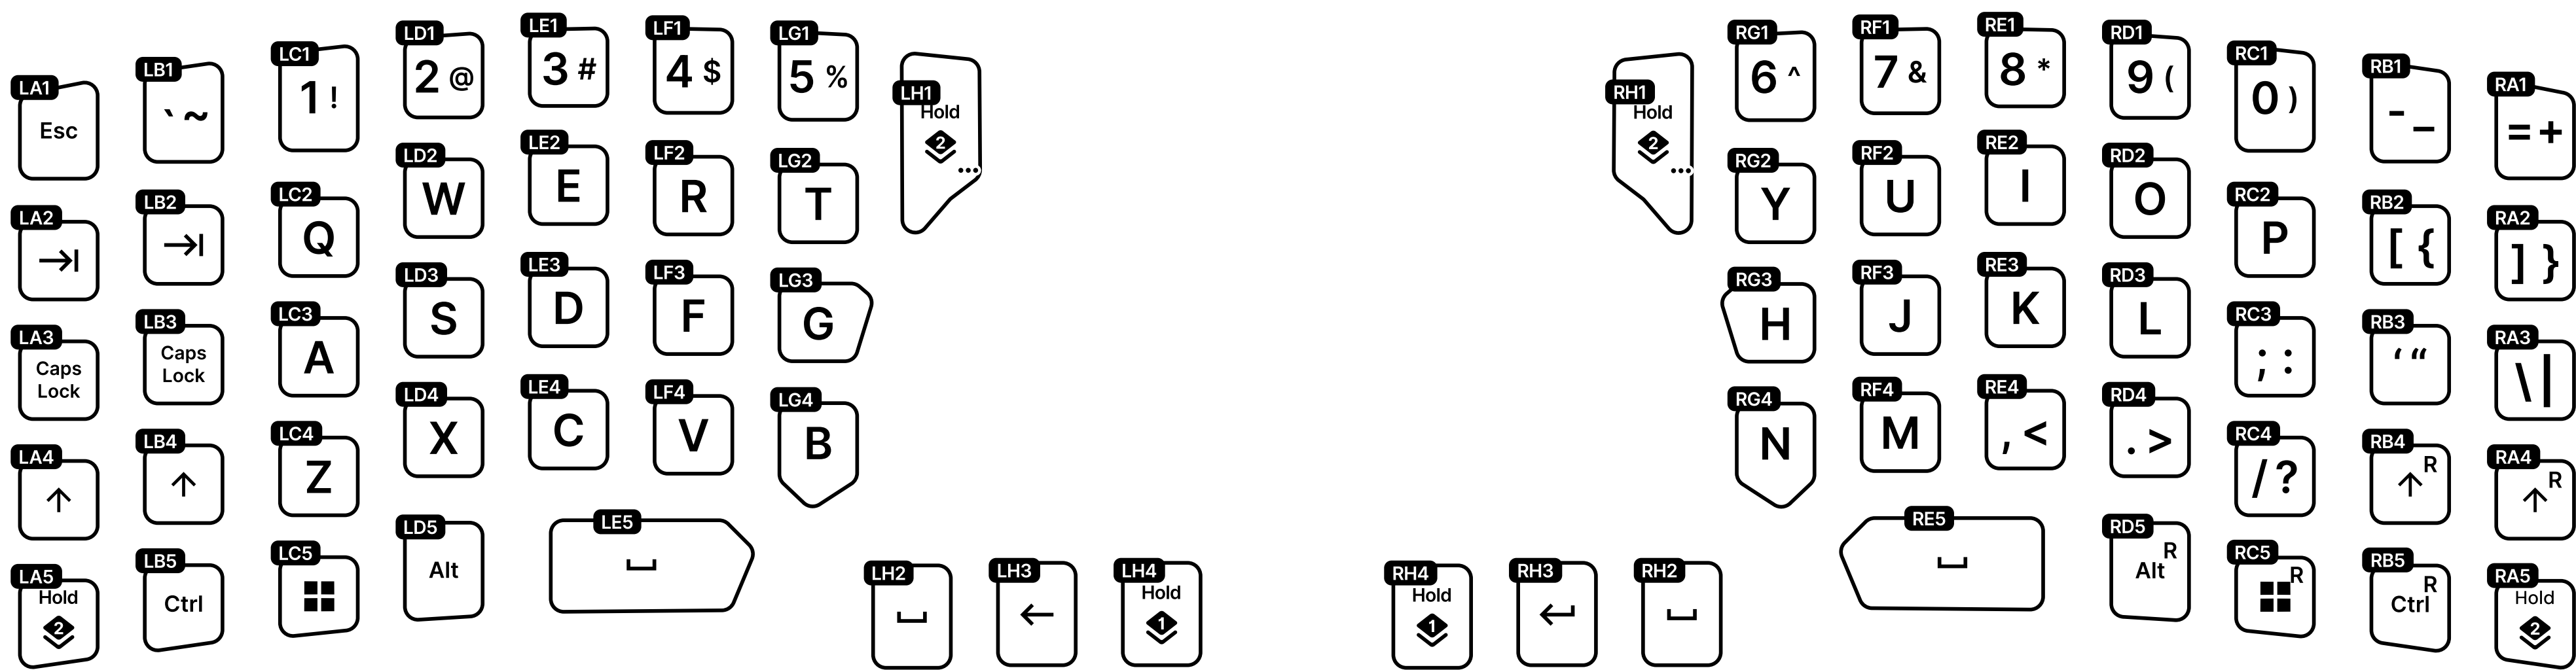


LA1	=	Esc	LA3	=	Caps Lock	LA5	=	Hold: Layer 2	RC1	=	0 and)	RC3	=	; and :
LB1	=	Grave and Tilde	LB3	=	Caps Lock	LB5	=	Ctrl	RB1	=	- and _	RB3	=	' and "
LC1	=	1 and !	LC3	=	A	LC5	=	Win Key	RA1	=	= and +	RA3	=	\ and
LD1	=	2 and @	LD3	=	S	LD5	=	Alt	RG2	=	Y	RG4	=	N
LE1	=	3 and #	LE3	=	D	LE5	=	Space	RF2	=	U	RF4	=	M
LF1	=	4 and \$	LF3	=	F	LH2	=	Space	RE2	=	I	RE4	=	, and <
LG1	=	5 and %	LG3	=	G	LH3	=	Backspace	RD2	=	O	RD4	=	. and >
LH1	=	Enter (Hold: Layer 2)	LA4	=	Shift	LH4	=	Hold: Layer 1	RC2	=	P	RC4	=	/ and ?
LA2	=	Tab	LB4	=	Shift	RH4	=	Hold: Layer 1	RB2	=	[and {	RB4	=	Shift Right
LB2	=	Tab	LC4	=	Z	RH3	=	Enter	RA2	=	] and }	RA4	=	Shift Right
LC2	=	Q	LD4	=	X	RH2	=	Space	RG3	=	H	RE5	=	Space
LD2	=	W	LE4	=	C	RH1	=	BckSpce (Hold: Layer 2)	RF3	=	J	RD5	=	Alt Right
LE2	=	E	LF4	=	V	RG1	=	6 and ^	RE3	=	K	RC5	=	Win Key Right
LF2	=	R	LG4	=	B	RF1	=	7 and &	RD3	=	L	RB5	=	Ctrl Right
LG2	=	T				RE1	=	8 and *				RA5	=	Hold: Layer 2
						RD1	=	9 and (						

Naya Default Windows – Layer 1 (Function & Numpad)

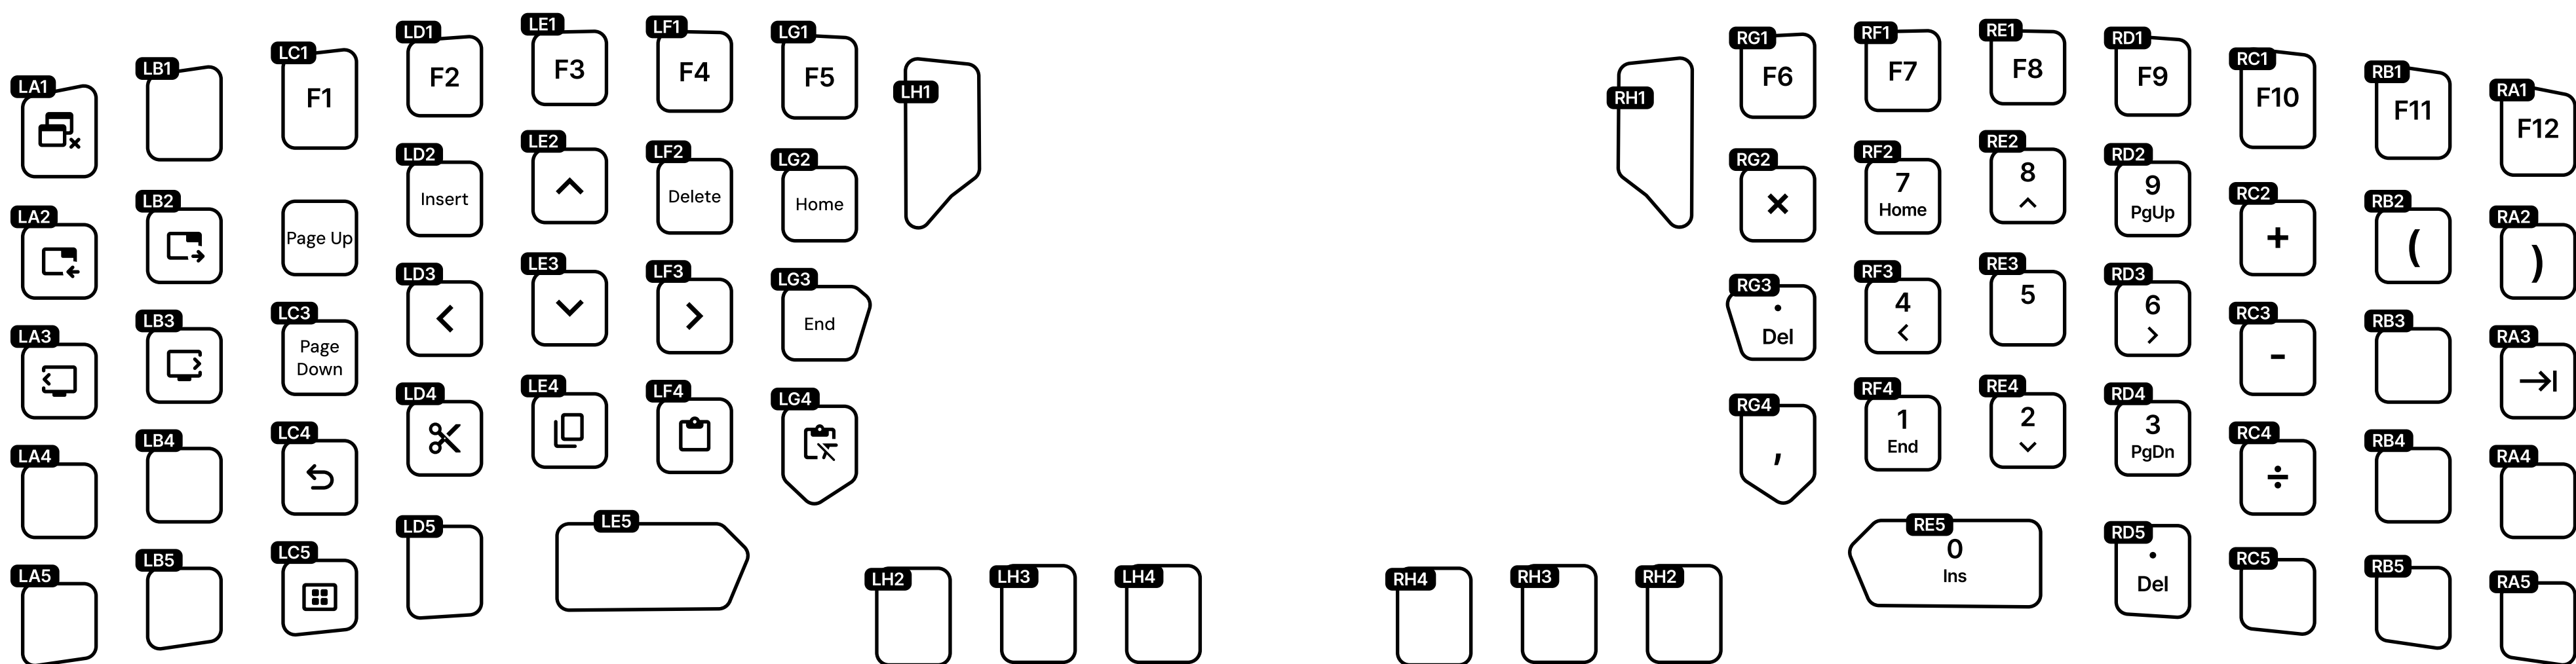


LA1 = Close Application	LA3 = Left Virtual Desktop	LA5 = Transparent	RC1 = F10	RC3 = Numpad -
LB1 = Transparent	LB3 = Right Virtual Desktop	LB5 = Transparent	RB1 = F11	RB3 = Num Lock
LC1 = F1	LC3 = Page Down	LC5 = Task View	RA1 = F12	RA3 = Transparent
LD1 = F2	LD3 = Left	LD5 = Transparent	RG2 = Numpad *	RG4 = Numpad ,
LE1 = F3	LE3 = Down	LE5 = Transparent	RF2 = Numpad 7	RF4 = Numpad 1
LF1 = F4	LF3 = Right	LH2 = Transparent	RE2 = Numpad 8	RE4 = Numpad 2
LG1 = F5	LG3 = End	LH3 = Transparent	RD2 = Numpad 9	RD4 = Numpad 3
LH1 = Transparent	LA4 = Transparent	LH4 = Transparent	RC2 = Numpad +	RC4 = / and ?
LA2 = Previous Tab	LB4 = Transparent	RH4 = Transparent	RB2 = Numpad (	RB4 = Transparent
LB2 = Next Tab	LC4 = Undo	RH3 = Transparent	RA2 = Numpad)	RA4 = Transparent
LC2 = Page Up	LD4 = Cut	RH2 = Transparent	RG3 = Numpad /	RE5 = Numpad 0
LD2 = Insert	LE4 = Copy	RH1 = Transparent	RF3 = Numpad 4	RD5 = Numpad .
LE2 = Up	LF4 = Paste	RG1 = F6	RE3 = Numpad 5	RC5 = Win Key Right
LF2 = Forward Delete	LG4 = Paste w/o formatting	RF1 = F7	RD3 = Numpad 6	RB5 = Transparent
LG2 = Home		RE1 = F8		RA5 = Transparent
		RD1 = F9		

Naya Default Windows – Layer 2 (System)

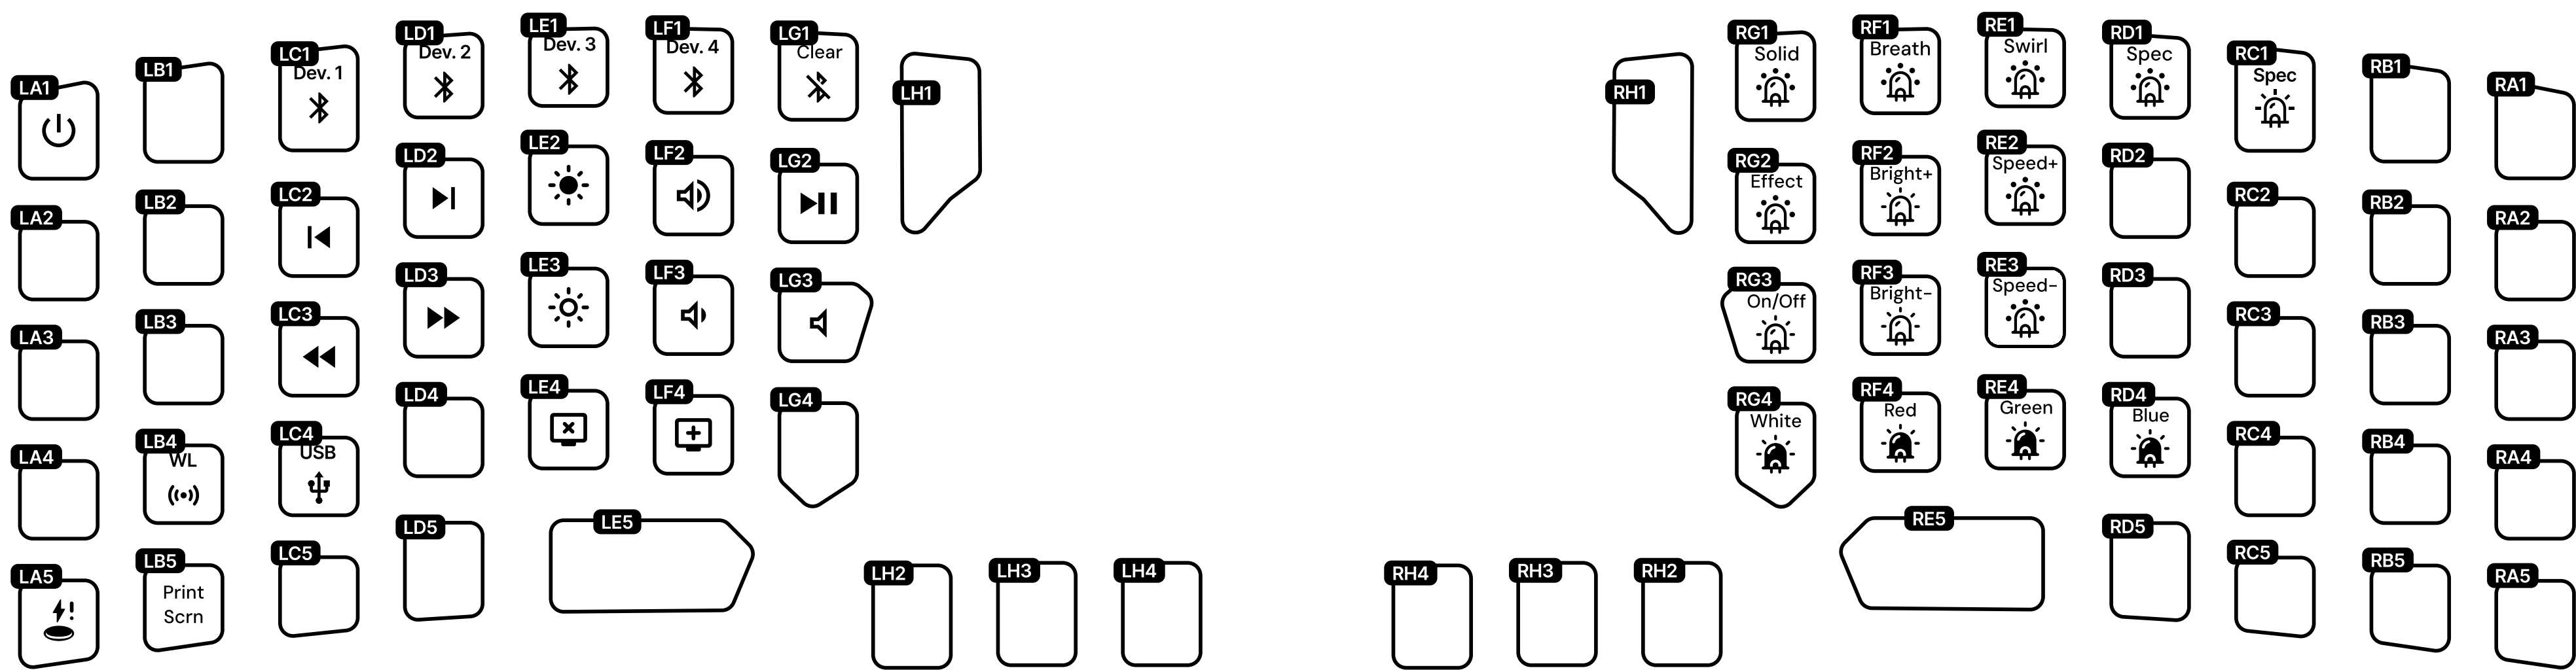


LA1	=	Power Button	LA3	=	Disabled	LA5	=	Module Force Charge	RC1	=	Disabled	RC3	=	Disabled
LB1	=	Disabled	LB3	=	Disabled	LB5	=	Print Screen	RB1	=	Disabled	RB3	=	Disabled
LC1	=	BT Device 1	LC3	=	Rewind	LC5	=	Disabled	RA1	=	Disabled	RA3	=	Disabled
LD1	=	BT Device 2	LD3	=	Fast Forward	LD5	=	Disabled	RG2	=	LED Cycle Effect	RG4	=	LED White
LE1	=	BT Device 3	LE3	=	Screen Brightness Down	LE5	=	Disabled	RF2	=	LED Brightness Up	RF4	=	LED Red
LF1	=	BT Device 4	LF3	=	Volume Down	LH2	=	Disabled	RE2	=	LED Effect Speed Up	RE4	=	LED Green
LG1	=	BT Clear	LG3	=	Mute	LH3	=	Disabled	RD2	=	Disabled	RD4	=	LED Blue
LH1	=	Disabled	LA4	=	Disabled	LH4	=	Disabled	RC2	=	Disabled	RC4	=	Disabled
LA2	=	Disabled	LB4	=	Output through Wireless	RH4	=	Disabled	RB2	=	Disabled	RB4	=	Disabled
LB2	=	Disabled	LC4	=	Output through USB	RH3	=	Disabled	RA2	=	Disabled	RA4	=	Disabled
LC2	=	Previous Track	LD4	=	Disabled	RH2	=	Disabled	RG3	=	LED ON/OFF	RE5	=	Disabled
LD2	=	Next Track	LE4	=	Close Virtual Desktop	RH1	=	Disabled	RF3	=	LED Brightness Down	RD5	=	Disabled
LE2	=	Screen Brightness Up	LF4	=	Add Virtual Desktop	RG1	=	LED Solid Color	RE3	=	LED Effect Speed Down	RC5	=	Disabled
LF2	=	Volume Up	LG4	=	Disabled	RF1	=	LED Breathing Color	RD3	=	Disabled	RB5	=	Disabled
LG2	=	Play/Pause				RE1	=	LED Swirl Color				RA5	=	Disabled
						RD1	=	LED Spectrum Color						

Naya Default MacOS – Base Layer (QWERTY) (Requires Naya Flow)

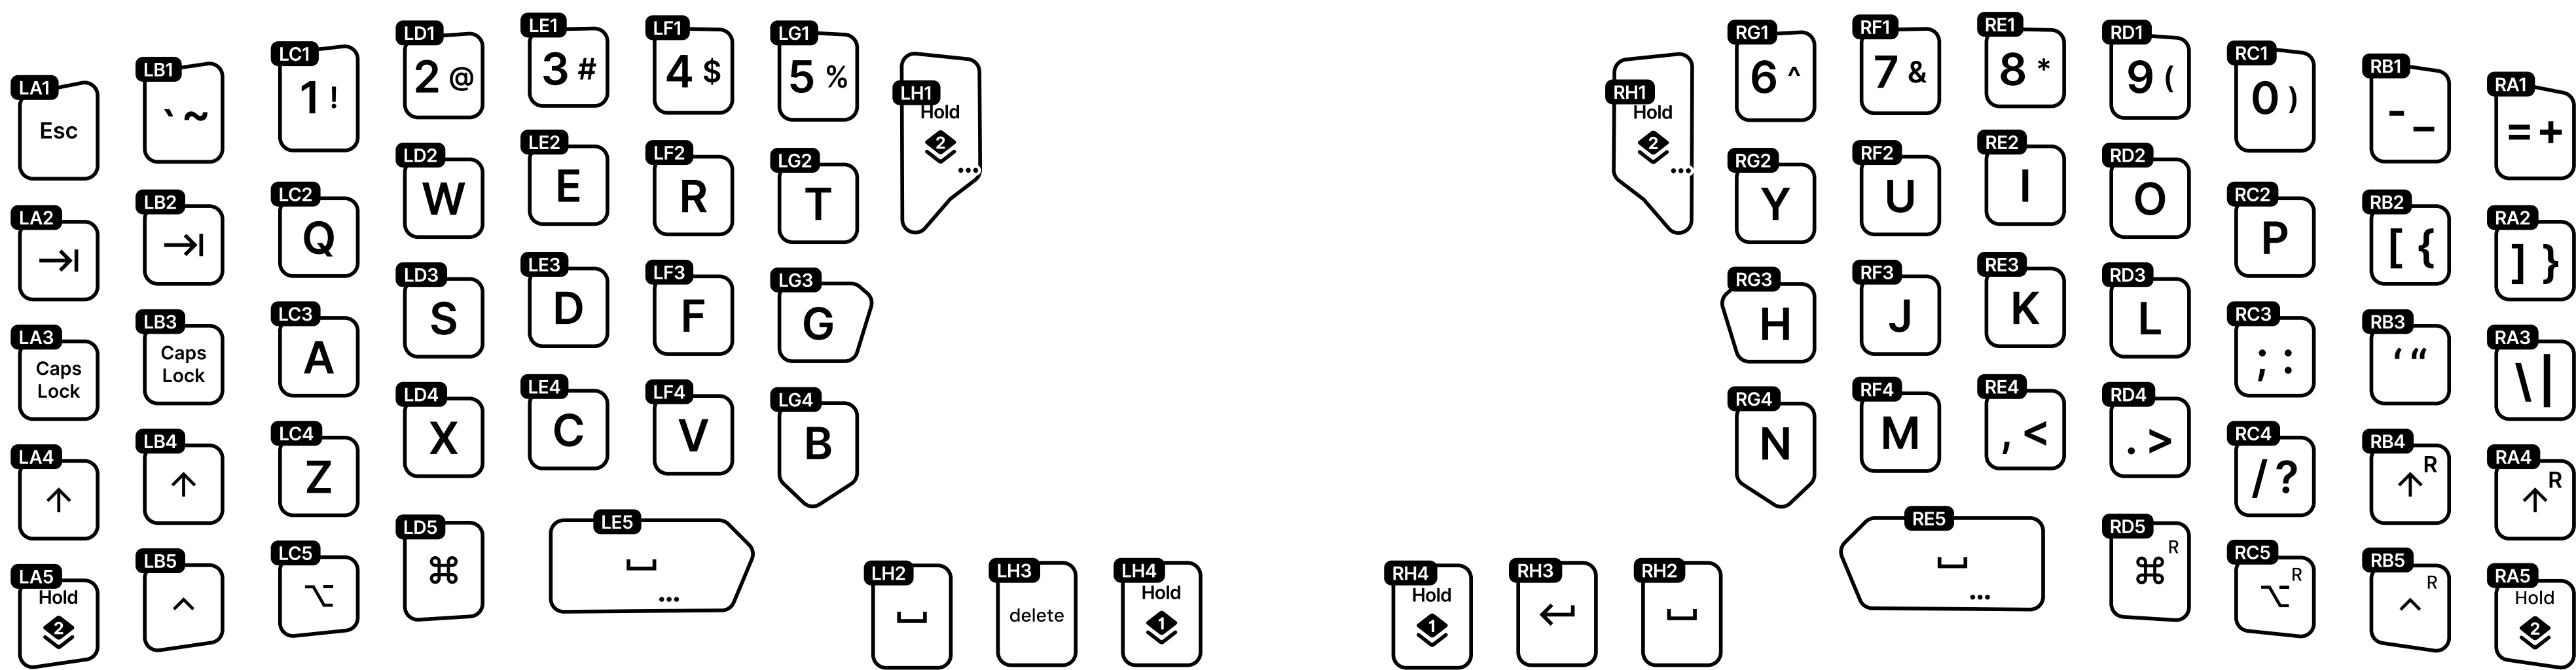


LA1	=	Esc	LA3	=	Caps Lock	LA5	=	Layer 2 while held	RC1	=	0 and)	RC3	=	; and :
LB1	=	Grave and Tilde	LB3	=	Caps Lock	LB5	=	Control	RB1	=	- and _	RB3	=	' and "
LC1	=	1 and !	LC3	=	A	LC5	=	Option	RA1	=	= and +	RA3	=	\ and
LD1	=	2 and @	LD3	=	S	LD5	=	Command	RG2	=	Y	RG4	=	N
LE1	=	3 and #	LE3	=	D	LE5	=	Space (Hold: Command)	RF2	=	U	RF4	=	M
LF1	=	4 and \$	LF3	=	F	LH2	=	Space	RE2	=	I	RE4	=	, and <
LG1	=	5 and %	LG3	=	G	LH3	=	Delete	RD2	=	O	RD4	=	. and >
LH1	=	Enter (Hold: Layer 2)	LA4	=	Shift	LH4	=	Layer 1 while held	RC2	=	P	RC4	=	/ and ?
LA2	=	Tab	LB4	=	Shift	RH4	=	Layer 1 while held	RB2	=	[and {	RB4	=	Shift Right
LB2	=	Tab	LC4	=	Z	RH3	=	Return	RA2	=	] and }	RA4	=	Shift Right
LC2	=	Q	LD4	=	X	RH2	=	Space	RG3	=	H	RE5	=	Space (Hold: Command)
LD2	=	W	LE4	=	C	RH1	=	Delete (Hold: Layer 2)	RF3	=	J	RD5	=	Command Right
LE2	=	E	LF4	=	V	RG1	=	6 and ^	RE3	=	K	RC5	=	Option Right
LF2	=	R	LG4	=	B	RF1	=	7 and &	RD3	=	L	RB5	=	Control Right
LG2	=	T				RE1	=	8 and *				RA5	=	Layer 2 while Held
						RD1	=	9 and (						

Naya Default MacOS – Layer 1 (Function & Numpad) (Requires Naya Flow)

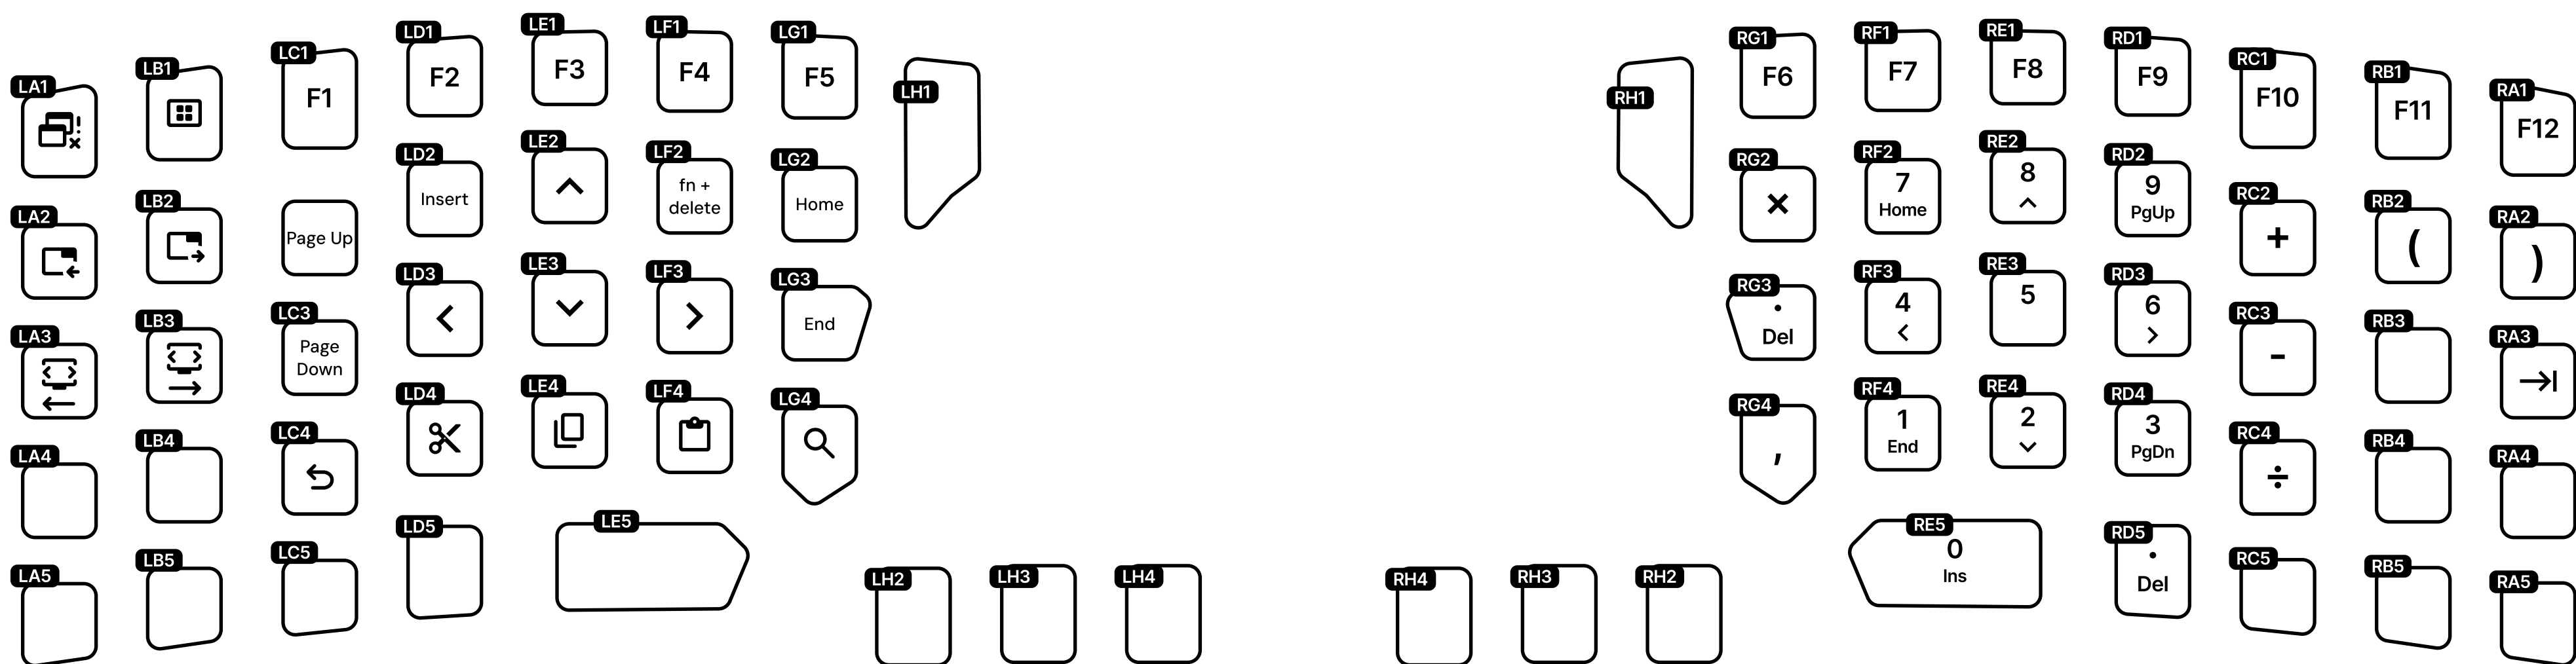

LA1 = Force Close Application	LA3 = Previous Screen	LA5 = Transparent	RC1 = F10	RC3 = Numpad -
LB1 = Mission Control	LB3 = Next Screen	LB5 = Transparent	RB1 = F11	RB3 = Num Lock
LC1 = F1	LC3 = Page Down	LC5 = Transparent	RA1 = F12	RA3 = Transparent
LD1 = F2	LD3 = Left	LD5 = Transparent	RG2 = Numpad *	RG4 = Numpad ,
LE1 = F3	LE3 = Down	LE5 = Transparent	RF2 = Numpad 7	RF4 = Numpad 1
LF1 = F4	LF3 = Right	LH2 = Transparent	RE2 = Numpad 8	RE4 = Numpad 2
LG1 = F5	LG3 = End	LH3 = Transparent	RD2 = Numpad 9	RD4 = Numpad 3
LH1 = Transparent	LA4 = Transparent	LH4 = Transparent	RC2 = Numpad +	RC4 = / and ?
LA2 = Previous Tab	LB4 = Transparent	RH4 = Transparent	RB2 = Numpad (	RB4 = Transparent
LB2 = Next Tab	LC4 = Undo	RH3 = Transparent	RA2 = Numpad)	RA4 = Transparent
LC2 = Page Up	LD4 = Cut	RH2 = Transparent	RG3 = Numpad /	RE5 = Numpad 0
LD2 = Insert	LE4 = Copy	RH1 = Transparent	RF3 = Numpad 4	RD5 = Numpad .
LE2 = Up	LF4 = Paste	RG1 = F6	RE3 = Numpad 5	RC5 = Win Key Right
LF2 = Forward Delete	LG4 = Spotlight	RF1 = F7	RD3 = Numpad 6	RB5 = Transparent
LG2 = Home		RE1 = F8		RA5 = Transparent
		RD1 = F9		

Naya Default MacOS – Layer 2 (System) (Requires Naya Flow)

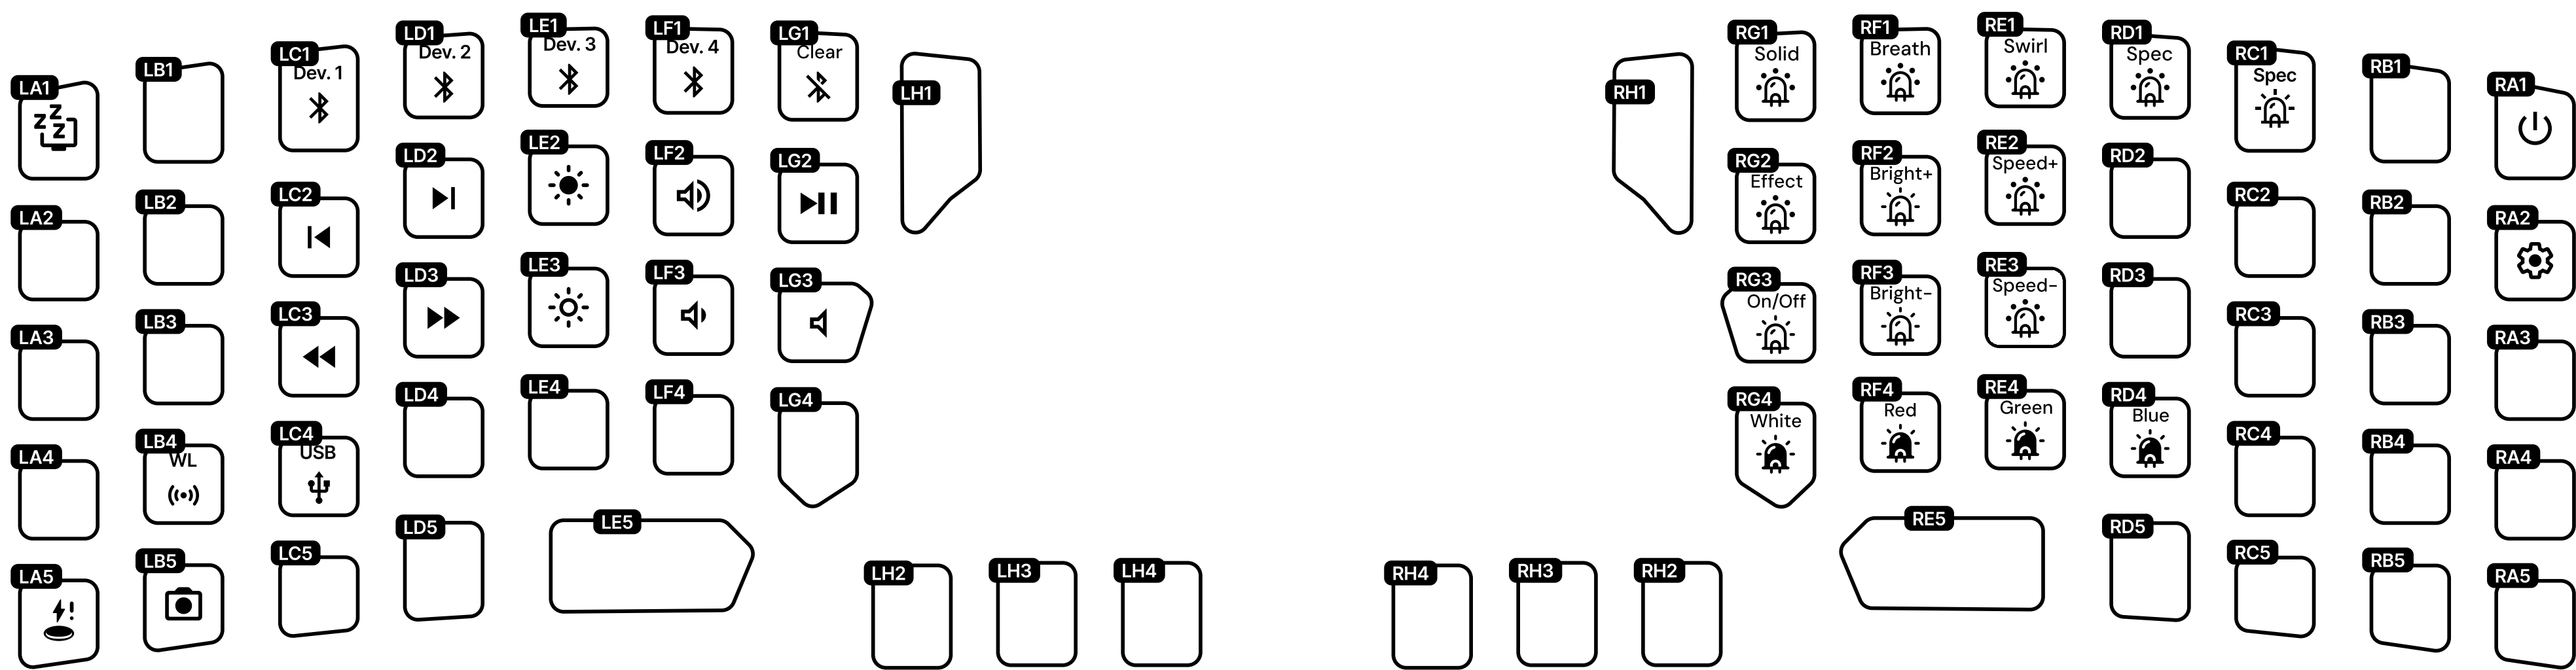

LA1	=	Display Sleep	LA3	=	Disabled	LA5	=	Module Recovery Mode	RC1	=	Disabled	RC3	=	Disabled
LB1	=	Disabled	LB3	=	Disabled	LB5	=	Screenshot	RB1	=	Disabled	RB3	=	Disabled
LC1	=	BT Device 1	LC3	=	Rewind	LC5	=	Disabled	RA1	=	Power Button	RA3	=	Disabled
LD1	=	BT Device 2	LD3	=	Fast Forward	LD5	=	Disabled	RG2	=	LED Cycle Effect	RG4	=	LED White
LE1	=	BT Device 3	LE3	=	Screen Brightness Down	LE5	=	Disabled	RF2	=	LED Brightness Up	RF4	=	LED Red
LF1	=	BT Device 4	LF3	=	Volume Down	LH2	=	Disabled	RE2	=	LED Effect Speed Up	RE4	=	LED Green
LG1	=	BT Clear	LG3	=	Mute	LH3	=	Disabled	RD2	=	Disabled	RD4	=	LED Blue
LH1	=	Disabled	LA4	=	Disabled	LH4	=	Disabled	RC2	=	Disabled	RC4	=	Disabled
LA2	=	Disabled	LB4	=	Output through Wireless	RH4	=	Disabled	RB2	=	Disabled	RB4	=	Disabled
LB2	=	Disabled	LC4	=	Output through USB	RH3	=	Disabled	RA2	=	Open Preferences	RA4	=	Disabled
LC2	=	Previous Track	LD4	=	Disabled	RH2	=	Disabled	RG3	=	LED ON/OFF	RE5	=	Disabled
LD2	=	Next Track	LE4	=	Close Virtual Desktop	RH1	=	Disabled	RF3	=	LED Brightness Down	RD5	=	Disabled
LE2	=	Screen Brightness Up	LF4	=	Add Virtual Desktop	RG1	=	LED Solid Color	RE3	=	LED Effect Speed Down	RC5	=	Disabled
LF2	=	Volume Up	LG4	=	Disabled	RF1	=	LED Breathing Color	RD3	=	Disabled	RB5	=	Disabled
LG2	=	Play/Pause				RE1	=	LED Swirl Color				RA5	=	Disabled
						RD1	=	LED Spectrum Color						

Customising your Keybindings with Naya Flow.

Download


In order to customize your Naya Create download the customization software Naya Flow from naya.tech/getstarted.

Reprogram

- Key bindings
- Module bindings
- Naya Pulse (Tune Haptic Feedback)

Development on Naya Flow will continue to provide you with more and better tools so be sure to check naya.tech/updates for the latest updates!

 Ideas or suggestions? Feel free to join us on discord and let us hear them!

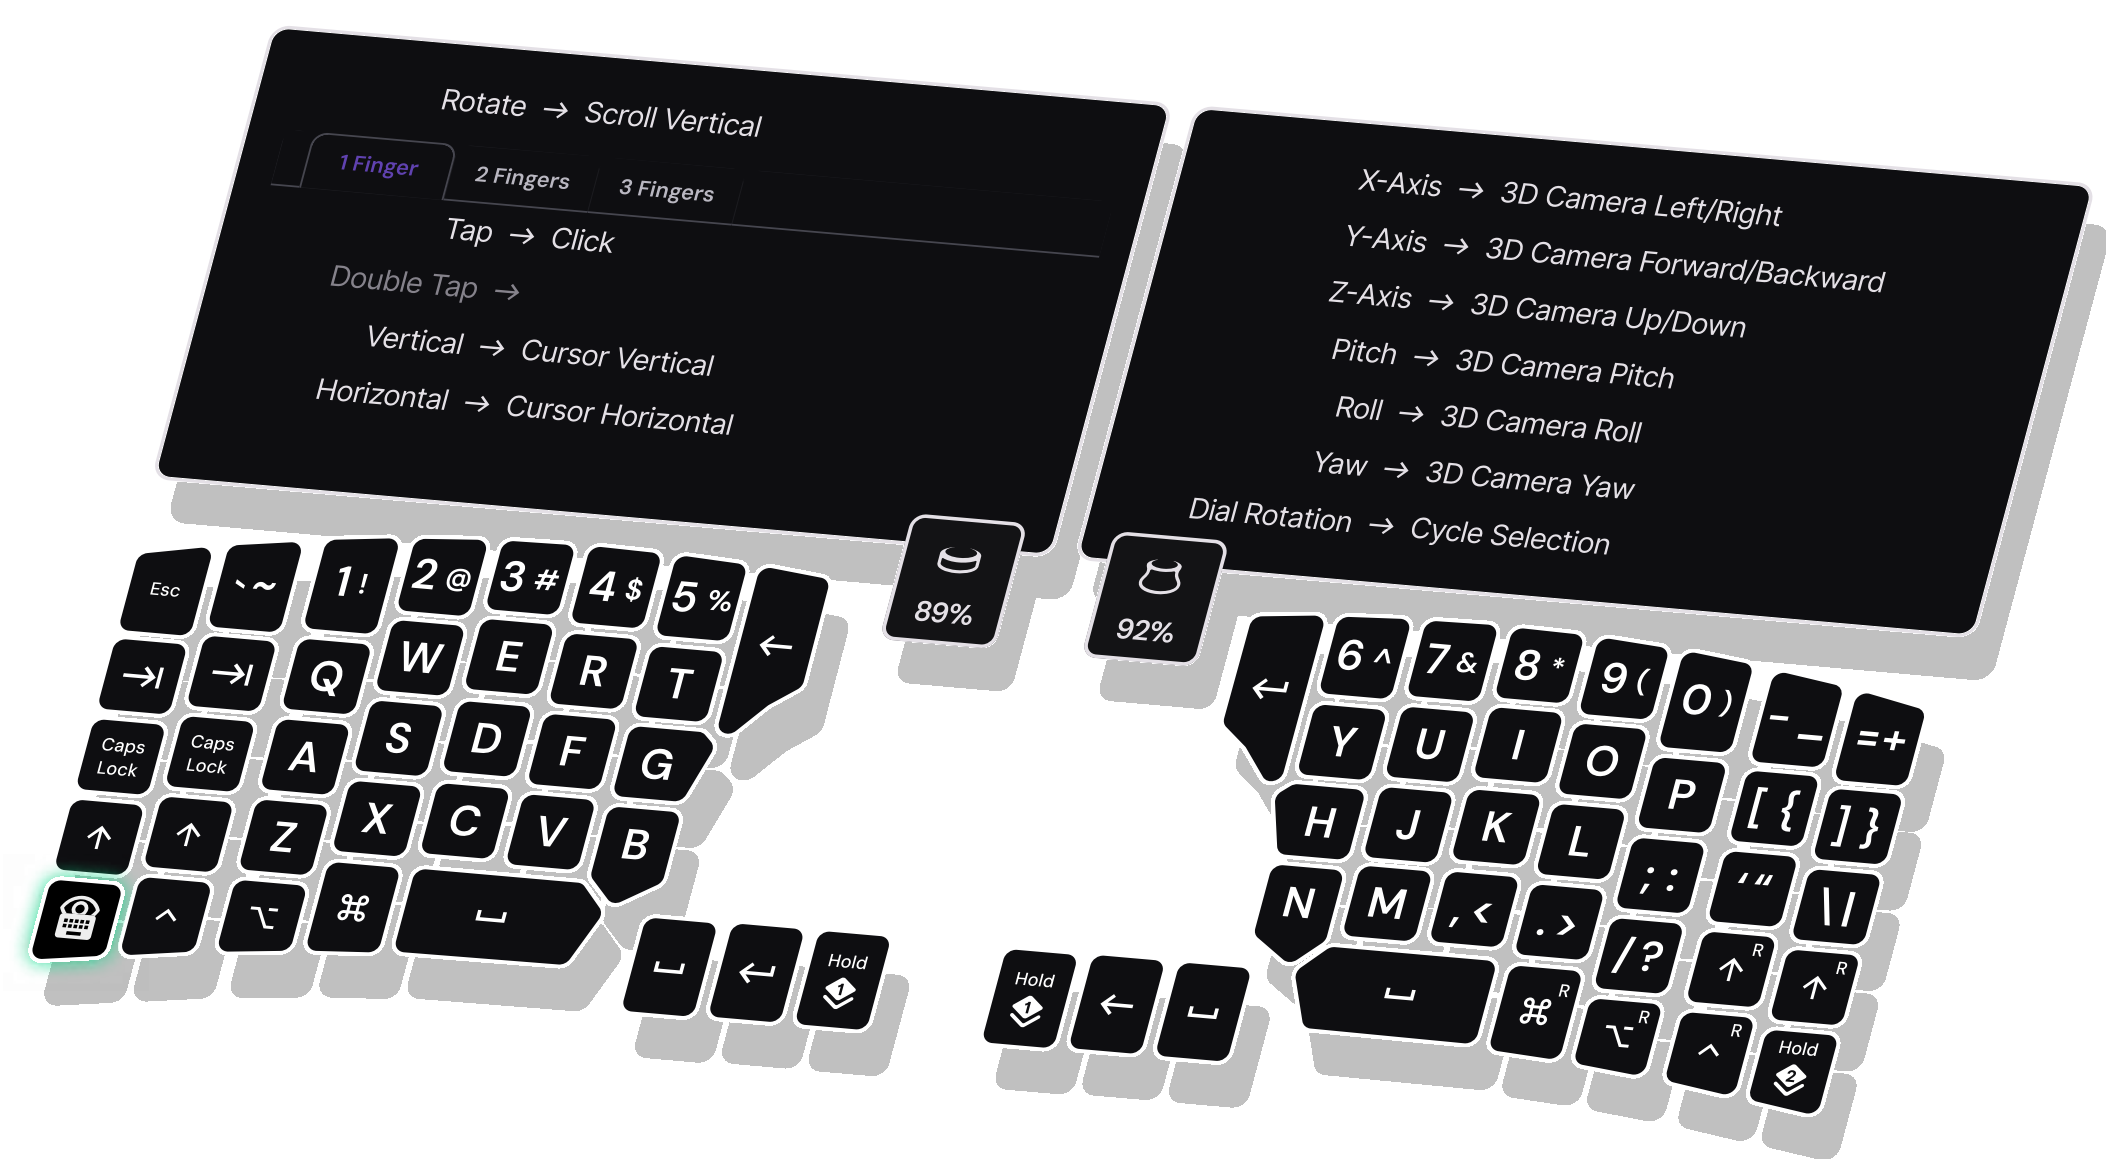

Additional Information

Troubleshooting

My keyboard won't power ON.

- Ensure that the power switch is in the ON position.
- If connected via USB: Ensure that the cable is compatible and properly connected. Ensure that long end of the cable is plugged into a USB 3.0 port.
- If connected via wireless: Ensure that modules are properly connected and charged.

My layers won't activate properly

- Make sure you are using the correct layer action (layers can be set to activate while held, as an absolute activation, or as a toggle) (See Keybindings.)

My keyboard is not behaving as expected.

- Ensure that your device is using the correct input source.
- Verify your bindings in Naya Flow.
- Turn your Naya Create OFF and ON again to reset the active layers.
- Ensure that the connection to your device is functioning correctly.
- If connected over USB please be sure to use the provided usb-c cables.
- Make sure your drivers and firmware are up to date.
- Ensure that Create Left is powered ON before Create Right.
- Make sure your two halves are paired together using the device manager.

I need a replacement part or accessory.

- We sell replacements on our site at naya.tech/pages/shop.
- If the piece you need is not listed please contact us at support@naya.tech.

Create isn't pairing over bluetooth.

- Move closer to the device you are pairing with, as distance or interference can disrupt the connection.
- Try forgetting and re-pairing your Create on the device you are trying to pair.
- Ensure no other paired devices are actively connected to the same Bluetooth slot.

I've gotten stuck on a certain layer and don't have access to Naya Flow.

- In order to reset which layers are active simply turn your Naya Create OFF and ON again.

Does your issue persist? Contact us at support@naya.tech.

Safety & Care

- Contains small parts which may be a choking hazard. Not suitable for children under age five.
- Do not twist or stretch the keyboard against the direction of the hinges.
- Do not force the hinges past their range of motion.
- Clean only by gently wiping with a dry microfiber cloth.
- Do not clean pogo pin connections using liquids or abrasive materials.
- Do not put heavy objects on top of the keyboard.
- Do not spill liquids on the keyboard.
- Keep away from sharp objects, fire, water, and high voltage equipment.
- Do not sit on, drop, crush, puncture, shred the keyboard, cool below 0°C (32°F) or heat above 60°C (140°C).
- Do not short-circuit the pogo pins, included battery, or its cells.
- In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes.

Environmental & Recycling Instructions

Battery disposal at end of product life.

1. Detach and remove all switches, screws and hinges and remove the circuit board from the aluminum body.
2. Detach and remove battery from circuit board.
3. Dispose of your product and its battery according to local laws.



WEEE Disposal and Recycling Information

This symbol means that waste of electrical and electronic equipment (WEEE) should not be disposed as general household waste. WEEE should be treated separately to prevent possible harm to the environment or human health. Consult your retailer or local municipal office for collection, return, recycle or reuse of WEEE.

Warranty Policy

Our products come with a one-year warranty term and a commitment to assist with parts and repairs well beyond that. For any questions just reach out at support@naya.tech.

Our quality commitment

We design our products to be reliable, durable, and a joy to use. We use best-in-class materials to manufacture our products and designed nearly all parts to be replaceable. This doesn't just reduce e-waste, but also means we seek to support you with spare parts beyond the warranty term.

What's Covered?

For one (1) year from the date of delivery, we warrant that your Naya device will be free from defects in materials and workmanship under normal use. If local regulations mandate a longer warranty term, we will match it. For example, in Europe a two (2) year warranty period is mandated from the date of delivery. If an issue arises due to a defect in manufacturing or materials, we will repair or replace the product as we deem necessary. This warranty is non-transferable and applies only to the original end-purchaser of the product.

What's Not Covered?

While we build Naya products to last, some things fall outside the scope of our warranty:

- Normal wear and tear, including cosmetic damage such as scratches or discoloration.
- Damage caused by accidents, misuse, neglect, acts of nature, fire, liquid exposure, or unauthorized modifications.
- Issues caused by third-party accessories, unauthorized repairs, or improper handling, such as applying excessive force while exchanging key switches.
- Damage caused by customizing our products' firmware.
- Loss or Theft.
- Battery degradation due to normal use over time.

How to Make a Warranty Claim?

If you believe your Naya product has a defect covered by our warranty, here's what to do:

1. Contact Us: Reach out to our support team at support@naya.tech with your proof of purchase and a description of the issue. If you purchased through our website, you don't need a proof of purchase.
2. Assessment: Our team will assess the situation, may ask you for further information and proof and guide you through troubleshooting steps if needed.
3. Repair or Replacement: If your issue can't be fixed otherwise, we'll arrange for a repair or a replacement unit. We ask you to ship your original unit back to us at our expense.

Please note, that warranty replacements sent to international addresses may incur customs fees. At this time, we cannot guarantee from which locations replacement parts may be shipped. We mark all warranty shipments as "warranty replacement," but local customs authorities may still impose charges. Customers are responsible for these charges.

A Warranty That Works With You

We know that a great product deserves great support. Due to our supplier terms, we cannot extend this warranty after expiry and make exceptions. However, our team is here to help and will always aim for a quick, fair and transparent resolution – both during and after your warranty period. We developed our products with repairability for years to come in mind. If you ever have questions, don't hesitate to reach out at support@naya.tech.

— Team Naya

Intellectual Property Rights

- NAYA B.V. owns the copyright to this manual.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by NAYA B.V. is under license
- All products and company names on this product and the package are trademarks or registered trademarks of their respective owners.

For any questions or concerns contact support@naya.tech

NAYA B.V. – Wasaweg 3 – 9723JD Groningen – Netherlands