


User Manual

Version 1.1.1

Whats in The Box

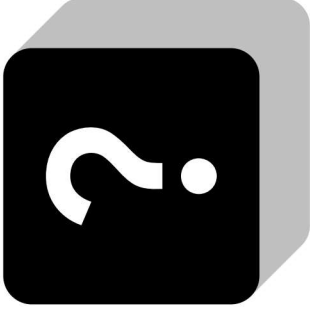

A Travel Case

B Naya Create

C Speedlink Dongle

D Y-Cable/Two USB-C cables

E Keycap/Switch Puller

F Spare/Sample Switches (3x)

G Module Spacers (2x)

A

C

Product Information

Naya Create is a split-ergonomic keyboard design with a module dock on each half to hold specialized control modules. For more information on each module please refer to the user manual of that specific module.

Features

- Programmable Key Behavior
- Programmable RGB Backlighting
- In-built tenting up to 27°
- Modular design for additional inputs
- Foam-suspended PCB for sound dampening
- Dedicated Customization Software

Power

Powering Create


Naya Create is designed to function while drawing power from either of two sources:

1. From a computer device connected via a USB 3.0 port.
2. From a docked module that contains a sufficient amount of charge.


Each half of the keyboard does contains a small internal battery that will keep the keyboard powered ON while hot swapping a module but is not intended to power normal operation of the keyboard. (The keyboard's internal battery will be charged automatically while the keyboard is drawing power.)



2 Power ON

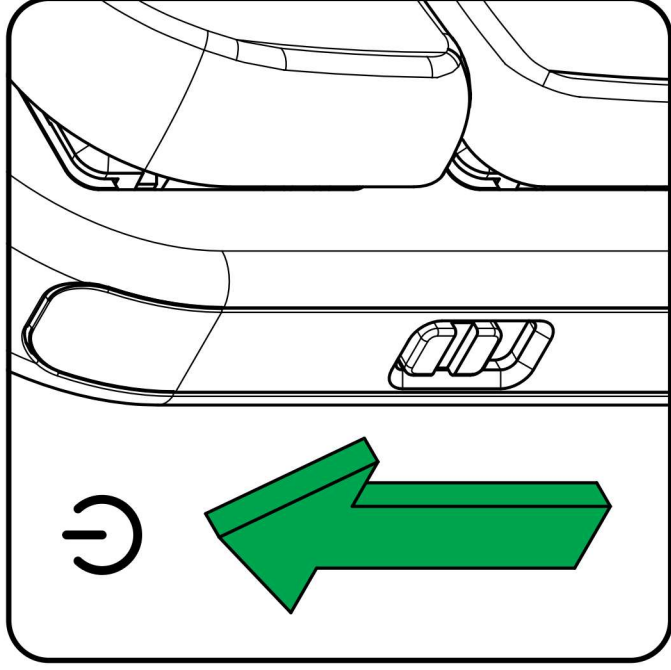

3 Power OFF

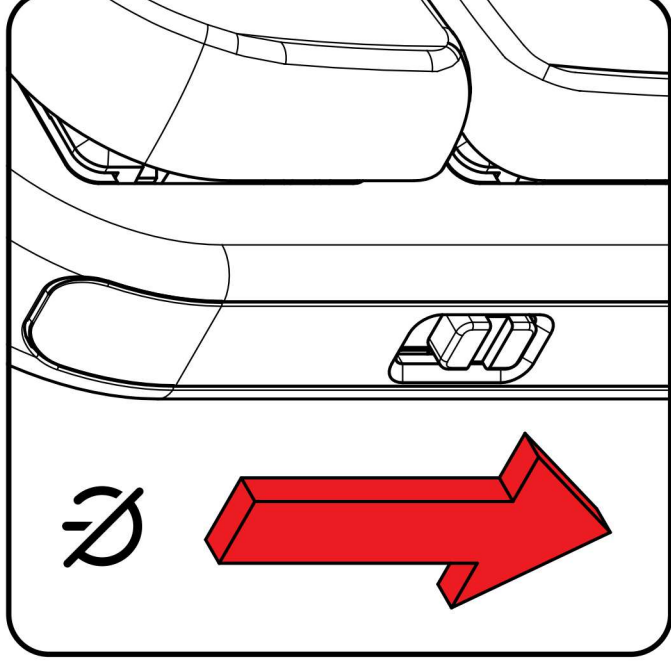

Turning Create ON/OFF


1. Locate the power switch on the side of each keyboard wing. Each keyboard half has independent power control.control.cc
2. Power ON – To switch the keyboard ON slide the switch to the ON position.



Output Modes

Create can be connected to multiple devices but will only output to a single device at a time. You can switch your active device by selecting the corresponding output mode.

USB Output

1. Connect both short ends of the USB-C Y-Cable, or two separate USB-C cables, to the USB-C ports on Naya Create.
2. Connect the long end of the USB-C Y-Cable, or the free ends of the two USB-C cables, to the USB-C ports on your computer.
3. Ensure your Create is powered ON.
4. Select USB output mode on the Naya Default Keymap by holding LAYER 2 (A5/H1) and pressing 'Z' (LC4) on your keyboard.

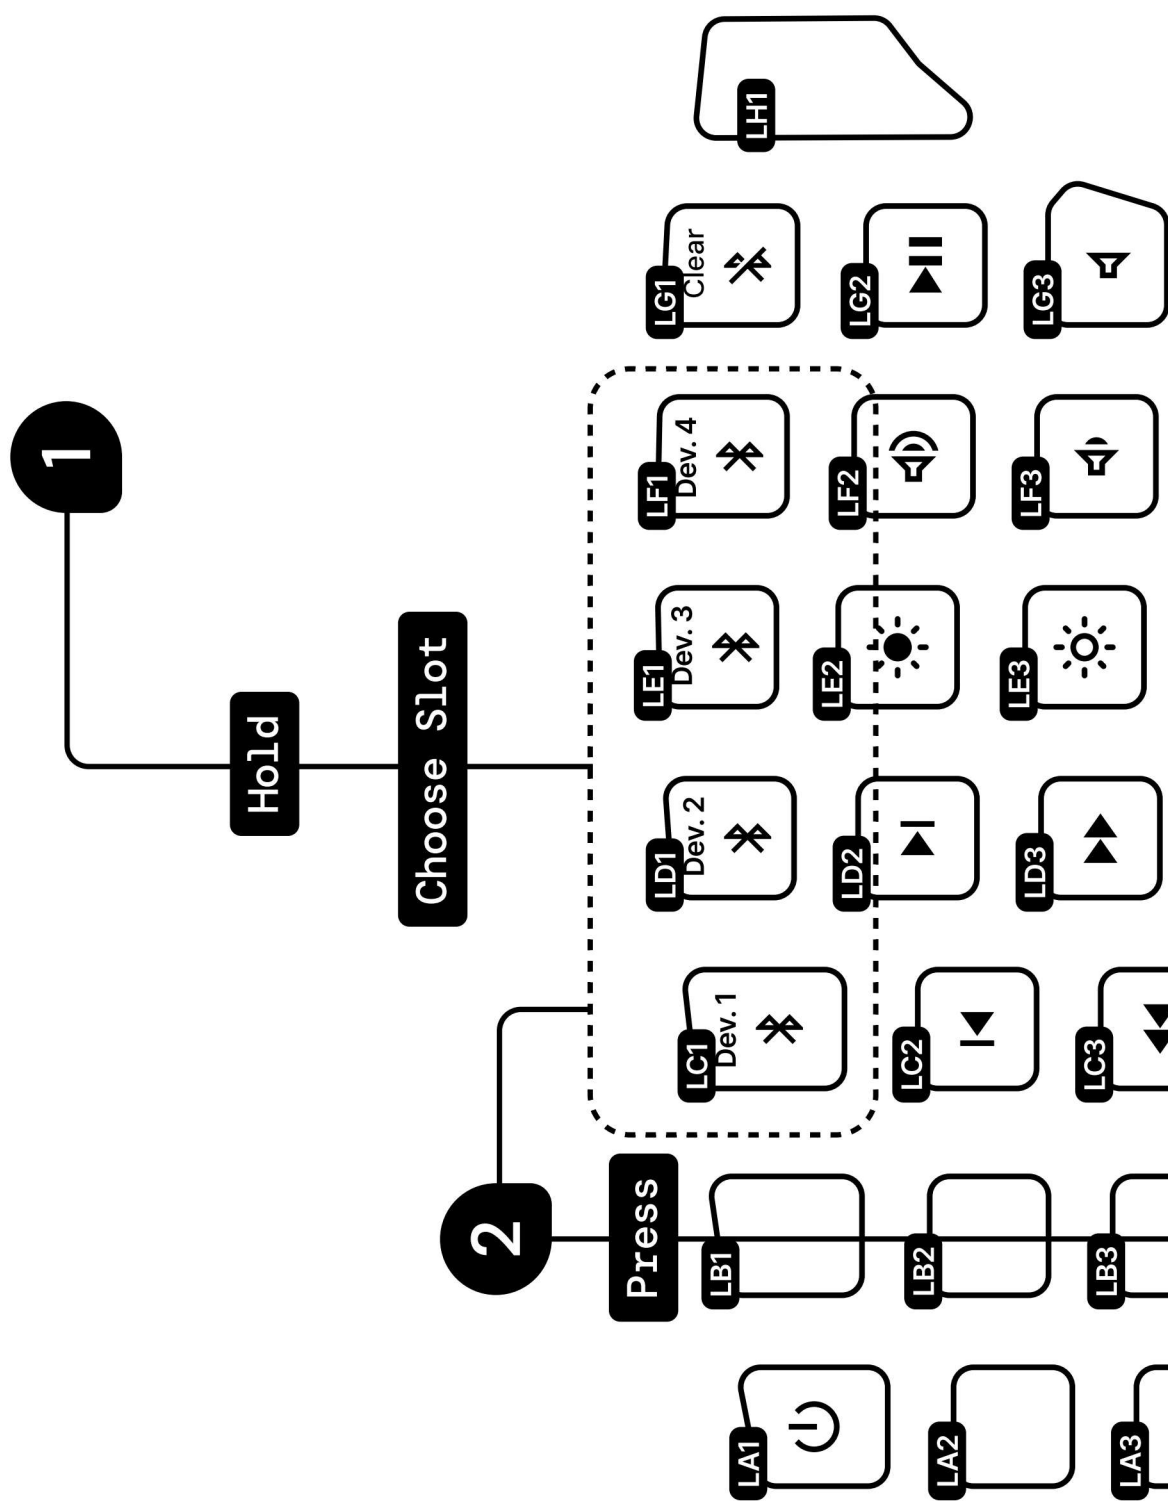

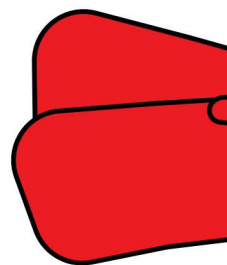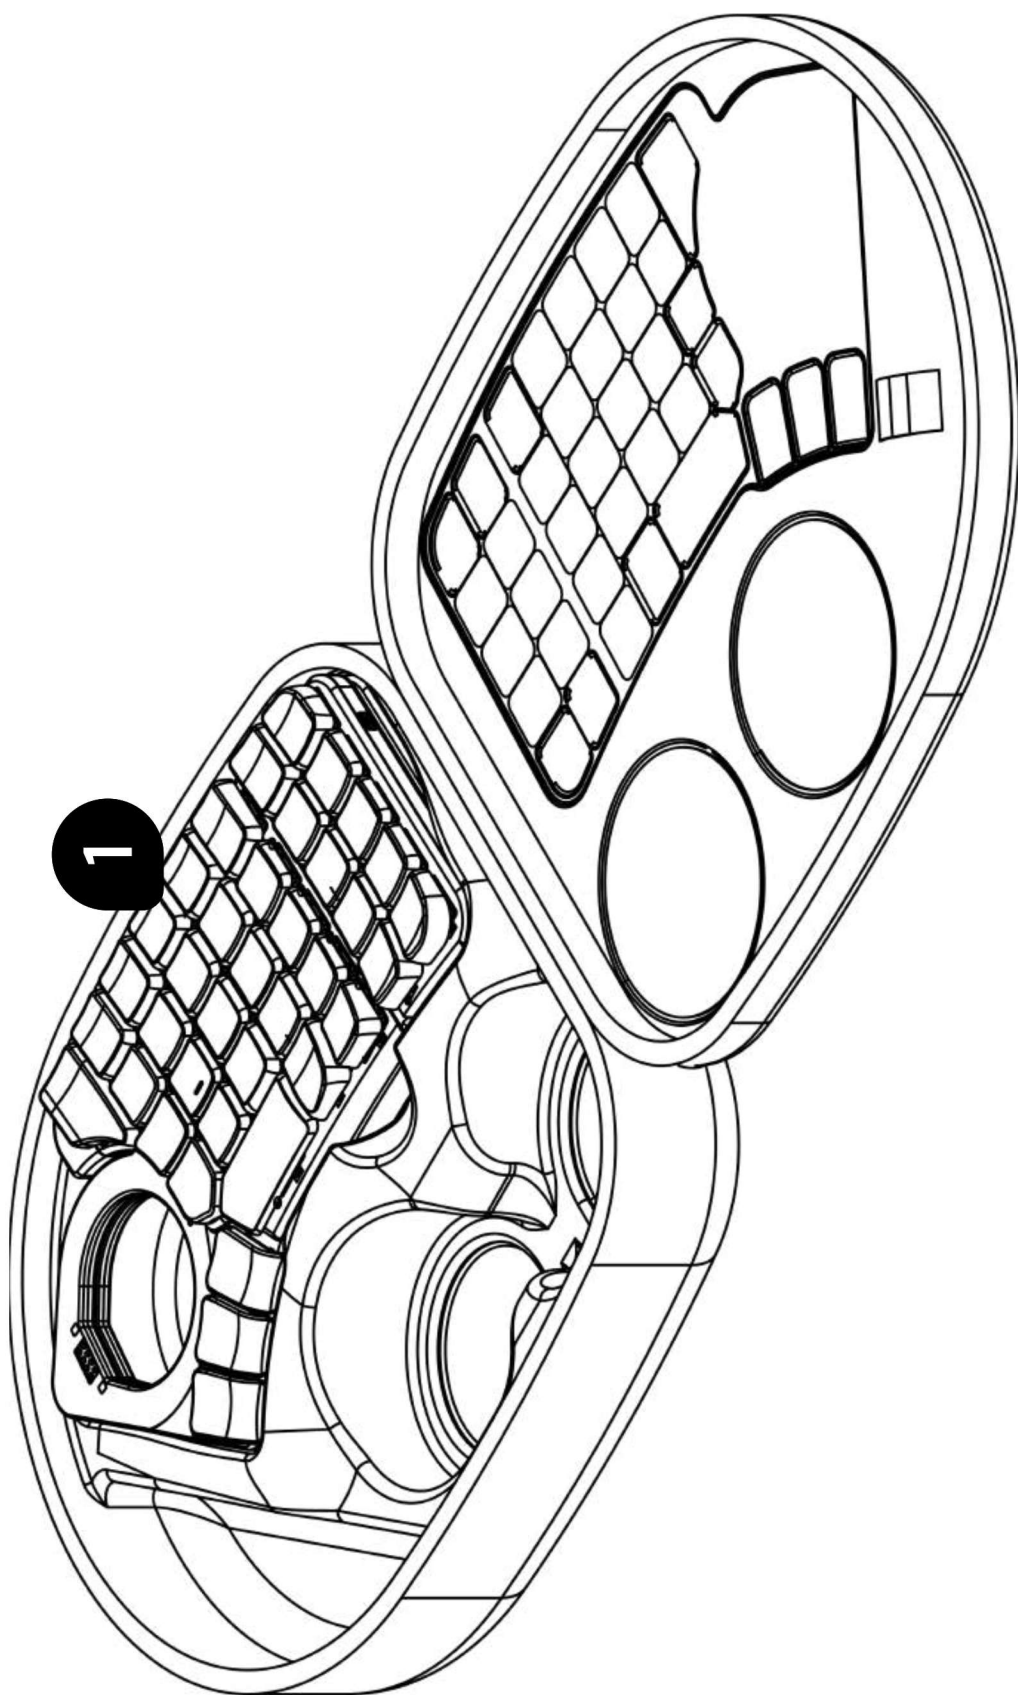

Tenting



1. Turn off Create – Disconnect the USB–C cable and module and ensure that the power switches are in the OFF position.
2. Lift Create – With one hand, pick up the keyboard and firmly grasp the main body.
3. Grasp wing hinge – With the other hand place your thumb over the middle two wing keys and grasp firmly with your remaining fingers on the bottom.
4. Bend wing hinge – Apply steady pressure upwards (towards the keycaps) until the wing reaches the desired angle.
5. Grasp dock hinge – Grasp the dock by pressing your thumb onto the metal body (avoid pressing on connection pins), supporting the bottom of the dock with your remaining fingers.
6. Bend dock hinge – Apply downward force to the module dock, until it reaches the desired angle.
7. Repeat for both halves – Repeat this process for the other half of Create.



Docking & Removing Modules

Docking Modules

1. Align module – To dock a Naya module with your Naya Create keyboard, align the pogo pins and keyboard.
2. Insert the module – Gently insert the module. The magnets in the dock and on the bottom attract and hold it in place.
3. Ensure proper seating – Make sure the module is seated completely flat. This ensures a proper connection with the data pins for full functionality.

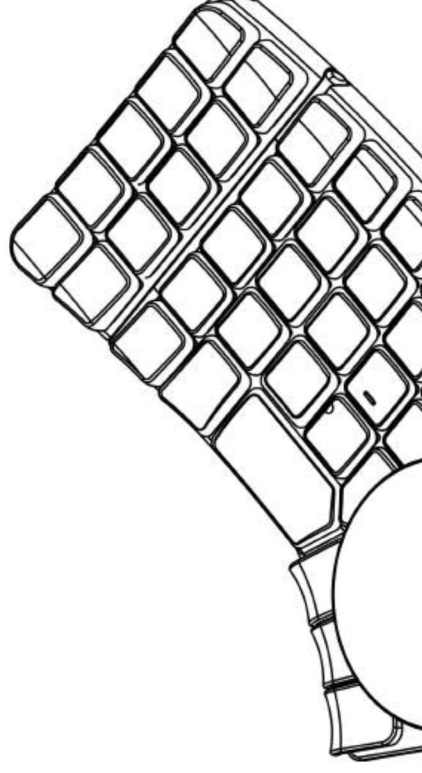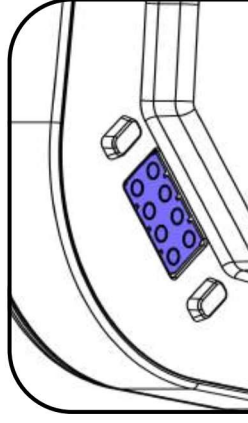

Maintenance & Care





1. Turn off Create – Disconnect the USB–C cable and ensure that the power switches are in the off position.
2. Remove dust and debris – Take a dry microfiber cloth and gently wipe the surface of the keyboard. Start by wiping the keycaps in a circular motion to remove dust and dirt.

 **Do not use liquid cleansers to clean Create!**

Do not clean pogo pin connections with liquids,

⚠ chemicals or physical abrasion as you risk

permanently damaging the connection.

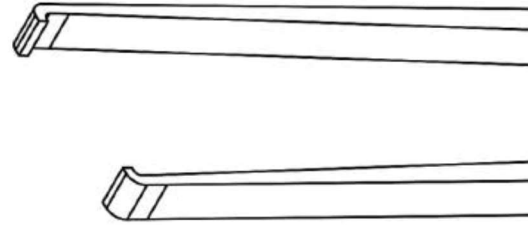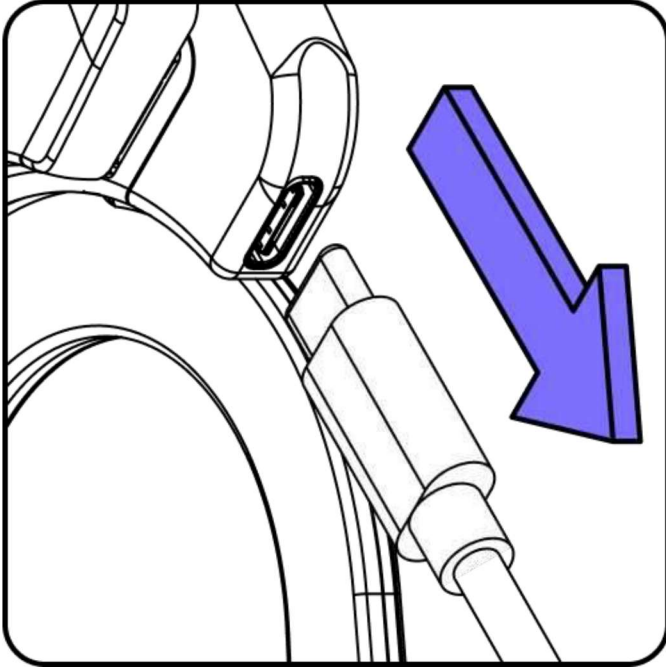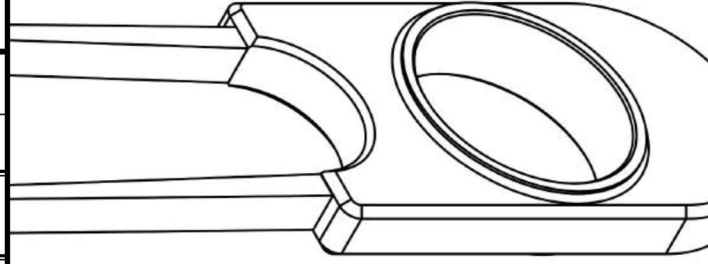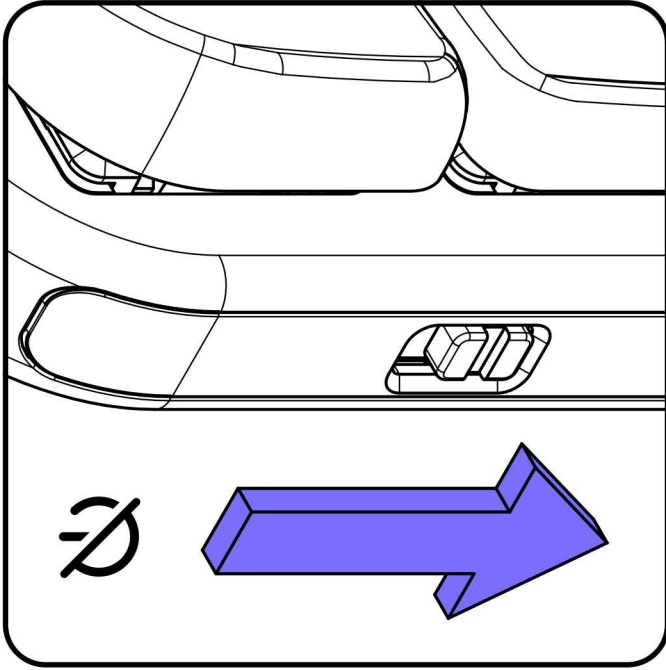

 **If any keycaps or switches are difficult to remove or install, be patient and avoid using excessive force.**

Installing Keycaps



1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the OFF position.
2. Match the location – The back of each keycap is labeled with a coordinate. You can reference the location the keycap should be placed based on the map provided below.
3. Align the keycap – Line up the stem of the keycap with the switch stem.
4. Press the keycap down – Gently press the keycap onto the switch until it fits securely in place. You should feel a slight snap when the keycap is correctly positioned.
5. Repeat for all keycaps – Continue the process for all keycaps. For larger keys with stabilizers, ensure that the stabilizers are properly aligned before pressing down.



Removing Switches

1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the off position.
2. Remove Keycaps – See above.
3. Insert the switch puller – Use the switch puller to grip the switch. Position the prongs of the puller in the cutouts above and below the switch.
4. Gently pull the switch out – Once the puller is securely in place, carefully pull the switch straight up and out of the socket. This should not require an excessive amount of force.

1

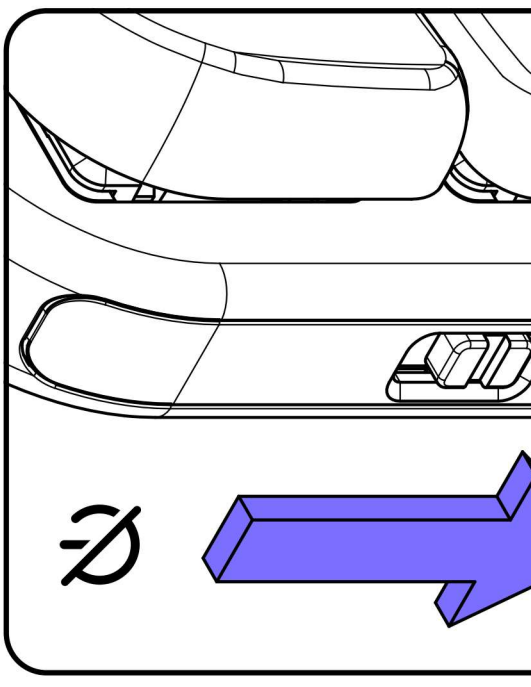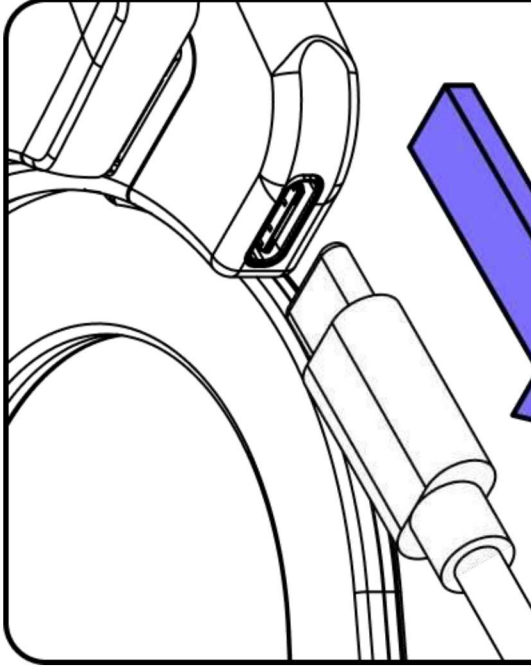

Installing Switches

1. Turn off Create – Disconnect the USB-C cable and ensure that the power switches are in the off position.
2. Inspect the socket – Ensure there is no dust or debris before inserting a new switch.
3. Inspect the switch – Ensure all pins on the switch are straight to prevent damage to switch and/or socket. (If using third-party sourced CPG-1232 switches please ensure that the pins are 0.45x0.42mm.)
4. Align the metal pins on the bottom of the switch with the holes of the socket. You may need to ensure that the sockets align with the cutouts on the body by pushing the PCB into position.
5. Press gently into the socket – Push the switch straight down into the socket until it clicks into place. Ensure the switch is seated firmly and evenly.
6. Repeat for all switches.
7. Check for stability – Test each switch by gently pressing it to confirm it's properly installed.



Keybindings

Programmable Keyboard Concepts

Layers

Naya Create can be loaded with multiple “layers” of bindings allowing for more bindings than there are keys on the keyboard. What action a key performs depends on which layers are currently active.


Each layer contains a binding for each key with the “transparent” action functions the same as if the layer was deactivated.

Examples

Examples of how a single key behaves depending on which layer is active.

Layer Priority


1. Press → Type out "a"

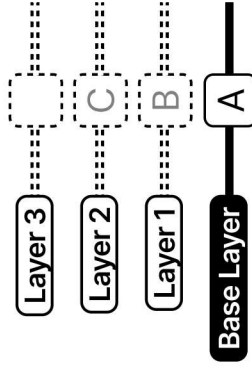

The default state, all layers are deactivated except for the Base Layer. Pressing this key will type "A".

2. Activate Layer 2


3. Press → Type out "c"

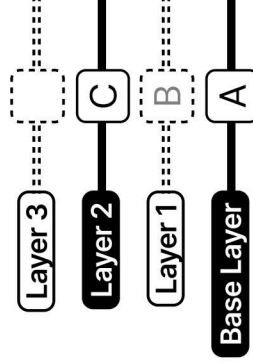

Since Layer 2 is active and is a higher layer than the Base Layer it takes priority.


4. Activate Layer 1

5. Press → Type out "c"

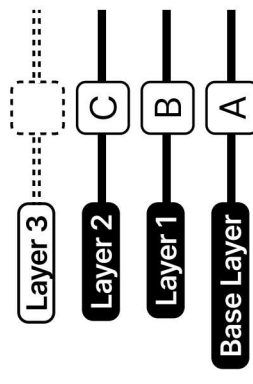


Even though Layer 1 was activated after Layer 2 it is a lower layer so Layer 2 still takes priority.


Naya Default Windows - Base Layer (C)

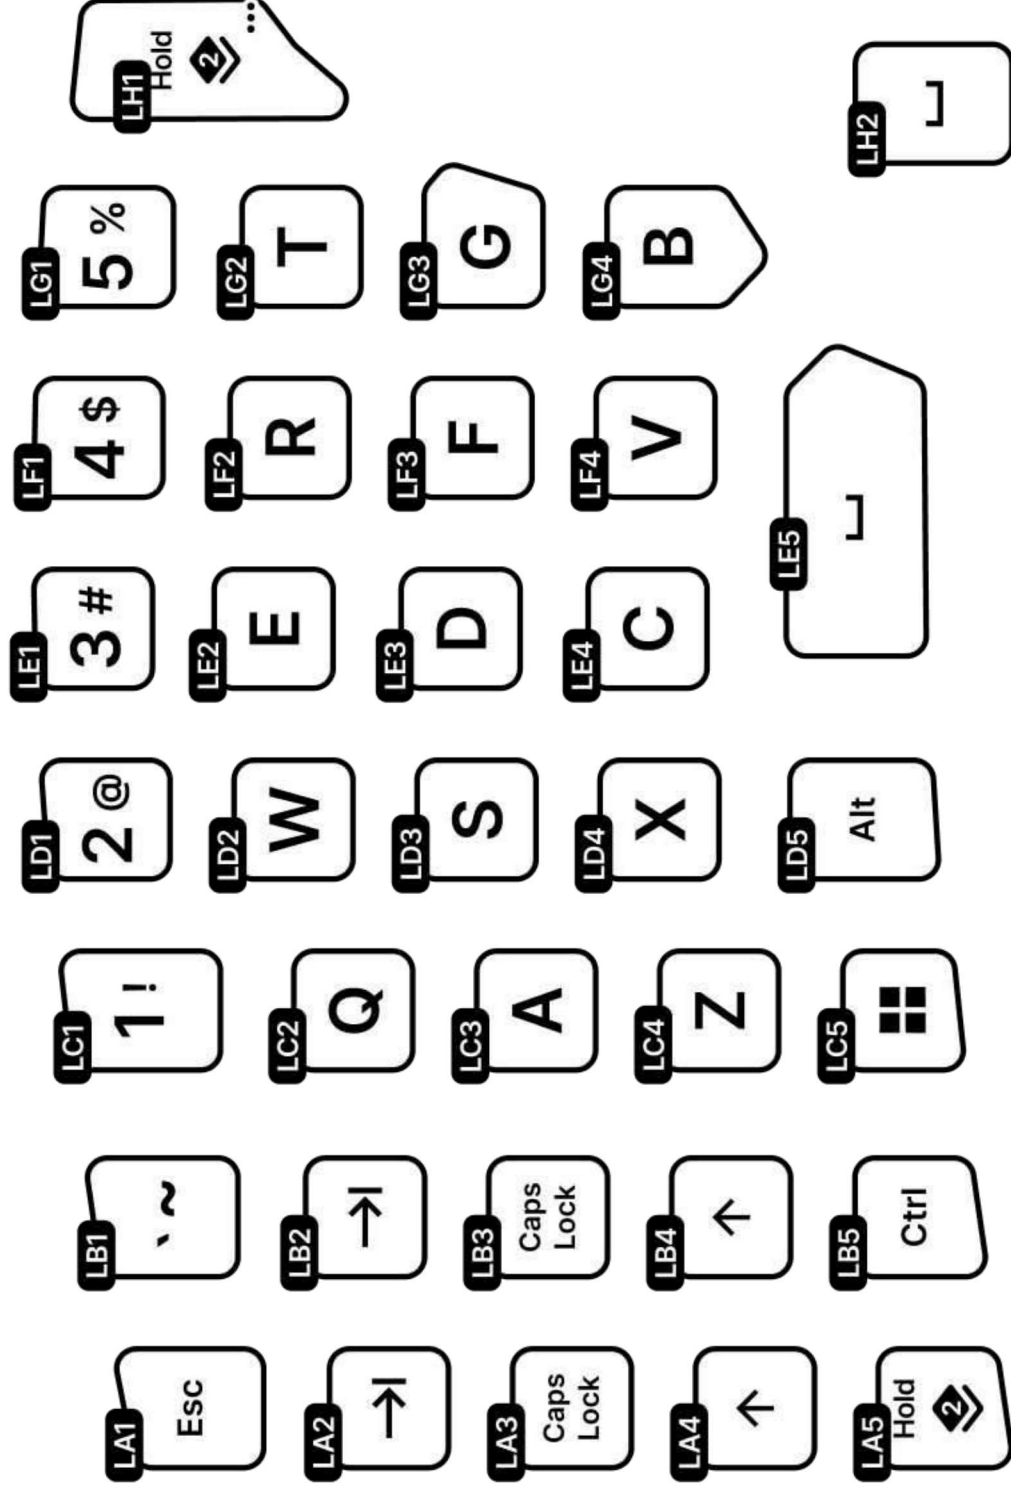


Naya Default Windows - Layer 1 (Func

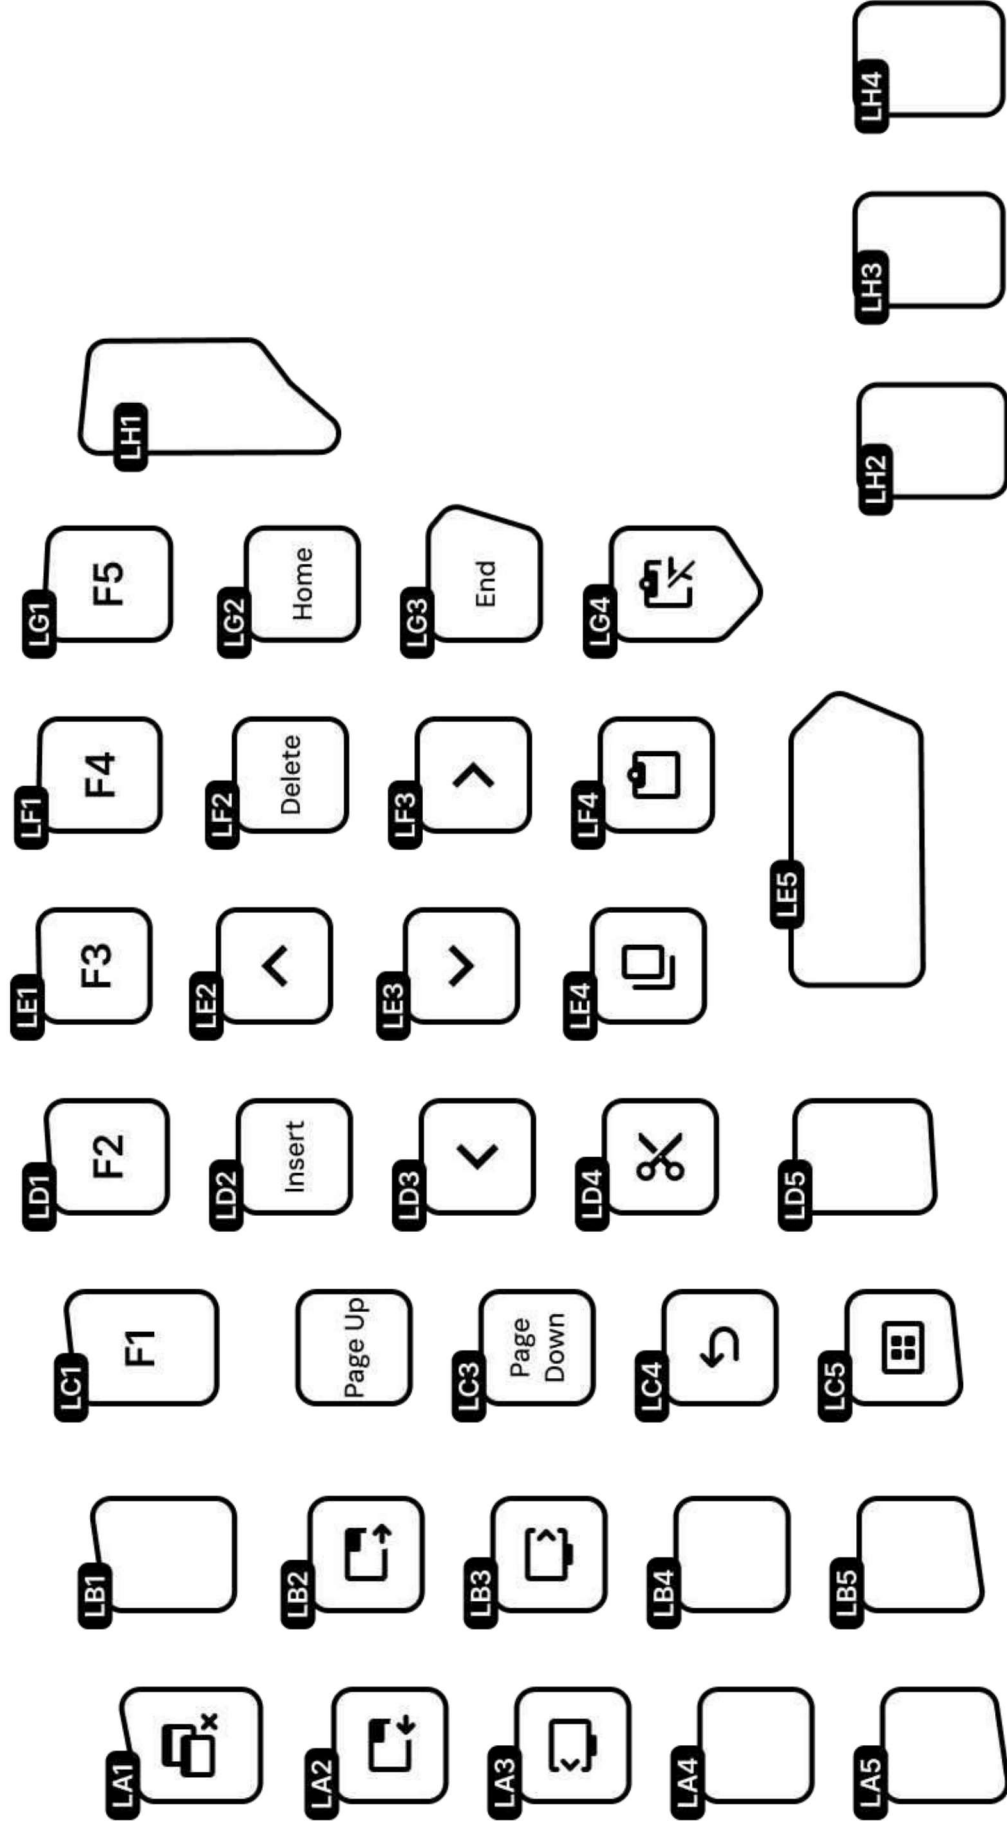


Naya Default Windows - Layer 2 (Syst

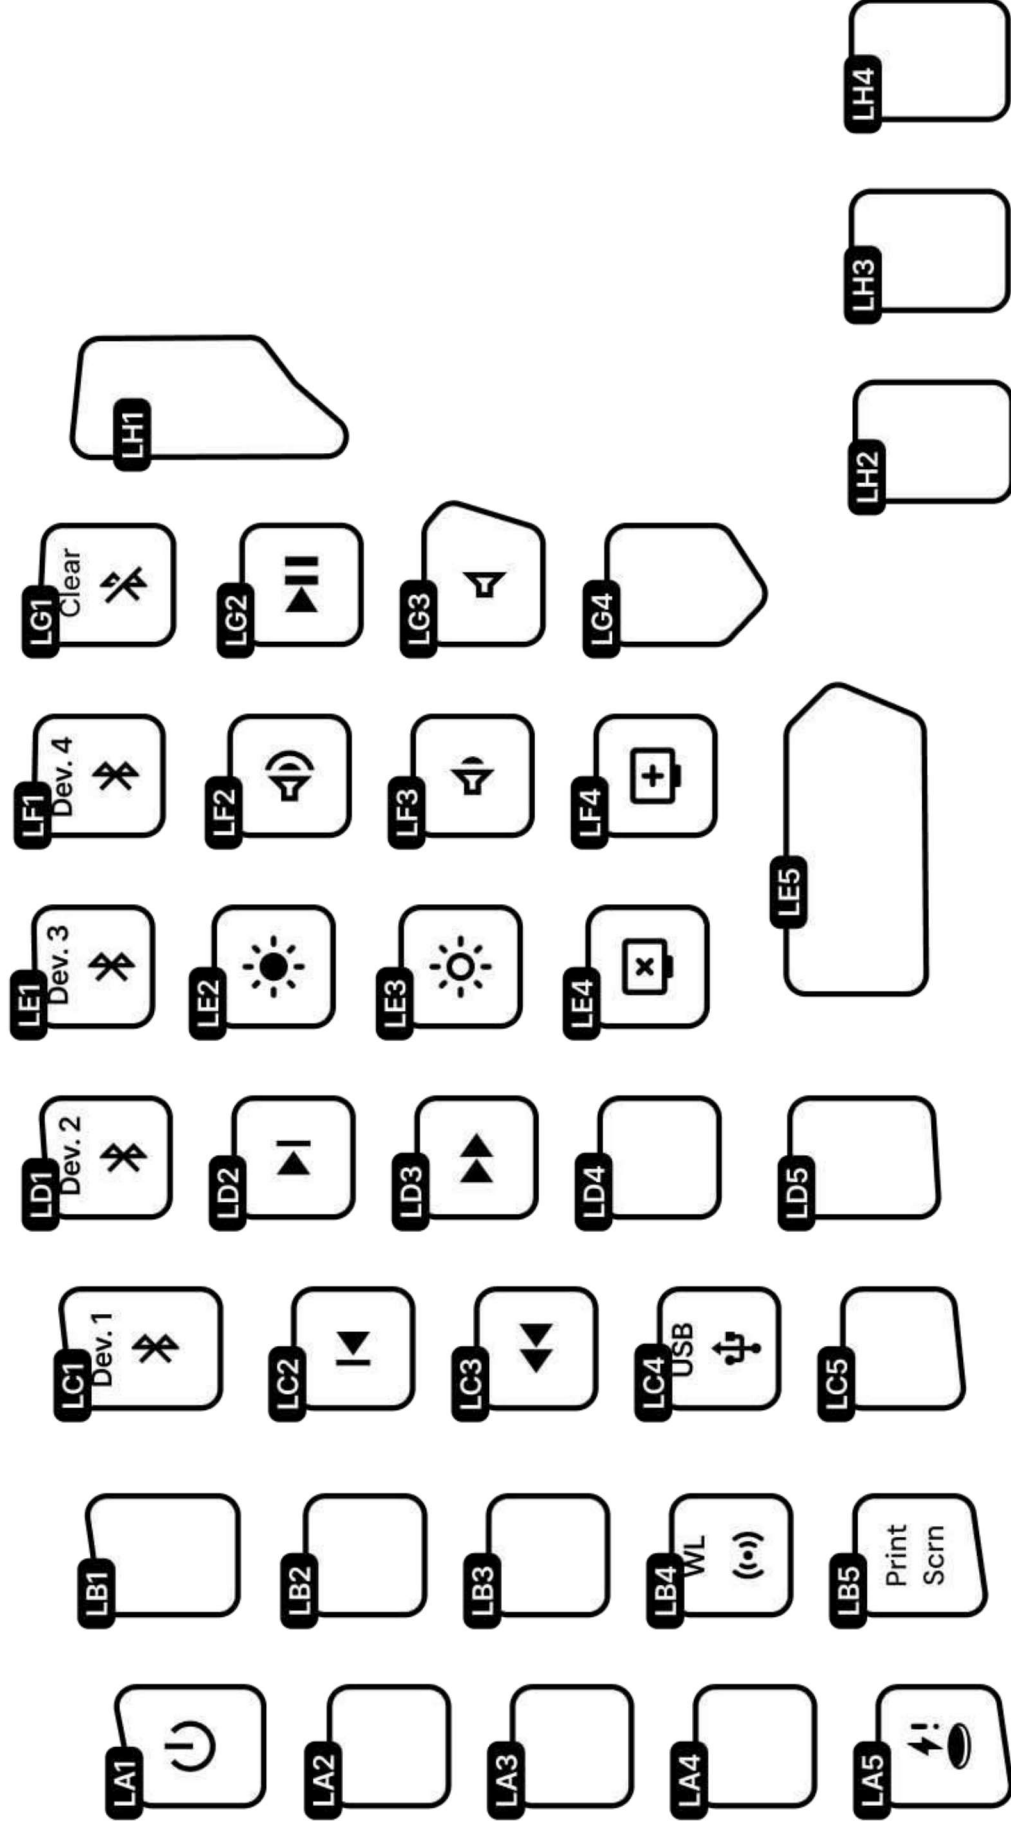


Naya Default MacOS - Base Layer (QWERTY)

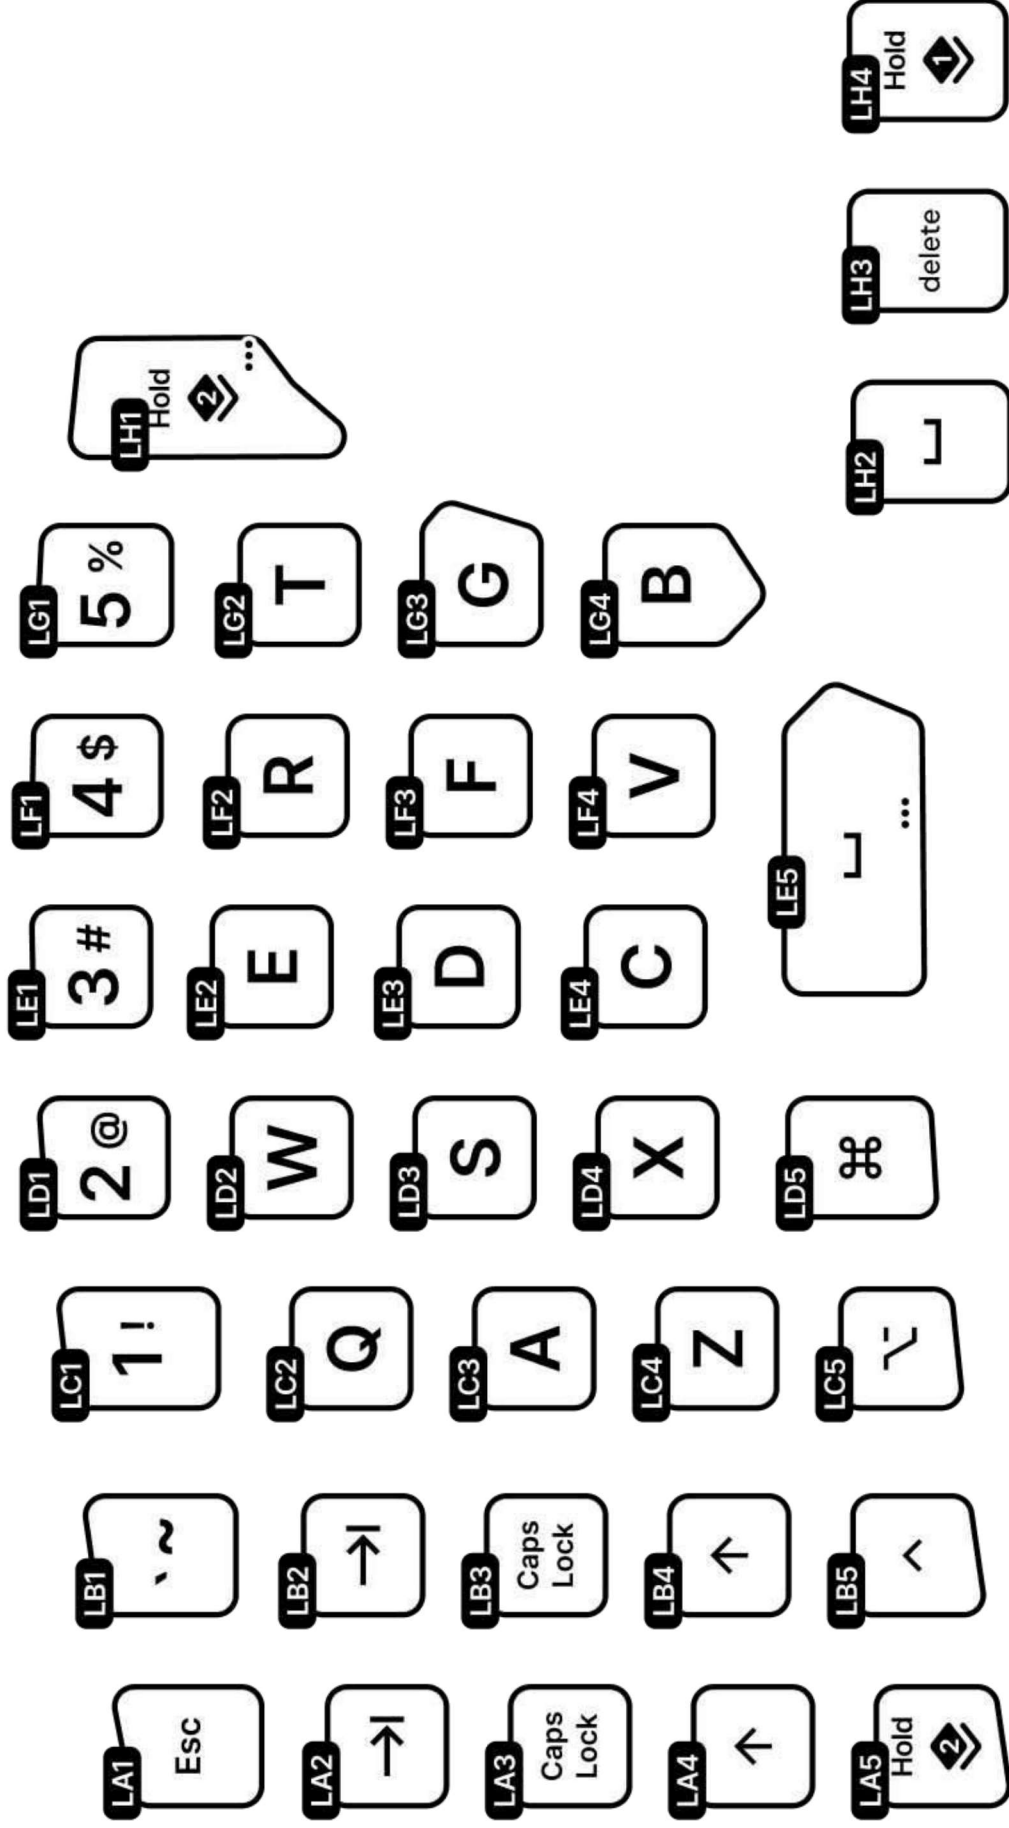

Naya Default MacOS - Layer 1 (Function

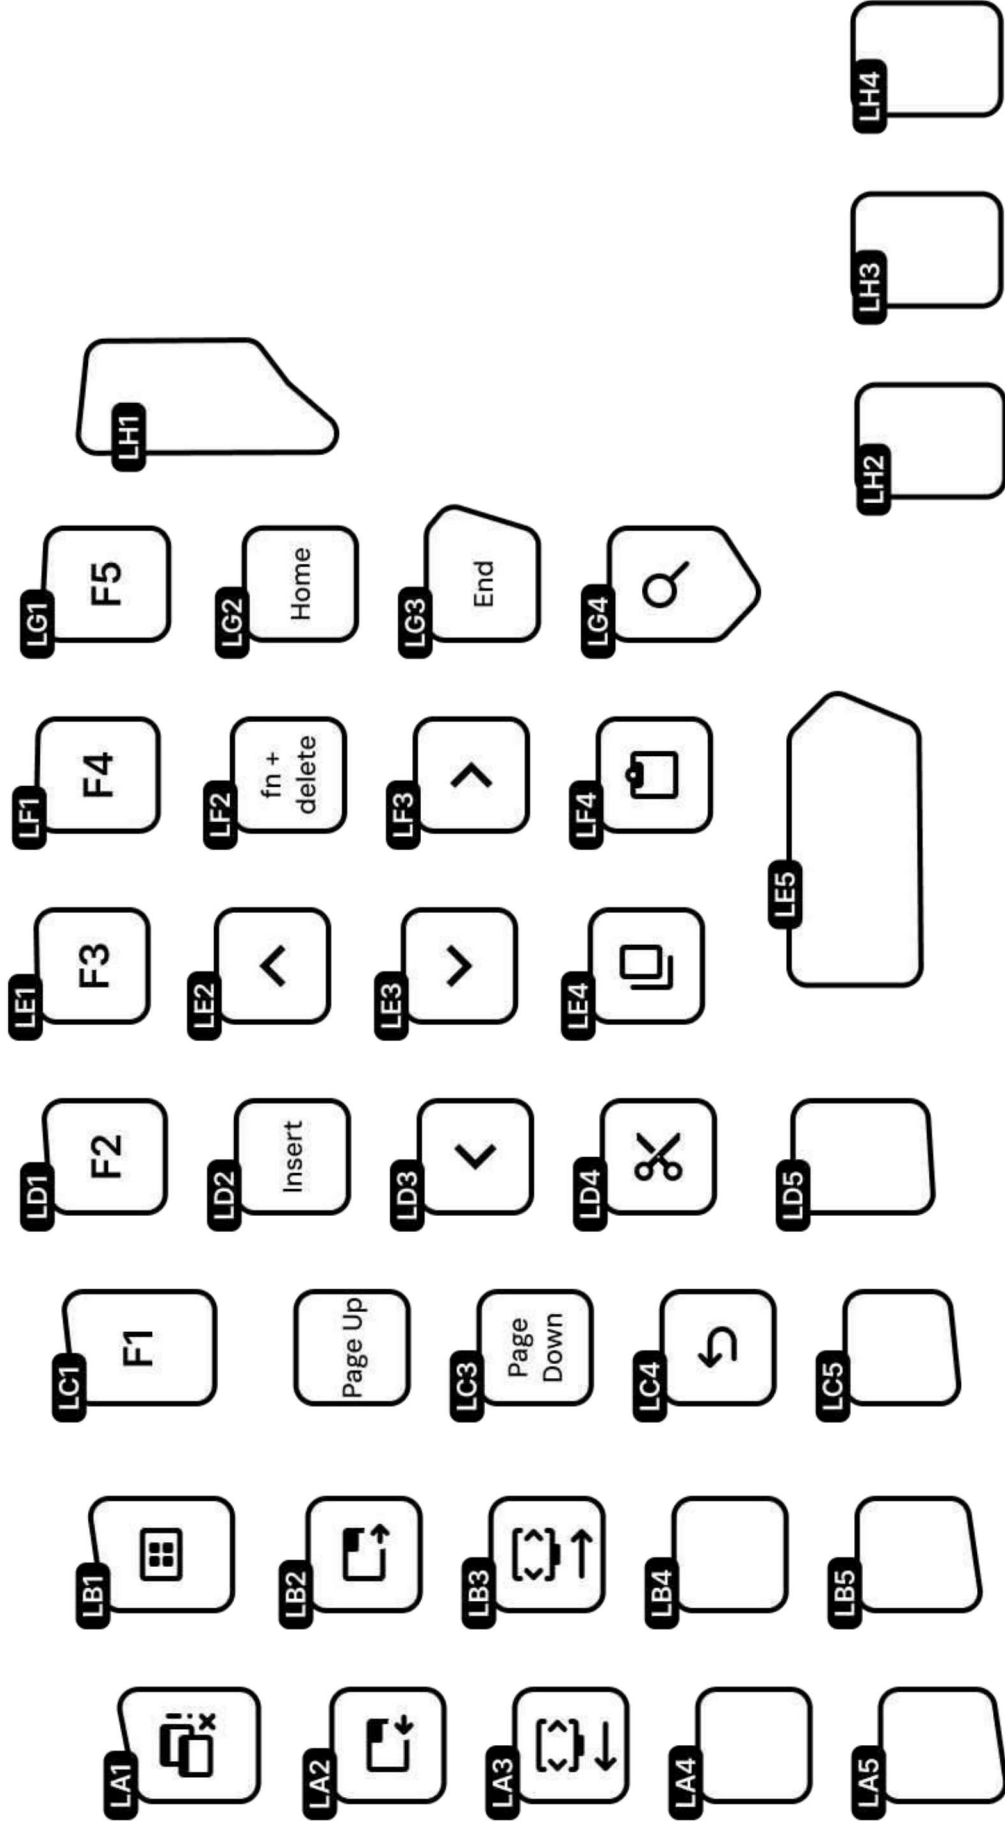

Naya Default MacOS - Layer 2 (System

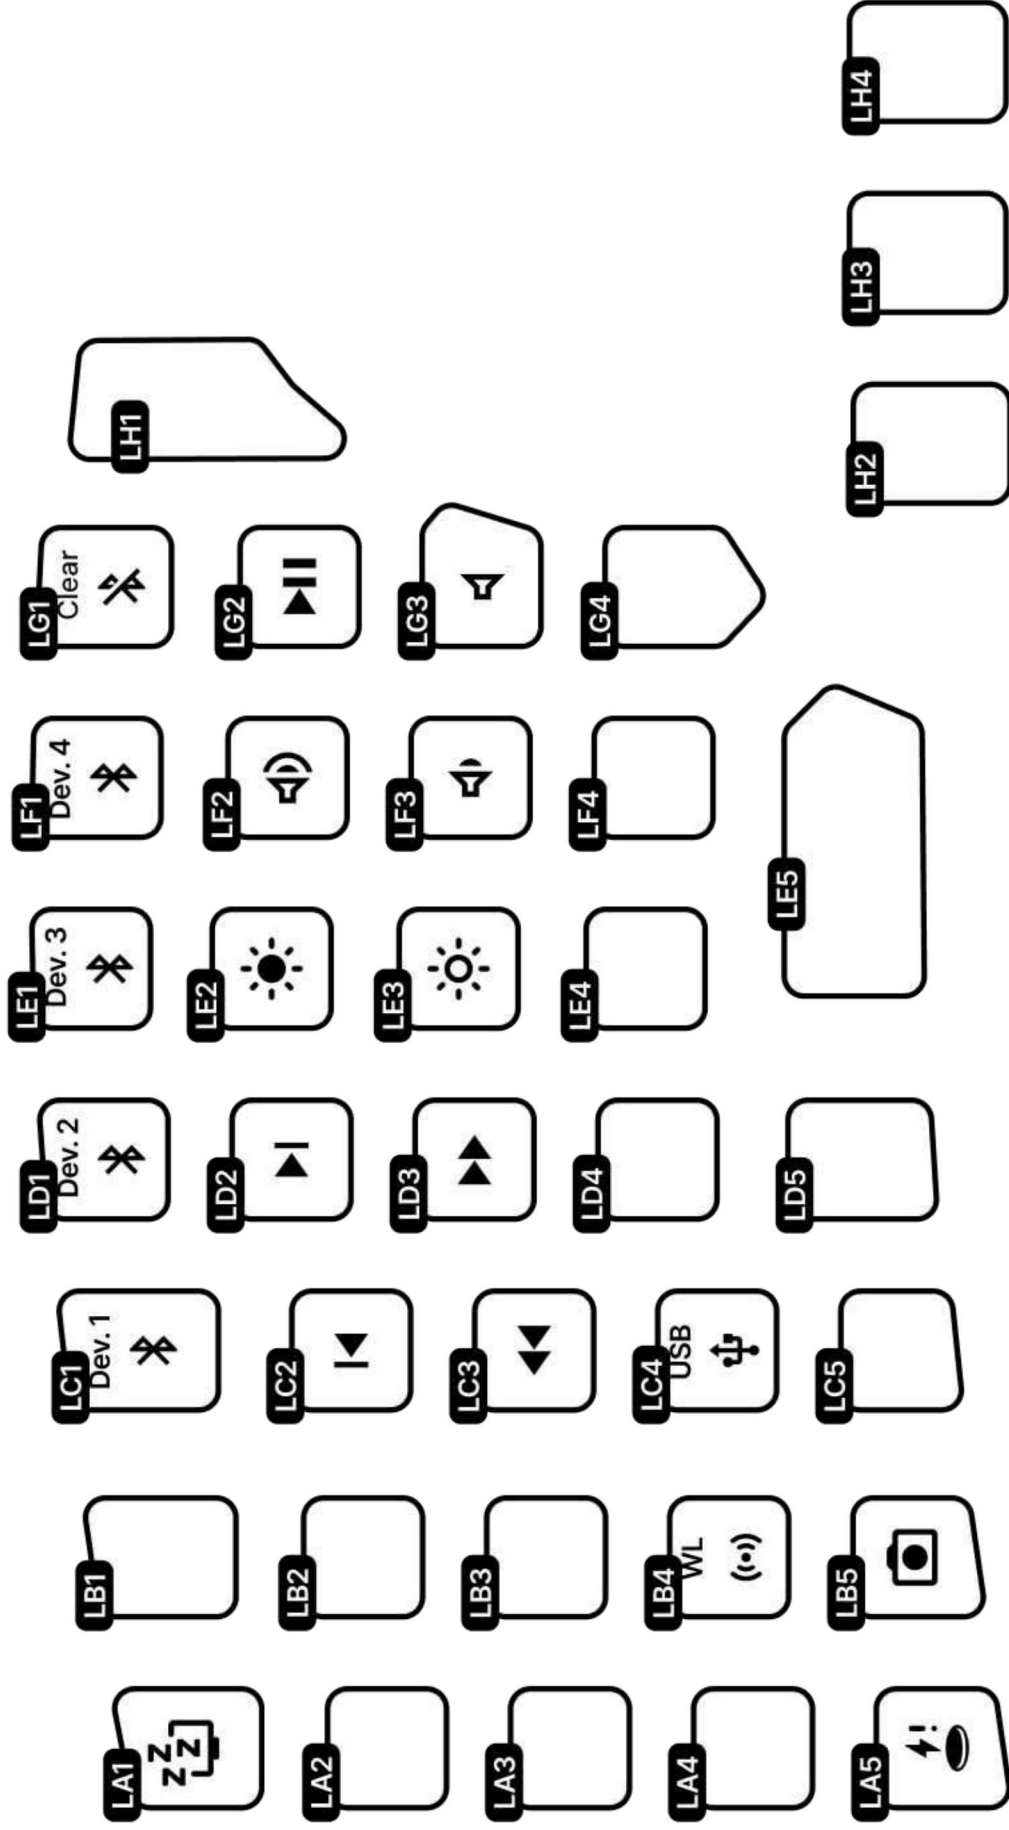

Customising your Keybindings with Naya Flow.

Download

In order to customize your Naya Create download the customization software Naya Flow from naya.tech/getstarted.

Reprogram

- Key bindings
- Module bindings
- Naya Pulse (Tune Haptic Feedback)

Development on Naya Flow will continue to provide you with more and better tools as we continue to improve the software.

Additional Information

Troubleshooting

My keyboard won't power ON.

- Ensure that the power switch is in the ON position.
- If connected via USB: Ensure that the cable is compatible and properly connected. Ensure that long end of the Y-cable is plugged into a USB 3.0 port.
- If connected via wireless: Ensure that modules are properly connected and charged.

My layers won't activate properly

Safety & Care

- Contains small parts which may be a choking hazard. Not suitable for children under age five.
- Do not twist or stretch the keyboard against the direction of the hinges.
- Do not force the hinges past their range of motion.
- Clean only by gently wiping with a dry microfiber cloth.
- Do not clean pogo pin connections using liquids or abrasive materials.
- Do not put heavy objects on top of the keyboard.
- Do not spill liquids on the keyboard.
- Keep away from sharp objects, fire, water, and high voltage equipment.
- Do not sit on, drop, crush, puncture, shred the keyboard, cool below 0°C (32°F) or heat above 60°C (140°C).
- Do not short-circuit the pogo pins, included battery, or its cells.
- In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes.

Warranty Policy

Our products come with a one-year warranty term and a commitment to assist with parts and repairs well beyond that. For any questions just reach out at support@naya.tech.

Our quality commitment

We design our products to be reliable, durable, and a joy to use. We use best-in-class materials to manufacture our products and designed nearly all parts to be replaceable. This doesn't just reduce e-waste, but also means we seek to support you with spare parts beyond the warranty term.

What's Covered?

For one (1) year from the date of delivery, we warrant that your Naya device will be free from defects in materials and workmanship under normal use. If local regulations mandate a longer warranty term, we will match it. For example, in Europe a two (2) year warranty period is mandated from the date of delivery. If an issue arises due to a defect in manufacturing or materials, we will repair or replace the product as we deem necessary. This warranty is non-transferable and applies only to the original end-purchaser of the product.