




# User Manual

Version 1.1.0

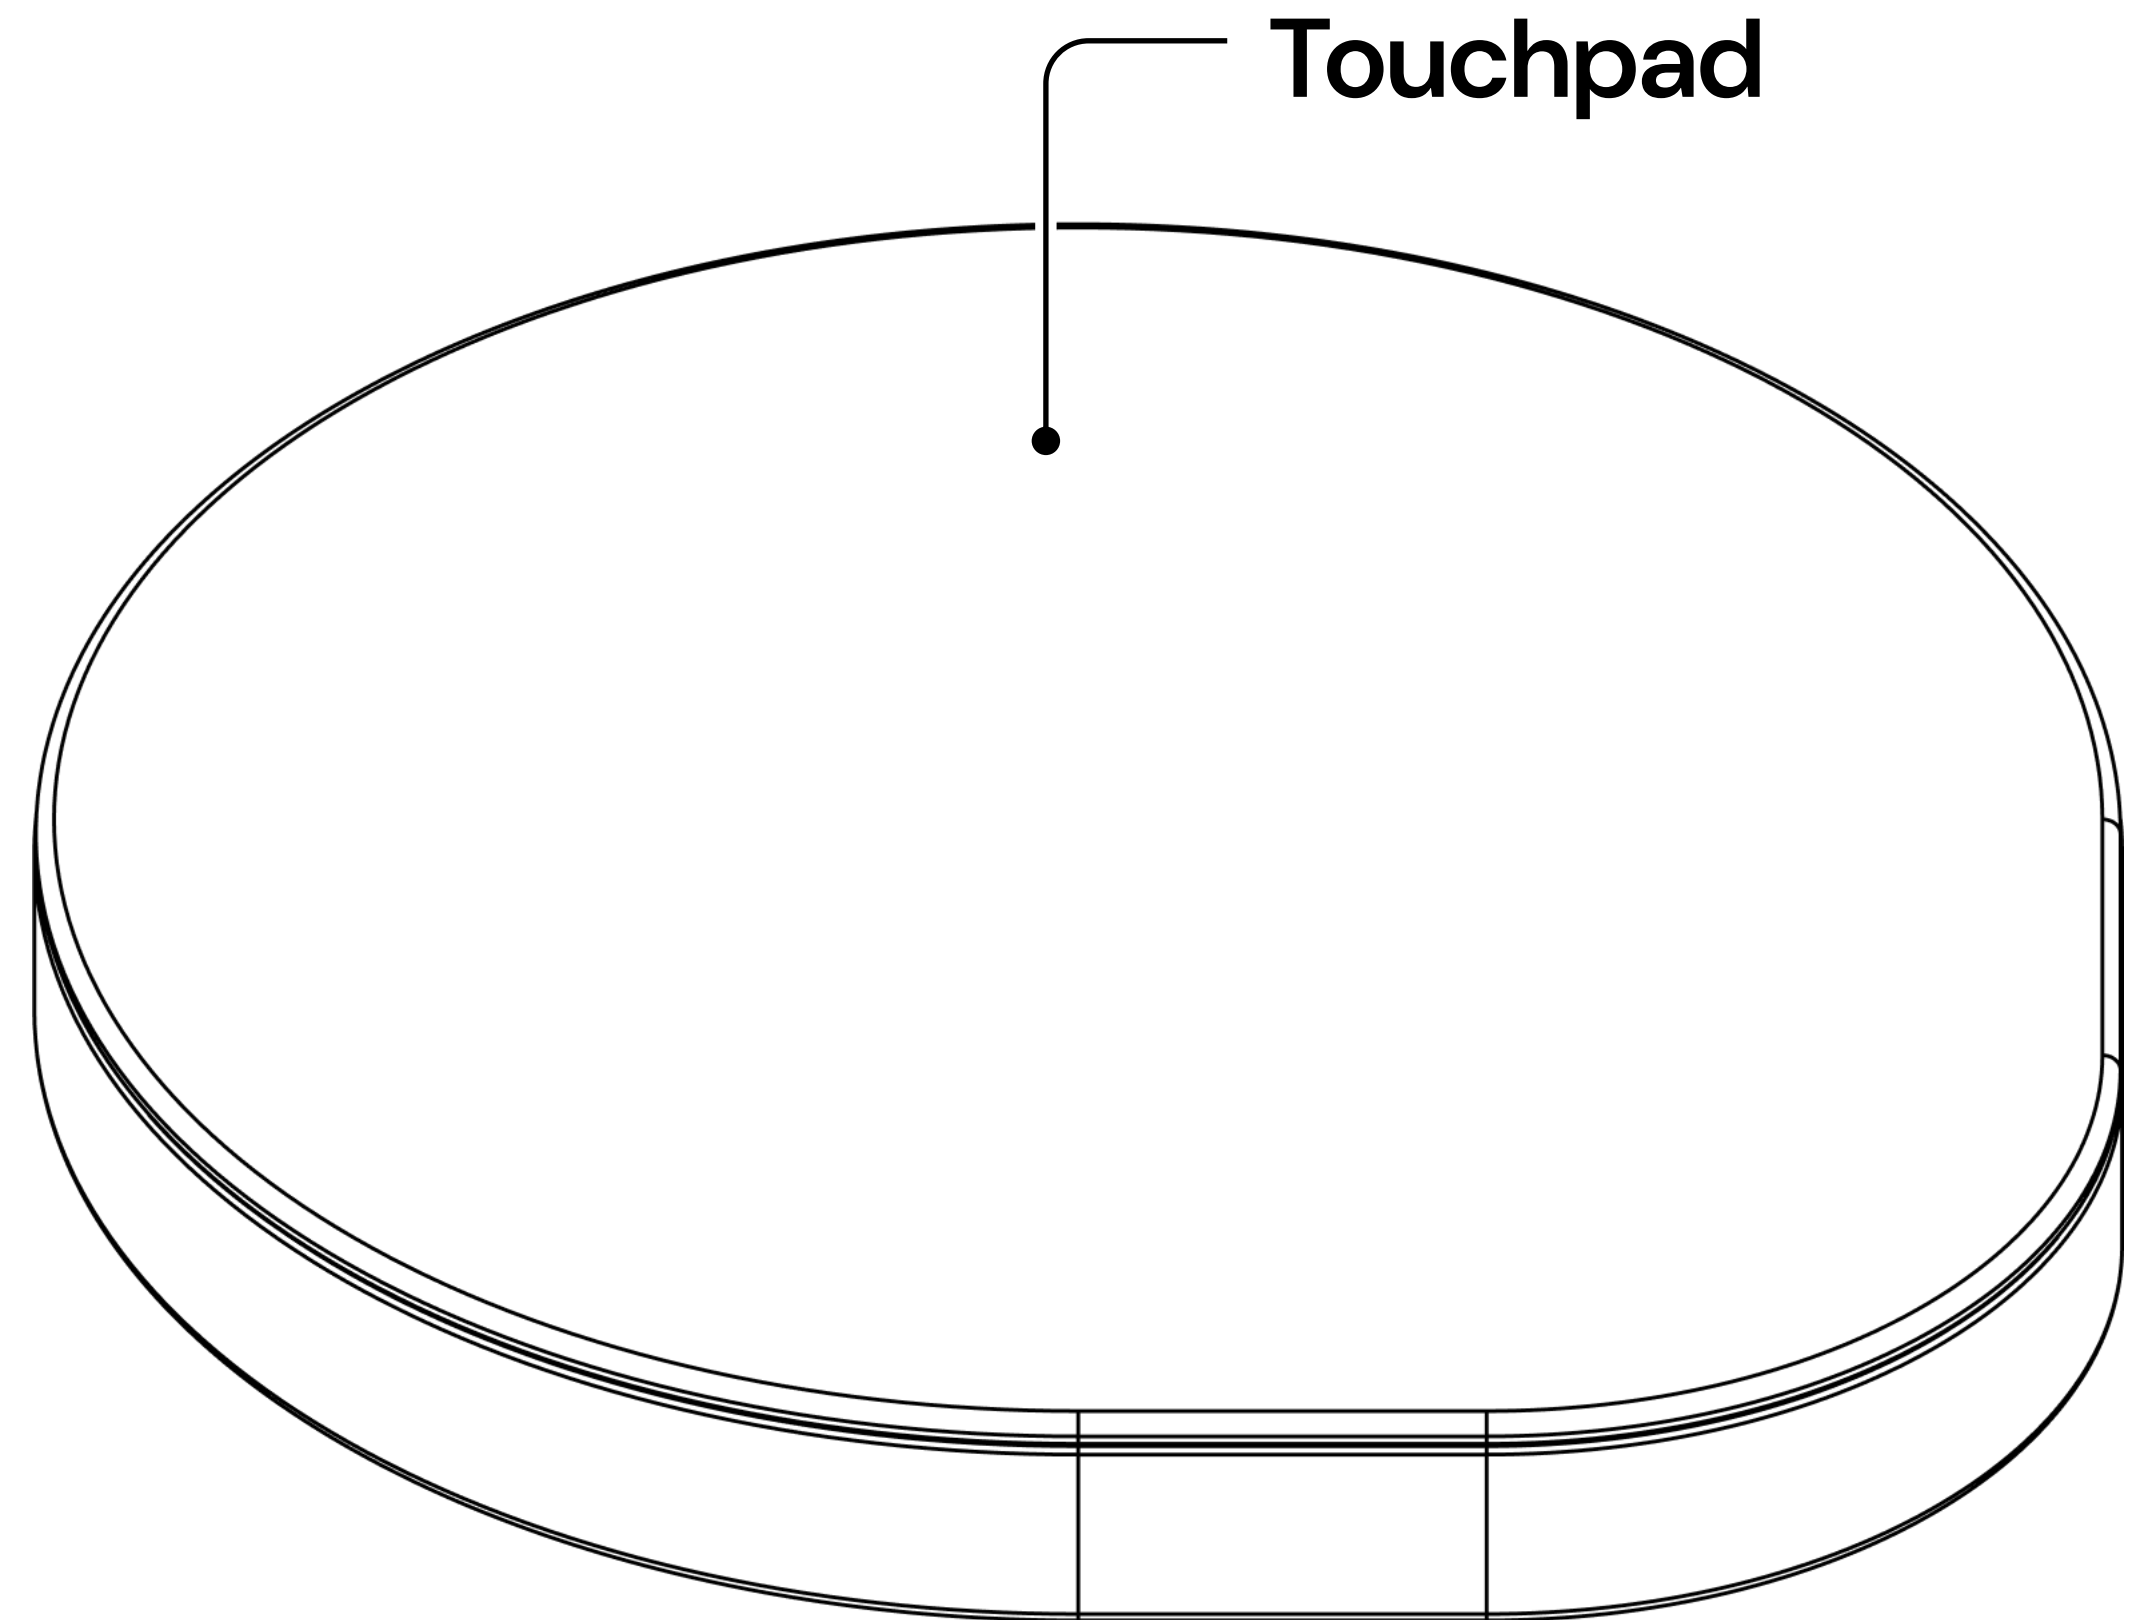

All rights reserved. Naya B.V.


Wasaweg 3, 9723JD Groningen, Netherlands

# Product Information

Naya Touch is a programmable touchpad module accessory for Naya Create.

## Whats in The Box?

- 1x Naya Touch

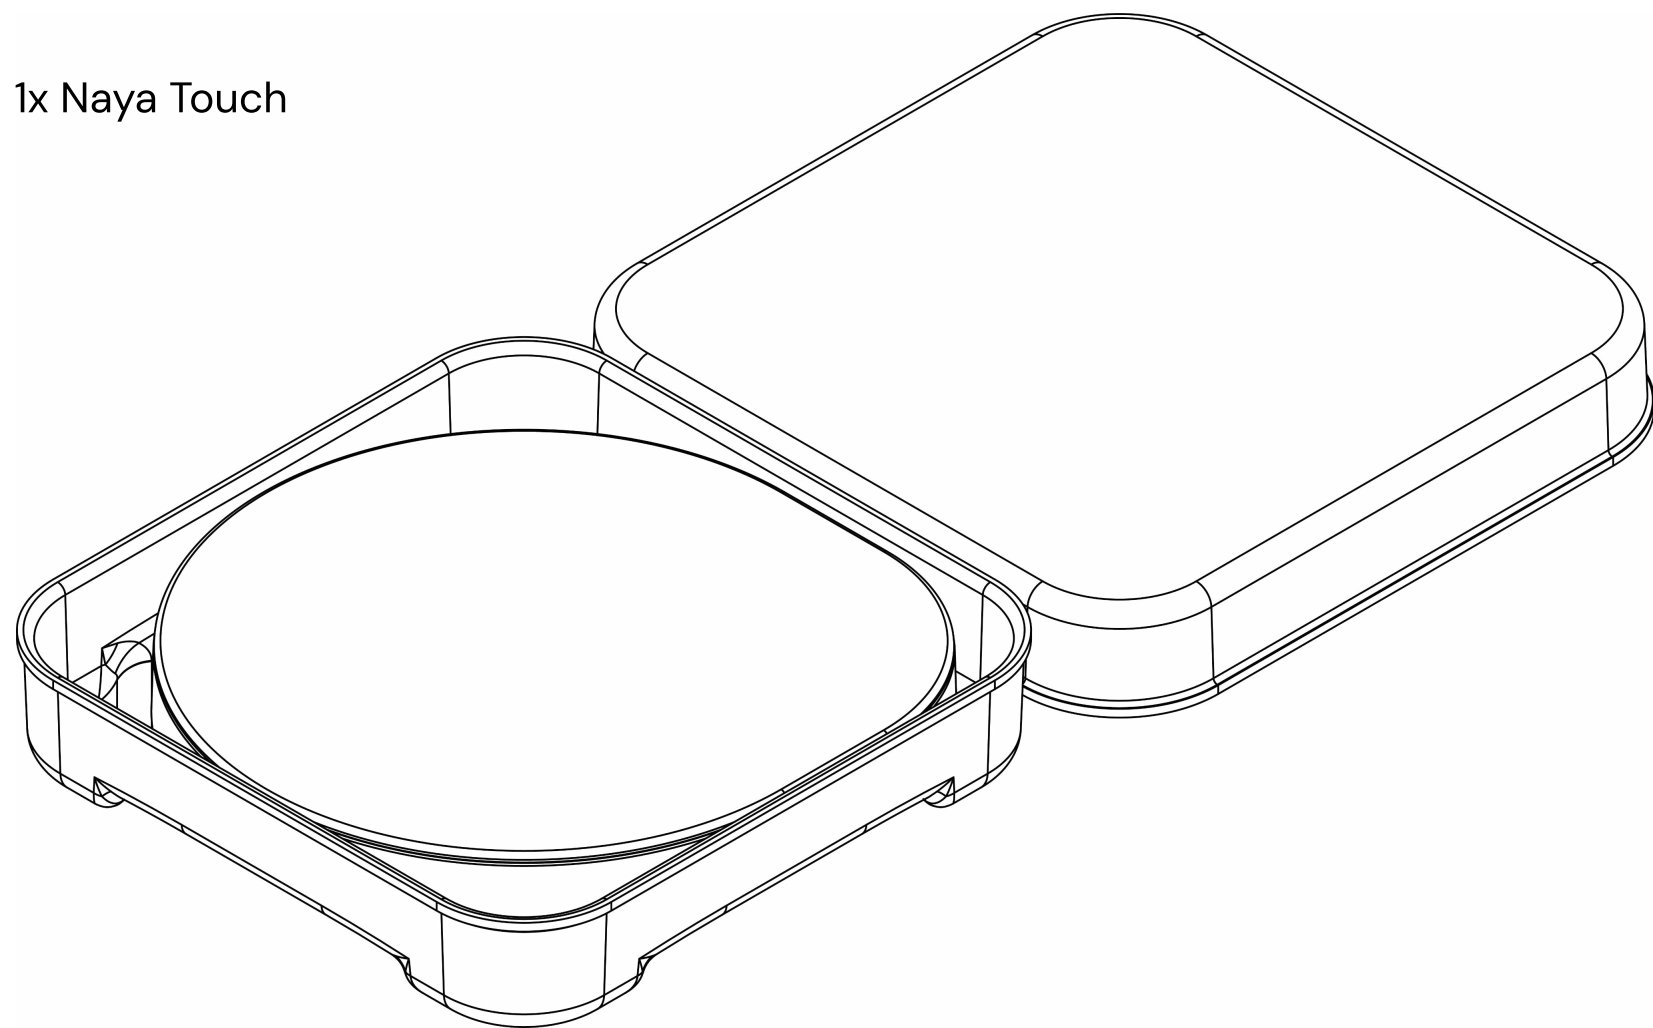

**⚠ Note: Naya Touch is NOT a standalone product and requires a Naya Create to be utilized!**

## Features

- Programmable Touchpad
- Multi-Finger Gesture Support

## Compatibility

- Requires Naya Create to operate.

## Spec Sheet


|                         |                   |                                    |
|-------------------------|-------------------|------------------------------------|
| Battery                 | Capacity          | 1500mAh                            |
|                         | Type              | Lithium Ion                        |
|                         | Wired Charging    | Pogo Pin Connection to Naya Create |
|                         | Wireless Charging | Compatible                         |
| Physical Specifications | Dimensions        | 75 × 69 × 12 mm                    |
| Material                | Gesturepad        | Fine-Grained Matte Glass           |
|                         | Body              | Polycarbonate                      |
| Status Light            | LED               | RGB                                |

# Handling Touch

**!** In order to operate your Naya Touch it must be properly docked into your Naya Create.


## **●** Docking Touch

1. Align pogo pins – To dock Touch to your Naya Create keyboard, align the pogo pins of the module and keyboard.
2. Insert the module – Gently insert the module. The magnets in the dock and on the bottom of the module will attract and hold it in place.
3. Ensure proper seating – Make sure the module is seated completely flat. This ensures a proper connection with the pogo pins for full functionality.

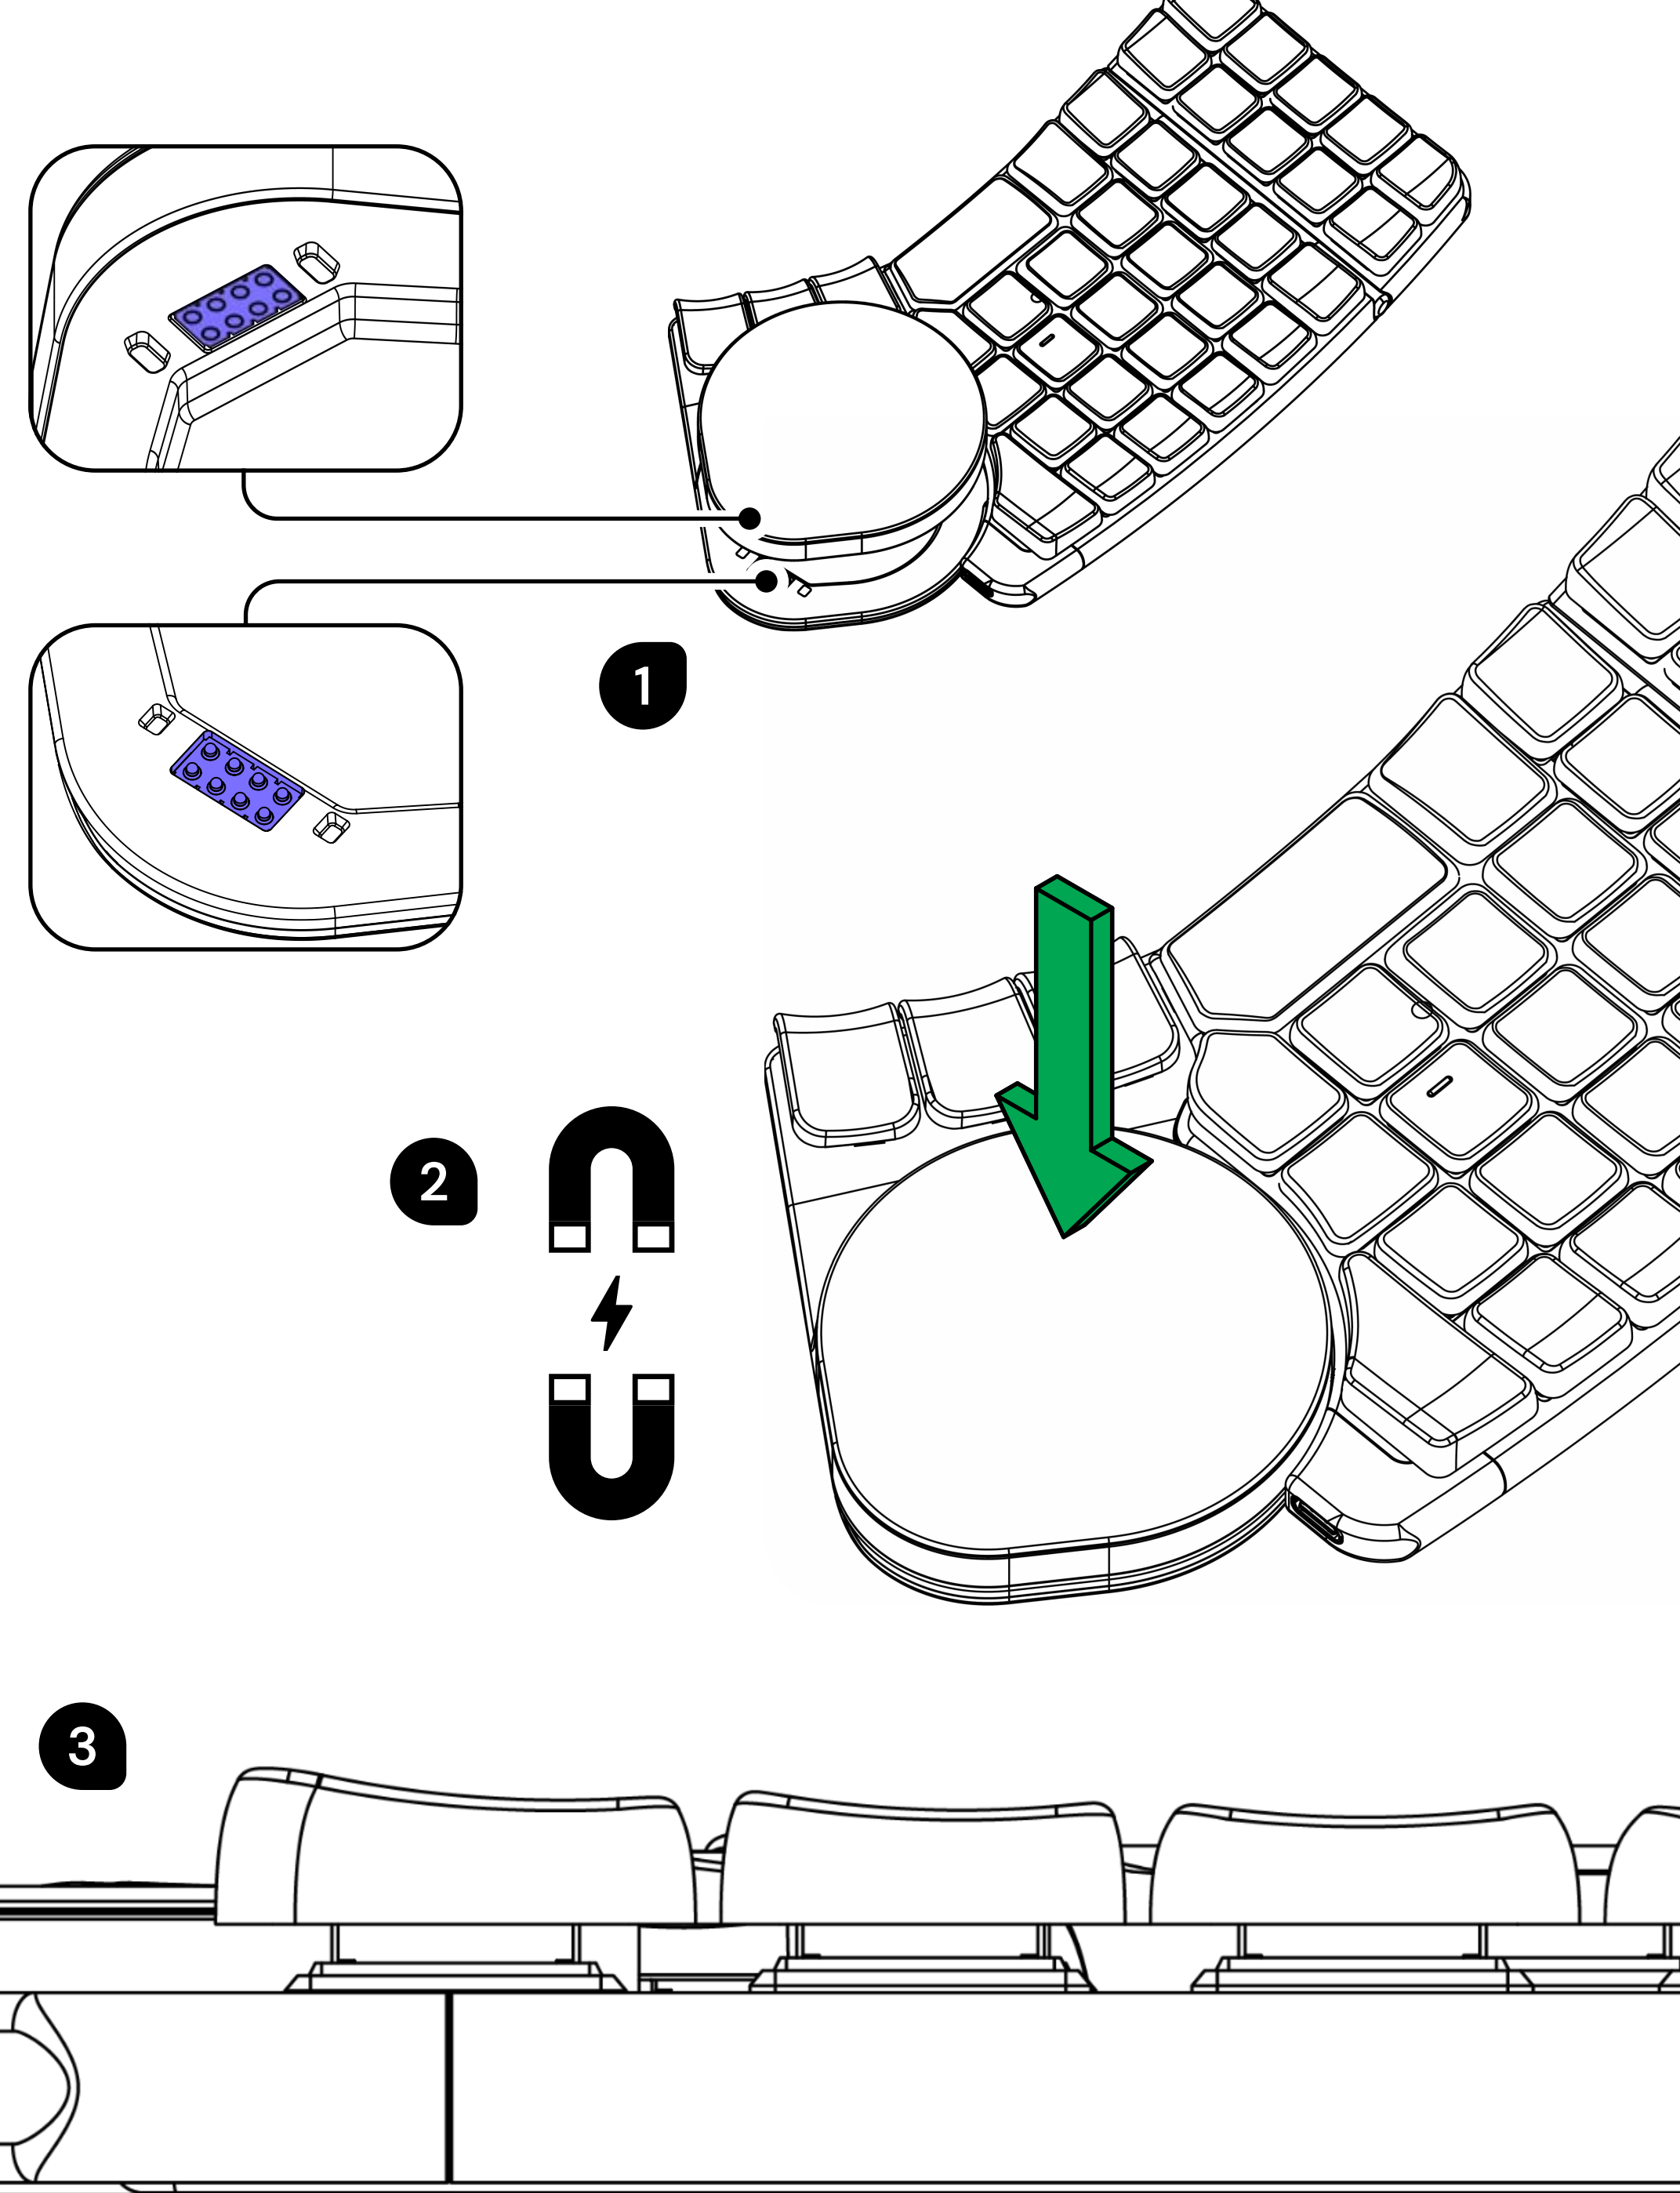


## Detaching Touch


1. Hold Create – Hold the keyboard aloft, or rest it tented on a flat surface for stability.
2. Grasp the module – Grasp the top of the module, placing one or more fingers underneath the module through the module dock cutout, and gently press upward.
3. Detach Touch – The module will separate from the magnetic link with the module dock.
4. Store Touch – Place in a safe location to prevent accidental damage.

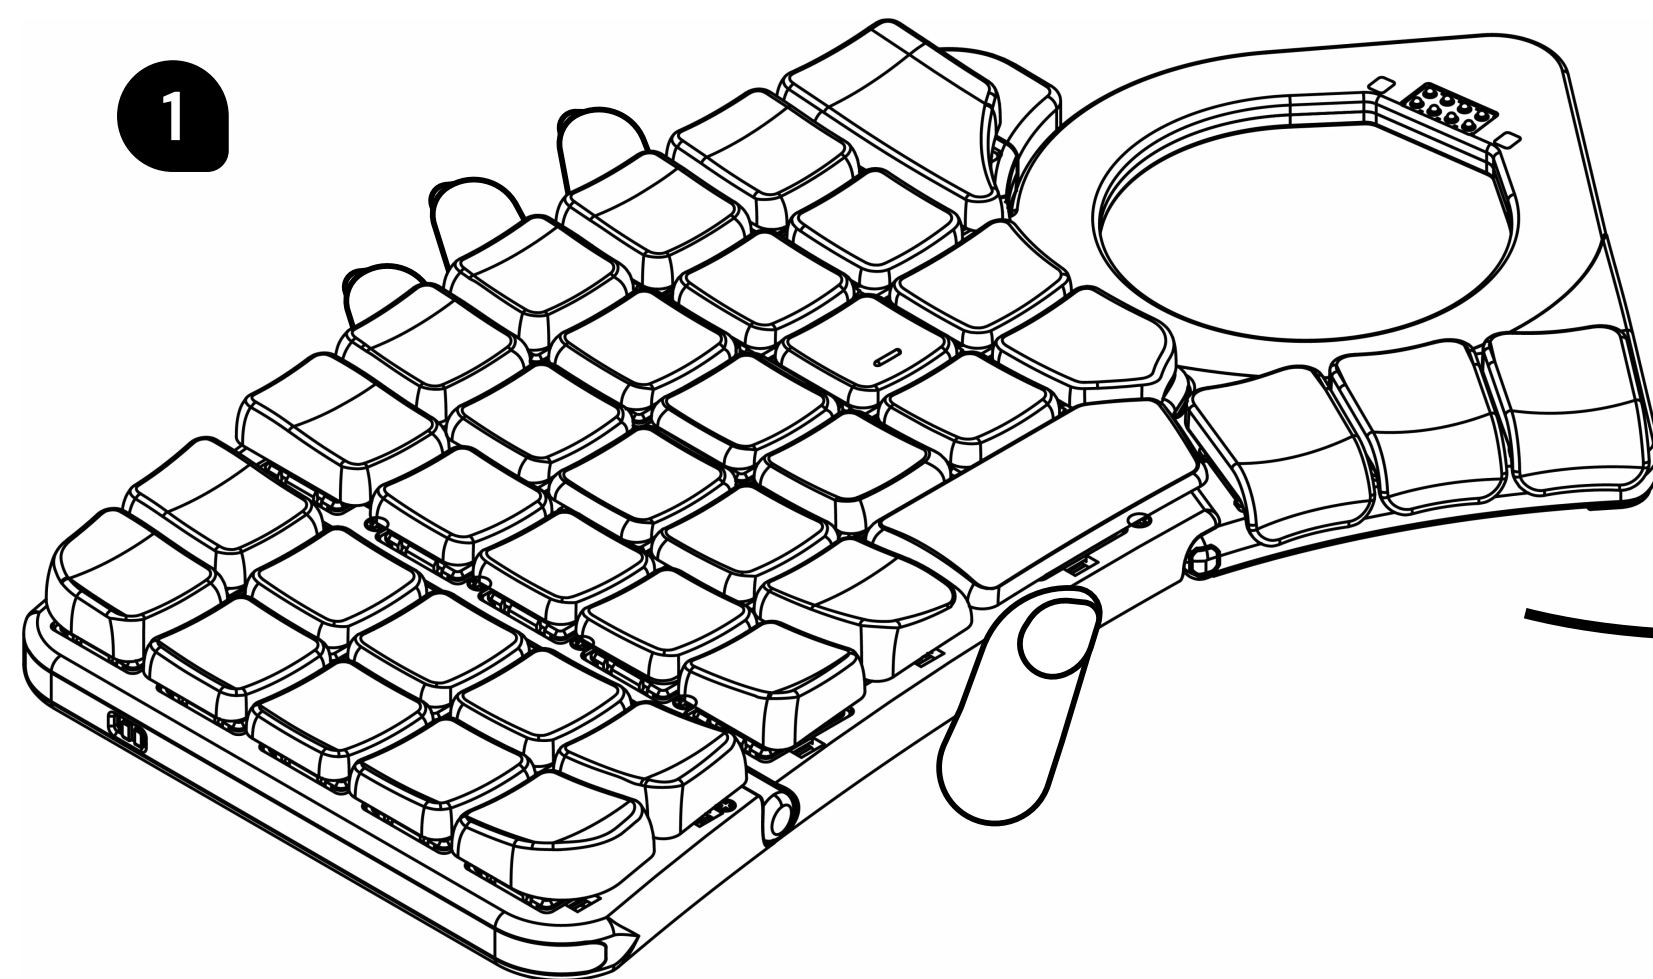

2

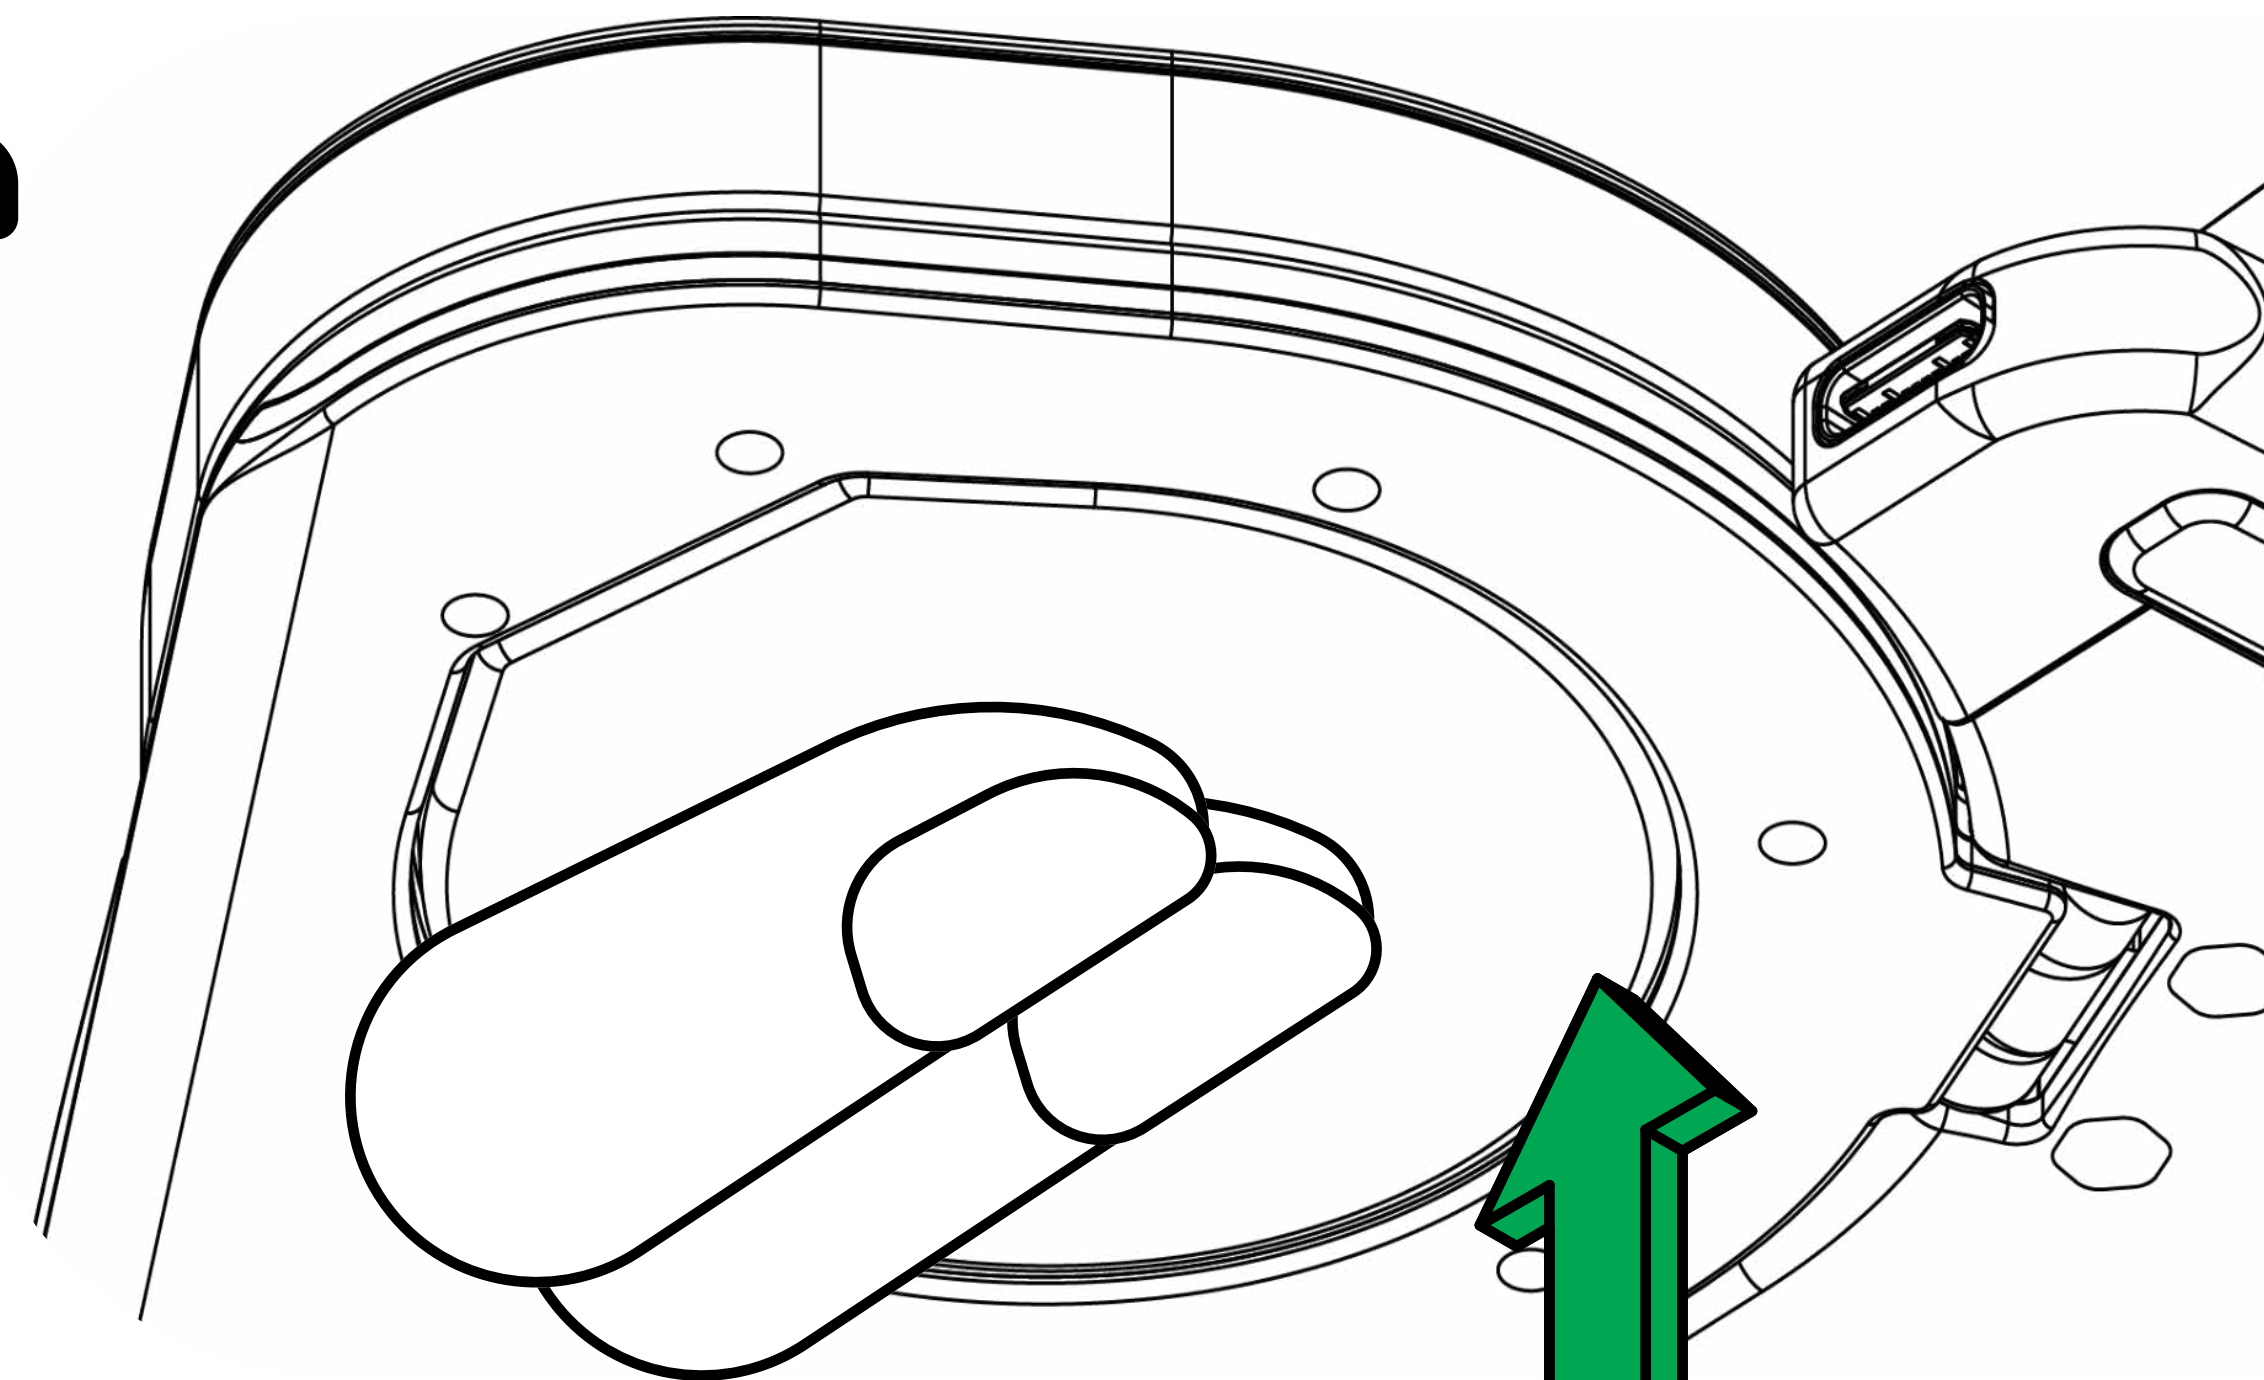

3

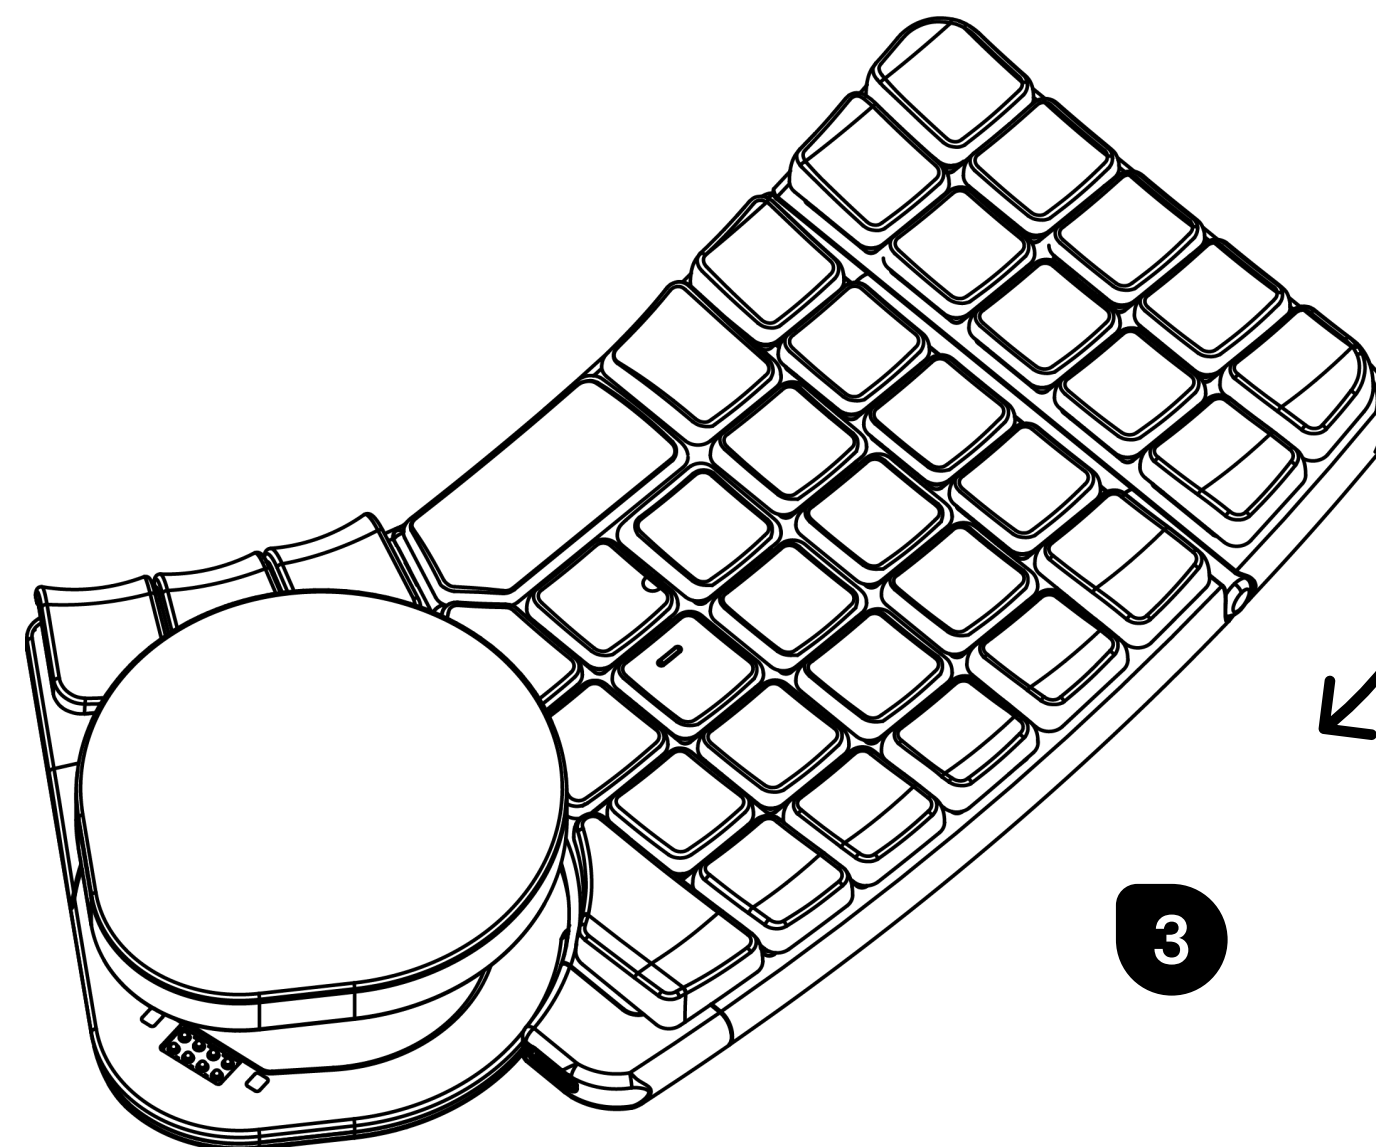

# Power


Do NOT connect Naya Create directly to a wall outlet. Charge your device by connecting the provided USB cable to a computer (USB 3.0 5V-1A).

## Charging over USB

- 1. Dock Touch into a Naya Create that is connected to a computer over USB.
- 2. The indicator LED will begin to periodically blink orange or green. If the indicator is red there is an issue with the charging device.
- 3. Once Touch is fully charged the indicator LED will periodically light up solid green.

## Charging wirelessly

- 1. Setup your Wireless Charger according to the instructions shared by its provider.
- 2. Connect the base of Touch to the indicated charging pad.
- 3. The indicator LED will begin to periodically blink orange or green. If the indicator is red there is an issue with the charging device.
- 4. Once Touch is fully charged the indicator LED will periodically light up solid green.

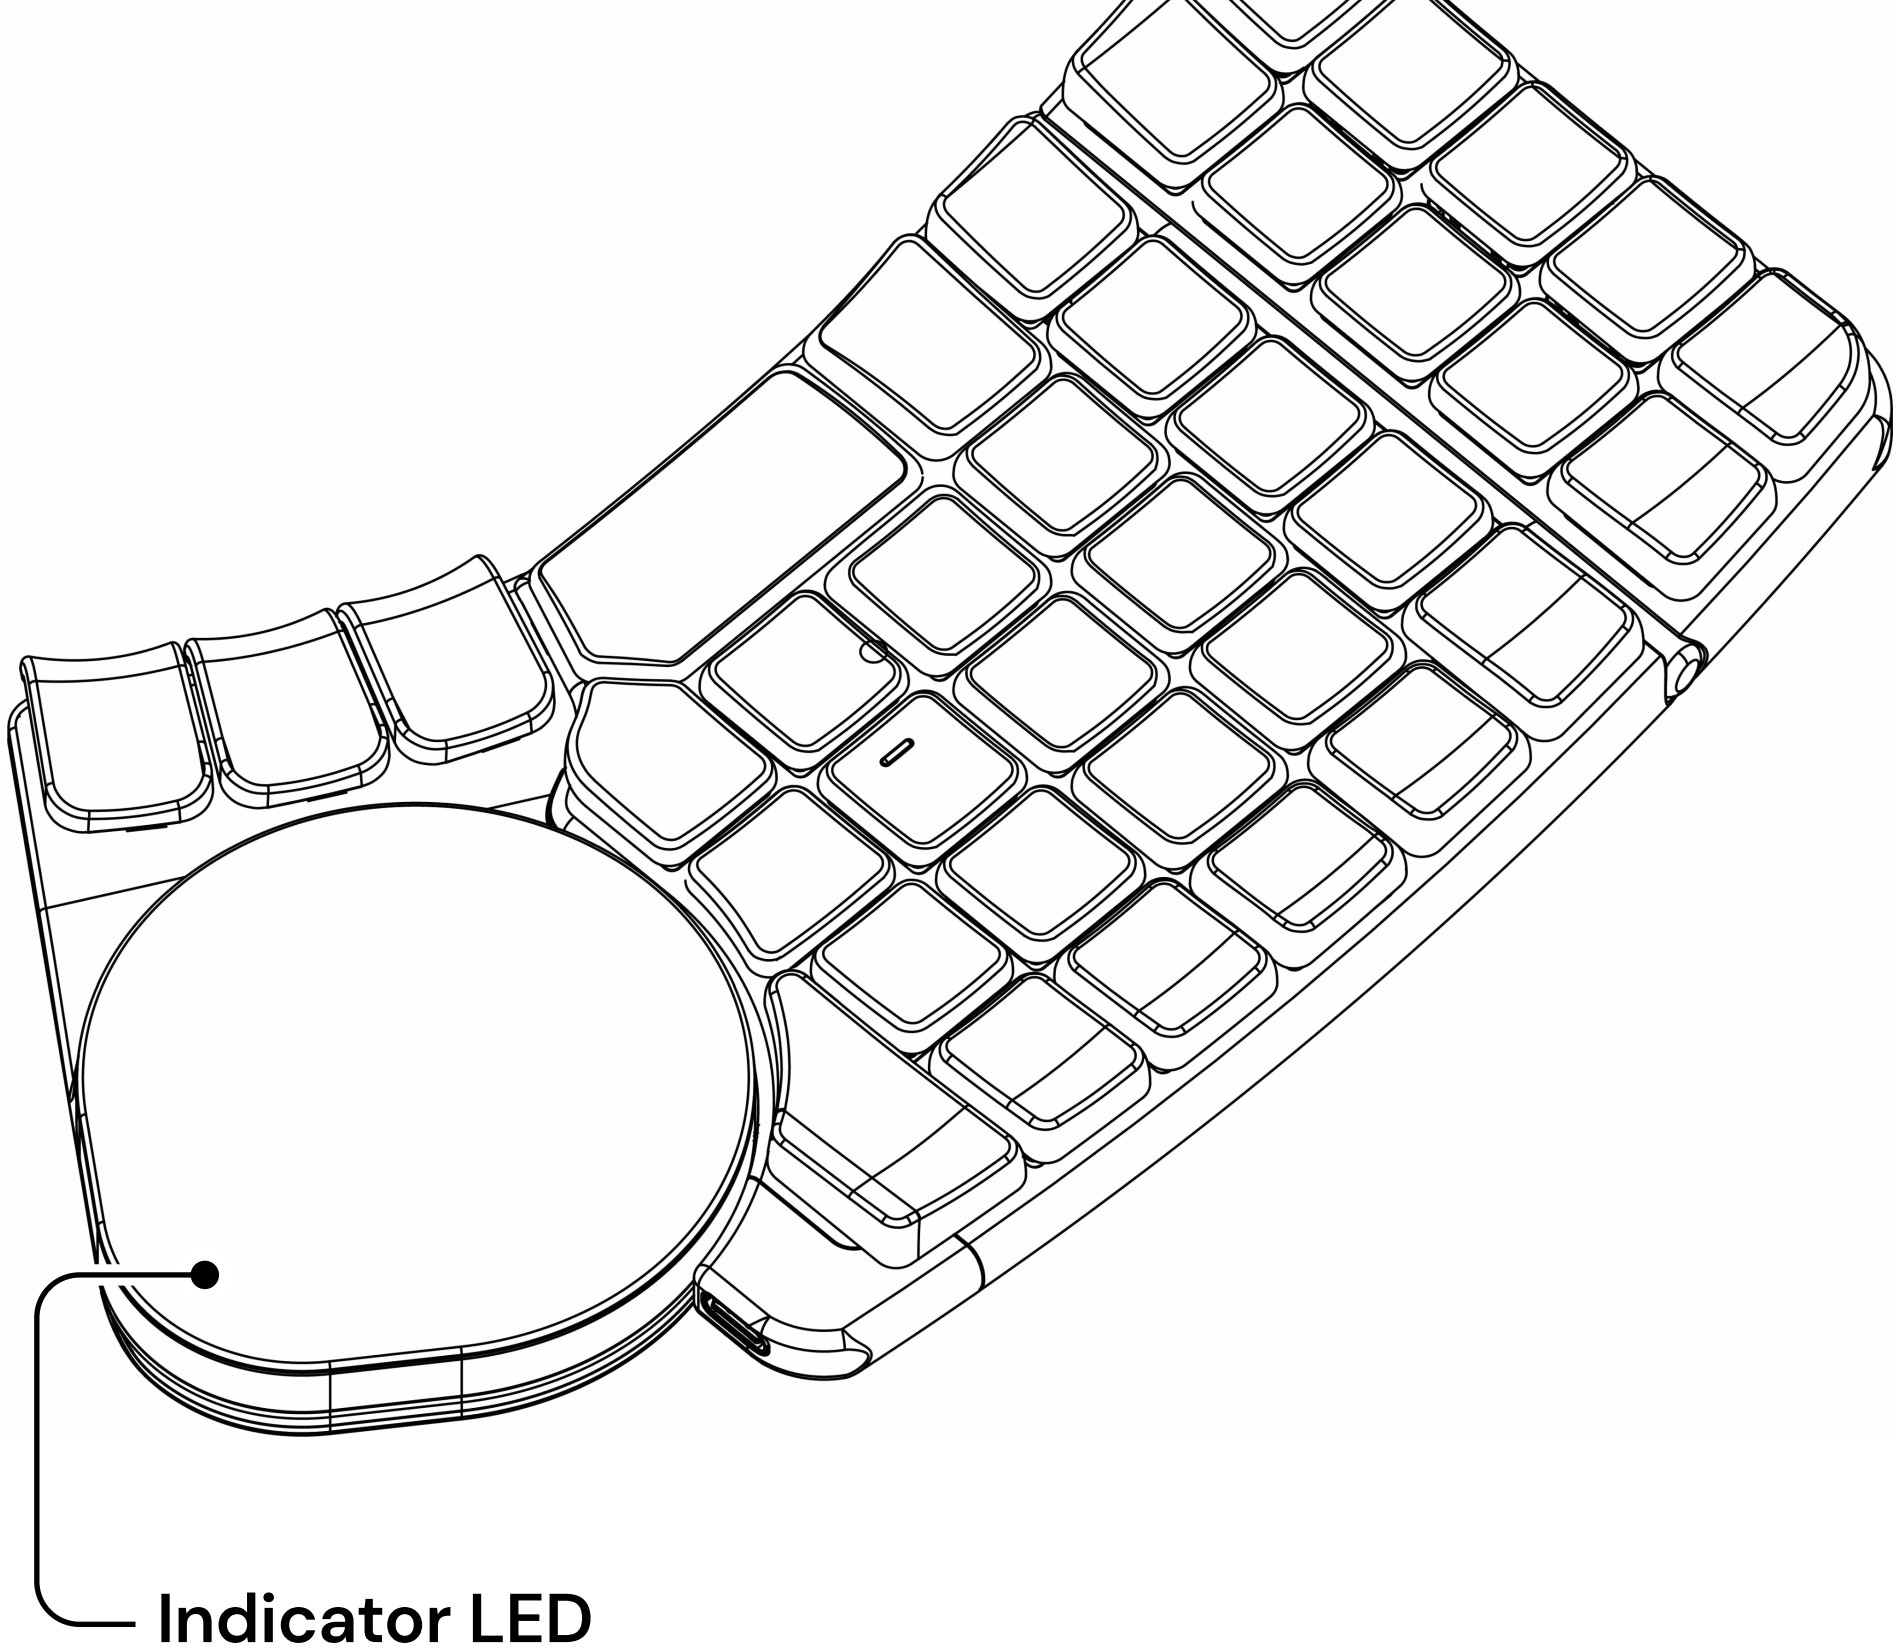

| LED                         | Status                                       |
|-----------------------------|----------------------------------------------|
| Blinking Red ●              | Battery low.                                 |
| Solid Red ●                 | There is a problem with the charging device. |
| Blinking Orange ●           | Battery charging.                            |
| Blinking Green ●            | Battery charging, close to full.             |
| Solid Green ●               | Battery fully charged.                       |
| Blinking White ●            | Connecting to keyboard.                      |
| Solid White for 2 seconds ● | Connected to keyboard and ready to be used.  |

# Using Touch (Win)

The behavior of your Naya Touch is dependent on the layout stored on your Naya Create. The behavior of Naya Touch on the default layout is defined as follows:

## One Finger

|              |                  |
|--------------|------------------|
| Tap          | = Left Click     |
| Tap and Drag | = Drag           |
| Drag         | = Cursor Control |

## Two Finger

|                 |                     |
|-----------------|---------------------|
| Tap             | = Right Click       |
| Vertical Drag   | = Vertical Scroll   |
| Horizontal Drag | = Horizontal Scroll |

## Three Finger

|              |                        |
|--------------|------------------------|
| Tap          | = Middle Mouse Click   |
| Left / Right | = Previous/Next Tab    |
| Up / Down    | = Previous/Next Window |

## Four Finger


|              |                              |
|--------------|------------------------------|
| Tap          | = Play/Pause                 |
| Left / Right | = Left/Right Virtual Desktop |
| Up / Down    | = Up/Down Screen             |



Gestures currently make use of shortcuts so that they do not require drivers. This has a side effect that if you have set certain modifier keys to trigger effects gestures might trigger those effects. This is temporary.



Some units may not have the latest configurations loaded, please update using Naya Flow if you notice a discrepancy!

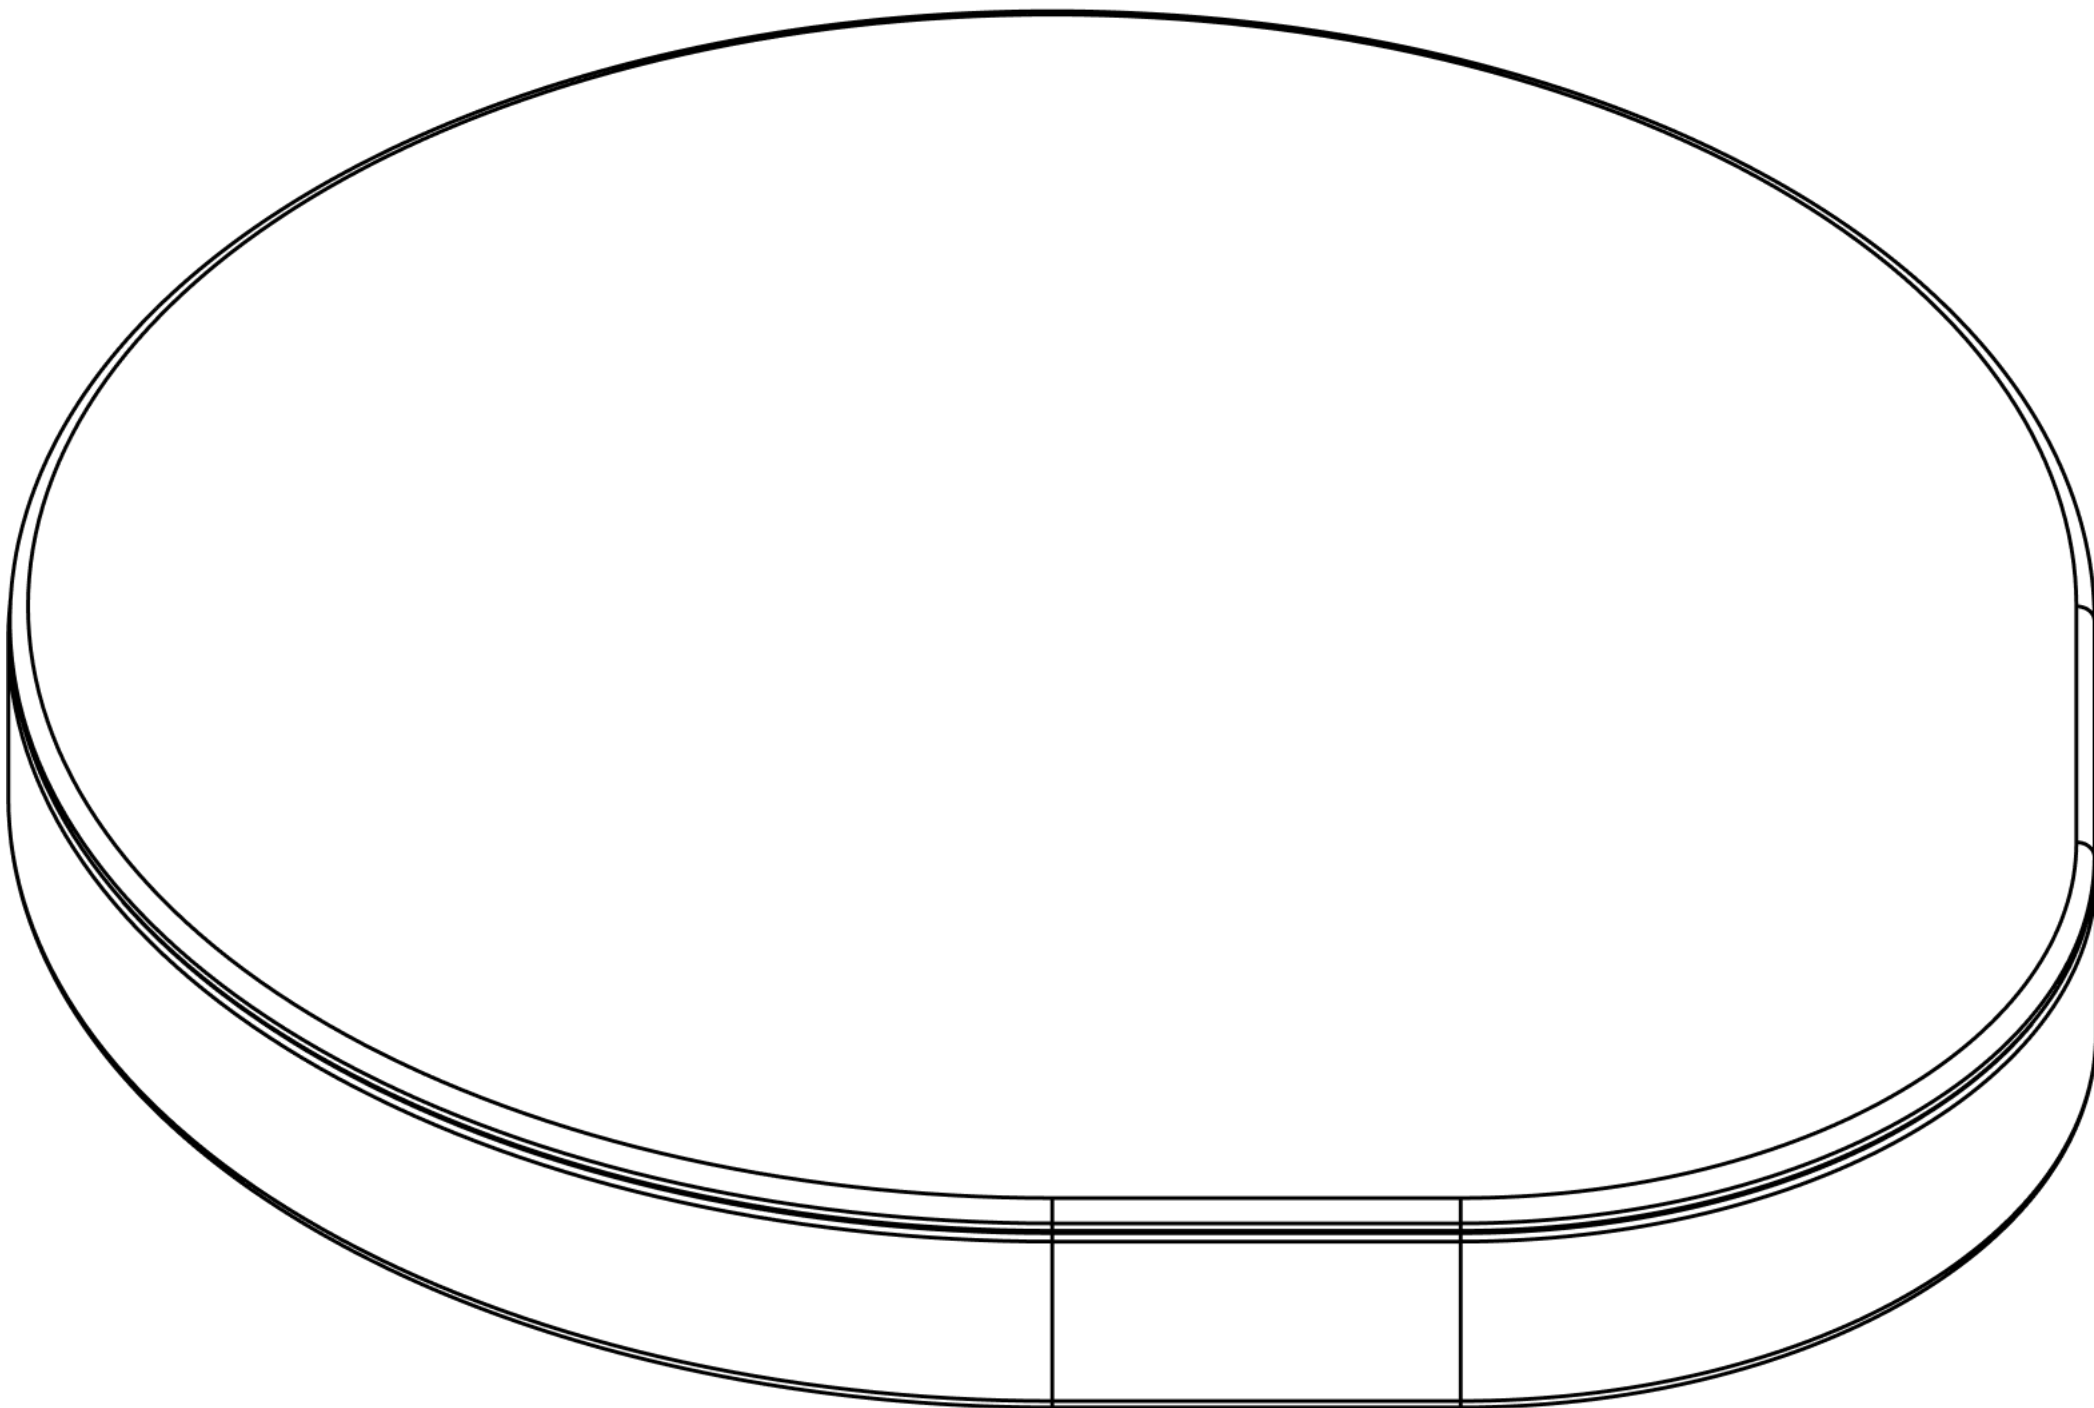

# Using Touch (MacOS)

The behavior of your Naya Touch is dependent on the layout stored on your Naya Create. The behavior of Naya Touch on the MacOS layout accessible via Naya Flow is as follows:

## One Finger

- Tap = Left Click
- Tap and Drag = Drag
- Drag = Cursor Control

## Two Finger

- Tap = Right Click
- Vertical Drag = Vertical Scroll
- Horizontal Drag = Horizontal Scroll

## Three Finger


- Tap = Middle Mouse Click
- Left / Right = Previous/Next Tab
- Up / Down = Previous/Next Window

## Four Finger

- Tap = Play/Pause
- Left / Right = Previous/Next Screen
- Up = Mission Control
- Down = App Exposé

 Gestures currently make use of shortcuts so that they do not require drivers. This has a side effect that if you have set certain modifier keys to trigger effects gestures might trigger those effects. This is temporary.

 Some units may not have the latest configurations loaded, please update using Naya Flow if you notice a discrepancy!

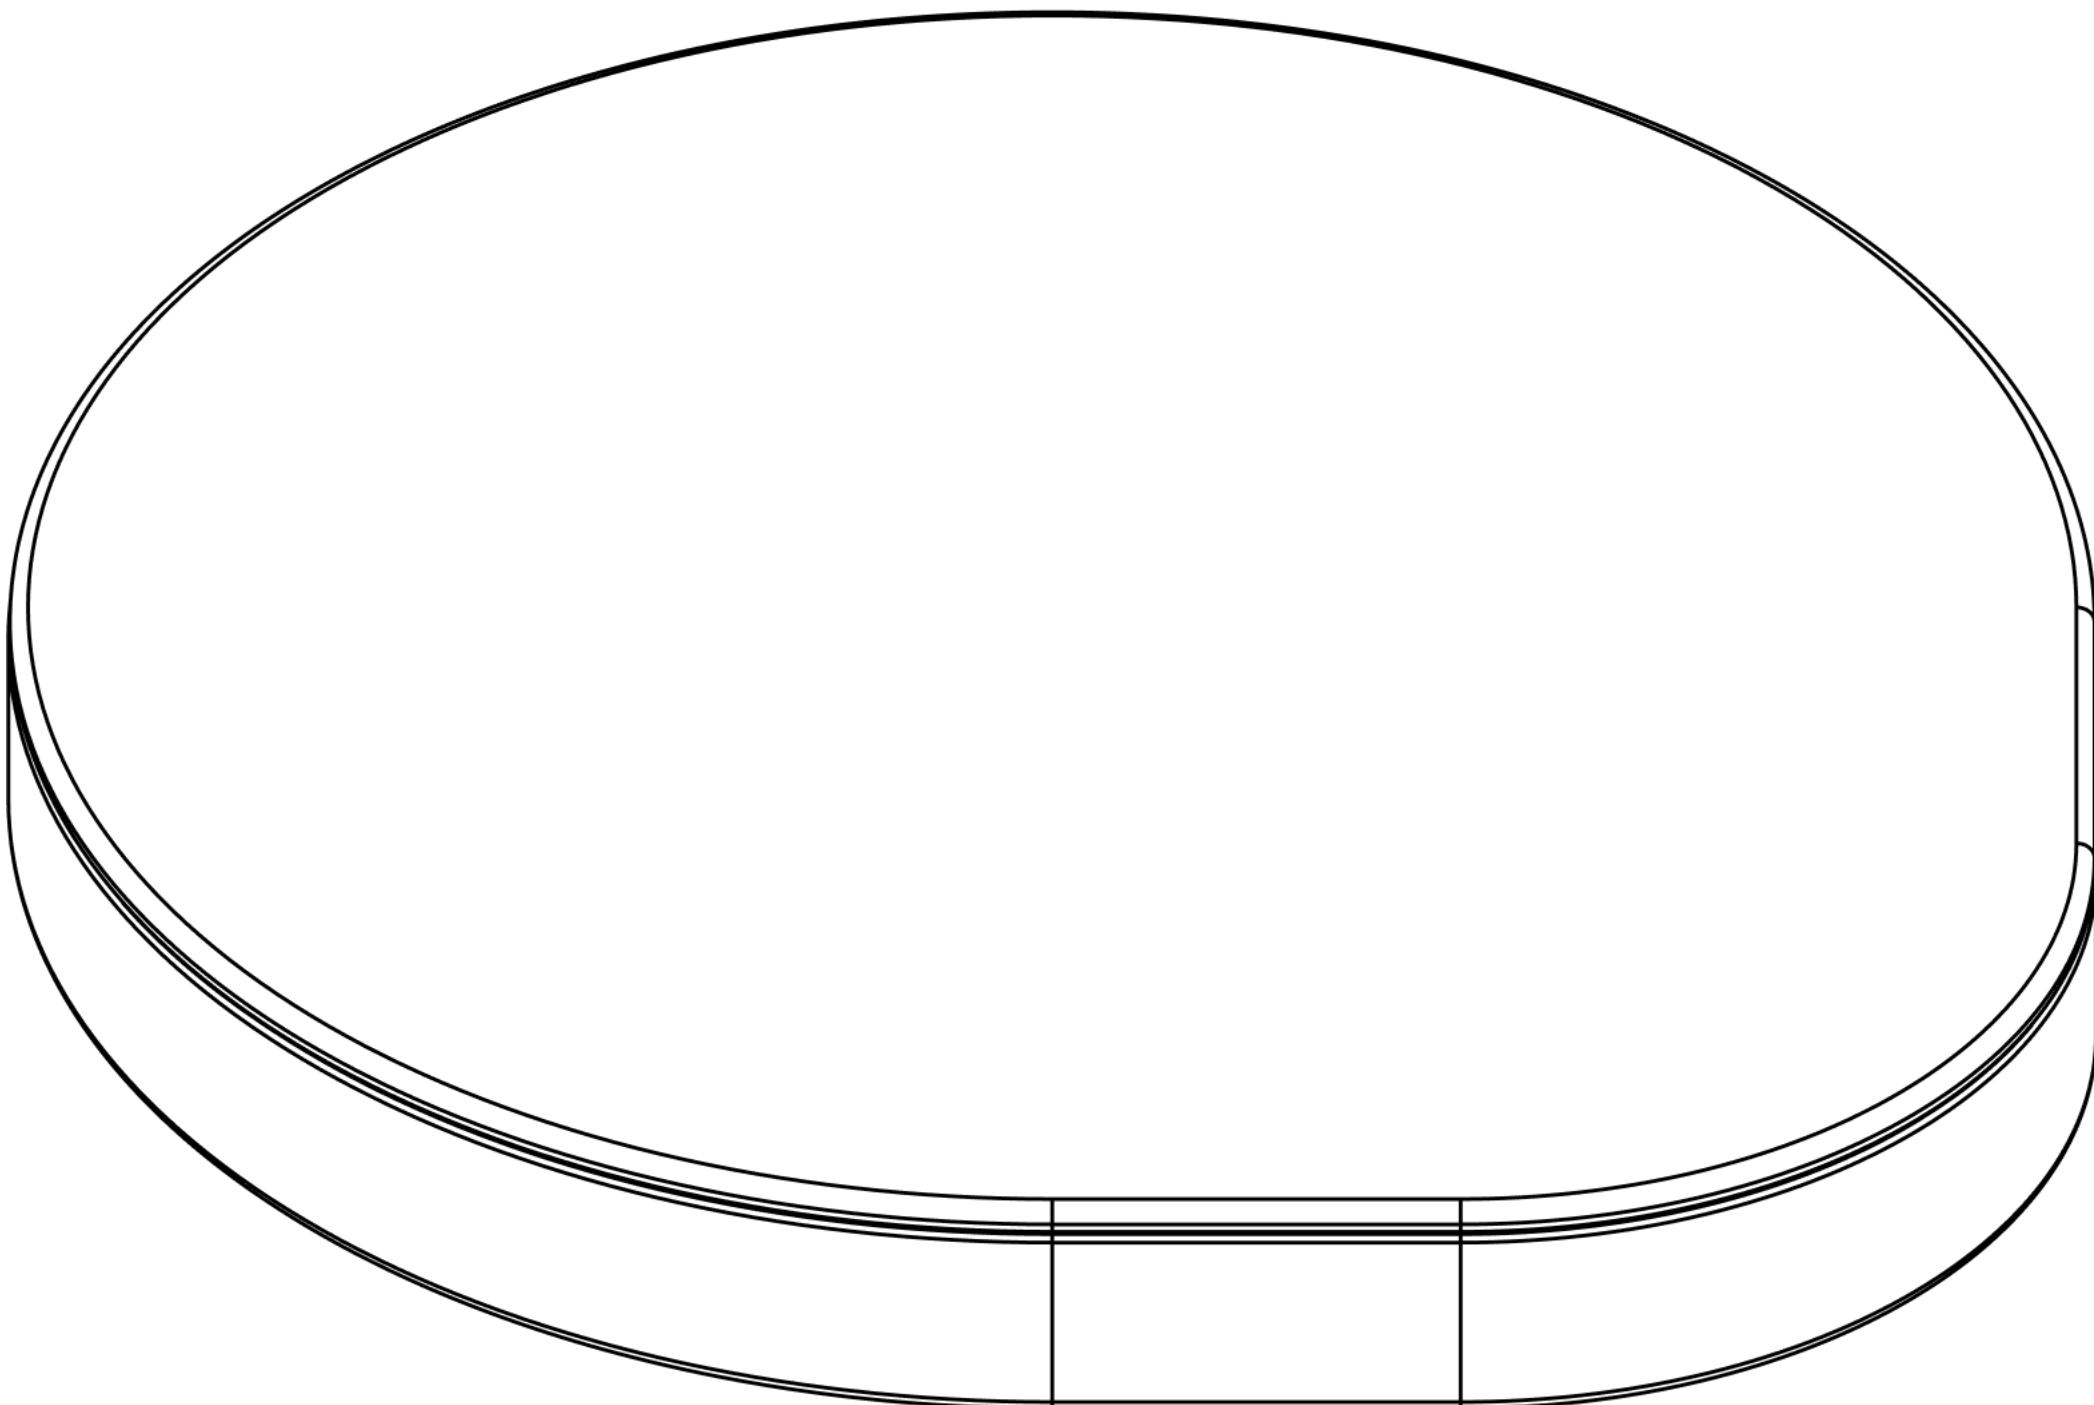

# Additional Information

## Troubleshooting

### My module won't charge.

- Ensure that the connected cable can provide sufficient power.
- Ensure that your computer is connected to a working power outlet.
- Ensure that your connected device is functioning correctly.
- Ensure that Touch is properly seated in the dock.

If none of the above work your module may need to be manually recovered using the Recovery Mode (See Layer 2 – System of the Create User Manual) keybinding. This command should only be used if a module remains unresponsive despite extensive troubleshooting.

When left connected to Create over an extended period of time, a select number of Naya modules can experience battery drain to the point that the module's battery protection triggers. Although battery protection is an intended feature, it can, in certain cases, render the modules un-chargeable until the battery is manually recovered.

More information about this process can be found in the Battery Recovery guide in our Help Center ([help.naya.tech/battery-recovery](https://help.naya.tech/battery-recovery)).

### Touch is not registering any input.

- Ensure that Touch is properly seated into the module dock.
- Ensure that Touch's battery is charged.
- If using the keyboard wirelessly, try connecting the keyboard via USB.
- Ensure that your fingers and Touch are clean and dry.
- Make sure to flash Create with an up to date keymap.

**Does your issue persist? Contact us at [support@naya.tech](mailto:support@naya.tech) or check on <https://help.naya.tech>.**

# Environmental & Recycling Instructions

## Battery disposal at end of product life.

1. Unscrew and detach the base plate.
2. Detach and remove battery from circuit board.
3. Dispose of your product and its battery according to local laws.

## WEEE Disposal and Recycling Information

This symbol means that waste of electrical and electronic equipment (WEEE) should not be disposed as general household waste. WEEE should be treated separately to prevent possible harm to the environment or human health. Consult your retailer or local municipal office for collection, return, recycle or reuse of WEEE.

## Safety & Care

- Contains small parts which may be a choking hazard. Not suitable for children under age five.
- Clean only by gently wiping with a dry microfiber cloth.
- Do not clean pogo pin connections using liquids or abrasive materials.
- Do not put heavy objects on top of the module.
- Do not spill liquids on the module.
- Keep away from sharp objects, fire, water, and high voltage equipment.
- Do not sit on, drop, crush, puncture, shred the module, cool below 0°C (32°F) or heat above 60°C (140°C).
- Do not short-circuit the pogo pins, included battery, or its cells.
- In the event of a cell leaking, do not allow the liquid to come in contact with the skin or eyes.

# Warranty Policy

Our products come with a one-year warranty term and a commitment to assist with parts and repairs well beyond that. For any questions just reach out at [support@naya.tech](mailto:support@naya.tech).

### Our quality commitment

We design our products to be reliable, durable, and a joy to use. We use best-in-class materials to manufacture our products and designed nearly all parts to be replaceable. This doesn't just reduce e-waste, but also means we seek to support you with spare parts beyond the warranty term.

### What's Covered?

For one (1) year from the date of delivery, we warrant that your Naya device will be free from defects in materials and workmanship under normal use. If local regulations mandate a longer warranty term, we will match it. For example, in Europe a two (2) year warranty period is mandated from the date of delivery. If an issue arises due to a defect in manufacturing or materials, we will repair or replace the product as we deem necessary. This warranty is non-transferable and applies only to the original end-purchaser of the product.

### What's Not Covered?

While we build Naya products to last, some things fall outside the scope of our warranty:

- Normal wear and tear, including cosmetic damage such as scratches or discoloration.
- Damage caused by accidents, misuse, neglect, acts of nature, fire, liquid exposure, or unauthorized modifications.
- Issues caused by third-party accessories, unauthorized repairs, or improper handling, such as applying excessive force while exchanging key switches.
- Damage caused by customizing our products' firmware.
- Loss or Theft.
- Battery degradation due to normal use over time.

### How to Make a Warranty Claim?

If you believe your Naya product has a defect covered by our warranty, here's what to do:

1. Contact Us: Reach out to our support team at [support@naya.tech](mailto:support@naya.tech) with your proof of purchase and a description of the issue. If you purchased through our website, you don't need a proof of purchase.
2. Assessment: Our team will assess the situation, may ask you for further information and proof and guide you through troubleshooting steps if needed.
3. Repair or Replacement: If your issue can't be fixed otherwise, we'll arrange for a repair or a replacement unit. We ask you to ship your original unit back to us at our expense.

Please note, that warranty replacements sent to international addresses may incur customs fees. At this time, we cannot guarantee from which locations replacement parts may be shipped. We mark all warranty shipments as "warranty replacement," but local customs authorities may still impose charges. Customers are responsible for these charges.

### A Warranty That Works With You

We know that a great product deserves great support. Due to our supplier terms, we cannot extend this warranty after expiry and make exceptions. However, our team is here to help and will always aim for a quick, fair and transparent resolution – both during and after your warranty period. We developed our products with repairability for years to come in mind. If you ever have questions, don't hesitate to reach out at [support@naya.tech](mailto:support@naya.tech).

— Team Naya

## Intellectual Property Rights

- NAYA B.V. owns the copyright to this manual.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by NAYA B.V. is under license
- All products and company names on this product and the package are trademarks or registered trademarks of their respective owners.

**For any questions or concerns contact [support@naya.tech](mailto:support@naya.tech)**

**NAYA B.V. – Wasaweg 3 – 9723JD Groningen – Netherlands**