

<b>Document Title</b>	Specification of COM Based Transformer
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	662

Document Status	Final
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	4.4.0

	Document Change History						
Date	Release	Changed by	Description				
2018-10-31	4.4.0	AUTOSAR Release Management	<ul><li>Updated buffer handling</li><li>Removed include file structure</li></ul>				
2017-12-08	4.3.1	AUTOSAR Release Management	<ul> <li>Updated handling of gaps in the array representation of a signal group.</li> <li>Clarification on parameter passing.</li> </ul>				
2016-11-30	4.3.0	AUTOSAR Release Management	<ul> <li>Updated include file structure figure.</li> <li>Clarification on postBuild configuration in chapter 10.</li> <li>Added support for unqueued communication when no data is available in [SWS_ComXf_00035].</li> </ul>				
2015-07-31	4.2.2	AUTOSAR Release Management	Exclude support for external trigger communica- tion [SWS_ComXf_00032]				
2014-10-31	4.2.1	AUTOSAR Release Management	Initial Release				



#### **Disclaimer**

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.



# **Table of Contents**

1	Introduction and functional overview	5
2	Acronyms and Abbreviations	6
3	Related documentation	7
	3.1Input documents3.2Related standards and norms3.3Related specification	7 8 8
4	Constraints and assumptions	9
	4.1 Limitations	9 9
5	Dependencies to other modules	10
	5.1       File structure         5.1.1       Code file structure	10 10
6	Requirements Tracing	11
7	Functional specification	12
	7.1 Specification of the COM Based Transformer 7.2 Error classification	15 18 18 19 19
8	API specification	20
	8.1 Imported types 8.2 Type definitions 8.3 Function definitions 8.3.1 ComXf_ <transformerid> 8.3.2 ComXf_Inv_<transformerid> 8.3.3 ComXf_Init 8.3.4 ComXf_DeInit 8.3.5 ComXf_GetVersionInfo</transformerid></transformerid>	20 20 20 22 23 23 24
	8.4 Callback notifications	24
	8.5 Scheduled functions	24 24
9	Sequence diagrams	25
	Configuration specification	26
	Referenced Meta Classes	27





В	Used	d ECU Con	figuration	34
С	Histo	ory of Cons	traints and Specification Items	58
	C.1	Constrair	nt History of this Document according to AUTOSAR R4.2.1	58
	C.2	Constrair	nt History of this Document according to AUTOSAR R4.2.2	58
		C.2.1	Added Traceables in 4.2.2	58
		C.2.2	Changed Traceables in 4.2.2	58
		C.2.3	Deleted Traceables in 4.2.2	58
	C.3	Constrair	nt History of this Document according to AUTOSAR R4.3.0	58
		C.3.1	Added Traceables in 4.3.0	58
		C.3.2	Changed Traceables in 4.3.0	58
		C.3.3	Deleted Traceables in 4.3.0	59
	C.4	Constrair	nt History of this Document according to AUTOSAR R4.3.1	59
		C.4.1	Added Traceables in 4.3.1	59
		C.4.2	Changed Traceables in 4.3.1	59
		C.4.3	Deleted Traceables in 4.3.1	59
	C.5	Constrair	nt History of this Document according to AUTOSAR R4.4.0	59
		C.5.1	Added Traceables in 4.4.0	59
		C.5.2	Changed Traceables in 4.4.0	59
		C.5.3	Deleted Traceables in 4.4.0	59



## 1 Introduction and functional overview

The transformer feature provides functionality to chain arbitrary transformers when sending and receiving data in the RTE. The COM Based Transformer provides this functionality when the target bus system uses a fixed communication matrix with packed data representations.



# 2 Acronyms and Abbreviations

No specific terms have been introduced additionally to those already defined in [1].



## 3 Related documentation

## 3.1 Input documents

## References

- [1] Glossary AUTOSAR\_TR\_Glossary
- [2] General Specification on Transformers AUTOSAR\_ASWS\_TransformerGeneral
- [3] Specification of RTE Software AUTOSAR SWS RTE
- [4] Specification of Communication AUTOSAR\_SWS\_COM
- [5] General Requirements on Basic Software Modules AUTOSAR\_SRS\_BSWGeneral
- [6] Requirements on Transformer AUTOSAR SRS Transformer
- [7] System Template
  AUTOSAR\_TPS\_SystemTemplate
- [8] General Specification of Basic Software Modules AUTOSAR\_SWS\_BSWGeneral



## 3.2 Related standards and norms

Not applicable.

## 3.3 Related specification

AUTOSAR provides a General Specification on Transformers [2], which is also valid for COM Based Transformer.

Thus, the specification ASWS Transformer General shall be considered as additional and required specification for COM Based Transformer.



# 4 Constraints and assumptions

### 4.1 Limitations

For the COM Based Transformer all general transformer limitations (see [2]) apply.

Additionally the following restrictions apply for the COM Based Transformer:

**[SWS\_ComXf\_00017]** The COM Based Transformer does not support Client-Server communication. |(SRS\_Xfrm\_00201)

**[SWS\_ComXf\_00032]** The COM Based Transformer does not support external trigger communication. |(SRS Xfrm 00201)

**[SWS\_ComXf\_00018]** The COM Based Transformer only supports composite data types (i.e. Signal Groups from COM). | (SRS Xfrm 00201)

**[SWS\_ComXf\_00019]** [ The COM Based Transformer only supports fix sized data types. | (SRS Xfrm 00201)

**[SWS\_ComXf\_00022]** [ The COM Based Transformer only supports signal groups which are byte aligned. ] (SRS\_Xfrm\_00201)

**[SWS\_ComXf\_00023]** [ The COM Based Transformer shall support signal group where all group signals are mapped successively (possibly with gaps where positions in the signal group layout have no corresponding signal defined) to the IPdu.  $|(SRS_Xfrm_00201)|$ 

## 4.2 Applicability to car domains

The COM Based Transformer can be used for all domain applications when a fixed communication matrix is used.



# 5 Dependencies to other modules

The AUTOSAR RTE [3] has to exist to execute the COM Based Transformer.

The AUTOSAR COM configuration [4] of the data handled by the COM Based Transformer has to exists in order to allow the configuration of the COM Based Transformer.

## 5.1 File structure

#### 5.1.1 Code file structure

The source code file structure is defined in the [2].



# 6 Requirements Tracing

The following table references the features specified in [5] and [6] and links to the fulfillments of these.

		Satisfied by
[SRS_BSW_00159]	All modules of the	[SWS_ComXf_00025]
	AUTOSAR Basic Software	
	shall support a tool based	
	configuration	
[SRS_BSW_00337]	Classification of	[SWS_ComXf_00028]
	development errors	
[SRS_BSW_00404]	BSW Modules shall support	[SWS_ComXf_00030]
	post-build configuration	
[SRS_BSW_00407]	Each BSW module shall	[SWS_ComXf_00024] [SWS_ComXf_00026]
	provide a function to read	[SWS_ComXf_00027]
	out the version information	
	of a dedicated module	
	implementation	
[SRS_BSW_00411]	All AUTOSAR Basic	[SWS_ComXf_00024] [SWS_ComXf_00026]
	Software Modules shall	[SWS_ComXf_00027]
	apply a naming rule for	
	enabling/disabling the	
	existence of the API	
[SRS_BSW_00441]	Naming convention for type,	[SWS_ComXf_00030]
	macro and function	
[SRS_Xfrm_00009]	A fixed set of transformer	[SWS_ComXf_00003]
classes shall exist		
[SRS_Xfrm_00011] A transformer shall belong		[SWS_ComXf_00003] [SWS_ComXf_00006]
	to a specific transformer	
class		
[SRS_Xfrm_00201]	The COM Based	[SWS_ComXf_00004] [SWS_ComXf_00005]
	Transformer shall define the	[SWS_ComXf_00007] [SWS_ComXf_00008]
serialization of atomic and		[SWS_ComXf_00009] [SWS_ComXf_00010]
	structured data elements	[SWS_ComXf_00011] [SWS_ComXf_00012]
	into linear arrays based on	[SWS_ComXf_00013] [SWS_ComXf_00015]
	a fixed data mapping	[SWS_ComXf_00016] [SWS_ComXf_00017]
		[SWS_ComXf_00018] [SWS_ComXf_00019]
		[SWS_ComXf_00020] [SWS_ComXf_00021]
		[SWS_ComXf_00022] [SWS_ComXf_00023]
		[SWS_ComXf_00032] [SWS_ComXf_00035]
[SRS Xfrm 00202]	The COM Based	[SWS_ComXf_00036] [SWS_ComXf_00005] [SWS_ComXf_00020]
•		[SWS_ComXf_00005][SWS_ComXf_00020]
	Transformer shall take its	
	configuration from the COM	[SWS_ComXf_00033] [SWS_ComXf_00034]
	module	[SWS_ComXf_00036]



## 7 Functional specification

When a SWC initiates an inter-ECU communication which is configured to be transformed, the SWC hands the data over to the RTE. The RTE executes the configured transformer chain which contains - if the configuration demands this - the COM Based Transformer

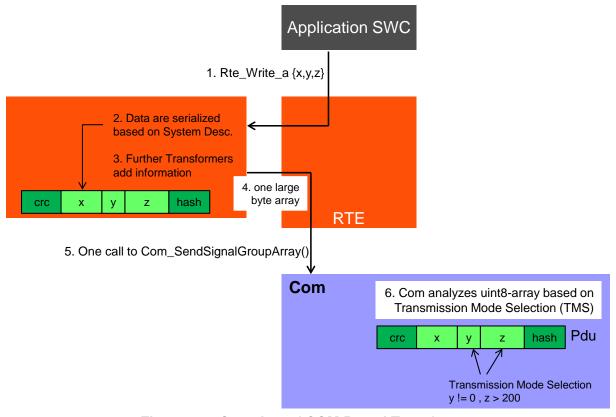


Figure 7.1: Overview of COM Based Transformer

The COM Based Transformer on the sender side serializes the data of the SWC and brings them into a uint8-array representation based on the communication matrix description. The uint8-array representation is forwarded to the COM module to be placed inside the respective IPdu. The COM module may analyze (depending on the configuration of the Transmission Mode Selection – TMS) the provided uint8-array and trigger the respective transmission mode. The IPdu is sent via the communication stack over the bus to the receiver(s).

The RTE of the receiver side executes the transformer chain in the reverse order. The COM Based transformer of the receiver deserializes the linear data back into the original data structure. These are handed over to the receiving SWC.

From the SWC's point of view it is totally transparent whether data are transformed or not.



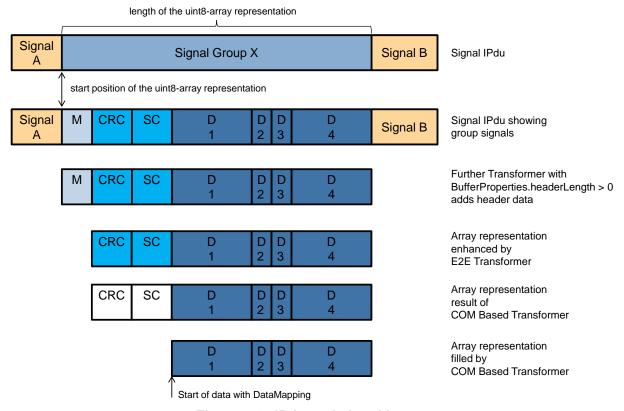


Figure 7.2: IPdu and signal layout

The handling of the data inside COM's IPdu buffer and the transformer buffer is shown in figure 7.2.

The ISignalIPdu is handled by the COM module as ComIPdu and may contain several parts (signals and signal groups). A signal group in COM is represented by the ComSignalGroup container.

In the System Template [7] it is possible to define that a signal group shall be handled by the COM Based Transformer. The usage of the COM Based Transformer for a specific transformer chain is defined by the reference <code>comBasedSignalGroupTransformation</code> from the <code>ISignalGroup</code> to <code>DataTransformation</code> (see figure 7.3).



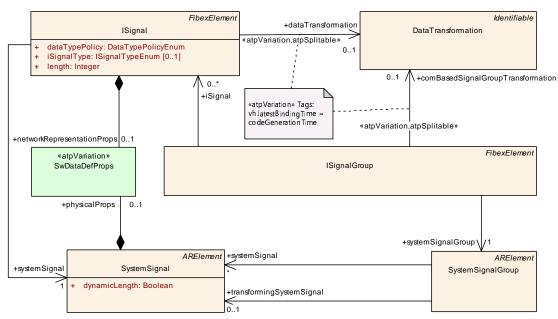


Figure 7.3: System Template Transformed communication

In the Ecu configuration of the COM module such ComSignalGroups have a ComSignalGroupArrayAccess=true parameter defined.

If the ComSignalGroupArrayAccess=true then it implicitly defines the length of the signal group ([SWS\_Com\_00845] [4]) and the start position inside the ComIPdu where the signal group starts ([SWS\_Com\_00844] [4]). Thus there can be several signals and signal groups defined inside an ISignalIPdu (e.g. 'Signal A' and 'Signal B' are part of the IPdu but are not considered by the COM Based Transformer for the 'Signal Group X').

The Com APIs <code>Com\_SendSignalGroupArray</code> and <code>Com\_ReceiveSignalGroupArray</code> handle the signal group as array representation based on length of the signal group and the start position inside the <code>ComIPdu</code>. This array representation contains all signals that belong to the signal group, regardless whether the application software has a data mapping defined or not.

As an example in figure 7.2 the 'Signal Group X' consists of the signals 'M', 'CRC', 'SC', 'D1', 'D2', 'D3', and 'D4'. Thus the RTE will interact with COM based on the whole array representation of this signal group with length of the signal group.

When the RTE interacts with the COM Based Transformer also all the other potential transformers need to be considered in order to determine which part of the array representation of the signal group actually is provided to each transformer since each transformer may add data during sending (or remove data during reception).

E.g. the part of the array representation which holds the 'CRC' and 'SC' signals are handled by the E2E transformer but will not be considered by the COM Based Transformer. The 'M' signal will neither be handled by the E2E transformer nor the COM Based Transformer. For 'M' a further transformer is responsible.



The RTE will provide the data buffer from the 'Start of data with DataMapping defined' location to the COM Based Transformer.

## 7.1 Specification of the COM Based Transformer

Serialization describes the way data is represented in protocol data units (PDUs) transported over a network. For the COM Based Transformer the serialization is defined by the communication matrix using the System Template [7]. The communication matrix information is taken over to the Ecu configuration of the COM module.

**[SWS\_ComXf\_00005]** The serialization is based on the Ecu configuration of the COM module and

- the Software Components PortPrototype,
- the dataElement list defined by the respective SenderReceiverInterface,
- the SenderReceiverToSignalGroupMapping,
- and the ISignalToIPduMapping for the SystemSignalGroup.

(SRS\_Xfrm\_00201, SRS\_Xfrm\_00202)

**[SWS\_ComXf\_00003]** \[ The COM Based transformer shall only be used as the top-most transformer (first) in a transformer chain. \] \( (SRS\_Xfrm\_00009, SRS\_Xfrm\_00011) \)

The COM Based transformer serializes structured data into a linear form. Therefore it can only be used as the first transformer on the sending side and the last transformer on the receiving side.

**[SWS\_ComXf\_00004]** The COM Based transformer defined in this document shall be used as a transformer if

- the attribute protocol of the TransformationTechnology is set to COM-Based
- and the attribute version of the TransformationTechnology is set to 1.0.0
- and the attribute transformerClass of the TransformationTechnology is set to serializer

(SRS Xfrm 00201)

[SWS\_ComXf\_00015] [ The COM Based Transformer shall support all basic data types that are supported by the COM module in [SWS\_Com\_00675] except for UINT8\_DYN. | (SRS\_Xfrm\_00201)

[SWS\_ComXf\_00016] [ The COM Based Transformer shall handle each dataElement of the SenderReceiverInterface individually. ](SRS\_Xfrm\_00201)



[SWS\_ComXf\_00021] [ The COM Based Transformer shall handle each dataElement of the SenderReceiverInterface like defined for the COM module [4] when the COM API Com\_SendSignal (rep. Com\_ReceiveSignal) is called for a shadow signal. |(SRS Xfrm 00201)

This defines that the COM Based Transformer performs all actions equally to the COM module. This does include functionality like endianess conversion and sign extension.

The COM Configuration implicitly defines the length of the signal group ([SWS\_Com\_00845] [4]) and the start position inside the ComIPdu where the signal group starts ([SWS\_Com\_00844] [4]). In order to place the transformed data element into the data buffer provided by the RTE the COM Based Transformer needs to respect the offset introduced by the position of the ComGroupSignal inside the ComIPdu (defined by the start position inside the ComIPdu) and the additional offset introduced by header data which is handled by other transformers called after the COM Based Transformer.

[SWS\_ComXf\_00036] [ If the signal layout of the signal group array representation contains gaps, those gaps shall be set during transmission to the value defined by the ComTxIPduUnusedAreasDefault of the respective ComTxIPdu that this signal group is mapped to. ](SRS\_Xfrm\_00201, SRS\_Xfrm\_00202)

Gaps in the signal group array representation may occur because the layout is not fully packed and there are bits (or even bytes) that have no signal defined for (see 7.4).

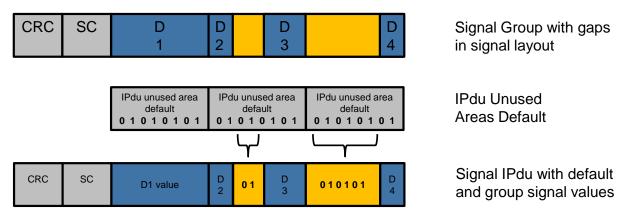


Figure 7.4: Example of an array representation with gaps

**[SWS\_ComXf\_00020]** The COM Based Transformer shall place the serialized data element into the data buffer at the bit position according to the configuration of the IsignalGroup in Com. |(SRS\_Xfrm\_00201, SRS\_Xfrm\_00202)

**[SWS\_ComXf\_00013]** \( \text{To allow migration, the deserialization shall be able to accept larger array representations and ignore dataElements appended at the end of a previously known parameter list. \( \left( \frac{SRS\_Xfrm\_00201}{\text{}} \right) \)

This means: data elements that were not defined in the interface specification used to generate or parameterize the descrialization code at the end of the serialized data will be ignored by the descrialization.



Class	TransformationTechnology					
Package	M2::AUTOSARTemplates:	M2::AUTOSARTemplates::SystemTemplate::Transformer				
Note	A TransformationTechnolo	gy is a tra	nsformer	inside a transformer chain.		
	Tags: xml.namePlural=TF	RANSFOF	RMATION-	TECHNOLOGIES		
Base	ARObject, Identifiable, Mu	ultilanguag	geReferra	ble, Referrable		
Attribute	Туре	Mul.	Kind	Note		
bufferProperties	BufferProperties	1	aggr	Aggregation of the mandatory BufferProperties.		
hasInternal State	Boolean	01	attr	This attribute defines whether the Transformer has an internal state or not.		
needsOriginal Data	Boolean	01	attr	Specifies whether this transformer gets access to the SWC's original data.		
protocol	String 1 attr Specifies the protocol that is implemented by this transformer.					
transformation Description	Transformation Description	O1 aggr A transformer can be configured with transformer specific parameters which are represented by the Transformer Description.				
	Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild					
transformer Class	TransformerClassEnum 1 attr Specifies to which transformer class this transformer belongs.					
version	String	1	attr	Version of the implemented protocol.		

Table 7.1: TransformationTechnology

Enumeration	TransformerClassEnum				
Package	M2::AUTOSARTemplates::SystemTemplate::Transformer				
Note	Specifies the transformer class of a transformer.				
Literal	Description				
custom	The transformer is a custom transformer.				
	Tags: atp.EnumerationValue=0				
safety	The transformer is a safety transformer.				
	Tags: atp.EnumerationValue=1				
security	The transformer is a security transformer.				
	Tags: atp.EnumerationValue=2				
serializer	The transformer is a serializing transformer.				
	Tags: atp.EnumerationValue=3				

Table 7.2: TransformerClassEnum

Class	BufferProperties				
Package	M2::AUTOSARTemplates	::SystemT	emplate::	Transformer	
Note	Configuration of the buffer	Configuration of the buffer properties the transformer needs to work.			
Base	ARObject	ARObject			
Attribute	Type Mul. Kind Note				
buffer Computation	CompuScale	01	aggr	If the transformer changes the size of the data, the CompuScale can be used to specify a rule to derive the size of the output data based on the size of the input data.	





Class	BufferProperties			
headerLength	Integer	1	attr	Defines the length of the header (in bits) this transformer will add in front of the data.
inPlace	Boolean	1	attr	If set, the transformer uses the input buffer as output buffer.

**Table 7.3: BufferProperties** 

Class	TransformationDescription (abstract)				
Package	M2::AUTOSARTemplates:	:SystemT	emplate::	ransformer	
Note	The TransformationDescription is the abstract class that can be used by specific transformers to add transformer specific properties.				
Base	ARObject, Describable	ARObject, Describable			
Subclasses	EndToEndTransformationDescription, SOMEIPTransformationDescription, UserDefinedTransformation Description				
Attribute	Type Mul. Kind Note				
-					

**Table 7.4: TransformationDescription** 

## 7.2 Error classification

## 7.2.1 Development Errors

**[SWS\_ComXf\_00028] Development Errors** [ The errors shown in table 7.5 are defined as development errors for the COM Based Transformer. | (SRS\_BSW\_00337)

Type of error	Related error code	Value
Error code if any other API service, except	<mip>_E_UNINIT</mip>	0x01
GetVersionInfo is called before the		
transformer module was initialized with Init		
or after a call to DeInit		
Error code if an invalid configuration set was	<mip>_E_INIT_FAILED</mip>	0x02
selected		
API service called with wrong parameter	<mip>_E_PARAM</mip>	0x03
API service called with invalid pointer	<mip>_E_PARAM_POINTER</mip>	0x04

**Table 7.5: Development Errors** 

### 7.2.2 Runtime Errors

No runtime errors are specified for the COM Based Transformer.



### 7.2.3 Transient Faults

No transient faults are specified for the COM Based Transformer.

## 7.2.4 Production Errors

No production errors are specified for the COM Based Transformer.

### 7.2.5 Extended Production Errors

No extended production errors are specified for the COM Based Transformer.



# 8 API specification

## 8.1 Imported types

There are no imported types from other modules beyond those specified in [2].

In the Module Interlink Headers file which is imported by the COM Based Transformer, all ImplementationDataTypes known to the RTE are included. Using this mechanism, the COM Based Transformer knows all data types of data which shall be transformed.

## 8.2 Type definitions

### [SWS ComXf 00030] [

Name:	ComXf_ConfigType						
Туре:	Structure						
Element:	implementation -						
		specific					
Description:	This is the type of the data structure containing the initialization data for the						
	transformer.						
Available	ComXf.h						
via:							

Table 8.1: ComXf ConfigType

(SRS\_BSW\_00404, SRS\_BSW\_00441)

#### 8.3 Function definitions

The COM Based transformer provides the specific interfaces generally required by [2].

[SWS\_ComXf\_00006] [ The COM Based Transformer shall only provide functions for transformers where the TransformationTechnology is referenced as the first reference in the list of ordered references transformerChain from a DataTransformation to a TransformationTechnology. ] (SRS\_Xfrm\_00011)

That means, only the first transformer in a transformer chain can be a COM Based Transformer because serializer transformer are in general only allowed to be the first transformer in a chain.

#### 8.3.1 ComXf\_<transformerId>

[SWS ComXf 00007] [



Service name:	ComXf_ <transformeri< th=""><th>d&gt;</th></transformeri<>	d>				
Syntax:	<pre>uint8 ComXf_<transformerid>(</transformerid></pre>					
	uint8* buffer,					
	uint32* bufferLe	ngth,				
	<pre><paramtype> data</paramtype></pre>	Element				
	)					
Service ID[hex]:	0x03					
Sync/Async:	Synchronous					
Reentrancy:	Reentrant					
Parameters (in):	dataElement Data element which shall be transformed					
Parameters (inout):	None					
Parameters (out):	buffer Buffer allocated by the RTE, where the transformed					
	data has to be stored by the transformer					
	bufferLength Used length of the buffer					
Return value:	uint8	0x00 (E_OK): Serialization successful				
	0x81 (E_SER_GENERIC_ERROR): A generic error					
	occurred					
Description:	This function transforms a Sender/Receiver communication using the se-					
	rialization of COM Based Transformer. It takes the data element as input					
	and outputs a uint8 array containing the serialized data.					
Available via:	ComXf.h					

Table 8.2: ComXf <transformerId>

# \(\(\sum\_{\text{NRS}\_Xfrm\_00201}\)\) where

- type is data type of the data element after all data conversion activities of the RTE
- paramtype is derived from type according to the parameter passing rules rules defined by the SRS BSW General [5] (see [SRS\_BSW\_00484], [SRS\_BSW\_00485], and [SRS\_BSW\_00486]) and SWS BSW General [8] (see [SWS\_BSW\_00186] and [SWS\_BSW\_00187])
- transformerId is the name pattern for the transformer specified be the *General Specification on Transformers* [2] [SWS Xfrm 00062].

The function specified in [SWS\_ComXf\_00007] exists for each transformed Sender/Receiver communication which uses the COM Based Transformer.

[SWS\_ComXf\_00008] [ The function specified in [SWS\_ComXf\_00007] shall exist for the first reference in the list of ordered references transformerChain from a DataTransformation to a TransformationTechnology if the DataTransformation is referenced by an ISignalGroup in the role comBasedSignalGroupTransformation where the ISignalGroup references a SystemSignalGroup which is referenced by SenderReceiverToSignalGroupMapping. ] (SRS Xfrm 00201)

**[SWS\_ComXf\_00009]** The function specified in [SWS\_ComXf\_00007] shall serialize complex data elements of Sender/Receiver communication into a linear byte array representation using the COM Based Transformation. | (SRS\_Xfrm\_00201)



### 8.3.2 ComXf\_Inv\_<transformerId>

### [SWS\_ComXf\_00010] [

Service name:	ComXf_Inv_ <transform< th=""><th>merld&gt;</th></transform<>	merld>				
Syntax:	<pre>uint8 ComXf_Inv_<transformerid>(</transformerid></pre>					
	const uint8* buffer,					
	uint32 bufferLength,					
	<type>* dataElement</type>					
	)					
Service ID[hex]:	0x04					
Sync/Async:	Synchronous					
Reentrancy:	Reentrant					
Parameters (in):	buffer	Buffer allocated by the RTE, where the still serial-				
		ized data are stored by the Rte				
	bufferLength Used length of the buffer					
Parameters (inout):	None					
Parameters (out):	dataElement Data element which is the result of the transforma-					
	tion and contains the deserialized data element					
Return value:	uint8 0x00 (E_OK): Serialization successful					
		0x01 (E_NO_DATA): No data available which can be				
		deserialized				
		0x81 (E_SER_GENERIC_ERROR): A generic error				
	occurred					
Description:	This function deserializes a Sender/Receiver communication using the					
	deserialization of COM Based Transformer. It takes the uint8 array con-					
	taining the serialized data as input and outputs the original data element					
	which will be passed to the Rte.					
Available via:	ComXf.h					

Table 8.3: ComXf\_Inv\_<transformerId>

# (SRS\_Xfrm\_00201)

- type is data type of the data element before all data conversion activities of the RTF
- transformerId is the name pattern for the transformer specified in [SWS\_Xfrm\_00062] ([2]).

The function specified in [SWS\_ComXf\_00010] exists for each transformed Sender/Receiver communication which uses the COM Based Transformation.

[SWS\_ComXf\_00011] [ The function specified in [SWS\_ComXf\_00010] shall exist for the first reference in the list of ordered references transformerChain from a DataTransformation to a TransformationTechnology if the DataTransformation is referenced by an ISignalGroup in the role comBasedSignalGroupTransformation where the ISignalGroup references a SystemSignalGroup which is referenced by SenderReceiverToSignalGroupMapping. ] (SRS Xfrm 00201)



[SWS\_ComXf\_00035] 
[If ComXf\_Inv\_<transformerId> specified in [SWS\_ComXf\_00010] is called with buffer equal to NULL\_PTR and buffer-Length equal to 0, then the output buffer buffer shall not be changed and ComXf\_Inv\_<transformerId> shall return with E\_NO\_DATA. | (SRS\_Xfrm\_00201)

**[SWS\_ComXf\_00012]** [ The function specified in [SWS\_ComXf\_00010] shall deserialize a linear byte array to primitive or complex data elements of Sender/Receiver communication using the COM Based Transformation. | (SRS\_Xfrm\_00201)

## 8.3.3 ComXf\_Init

## [SWS\_ComXf\_00026] [

Service name:	ComXf_Init					
Syntax:	<pre>void ComXf_Init(</pre>					
	const ComXf_Conf	igType* config				
	)					
Service ID[hex]:	0x01					
Sync/Async:	Synchronous					
Reentrancy:	Reentrant					
Parameters (in):	config Pointer to the transformer's configuration data.					
Parameters (inout):	None					
Parameters (out):	None					
Return value:	None					
Description:	This service initializes	the transformer for the further processing.				
Available via:	ComXf.h					

Table 8.4: ComXf\_Init

(SRS\_BSW\_00407, SRS\_BSW\_00411)

#### 8.3.4 ComXf\_DeInit

### [SWS ComXf 00027] [

Service name:	ComXf_DeInit
Syntax:	<pre>void ComXf_DeInit(</pre>
	void
Service ID[hex]:	0x02
Sync/Async:	Synchronous
Reentrancy:	Reentrant
Parameters (in):	None
Parameters (inout):	None
Parameters (out):	None
Return value:	None
Description:	This service deinitializes the transformer.
Available via:	ComXf.h

Table 8.5: ComXf\_Delnit



(SRS BSW 00407, SRS BSW 00411)

## 8.3.5 ComXf\_GetVersionInfo

## [SWS\_ComXf\_00024] [

Service name:	ComXf_GetVersionInfo				
Syntax:	<pre>void ComXf_GetVersionInfo(</pre>				
	Std_VersionInfoT	ype* VersionInfo			
	)				
Service ID[hex]:	0x00				
Sync/Async:	Synchronous				
Reentrancy:	Reentrant				
Parameters (in):	None				
Parameters (inout):	None				
Parameters (out):	VersionInfo	Pointer to where to store the version information of			
	this module.				
Return value:	None				
Description:	This service returns the version information of the called transformer				
	module.				
Available via:	ComXf.h				

Table 8.6: ComXf\_GetVersionInfo

(SRS BSW 00407, SRS BSW 00411)

## 8.4 Callback notifications

COM Based Transformer has no callback notifications.

## 8.5 Scheduled functions

COM Based Transformer has no scheduled functions.

# 8.6 Expected interfaces

COM Based Transformer has no expected interfaces.



# 9 Sequence diagrams

There are no sequence diagrams applicable to COM Based Transformer.



## 10 Configuration specification

**[SWS\_ComXf\_00031]** [ The COM Based Transformer is configured based on the COM module configuration [4]. | (SRS Xfrm 00202)

Still, there is an EcuC necessary to map the implementation of the transformer. The EcuC defined in [2] shall be used.

**[SWS\_ComXf\_00033]** The vendor specific module definition of the COM Based Transformer - based on the Xfrm configuration [2] - may be extended by the vendor to support the close interaction with the Com module [4]. |(SRS\_Xfrm\_00202)

[SWS\_ComXf\_00034] [ The COM Based Transformer shall be configured to be post-Build when the configuration of the Com module [4] is postBuild for the respective ComSignalGroups. ] (SRS\_Xfrm\_00202)

[SWS\_ComXf\_00025] [ The apiServicePrefix of the COM Based Transformer's EcuC shall be set to ComXf. | (SRS\_BSW\_00159, SRS\_Xfrm\_00202)



## A Referenced Meta Classes

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

Class	DataTransformation				
Package	M2::AUTOSARTemplates::SystemTemplate::Transformer				
Note	A DataTransformation rep	resents a	transform	er chain. It is an ordered list of transformers.	
Base	ARObject, Identifiable, Mu	ıltilanguag	geReferra	ble, Referrable	
Attribute	Type Mul. Kind Note				
data Transformation Kind	DataTransformationKind Enum	01	attr	This attribute controls the kind of DataTransformation to be applied.	
executeDespite Data Unavailability	Boolean	1	attr	Specifies whether the transformer chain is executed even if no input data are available.	
transformer Chain (ordered)	Transformation Technology	1*	ref	This attribute represents the definition of a chain of transformers that are supposed to be executed according to the order of being referenced from DataTransformation.	

**Table A.1: DataTransformation** 

Class	EcucModuleDef					
Package	M2::AUTOSARTemplates::ECUCParameterDefTemplate					
Note	Used as the top-level element for configuration definition for Software Modules, including BSW and RTE as well as ECU Infrastructure.					
	Tags: atp.recommendedP	ackage=E	EcucModu	ıleDefs		
Base				eprintable, AtpDefinition, CollectableElement, Ecuc eReferrable, PackageableElement, Referrable		
Attribute	Туре	Mul.	Kind	Note		
apiServicePrefix	Cldentifier	01	attr	For CDD modules this attribute holds the apiService Prefix.		
				The shortName of the module definition of a Complex Driver is always "Cdd". Therefore for CDD modules the module apiServicePrefix is described with this attribute.		
container	EcucContainerDef	1*	aggr	Aggregates the top-level container definitions of this specific module definition.		
				Stereotypes: atpSplitable Tags: atp.Splitkey=shortName xml.sequenceOffset=11		
postBuildVariant Support	Boolean	01	attr	Indicates if a module supports different post-build variants (previously known as post-build selectable configuration sets). TRUE means yes, FALSE means no.		
refinedModule Def	EcucModuleDef	01	ref	Optional reference from the Vendor Specific Module Definition to the Standardized Module Definition it refines. In case this EcucModuleDef has the category STANDARDIZED_MODULE_DEFINITION this reference shall not be provided. In case this Ecuc		



Class	EcucModuleDef			
				△ ModuleDef has the category VENDOR_SPECIFIC_MODULE_DEFINITION this reference is mandatory.
				Stereotypes: atpUriDef
supported ConfigVariant	EcucConfiguration VariantEnum	*	attr	Specifies which ConfigurationVariants are supported by this software module.  This attribute is optional if the EcucModuleDef has the category STANDARDIZED_MODULE_DEFINITION. If the category attribute of the EcucModuleDef is set to VENDOR_SPECIFIC_MODULE_DEFINITION then this attribute is mandatory.

Table A.2: EcucModuleDef

Class	ISignalGroup				
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication				
Note	SignalGroup of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal Group is sent in different SignalIPdus to multiple receivers.				
	An ISignalGroup refers to a set of ISignals that shall always be kept together. A ISignalGroup represents a COM Signal Group.				
	Therefore it is recommend atp.recommendedPackage		the ISigna	alGroup in the same Package as ISignals (see	
	Tags: atp.recommendedF	ackage=I	SignalGro	pup	
Base	ARObject, CollectableEle. Element, Referrable	ment, Fib	exElemen	t, Identifiable, MultilanguageReferrable, Packageable	
Attribute	Туре	Mul.	Kind	Note	
comBased SignalGroup Transformation	DataTransformation	01	ref	Optional reference to a DataTransformation which represents the transformer chain that is used to transform the data that shall be placed inside this ISignalGroup based on the COMBasedTransformer approach.	
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=comBasedSignalGroup Transformation, variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime	
iSignal	ISignal	*	ref	Reference to a set of ISignals that shall always be kept together.	
systemSignal Group	SystemSignalGroup	1	ref	Reference to the SystemSignalGroup that is defined on VFB level and that is supposed to be transmitted in the ISignalGroup.	
transformation ISignalProps	TransformationISignal Props	*	aggr	A transformer chain consists of an ordered list of transformers. The ISignalGroup specific configuration properties for each transformer are defined in the TransformationISignalProps class. The transformer configuration properties that are common for all ISignal Groups are described in the TransformationTechnology class.	

Table A.3: ISignalGroup



Class	ISignallPdu						
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication						
Note	Represents the IPdus handled by Com. The ISignalIPdu assembled and disassembled in AUTOSAR COM consists of one or more signals.  In case no multiplexing is performed this IPdu is routed to/from the Interface Layer.						
	•	A maximum of one dynamic length signal per IPdu is allowed.					
	Tags: atp.recommendedF						
Base	ARObject, CollectableEle Element, Pdu, Referrable		exElemen	nt, IPdu, Identifiable, MultilanguageReferrable, Packageable			
Attribute	Туре	Mul.	Kind	Note			
iPduTiming Specification	IPduTiming	01	aggr	Timing specification for Com IPdus (Transmission Modes). This information is mandatory for the sender in a System Extract. This information may be omitted on receivers in a System Extract.			
				atpVariation: The timing of a Pdu can vary.			
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild			
iSignalToPdu Mapping	ISignalToIPduMapping	*	aggr	Definition of SignalToIPduMappings included in the Signal IPdu.			
				atpVariation: The content of a PDU can be variable.			
				Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild			
pduCounter	SignallPduCounter	01	aggr	An included Pdu counter is used to ensure that a sequence of Pdus is maintained.			
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime			
pduReplication	SignallPduReplication	01	aggr	Pdu Replication is a form of redundancy where the data content of one ISignallPdu (source) is transmitted inside a set of replica ISignallPdus. These ISignallPdus (copies) have different Pdu IDs, identical PduCounters, identical data content and are transmitted with the same frequency.			
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime			
unusedBit Pattern	Integer	1	attr	AUTOSAR COM and AUTOSAR IPDUM are filling not used areas of an IPDU with this bit-pattern. This attribute is mandatory to avoid undefined behavior. This byte-pattern will be repeated throughout the IPdu.			

Table A.4: ISignallPdu

Class	ISignalToIPduMapping	ISignalTolPduMapping			
Package	M2::AUTOSARTemplates::	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note		An ISignalToIPduMapping describes the mapping of ISignals to ISignalIPdus and defines the position of the ISignal within an ISignalIPdu.			
Base	ARObject, Identifiable, Mu	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Attribute	Туре	Mul.	Kind	Note	







Class	ISignalToIPduMapping			
iSignal	ISignal	01	ref	Reference to a ISignal that is mapped into the ISignal IPdu.  Each ISignal contained in the ISignalGroup shall be mapped into an IPdu by an own ISignalToIPduMapping. The references to the ISignal and to the ISignalGroup in an ISignalToIPduMapping are mutually exclusive.
iSignalGroup	ISignalGroup	01	ref	Reference to an ISignalGroup that is mapped into the SignalIPdu. If an ISignalToIPduMapping for an ISignalGroup is defined, only the UpdateIndicationBitPosition and the transferProperty is relevant. The startPosition and the packingByteOrder shall be ignored.
				Each ISignal contained in the ISignalGroup shall be mapped into an IPdu by an own ISignalToIPduMapping. The references to the ISignal and to the ISignalGroup in an ISignalToIPduMapping are mutually exclusive.
packingByte Order	ByteOrderEnum	01	attr	This parameter defines the order of the bytes of the signal and the packing into the SignallPdu. The byte ordering "Little Endian" (MostSignificantByteLast), "Big Endian" (MostSignificantByteFirst) and "Opaque" can be selected. For opaque data endianness conversion shall be configured to Opaque.  The value of this attribute impacts the absolute position of the signal into the SignallPdu (see the startPosition attribute description).
				For an ISignalGroup the packingByteOrder is irrelevant and shall be ignored.
startPosition	Integer	01	attr	This parameter is necessary to describe the bitposition of a signal within an SignallPdu. It denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByte Order attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.
				Please note that the way the bytes will be actually sent on the bus does not impact this representation: they will always be seen by the software as a byte array.
				If a mapping for the ISignalGroup is defined, this attribute is irrelevant and shall be ignored.
transferProperty	TransferPropertyEnum	01	attr	Defines how the referenced ISignal contributes to the send triggering of the ISignalIPdu.
update IndicationBit Position	Integer	01	attr	The UpdateIndicationBit indicates to the receivers that the signal (or the signal group) was updated by the sender. Length is always one bit. The UpdateIndicationBitPosition attribute describes the position of the update bit within the SignalIPdu. For Signals of a ISignalGroup this attribute is irrelevant and shall be ignored.
				Note that the exact bit position of the updateIndicationBit Position is linked to the value of the attribute packingByte Order because the method of finding the bit position is different for the values mostSignificantByteFirst and most SignificantByteLast. This means that if the value of





ISignalTolPduMapping	
	packingByteOrder is changed while the value of update IndicationBitPosition remains unchanged the exact bit position of updateIndicationBitPosition within the enclosing ISignalIPdu still undergoes a change.  This attribute denotes the least significant bit for "Little Endian" and the most significant bit for "Big Endian" packed signals within the IPdu (see the description of the packingByteOrder attribute). In AUTOSAR the bit counting is always set to "sawtooth" and the bit order is set to "Decreasing". The bit counting in byte 0 starts with bit 0 (least significant bit). The most significant bit in byte 0 is bit 7.
	ISignalTolPduMapping

Table A.5: ISignalTolPduMapping

Class	ImplementationDataType						
Package	M2::AUTOSARTemplates:	:Common	Structure	::ImplementationDataTypes			
Note	Describes a reusable data type on the implementation level. This will typically correspond to a typedef in C-code.						
	Tags: atp.recommendedPackage=ImplementationDataTypes						
Base				ionDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, ent, Identifiable, MultilanguageReferrable, Packageable			
Attribute	Туре	Mul.	Kind	Note			
dynamicArray SizeProfile	String	01	attr	Specifies the profile which the array will follow in case this data type is a variable size array.			
isStructWith Optional	Boolean	01	attr	This attribute is only valid if the attribute category is set to STRUCTURE.			
Element				If set to True, this attribute indicates that the ImplementationDataType has been created with the intention to define at least one element of the structure as optional.			
				Tags: atp.Status=draft			
subElement (or- dered)	ImplementationData TypeElement	*	aggr	Specifies an element of an array, struct, or union data type.			
				The aggregation of ImplementionDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a Implementation DataType representing a structure.			
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime			
symbolProps	SymbolProps	01	aggr	This represents the SymbolProps for the Implementation DataType.			
				Stereotypes: atpSplitable Tags: atp.Splitkey=shortName			
typeEmitter	NameToken	01	attr	This attribute is used to control which part of the AUTOSAR toolchain is supposed to trigger data type definitions.			

Table A.6: ImplementationDataType



Class	PortPrototype (abstract)							
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components							
Note	Base class for the ports of an AUTOSAR software component.							
	The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.							
Base	ARObject, AtpBlueprintal	ole, AtpFe	ature, Atp	Prototype, Identifiable, MultilanguageReferrable, Referrable				
Subclasses	AbstractProvidedPortProt	otype, Ab	stractReq	uiredPortPrototype				
Attribute	Туре	Mul.	Kind	Note				
clientServer Annotation	ClientServerAnnotation	*	aggr	Annotation of this PortPrototype with respect to client/server communication.				
delegatedPort Annotation	DelegatedPort Annotation	01	aggr	Annotations on this delegated port.				
ioHwAbstraction Server Annotation	IoHwAbstractionServer Annotation	*	aggr	Annotations on this IO Hardware Abstraction port.				
modePort Annotation	ModePortAnnotation	*	aggr	Annotations on this mode port.				
nvDataPort Annotation	NvDataPortAnnotation	*	aggr	Annotations on this non voilatile data port.				
parameterPort Annotation	ParameterPort Annotation	*	aggr	Annotations on this parameter port.				
senderReceiver Annotation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication.				
triggerPort Annotation	TriggerPortAnnotation	*	aggr	Annotations on this trigger port.				

Table A.7: PortPrototype

Class	SenderReceiverInterfac	SenderReceiverInterface					
Package	M2::AUTOSARTemplates	::SWCom	oonentTer	mplate::PortInterface			
Note	A sender/receiver interfac	e declares	s a numbe	er of data elements to be sent and received.			
	Tags: atp.recommended	Package=F	PortInterfa	aces			
Base		ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, DataInterface, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable					
Attribute	Type Mul. Kind Note						
dataElement	VariableDataPrototype	1*	aggr	The data elements of this SenderReceiverInterface.			
invalidation Policy	InvalidationPolicy	*	aggr	InvalidationPolicy for a particular dataElement			

**Table A.8: SenderReceiverInterface** 

Class	SenderReceiverToSigna	SenderReceiverToSignalGroupMapping				
Package	M2::AUTOSARTemplates:	:SystemTe	emplate::l	DataMapping		
Note	Mapping of a sender rece	iver comm	nunication	data element with a composite datatype to a signal group.		
Base	ARObject, DataMapping	ARObject, DataMapping				
Attribute	Туре	Type Mul. Kind Note				
dataElement	VariableDataPrototype	1	iref	Reference to a data element with a composite datatype which is mapped to a signal group.		
signalGroup	SystemSignalGroup	1	ref	Reference to the signal group, which contain all primitive datatypes of the composite type		





Class	SenderReceiverToSignalGroupMapping					
typeMapping	SenderRecComposite TypeMapping	1	aggr	The CompositeTypeMapping maps the the Application ArrayElements and ApplicationRecordElements to Signals of the SignalGroup.		

Table A.9: SenderReceiverToSignalGroupMapping

Class	SystemSignalGroup						
Package	M2::AUTOSARTemplates:	:SystemTe	emplate::F	Fibex::FibexCore::CoreCommunication			
Note		A signal group refers to a set of signals that must always be kept together. A signal group is used to guarantee the atomic transfer of AUTOSAR composite data types.					
		The SystemSignalGroup defines a signal grouping on VFB level. On cluster level the Signal grouping is described by the ISignalGroup element.					
	Tags: atp.recommendedPackage=SystemSignalGroups						
Base	ARElement, ARObject, Co Element, Referrable	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, Packageable Element, Referrable					
Attribute	Туре	Type Mul. Kind Note					
systemSignal	SystemSignal	<ul> <li>ref Reference to a set of SystemSignals that r kept together.</li> </ul>		Reference to a set of SystemSignals that must always be kept together.			
transforming SystemSignal	SystemSignal	01	ref	Optional reference to the SystemSignal which shall contain the transformed (linear) data.			

Table A.10: SystemSignalGroup



# **B** Used ECU Configuration

To ease the readability the relevant parts of the Com module configuration [4] are duplicated here (for information only).

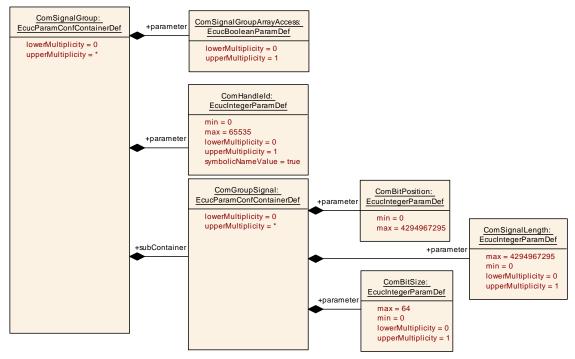


Figure B.1: AR\_EcucDef\_ComSignalGroupArrayAccess

SWS Item	[ECUC_Com_00345]	[ECUC_Com_00345]				
Container Name	ComSignalGroup					
Description	Contains the configuration parameters of the AUTOSAR COM module's signal groups.					
Post-Build Variant Multiplicity	true	true				
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME					
	Post-build time X VARIANT-POST-BUILD					
Configuration Paramete	rs					

Name	ComDataInvalidAction [ECUC_Com_00314]				
Parent Container	ComSignalGroup				
Description	This parameter defines the action performed upon reception of an invalid signal. Relating to signal groups the action in case if one of the included signals is an invalid signal. If Replace is used the ComSignalInitValue will be used for the replacement.				
Multiplicity	01				
Туре	EcucEnumerationParamDef				
Range	NOTIFY				
	REPLACE Literal for DataInvalidAction				



Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComErrorNotification [ECUC_Com_00499]					
Parent Container	ComSignalGroup					
Description	Only valid on sender side: Name of Com_CbkTxErr callback function to be called. If this parameter is omitted no error notification shall take place.					
Multiplicity	01					
Туре	EcucFunctionNameDef					
Default Value						
Regular Expression						
Post-Build Variant Multiplicity	false					
Post-Build Variant Value	false					
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE			
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD			
	Post-build time	_	William 11 1 1 2 2 1 2			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE					
	Link time	VARIANT-LINK-TIME, VARIANT-POST-BUILD				
	Post-build time	_				
Scope / Dependency	scope: local					

Name	ComFirstTimeout [ECUC_Com_00183]		
Parent Container	ComSignalGroup		
Description	Defines the length of the first deadline monitoring timeout period in seconds. This timeout is used immediately after start (or restart) of the deadline monitoring service. The timeout period of the successive periods is configured by ECUC_Com_00263.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		



Default Value			
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local	•	

Name	ComHandleId [ECUC_Com_00165]				
Parent Container	ComSignalGroup				
Description	The numerical value used as the ID.				
	This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.				
Multiplicity	01				
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)				
Range	0 65535				
Default Value	,				
Post-Build Variant Multiplicity	false				
Post-Build Variant Value	false				
Multiplicity Configuration Class	Pre-compile time	Х	All Variants		
	Link time	_			
	Post-build time	_			
Value Configuration Class	Pre-compile time	X	All Variants		
	Link time	_			
	Post-build time	_			
Scope / Dependency	scope: ECU		·		

Name	ComInitialValueOnly [ECUC_Com_00811]
Parent Container	ComSignalGroup
Description	This parameter defines that the respective signal's initial value shall be put into the respective PDU but there will not be any update of the value through the RTE. Thus the Com implementation does not need to expect any API calls for this signal (group).
Multiplicity	01
Туре	EcucBooleanParamDef
Default Value	false



Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local	•	

Name	ComInvalidNotification [E	ComInvalidNotification [ECUC_Com_00315]		
Parent Container	ComSignalGroup			
Description	Only valid on receiver side: Name of Com_CbkInv callback function to be called. Name of the function which notifies the RTE about the reception of an invalidated signal/ signal group. Only applicable if ComDataInvalidAction is configured to NOTIFY.			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default Value				
Regular Expression				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-BUILD	
	Post-build time			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME,			
	VARIANT-POST-BUILD –			
Scope / Dependency	scope: local			



Name	ComNotification [ECUC_Com_00498]		
Parent Container	ComSignalGroup		
Description	On sender side: Name of Com_CbkTxAck callback function to be called. On receiver side: Name of Com_CbkRxAck callback function to be called.  If this parameter is omitted no notification shall take place.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default Value			
Regular Expression			
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComRxDataTimeoutAction [ECUC_Com_00412]				
Parent Container	ComSignalGroup				
Description	This parameter defines the action performed upon expiration of the reception deadline monitoring timer.				
Multiplicity	01	01			
Туре	EcucEnumerationParamDef	EcucEnumerationParamDef			
Range	NONE	no replacement shall take place signals shall be replaced by their ComSignalInitValue			
	REPLACE				
	SUBSTITUTE signals shall be replaced by their ComTimeoutSubstitutionValue				
Post-Build Variant Multiplicity	false				
Post-Build Variant Value	false				
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD		
	Post-build time	-			



Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComSignalGroupArrayAc	ComSignalGroupArrayAccess [ECUC_Com_10003]		
Parent Container	ComSignalGroup			
Description	Defines whether the uint8-array based access shall be used for this ComSignalGroup.			
Multiplicity	01	01		
Туре	EcucBooleanParamDef			
Default Value				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time –			
	Post-build time –			
Scope / Dependency		•		

Name	ComTimeout [ECUC_Com_00263]			
Parent Container	ComSignalGroup			
Description	Defines the length of the deadline monitoring timeout period in seconds. The period for the first timeout period can be configured separately by ECUC_Com_00183.			
Multiplicity	01			
Туре	EcucFloatParamDef	EcucFloatParamDef		
Range	[0 3600]	[0 3600]		
Default Value	, i			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	



Scope / Dependency	scope: local
--------------------	--------------

Name	ComTimeoutNotification [ECUC Com 00552]		
Parent Container	ComSignalGroup		
Description	On sender side: Name of Com_CbkTxTOut callback function to be called. On receiver side: Name of Com_CbkRxTOut callback function to be called.		
Multiplicity	01		
Туре	EcucFunctionNameDef		
Default Value			
Regular Expression			
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	_	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time X VARIANT-LINK-TIME,		
	VARIANT-POST-BUILD		
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComTransferProperty [ECUC_Com_00232]				
Parent Container	ComSignalGroup				
Description	Defines if a write access to this signal can trigger the transmission of the corresponding I-PDU. If the I-PDU is triggered, depends also on the transmission mode of the corresponding I-PDU.				
Multiplicity	01				
Туре	EcucEnumerationParamDef				
Range	PENDING	A write access to this signal never triggers the transmission of the corresponding I-PDU.			
	TRIGGERED  Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU.				
	TRIGGERED_ON_CHAN GE	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.			



	TRIGGERED_ON_CHAN GE_WITHOUT_REPETITI ON	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition, but only in case the written value is different to the locally stored (last sent or initial value) in length or value.		
	TRIGGERED_WITHOUT_ REPETITION	Depending on the transmission mode, a write access to this signal can trigger the transmission of the corresponding I-PDU just once without a repetition.		
Post-Build Variant Multiplicity	true	'		
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	ComUpdateBitPosition [ECUC_Com_00257]				
Parent Container	ComSignalGroup				
Description	Bit position of update-bit inside I-PDU. If this attribute is omitted then there is no update-bit. This setting must be consistently on sender and on receiver side.  Range: 063 for CAN and LIN, 0511 for CAN FD, 02031 for FlexRay, 04294967295 for TP.				
Multiplicity	01	01			
Туре	EcucIntegerParamDef	EcucIntegerParamDef			
Range	0 4294967295				
Default Value					
Post-Build Variant Multiplicity	true				
Post-Build Variant Value	true	true			
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME		
	Post-build time	X	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time X VARIANT-LINK-TIME				
	Post-build time	X	VARIANT-POST-BUILD		
Scope / Dependency	scope: local				



Name	ComSystemTemplateSignalGroupRef [ECUC_Com_00001]			
Parent Container	ComSignalGroup			
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignalGroup (SystemTemplate) which this ComSignalGroup represents.			
Multiplicity	01			
Туре	Foreign reference to I-SIGNAL-TO-I-PDU-MAPPING			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: ECU			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComGroupSignal	0*	This container contains the configuration parameters of group signals. I.e. signals that are included within a signal group.

SWS Item	[ECUC_Com_00520]		
Container Name	ComGroupSignal		
Description	This container contains the configuration parameters of group signals.  I.e. signals that are included within a signal group.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Name	ComBitPosition [ECUC_Com_00259]		
Parent Container	ComGroupSignal		
Description	Starting position within the I-PDU. This parameter refers to the position in the I-PDU and not in the shadow buffer. If the endianness conversion is configured to Opaque the parameter ComBitPosition shall define the bit0 of the first byte like in little endian byte order		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 4294967295		
Default Value			



Post-Build Variant	true		
Value			
Value Configuration	Pre-compile time	Х	VARIANT-PRE-COMPILE
Class			
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComBitSize [ECUC_Com_	00158	]	
Parent Container	ComGroupSignal			
Description	Size in bits, for integer signal types. For ComSignalType UINT8_N and UINT8_DYN the size shall be configured by ComSignalLength. For ComSignalTypes FLOAT32 and FLOAT64 the size is already defined by the signal type and therefore may be omitted.			
Multiplicity	01	01		
Туре	EcucIntegerParamDef			
Range	0 64			
Default Value				
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	ComHandleId [ECUC_Com_00165]			
Parent Container	ComGroupSignal			
Description	The numerical value used as the ID.			
	This ID identifies signals and signal groups in the COM APIs using Com_SignalIdType or Com_SignalGroupIdType parameter respectively.			
Multiplicity	01			
Туре	EcucIntegerParamDef (Symbolic Name generated for this parameter)			
Range	0 65535			
Default Value				
Post-Build Variant	false			
Multiplicity				
Post-Build Variant	false			
Value				



Multiplicity Configuration Class	Pre-compile time	Х	All Variants
	Link time	_	
	Post-build time	_	
Value Configuration Class	Pre-compile time	Х	All Variants
	Link time	_	
	Post-build time	_	
Scope / Dependency	scope: ECU		

Parent Container         ComGroupSignal           Description         Defines the data invalid value of the signal.           In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, "97 98 100" means a string "abd", where the char "a" is in byte 0(low	d e.g. vest			
In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as defined in the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks, the string shall be interpreted as decimal representation of the characters separated by blanks.	d e.g. vest			
SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, and the string shall be interpreted as a decimal representation of the characters.	d e.g. vest			
defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, the string shall be interpreted as a decimal representation of the characters.	d e.g. vest			
specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	d e.g. vest			
string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	d e.g. vest			
BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	e.g. /est			
Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	e.g. /est			
ComSignal is a UINT8_N, UINT8_DYN the string shall be interprete as a decimal representation of the characters separated by blanks,	e.g. /est			
	est			
address), "b" is in byte 1, and "d" is in byte 2 and (highest address).	t to			
For the ComSignalType UINT8_DYN the dynamic length shall be se				
the number of configured characters. An empty string "" shall be				
interpreted as 0-sized dynamic signal.				
Multiplicity 01				
Type	EcucStringParamDef			
Regular Expression				
	folso			
Multiplicity	false			
Post-Build Variant false				
Value VARIANTERRE COMPUS				
MultiplicityPre-compile timeXVARIANT-PRE-COMPILEConfiguration Class				
Link time X VARIANT-LINK-TIME,				
VARIANT-POST-BUILD				
Post-build time –				
Value Configuration     Pre-compile time     X     VARIANT-PRE-COMPILE       Class				
Link time X VARIANT-LINK-TIME, VARIANT-POST-BUILD				
Post-build time –				
Scope / Dependency scope: local	$\overline{}$			
dependency: In case of UINT8_N the length of				
ComSignalDataInvalidValue has to be the same as ComSignalLeng	th.			



Name	ComSignalEndianness [ECU	ComSignalEndianness [ECUC_Com_00157]		
Parent Container	ComGroupSignal			
Description	Defines the endianness of the signal's network representation.			
Multiplicity	1			
Туре	EcucEnumerationParamDef			
Range	BIG_ENDIAN			
	LITTLE_ENDIAN			
	OPAQUE			
Post-Build Variant	true			
Value				
Value Configuration	Pre-compile time	X	VARIANT-PRE-COMPILE	
Class				
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	ComSignalInitValue [ECUC_	Com	1_00170]	
Parent Container	ComGroupSignal			
Description	Initial value for this signal. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00. In case of UINT8_DYN the initial size shall be 0.  In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification. In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification. In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification. In case the ComSignal is a UINT8 N, UINT8 DYN the string shall be interpreted			
	as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.			
Multiplicity	01			
Туре	EcucStringParamDef			
Default Value	0			
Regular Expression				
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	



Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: In case of UINT8_N the length of ComSignalInitValue has to be the same as ComSignalLength.		

Name	ComSignalLength [ECUC	Com	00437]		
Parent Container	ComGroupSignal				
Description	Description: For ComSignalType UINT8_N this parameter specifies the length n in bytes. For ComSignalType UINT8_DYN it specifies the maximum length in bytes. For all other types this parameter shall be ignored.  The supported maximum length is restricted by the used transportation				
	system. For non TP-PDUs the maximum size of a PDU, and therefore also of any included signal, is limited by the concrete bus characteristic. For example, the limit is 8 bytes for CAN and LIN, 64 bytes for CAN FD and 254 for FlexRay.				
Multiplicity	01				
Туре	EcucIntegerParamDef	EcucIntegerParamDef			
Range	0 4294967295	0 4294967295			
Default Value					
Post-Build Variant Multiplicity	false				
Post-Build Variant Value	false				
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE		
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD		
	Post-build time	_			
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD		
	Post-build time	_			
Scope / Dependency	scope: local				

Name	ComSignalType [ECUC_Com_00127]		
Parent Container	ComGroupSignal		
Description	The AUTOSAR type of the signal. Whether or not the signal is signed or unsigned can be found by examining the value of this attribute. This type could also be used to reserved appropriate storage in AUTOSAR COM.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	BOOLEAN		
	FLOAT32		



	FLOATO4		
	FLOAT64		
	SINT16		
	SINT32		
	SINT64		
	SINT8		
	UINT16		
	UINT32		
	UINT64		
	UINT8		
	UINT8_DYN		
	UINT8_N		
Post-Build Variant	false	·	
Value			
Value Configuration	Pre-compile time	X	VARIANT-PRE-COMPILE
Class			
	Link time	X	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Name	ComTimeoutSubstitutionValue [ECUC_Com_10006]				
Parent Container	ComGroupSignal				
Description	The signal substitution value will be used in case of a timeout and ComRxDataTimeoutAction is set to SUBSTITUTE. In case of UINT8_N the default value is a string of length ComSignalLength with all bytes set to 0x00.				
	In case of UINT8_DYN the initial size shall be 0.				
	In case the ComSignalType is UINT8, UINT16, UINT32, UINT64, SINT8, SINT16, SINT32, SINT64 the string shall be interpreted as defined in the chapter Integer Type in the AUTOSAR EcuC specification.				
	In case the ComSignalType is FLOAT32, FLOAT64 the string shall be interpreted as defined in the chapter Float Type in the AUTOSAR EcuC specification.				
	In case the ComSignalType is BOOLEAN the string shall be interpreted as defined in the chapter Boolean Type in the AUTOSAR EcuC specification.				
	In case the ComSignal is a UINT8_N, UINT8_DYN the string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address). For the ComSignalType UINT8_DYN the dynamic length shall be set to the number of configured characters. An empty string "" shall be interpreted as 0-sized dynamic signal.				
Multiplicity	01				
Type Default Value	EcucStringParamDef				



Regular Expression				
Post-Build Variant	true	true		
Multiplicity				
Post-Build Variant	true			
Value				
Multiplicity	Pre-compile time	Pre-compile time X VARIANT-PRE-COMPILE		
Configuration Class				
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration	Pre-compile time	X	VARIANT-PRE-COMPILE	
Class				
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	ComTransferProperty [ECUC_Com_00560]			
Parent Container	ComGroupSignal			
Description	Optionally defines whether this group signal shall contribute to the TRIGGERED_ON_CHANGE transfer property of the signal group. If at least one group signal of a signal group has the "ComTransferProperty" configured all other group signals of that signal group shall have the attribute configured as well.			
Multiplicity	01			
Туре	EcucEnumerationParamDef			
Range	PENDING	A change of the value of this group signal shall not be considered in the evaluation of the signal groups ComTransferProperty.  AN A change of the value of this group signal shall be considered in the evaluation of the signal groups ComTransferProperty.		
	TRIGGERED_ON_CHAN GE			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time	X VARIANT-PRE-COMPILE  X VARIANT-LINK-TIME		
	Link time			
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			



Name	ComSystemTemplateSystemSignalRef [ECUC_Com_00002]				
Parent Container	ComGroupSignal				
Description	Reference to the ISignalToIPduMapping that contains a reference to the ISignal (System Template) which this ComSignal (or ComGroupSignal) represents.				
Multiplicity	01				
Туре	Foreign reference to I-SIGN	IAL-T	O-I-PDU-MAPPING		
Post-Build Variant Multiplicity	true				
Post-Build Variant Value	true				
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time	Link time X VARIANT-LINK-TIME			
	Post-build time	X	VARIANT-POST-BUILD		
Value Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link timeXVARIANT-LINK-TIMEPost-build timeXVARIANT-POST-BUILD				
Scope / Dependency	scope: ECU				

Included Containers		
Container Name	Multiplicity	Scope / Dependency
ComFilter	01	This container contains the configuration parameters of the AUTOSAR COM module's Filters.  Note: On sender side the container is used to specify
		the transmission mode conditions.

SWS Item	[ECUC_Com_00340]			
Container Name	ComlPdu	ComIPdu		
Description	Contains the configuration parameters of the AUTOSAR COM module's I-PDUs.			
Post-Build Variant Multiplicity	true			
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Configuration Parameters				

Name	ComIPduCallout [ECUC_Com_00387]
Parent Container	ComlPdu
Description	This parameter defines the existence and the name of a callout function for the corresponding I-PDU. If this parameter is omitted no I-PDU callout shall take place for the corresponding I-PDU.
Multiplicity	01
Туре	EcucFunctionNameDef
Default Value	
Regular Expression	



Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time X All Variants			
	Link time –			
	Post-build time	_		
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: local			

Name	ComIPduCancellationSupport [ECUC_Com_00709]			
Parent Container	ComIPdu			
Description	Defines for I-PDUs with ComIPduType NORMAL: If the underlying IF-modul supports cancellation of transmit requests.  Defines for I-PDUs with ComIPduType TP: If the underlying TP-module supports RX and TX cancellation of ongoing requests.			
Multiplicity	01			
Туре	EcucBooleanParamDef			
Default Value	false			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE			
	Link time –			
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time –			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: ECU dependency: This parameter shall not be set to true if ComCancellationSupport is set to false			

Name	ComIPduDirection [ECUC_Com_00493]		
Parent Container	ComIPdu		
Description	The direction defines if this I-PDU, and therefore the contributing signals and signal groups, shall be sent or received.		
Multiplicity	1		
Туре	EcucEnumerationParamDef		
Range	RECEIVE		
	SEND		
Post-Build Variant Value	false		



Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Χ	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local dependency: If configured to Sent also a ComTxlpdu container shall be included, see ECUC_Com_00496		

Name	ComlPduHandleId [ECUC Com 00175]			
Parent Container	ComlPdu			
Description	The numerical value used as the ID of this I-PDU. The ComIPduHandleld is required by the API calls Com_RxIndication, Com_TpRxIndication, Com_StartOfReception and Com_CopyRxData to receive I-PDUs from the PduR (ComIP-duDirection: Receive), as well as the Pduld passed to an Rx-I-PDU-callout. For Tx-I-PDUs (ComIPduDirection: Send), this handle Id is used for the APIs calls Com_TxConfirmation, Com_TriggerTransmit, Com_TriggerIPDUSend or Com_TriggerIPDUSendWithMetaData, Com_CopyTxData and Com_TpTxConfirmation to transmit respectively confirm transmissions of I-PDUs, as well as the Pduld passed to the Tx-I-PDU-callout configured with ComIPduCallout and/or ComIPduTriggerTransmitCallout.			
Multiplicity	01			
Туре	EcucIntegerParamDef (Sym	bolic	Name generated for this parameter)	
Range Default Value	0 65535			
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time	Х	All Variants	
	Link time	_		
	Post-build time	_		
Scope / Dependency	scope: ECU			

Name	ComIPduSignalProcessing [ECUC_Com_00119]			
Parent Container	ComIPdu			
Description	For the definition of the two	modes Immediate and Deferred.		
Multiplicity	1			
Туре	EcucEnumerationParamDef			
Range	DEFERRED signal indication / confirmations are deferred for example to a cyclic task			
	IMMEDIATE the signal indications / confirmations are performed in Com_RxIndication/Com_TxConfirmation			



Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComIPduTriggerTransmitCallout [ECUC_Com_00765]			
Parent Container	ComIPdu			
Description	If there is a trigger transmit callout defined for this I-PDU this parameter contains the name of the callout function.			
Multiplicity	01			
Туре	EcucFunctionNameDef			
Default Value				
Regular Expression				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false	false		
Multiplicity Configuration Class	Pre-compile time X All Variants			
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time X All Variants			
	Link time –			
	Post-build time	_		
Scope / Dependency	scope: local			

Name	ComIPduType [ECUC_Com_00761]			
Parent Container	ComlPdu			
Description	Defines if this I-PDU is a normal I-PDU that can be sent unfragmented or if this is a large I-PDU that shall be sent via the Transport Protocol of the underlying bus.			
Multiplicity	1			
Туре	EcucEnumerationParamDef	EcucEnumerationParamDef		
Range	NORMAL	ser	nt or received via normal L-PDU	
	TP	ser	nt or received via TP	
Post-Build Variant Value	true			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time X VARIANT-LINK-TIME			
	Post-build time X VARIANT-POST-BUILD			
Scope / Dependency	scope: local			



Name	ComIPduGroupRef [ECUC_	ComIPduGroupRef [ECUC_Com_00206]			
Parent Container	ComIPdu	ComIPdu			
Description	Reference to the I-PDU grou	ıps th	nis I-PDU belongs to.		
Multiplicity	0*				
Туре	Reference to ComlPduGrou	р			
Post-Build Variant	true				
Multiplicity					
Post-Build Variant Value	true	true			
Multiplicity Configuration Class	Pre-compile time X VARIANT-PRE-COMPILE				
	Link time	Link time X VARIANT-LINK-TIME			
	Post-build time	Post-build time X VARIANT-POST-BUILD			
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE		
	Link time X VARIANT-LINK-TIME				
	Post-build time X VARIANT-POST-BUILD				
Scope / Dependency	scope: local				

Name	ComIPduSignalGroupRef [	ComIPduSignalGroupRef [ECUC Com 00519]		
Parent Container	ComlPdu			
Description	References to all signal gro	ups c	ontained in this I-Pdu	
Multiplicity	0*	•		
Туре	Reference to ComSignalGi	oup		
Post-Build Variant Multiplicity	true	true		
Post-Build Variant Value	true	true		
Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
-	Link time	X	VARIANT-LINK-TIME	
	Post-build time	X	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			

Name	ComlPduSignalRef [ECUC_Com_00518]
Parent Container	ComIPdu
Description	References to all signals contained in this I-PDU.
Multiplicity	0*
Туре	Reference to ComSignal
Post-Build Variant	true
Multiplicity	
Post-Build Variant	true
Value	



Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	Х	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComPduIdRef [ECUC_Com_00711]			
Parent Container	ComIPdu	ComIPdu		
Description	Reference to the "global" Pdu structure to allow harmonization of handle IDs in the COM-Stack.			
Multiplicity	1	1		
Туре	Reference to Pdu	Reference to Pdu		
Post-Build Variant Value	false			
Value Configuration Class	Pre-compile time  X VARIANT-PRE-COMPILE  Link time  X VARIANT-LINK-TIME, VARIANT-POST-BUILD  Post-build time  -			
Scope / Dependency				

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
ComIPduCounter	01	This optional container contains the configuration parameters of PDU Counter.	
ComIPduReplication	01	This optional container contains the information needed for each I-PDU replicated.	
ComTxIPdu	01	This container contains additional transmission related configuration parameters of the AUTOSAR COM module's I-PDUs.	

SWS Item	[ECUC_Com_00496]	
Container Name	ComTxIPdu	
Description	This container contains additional transmission related configuration parameters of the AUTOSAR COM module's I-PDUs.	
Configuration Parameters		



Name	ComMetaDataDefault [ECUC_Com_10005]			
Parent Container	ComTxIPdu			
Description	In case an I-PDU refers to a globally configured MetaDataType and no explicit meta data is given for a send request (e.g. by using Com_TriggerIPDUSendWithMetaData), the AUTOSAR COM module uses this configured default meta data for sending. The configured string shall be interpreted as a decimal representation of the characters separated by blanks, e.g. "97 98 100" means a string "abd", where the char "a" is in byte 0(lowest address), "b" is in byte 1, and "d" is in byte 2 and (highest address).			
Multiplicity		01		
Туре	EcucStringParamDef			
Default Value				
Regular Expression				
Post-Build Variant Multiplicity	false			
Post-Build Variant Value	false			
Multiplicity Configuration Class	Pre-compile time	X	All Variants	
	Link time	_		
	Post-build time	_		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
	Link time	X	VARIANT-LINK-TIME,	
			VARIANT-POST-BUILD	
	Post-build time	_		
Scope / Dependency	scope: ECU dependency: This parameter shall only be used in case ComMetaDataSupport is enabled. The length of the default meta data shall match the globally configured MetaDataLength of this I-PDU.			

Name	ComMinimumDelayTime [ECUC_Com_00181]		
Parent Container	ComTxIPdu		
Description	Defines the Minimum Delay Time (MDT) between successive transmissions of this I-PDU in seconds. The MDT is independent of the possible different transmission modes. There is only one minimum delay time parameter for one I-PDU. The minimum delay timer is not reset by changing the transmission mode. Hence, it is not allowed to violate the minimum delay time by transmission mode changes. It is not possible to monitor the minimum delay time for I-PDUs that are requested using the Com_TriggerTransmit API.		
Multiplicity	01		
Туре	EcucFloatParamDef		
Range	[0 3600]		
Default Value			
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		



Multiplicity Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Name	ComTxIPduClearUpdateBit [ECUC_Com_00576]			
Parent Container	ComTxIPdu			
Description	Defines when the update-bits of signals or signal groups, contained in this I-PDU, will be cleared.			
Multiplicity	01	·		
Туре	EcucEnumerationParamDef	EcucEnumerationParamDef		
Range	Confirmation	transmission of the I-PDU was confirmed. In case of Direct/N-Times transmission mode the update bits w be cleared with respect to the confirmation behaviour of SWS_Com_00305.  The update-bits are cleared directly after the invocation of PduR_ComTransmit.		
	Transmit			
	TriggerTransmit			
Post-Build Variant Multiplicity	true			
Post-Build Variant Value	true			
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE	
_	Link time	X	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE	
	Link time	Х	VARIANT-LINK-TIME	
	Post-build time	Х	VARIANT-POST-BUILD	
Scope / Dependency	scope: local			



Name	ComTxIPduUnusedAreasDefault [ECUC_Com_00017]		
Parent Container	ComTxIPdu		
Description	The AUTOSAR COM module fills not used areas of an I-PDU with this byte pattern. This attribute is mandatory to avoid undefined behaviour. This byte-pattern will be repeated throughout the I-PDU before any init-values or update-bits were set.		
Multiplicity	1		
Туре	EcucIntegerParamDef		
Range	0 255		
Default Value			
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	Х	VARIANT-PRE-COMPILE
	Link time	Х	VARIANT-LINK-TIME,
			VARIANT-POST-BUILD
	Post-build time	_	
Scope / Dependency	scope: local		

Included Containers			
Container Name	Multiplicity	Scope / Dependency	
ComTxModeFalse	01	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to false.	
ComTxModeTrue	01	This container contains the configuration parameters of the AUTOSAR COM module's transmission modes in the case the ComFilter evaluates to true.	



## C History of Constraints and Specification Items

## C.1 Constraint History of this Document according to AUTOSAR R4.2.1

Initial document release.

- C.2 Constraint History of this Document according to AUTOSAR R4.2.2
- C.2.1 Added Traceables in 4.2.2

[SWS ComXf 00032]

C.2.2 Changed Traceables in 4.2.2

[SWS\_ComXf\_00028]

C.2.3 Deleted Traceables in 4.2.2

none

- C.3 Constraint History of this Document according to AUTOSAR R4.3.0
- C.3.1 Added Traceables in 4.3.0

[SWS\_ComXf\_00033] [SWS\_ComXf\_00034] [SWS\_ComXf\_00035]

C.3.2 Changed Traceables in 4.3.0

[SWS\_ComXf\_00001] [SWS\_ComXf\_00004] [SWS\_ComXf\_00006] [SWS\_ComXf\_00007] [SWS\_ComXf\_00008] [SWS\_ComXf\_00010] [SWS\_ComXf\_00011]



### C.3.3 Deleted Traceables in 4.3.0

none

## C.4 Constraint History of this Document according to AUTOSAR R4.3.1

#### C.4.1 Added Traceables in 4.3.1

[SWS\_ComXf\_00036]

### C.4.2 Changed Traceables in 4.3.1

[SWS\_ComXf\_00007] [SWS\_ComXf\_00023]

## C.4.3 Deleted Traceables in 4.3.1

none

# C.5 Constraint History of this Document according to AUTOSAR R4.4.0

### C.5.1 Added Traceables in 4.4.0

none

### C.5.2 Changed Traceables in 4.4.0

[SWS\_ComXf\_00007] [SWS\_ComXf\_00020]

#### C.5.3 Deleted Traceables in 4.4.0

[SWS ComXf 00001] [SWS ComXf 00014]